

User manual

HG E2000 HIGH TIP



Table of contents

| | |
|---|----|
| 1. Introduction..... | 5 |
| 2. Definitions | 6 |
| 2.1 Abbreviations..... | 6 |
| 2.2 Terms, concepts, and designations | 6 |
| 2.3 Icons/pictograms in this user manual..... | 6 |
| 3. Signs/marks found on the machine..... | 6 |
| 3.1 CE label/machine-type plate | 6 |
| 3.2 Safety signs..... | 7 |
| 3.3 Other signs..... | 8 |
| 4. Machine description | 8 |
| 4.1 General machine design | 9 |
| 4.1.1 Dimensional sketch | 9 |
| 4.1.2 Main parts | 11 |
| 4.1.3 Main components..... | 11 |
| 4.2 EU Declaration of Conformity | 13 |
| 4.3 Description of functionalities | 15 |
| 4.4 Technical specifications | 16 |
| 4.6 Warranty..... | 18 |
| 4.7 Machine use | 19 |
| 4.7.1 User requirements and restrictions..... | 19 |
| 4.7.2 Intended use..... | 19 |
| 4.7.3 Unintended use | 19 |
| 4.8 Supplied equipment..... | 20 |
| 5. 5. Residual hazard..... | 21 |
| 6. Transport, use, and operation of the machine | 24 |
| 6.1 Machine transport/towing..... | 24 |
| 6.1.1 Transport..... | 24 |
| 6.1.2 Towing | 26 |
| 6.2 Operating space..... | 26 |
| 6.3 Emergency stop – Use and location on the machine..... | 28 |
| 6.3.1 Scope of emergency stop..... | 29 |
| 6.4 Information during operation | 29 |
| 6.4.1 Visual information/warnings..... | 29 |
| 6.4.2 Acoustic warnings | 30 |

| | | |
|-------|---|----|
| 6.5 | Normal use..... | 30 |
| 6.5.1 | Electrical supply (supply separator)..... | 30 |
| 6.5.2 | Filling up the container | 30 |
| 6.5.3 | How to operate the machines functions | 31 |
| 6.5.4 | Unloading the container..... | 35 |
| 6.5.5 | Charging..... | 46 |
| 6.5.6 | Preparing for use | 48 |
| 6.5.7 | Tire pressure and maintenance..... | 49 |
| 6.5.8 | Driving | 49 |
| 6.6 | Cleaning..... | 54 |
| 6.6.1 | Safety steps while cleaning | 54 |
| 6.7 | Safety while operating | 54 |
| 6.7.1 | Built-in functionality limitations | 54 |
| 6.7.2 | Other safety notes | 55 |
| 6.7.3 | Start-up after a regular stop | 56 |
| 6.7.4 | Starting up after an emergency stop | 56 |
| 6.7.5 | Start-up after service/repair..... | 57 |
| 6.7.6 | Freeing a person in the event of an overrun or jam | 57 |
| 6.8 | Troubleshooting/FAQ | 57 |
| 7. | Service, repair, and maintenance | 59 |
| 7.1 | General..... | 59 |
| 7.1.1 | Maintenance..... | 59 |
| 7.1.2 | Spare parts..... | 60 |
| 7.1.3 | Safety during repair/maintenance..... | 61 |
| 7.1.4 | Disposal of replaced parts | 61 |
| 7.2 | Lubricating moving parts and filling with hydraulic oil | 61 |
| 7.2.1 | Lubrication of moving parts..... | 61 |
| 7.2.2 | Filling up hydraulic oil..... | 62 |
| 7.2.3 | Security regarding lubrication and filling | 64 |
| 8. | Storage & disposal..... | 64 |
| 8.1 | Storage..... | 64 |
| 8.2 | Disposal | 67 |
| 9. | Appendix..... | 68 |
| 9.1 | Diagrams | 68 |
| 9.1.1 | Electric diagram..... | 68 |

- 9.1.2 Hydraulic diagram..... 69
- 9.2 Blueprints..... 69
 - 9.2.1 Overview prints 69
 - 9.2.2 Parts prints 69
- 9.3 Additional manuals 69
- 9.4 Third-party documentation 69
- 9.5 Checklist for HG Machines HG E2000 and HG E2000 High Tip..... 70

1. Introduction

The 100% electric 2-ton dumper runs for an entire workday – it is easy and quick to charge.

The E2000 can carry up to 2 tons, while the lithium battery allows it to run for 12 hours – more than a full working day. This makes it simple to use without worrying about emptying the battery. As a matter of fact, it charges from 20-80% in just 2.5 hours.

It is made for urban construction sites for landscapers, contractors, demolition companies, and rental companies.

HG E2000 is designed in Denmark and built at our factory.

- 12 hours of effective driving time – more than enough for a full working day
- Fast charging – 20 to 80% battery in 2 hours, 0-100% in 3.
- Charges with a simple car charger, 16A power, or 220v EU plug
- Lithium battery technology – LiFePO4
- Drive with one pedal for maximum comfort
- Significantly reduces noise levels
- Emission-free work environment

Fabrikant:

HG Poland Sp. Z. O. O.

+48 91 885 23 04

Prosta 34

72-100 Łozienica

Poland

CVR-nr.: PL7010040430

HG Machines ApS

+45 75 89 12 44

hello@hg-machines.com

www.hg-machines.com

Vejlevej 15, 8722 Hedensted

Denmark

HG Bulk movement
made easy.

2. Definitions

2.1 Abbreviations

Table 1: Abbreviations

| Abbreviation | Terms | Explanation |
|--------------|---------------------------------|---|
| OADC | On-Air Data Communication | Device to get live updates from the machine (optional equipment). |
| EM break | Electromagnetic brake reduction | Built-in brake functionality |

2.2 Terms, concepts, and designations

Table 2: Expressions

| Terms | Explanation |
|-----------------|--|
| Intended use | The function(s) the machine is designed and manufactured to perform. |
| Unintended use | Description of the improper and illegal use of the machine that can reasonably be expected to occur. |
| Residual hazard | A hazard that cannot be eliminated through its own safe construction or functional safety. |

2.3 Icons/pictograms in this user manual

Table 3: Icons

| Icon | Meaning | Explanation |
|------|---------------------|---|
| | General information | Information that should be read before using the machine. |
| | Safety regulation | Safety regulation that informs the operator to orient himself when operating the machine. |

3. Signs/marks found on the machine

3.1 CE label/machine-type plate

The CE marking plate is on the machine's left side behind the swivel joint (see Figure 1). The nameplate must not be removed or replaced if it is missing or is so damaged that it has become unreadable (see Figure 2).






Figure 1: CE marking plate



Figure 2: Placement of CE marking plate



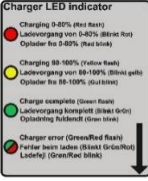
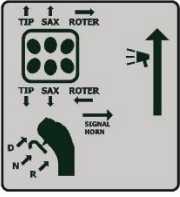

3.2 Safety signs

Safety-related labels and symbols attached to the machine and their mean.

| Pictogram | Definition |
|---|------------------------------|
|  | Warning: Electrical voltage |
|  | Warning: Hand-crushing |
|  | Warning mark for swivel arms |

3.3 Other signs

The labels and signs attached to the machine and what they mean.
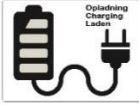
| Pictogram | Definition |
|---|--|
|  | <p>It shows where the charger is located on the machine.</p> |
|  | <p>Shows where tools can be stored on the machine.</p> |
|  | <p>Overview with meaning and explanation of battery diode color.</p> |
|  | <p>Overview of joystick functionalities.</p> |
|  | <p>Dashboard</p> |

4. Machine description

The HG E2000 High Tip is an emission-free dumper used to transport and load/unload various materials (see Figure 3). It is a machine for professionals on, for example, construction sites, but it is also approved for driving on public roads.

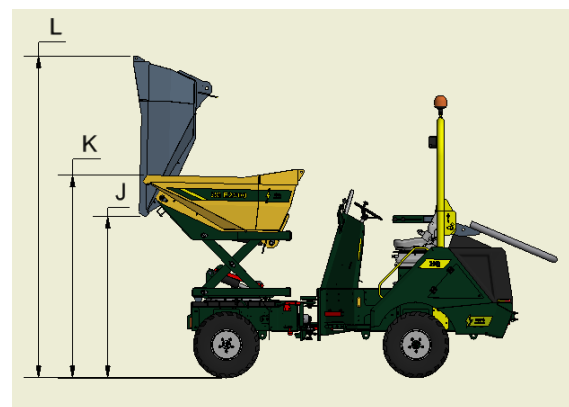
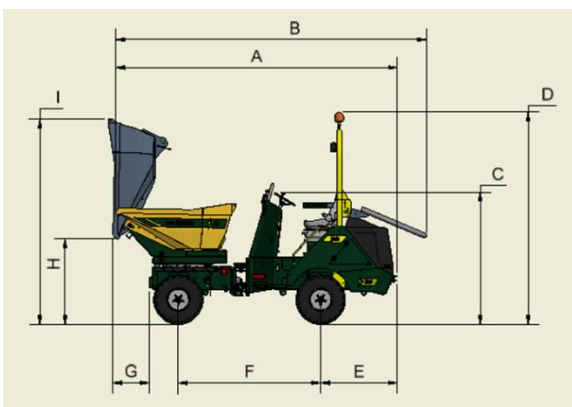


Figure 3: HG E2000 High Tip

The central part of the HG E2000 is a hydraulically driven container that can be rotated and tipped. For this, the machine has hydraulically operated swivel arms that allow the container to be raised and lowered. The machine is equipped with a swivel joint that connects the front and rear, making the machine maneuverable. Each wheel is driven by an electric motor with built-in brake functionality (EM brake). This construction gives the machine four-wheel drive.

4.1 General machine design

4.1.1 Dimensional sketch



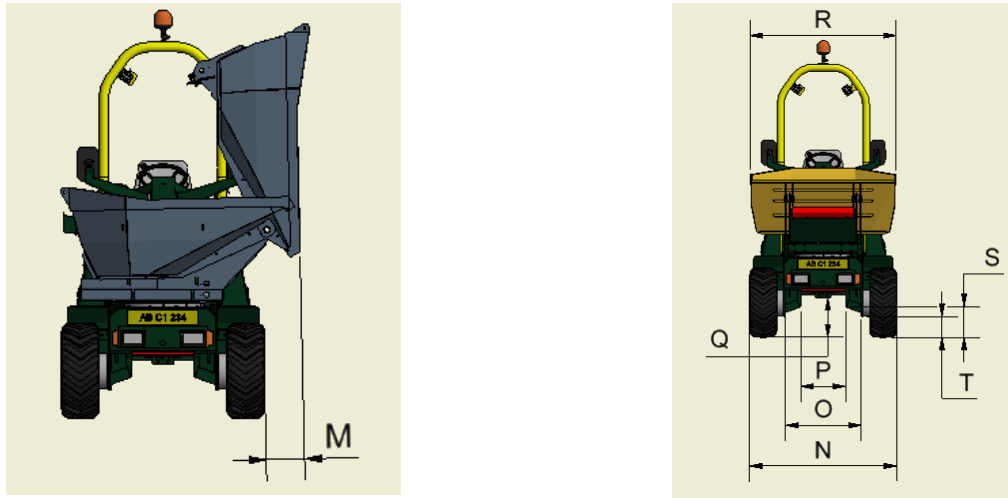


Figure 4: Machine measurement

| Symbol | (mm) | Symbol | (mm) |
|--------|------|--------|------|
| A | 3975 | K | 2145 |
| B | 4390 | L | 3405 |
| C | 1860 | M | 280 |
| D | 2989 | N | 1480 |
| E | 1082 | O | 764 |
| F | 2010 | P | 452 |
| G | 517 | Q | 396 |
| H | 1205 | R | 1475 |
| I | 2890 | S | 310 |
| J | 1705 | T | 211 |

4.1.2 Main parts

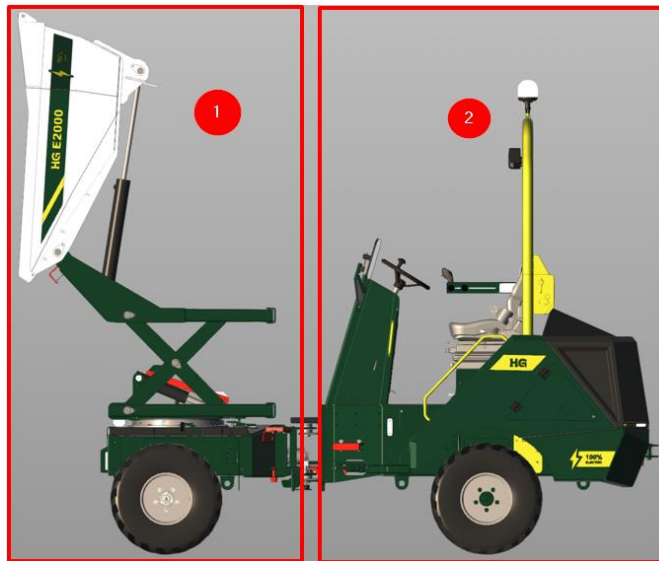


Figure 5: E2000 main parts

| | |
|----------|---------|
| 1: Front | 2: Back |
|----------|---------|

4.1.3 Main components

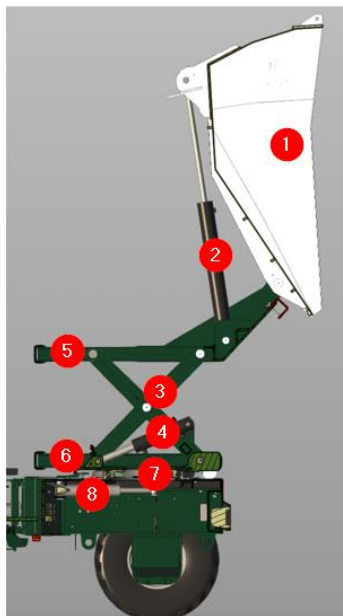


Figure 6: Main components - front

| | |
|---------------|---------------------------|
| 1: Container | 2: Tip cylinder |
| 3: Swivel arm | 4: Lifting cylinder (h+v) |
| 5: Top frame | 6: Bottom frame |
| 7: Turntable | 8: Turning cylinder (h+v) |

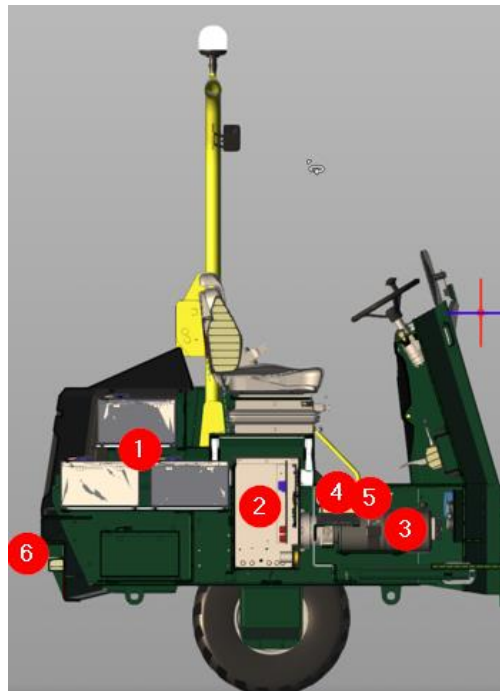


Figure 7: Main components - back

| | |
|-----------------------------------|---------------------------------|
| 1: Battery pack | 2: Fast charger |
| 3: Hydraulic pump and tank | 4: Main controllers (left side) |
| 5: Slave controllers (right side) | 6: Tow |

4.2 EU Declaration of Conformity

EC declaration of conformity

according to the Machinery Directive 2006/42/EC, Annex II 1. A



Original

The manufacturer bears the sole responsibility for issuing this declaration of conformity

HG Machines ApS
 Bredgade 63 A st tv
 DK - 1260 København

Pers on established in the Community authorised to compile the relevant technical documentation

Anders Bentzen
 HG Machines ApS
 Vejlevej 15
 DK - 8722 Hedensted

Description and identification of the machinery

| | |
|-------------------|---|
| Product / Article | 53.100 / Earth-moving machinery - Articulated dump truck |
| Type | HG E2000 HIGH TIP |
| Serial number | Open serial No. production |
| Project number | 18729-2 |
| Commercial name | HG E2000 HIGH TIP |
| Order | N/A |
| Model | HG E2000 HIGH TIP |
| Batch number | N/A |
| Function | Articulated Dumper E2000 can drive with up to 2 tons, while lithium batteries enables it to run for 12 hours – more than a full working day. This means that you can use Full recharge from 0-100% battery in less than 3.5 hours The complete four-wheel drive provides individual torque on all four wheels, making the machine off-road capable |
| | PRODUCT SPECIFICATIONS |
| | L x W x H: 3900 x 1426 x 2700 Weight: 1.980 kg. Volume: 800 L Payload kg: 2.000 kg. Unloading height: 167/117cm |

It is expressly declared that the machinery fulfils all relevant provisions of the following EU Directives or Regulations:

| | |
|------------|---|
| 2006/42/EC | Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast) Published in L 157/24 of 6/9/2006 |
|------------|---|

Reference to the harmonised standards used, as referred to in Article 7 (2):

| | |
|----------------------|--|
| EN 60204-1:2018 | Safety of machinery - Electrical equipment of machines - Part 1: General requirements (IEC 60204-1:2016, modified) |
| EN 1032:2003+A1:2008 | Mechanical vibration - Testing of mobile machinery in order to determine the vibration emission value |
| EN ISO 12100:2010 | Safety of machinery - General principles for design - Risk assessment and risk reduction (ISO 12100:2010) |

EC declaration of conformity

according to the Machinery Directive 2006/42/EC, Annex II 1. A

Original



Reference to the harmonised standards used, as referred to in Article 7 (2):

| | |
|------------------------|--|
| EN ISO 13732-1:2008 | Ergonomics of the thermal environment - Methods for the assessment of human responses to contact with surfaces - Part 1: Hot surfaces (ISO 13732-1:2006) |
| EN 1005-3:2002+A1:2008 | Safety of machinery - Human physical performance - Part 3: Recommended force limits for machinery operation |
| EN 1570-1:2011+A1:2014 | Safety requirements for lifting tables— Part 1: Lifting tables serving up to two fixed landings |
| EN ISO 3471:2008 | Earth-moving machinery — Roll-over protective structures — Laboratory tests and performance requirements (ISO 3471:2008) |
| EN ISO 13850:2015 | Safety of machinery - Emergency stop function - Principles for design (ISO 13850:2015) |
| EN ISO 13849-1:2015 | Safety of machinery — Safety-related parts of control systems — Part 1: General principles for design (ISO 13849-1:2015) |
| EN ISO 13849-2:2012 | Safety of machinery - Safety-related parts of control systems - Part 2: Validation (ISO 13849-2:2012) |
| EN ISO 4413:2010 | Hydraulic fluid power — General rules and safety requirements for systems and their components (ISO 4413:2010) |
| EN ISO 7096:2020 | Earth-moving machinery - Laboratory evaluation of operator seat vibration (ISO 7096:2020) |
| EN 474-6:2006+A1:2009 | Earth-moving machinery - Safety - Part 6: Requirements for dumpers |

Reference of the other technical standards and specifications used:

| | |
|------------------|--|
| EN 474-1:2022 | Earth-moving machinery - Safety - Part 1: General requirements |
| EN ISO 7010:2020 | Graphical symbols - Safety colours and safety signs - Registered safety signs (ISO 7010:2019, corrected version 2020-06) |
| EN 474-6:2022 | Earth-moving machinery - Safety - Part 6: Requirements for dumpers |

København, 6/20/2023

Place, Date

Signature
Anders Bentzen
R&D Manager

Page 2/2

4.3 Description of functionalities

| Image | Function | Description |
|---|----------|---|
|  | Raising | Hydraulically driven raising function. |
|  | Lowering | Hydraulically driven lowering function. |
|  | Turning | A hydraulically driven turntable can turn the container 90 degrees to the left and right. |
|  | Tipping | A hydraulically driven tip function. |

4.4 Technical specifications

The overall technical specifications of the machine are given in Table 4.

4.5 Table 4: Technical specifications

| Specifications | |
|---------------------------------------|----------------|
| Width | 1480 mm |
| Length | 3979 mm |
| Height (Operating mode, roll bar up) | 2989 mm |
| Height (Transportation mode) | 1910 mm |
| Own weight | 2150 kg |
| Content in liters | 892 L |
| Content in kg | 2000 kg |
| Unloading height (Low) | 1210 mm |
| Unloading height (High) | 1715 mm |
| Driving speed (Hare) | 0-20 km/h |
| Driving speed (Turtle) | 0-10 km/h |
| Reverse speed | 0-20 km/h |
| Battery | |
| Lithium | 360 Ah |
| Voltage | 48V |
| Run time | 12 hours |
| Temperature, charge | 0°C to +55°C |
| Temperature, in use | -10°C to +60°C |
| Temperature, long-term storage | +15°C |
| Protection class (IPXX) | IP 54 |
| Charger 1 –Fast charge – 160 A | |
| Plug | CEE 5P 16A |
| 0-100% charging time | 4,1 hours |
| 20-80% charging time | 2,6 hours |
| Integrated charger | 10000 W |

| Charger 1 - Adapter type 2 car charger – 160 A | |
|--|---|
| Plug | CEE 5P 16A for type 2 car charger |
| 0-100% charging time | 4,1 hours |
| 20-80% charging time | 2,6 hours |
| Integrated charger | 10000 W |
| Charger 2 – 35A | |
| Plug | 230V plug standard EU |
| 0-100% charging time | 16 hours |
| 20-80% charging time | 10 hours |
| Integrated charger | 1000 W |
| Motor | |
| Electric | PMAC three-phase electric motor 48V |
| Performance | 3000 W |
| Moment (Rated) | 9,5 Nm |
| Moment (Peak) | 19,5 Nm |
| Moment (Instant) | 41 Nm |
| Pulling wheels | |
| Dimensions | 11.0/65x12/8 TL AS-504 |
| Inches | 12 |
| Diameter | 700 |
| Width | 273 |
| Bar | 4.0 |
| Load/Kg | 1400 |
| Rim | 8.50x12 |
| Rolling circumference | 2072 |
| Other | |
| Container function | Hydraulic tip. Tip cylinder, double-acting |
| High tip | Hydraulic tip. 2x Tip cylinder, double-acting |
| Container rotation | Hydraulic tip. 2x Tip cylinder, double-acting |
| Hydraulic tank | 10-liter Handel 46 |
| Sound pressure | $L_{pa, eq} max = 81 \text{ dB(A)}$ |
| Vibrations | Weighted arm/hand level max - 2.5 m/s^2 |

4.6 Warranty

Warranty period

HG Danmark APS provides a guarantee for 12 months. The warranty period begins on the date of delivery.

The warranty includes:

- Components that must be replaced or repaired due to material or manufacturing defects.
- The warranty does not cover wear and consumable parts such as:
 - Tires and hydraulic oil

The manufacturer's warranty expires if:

- The machine is misused.
- The machine is used without following the user manual and safety regulations.
- The machine is not maintained according to the instructions, or outdated spare parts are used.
- The machine is used after a fault has been detected, resulting in a more expensive repair than the original fault.

The owner's insurance should cover:

- Fire, burglary, theft, and vandalism.
- Water and frost damage.
- Damage caused by wind and weather.

The manufacturer's warranty does not apply in such cases.

Approval of compensation claims:

The manufacturer's approval of a compensation claim requires that the defective part be shown to the manufacturer or its representative within two weeks after the damage. Ownership of the damaged part(s) is transferred to the supplier of the new parts.

According to the warranty, it only replaces components. It, therefore, does not cover the following:

- Shipping costs.
- Costs related to waiting time, the machine owner's working time, and travel costs.
- Operating losses and other subsequent costs.

Other

Before repair under warranty, the manufacturer must be contacted to agree on the procedure. It is too late to claim the warranty if the repair has been initiated or completed. These warranty provisions can only be changed through a separate agreement.

4.7 Machine use

4.7.1 User requirements and restrictions

The operator of the HG E2000 must meet the following requirements and restrictions:

- The instructions must be read carefully. The operator must know all the machine's functions and their correct use, as well as knowledge of controls, switches, etc.
- The operator must be at least 18 years old and have a normal state of mind and ability to use the dumper. Please note that the legislation in the individual country may specify a different age limit for persons who may use the dumper in given situations.
- The operator is responsible for accidents or any dangerous situations that may occur to other people and their property.
- The operator must have adequate instructions on the use of the dumper. These instructions should emphasize the following:
 - The importance of being careful and concentrated when working with self-propelled machines.
 - The operator must have a good overview of the machine's surroundings - especially where other people may be walking.

4.7.2 Intended use

The machine will be used to transport building materials and waste. The machine is operated by a seated operator who must meet the requirements mentioned in section 4.6.1, User Requirements and Restrictions.

It is permitted to drive the machine on construction sites, areas without road surfaces, and public roads (see section 6.5.8.1 Requirements for driving on public roads).

4.7.3 Unintended use

The machine may not be used for the following:





- It may not be operated by persons who do not know the machine's functions or are below 18 years old.
- Do not transport with a raised container.
- Do not use it to tow other vehicles.
- Do not use it in case of insufficient ceiling height.
- Do not use in ATEX areas.
- It must not be used to lift people in the container
- It must not be used to transport people other than the operator
- May not be used for underground work (e.g., mining)
- Do not use in areas where there is insufficient lighting or daylight.
- It may not be used to transport materials weighing more than 2,000 kg.

- Do not use it if the machine is damaged (Reduced functionality or apparent damage).
- Do not drive on uneven or steep surfaces that exceed the design limitations.
- Must not be used if all applicable regulations (cf. applicable legislation) and regulations on building sites are not observed.

4.8 Supplied equipment

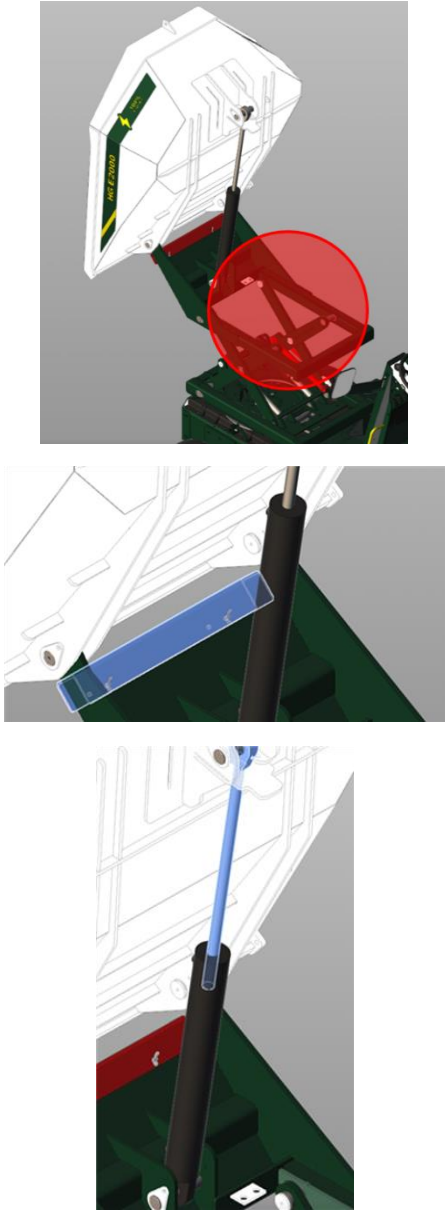

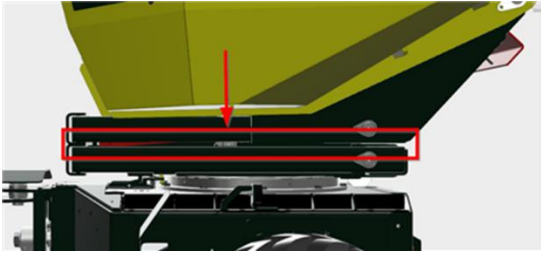

Table 5 contains an overview of the equipment delivered with the HG E2000.

Table 5: Overview of supplied equipment

| Picture | Equipment |
|---|---|
|  | <p>Charging cable with extension for charger (CEE type)</p> |
|  | <p>Safety bracket for tipping cylinder on container</p> |
|  | <p>Safety bracket for the swivels</p> |
|  | <p>Safety bracket for swivel cylinders on swivel joints (1 on each side of the machine)</p> |

5. 5. Residual hazard

| # | Image | Residual hazard description |
|---|-------|--|
| 1 | | <p>Persons standing/working behind the machine risk being run over when the vehicle reverses and the operator does not detect them due to inattention or inability to see them.</p> <p>The operator must orient himself with the help of side mirrors and look behind in the blind spot.</p> |
| 2 | | <p>The operator risks being thrown out of the seat if the safety belt is not on and tightened sufficiently.</p> |
| 3 | | <p>Risk of crushing in the area around the swivel joint (marked surfaces). The danger is present on both the left and right sides of the pivot joint when the surfaces approach each other.</p> |

| | | |
|----------|---|--|
| <p>4</p> |  | <p>When carrying out maintenance with the container in the tilting position, there is a risk that the hydraulic cylinder that pushes the container up may have a pressure drop from repair work carried out on the hydraulic system or a leak in the design, causing the container to drop suddenly. If the operator works underneath, there may be a risk of crushing the upper body, arms, or hands.</p>  |
| <p>5</p> |  | <p>When the container is lowered, there is a risk of crushing fingers and hands between the bottom and top frame.</p>  |



6

Risk of crushing fingers, hands, and arms between the swivel arms when the container is lowered, or service work is carried out on the hydraulic system.

When servicing or cleaning, safety fittings must be installed.

6. Transport, use, and operation of the machine

6.1 Machine transport/towing

6.1.1 Transport

To transport the machine, carry out the following points:

1. Adjust the yellow bracket mounted on the container (see Figure 8) to engage the galvanized bracket just below the swivel base when the container is down.
2. Lower the container to a normal position to lock the rotating part of the container with the fixed part of the frame.

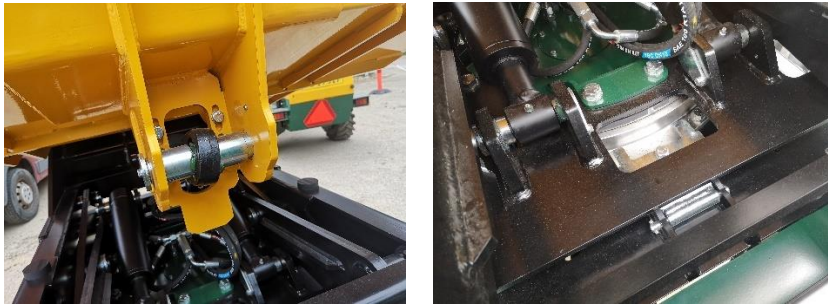


Figure 8: Rotation lock under container

1. Drive the machine onto the bed of the means of transport.
2. Fasten the machine by attaching transport straps to the fastenings of the machine on both sides (see Figure 9) and the fixing brackets on the means of transport.

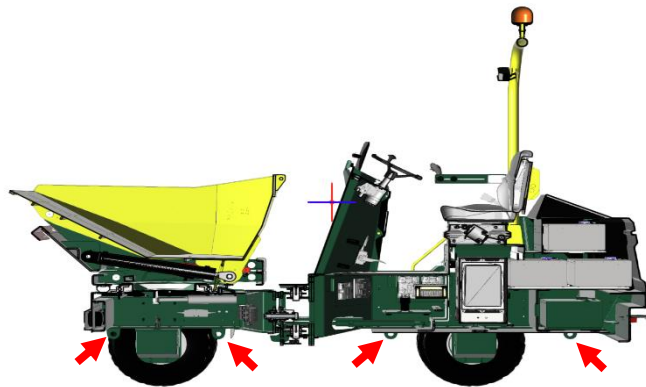


Figure 9: Position on the machine (left side)

3. Mount the safety brackets on the pivot cylinder on both sides of the machine (see Figure 10 and Figure 11)



Figure 10: Safety fittings

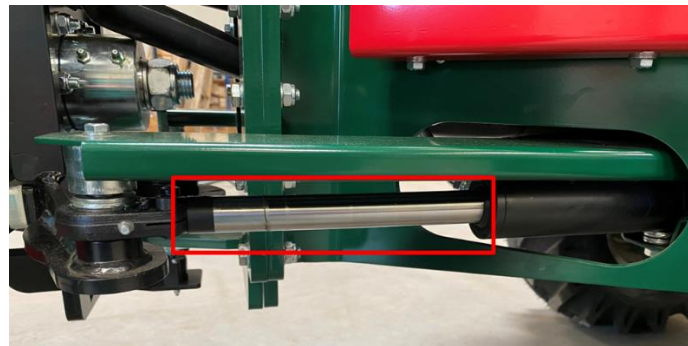


Figure 11: Placement of safety bracket on the swivel joint

4. Lower the crash bar (see Figure 12).



Figure 12: Crash bar lowered

5. Ensure that the machine's ignition key and main switch are OFF.
6. Ensure that the machine is clamped correctly.

6.1.2 Towing

In case of a malfunction of the machine and need for towing, do the following to release the EM brakes:

1. Check that the machine's main switch and ignition key are ON.
2. Find the "Top Gun" button in the charger compartment (see Figure 13).

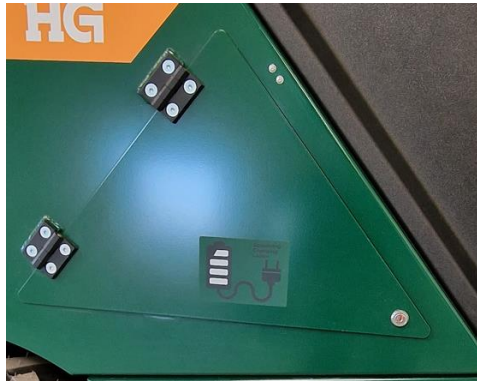


Figure 13: Charger compartment

3. Turn on the "Top Gun" button by pushing the button up (see Figure 14)

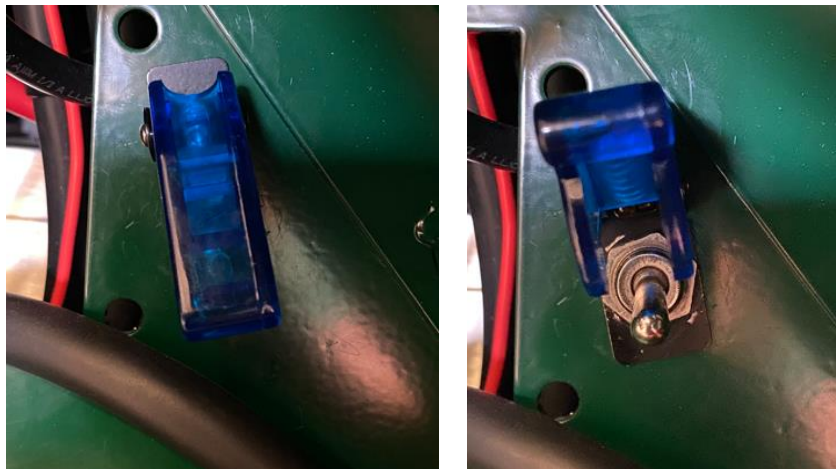


Figure 14: "Top Gun" button

4. The machine can now either be pulled or pushed.

If the battery packs do not work, contact HG Machines for instructions on towing the machine.

6.2 Operating space

The machine's operating position consists of the operator's seat, joystick, instrument panel, and pedals.

Operator seat

The operator's seat is a sprung seat that can be adjusted to the individual operator. The seat has a safety belt, which must be used when operating the machine (see Figure 15).



Figure 15: Operator seat

Joystick

The joystick is located on an armrest next to the operator's seat. Here, you can control the machine's primary functions: raising, lowering, turning, tipping, driving forward, and reversing, as well as placing in neutral mode (see Figure 16).



Figure 16: Joystick

Instrument panel

The instrument panel is behind the steering wheel (see Figure 17). On the left side of the panel are the machine's various light functions (hazard indicator, work light, driving light, and rotor indicator) and the speed function (hare/turtle). On the right side of the panel are the emergency stop, the activation button, the turn signal light, and the ignition key. At the top of the panel is the info display, on which you can find information about the battery level, speed indication, direction of travel, and the number of operating hours.



Figure 17: Dashboard


Pedals

The pedals consist of a brake pedal (left) and an accelerator pedal (right) (see Figure 17).



Figure 18: Accelerator and brakes

6.3 Emergency stop – Use and location on the machine






| Image | Name | Placement | Instructions |
|---|----------------|--|---|
|  | Emergency stop | It is located on the right side of the instrument panel. | Press the button down to activate the emergency stop. |

6.3.1 Scope of emergency stop



All wheel motors on the machine brake when the emergency stop is activated. As all the wheel motors brake, the machine stops immediately in a hard braking. It is, therefore, not possible to drive further, nor is it possible to use other functions. To reset the emergency stop, refer to section **Error! Reference source not found.**
Error! Reference source not found..

6.4 Information during operation

6.4.1 Visual information/warnings


| Image | Name | Explanation |
|---|--------------------|---|
|  | Info display | The info display provides information on battery level, speed indication, direction of travel, and the number of operating hours. |
|  | Rotor lights | Rotor lights alert you that the machine is a slow-moving vehicle. Turned on during use. |
|  | Battery indicators | Fast charger: The display shows the battery level. Small charger: The diode's color shows the battery's charge status. |
|  | Warning triangle | Public road driving (reflex). |
|  | Hazard lights | Warning of, for example, an emergency engine stop, where the machine could be dangerous to traffic. |

6.4.2 Acoustic warnings

| Pictogram | Explanation | Meaning |
|---|---------------------------------|--|
|  | Acoustic warning when reversing | The acoustic warning is function dependent. The sound starts when the machine is put into reverse gear. |
|  | Horn | The horn makes nearby people aware of the machine's presence. |

6.5 Normal use

6.5.1 Electrical supply (supply separator)






| Image | Name | Explanation | Use |
|--|-------------|--|--|
|  | Main switch | Switching on and off the electrical supply to the machine's electrical system. | The main switch is used when starting the engine, storing for extended periods, or carrying out service/maintenance. |






6.5.2 Filling up the container

When the container is to be filled with material, the focus must be on:

- Even the weight distribution of the material.
- The loading height from the 3rd party machine must be as low and as close to the container as possible to avoid damage. Damage is more likely if the material is loaded from a greater height.
- That liquid materials will slop a lot when transported and pose a high risk of spillage.

6.5.3 How to operate the machines functions

| Image | Function | Placement | Use/Activation |
|---|-------------------|-----------|---|
|  | Tipping - forward | Joystick | Press the button to tip the container forward. |
|  | Tipping | Joystick | Press the button to return the container to its normal position. |
|  | Lifting | Joystick | Press the button to raise the container. |
|  | Lowering | Joystick | Press the button to drop the container. |
|  | Turning left | Joystick | Press the button to rotate the container to the left or return it to its normal position. |

| | | | |
|---|-----------------------|------------------|--|
|  | Turning right | Joystick | Press the button to rotate the container to the right or return it to its normal position. |
|  | Forward driving | Joystick | Press the button to drive forward. |
|  | Reverse driving | Joystick | Press the button to reverse. |
|  | Neutral | Joystick | Press the button either up or down to bring the machine into neutral mode. |
|  | Hazard warning lights | Instrument panel | <p>Press the top part of the button down to turn on the hazard warning lights. The red light on the button will now light up.</p> <p>Press the lower part of the button to turn off the hazard warning lights.</p> |

| | | | |
|--|-----------------|------------------|--|
|  <p>ROTORBLINK ARBEJDSLYS</p> | Working lights | Instrument panel | <p>Press the top part of the button down to turn on the work light.</p> <p>Press the lower part of the button down to turn off the work light.</p> |
|  <p>KØRELYS</p> | Driving lights | Instrument panel | <p>Press the top part of the button down to turn on the daytime running lights.</p> <p>Press the lower part of the button down to turn off the headlights.</p> |
|  <p>ROTORBLINK</p> | Rotor lights | Instrument panel | <p>Press the top part of the button down to turn on the rotor lights.</p> <p>Press the lower part of the button down to turn off the rotor lights.</p> |
|  | Speed indicator | Instrument panel | <p>Press the top part of the button down to run fast (hare).</p> <p>Press the lower part of the button down to drive slowly (turtle).</p> |
|  <p>CURTIS INFO DISPLAY</p> | Info display | Instrument panel | <p>The info display provides information on battery level, speed indication, direction of travel, and the number of operating hours.</p> |

| | | | |
|---|-----------------|--|--|
|  | Ignition | Instrument panel | <p>Turn the key to ON to release the machine for operation.</p> <p>Turn the key to OFF to block the machine from operation.</p> |
|  | Activate button | Instrument panel | <p>Hold the button down to start the machine.</p> |
|  | Emergency stop | Instrument panel | <p>Press the button down to activate the emergency stop.</p> |
|  | Signal lights | Instrument panel | <p>Press the left side of the button to signal left.</p> <p>Press the right side of the button to signal right.</p> |
|  | Main witch | To the right side of the operator's seat | <p>Turn the switch to the right to switch on the electrical supply.</p> <p>Turn the switch back to the left to disconnect the electrical supply.</p> |
| | OADC | Placed inside the E2000 | <p>Using the app, you can get live updates from the machine on GPS position, power consumption, and the number of operating hours.</p> <p>This is add-on equipment, so contact HG Machines for more information.</p> |

6.5.4 Unloading the container

Before unloading begins, ensure the machine is on an even and level surface. This is done by checking that the air bubble on the spirit level is visually intact (see Figure 19).



Figure 19: Spirit level

Unloading position 1




Unloading position 2a



Unloading position 2b



Unloading position 3

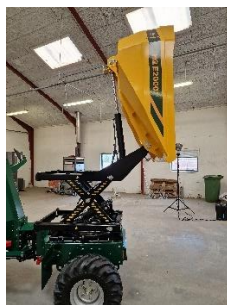

Unloading position 4a



Unloading position 4b

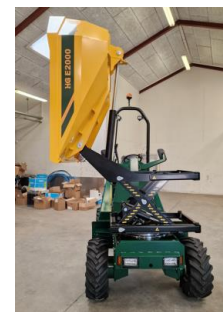


Figure 20: Unloading positions

6.5.4.1 Unloading position 1

1. To unload in position 1 (see Figure 21), do the following:



Figure 21: Unloading position 1

- a. Press the top tip button on the joystick to tip the contents of the container (see Figure 22).



Figure 22: Top tip button

- b. Press the bottom tip button on the joystick to return the container to its normal position (see Figure 23)



Figure 23: Bottom tip button

6.5.4.2 Unloading position 2a

2. To unload in position 2a (see Figure 24), do the following:




Figure 24: Unloading position 2a

- a. Press the top rotate button on the joystick to rotate the container to the right (see Figure 25).



Figure 25: Top rotator button

| | |
|---|---|
|  | <p>If the material to be filled in the container can freeze to the container or has an adhesive property, then the amount of the material must be halved.</p> |
|---|---|

- b. Press the top tip button on the joystick to tip the contents of the container (see Figure 26).



Figure 26: Top tip button

- c. Press the bottom tip button on the joystick to return the container to its normal position (see Figure 27).



Figure 27: Bottom tip button

- d. Press the joystick's lower rotate button to return the container to its normal position (see Figure 28).



Figure 28: Button rotator button

6.5.4.3 Unloading position 2b

3. To unload in position 2b (see Figure 29), do the following:



Figure 29: Unloading position 2b

- a. Press the lower rotate button on the joystick to rotate the container to the left (see Figure 30).



Figure 30: Bottom rotator button



If the material to be filled in the container can freeze to the container or has an adhesive property, then the amount of the material must be halved.

- b. Press the top tip button on the joystick to tip the contents of the container (see Figure 31).



Figure 31: Top tip button

- c. Press the bottom tip button on the joystick to return the container to its normal position (see Figure 32).



Figure 32: Bottom tip button

- d. Press the top rotate button on the joystick to rotate the container back to its normal position (see Figure 33).



Figure 33: Top rotator button

6.5.4.4 Unloading position 3

4. To unload in position 3 (see Figure 34), do the following:



Figure 34: Unloading position 3

- a. Press the upper swivel button on the joystick to raise the container to the desired height (see Figure 35)



Figure 35: Upper swivel button

- b. Press the top tip button on the joystick to tip the contents of the container (see Figure 36).



Figure 36: Top tip button

- c. Press the bottom tip button on the joystick to return the container to its normal position (see Figure 37).



Figure 37: Bottom tip button

- d. Press the lower swivel button on the joystick to lower the container back to its normal position (see Figure 38).



Figure 38: Lower swivel button

6.5.4.5 Unloading position 4a

5. To unload in position 4a (see Figure 39), do the following:



Figure 39: Unloading position 4a

- a. Press the upper swivel button on the joystick to raise the container to the desired height (see Figure 40)



Figure 40: Top swivel button

- b. Press the lower rotator button on the joystick to rotate the container to the left (see Figure 41).



Figure 41: Bottom rotator button



If the material to be filled in the container can freeze to the container or has an adhesive property, then the amount of the material must be halved.

- c. Press the top tip button on the joystick to tip the contents of the container (see Figure 42).



Figure 42: Top tip button

- d. Press the bottom tip button on the joystick to return the container to its normal position (see Figure 43).



Figure 43: Bottom tip button

- e. Press the top rotator button on the joystick to rotate the container back to its normal position (see Figure 44).



Figure 44: Top rotator button

- f. Press the lower swivel button on the joystick to lower the container back to its normal position (see Figure 45).



Figure 45: Bottom swivel button

6.5.4.6 Unloading position 4b

6. To unload in position 4b (see Figure 46), do the following:

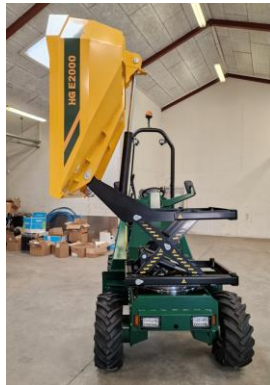


Figure 46: Unloading position 4b

- a. Press the top swivel button on the joystick to raise the container to the desired height (see Figure 47).

Figure 47: Top swivel button

- b. Press the top rotate button on the joystick to rotate the container to the right (see Figure 48).

Figure 48: Top rotator button



If the material to be filled in the container can freeze to the container or has an adhesive property, then the amount of the material must be halved.

- c. Press the top tip button on the joystick to tip the contents of the container (see Figure 49).



Figure 49: Top tip button

- d. Press the bottom tip button on the joystick to return the container to its normal position of the container (see Figure 50).



Figure 50: Bottom tip button

- e. Press the joystick's lower rotate button to return the container to its normal position (see Figure 51).



Figure 51: Bottom rotator button

- f. Press the lower swivel button on the joystick to lower the container back to its normal position (see Figure 52).



Figure 52: Bottom swivel button

6.5.5 Charging

6.5.5.1 Charger #1 (Fast charge)

When the machine needs to be charged with fast charging, do the following:

1. Check that the main switch is in the OFF position.
2. Open the hatch to the charging compartment (see Figure 53).



Figure 53: Charging compartment

3. Connect the extension to the charging cable (see Figure 54).



Figure 54: Charging cable with extension

4. Connect the plug to the mains.
5. Check on the battery indicators that the battery is charging (see Figure 55).



| Charger LED indicator | |
|---|---|
| ● | Charging 0-80% (Red flash) Ladevorgang von 0-80% (Blinkt Rot) Oplader fra 0-80% (Rød blink) |
| ● | Charging 80-100% (Yellow flash) Ladevorgang von 80-100% (Blinkt gelb) Oplader fra 80-100% (Gul blink) |
| ● | Charge complete (Green flash) Ladevorgang komplett (Blinkt Grün) Opladning fuldstændt (Grøn blink) |
| ● ● | Charger error (Green/Red flash) Fehler beim laden (Blinkt Grün/Rot) Ladefejl (Grøn/Rød blink) |

Figure 55: Battery indicators and explanations

- When the battery is fully charged, disconnect the plug and close the door to the charging compartment.

6.5.5.2 Fast charge with Adapter type 2 car charger

When the machine needs to be charged with a type 2 car charger, do the following:

- Check that the main switch is in the OFF position.
- Open the hatch to the charging compartment (see Figure 536).



Figure 56: Charging compartment

- Connect the type 2 car charger
- Press the switches on the charger to position "I" to start charging (see Figure 57).



Figure 57: Switches on charger

- Check on the battery indicators that the battery is charging (see Figure 58).



| Charger LED indicator | |
|-----------------------|---|
| | Charging 0-80% (Red flash) Ladevorgang von 0-80% (Blinkt Rot) Oplader fra 0-80% (Rød blink) |
| | Charging 80-100% (Yellow flash) Ladevorgang von 80-100% (Blinkt gelb) Oplader fra 80-100% (Gul blink) |
| | Charge complete (Green flash) Ladevorgang komplett (Blinkt Grün) Opladning fuldendt (Grøn blink) |
| | Charger error (Green/Red flash) Fehler beim laden (Blinkt Grün/Rot) Ladefejl (Grøn/Rød blink) |

Figure 58: Battery indicators and explanations

- When the battery is fully charged, disconnect the plug and close the door to the charging compartment.

6.5.5.3 Charger 2 (Power plug)

When the machine needs to be charged using the power plug, do the following:

- Check that the main switch is in the OFF position.
- Open the door to the charging compartment (see Figure 59).



Figure 59: Charging compartment

- Connect the plug to the mains.
- Check on the battery indicators that the battery is charging (see Figure 60)

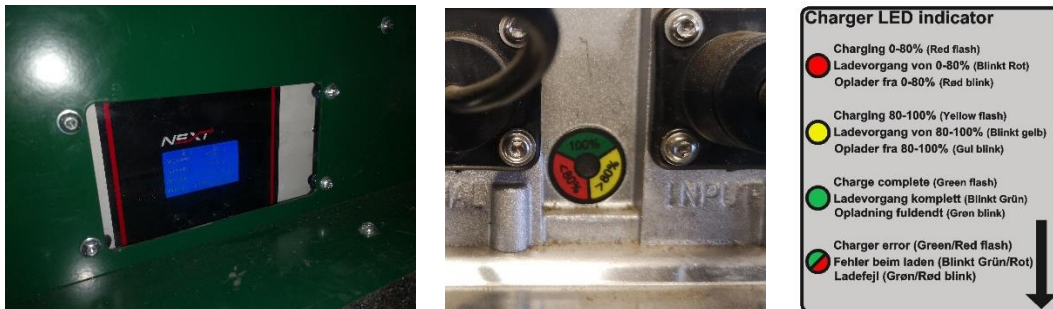


Figure 60: Battery indicators and explanations

- When the battery is fully charged, disconnect the plug and close the door to the charging compartment.

6.5.6 Preparing for use

Before putting the machine into service, the following must be checked:

- Ensure the machine complies with all points in section **Error! Reference source not found. Error! Reference source not found.**

- Ensure the machine is sufficiently charged. HG Machines does not recommend driving with less than 15% battery capacity. Battery capacity can be read in the info display.
- Ensure the machine has enough hydraulic oil filled for the tip of the container, the HIGH TIP, the rotator function, and the control cylinder.
- If necessary, fill up hydraulic oil. For instructions on filling hydraulic oil, go to section **Error! Reference source not found. Error! Reference source not found.I.**

6.5.7 Tire pressure and maintenance

To achieve optimal ergonomic conditions, all four machine tires must have the correct air pressure, and the wheel bolts must have the proper tightening torque.

Tire pressure: 4.0 bar

Bolt torque: 86Nm

6.5.8 Driving



Remember to disconnect the charger before starting up and using the machine.

1. Check that the machine is neutral on the joystick (see Figure 61).



Figure 61: Neutral mode

2. Turn the main switch to the ON position (see Figure 62).



Figure 62: Main switch

3. Turn the ignition key to the ON position (see Figure 63).



Figure 63: Ignition key in ON position

4. Press the activation button until it lights green (see Figure 64).



Figure 64: Activation button

5. Place left hand on the steering wheel
6. Place your right hand on the joystick (See Figure 65).



Figure 65: Joystick

- If the machine is to move forward, press the button on the joystick (see Figure 66).



Figure 66: Forward button



Reversing requires thorough orientation to the rear before starting the movement. The operator is responsible for having an overview of the machine's surroundings.

- If the machine is to move backward, press the button on the joystick downwards, and the reversing alarm will begin to sound (see Figure 67).



Figure 67: Reversing button

- Select the desired speed on the instrument panel (see Figure 68).



Figure 68: Speed button

10. Press the gas pedal with your foot to drive the machine (see Figure 69).




Figure 69: Accelerator

6.5.8.1 Requirements for driving on public roads

Driving on public roads must be done per the applicable legislation.

6.5.8.2 Safety restrictions when driving

| Pictogram/Image | Explanation |
|-----------------|---|
| | <p>Do not use dumpers with insufficient ceiling height.</p> |
| | <p>Do not drive up along slopes exceeding 5% (2.85 degrees)</p> |
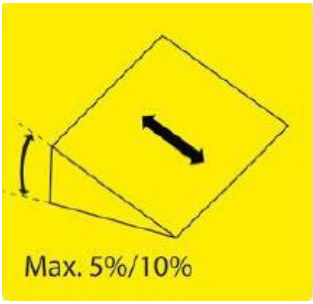
| | |
|---|--|
|  | <p>Do not drive across slopes that exceed:</p> <ul style="list-style-type: none"> • 10% (5.71 degrees) on hard surfaces such as concrete and asphalt. • 5% (2.85 degrees) on stuck surfaces such as gravel and grass |
|---|--|

6.6 Cleaning

In terms of cleaning and everyday use

- Always ensure the machine is clean and in order so the operator is always ergonomically positioned.
- Always lock the charging compartment and the tool compartment when not in use.



6.6.1 Safety steps while cleaning

For your safety when cleaning, make sure of the following:





- Never use a high-pressure cleaner to clean the machine, as this can damage the machine's electrical components.
- Never put water directly on the electrical components of the machine.
- Running water and a brush can be used on all the machine's steel parts.
- The machine must not be placed in a car wash.

6.7 Safety while operating

6.7.1 Built-in functionality limitations

| Image | Explanation |
|---|--|
|  | <p>When the machine is in neutral mode, it is impossible to drive or push it.</p> |
|  | <p>A sensor at the charging compartment registers whether the door to the compartment is open or closed. If the door is open, it is impossible to drive the machine. However, it is possible to raise/lower and tip the container.</p> |

6.7.2 Other safety notes

| Image | Explanation |
|---|--|
|  | <p>Safety bracket for tipping cylinder on container.</p> |
|  | <p>Safety bracket for the swivel.</p> |
|  | <p>Safety bracket for swivel cylinder on swivel joint (1 on each side of the machine).</p> |
|  | <p>Level indicator to use when unloading.</p> |

6.7.3 Start-up after a regular stop

To start the machine after a regular stop, refer to **Error! Reference source not found.** Driving

6.7.4 Starting up after an emergency stop

If the emergency button (big red) has been activated, do the following to start the machine:

1. Ensure the emergency stop's reason is clarified, and no further danger is present.
2. Turn the emergency button to the right to release the emergency stop (see Figure 70).



Figure 70: Turning the emergency button

3. Turn the ignition key to the OFF position (see Figure 71).



Figure 71: Ignition key in OFF position

4. Turn the ignition key to the ON position (see Figure 72).



Figure 72: Ignition key in ON position

5. Press the activate button (see Figure 73).



Figure 73: Activate button

6.7.5 Start-up after service/repair

For starting up the machine after service/repair, refer to section **Error! Reference source not found. Error! Reference source not found..**

6.7.6 Freeing a person in the event of an overrun or jam

To free a person in the event of an overrun or jam:

- Create an overview and assurance of the situation.
- Create access to first aiders and therapists.
- If the emergency stop is activated and the machine must be started up, refer to section **Error! Reference source not found. Error! Reference source not found..**
- If the machine must be started up to be moved, refer to section **Error! Reference source not found. Error! Reference source not found..**

6.8 Troubleshooting/FAQ

| Error | Possible cause | Troubleshooting |
|----------------------------|--|---|
| The machine will not start | The machine is not switched on, lacks power, or the compartment door is open. The emergency stop button has been triggered. | Check the main switch, ignition key, info display, and the activation button lights up green. Also, check that the compartment door is closed and locked. The emergency stop must be deactivated or is defective. |
| The machine will not run | Activation Button, Joystick, Compartment Door, "Top Gun" Button. | The activation button must light up green, the joystick's rocker switch must be in position N (neutral), the "Top Gun" button |

| | | |
|---|--|--|
| | | must be activated, and the compartment door must be closed. |
| The machine blocks one or more wheels | The activation button and emergency stop button have been triggered. | The activation button is not pressed. Restart the machine—contact service. The emergency stop must be deactivated or is defective. |
| The machine is too heavy to control | Air pressure in wheels, hydraulics. | Check that the air pressure in the wheels is correct. Check that there is enough oil in the hydraulic tank. |
| The machine rolls when parking | “Top Gun” button | Check that the top gun button is off and closed. |
| The container will not tip up | Hydraulic motor, joystick. | Hydraulic oil, run the hydraulic motor and check the joystick wiring and connections. Restart the machine. |
| The container will not tip down | Hydraulic motor, joystick, hose valve break. | Hydraulic oil, run the hydraulic motor and check the joystick wiring and connections. The hose break valve is defective. Restart the machine. |
| Container swivel will not raise | Hydraulic motor, joystick. | Hydraulic oil, run the hydraulic motor and check the joystick wiring and connections. Restart the machine. |
| Container swivel will not lower | Hydraulic motor, joystick, hose valve break. | Hydraulic oil, run the hydraulic motor and check the joystick wiring and connections. The hose break valve is defective. Restart the machine. |
| Container rotation right and left | Hydraulic motor, joystick. | Hydraulic oil, run the hydraulic motor and check the joystick wiring and connections. Restart the machine. |
| The hydraulic system lacks power | Hydraulic motor, hose valve break. | The hydraulic motor does not run, lacks hydraulic oil, leaking hydraulic hoses. |
| The machine's functions work, but the engine cannot run | Activation contact. Main relay. | The activation button is not pressed or defective. The main relay does not receive power or is faulty. |

7. Service, repair, and maintenance

7.1 General

The machine operator and the service shop can handle the machine service.

Machine operator:

- Daily maintenance items are listed in Table 6.

Service shop:

- Checklist for HG E2000
- Machine repair
- Replacing of spare parts

7.1.1 Maintenance

Table 6 lists the individual maintenance points for the HG E2000 and HG E2000 High Tip and when maintenance points should be carried out.

In addition to HG Machine's maintenance points, the Checklist for HG Machines HG E2000 and HG E2000 High Tip must be done according to order no. 1109 of 15.12.1992. Only authorized service workshops may carry out service on the HG E2000. Contact HG Machines for information about a service workshop.

Table 6: Maintenance list for HG E2000 HIGH TIP

| Activity | For every xx operating hours | | | | | |
|----------|---------------------------------------|----------|-----------|-----------|----------|----------|
| | Daily | 20 hours | 150 hours | 300 hours | 3 months | 6 months |
| Control | Battery capacity display | x | | | | |
| | Safety harness | x | | | | |
| | Roller bar | x | | | | |
| | Tire pressure | x | | | | |
| | Main switch | x | | | | |
| | Emergency stop function | x | | | | |
| | Hydraulic condition | x | | | | |
| | Hydraulic leaks | x | | | | |
| | Joystick | x | | | | |
| | Forward, neutral, and reverse buttons | x | | | | |

| | | | | | | | |
|-------------------------|--|---|--|---|--|---|--|
| | Reverse alarm indicator | x | | | | | |
| | Tip container | x | | | | | |
| | High tip swivel | x | | | | | |
| | Container rotation | x | | | | | |
| | Signal horn | x | | | | | |
| | Instrument buttons | x | | | | | |
| | Driving lights | x | | | | | |
| | Brake lights | x | | | | | |
| | Flashing lights | x | | | | | |
| | Warning lights | x | | | | | |
| | Working light | x | | | | | |
| | Rotor lamp | x | | | | | |
| | Motor leaks | x | | | | | |
| | Warning signs intact | x | | | | | |
| | Compartment room locked | x | | | | | |
| | Tool room locked | x | | | | | |
| | Bolts and nuts tightened | x | | | | | |
| | Safety bracket intact | x | | | | | |
| | Wheel bolts | x | | | | | |
| Lubrication | Cylinders | x | | | | | |
| | Turn joints | x | | | | | |
| Cleaning | Dirt and other objects under the container | x | | | | | |
| | Dirt and other objects in the instrument panel | x | | | | | |
| | Dirt and other objects near the driver | x | | | | | |
| Service workshop | The checklist for maintenance is reviewed | | | x | | x | |

7.1.2 Spare parts

Spare parts for HG E2000 and HG E2000 High Tip can be ordered on the HG Machine web shop – www.hg-machines.com

7.1.3 Safety during repair/maintenance

For safety during repair and/or maintenance, always fit the safety fittings; refer to section **Error! Reference source not found. Error! Reference source not found.** If cutting or welding is to be done in the machine, the machine must be completely shut down, and the blue connectors on the battery packs must be removed. Refer to section **Error! Reference source not found. Error! Reference source not found.** points 1 to 2.

7.1.4 Disposal of replaced parts

Before disposal, the replaced machine parts must be sorted by material type. This means steel separately, rubber gaskets separately, etc. The different types of material are then disposed of following the legislation in force at any given time.

7.2 Lubricating moving parts and filling with hydraulic oil

7.2.1 Lubrication of moving parts

For lubrication of moving parts, see Figure 74 to Figure 77 for which parts need to be lubricated and where on the machine they are located. The moving parts must be lubricated with a grease gun. For information on the frequency of lubrication of the moving parts, refer to section **Error! Reference source not found. Error! Reference source not found.**



Figure 74: Joints to lubricate



Figure 75: Grease nipple under container by rotation lock

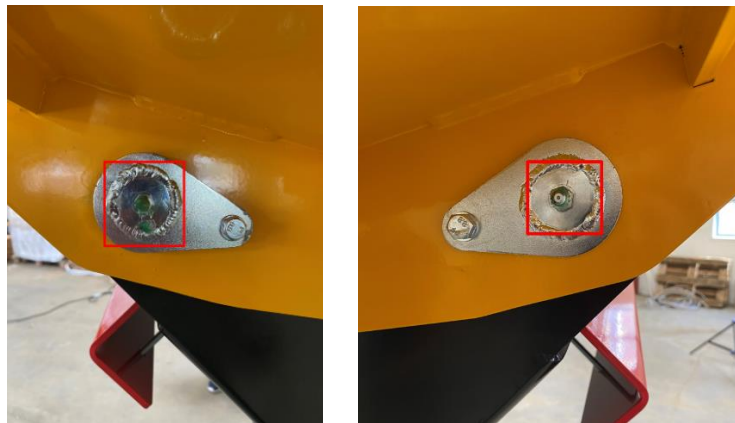


Figure 76: Grease nipples on the right and left side of the container



Figure 77: Grease the nipples on the right and left side of the swivel arms

7.2.2 Filling up hydraulic oil

To fill hydraulic oil, carry out the following points:



Never remove the cover from the hydraulic tank or add hydraulic oil while the engine or hydraulics are running or hot.

1. Turn the ignition key and main switch to the OFF position (see Figure 78)



Figure 78: Ignition key and main switch

2. Remove the footplate (see Figure 79).

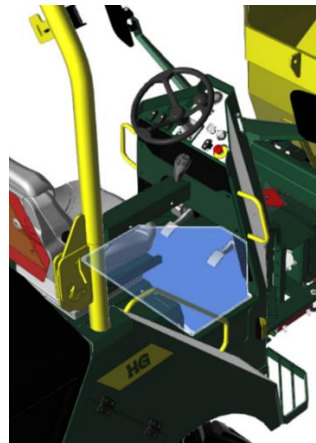


Figure 79: Footplate

3. Remove the cover of the hydraulic tank (see Figure 80).

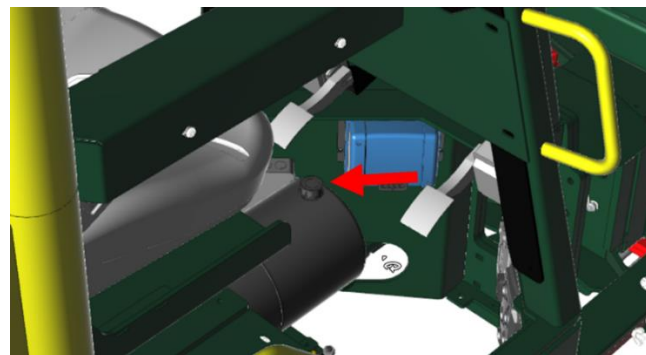


Figure 80: Hydraulic tank cover

4. Fill hydraulic oil in the hydraulic tank.
5. Put the cover back on the hydraulic tank.

6. Put the foot plate back in place.

7.2.3 Security regarding lubrication and filling

7.2.3.1 Security regarding the lubrication

Always pay attention to the following when lubricating the machine

- The machine should always be placed horizontally on stable grounds with easy access to the lubrication spots. All lubrication spots are placed so they can be reached from the ground.
- Never climb the machine when lubricating.
- HG recommends using a lubrication tube with a tube of minimum 20mm. For how to lubricate please see 7.2.1. Lubrication of moving parts.

7.2.3.2 Safety when filling up hydraulic oil

When filling up the hydraulic oil, pay attention to the following:

- In case of hydraulic oil spillage, do not attempt to switch on the machine until the spilled hydraulic oil on the machine has dried off and/or up.
- Hydraulic oil can create very slippery surfaces and can thus increase the risk of breakdowns while driving.
- If hydraulic oil gets on the skin, the skin should be washed thoroughly with soap. If irritation persists, contact a doctor.
- Ingestion of hydraulic oil is dangerous to life.

8. Storage & disposal

8.1 Storage

In conditions where the machine is to be stored without operation over a more extended period, HG recommends that the machine's battery pack be placed in "storage mode" and with a minimum of 40% power on the battery pack. If the machine does not have a minimum of 40% power on the battery pack at the time of recommendation, it must be charged here or above. The machine's current power level can be read on the battery indicator mounted in the instrument panel (See Figure 81).



Figure 81: Info display

When the machine's battery pack has reached a current level of at least 40%, do the following:

1. Remove the backplate for the battery compartment by lifting the elongated hole by loosening three hand screws on each side of the machine in the charger compartment and the tool compartment, respectively (see Figure 82 or Figure 83).



Figure 82: Screw positioning



Figure 83: Backplate

2. Pull apart the blue plug on the battery packs consisting of two counterparts (see Figure 84).

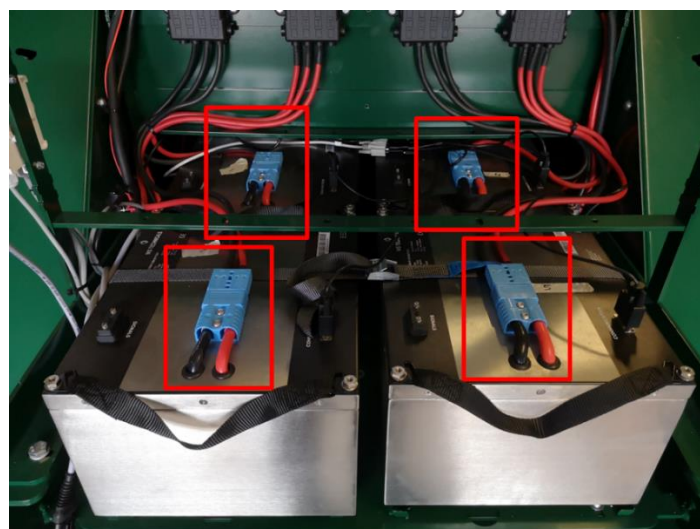


Figure 84: Blue plug on batteries

3. Disconnect the gray or black COM connector from all battery packs (See Figure 85)

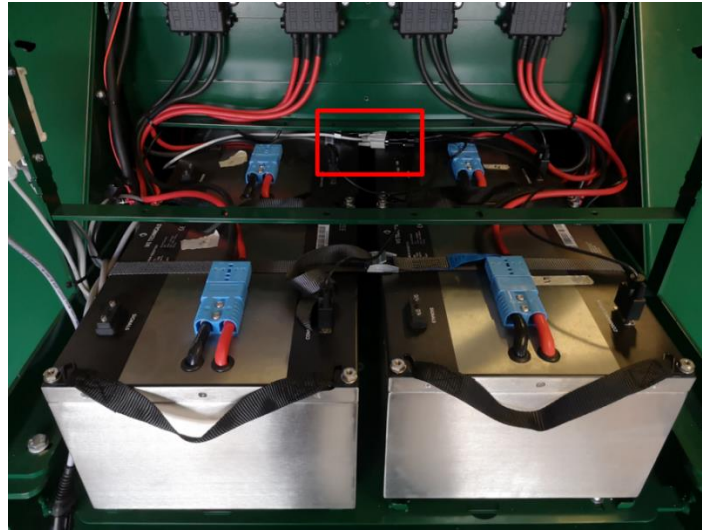


Figure 85: COM-plug

4. Fit the backplate on the battery compartment again.

Once the tasks above are completed, the machine will automatically go into "storage mode" as it will not detect any discharge. In "storage mode," the battery pack will only consume 1-2% of operation-ready level mode. However, the battery must be inspected every 2-3 months and recharged to a minimum of 40%. When the battery pack needs to be recharged, or the machine needs to be used, connect the blue and COM connectors again.


8.2 Disposal

When the HG E2000 is worn out and must be disposed of, HG carries out dismantling by agreement, as it should be done in an environmentally sound manner. When dismantling, the machine parts are sorted by material type. This means steel separately, rubber gaskets separately, etc. The various types of material are then disposed of per the applicable legislation.


9. Appendix

9.1 Diagrams

9.1.1 Electric diagram

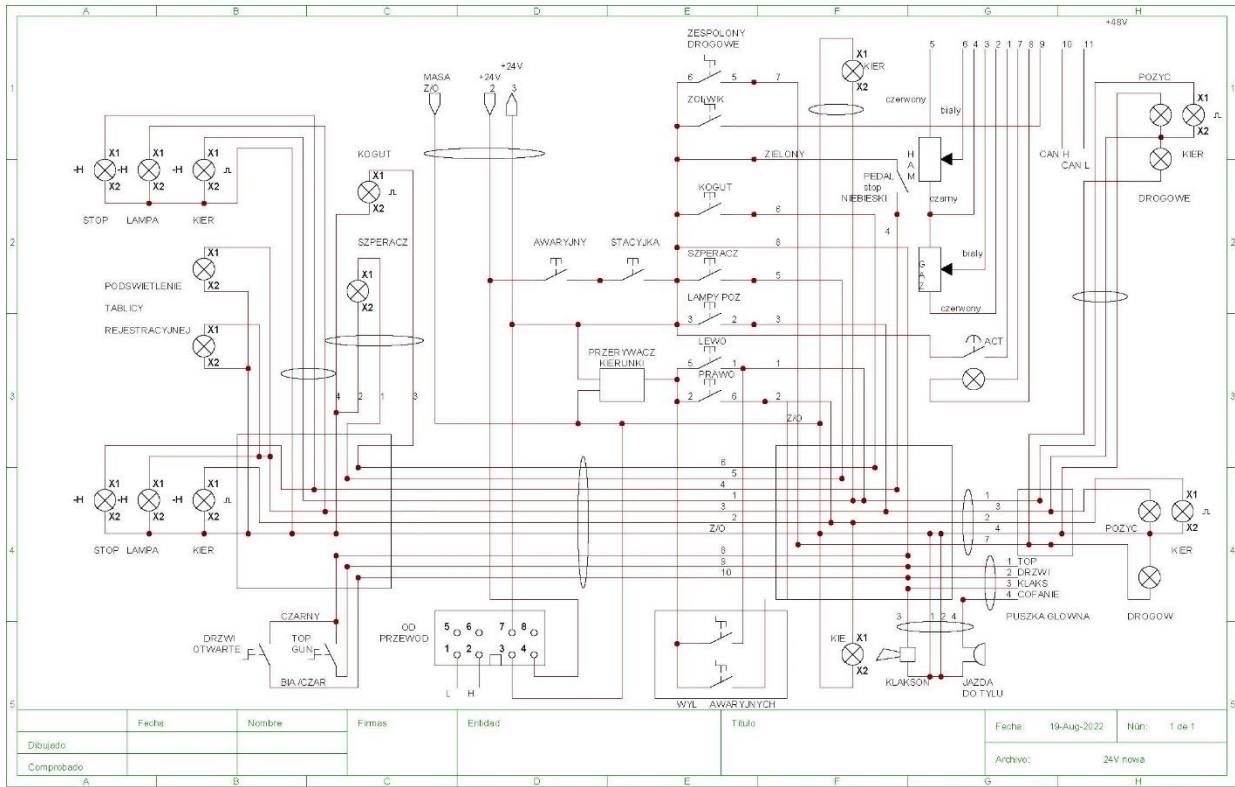

9.1.2 Hydraulic diagram

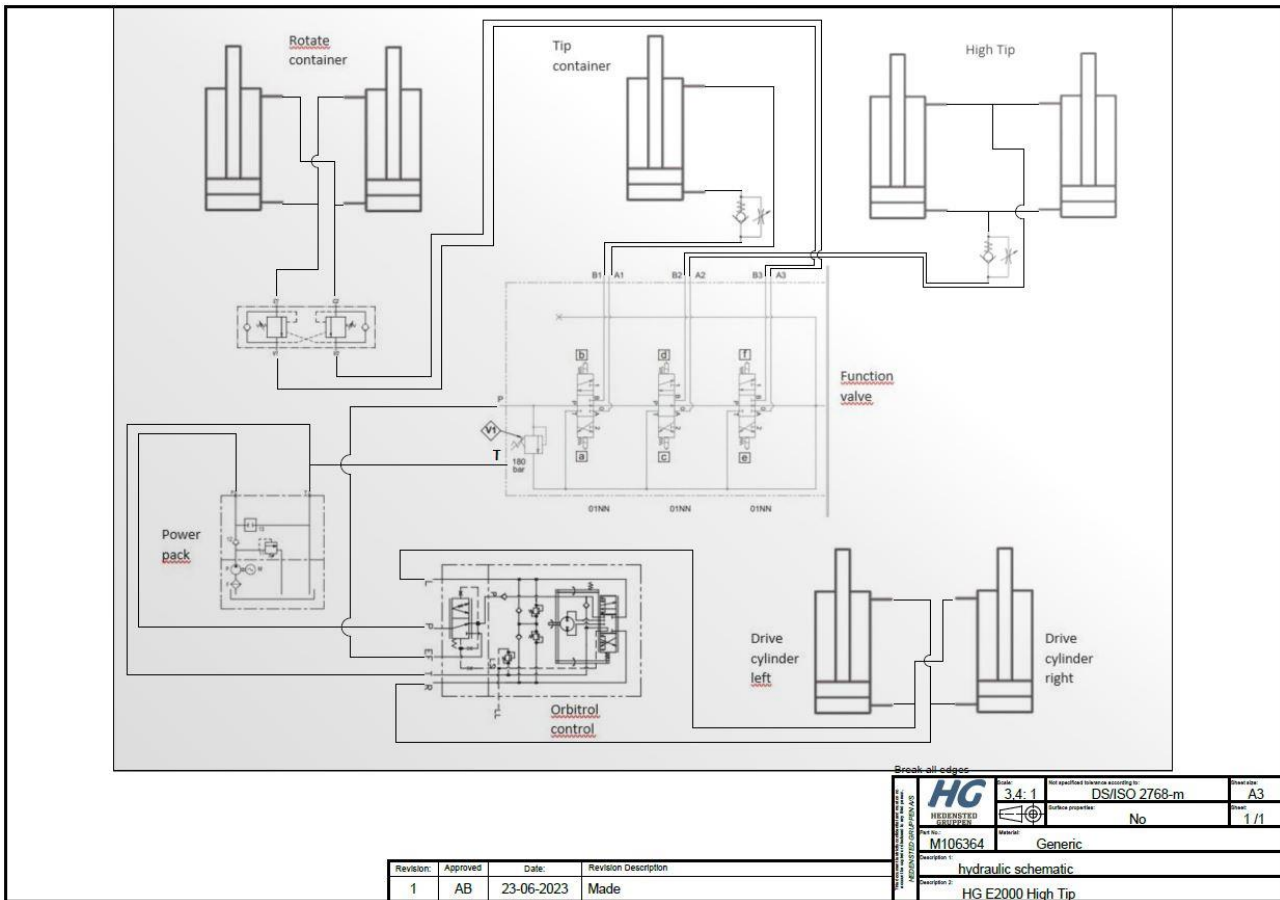

9.2 Blueprints

9.2.1 Overview prints

9.2.2 Parts prints

9.3 Additional manuals

9.4 Third-party documentation

9.5 Checklist for HG Machines HG E2000 and HG E2000 High Tip

The service workshop must keep the checklist during the warranty period. When the service workshop has reviewed and completed the checklist, a copy must be sent to HG Machines at hello@hg-machines.com.

| | | | | | |
|--------------|----------|----------|----------------|-------------|-----------|
| Company: | | Address: | | Report no.: | |
| | | | | Phone no.: | |
| Machine no.: | Product: | Model: | Serial number: | Year: | Time use: |

| | To be ticked at completion: | A= ok | B= repair | C= not ok | D= New parts installed | | | | | |
|--|-----------------------------|-------|-----------|-----------|------------------------|---|---|---|---|--|
| | | | | | | A | B | C | D | |
| 1. Special safety equipment | | | | | | | | | | |
| 1.1 Type sign | | | | | | | | | | |
| 1.2 Capacity sign | | | | | | | | | | |
| 1.3 Warning and information signs (Danish) | | | | | | | | | | |
| 1.4 Emergency stop | | | | | | | | | | |
| 1.5 Lockable switch | | | | | | | | | | |
| 1.6 Main switch | | | | | | | | | | |
| 1.7 Warning/rotor flasher | | | | | | | | | | |
| 1.8 Protections | | | | | | | | | | |
| 1.9 Safety harness | | | | | | | | | | |
| 2. Construction in general | | | | | | | | | | |
| 2.1 Rust, crack,s and breaks (welds) | | | | | | | | | | |
| 2.2 Break joints | | | | | | | | | | |
| 2.3 Break joint stability lock (joint axles) | | | | | | | | | | |
| 2.4 Bolted joints and locks | | | | | | | | | | |
| 2.5 Anchoring points for moving construction machinery | | | | | | | | | | |
| 2.6 Attachment points for pulling or lifting loads | | | | | | | | | | |
| 2.7 Swivel ring for container rotation | | | | | | | | | | |
| 2.8 Joint shaft and pendulum shaft lock | | | | | | | | | | |
| 3. Hydraulics | | | | | | | | | | |
| 3.1 Function control, especially Outer positions | | | | | | | | | | |
| 3.2 Pipes, hoses and fittings | | | | | | | | | | |
| 3.3 Control valves | | | | | | | | | | |
| 3.4 Hydraulic safety valves | | | | | | | | | | |

| | | | | |
|--|--|--|--|--|
| 3.5 Tank | | | | |
| 3.6 Cylinders | | | | |
| 3.7 Engines | | | | |
| 3.8 Oil | | | | |
| 3.9 Leaks | | | | |
| 3.10 Pipe, hose breakage, load holding lowering brake valve | | | | |
| 3.11 Hydraulic pressure | | | | |
| 3.12 Foreclosure | | | | |
| 4. Brakes, wheels and lights | | | | |
| 4.1 Service brake | | | | |
| 4.2 Parking brake | | | | |
| 4.3 Rims, tyres, pressure | | | | |
| 4.4 lights, lights, and reflectors | | | | |
| 4.5 Horns | | | | |
| 4.6 Function control | | | | |
| 5. Steering gear | | | | |
| 5.1 Steering gear | | | | |
| 5.2 Wheels and wheel brackets | | | | |
| 5.3 Hydraulic auxiliary steering | | | | |
| 6. Electrical installation | | | | |
| 6.1 Battery and battery connections | | | | |
| 6.2 Electrical system, cables, connectors, and terminal blocks | | | | |
| 6.3 Wheel motor oil change | | | | |
| 6.4 CANBUS connection | | | | |
| 6.5 Wheel motor is tested if necessary. characterization | | | | |
| 6.6 EM brakes are tested | | | | |
| 6.7 Turn sensor is tested (CIT program) | | | | |
| 6.8 Electric box and fuse boxes | | | | |
| 6.9 Battery packs individually (computer) | | | | |
| 6.10 Charger (Fast) | | | | |
| 6.11 Charger (Slow) | | | | |
| 6.12 If new updates | | | | |
| 7. Driver's seat and cabin | | | | |
| 7.1 Access road, handles, and non-slip steps | | | | |

| | | | | |
|--|--|--|--|--|
| 7.2 Controls and symbols | | | | |
| 7.3 Pedals | | | | |
| 7.4 Seat attachment and adjustment | | | | |
| 7.5 Seat vibration isolation and padding | | | | |
| 7.11 Mirrors | | | | |
| 7.14 Instrument, lamps and switches | | | | |
| 8. Other essential checkpoints | | | | |
| 8.1 CE marking | | | | |
| 8.2 EC declaration of conformity (Danish) | | | | |
| 8.3 User Manual (Danish) | | | | |
| 8.4 Maintenance instructions (Danish) | | | | |
| 8.5 Installation path for equipment cable (Danish) | | | | |

| | |
|--------------------------|--|
| Comment B = Repair | |
| What has been conducted? | |
| | |
| | |
| | |

| | |
|----------------------|--|
| Comment C = Not okay | |
| What is not okay? | |
| | |
| | |
| | |

| | |
|---------------------------------------|--|
| Comment D = New parts | |
| Which new parts have been installed?? | |
| | |
| | |
| | |

| | |
|--------------------------|--|
| Is the machine approved? | |
| Approved: | <input type="checkbox"/> Not approved <input type="checkbox"/> |
| Check conducted by: | |
| Company: | |
| Date: | |