

Likebike Electric Bike Display

User's Manual

YL81F

TABLE OF CONTENTS

1. PRODUCT NAME AND MODEL NUMBER	1
2. SPECIFICATION	1
3. APPEARANCE AND SIZE	1
4. FUNCTION OVERVIEW AND FUNCTIONAL AREAS	3
4.1 FUNCTIONAL OVERVIEW	3
4.2 FUNCTIONAL AREAS	3
4.3 BUTTON DEFINITIONS	3
5. ROUTINE OPERATION	3
5.1 POWER ON/OFF	3
5.2 DISPLAY INTERFACE SWITCHING	4
5.3 WALK BOOST MODE	5
5.4 BACKLIGHT MODE SWITCHING	5
5.5 PAS LEVEL SELECTION	6
5.6 BATTERY LEVEL DISPLAY	6
5.7 ERROR CODE DISPLAY	6
6. PERSONALIZED PARAMETER SETTINGS	7
6.1 METRIC AND IMPERIAL SETTING	7
6.2 RATED VOLTAGE SETTING	8
6.3 PAS LEVEL SETTING	9
6.4 WHEEL DIAMETER SETTING	10
6.5 NUMBER OF SPEED SENSOR MAGNETS SETTING	10
6.6 SPEED LIMIT SETTING	11
6.7 CONTROLLER CURRENT LIMIT SETTING	11
6.8 PAS SENSOR DIRECTION SETTING	12
6.9 PEDAL ASSIST SENSITIVITY SETTING	12
6.10 NUMBER OF PEDAL ASSIST SENSOR MAGNETS SETTING	13
6.11 THROTTLE MODE SETTING	13
6.12 THROTTLE LEVEL SETTING	14
6.13 POWER-ON PASSWORD SETTING	15
6.14 AUTO SLEEP TIME SETTING	16
7. SHORTCUT OPERATION	17
7.1 RESTORE FACTORY DEFAULT PARAMETER SETTINGS OPERATION	17
7.2 TRIP ODOMETER RESET OPERATION	17
8. QUALITY ASSURANCE AND WARRANTY	18
8.1 WARRANTY INFO	18
8.2 WARRANTY DOES NOT COVER	18
9. WIRE CONNECTION DIAGRAM	18
9.1 STANDARD WIRE CONNECTION SEQUENCE	18

10. PRECAUTIONS	18
SCHEDULE 1: ERROR CODE DEFINITION	19
SCHEDULE 2: PEDAL ASSIST LEVEL DEFAULT RATIO VALUE	19

1. Product Name and Model Number

Smart LCD display for electric bicycle; Model: YL81F.

2. Specification

- 48V power supply
- Display rated current 15mA
- Display maximum current 30mA
- Shutdown leakage current <1uA
- Supplied current to the controller 50mA
- Operating temperature -20~60°C
- Storage temperature -30 to 70° C

3. Appearance and Size



Figure 3-1 Physical picture of the YL81F display



Figure 3-2 Physical picture of the K6 customized control button

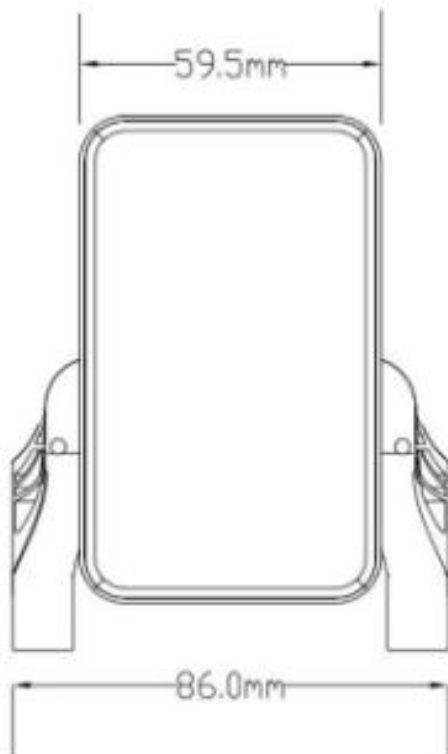


Figure 3-3 YL-81F Front View Dimension

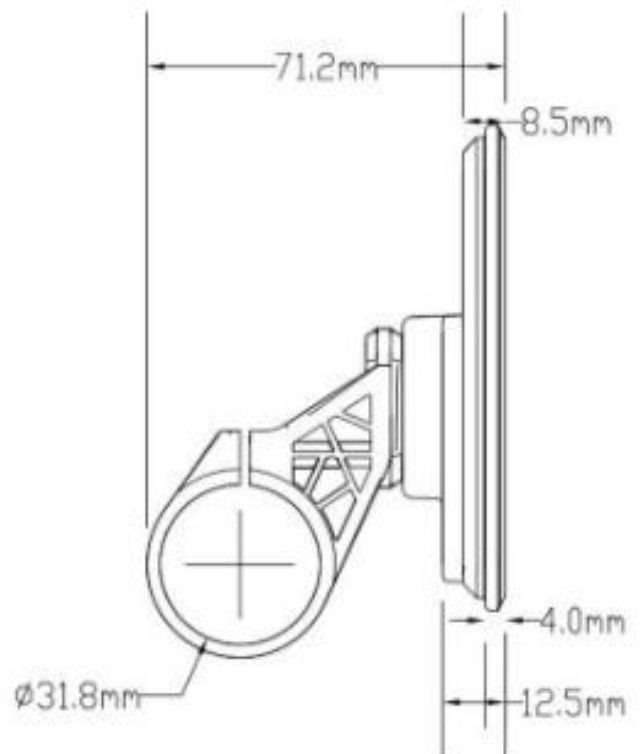


Figure 3-4 YL-81F Side View Dimension

4. Function overview and Functional areas

4.1 Functional overview

The YL81F display offers a variety of features to suit your riding needs, including:

- Battery level indicator
- Pedal assist (PAS) level indicator
- Speed (current speed, maximum speed, average speed)
- Mileage display (single and total mileage)
- Walk boost mode
- Error code indicator
- Cruise control indicator (optional)
- Personalized parameter settings (e.g. wheel diameter, speed limit, etc.).
- Factory default parameter recovery function

4.2 Functional areas

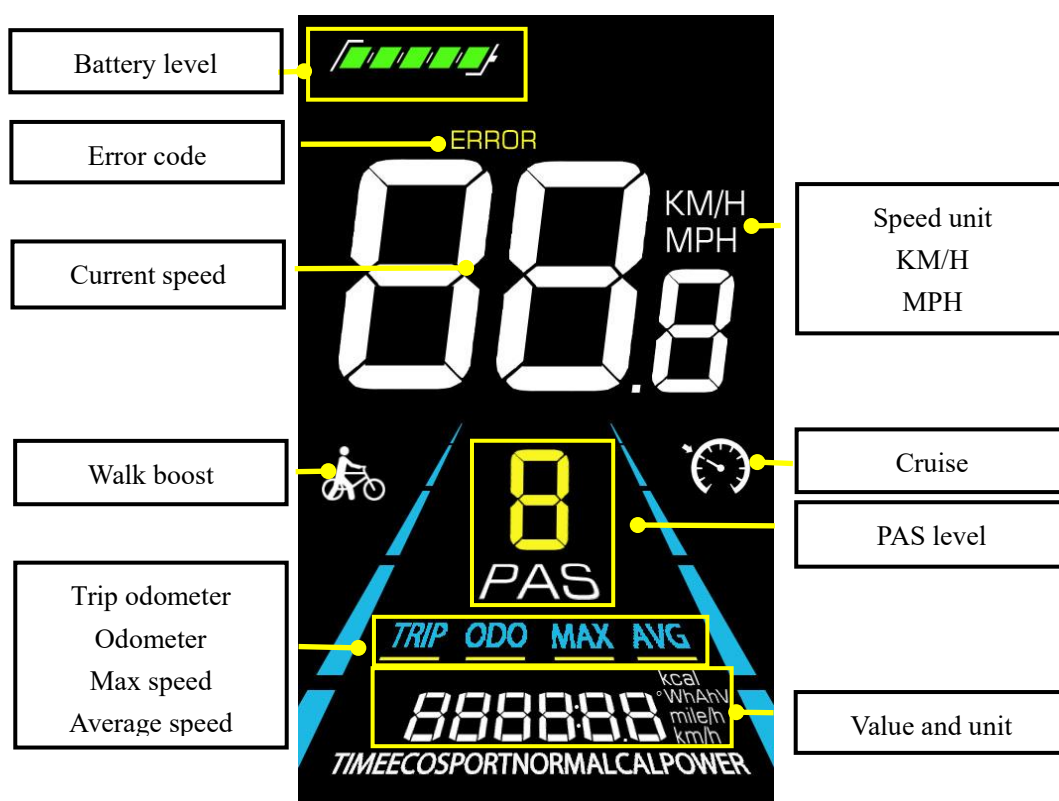








Figure 4-1 YL81F functional area distribution interface

4.3 Button definitions

The YL81F display is equipped with five buttons on the corresponding operating unit: power on/off , plus , minus ,  button and toggle .

5. Routine operation

5.1 Power on/off

Long press  to power on/off the display. When the display is off, it will not use the battery power and the leakage current is less than 1uA.

⚠ The display will automatically shut off if it is not used for more than 10 minutes.

5.2 Display interface switching

When the display is powered on, it will show the Current Speed (mile/h) and Trip Odometer (mile) by default. Short press **i** to switch between Trip Odometer(mile), Odometer (mile), Maximum Speed (mile/h), Average Speed (mile/h),and Current (A).

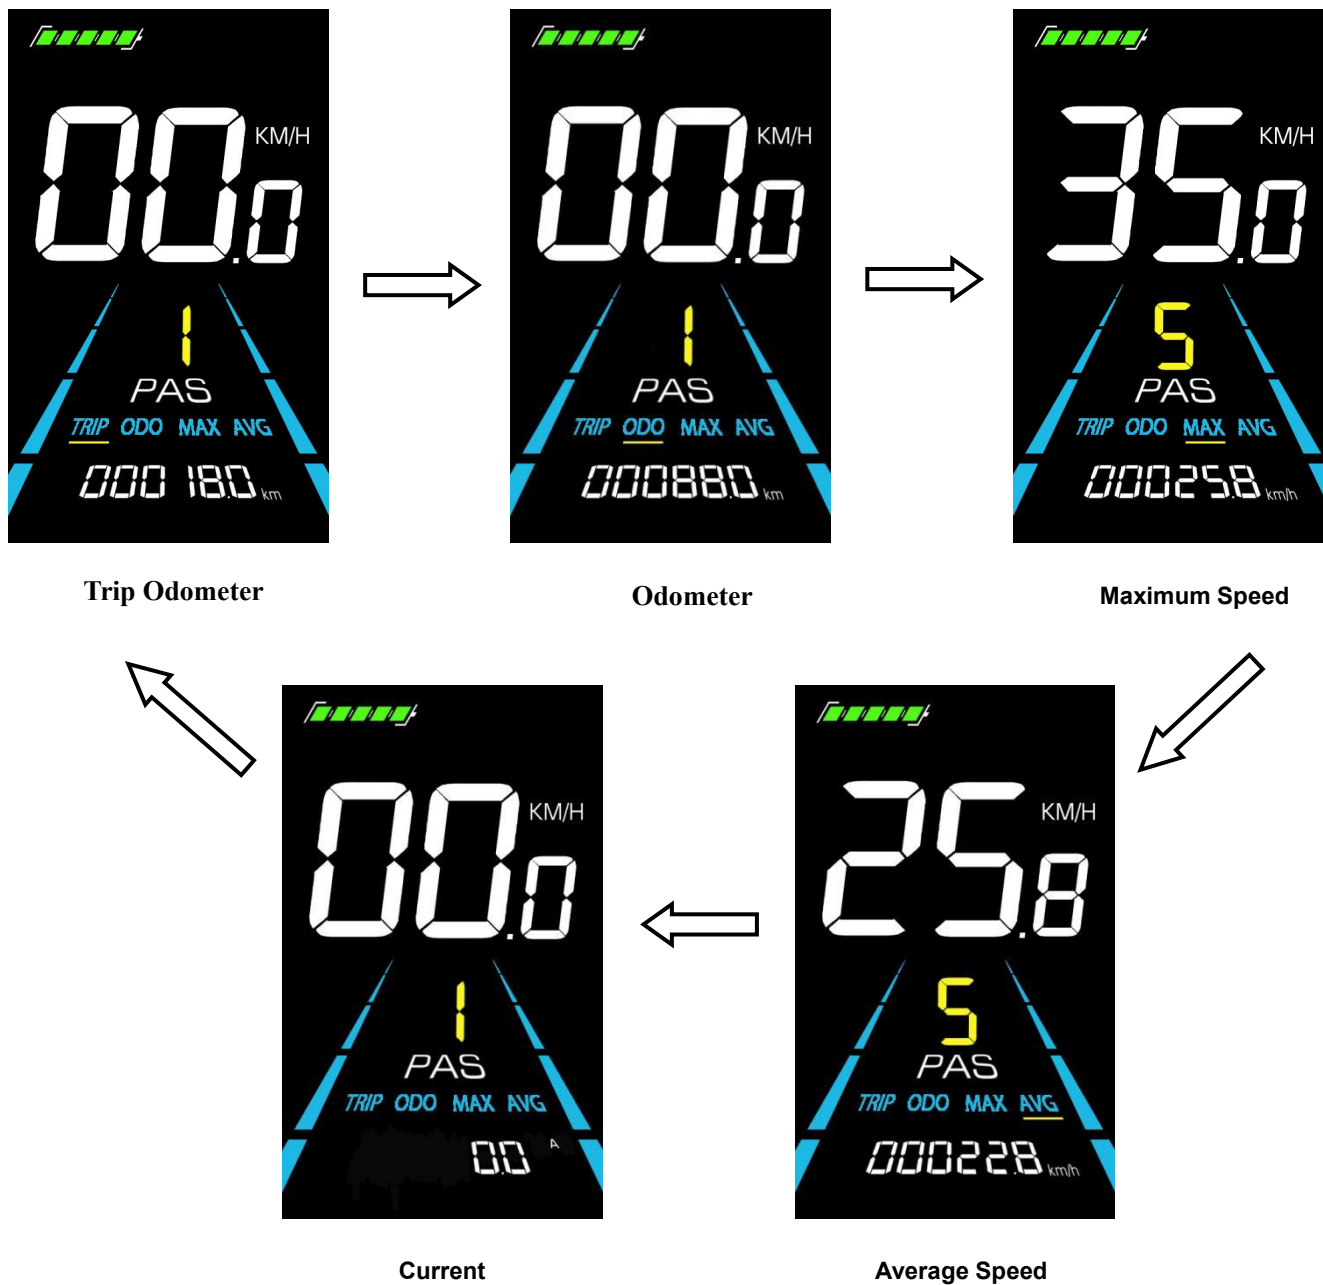


Figure 5-1 Display Interface Switching

5.3 Walk boost mode




Long Press and hold , the electric bicycle enters the walk boost mode. Your e-bike will run at the constant speed at the promoted speed and the display shows . Release  to stop the power output immediately and restore to the state before walk boost.



Figure 5-2 Helping to implement the display screen

⚠ The walk boost mode can only be used when pushing the electric bicycle, please do not use it while riding.

5.4 Backlight mode switching



Press the  to switch backlight mode, the display backlight dims and enters night mode. Press  again to restore the display to daytime mode and the backlight restore brightness.



Figure 5-3 Backlight mode switching display interface

5.5 PAS level selection

Press **+** / **-** to switch PAS level of electric bicycle, thus changing the motor output power.



Figure 5-4 PAS level display interface

5.6 Battery level display

The Battery level is shown as 5 bars. When the battery is full charged, all of the 5 bars lighten up. When the battery is fully depleted, the bar will begin to flash, warning the user to charge the battery as soon as possible.

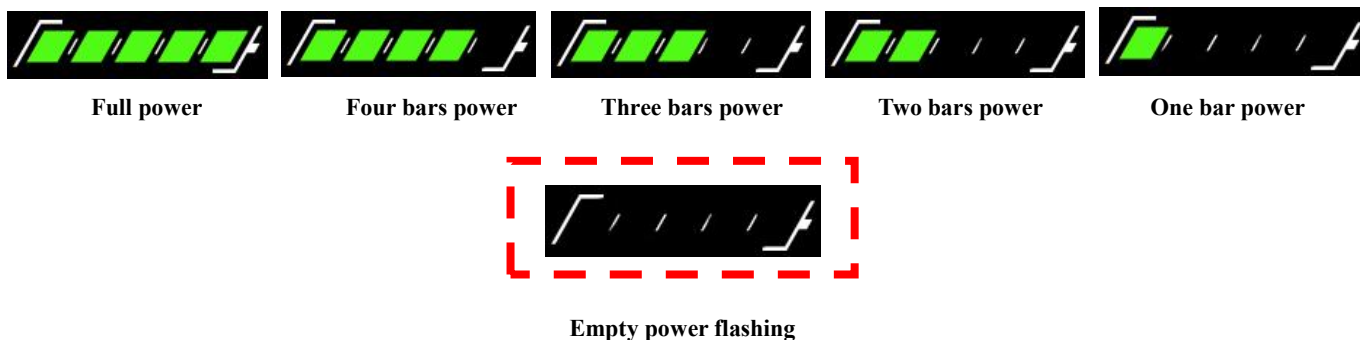


Figure 5-5 Battery Level Display Interface

5.7 Error code display

If there is a fault occurs in the electronic system of the electric bicycle, the display will automatically show an error code, see **Schedule 1** for a detailed definition of the error code.



Figure 5-6 Error Code Display

⚠ When the error code appears on the display, please troubleshoot the problem in time, the electric bicycle will not be able to drive normally after the problem occurs.

6. Personalized parameter settings

⚠ Each setting needs to be done with the bicycle stationary.

The personalized parameter setting procedure is as follows:

When the display is ON and the speed shows 0,

(1) Press and hold **+** **-** simultaneously for more than 2 seconds to enter the personalized parameter setting interface.

(2) Press **+** / **-** to toggle between the personalized parameter setting interface, and press **i** to enter the parameter changing state.

(3) Press **+** / **-** to select the parameter, long press **+** for addition operation, long press **-** for subtraction operation.

(4) Press **i** to save the parameter settings and return to the personalized parameter setting interface.

(5) Long Press **i** to save the parameter settings and exit the personalized parameter setting interface.

The following options are available on the personalized parameter setting interface:

6.1 Metric and Imperial setting

01P is the metric and imperial setting, 00 for metric and 01 for imperial.

Press the button **i** to enter the parameter modification interface. Press the button **+**/**-** for parameter selection.

Press the button **i** to save the parameter and return to the selection interface of general setting options.

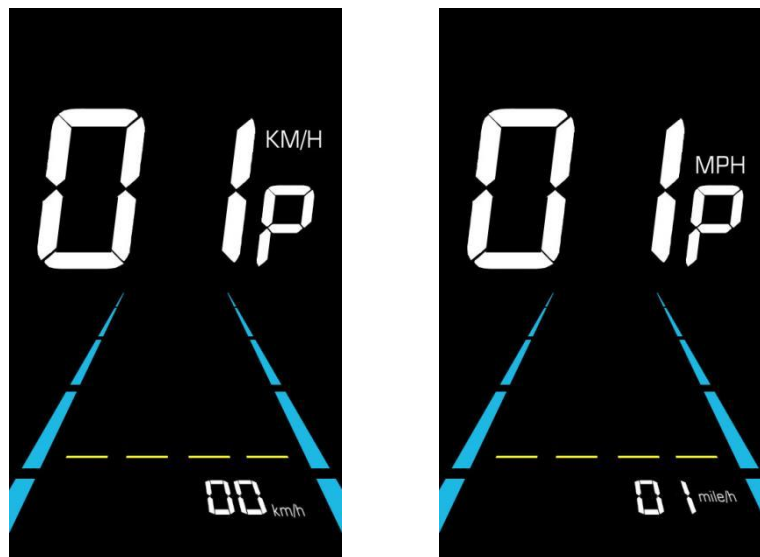


Fig. 6-1 Metric and Imperial Units Setting Interface

6.2 Rated voltage setting

02P is the rated voltage setting. The available rated voltage range is: 24V,36V, 48V,60V.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-2 Rated voltage setting interface

6.3 PAS level setting

03P is the Pedal assist level setting. The available PAS level settings are: 0~3,1~3, 0~5,1~5, 0~7,1~7,0~9,1~9.

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter and press **i** to save the parameter setting and enter the 6.3.1 power ratio value setting interface, or press and hold the **i** to confirm and return to the main interface.



Figure 6-3 PAS level setting interface

6.3.1 PAS level ratio value setting

To meet different requirements for users, the speed of every level can be adjusted by setting the PAS level ratio value. Please see the details from Schedule 2.

For example, “10-50%” is the ratio range of PAS 1. The default ratio value of PAS 1 is 35% which is adjustable.

Press the **+** / **-** to select the parameter and press **i** to save the parameter and enter into the next level setting.

Press **i** again to save the settings and return to the personalized parameter setting interface.



Figure 6-4 PAS level setting interface

6.4 Wheel diameter setting

04P is the wheel diameter setting. The adjustable wheel diameter range is: 16~32inch.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-5 Wheel diameter setting interface

6.5 Number of speed sensor magnets setting

05P is the speed sensor magnet number setting. The adjustable speed sensor magnet number range is: 1 ~ 15pcs.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-6 Number of speed sensor magnets setting interface

6.6 Speed Limit Setting

06P is the speed limit setting. The adjustable speed limit range is: 12~32mile/h. (20~51km/h)(The maximum adjustable speed limit varies by different protocols).

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-7 Speed limit setting interface

6.7 Controller Current Limit Setting

07P is the controller current limit setting. The adjustable range is: 1~31A.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-8 Controller current limit setting interface

6.8 PAS sensor direction setting

08P is the PAS sensor direction setting, run-F is front direction and run-b is opposite direction.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

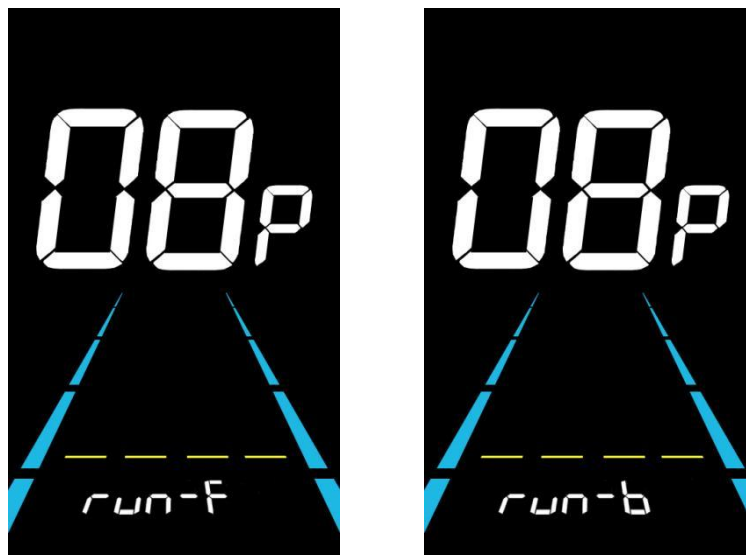


Figure 6-9 PAS sensor direction setting interface

6.9 Pedal assist sensitivity setting

09P is the pedal assist sensitivity setting. When set to higher numbers, it will take more crank rotations to activate the motor. On lower numbers, it will take little crank rotation to activate the motor. The adjustable range is: 2~9.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-10 Pedal assist sensitivity setting interface

6.10 Number of pedal assist sensor magnets setting

10P is the number of pedal assist sensor magnets setting. The adjustable range: 5-12 pcs.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

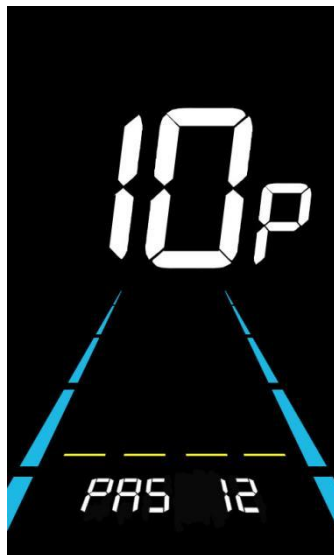


Figure 6-11 Number of pedal assist sensor magnets setting interface

6.11 Throttle mode setting

11P is the throttle mode setting. 00 represents normal throttle mode, 01 represents throttle 6km mode. When the Throttle is turned, the instrument enters the walk boost mode.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

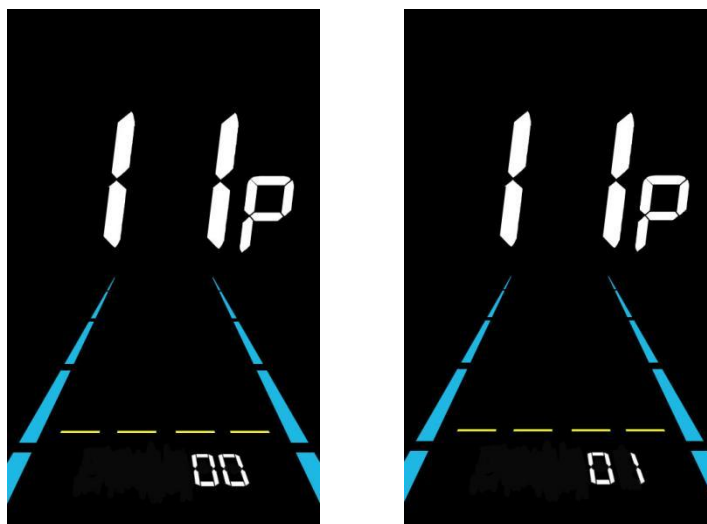


Figure 6-12 Throttle mode setting

6.12 Throttle level setting

12P is the throttle Level setting. 00 is to disable the throttle level. 01 is to enable the throttle level. If you select 01, it means that when the steering angle is turned to the maximum, the bicycle speed can only reach the maximum speed that can be reached by the current display of the throttle level; If 02 is selected, it means that when turning the throttle, it is not limited by the throttle level displayed on the display and can reach the rated maximum speed.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.

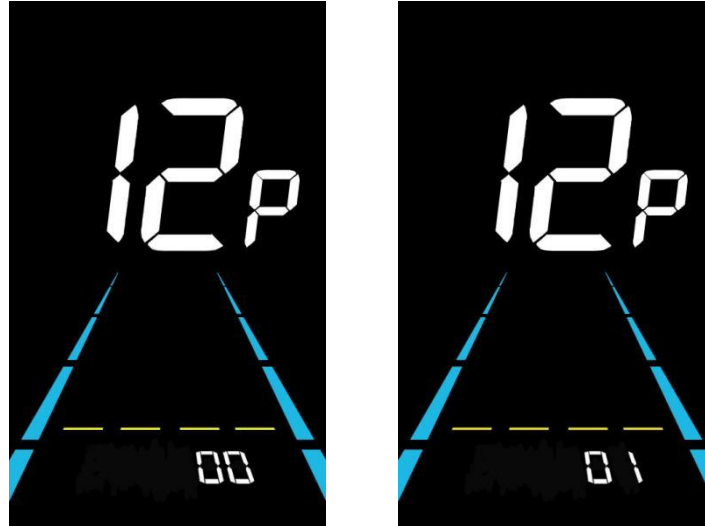


Figure 6-13 Throttle level setting

6.13 Power-on password setting

13P is the power-on password setting. The power-on password is not activated by default but users can activate it from setting PSd-y. The factory default password is 1212. Users can set other four-digit password. **⚠ Please keep the password in mind after changing it, otherwise you will not be able to use the display.**

Press **i** to enter the parameter changing state. Press the **+** / **-** to select the parameter. PSd-y means the power-on password is activated while PSd-n is off. Press **i** to confirm the mode and enter the state of setting the four digits power-on password or exit to the personalized parameter setting interface.



Figure 6-14 Power-on Password OFF interface



Figure 6-15 Power-on Password Activated interface

In the password setting mode, the adjustable digit will flash. Press the **+** / **-** to select the parameter and press **i** to save the numbers and go to the next digit setting. Press **i** to save the parameter setting and return to the personalized parameter setting interface after finish setting the four digits in turn.

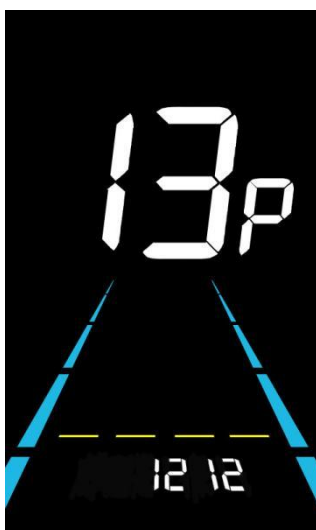


Figure 6-16 Power-on password setting interface

6.14 Auto Sleep Time Setting

14P is the auto sleep time setting. To save the battery power and reach higher range, this display will be turned off after it has not been used for a time. The adjustable range is: 1~60min, 00 means no auto shutdown. The factory default setting is 10 minutes.

Press **i** to enter the parameter changing state. Press the **+**/**-** to select the parameter and press **i** to save the parameter setting and return to the personalized parameter setting interface.



Figure 6-17 Auto Power Off Time Setting Interface

7. Shortcut operation

7.1 Restore factory default parameter settings operation

dEF is the restore factory default parameter settings. dEF-Y is to restore default settings, and dEF-N is not to restore.








Enter into the main setting interface and keep the speed at 0, press and hold  and  simultaneously for 2s to enter the restore factory default setting interface. Pressing  /  to toggle to dEF-Y. Then after pressing  to confirm, the display will show dEF-0 for a few seconds and then automatically start to restore the factory default settings. The display will automatically exit to setting interface after the restoration.



Figure 7-1 Restore Factory Default Settings Interface

7.2 Trip odometer reset operation

The display can record trip odometer and odometer. Trip odometer is not automatically reset after turning off. The trip odometer needs to be reset manually.

Enter into the main setting interface and keep the speed at 0, press and hold  and  simultaneously for 2s to reset the trip odometer. The main interface will flash during the reset process.

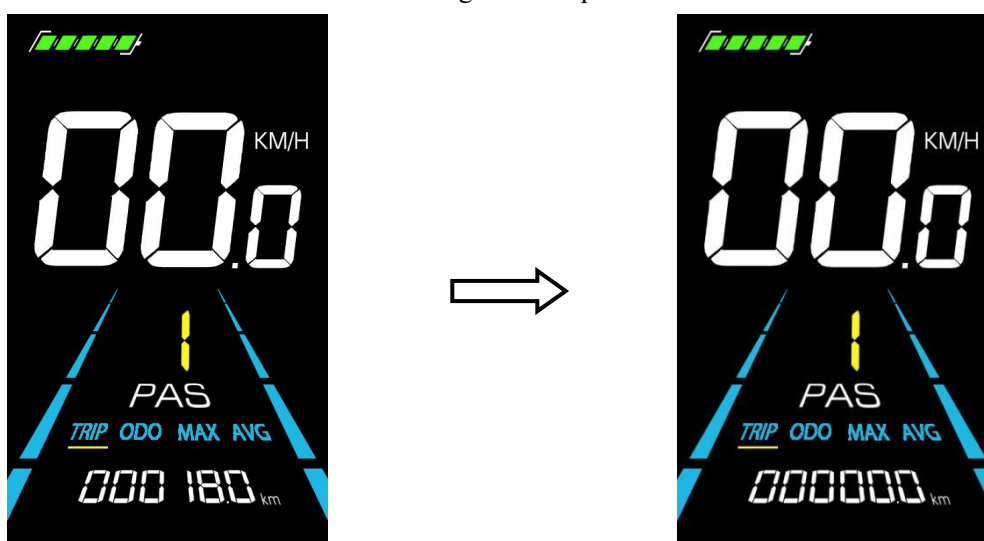


Figure 7-2 Trip Odometer Reset Interface

8. Quality Assurance and Warranty

8.1 Warranty info

● Yolín will offer a limited warranty for any failure caused by the product defects under normal use during the warranty period.


- The product is warranted for 12 months from the date out of factory.

8.2 Warranty does not cover

- The shell is opened.
- The connector is damaged.
- Scratches on the appearance after the product is out of factory.
- Scratched or broken wires
- Failure or damage caused by force majeure (e.g. fire, earthquake, etc.) or natural disaster (e.g. lightning strike, etc.)
- Out of warranty period.

9. Wire connection diagram

9.1 Standard wire connection sequence

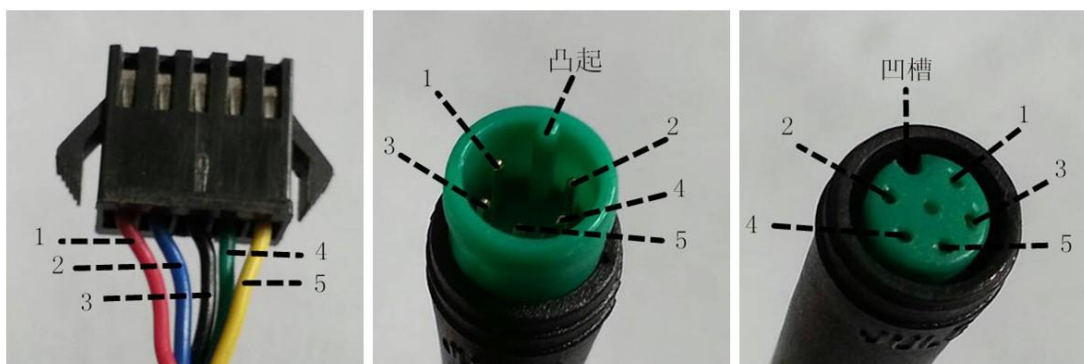

Controller connector

Display connector (Female terminal) Display connector (Male terminal)

Figure 9-1 Wire Connection Diagram

Table 9-1 Standard connector wire sequence table

Standard Wire Sequence	Standard wire color	Function
1	Red (VCC)	Display power wire
2	Blue (Kp)	Controller power wire
3	Black (GND)	Display ground wire
4	Green (RX)	Display data reception wire
5	Yellow (TX)	Display data transmit wire

■ Some models are equipped with waterproof connectors and the color inside wires can not be seen.

10. Precautions

Pay attention to all the general operating when using the products and do not plug and unplug the display while it is powered on.

- ◆ Avoid bumping the display as much as possible.
- ◆ Please do not change the parameter settings at will, otherwise normal riding cannot be guaranteed.
- ◆ If display does not work properly, please send it to the repair center as soon as possible.
- ◆ There may be differences between the physical products and this manual due to normal upgrade. Please refer to the physical products.

Schedule 1: Error Code Definition

YL-05B Error codes			
Error code	Definition	Error code	Definition
E021	Current failure	E024	Hall failure
E022	Throttle failure	E025	Brake failure
E023	Motor phase failure	E030	Communication failure

Schedule 2: Pedal Assist Level Default Ratio Value

Level selection \ Level	1	2	3	4	5	6	7	8	9
0-3/1-3	50%	74%	92%	-	-	-	-	-	-
0-5/ 1-5	50%	61%	73%	85%	96%	-	-	-	-
0-7/ 1-7	40%	50%	60%	70%	80%	90%	96%	-	-
0-9/ 1-9	25%	34%	43%	52%	61%	70%	79%	88%	96%