




www.scintex.com.au | sales@scintex.com.au

Model: SP12VADEF & SP24VADEF

AdBlue Electric Transfer Pump 12V & 24V DC

User's Manual

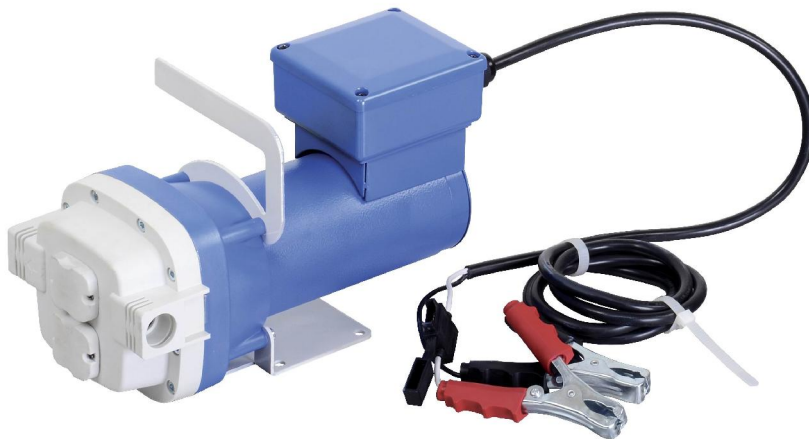



WARNING: Read carefully and understand all INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

A. MACHINE DESCRIPTION

PUMP: Self-priming, volumetric, diaphragm pump, equipped with internal by-pass valve.

MOTOR: Asynchronous motor, single-phase, 2 pole, closed type (protection class IP55 in conformance with EN 60034-5-86 regulations) self-ventilated.

B. TECHNICAL DATA

B1. ELECTRICAL SPECIFICATIONS

PUMP MODEL	ELECTRICAL POWER			Flow Rate	POWER	Connection
	Current	Voltage(V)	Frequency		Nominal(*) (Watt)	Inlet/Outlet
SP12VADEF	DC	12	/	25LPM/6.6GPM	180	3/4"
SP24VADEF	DC	24	/	25LPM/6.6GPM	180	3/4"

C. OPERATING CONDITIONS

C1. ENVIRONMENTAL CONDITIONS

TEMPERATURE: Min. -10oC (14°F) / Max. +60oC(140°F)

RELATIVE HUMIDITY: Max. 90%



ATTENTION!

The temperature limits should be adhered to, to avoid damage to the pump.

C2. ELECTRICAL POWER SUPPLY

1. During installation and maintenance, make sure that the electric supply lines are not live.
2. Always turn off the switch before supplying electrical power.
3. Check the correct rotation direction of the DC pump. If it is inverted, check the polarity of the connection cable.
 - a) RED cable: positive pole (+)
 - b) BLACK cable: negative pole (-)



ATTENTION!

Power from lines with values outside the indicated limits can damage the electrical components.

C3. WORKING CYCLE

1. Extreme operating conditions with working cycles longer than 30 minutes can cause the motor temperature to rise, thus damaging the motor.
2. Each 30-minute working cycle should always be followed by a 30-minute power-off cooling phase.
3. MAXIMUM BY-PASS TIME: 3 MINUTES.

4. DO NOT RUN DRY OVER 30 SECONDS.

 **ATTENTION!**

Functioning under by-pass conditions is only allowed for brief periods of time (2-3minutes maximum).

C4. FLUIDS PERMITTED

PERMITTED

- Chemical products: Urea, weak acid & weak alkaline fluid etc.
- Water

D. MOVING AND TRANSPORT

Given the limited weight and size of the pumps (see overall dimensions), moving the pumps does not require the use of lifting devices.

E. INSTALLATION

E1. DISPOSING OF THE PACKING MATERIAL

The packing material does not require special precautions.

Refer to local regulations for its disposal.

E2. PRELIMINARY INSPECTION

- Check that the machine has not suffered any damage during transport or storage.
- Clean the inlet and outlet openings, removing any dust or residual packing material.
- Make sure that the motor shaft turns freely.
- Check that the electrical specifications correspond to those shown on the identification plate.

 **ATTENTION!**

THE MOTORS ARE NOT ANTI-EXPLOSIVE. Do not install them where inflammable vapours can be present.

E3. CONNECTING THE TUBING

- Before connection, make sure that the tubing and the suction tank are free of dirt and thread residue that could damage the pump and its accessories.
- Before connecting the delivery tube, partially fill the pump body with fluid to facilitate priming.
- Do not use conical threaded joints that could damage the threaded pump openings if excessively tightened.

SUCTION TUBING:

- Minimum recommended nominal diameter: 3/4"
- Nominal recommended pressure: 10bar / 145psi
- Use hose suitable for suction pressure

DELIVERY TUBING:

- Minimum recommended nominal diameter: 3/4"
- Nominal recommended pressure: 10bar/145psi

⚠ ATTENTION!

It is the installer's responsibility to use tubing with adequate characteristics.

Loosening of the connections (threaded connections, flanging, gasket seals) can cause serious safety issues.

Check all the connections after the initial installation and on a daily basis after that.

Tighten the connections, if necessary.

F. DAILY USE

- a. If using flexible tubing, attach the ends of the tubing to the tanks. In the absence of an appropriate slot, solidly grasp the delivery tube before beginning dispensing.
- b. Before starting the pump, make sure that the delivery valve is closed (dispensing nozzle or line valve).
- c. Turn the ON/OFF switch to ON. The by-pass valve allows functioning with the delivery closed only for brief periods.
- d. Open the delivery valve, solidly grasping the end of the tubing.
- e. Close the delivery valve to stop dispensing.
- f. When dispensing is finished, turn off the pump.

⚠ ATTENTION!

Function with the delivery closed is only allowed for brief periods (2-3 minutes maximum).

After using, make sure the pump is turned off.

G. PROBLEMS AND SOLUTIONS

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The Motor is not turning	Lack of electric power	Check the electrical connecting
	Motor Problems	Contact the Service Department
The motor turns slowly when starting	Low voltage in the electric power line	Bring the voltage back within the anticipated limits
Low or no flow rate	Low level in the suction tank	Refill the tank
	Filter clogged	Clean the filter
	Excessive suction pressure	Lower the pump with respect to the level of the tank or increase the cross-section of the tubing
	High loss of head in the delivery circuit (working with the by-pass open)	Use shorter tubing or of greater diameter
	By-pass valve blocked	Dismantle the valve, clean and/or replace it.
	Air entering the pump or the suction tubing	Check the seals of the Connections
	A narrowing in the suction tubing	Use tubing suitable for working under suction pressure
	Low rotation speed	Check the voltage at the pump. Adjust the voltage and/or use cables of greater cross-section
The suction tubing is resting on	Raise the tubing	

	the bottom of the tank	
Increased pump noise	Cavitation occurring	Reduce suction pressure
	Irregular functioning of the by-pass	Dispense fluid until the air is purged from the by-pass system
Leakage from the pump body	Diaphragm damaged	Check and replace the diaphragm

H. MAINTENANCE

All models are designed and constructed to require minimal maintenance.

In any case always bear in mind the following basic recommendations for maintenance:

- On a weekly basis, check that the tubing joints have not loosened, to avoid any leakage.
- On a monthly basis, check the pump body and keep it clean of any impurities.
- On a weekly basis, check and keep clean the line suction filter.
- On a monthly basis, check that the electric power supply cables are in good condition.

I. NOISE LEVEL


Under normal working conditions the noise emission from all models does not exceed the value of **75 db at a distance of 1 meter** from the electric pump.

J. DISPOSING OF CONTAMINATED MATERIALS

In the event of maintenance or demolition of the machine, do not disperse contaminated parts into the environment.

Refer to local regulations for their proper disposal.

K. DIAGRAM AND PARTS LIST

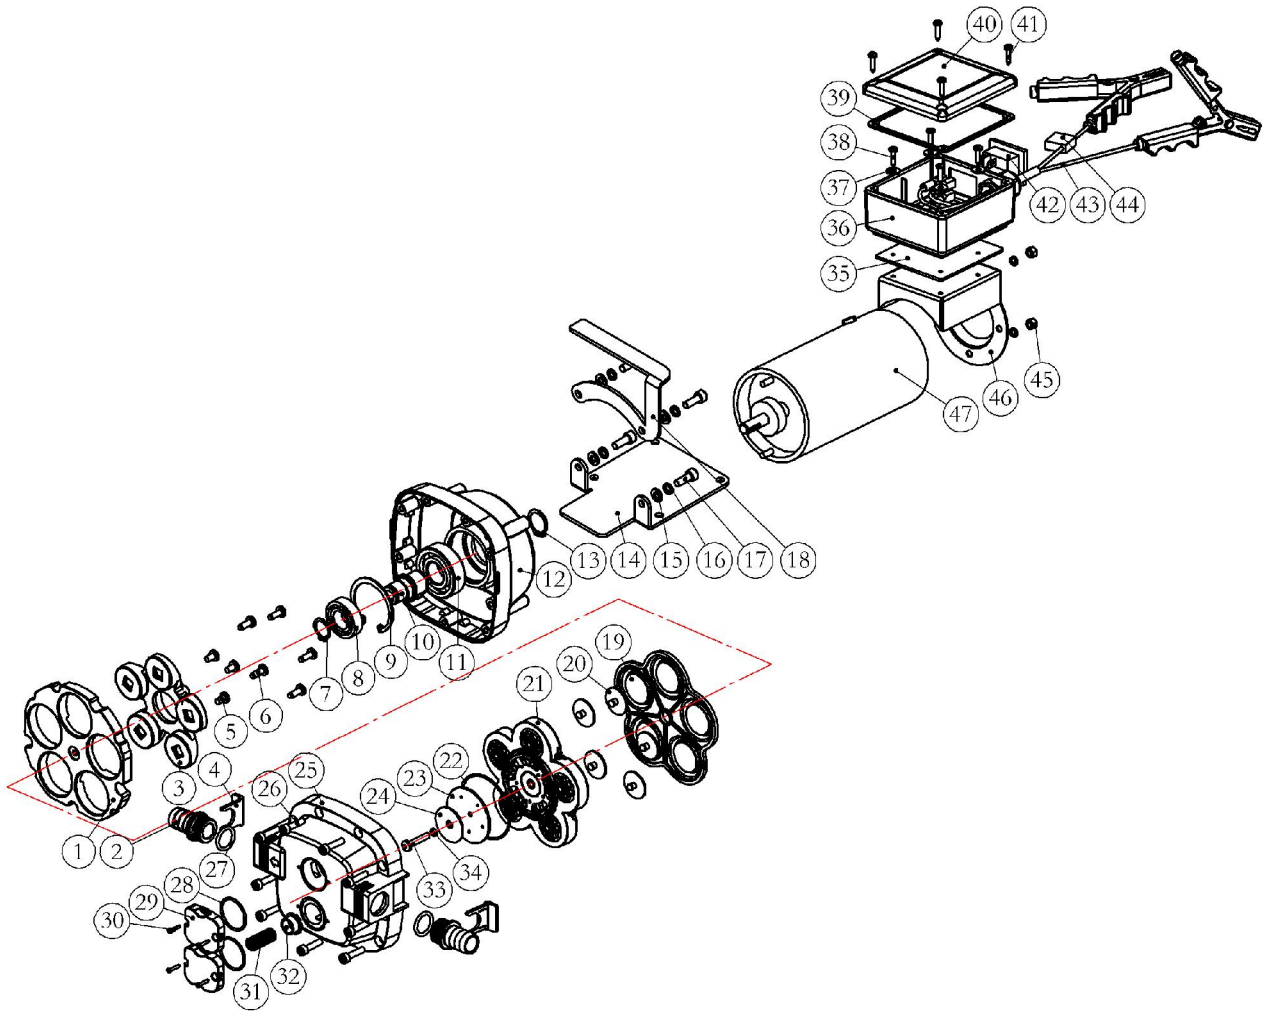

No.	Description	Qty
1	Holder	1
2	Hose Tail	2
3	Nutating Disk	1
4	Clamp	2
5	Bolt	3
6	Bolt	5
7	Check Ring	1
8	Bearing	1
9	Check Ring	1
10	Transmission Shaft	1

No.	Description	Qty
25	Pump Cover	1
26	Bolt	9
27	O-Ring	2
28	O-Ring	2
29	Plate	2
30	Bolt	4
31	By-pass valve Spring	1
32	Valve	1
33	Bolt	1
34	O-Ring	1

11	Bearing	1
12	Pump Base	1
13	Check Ring	1
14	Pump bracket	1
15	Flat gasket	4
16	Gasket	4
17	Bolt	4
18	Portable handle	1
19	Diaphragm	1
20	One-way Diaphragm	1
21	Fluid Part	1
22	O-Ring	1
23	Diaphragm	1
24	Plate	1

35	Seal	1
36	Junction box	1
37	Flat gasket	4
38	Bolt	4
39	Seal	1
40	Cover of junction box	1
41	Bolt	4
42	Switch	1
43	Power cable	1
44	Fuse	1
45	Nut	2
46	Bracket of junction box	1
47	Motor	1

L.DIMENSIONAL DATA

