





Model DS860 Owner's Manual

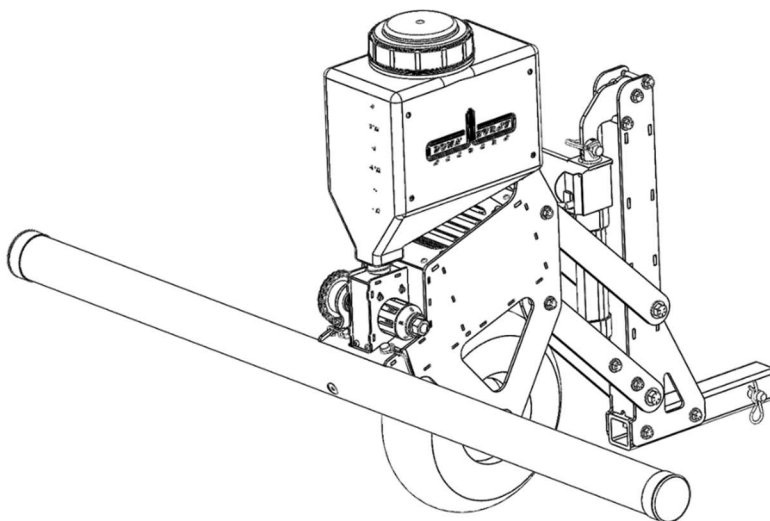

CONTENTS

Introduction	2
Safety	3
Assembly	4
Installing on Planting Machine.....	4
Hitch Requirements	4
Mounting to the Planting Machine.....	6
Installing the Drop Tube.....	6
Electrical Requirements	7
Remote Toggle Mounting and Cable Routing	7
Seed Meter Operation	8
Changing Seed Meters	8
Setting the Seed Rate.....	8
8-Flute Meter Seed Rate Table	10
11-Flute Meter Seed Rate Table	11
Hand Calibrating the Meter	12
Calibration Table	13
Air Baffle Operation	14
Planting Operation.....	15
Emptying the Hopper	15
Maintenance	16

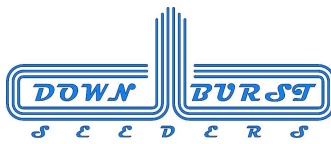



INTRODUCTION

Thank you for purchasing a Down Burst Seeder! Your machine has been designed from the ground up to be the ideal small seed spreader. It is proudly built in Northern Michigan using only the best materials and components available to ensure you will enjoy using it for years to come.

The DS860 is a vehicle mounted seeder designed to fit a variety of machines utilizing a standard 2" hitch receiver. The seeder features a durable roto-molded polyethylene seed hopper which is sealed to keep seed clean and dry while planting in adverse conditions. The hopper is translucent enabling easy monitoring of seed level while planting. The DS860 uses a ground wheel driven fluted roller seed meter that provides extremely accurate seed rates regardless of planting speed. The innovative drop tube design uses high velocity air to spread seed evenly along the width of the machine providing consistent seed coverage at the precise width of the tube. A high-speed lifting actuator raises the machine and locks the ground wheel to stop seed spreading. The machine is controlled by a wired remote with a single toggle switch to either lower the machine to begin seeding or lift the machine to stop seeding. Seed rates are infinitely adjustable from 2 to 60 Lb/Acre by tightening or loosening a single calibration nut.

Major Components

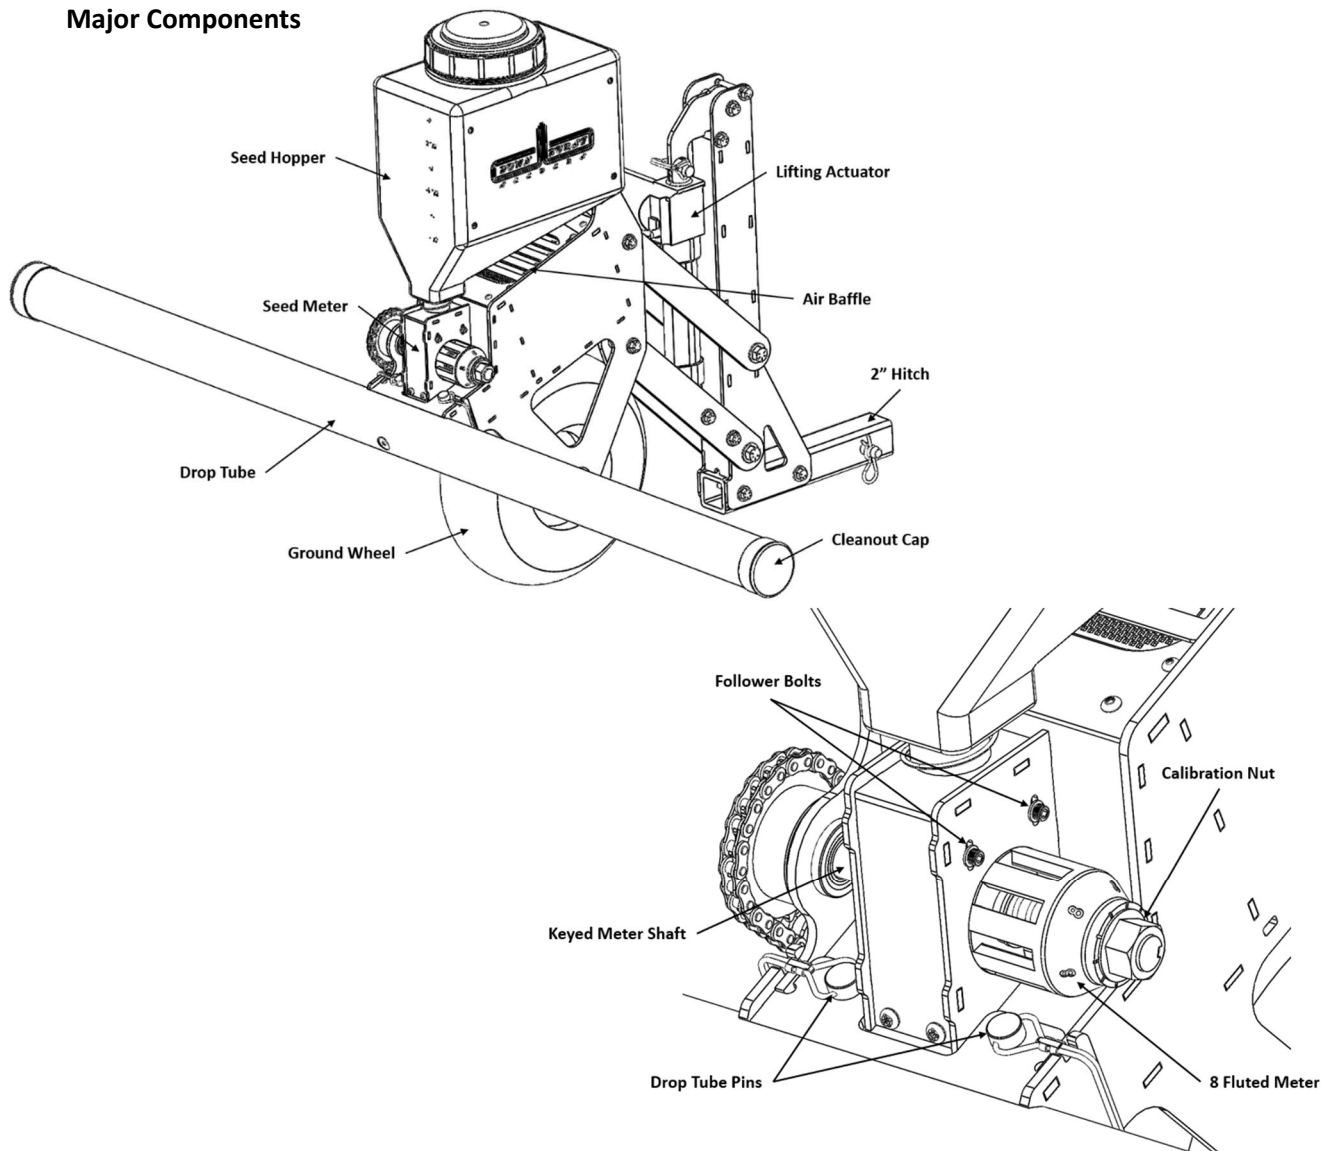

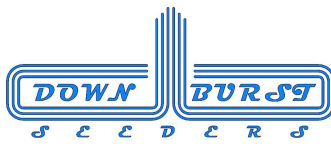

SAFETY

Please be aware of pinch point hazards marked on the machine with this symbol:



While every effort has been made to make the seeder as safe as possible there are a few pinch point locations that can't be guarded for functional purposes. Always keep hands clear of these areas.

Disconnect power before installing or removing the seeder from the planting vehicle.

Disconnect power before making any adjustments or calibrating the seed meter.


Disconnect power before filling or emptying the seed hopper.

Always keep the seeder in the "Lift" position when finished planting or when removing from the planting vehicle. Always make sure the FOB switch is in the "Lift" position before reconnecting power.

Always keep a safe distance from the seeder while in motion. This machine is not designed to be ridden on by anyone or anything.


Never attempt to attach or tow anything behind the seeder.

Never allow children to operate equipment.

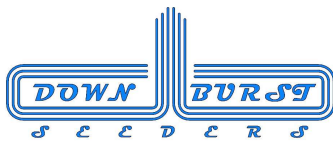

ASSEMBLY

Your Down Burst Seeder is already 90% assembled and only needs to have the 2" hitch tube installed to be fully operational. Remove the 3/8" Bolts from the lifting tower using a 9/16" wrench and socket. Insert the 2" square tube as shown with the hitch pin end pointing away from the ground wheel. Re-install the bolts and washers as shown and tighten securely.

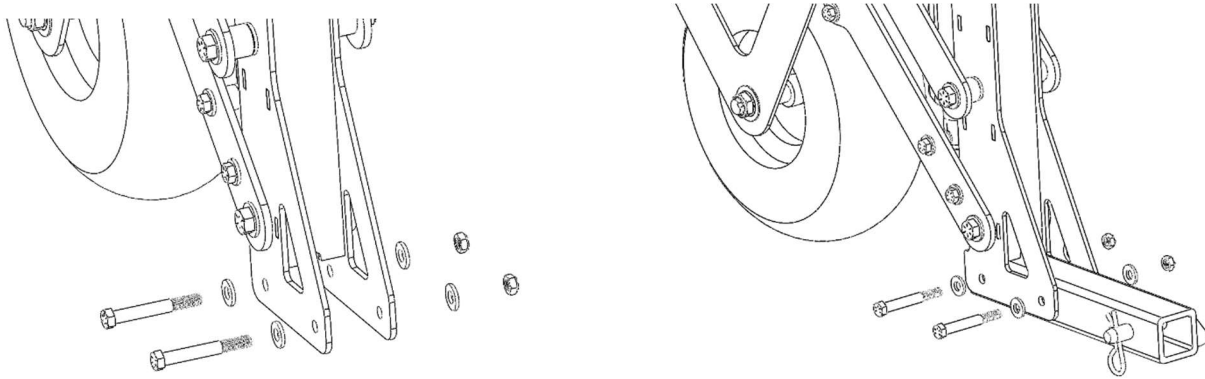

INSTALLING ON PLANTING MACHINE

Hitch Requirements


Your DS860 is designed to fit a standard 2" hitch receiver and is secured with the included hitch pin. For the machine to work properly, the receiver must be between 8" and 16" from the ground. If your receiver is outside the 8" to 16" range, you will need to use an offset hitch adapter to get it within the range. If the vehicle you intend to plant with does not have a 2" receiver already installed most manufacturers offer kits to add one. There are also several "Universal" kits that will work with just about any machine.

With the vehicle safely parked on level ground, measure the height to the bottom of the hitch receiver pocket. The example shown in the image to the right measures 13.5" which is within the acceptable range.



The clearance required for the lifting actuator tower is 24" high at 7" back from the receiver hitch pin hole when lifted and 27" high while seeding. The easiest way to ensure clearance is to measure with a 24" framing square as shown below. If your receiver is tucked under the machine or if you have a tailgate or rack that extends rearward beyond the receiver more than 7", you may need to use a hitch extender for the seeder to fit. Please make sure there is some extra clearance when mounted to account for machine bounce while driving. Down Burst Seeders will not be held liable for damage to the planting vehicle.

Align the 7" mark on the inside of the square with the center of the hitch pin and note the measurement at the face of the hitch. In this example it is 4.5"

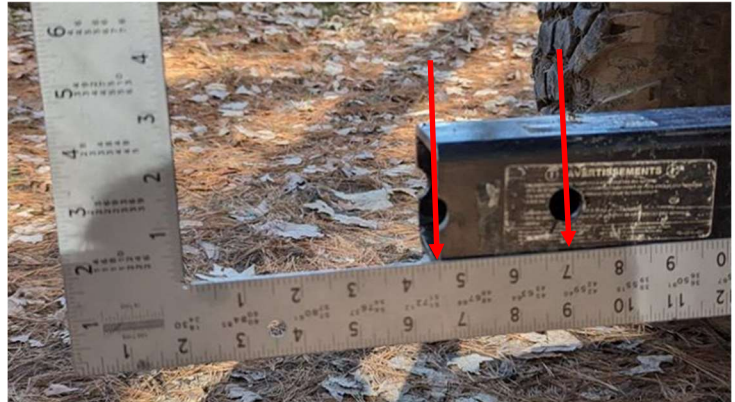

Insert the square into the hitch pocket and align it to the measurement taken above. The square now replicates how the DS860 will fit on the machine. If the square contacts the machine at any point as well as 3" above the square, you will need to use a hitch extender to gain clearance.




If you determined a hitch extender or offset is needed for the DS860 to fit your machine there are a myriad of options available on the market. Note that an offset adapter will also inherently extend the hitch at the same time. Here are just a few examples of what could be used.




Mounting to the Planting Machine

The DS860 should always be in the lifted position when it is not in use. This will ensure all over-travel is taken up, so the pivot links don't move unexpectedly during handling. Note the pinch point warning labels on the machine and keep hands clear of these areas.

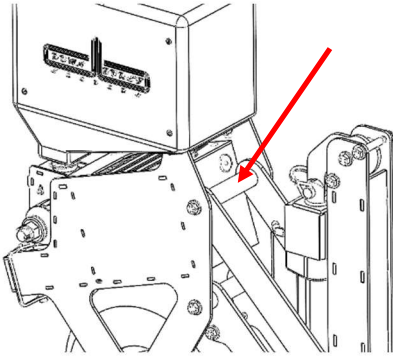

Lift the seeder using the upper pivot tube as a handle. Slide the 2" tube into the hitch receiver and install the hitch pin.

Installing the Drop Tube

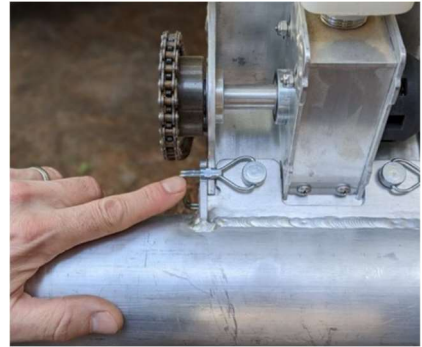

Remove the clevis pins from the seed discharge chute. Place the drop tube over the chute aligning the mounting tabs with the pin holes and re-install the pins. Make sure the pins are fully seated so that the wire clasp is retained from rotation by the notches in the drop tube side tabs.

Electrical Requirements

The seeder requires 12V DC power and can draw up to 15amps while lifting. Power can be provided via the included 12V aux plug cable, or it can be hardwired directly to the vehicle battery with the included ¼" ring terminal cable. Connect the red wire to the positive battery terminal and the black wire to the negative terminal. If using the 12V aux plug, please check the vehicle owner's manual to make sure it




can provide 15amps. If it cannot, or you are unsure, we recommend using the ring terminal cable to hardwire directly to the battery. Both cables are equipped with Powerpole connectors that mate with the remote toggle power cable. The 12V aux plug uses a standard 15A glass tube fuse while the ring terminal cable uses standard 15A ATO/ATC automotive fuses.

Important: the seeder is intended to operate with the planting vehicle engine running and providing consistent voltage between 13.5V and 15V. Do not attempt to power the seeder with a stand-alone battery.

Remote Toggle Mounting and Cable Routing

Mount the remote toggle switch within reach of the operator and secure using the included wire wrap or other means. Make sure any excess cable is secured so it can't be damaged during operation. **BEFORE connecting to power make sure the toggle switch is in the "Lift" position.** Connect the power cable to the previously installed Powerpole connector – Or - plug in the 12V aux plug. Always stand clear of the seeder while connecting power. The seeder is now ready for use.

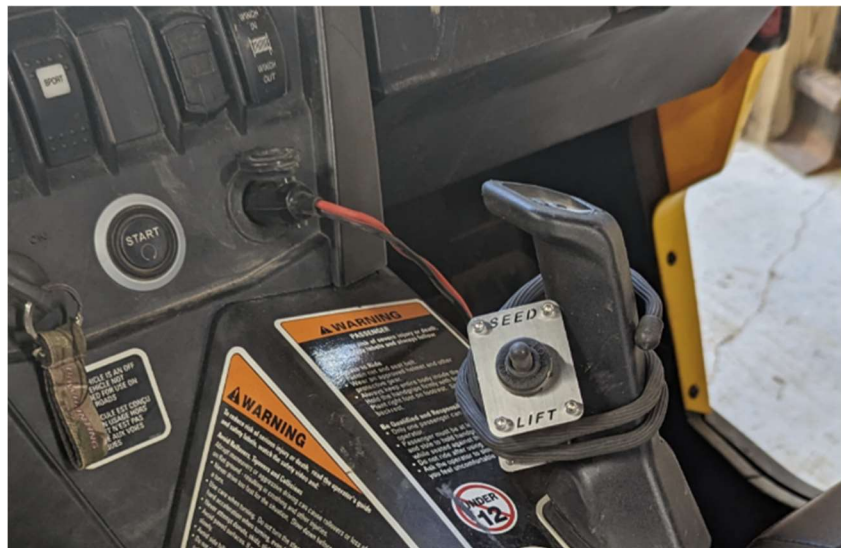


SEED METER OPERATION

The DS860 uses proven fluted roller seed meters similar to those found on agricultural grain drills. The meter controls the seed rate by adjusting the length of the flutes allowed to fill with seed as the roller rotates. The flute length is set by tightening or loosening the spring-loaded meter calibration nut. The adjustment range is from 0 to 24 full turns of the calibration nut. A stainless-steel feeler gage is provided with steps at 4, 8, 12, 16, 20 and 24 full turns. The gage makes large adjustments to the meter quick and easy.

Changing Seed Meters



The DS860 comes with both a small seed 8-Flute meter and a large seed 11-Flute meter. The meters are comprised of 2 components, the fluted roller, and the shutoff which nests into the roller. To switch meters, simply remove the calibration nut and slide the meter components off the meter shaft. Re-install the desired meter components in the same order as shown below. The same meter spring and calibration nut are used with either the 8 or 11 flute meters. Use care when handling the meter shutoff, dropping this component on a hard surface such as concrete could break the shutoff legs. Always store the meter with the shutoff nested into the roller to avoid damaging the legs.

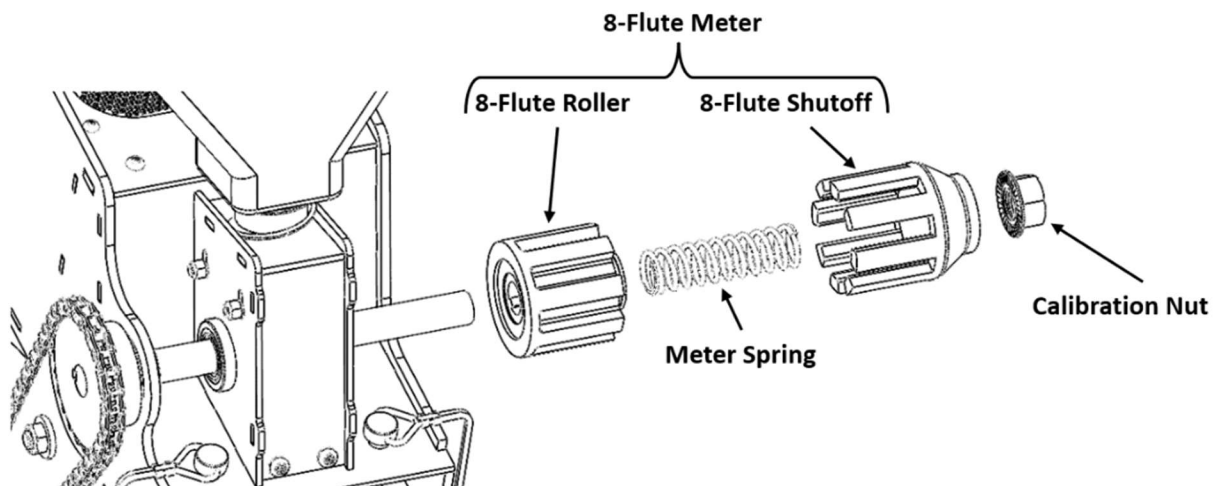

Setting the Seed Rate

Seed rate is set by using the Seed Rate tables provided with the machine. Find the species you are planting on the left-hand column of the tables. If you are planting a seed mix, use the seed species that makes up the largest percentage of the mix. If the species you are planting is listed on the 8-Flute Meter Seed Rate Table, install the 8-Flute meter into the machine. If the species is listed on the 11-Flute Meter Seed Rate Table, install the 11-Flute meter. For species not listed, use the 8-Flute meter for seeds less than 3/16" diameter or the 11-Flute meter for anything larger. The row to the right of the species shows the seed rate in Lb/Acre for every full turn of the calibration nut. Find the step on the gage that is closest to the number corresponding to the seed rate you want. Loosen the calibration nut by hand until that step on the gage just fits into the meter. Loosen the nut additional turns to get to the seed rate you want (see Example below.)

Example: if you want to plant Cowpeas at 45.4 Lb/Acre you would set the meter to 18 full turns. Loosen the meter calibration nut until the step labeled “16” on the gage just fits into the meter. Now loosen the nut an additional 2 full turns to set it to 18.

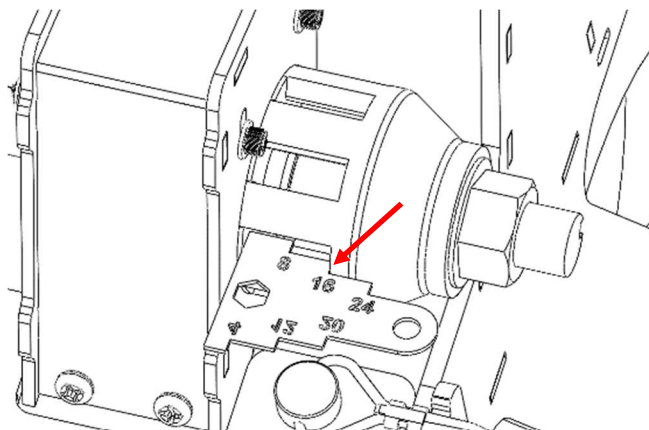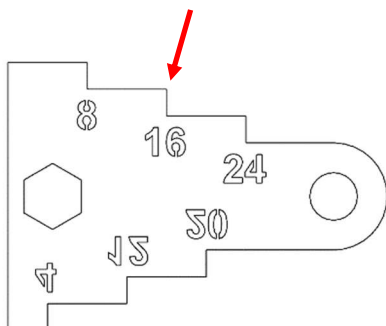


DS860 11 FLUTE METER SEED RATES (LB/ACRE)																									
METER SETTING	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
BUCKWHEAT	-	5.6	7.4	9.1	10.9	12.7	14.5	16.3	18.1	19.8	21.6	23.4	25.2	27.0	28.8	30.5	32.3	34.1	35.9	37.7	39.5	41.2	43.0	44.8	
EGYPTIAN WHEAT	-	8.9	11.3	13.8	16.2	18.7	21.2	23.6	26.1	28.5	31.0	33.5	35.9	38.4	40.8	43.3	45.8	48.2	50.7	53.2	55.6	58.1	60.5	63.0	
SORGHUM-SUDANGRASS	-	9.6	12.0	14.4	16.8	19.2	21.5	23.9	26.3	28.7	31.1	33.5	35.9	38.3	40.7	43.1	45.5	47.9	50.3	52.6	55.0	57.4	59.8	62.2	
VITALIZE NITRO BOOST	-	-	-	-	-	15.5	17.9	20.3	22.7	25.1	27.5	29.9	32.3	34.8	37.2	39.6	42.0	44.4	46.8	49.2	51.6	54.0	56.4	58.8	
VITALIZE CARBON LOAD	-	-	-	-	-	18.1	20.6	23.1	25.5	28.0	30.5	32.9	35.4	37.8	40.3	42.8	45.2	47.7	50.2	52.6	55.1	57.6	60.0	62.5	
AUSTRIAN WINTER PEA	-	-	-	-	-	17.9	20.3	22.8	25.3	27.8	30.3	32.8	35.3	37.8	40.3	42.7	45.2	47.7	50.2	52.7	55.2	57.7	60.2	62.7	
COWPEA	-	-	-	-	-	17.2	19.5	21.9	24.2	26.6	28.9	31.3	33.6	36.0	38.3	40.7	43.0	45.4	47.7	50.1	52.4	54.8	57.1	59.5	
COYBEAN	-	-	-	-	-	14.5	16.8	19.1	21.3	23.6	25.9	28.1	30.4	32.7	34.9	37.2	39.5	41.7	44.0	46.3	48.5	50.8	53.0	55.3	

Attention: you should only open or increase the meter setting when the hopper is filled with seed. Trying to make large decreases (2 turns or more) to the meter setting while it’s filled with seed could damage the seed and jam the meter. Always fill the hopper with the meter fully closed (0-meter setting) or after the seed rate has already been set.


Attention: the calibration nut should only be turned by hand, never use a wrench or other tool to adjust the nut as this could cause damage to the meter.

The unique design of the seed meter coupled with the precise gaging method used to set it results in very low actual seed rate error using the method above. Seed size, moisture content and coating thickness vary from source to source and year to year. This seed variation can result in actual seed rates being up to 5% off from the published table. Performing the hand calibration process below will eliminate the seed variation resulting in less than 1% actual seed rate error.

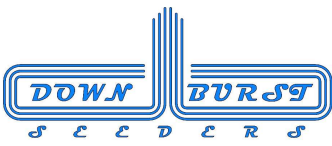

8-Flute Meter Seed Rate Table

		DS860 8 FLUTE METER SEED RATES (LB/ACRE)																																			
METER SETTING		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24												
TURNIPS		2.9	4.0	5.2	6.3	7.5	8.6	9.7	10.9	12.0	13.2	14.3	15.5	16.6	17.7	18.9	20.0	21.2	22.3	23.4	24.6	25.7	26.9	28.0	29.1												
RAPE		2.7	3.8	4.9	6.0	7.2	8.3	9.4	10.5	11.6	12.8	13.9	15.0	16.1	17.2	18.4	19.5	20.6	21.7	22.8	24.0	25.1	26.2	27.3	28.4												
KALE		2.8	3.9	5.1	6.2	7.3	8.4	9.6	10.7	11.8	13.0	14.1	15.2	16.4	17.5	18.6	19.8	20.9	22.0	23.2	24.3	25.4	26.6	27.7	28.8												
DAIKON RADISH		2.2	3.3	4.4	5.4	6.5	7.6	8.6	9.7	10.8	11.8	12.9	14.0	15.0	16.1	17.2	18.2	19.3	20.4	21.4	22.5	23.6	24.7	25.7	26.8												
COLLARDS		3.0	4.1	5.3	6.5	7.6	8.8	10.0	11.1	12.3	13.5	14.6	15.8	17.0	18.1	19.3	20.5	21.6	22.8	24.0	25.1	26.3	27.5	28.6	29.8												
CHICORY		3.0	4.2	5.5	6.8	8.0	9.3	10.6	11.8	13.1	14.4	15.6	16.9	18.2	19.4	20.7	22.0	23.2	24.5	25.8	27.0	28.3	29.6	30.8	32.1												
LADINO CLOVER		4.1	5.6	7.0	8.5	10.0	11.5	13.0	14.4	15.9	17.4	18.9	20.4	21.9	23.3	24.8	26.3	27.8	29.3	30.7	32.2	33.7	35.2	36.7	38.1												
DURANA CLOVER		4.2	5.7	7.3	8.8	10.4	11.9	13.5	15.0	16.6	18.1	19.7	21.2	22.8	24.3	25.9	27.4	28.9	30.5	32.0	33.6	35.1	36.7	38.2	39.8												
MED. RED CLOVER		3.7	5.1	6.5	7.9	9.2	10.6	12.0	13.4	14.8	16.1	17.5	18.9	20.3	21.7	23.0	24.4	25.8	27.2	28.6	30.0	31.3	32.7	34.1	35.5												
ALSIKE CLOVER		4.0	5.5	6.9	8.4	9.9	11.4	12.9	14.3	15.8	17.3	18.8	20.3	21.7	23.2	24.7	26.2	27.6	29.1	30.6	32.1	33.6	35.0	36.5	38.0												
BALANSA CLOVER		4.2	5.8	7.3	8.8	10.4	11.9	13.5	15.0	16.6	18.1	19.7	21.2	22.7	24.3	25.8	27.4	28.9	30.5	32.0	33.5	35.1	36.6	38.2	39.7												
CRIMSON CLOVER		3.3	4.7	6.0	7.4	8.7	10.1	11.5	12.8	14.2	15.6	16.9	18.3	19.7	21.0	22.4	23.7	25.1	26.5	27.8	29.2	30.6	31.9	33.3	34.7												
TIMOTHY		4.0	5.4	6.9	8.3	9.8	11.2	12.6	14.1	15.5	17.0	18.4	19.9	21.3	22.8	24.2	25.7	27.1	28.6	30.0	31.5	32.9	34.4	35.8	37.3												
BIRDSFOOT TREFOIL		3.8	5.2	6.6	8.0	9.4	10.8	12.2	13.6	15.0	16.4	17.8	19.2	20.6	22.0	23.4	24.8	26.2	27.6	29.0	30.4	31.8	33.2	34.6	36.0												
ALFALFA		3.9	5.3	6.8	8.3	9.8	11.2	12.7	14.2	15.7	17.1	18.6	20.1	21.6	23.0	24.5	26.0	27.5	28.9	30.4	31.9	33.4	34.8	36.3	37.8												
SWITCHGRASS		3.1	4.3	5.6	6.8	8.0	9.2	10.4	11.6	12.9	14.1	15.3	16.5	17.7	19.0	20.2	21.4	22.6	23.8	25.0	26.3	27.5	28.7	29.9	31.1												
AIR BAFFLE	CLOSED																																				
		0 - 10						11 - 15						16 - 21						22 - 27						28 - 33						34+					
LB/ACRE		1																																			
		2																																			
		3																																			
		4																																			
		OPEN																																			

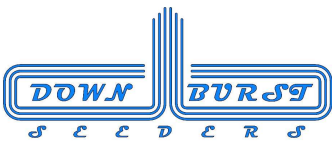

11-Flute Meter Seed Rate Table

DS860 11 FLUTE METER SEED RATES (LB/ACRE)																								
METER SETTING	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
BUCKWHEAT	-	5.6	7.4	9.1	10.9	12.7	14.5	16.3	18.1	19.8	21.6	23.4	25.2	27.0	28.8	30.5	32.3	34.1	35.9	37.7	39.5	41.2	43.0	44.8
EGYPTIAN WHEAT	-	8.9	11.3	13.8	16.2	18.7	21.2	23.6	26.1	28.5	31.0	33.5	35.9	38.4	40.8	43.3	45.8	48.2	50.7	53.2	55.6	58.1	60.5	63.0
SORGHUM- SUDANGRASS	-	9.6	12.0	14.4	16.8	19.2	21.5	23.9	26.3	28.7	31.1	33.5	35.9	38.3	40.7	43.1	45.5	47.9	50.3	52.6	55.0	57.4	59.8	62.2
VITALIZE NITRO BOOST	-	-	-	-	-	15.5	17.9	20.3	22.7	25.1	27.5	29.9	32.3	34.8	37.2	39.6	42.0	44.4	46.8	49.2	51.6	54.0	56.4	58.8
CARBON LOAD AUSTRIAN WINTER PEA	-	-	-	-	-	18.1	20.6	23.1	25.5	28.0	30.5	32.9	35.4	37.8	40.3	42.8	45.2	47.7	50.2	52.6	55.1	57.6	60.0	62.5
COWPEA	-	-	-	-	-	17.2	19.5	21.9	24.2	26.6	28.9	31.3	33.6	36.0	38.3	40.7	43.0	45.4	47.7	50.1	52.4	54.8	57.1	59.5
SOYBEAN	-	-	-	-	-	14.5	16.8	19.1	21.3	23.6	25.9	28.1	30.4	32.7	34.9	37.2	39.5	41.7	44.0	46.3	48.5	50.8	53.0	55.3
WINTER RYE	-	-	-	-	-	16.0	18.3	20.7	23.0	25.4	27.8	30.1	32.5	34.8	37.2	39.6	41.9	44.3	46.7	49.0	51.4	53.7	56.1	58.5
WINTER WHEAT	-	-	-	-	-	18.6	21.1	23.6	26.1	28.6	31.1	33.6	36.1	38.6	41.1	43.6	46.1	48.6	51.1	53.6	56.1	58.6	61.1	63.6
AIR BAFHLE	3			4												OPEN								
LB/ACRE	0 - 14										15 - 38										39+			
CALIBRATION																								
SEED MIXES NOT LISTED	SET METER FOR HIGHEST PERCENTAGE SPECIES IN THE MIX - OR - PERFORM CALIBRATION PROCESS BELOW																							
SEEDS NOT LISTED	CHECK WWW.DOWNBURSTSEEDERS.COM FOR LATEST SEED RATE TABLE - OR - PERFORM CALIBRATION PROCESS BELOW																							
PROCEDURE	WEIGH SEED METERED OUT FROM 25 FULL TURNS OF THE GROUND WHEEL IN GRAMS OR OUNCES (TEST WEIGHT)																							
CALCULATION	SEED RATE (LB/ACRE) = TEST WEIGHT IN GRAMS DIVIDED BY 4.43										SEED RATE (LB/ACRE) = TEST WEIGHT IN OUNCES DIVIDED BY 0.156													

Hand Calibrating the Meter

Calibration “tests” the seed rate (set by using the seed rate table described above) and then allows fine tuning the meter to get the exact rate you want. This is done by turning the ground wheel by hand, catching the seed that is metered out, and then weighing it to determine the “test weight.” You can then find your test weight in the calibration table to determine what the actual planting rate will be. Or you can simply divide the test weight by the calibration factor to get the exact seed rate in Lb/Acre. You can then make small adjustments to the calibration nut and repeat the test until the desired seed rate is achieved.

Calibration Setup


- 1) Safely Park the vehicle on flat level ground. Make sure the seeder is in the Lift position.
- 2) Remove the drop tube and set aside.
- 3) Using the center Off position on the remote toggle, adjust the height of the seeder so that a container can be placed directly under the seed chute below the meter. The ground wheel should be elevated, fully unlocked, and able to be turned by hand.
- 4) Disconnect power and then continue with the procedure below.



Calibration Procedure

- 1) Use the Seed Rate Table to set the meter as described above. If the species you are planting is not listed, open the meter 1 full turn for every Lb/Acre with the 8-flute meter, or ½ turn for every Lb/Acre for the 11-flute meter as a starting point.
- 2) Fill the hopper with the seed to be planted and place a clean container under the seed chute.
- 3) Turn the wheel a few times to fill the meter with seed. Dump any expelled seed back into the hopper and place the container back under the chute.
- 4) Rotate the wheel exactly 25 full turns. You can make a mark on the wheel to make it easier to count the turns.
- 5) Weigh the seed using a digital kitchen scale or similar. Use the Calibration Table (next page) to determine the seed rate for this test weight or divide the test weight by the calibration factor to get the exact seed rate. If measuring in grams divide by 4.43, if measuring in ounces divide by 0.156.
- 6) Adjust the meter accordingly and repeat steps 3 through 5 until you have the exact seed rate you want. One full turn of the nut will change the seed rate 1 to 1.5 Lb/Acre when using the 8-flute meter, and 2 to 3 Lb/Acre when using the 11-flute meter.

When finished with the calibration, reconnect power and return the seeder to the Lift position. Re-install the drop tube and you are ready to plant. Precise calibration can usually be achieved in just one or two adjustments of the meter and the whole process takes less than 10 minutes to complete. Calibrating the meter allows you to truly “know what you’re putting down!”

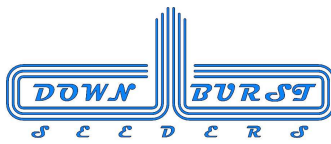


Calibration Table

DS760/DS860 Calibration Table
 Test Weight = 25 Turns of the Ground Wheel

Seed Rate (Lb/Acre)	Test Weight (Grams)	Test Weight (Ounces)
1	4.4	0.16
2	8.9	0.31
3	13.3	0.47
4	17.7	0.63
5	22.2	0.78
6	26.6	0.94
7	31.0	1.09
8	35.4	1.25
9	39.9	1.41
10	44.3	1.56
11	48.7	1.72
12	53.2	1.88
13	57.6	2.03
14	62.0	2.19
15	66.5	2.34
16	70.9	2.50
17	75.3	2.66
18	79.7	2.81
19	84.2	2.97
20	88.6	3.13
21	93.0	3.28
22	97.5	3.44
23	101.9	3.59
24	106.3	3.75
25	110.8	3.91
26	115.2	4.06
27	119.6	4.22
28	124.0	4.38
29	128.5	4.53
30	132.9	4.69
31	137.3	4.84
32	141.8	5.00
33	146.2	5.16
34	150.6	5.31
35	155.1	5.47
36	159.5	5.63
37	163.9	5.78
38	168.3	5.94
39	172.8	6.09
40	177.2	6.25
41	181.6	6.41
42	186.1	6.56
43	190.5	6.72
44	194.9	6.88
45	199.4	7.03
46	203.8	7.19
47	208.2	7.34
48	212.6	7.50
49	217.1	7.66
50	221.5	7.81
51	225.9	7.97
52	230.4	8.13
53	234.8	8.28
54	239.2	8.44
55	243.7	8.59
56	248.1	8.75
57	252.5	8.91
58	256.9	9.06
59	261.4	9.22
60	265.8	9.38
61	270.2	9.53
62	274.7	9.69
63	279.1	9.84
64	283.5	10.00
65	288.0	10.16
For Exact Seed Rate Divide Test Weight by:	4.43	0.156

AIR BAFFLE OPERATION

To achieve optimum seed spread the DS860 is equipped with an air baffle system to restrict air flow for low seed rate plantings. The air baffle is located directly under the hopper and has 6 positions, Closed, 1, 2, 3, 4, and Open. The seed rate tables include the proper air baffle setting based on which meter you are using, and the seed rate it is set to. To adjust the baffle, loosen the adjustment screw and slide the baffle plate to the desired position and then retighten the screw. The meter gage can be used as a wrench to loosen and tighten the screw. Do not over tighten, a few pounds of force on the wrench is sufficient to lock the baffle in place. The air baffle is “Closed” when the plate is slid towards the seed meter until it stops. The air baffle is “Open” when the plate is slid towards the hitch until it stops. To set the air baffle position to “1” through “4” align the edge of the baffle opening to the inner points of the triangles next to the number you are setting it to as shown below. (The hopper is hidden for clarity; you do not need to remove it.)

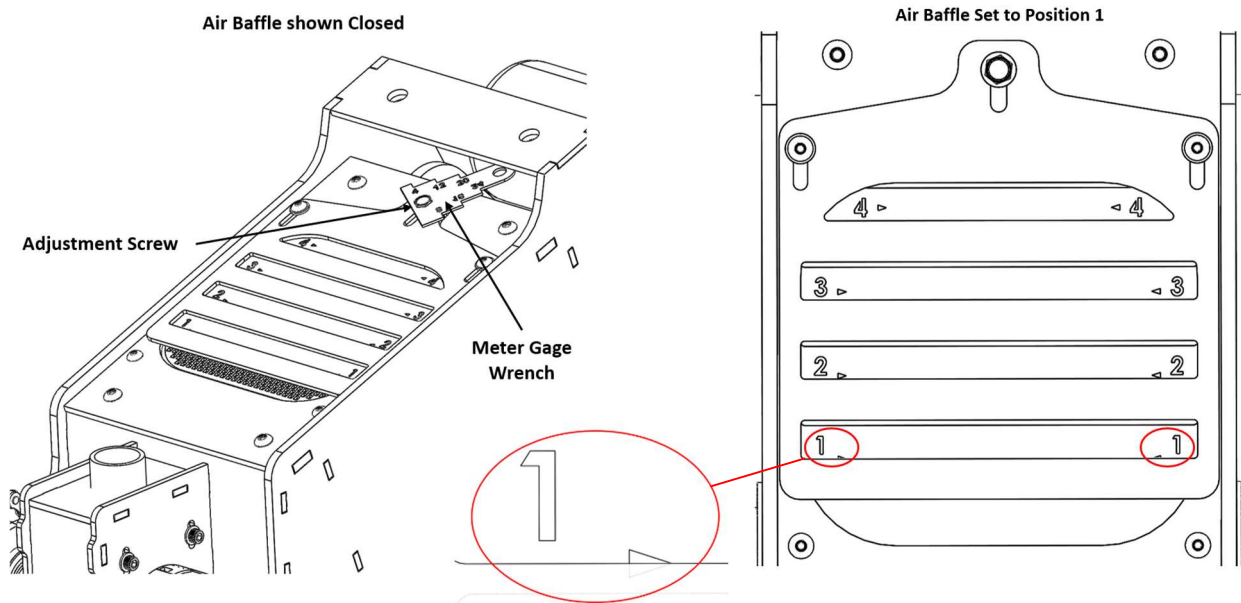

Example:

If you are planting Crimson Clover at 20 Lb/Acre you would use the 8 Flute Meter with it set to 13.25 turns. The 8-Flute Meter Seed Rate Table specifies an Air Baffle setting of 2 for seed rates from 16 – 21 Lb/Acre. Set the air baffle to “2.”


DS860 8 FLUTE METER SEED RATES (LB/ACRE)																								
METER SETTING	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
TURNIPS	2.9	4.0	5.2	6.3	7.5	8.6	9.7	10.9	12.0	13.2	14.3	15.5	16.6	17.7	18.9	20.0	21.2	22.3	23.4	24.6	25.7	26.9	28.0	29.1
RAPE	2.7	3.8	4.9	6.0	7.2	8.3	9.4	10.5	11.6	12.8	13.9	15.0	16.1	17.2	18.4	19.5	20.6	21.7	22.8	24.0	25.1	26.2	27.3	28.4
KALE	2.8	3.9	5.1	6.2	7.3	8.4	9.6	10.7	11.8	13.0	14.1	15.2	16.4	17.5	18.6	19.8	20.9	22.0	23.2	24.3	25.4	26.6	27.7	28.8
DAIKON RADISH	2.2	3.3	4.4	5.4	6.5	7.6	8.6	9.7	10.8	11.8	12.9	14.0	15.0	16.1	17.2	18.2	19.3	20.4	21.4	22.5	23.6	24.7	25.7	26.8
COLLARDS	3.0	4.1	5.3	6.5	7.6	8.8	10.0	11.1	12.3	13.5	14.6	15.8	17.0	18.1	19.3	20.5	21.6	22.8	24.0	25.1	26.3	27.5	28.6	29.8
CHICORY	3.0	4.2	5.5	6.8	8.0	9.3	10.6	11.8	13.1	14.4	15.6	16.9	18.2	19.4	20.7	22.0	23.2	24.5	25.8	27.0	28.3	29.6	30.8	32.1
LADINO CLOVER	4.1	5.6	7.0	8.5	10.0	11.5	13.0	14.4	15.9	17.4	18.9	20.4	21.9	23.3	24.8	26.3	27.8	29.3	30.7	32.2	33.7	35.2	36.7	38.1
DURANA CLOVER	4.2	5.7	7.3	8.8	10.4	11.9	13.5	15.0	16.6	18.1	19.7	21.2	22.8	24.3	25.9	27.4	28.9	30.5	32.0	33.6	35.1	36.7	38.2	39.8
MED. RED CLOVER	3.7	5.1	6.5	7.9	9.2	10.6	12.0	13.4	14.8	16.1	17.5	18.9	20.3	21.7	23.0	24.4	25.8	27.2	28.6	30.0	31.3	32.7	34.1	35.5
ALSIKE CLOVER	4.0	5.5	6.9	8.4	9.9	11.4	12.9	14.3	15.8	17.3	18.8	20.3	21.7	23.2	24.7	26.2	27.6	29.1	30.6	32.1	33.6	35.0	36.5	38.0
BALANSA CLOVER	4.2	5.8	7.3	8.8	10.4	11.9	13.5	15.0	16.6	18.1	19.7	21.2	22.7	24.3	25.8	27.4	28.9	30.5	32.0	33.5	35.1	36.6	38.2	39.7
CRIMSON CLOVER	3.3	4.7	6.0	7.4	8.7	10.1	11.5	12.8	14.2	15.6	16.9	18.3	19.7	21.0	22.4	23.7	25.1	26.5	27.8	29.2	30.6	31.9	33.3	34.7
TIMOTHY	4.0	5.4	6.9	8.3	9.8	11.2	12.6	14.1	15.5	17.0	18.4	19.9	21.3	22.8	24.2	25.7	27.1	28.6	30.0	31.5	32.9	34.4	35.8	37.3
BIRDSFOOT TREFOIL	3.8	5.2	6.6	8.0	9.4	10.8	12.2	13.6	15.0	16.4	17.8	19.2	20.6	22.0	23.4	24.8	26.2	27.6	29.0	30.4	31.8	33.2	34.6	36.0
ALFALFA	3.9	5.3	6.8	8.3	9.8	11.2	12.7	14.2	15.7	17.1	18.6	20.1	21.6	23.0	24.5	26.0	27.5	28.9	30.4	31.9	33.4	34.8	36.3	37.8
SWITCHGRASS	3.1	4.3	5.6	6.8	8.0	9.2	10.4	11.6	12.9	14.1	15.3	16.5	17.7	19.0	20.2	21.4	22.6	23.8	25.0	26.3	27.5	28.7	29.9	31.1
AIR BAFFLE	CLOSED				1				2				3				4				OPEN			
LB/ACRE	0 - 10				11 - 15				16 - 21				22 - 27				28 - 33				34+			

PLANTING OPERATION

Planting with the DS860 is very simple. There are two operating positions, 1) Seed and 2) Lift, controlled by the remote toggle switch. The lifting actuator has internal limit switches which will automatically stop the actuator at the full up or Lift position, and at the full down or Seed position. You will notice there is a center position on the toggle switch which turns off the blower and will stop the lifting actuator mid-stroke. This is only used during calibration of the seed meter and should not be used while planting. The upper pivot link of the lifting actuator allows the machine to float and stay in contact with the ground over rough or uneven terrain with the actuator fully extended.

Planting operation is as follows.


- 1) Drive to the planting location and stop when the drop tube is positioned where you want seeding to start.
- 2) Switch the toggle to Seed – the blower will turn on and the machine will lower to the ground. Any rotation of the ground wheel, forward or reverse will now spread seed.
- 3) Drive across the area to be planted and stop when the drop tube is positioned where you want seeding to stop.
- 4) Switch the toggle to Lift – the blower will turn off and the machine will lift off the ground locking the ground wheel and stopping spread of seed.
- 5) Reposition the vehicle to the starting point for the next seeding pass.
Repeat until the planting area has been covered.

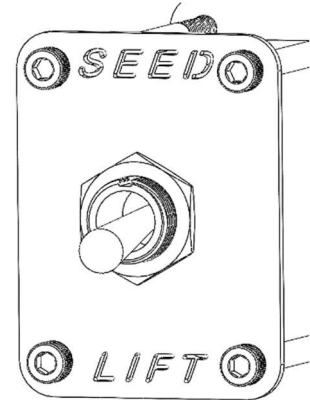

Attention: the ground wheel driven seed meter ensures accurate seed rates at any reasonable speed. However, it is gravity fed meaning excessive speed will result in lighter than expected seed rates. We recommend a maximum planting speed of 8mph to eliminate the effects of gravity on seed rate.

EMPTYING THE HOPPER

If you are finished planting and still have some seed remaining in the hopper it can be quickly emptied by partially removing the seed meter. Remove the drop tube and place a clean container under the chute the same way you would for hand calibration. Remove the calibration nut and slide the shutoff and meter spring off the meter shaft. Lift and hold the small spring-loaded follower bolts upwards while sliding the roller out of the meter housing about an inch. Seed will now flow quickly through the meter housing and out of the seed chute. We recommend emptying the hopper and rotating the wheel/meter until all leftover seed is expelled before storing the machine for any length of time.

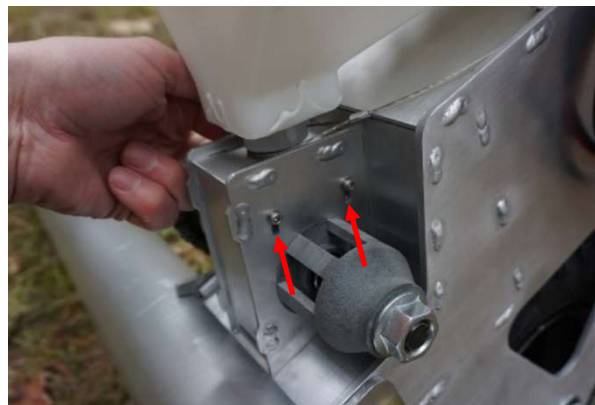

MAINTENANCE

The DS860 requires very little maintenance to stay in perfect working order. The entire chassis is made of welded Aircraft Grade Aluminum with no paint or coatings to worry about damaging. The aluminum will develop a patina of aluminum oxide over time which protects the metal from corrosion. All fasteners are either Stainless Steel or Zinc Yellow-Chromate Plated Steel to protect against corrosion. All rotating shafts ride on sealed ball bearings that do not require lubrication. All pivot points use Nylon sleeve bearings for smooth long wearing operation without grease.

Attention: The DS860 is designed and intended to spread ONLY seed. Any other material such as fertilizer, salt, sand, etc. will damage the machine.

Air Intake Screen


Inspect the air intake screen beneath the air baffle frequently for build up of debris. Remove any debris before planting with the machine.

Drop Tube Clean-out Caps

If planting in excessively wet or muddy conditions make sure the drop tube is clear of any mud or debris that could block the seed holes. Remove both clean-out caps to inspect. A clean rag or similar can be pushed through the tube to remove any debris.

Chain and Sprockets

The chain and sprockets are black oxide coated steel and do require a coating of oil to stay rust free. We recommend a light coating of WD40 once or twice a season or anytime the machine gets wet. Do not apply heavy weight chain or gear oil to the meter chain as this will just attract dirt and cause it to wear. All roller chains will stretch slightly over time. If you notice the chain is sagging more than a ¼" below the chain guard it can be tightened by spreading the guard slightly. To do this, loosen the chain guard bolt closest to the meter sprocket with a 5/8" wrench and socket. Insert a large flat blade screwdriver into the guard adjustment slot and twist until the slack is taken up. Re-tighten the guard bolt securely.

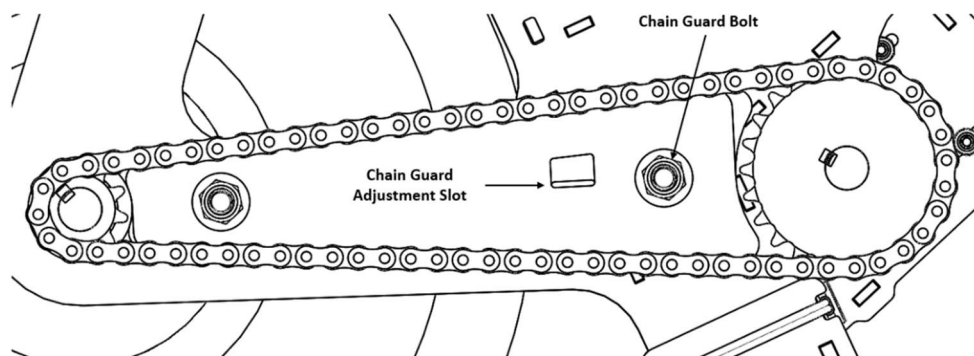

Ground Wheel

The ground wheel is a pneumatic tire and could leak down over time. If you notice the tire looks low fill with air to the pressure indicated on the sidewall of the tire. Do not over-inflate as this could change the diameter of the tire and affect calibration accuracy.

Seed Meter

If you cannot easily close the meter to the zero setting there may be debris in the fluted roller. To correct this, remove the meter from the machine and inspect the roller flutes for debris. Re-install the meter components and calibration nut and check that the meter can now be fully closed.