

MM815 Motorized Drop Down TV Mount

- ► Read this entire manual before you begin.
- Do not unpack box contents until verifying the requirements listed on page 2.

A WARNING!

This product contains small parts that can be a choking hazard. Do not let children play with any of these small parts! Keep children away from the work area during installation.

A Caution

This product is intended to be installed by professional installation contractors, or persons familiar with the tools and methods required for this installation. If you are not sure about your ability to perform this installation, you must contact a professional. MantelMount is not responsible for damage or injury caused by incorrect installation or improper use.

A Caution


Do not let children operate, pull on, or hang from MantelMount.

A Caution

Do not use this product in any way, or for any purpose, that is not specifically described in these instructions.

MantelMount is not responsible for damage or injury caused by incorrect installation or improper use.

INSTALLATION INSTRUCTIONS

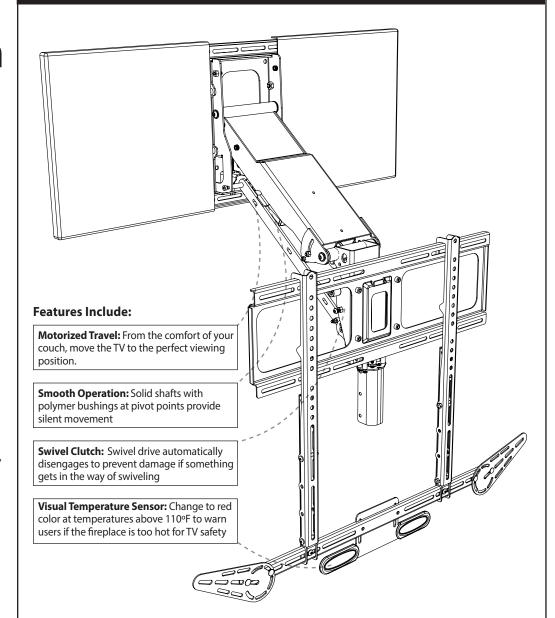

If you need help, call 1.800.897.9755 ext.1

For missing/damaged parts or questions during installation, contact our Customer Support team at **1.800.897.9755 ext.1** or **support@mantelmount.com.**


Customer satisfaction is our highest priority!

Access a PDF of this manual at **MantelMount.com**/FAQs/Specs and Manuals. For more information on MantelMount patented technology visit: www.mantelmount.com/pages/patents

Contains important safety information – please save! MantelMount.com

BEFORE INSTALLATION

Verify TV and mount space meet these criteria:

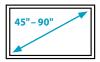

SCREEN SIZE 45" to 90" (Diagonally)



WEIGHT CAPACITY 20 to 115 LBS. (Including Sound Bar)



VESA COMPLIANT Up to 600 X 600mm


MANTEL DEPTH 16" MAXIMUM

For TVs Shorter then 24. 7" without a soundbar, mount will be visible in top position.



WOOD STUDS FOR MOUNTING

Studs Maximum 28" apart: Wall Covering Maximum 5/8"

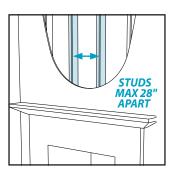

Verify MantelMount will fit the wall space.

A. Use the reference diagram (right) and chart (below) to write down the following measurements (in inches):


Wall Space Height: (Distance from mantel to ceiling/crown molding.) TV Height: (Include sound bar height if placing below TV.)

Mantel Depth: (Distance mantel extends away from the wall.)

Required Vertical Space: (Calculation from chart below.)


B. If the Required Vertical Space is less than or equal to the Wall Space Height, then MantelMount will fit the wall space.

If Mantel Depth is:	MM815 Required Vertical Space is:
Less than 8"	TV height + 3"
8" – 10"	TV height + 5"
10" – 12"	TV height + 6"
12" – 14"	TV height + 7"
15-16"	TV height + 9"

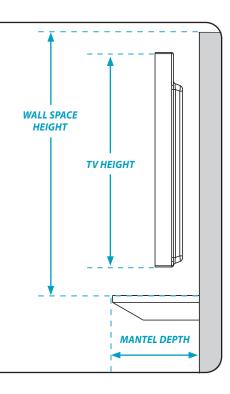




BEFORE INSTALLATION

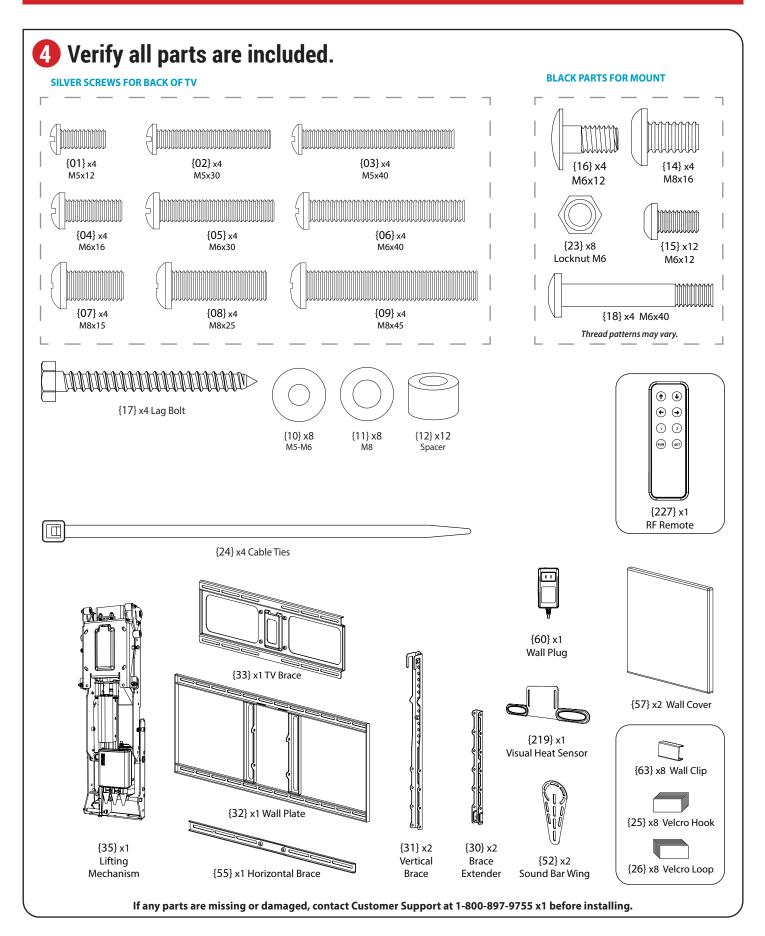

BEFORE INSTALLATION

Learning Your Remote Functions.

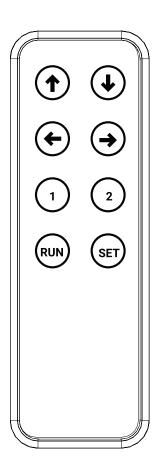

Remote Buttons

- Up Button
- **Down Button**
- Swivel Right
- Swivel Left
- Memory 1
- Memory 2

RUN Run Button

SET Set Button

Pairing RF Remote

- Unplug Power to mount for 30 seconds
- Hold the 🕁 button while plugging in power.
- keep holding button for 10 seconds

The RF remote requires a CR2032 battery (Included). Battery must be installed in remote with positive side facing up.

Quick Note: To return mount to the home position press: Run then 🕈 arrow. This will Auto-Swivel and move mount to the topmost position.

Remote Control Buttons

- Move the mount up to the top most position
 - Hold to drive to position
- Move the mount down to the bottom most set position
 - Mount cannot be driven lower then set limit
 - Comes set for lowest bottom position
 - Hold to drive to position
- Swivel the mount to the right most set position
 - Mount cannot be driven past set right limit
 - Comes set for 30 degrees of swivel to the right
 - Hold to drive to position
- Swivel the mount to the left most set position
 - Mount cannot be driven past set left limit
 - · Comes set for 30 degrees of swivel to the left
 - Hold to drive to position
- Move the mount to the set 1 position
 - Mount will drive to this position from either direction
 - Does not come set out of the box
 - Hold to drive to position
- Move the mount to the set 2 position
 - Mount will drive to this position from either direction
 - · Does not come set out of the box
 - Hold to drive to position

Run Automatically move to the position selected ($\uparrow \downarrow \uparrow \uparrow 12$)

- Press Run
- Press one of ($\uparrow \downarrow \rightarrow \uparrow 12$) within 3 seconds
- The mount will move to the limit automatically
- Press any button to stop movement
- For Auto-Moving, the mount will first swivel to center position (0 degrees), adjust height, then swivel.

Set Used to Set and Clear Positions.

Remote Control Functions

Home Position: To return mount to the home position press: Run then \uparrow arrow. This will Auto-Swivel mount to center position and raise mount to the topmost position.

Stop: Press any button to stop movement

Set Memory Position: To Set Positions 1, 2

- Drive the mount to the desired Position
- Press Set
- Press the Memory button (1, 2)

System Reset: If the mount is not working as expected, updates calibration while keeping set limits

- Press Set
- Press Run
- Press/Hold Set
- Mount will move to the top position
- Keep holding for 5 seconds after mount reaches top position

Set Left/Right/Bottom Limit:The Mount will not drive past

- · Drive Mount to desired limit
- Press Set
- Press one of (→ → ←)
- Press/Hold Set for 4 to 8 Seconds
- Check it was correctly done by trying to move the mount past limit

Clearing Any Memory Position: A position does NOT need to be cleared to change it.

- · From any Position
- Press Set
- · Press button to clear

 $(\downarrow \rightarrow \leftarrow 12)$

• Press/Hold Set for at least 11 Seconds

Automatically Move to Position

The mount can be automatically moved to any set position without having to hold the button. To do this, press Run and then the Position Button (↑ ↓ → 1 2). To stop movement, simply push any button on the remote.

When Auto-moving, the mount will center the swivel, go to the required height, then swivel to position.

Note: Press each button firmly; a quick tap probably will not work.

MM815 INSTALLATION STEPS

STEP 1 Attach Braces to TV PAGE 5
STEP 2 Determine Wall Placement
STEP 3 Attach Mount to Wall
STEP 4 Attach TV to Mount
STEP 5 Make Final Adjustments

MWARNING

Keep children away from the work area during installation.

This product contains small parts, please keep out of reach from children.

MWARNING

Do not remove any bolts that hold the Lifting Arm together.

↑ WARNING

Moving the mount before all limits are set may result in damage. Complete all steps in the manual before using the mount.

⚠ WARNING

Do not let small children pull on or hang from MantelMount.

⚠ WARNING

Pinching and Crushing Hazard: The wall mount actuation is very strong, do NOT run the mount when anyone is near the mount. Do NOT have any part of the body in the mount or between the TV and Wall. The Mount will keep driving until someone pushes another button on the remote to stop it. When working on the mount unplug the power.

ACAUTION

This product is intended to be installed by professional contractors or persons familiar with the tools and methods required for this installation.

If you are uncertain about your ability to perform this installation, please contact a professional.

Do not use this product in any way or for any purpose that is not specifically described in these instructions.

ACAUTION

Do not use this product for purposes not specifically described in these instructions.

MantelMount is not responsible for damage or injury caused by incorrect installation or improper use.

MantelMount is not responsible for damage or injury caused by incorrect installation or improper use.

WARRANTY: Mantel Mount offers a Lifetime Limited Warranty for all TV mounts and accessories. This Lifetime Limited Warranty covers all mechanical parts but excludes lifetime coverage for gas springs or electrical parts which are warrantied for five (5) years from the original purchase date.

Symbols Used in this Manual











SPECIAL NOTE



REQUIRES TWO PEOPLE


- Two people required for parts of this installation.
- Installation Tips & Videos: http://mantelmount.com/install-tips
- Questions during installation? Contact Customer Support: Monday – Friday, 7am – 4pm PST 1.800.897.9755 x1 or support@mantelmount.com

STEP 1 **Attach Braces**

to TV*

In order for the TV to hide the Mount on the wall, the Braces must be at least 3" higher than the bottom of TV (or Soundbar if one is installed).


If you are using an RB100 Recess Box then they must be 6" higher to hide the Recess Box.

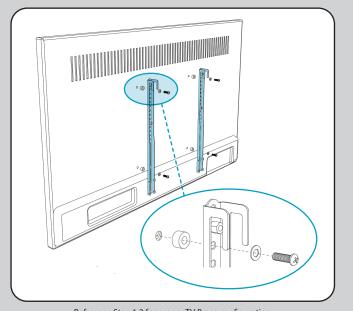

Reference Step 1.2 for proper TV Brace configuration.


1.1 Test-fit Brace components on back of TV.


Place TV screen-side down on a flat, blanketed surface. Lay out components to check assembly configuration. If installing a sound bar, refer to STEP 1.8.

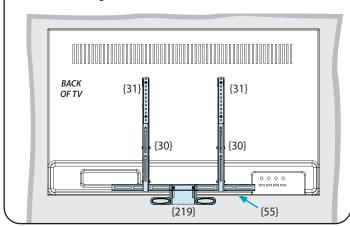



1.2 Determine if TV has a flat or irregular back.

An irregular back will require Spacers {12} and longer Screws to fill spaces between the Vertical Brace (31) and the TV. The Braces must be parallel to television screen.

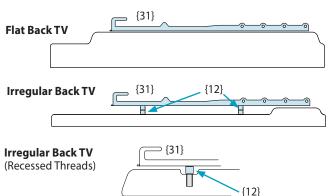

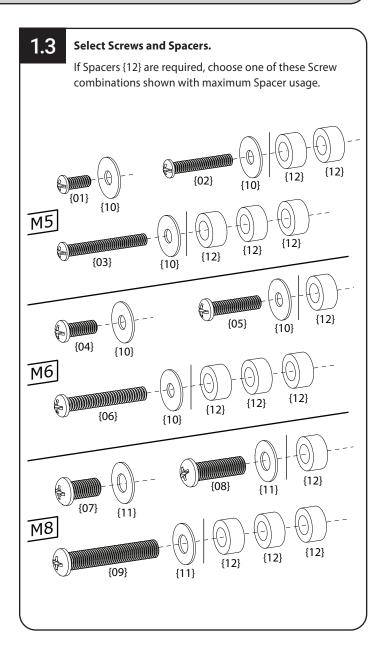

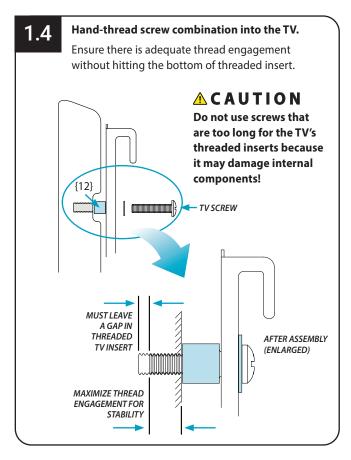


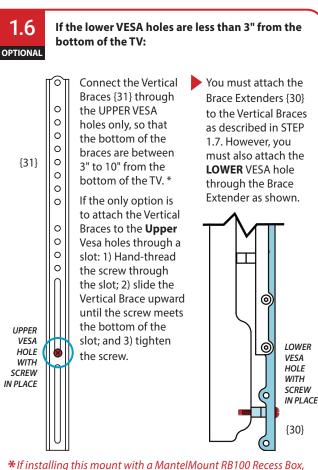

the bottom of the Vertical Brace must be 7"-10" from the bottom of TV (or 7" from the bottom of the Soundbar if one is installed)..


1.5 Attach the Vertical Braces to the back of TV. Install the Vertical Braces (31) so that the bottoms of the braces are between 3" to 10" from the bottom of TV, (*or Soundbar if one is installed) centering the braces vertically as much as possible. SIDE VIEW {31} {31} {31} VERTICAL BRACES MUST ALWAYS BE INSTALLED HIGHER THAN THE BOTTOM OF THE TV. If the lower VESA holes are less than 3 to 10 3" from the bottom of the TV, go to **INCHES** * STEP 1.6; otherwise skip to STEP 1.7. **★**If installing this mount with a MantelMount RB100 Recess Box,

the bottom of the Vertical Brace must be 7"-10" from the bottom of TV (or 7" from the bottom of the Soundbar if one is installed).

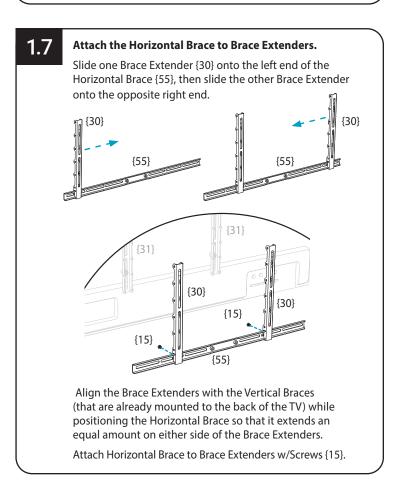

OPTIONAL


Use Screws {16}, M6 Washers {10}, and Nuts {23} to attach the Sound Bar Wings {52} to the Horizontal Brace (55). Position the Wings to fit the mounting holes of the sound bar. Install sound bar. See below for Sound Bar Wing installation information.

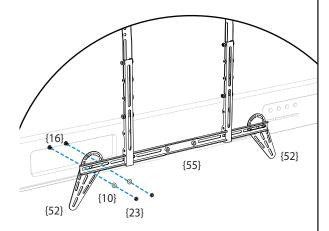


Arrange Sound Bar Wings and sound bar to work with the Visual Heat Sensor.

The Sound Bar Wings may be positioned and rotated so that the Visual Heat Sensor {219} will reach below the sound bar.

For example, if a sound bar is tall, the Brace Extenders {30} and Horizontal Brace can be attached lower down on the Vertical Braces toward the bottom of the sound bar while the Wings point upwards in order to align with the sound bar's installation holes.

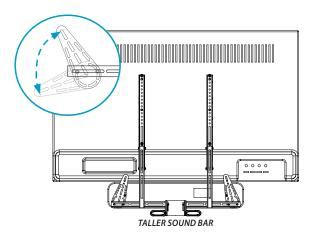


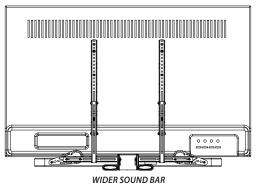

1.9

Attach Brace Extenders to the Vertical Braces.

Slide the Brace Extenders (30) (with the Horizontal Brace {55} now attached to them) onto the Vertical Braces {31}. Position it so that the Horizontal Brace will be hidden by the TV. Use Screws {18} and Nuts {23} to attach.

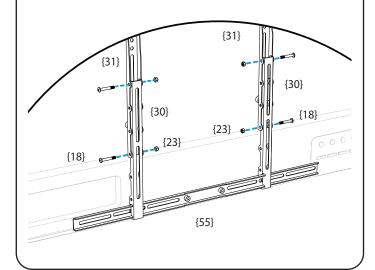


1.10

Attach Visual Heat Sensor to the Horizontal Brace.

Attach the Visual Heat Sensor {219} with Screws {15} to the Horizontal Brace {55}, Set the height so the Visual Heat Sensor is as visible as desired.

Note: If using the minimum height from chart in Step 2.2, keep the exposed heat sensor pad no more than 1" below the TV or soundbar. When first moving the mount down ensure the visual heat sensor clears the mantel.

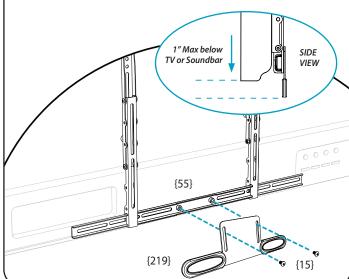




Protect the TV with the Visual Heat Sensor.


The Visual Heat Sensor turns red if the temperature above the fireplace exceeds a safe 110° F – a visual cue that either the TV needs to be raised to the UP position or the fireplace needs to be turned off.

STEP 2 **Determine Wall Placement**

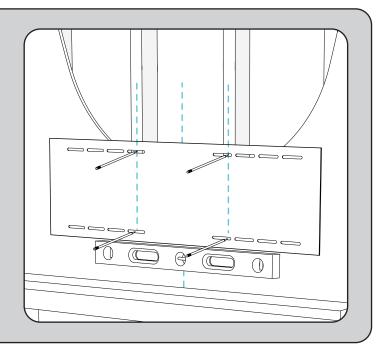

2.1

Measure the distance from the bottom of the Vertical Braces (31) (not the Extenders) to the bottom of the TV/ sound bar.*

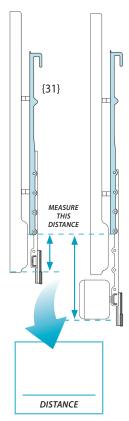


*If installing this mount with a MantelMount RB100 Recess Box, the bottom of the Vertical Brace must be 7"-10" from the bottom of TV (or 7" from the bottom of the Soundbar if one is installed).

2.2 Determine the minimum vertical position of the Wall Plate.

> Use the Look-up Table below to find the minimum distance between the mantel and the bottom of the lower Wall Plate {32}. This will be the intersection of the distance from STEP 2.1 and the mantel depth. Write the minimum distance in the box below.

DEPTH OF MANTEL 13" 14" 8" OR LESS 10" 11" 12" 15" 16" DISTANCE 4.50 4.75 5.25 5.75 6.25 6.75 7.25 8.25 9.25 FROM 2.1 5.50" 5.75 6.25 7.25 8.25 10.25 5" 6.50" 6.75 7.25 7.75 8.25 8.75 9.25 10.25 11.25 6" 7.50" 7.75 8.25 8.75 9.25 9.75 10.25 11.25 12.25 7' 8.50" 8.75 9.25 9.75 10.25 10.75 11.25 12.25 13.25 8" 10.25 9.50" 9.75 10.75 11.25 11.75 12.25 13.25 14.25 9' 11.75 10.50" 10.75 11.25 12.25 12.75 13.25 14.25 15.25 11.50" 11.75 12.25 12.75 13.25 13.75 14.25 15.25 16.25

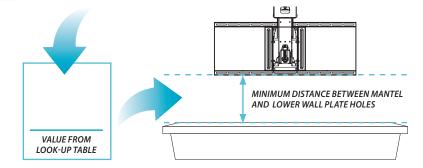

Most customers want their TV mounted as close to the mantel as possible. If this describes you, go directly to STEP 2.4.

However, if you want the TV higher on the wall (such as centered between the mantel and ceiling) e.g. for extra space on the mantel for pictures or a center speaker, continue to STEP 2.3.

2.3 OPTIONAL

Determine a higher vertical position of the Wall Plate.

Some customers want the TV centered between the mantel and the ceiling or crown molding. Others want enough space below the TV for pictures or a center speaker.

The TV's position on the wall is directly related to the placement of the lower Wall Plate. To determine exactly where to place the lower Wall Plate, choose an option below that best describes your scenario and fill in the boxes.

NOTE: Distance "E" below must always be at least the minimum distance in STEP 2.2

Option 1: I want the TV centered between the mantel and ceiling/crown molding.

1. Record measurements already taken:

Wall Space Height (from pg. 2)

(A)

TV Height (from pg. 2)

(B)

Distance from STEP 2.1 (from pg. 8)

(C)

2. Subtract the TV Height (B) from the Wall Space Height (A), then divide by 2.

(D)

3. Add (C) and (D) to determine how many inches above the mantel to place the **lower** Wall Plate holes.

$$(C) + (D)$$



Option 2: I want the TV a specific distance above the mantel.

1. Record distance from STEP 2.1 (from pg. 8)


(C)

Minimum Height from STEP 2.2

Write the specific number of inches you want between the mantel and the TV (or TV with sound bar):



3. Add (C) and (D) to determine how many inches above the mantel to place the **lower** Wall Plate holes.

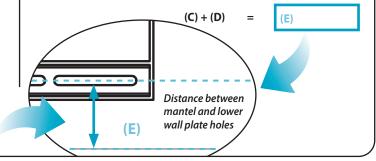


2.4

Find the center of your mantel and the centers of two studs.

Measure and mark the center line of the mantel onto the wall with tape.


Next, use a stud finder to locate two studs, one on each side of the centerline. (If you prefer to use one center stud alone, see "Mount Space" in the Troubleshooting Tips on page 22.)

Then, at the height from either Step 2.2 or 2.3, locate the center of the stud(s) by poking a sharp awl or finish nail through the drywall to find each stud edge. Mark these center spots on the wall. Lag Bolts must be installed into the CENTER of the studs in STEP 3.1.

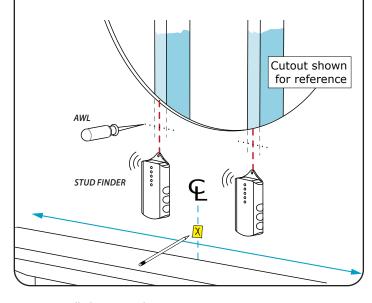

the arrows on the Wall Plate {32} pointing upward. Center level the plate above the mantle and position the height using the table in STEP 2.2. Mark the 4 spots for lag bolts directly on center of the studs.


Cutout shown for reference

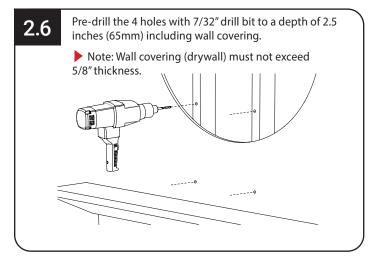

If necessary, move Wall Plates to clear an outlet.

If a Wall Plate installation is impeded by an electrical outlet (or other) and professionally relocating the outlet is impossible, try one of these two options:

Move Wall Plates up or down to clear the outlet. As long as you don't place the LOWER Wall Plate below the Minimum Distance (Step 2.2) MantelMount will clear your mantel properly.

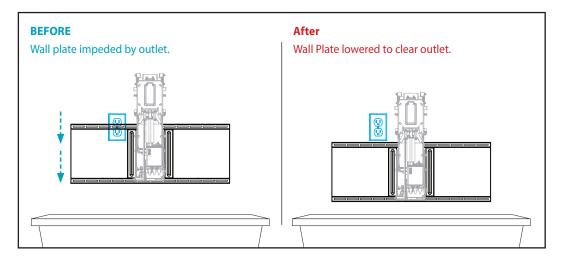


Simply move the Wall Plates up or down enough to clear the outlet, leaving them as close as possible to the originally planned vertical positions.

IMPORTANT: You must now move the Vertical Braces (31) on the back of the TV using the same number of inches used to move the Wall Plates (e.g., move the Vertical Braces down 2" if the Wall Plates were moved down by 2"). The bottom of the Vertical Braces must remain between 3 to 10 inches from the bottom of the TV.

OPTIONAL: If you prefer to drill an access hole in your wall plate cover, the outlet may be placed within the footprint of the wall plate.

NOTE: If outlet is directly behind the Lifting Arm, the only solution is to move the Wall Plates up.

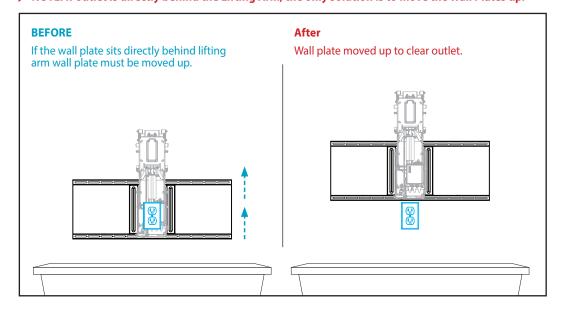



Move the Wall Plates up enough to clear the outlet, leaving them as close as possible to the originally planned vertical positions.


IMPORTANT: You must now move the Vertical Braces (31) on the back of the TV using the same number of inches used to move the Wall Plates (e.g., move the Vertical Braces up 2" if the Wall Plates were moved up by 2"). The bottom of the Vertical Braces must remain between 3 to 10 inches from the bottom of the TV.

Optional Step: Attaching the MM815 Lifting Arm into the RB100 Recess Box Kit


The RB100 Recess Box provides a flush TV-to-wall storage by allowing the MantelMount center arm to fold into the wall when the TV is in the raised position. If installing the MM815 with an RB100, refer to your RB100 manual height chart for proper mounting location.

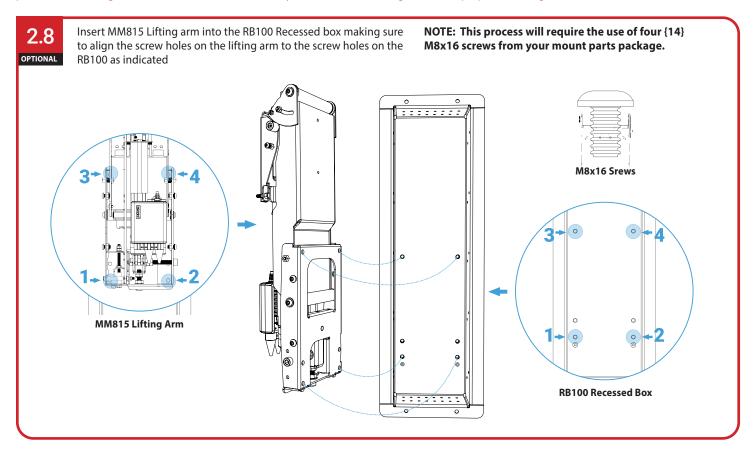

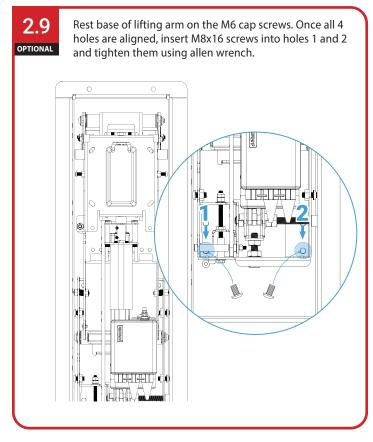

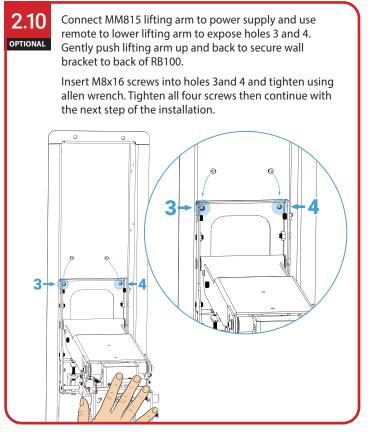


STEP 3 **Attach Mount** to Wall

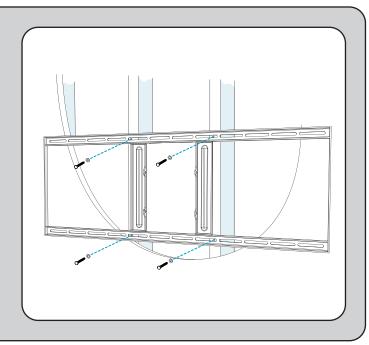

3.1 Attach the Wall Plate {32} with arrows up, using Lag Bolts {17} and Washers {11} directly into the centers of the studs With a 13mm wrench.

▲ CAUTION: Do Not overtighten Lag Bolts {17}. Tighten only until the washers are firmly against the wall plate. Damage due to overtightening can cause property damage or injury.

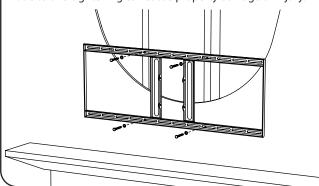

3.2 of Wall Plate {32} then slide the top into position. Align all four holes and install Screws {14}. Tighten Securely. **Note:** Do NOT let go of Lifting Mechanism {35} until Screws {14} are installed.


Insert bottom tabs of Lifting Mechanism {35} into the slots


Power up the mount. Plug Power Supply into mount then into wall socket. The TV remote should work out of the box. Move Mount Down 2 Inches by holding ♣.

If TV remote does not work it needs to be paired.

To Pair Remote:

- 1. Unplug Power to mount for 30 seconds
- 2. Hold the (DOWN) button while plugging in power
- 3. Keep holding (DOWN) button for around 10 seconds until mount moves down

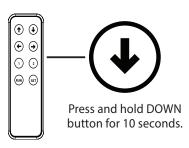


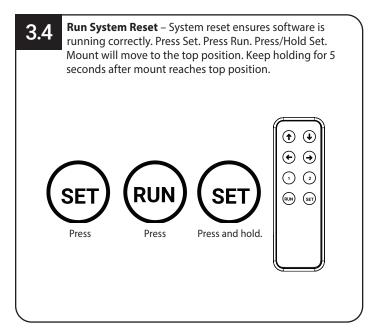

Programming Bottom Stop


Warning: Damage will occur If the Mount can drive down into something, the bottom stop needs to be set.

If the mount would hit the Mantel or some other object in the bottom position. You can easily reduce the bottom most (4) position so that the mount cannot move past that point.

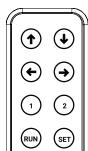

- 1. Drive mount to the desired Bottom-most Position by holding 🖶
- 2. Do **NOT** allow the mount to run into anything
- 3. Press Set
- 4. Press 🖶
- 5. Press/Hold Set for 4 to 8 Seconds
- 6. Check it was correctly done by trying to move the mount down farther

Note: To delete the bottom stop follow steps 3 to 6 but hold the set button for more than 10 seconds in step 5.

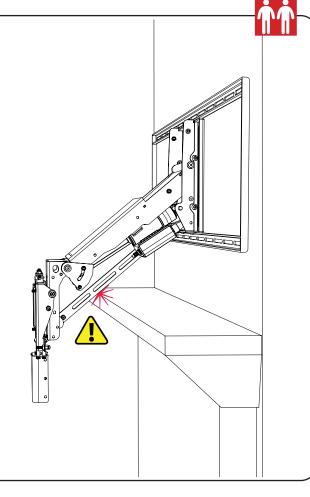

3.6

Swivel Safety Clutch

The Swivel on the mount has a friction clutch that automatically disengages to avoid damage if the mount swivels into something, or someone swivels the mount manually. If that happens the swivel will be out of position and the swivel will not work as expected. The swivel needs to be recalibrated right away to avoid damage.

To recalibrate Auto-move the mount to the top position:

Press • within 3 seconds

The mount will automatically move to the top position and recalibrate. You can also run Reset Function to recalibrate.







Press

Press within 3 Seconds

Note: If clutch is engaged the mount may swivel a little when coming down, to fix this; manually center mount at zero degree swivel by rotating TV with hands and over-riding clutch. Mount is at zero degrees swivel after you recalibrate (drive the mount to the top position), then move the mount straight down.

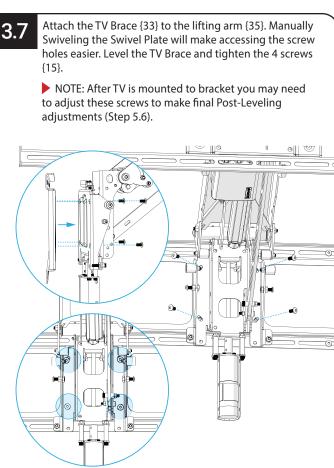

STEP 4 **Attach TV** to Mount

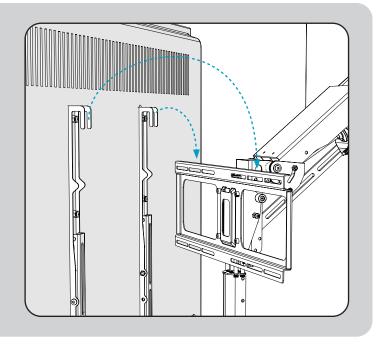



NOTE: These Next Steps Will Require Two People


4.1 **WARNING!**


Do Not put hands into Lifting Mechanism. The power of the Lifting Mechanism can cause bodily injury!

A Pinching and Crushing Hazard.

The wall mount actuation is very strong, do NOT run the mount when anyone is near the mount. Do NOT have any part of the body in the mount or between the TV and Wall. The Mount will keep driving until someone pushes another button on the remote to stop it. When working on the mount unplug the power.

Never allow small children to play around or operate the MantelMount. Property damage or personal injury can occur.

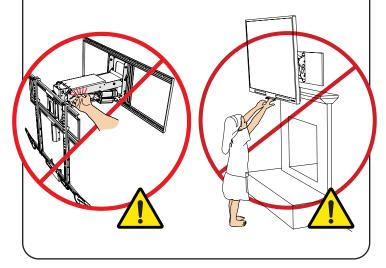

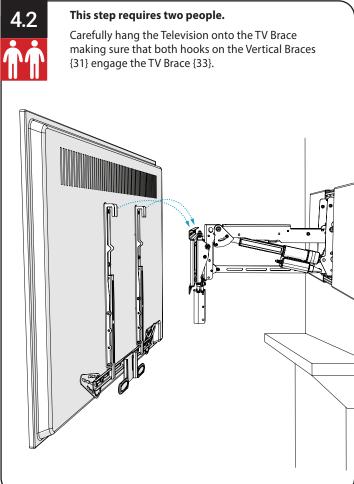



Center the TV on the TV Frame and check it with a level.

Carefully slide the TV sideways, if required, until it is balanced and horizontal, up to a MAXIMUM OF 2 INCHES left or right.

The TV would only need to be moved off-center if it has an unbalanced weight. These are usually older, heavier TVs.

If the TV needs to be moved sideways and is visually too much off-center above the mantel, remove the TV and relocate the Wall Plate (32) an equal distance but in the opposite direction of the TV to compensate.

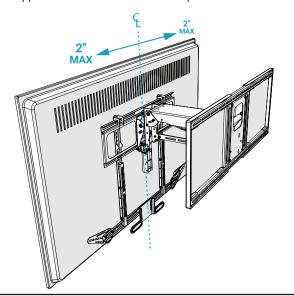


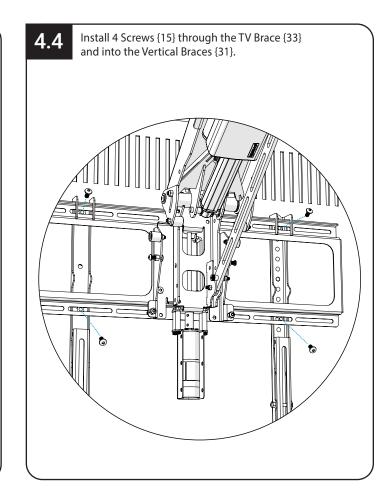

Attach cable ties to lower arm.

Shown below is the easiest way to attach cables. Use the included Cable Ties {24} to attach cables so they attach to the underside of the Lower Arm, making a gentle loop.

Cables should be long enough to accommodate the extension and swivel of MantelMount. Check all ranges of motion before tightening the Cable Ties.

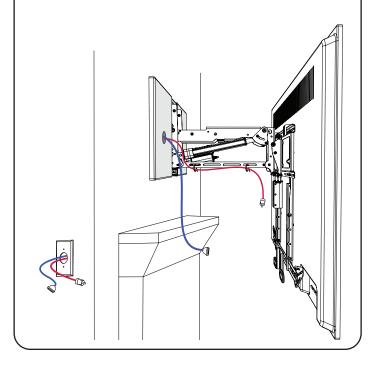


4.6 Attach the electrical and signal cables to the TV.


Run signal cables through open loop. Give each segment of the cables extra length so that they are not stressed or kinked when the mount moves.

Ensure that cables do not get pinched within the Lifting Arm when the TV is raised.

Reference Only: This is one possible configuration for the signal cables. Each segment of the cables has extra length so that the cables are not stressed or kinked when the mount is moved.

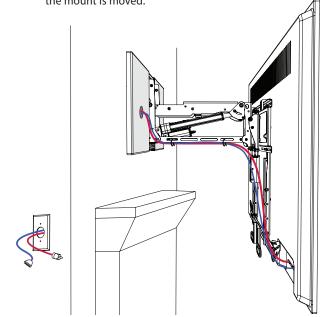


STEP 5 **Make Final Adjustments**

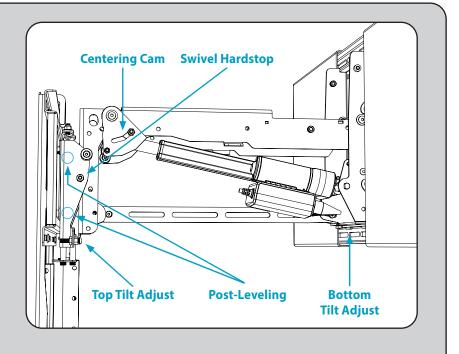

5.1 **Programming Left/Right Stop**

If the mount would swivel into the Mantel or some other object in the bottom position. You can easily reduce the right and left swivel limits so that the mount cannot move past them.

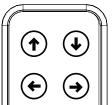

RUN

SET

- 1. Press Run then 💠 to calibrate (Mount Should move all of the way to the Top Position).
- 2. Drive mount to the **Bottom Position**
- 3. Press and hold ← or → to swivel mount as far as wanted
- 4. Press Set.
- 5. Press → or ←.
- 6. Press/Hold Set for 4 to 8 Seconds.
- 7. Check it was correctly done by trying to move the mount past set swivel.

Note: To delete the swivel soft stop follow steps 3 to 6 but hold the set button for more than 10 seconds

5.2 **Adjust the Side Swivel Stop** positions, if necessary. To keep the TV from bumping the mantel or wall, loosen the Locknuts {23} and adjust the Swivel Stop Screws to the desired stopping left and right positions. Tighten both Locknuts after the adjustments are made. Mechanical Swivel Stops should be just past the programmed swivel stop If a small amount or no swivel is desired, it may be necessary to remove the Screw and/or Locknuts and reattach them on the other side of the Swivel Bracket. **NOTE: To better access swivel stop** adjustments screws swivel the mount to the left or right to gain better access.

Centering Cam Adjustment.


The Centering Cam automatically swivels the TV to center while raising to avoid permanent obstacles.

Out of the Box they are set for max protection, to get more possible swivel follow below steps.

Warning: ensure Cams are set to avoid damage.

Steps to Set Cam:

- 1. Move TV to Out Position.
- 2. Swivel TV so that it is near the wall or mantel.
- 3. Swing Centering Cam forward until Cam Rollers Contact.
- 4. Tighten Cam Nut.
- 5. Repeat on other side.
- 6. Swivel the TV and Hold the UP button to ensure it is set so that the TV can swivel as much as possible in either direction without it hitting.

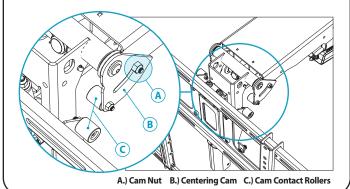


5.5

Top Position Tilt Fine Adjustment

TV Tilt in the Top Position can be fine tuned:

- 1. Drive the Mount to the Topmost Position to check Tilt
- 2. Drive the Mount down to Access Adjustment Screws
- 3. Adjustments must be done the same on each side of the mount
- 4. Loosen the Lock Nuts
- 5. Adjust Tilt Adjustment Screws
- 6. Tighten (Clockwise) to tilt TV down
- 7. Loosen (Counterclockwise) to tilt TV up
- 8. Check the settings are the same on both sides
- 9. Drive Mount to Topmost Position to check Tilt
- 10. Repeat steps 2-9 until satisfied
- 11. Tighten Lock Nuts

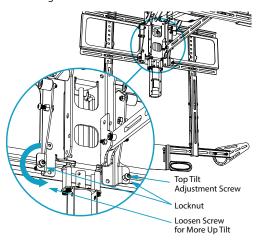


5.4

Bottom and Out Tilt Adjustment.

To adjust the tilt in all positions besides the Top Position.


- 1. Adjust Tilt Adjustment Screw with a 10mm Wrench.
 - Tighten (Clockwise) to tilt TV up
 - Loosen (Counterclockwise) to tilt TV down

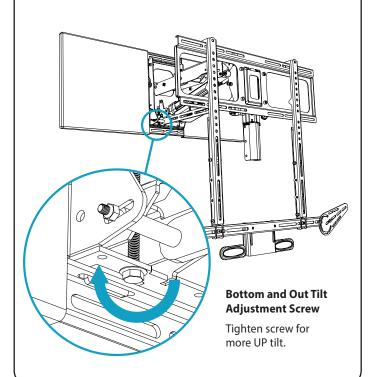



5.6


Make Post-Leveling adjustments, if necessary.


Place a level on top of the TV while it's in the UP position. If it's level, the installation is complete! If not, slightly loosen all four Leveling Screws {15} and rotate the TV until it's level and then tighten all the Screws.

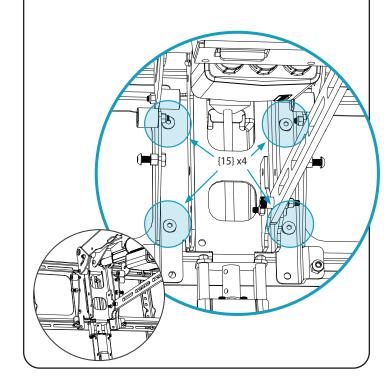


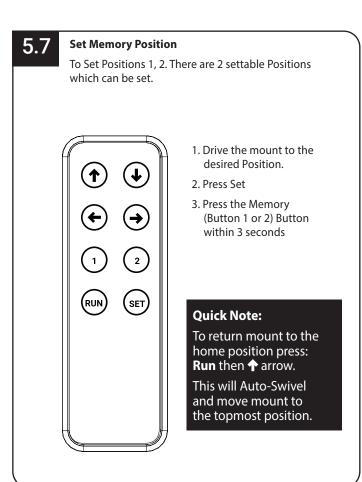


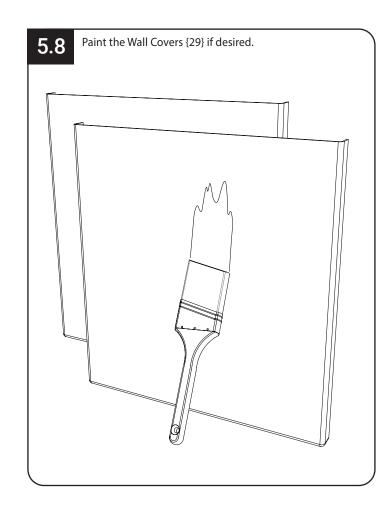

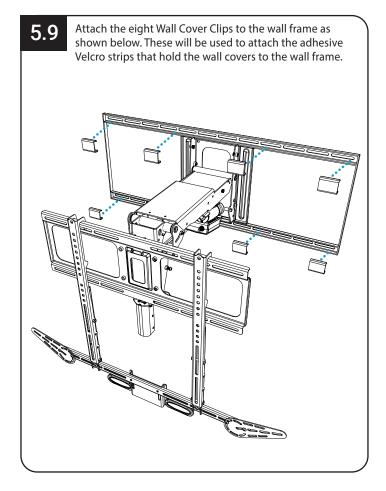

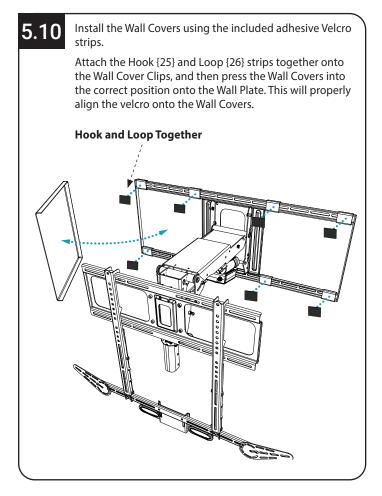

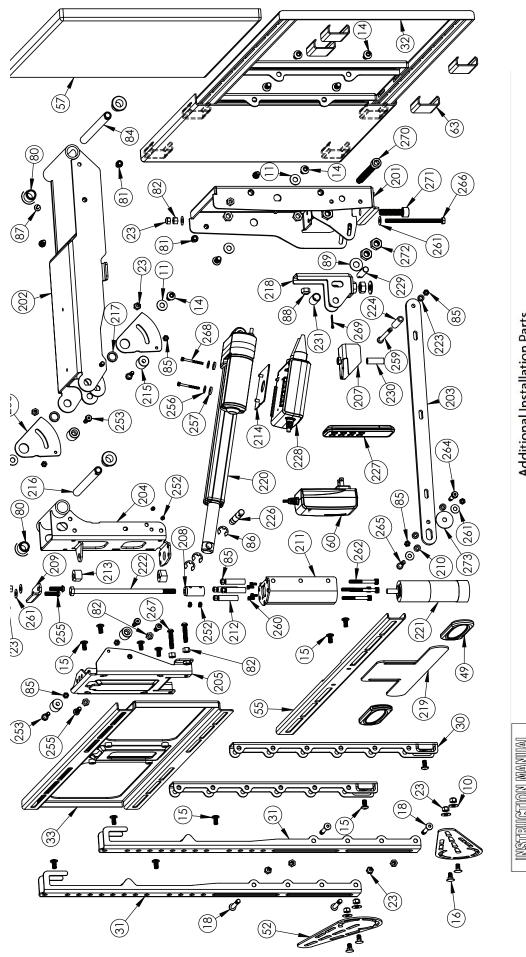

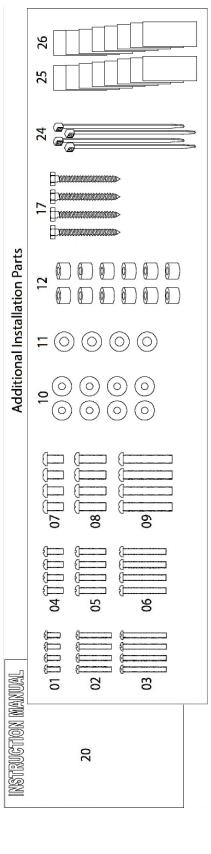

QTY	1	2	1	1	1	3	1	4	2	1	4	1	2	1	П	1	П	1	1	1	П	1	П	1	П	1	4	4	4	2	2	H	4	4 ,	4 4	⊣ ,	,		2	2	Н	1	1	3	1	
DESCRIPTION	MM815 Swivel TV Plate	MM815 Centering Cam	MM815 Bottom Tilt Adjust	MM815 Motor Coupling	MM815 Clutch Preload	MM815 M6 Bushing	MM815 Motor Attach	MM815 Motor Spacer	MM815 Swivel Spacer	MM815 Controller Holder	MM815 Centering Roller	MM815 TV Side Shaft	MM815 TV Shaft Spacer	MM815 Actuator Adjust	MM815 TA16 Actuator	MM815 Swivel Motor	MM815 Custom M8 HHCS	MM815 Bot Tilt Spacer Short	MM815 Bot Tilt Spacer Long	MM815 Actuator Pin TV Side	MM815 TFH22 RF Remote	MM815 TC7 Controller	MM815 Actuator Adjust Pin	MM815 Bot Tilt Spacer Med	MM815 Actuator Adjust Spacer	MM815 Swivel Wire	M5x8 Set Screw, McM 91390A117	M6x12 Shoulder Bolt, McM 92981A101	M6x22 BHCS	M4 ID 22 OD, McM 91100A130	M4 Rubber Washer, McM 90133A017	M6x60 Shoulder Bolt, McM 92981A109	M3x8 SHCS	Mb 1500 Belleville, MCM 96445K294	M5x45 SHCS	M6x2U Shoulder Bolt, McM 92981A1U3	M6x15 Shoulder Bolt, McM 92981A/51	M6x100 SHCS Fully Threaded	M6x30 BHCS	M3x35 SHCS	M2.5x16 Cotter Pin, McM 98350A621	M10x110 Full Thread SHCS	M10x40 SHCS	M10 Nut, McM 90592A024	M6 Washer 30 OD 1 Thick	
PART #	24205	24206	24207	24208	24209	24210	24211	24212	24213	24214	24215	24216	24217	24218	24220	24221	24222	24223	24224	24226	24227	24228	24229	24230	24231	24232	24252	24253	24255	24256	24257	24259	24260	24261	24262	24264	24265	74.266	24267	24268	24269	24270	24271	24272	24273	
ITEM #	205	206	207	208	209	210	211	212	213	214	215	216	217	218	220	221	222	223	224	226	227	228	229	230	231	232	252	253	255	256	257	259	260	707	797	264	265	997	267	268	269	270	271	272	273	
OTY	4	. 4	- 4	4	. 4	- 4	4	4	4		12	12	8	12	4	4	4	Н	13	16	8	8	2	2	Н	Н	2	2	Н	2	П	4	4	5	1	11	3	Н	71	2	8	Н	1	1 1-1	1	17
DESCRIPTION	M5 x 12	M5 x 30	M5 × 40	M6 x 16	M6 x 30	M6 x 40	M8 x 15	M8 x 25	M8 x 45	Washer M6	Washer M8 x 2	Spacer	BHCS M8x16	Round Head Screw M6 x 12	CARRIAGE BOLT M6 X 12	Lag Bolt M8 x 60	Round Head Screw M6 x 40	MM815 Instruction Manual	Locknut M6	Cable Tie	Velcro Strip Hook	Velcro Strip Loop	Brace Extender	TV Vertical Brace	Wall Frame	TV Frame	Handle Rubber, Temp Change	Sound Bar Wing	TV Horizontal Brace	Wall Cover	TP7 Plug	Bushing	M6x10 SHCS	Nut M6	Shaft 164	Locknut M5	M10 External Retain Ring	Cable Tie Mount	Locknut M8	M10 Washer	Wall Cover Clip	MM815 Temp Display	MM815 Wall Bracket	MM815 Upper Arm	MM815 Lower Arm	MM815 Swivel Plate
PART #	12189	12190	12191	12195	12194	12193	12197	12198	12199	12166	14126	12122	12176	12178	15083	12154	12255	MM815 Manual	12183	12162	12139	12141	14056	14038	13011	24030	12222	15010	14060	12113	24127	12115	12174	12185	13064	21191	24142	24153	12187	14128	25000	24219	24201	24202	24203	24204
			1	1		1						1				l	l	Į≅	ı	1		ı																								

TROUBLESHOOTING TIPS

Customer satisfaction is our top priority!

Following are solutions for the most common installation challenges. For further assistance, visit www.mantelmount.com/troubleshooting or contact Customer Support at 1-800-897-9755 ext.1 or support@mantelmount.com, Monday through Friday, 7am to 4pm PST.

NOTE: In rare cases, one troubleshooting adjustment may create the need for another. Be prepared for some trial and error.


MOUNT SPACE	
ISSUE	SOLUTION
The wall covering is made of brick or stone.	It's possible to install MantelMount by using concrete anchors (included) with the Lag Bolts {17}, PROVIDED the brick/stone/wall is structurally sound, several inches thick, and can handle four times the weight of the TV and mount. Working with a concrete/masonry professional for this type of installation is recommended.
The drywall/stucco wall covering is thicker than 5/8".	Please contact Customer Support for guidance before attempting installation.
A single wood stud is centered on my wall.	MantelMount recommends adding more support so mount can attach to the equivalent of 2 studs.
MOUNT PERFORMANCE	
ISSUE	SOLUTION (May require some trial and error to reach optimal performance.)
Swivel is off	 Swivel needs to be recalibrated 1. Press Run 2. Press ↑ Within 3 seconds to allow Mount to move all of the way to the top position. Mount should be recalibrated. You can also run Reset Function to recalibrate. See page 5. NOTE: The Swivel on the mount has a friction clutch that automatically disengages to avoid damage if the mount swivels into something, or someone swivels the mount manually. If that happens the swivel will be out of position and the swivel will not work as expected. The swivel needs to be recalibrated right away to avoid damage. To recalibrate Auto-move the mount to the top position:
TV isn't vertical in out and bottom positions	See step 5.4 to adjust the Bottom/Out Position tilt
TV isn't vertical in the Top Position	See step 5.5 to adjust the Top Position tilt
TV is not returning to same memory position	 Press Run Press within 3 seconds Allow Mount to move all of the way to the top position and wait 5 seconds Mount should be recalibrated Or run System reset, See page 5.
Mount does not move	There are a few things to try 1. Run System Reset, see page 5 2. Check that power is getting to the mount by making sure there is a green light shining on the plug. 3. Replace the CR2032 battery in the remote. 4. Check that the wires in the mount are plugged in and not damaged. 5. Pair the RF remoted, see Step 3.3 6. Maybe the Bottom Limit got set too high, clear the Bottom Travel Limit, see Page 5 . Warning: The mount can now travel all of the way down and the Bottom Limit will have to be redone, see section 3.5.

TROUBLESHOOTING TIPS


CONTINUED FROM PREVIOUS PAGE

Mount swivels a little when coming down TV LEVELING ISSUE POSSIBI TV is not level in the UP and/or DOWN positions. Vertical E evenly at back of to the state of the state	tel, ceiling or y not be level. Braces aren't ttached.to the to Brace the to	degree swivel by rotating recalibrate (drive the manner of the manner of the manner of the manner of the vertical estate of the TV the edistance.	SOLUTION 1. Adjust until visibly satisfactory. 2. Move the TV down. 3. Make Post Leveling adjustments (Step 5.6) and match the level readings of the mantel with the TV. 4. Ensure Top Tilt Adjustment is the same on each side of the mount, see Step 5.5 1. Remove electrical and signal cables (Step 4.5). 2. Detach the TV Brace from the Vertical Braces (Step 4.4). 3. Remove the TV from the TV Brace (Step 4.2) and lay
Mount swivels a little when coming down at zer straig TV LEVELING ISSUE POSSIBI TV is not level in the UP and/or DOWN positions. Vertical E evenly at back of to	tally center mount at zero or degrees swivel after you ght down. LE CAUSE HOW tel, ceiling or y not be level. floor. Braces aren't Look that cathed to the TV. the to Brace the to	at the back of V and ensure that op of the Vertical es are offset from op of the TV the edistance.	 Adjust until visibly satisfactory. Move the TV down. Make Post Leveling adjustments (Step 5.6) and match the level readings of the mantel with the TV. Ensure Top Tilt Adjustment is the same on each side of the mount, see Step 5.5 Remove electrical and signal cables (Step 4.5). Detach the TV Brace from the Vertical Braces (Step 4.4). Remove the TV from the TV Brace (Step 4.2) and lay
when coming down at zer straig TV LEVELING ISSUE POSSIBI TV is not level in the UP and/or DOWN positions. Vertical E evenly at back of to	tel, ceiling or y not be level. Braces aren't ttached.to the to Brace the to	at the back of V and ensure that op of the Vertical es are offset from op of the TV the edistance.	 Adjust until visibly satisfactory. Move the TV down. Make Post Leveling adjustments (Step 5.6) and match the level readings of the mantel with the TV. Ensure Top Tilt Adjustment is the same on each side of the mount, see Step 5.5 Remove electrical and signal cables (Step 4.5). Detach the TV Brace from the Vertical Braces (Step 4.4). Remove the TV from the TV Brace (Step 4.2) and lay
TV is not level in the UP and/or DOWN positions. Vertical E evenly at back of to	tel, ceiling or that of floor. Braces aren't Look tached.to the to Brace the to	at the back of V and ensure that op of the Vertical es are offset from op of the TV the edistance.	 Adjust until visibly satisfactory. Move the TV down. Make Post Leveling adjustments (Step 5.6) and match the level readings of the mantel with the TV. Ensure Top Tilt Adjustment is the same on each side of the mount, see Step 5.5 Remove electrical and signal cables (Step 4.5). Detach the TV Brace from the Vertical Braces (Step 4.4). Remove the TV from the TV Brace (Step 4.2) and lay
TV is not level in the UP and/or DOWN positions. Vertical E evenly at back of t	tel, ceiling or that of floor. Braces aren't Look tached.to the to Brace the to	at the back of V and ensure that op of the Vertical es are offset from op of the TV the edistance.	 Adjust until visibly satisfactory. Move the TV down. Make Post Leveling adjustments (Step 5.6) and match the level readings of the mantel with the TV. Ensure Top Tilt Adjustment is the same on each side of the mount, see Step 5.5 Remove electrical and signal cables (Step 4.5). Detach the TV Brace from the Vertical Braces (Step 4.4). Remove the TV from the TV Brace (Step 4.2) and lay
Vertical E evenly at back of t	that of floor. Braces aren't Look tached.to the TV. the to Brace the to	at the back of V and ensure that op of the Vertical es are offset from op of the TV the edistance.	 Move the TV down. Make Post Leveling adjustments (Step 5.6) and match the level readings of the mantel with the TV. Ensure Top Tilt Adjustment is the same on each side of the mount, see Step 5.5 Remove electrical and signal cables (Step 4.5). Detach the TV Brace from the Vertical Braces (Step 4.4). Remove the TV from the TV Brace (Step 4.2) and lay
evenly at back of t	ttached.to the the TV. the to Brace the to	V and ensure that op of the Vertical es are offset from op of the TV the edistance.	 Detach the TV Brace from the Vertical Braces (Step 4.4). Remove the TV from the TV Brace (Step 4.2) and lay
Wall Plat			 TV face down on a blanketed surface (Step 1.1). Remove the Vertical Brace(s) as necessary. Reposition the Vertical Braces so that they are properly parallel to one another, then repeat Step 1, Step 4 and if necessary, Step 5.
	Wall F	Plates to verify t's not level.	 Remove electrical and signal cables (Step 4.5). Detach TV Brace from Vertical Braces (Step 4.4). Remove the TV from the TV Brace (Step 4.2) and lay TV face down on a blanketed surface (Step 1.1). Slightly loosen all four Lag Bolts (Step 3.1). Adjust Wall Plates so that they are level. Hold Wall Plates in level position and firmly tighten the four Lag Bolts. Heed warning in Step 3.1. Once the Wall Plates are level, repeat Steps 3, 4 and 5.
TV is level in the UP position, but unleveled in the DOWN position, or vice cersa. The Top 9 evenly se	et. is level but no	el in the UP position oot in the DOWN	Follow the instructions in Step 5.5 . Be prepared for some trial and error. If adjusting the Top Stops doesn't solve the problem, try the solution below for when a TV is heavier on one side.
TV is hea one side.	vier on Use a		Attach a counterweight to the back of the TV. Contact Customer Support for assistance.


MM815 Pull Down TV Mount

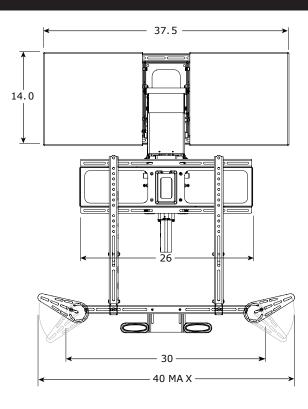


MantelMount has three different adjustments that must be made after the installation is complete in order to operate properly.

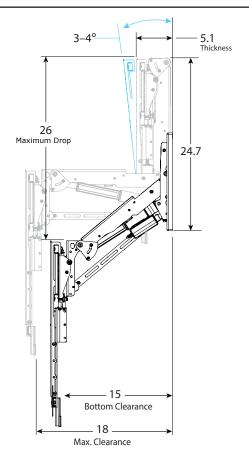

Note: As the mount lowers, first it tilts down. As it keeps lowering, it normalizes, becoming vertical about 6 inches down.

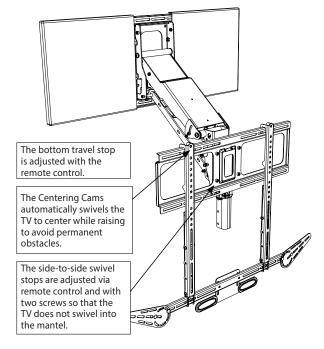

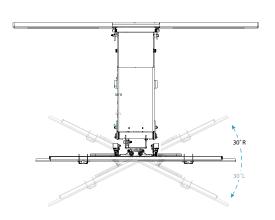

Ask us about our new

* Recess Box Kit *
that hides MantelMount
inside the wall!





For missing/damaged parts or questions during installation, please contact our Customer Support team at **1.800.897.9755 ext.1** or **support@mantelmount.com.** Customer satisfaction is our highest priority!