

**117** -001  
thru  
-003

**Ritter**<sup>®</sup>  
by MIDMARK

Power  
Examination  
Table

Serial Number Prefix:  
AJ & FE

Service and  
Parts Manual

**NO LONGER IN  
PRODUCTION**  
Some service parts may not  
be available for this product!



**117** -001  
thru  
-003

FOR USE BY MIDMARK  
TRAINED TECHNICIANS ONLY



# TABLE OF CONTENTS

Section/Paragraph	Page	Section/Paragraph	Page
<b>IMPORTANT INSTRUCTIONS</b>			
General Safety Instructions .....	iii		
Safety Alert Symbols .....	iii		
Warranty Instructions .....	iii		
<b>SECTION I GENERAL INFORMATION</b>			
1.1 Scope of Manual .....	1-1		
1.2 How to Use Manual .....	1-1		
1.3 Description of 117 Power Podiatry Chair .....	1-1		
1.4 Specifications .....	1-4		
1.5 Parts Replacement Ordering .....	1-6		
1.6 Special Tools .....	1-6		
<b>SECTION II TESTING AND TROUBLESHOOTING</b>			
2.1 Operational Test .....	2-1		
2.2 Troubleshooting Procedures .....	2-3		
<b>SECTION III SCHEDULED MAINTENANCE</b>			
3.1 Scheduled Maintenance .....	3-1		
<b>SECTION IV MAINTENANCE/SERVICE INSTRUCTIONS</b>			
4.1 Introduction .....	4-1		
4.2 Motor Cover Assembly Removal / Installation .....	4-1		
4.3 Checking / Adding Oil To Motor Pump .....	4-1		
4.4 Up Functions Shuttle Valve Removal / Installation .....	4-2		
4.5 Down Functions Shuttle Valve Removal / Installation (Units With Old Style Anti- Cavitation Solenoid Valve) .....	4-3		
4.6 Down Functions Shuttle Valve Removal / Installation (Units With New Style Anti- Cavitation Solenoid Valve) .....	4-4		
4.7 Anti-Cavitation Solenoid Valve Removal / Installation (Units With Old Style Anti- Cavitation Solenoid Valve) .....	4-5		
4.8 Anti-Cavitation Solenoid Valve Removal / Installation (Units With New Style Anti- Cavitation Solenoid Valve) .....	4-6		
4.9 Up Functions Relief Valve Removal / Installation .....	4-7		
4.10 Down Functions Relief Valve Removal / Installation .....	4-8		
		4.11 Motor Pump Assembly - Complete Removal / Installation .....	4-10
		4.12 Motor Pump Removal / Installation (Units With Old Style Anti-Cavitation Solenoid Valve) .....	4-10
		4.13 Motor Pump Removal / Installation (Units With New Style Anti-Cavitation Solenoid Valve) .....	4-12
		4.14 Motor Shaft Seal Removal / Installation .....	4-13
		4.15 Back Cylinder Removal / Installation .....	4-14
		4.16 Back Cylinder Needle Valve Adjustment ...	4-17
		4.17 Tilt Cylinder Removal / Installation .....	4-18
		4.18 Base Cylinder Removal / Installation .....	4-20
		4.19 AUTO RETURN "RETURN" or "STOP" Switch Removal / Installation .....	4-22
		4.20 BACK UP / DOWN or TILT UP / DOWN Switch Removal / Installation .....	4-23
		4.21 TABLE UP Or TABLE DOWN Switches Removal / Installation / Adjustment .....	4-24
		4.22 Time Delay Relay Removal / Installation ...	4-25
		4.23 Capacitors Removal / Installation .....	4-26
		4.24 Auto Return Relay [CR2] Or Manual Functions Relay [CR1] Removal / Installation .....	4-27
		4.25 Tilt Down Limit Switch Removal / Installation .....	4-28
		4.26 Base Down Limit Switch Removal / Installation .....	4-29
		4.27 Chain Assembly Adjustment .....	4-30
		4.28 Base Slide Assembly Removal / Installation .....	4-31
		4.29 Reclining Arm Adjustment .....	4-35
		4.30 Hydraulic System Flushing Procedure .....	4-35
		4.31 Old Style Anti-Cavitation Solenoid Valve Rebuild .....	4-37
<b>SECTION V SCHEMATICS AND DIAGRAMS</b>			
		5.1 Electrical Schematics / Wiring Diagrams ....	5-1
		5.2 Hydraulic Flow Diagrams .....	5-4
<b>SECTION VI PARTS LIST</b>			
		6.1 Introduction .....	6-1
		6.2 Description of Columns .....	6-1
		6.3 Torque Specifications And Important Assembly Notes .....	6-1

(\*) Indicates that there has been a serial number break for the illustration and that there are additional point page(s) following the original page.

## TABLE OF CONTENTS - CONTINUED

Section/Paragraph	Page	Section/Paragraph	Page
Pictorial Index .....	6-2.*	Base Electrical Components - Domestic ..	6-10.*
Back And Seat Components .....	6-3.*	Base Electrical Components - Export .....	6-11.*
Leg Components .....	6-4.*	Motor / Pump Components .....	6-12.*
Upholstery Set .....	6-5.*	Control Panel Assembly .....	6-13.*
Base Covers And Enclosures .....	6-6.*	Foot Control Assembly .....	6-14
Base Mechanical Components .....	6-7.*	COMMENTS .....	7-1
Hydraulic System .....	6-8.*	FAX ORDERING FORM .....	7-2
Base Slide Assembly .....	6-9.*		

(\*) Indicates that there has been a serial number break for the illustration and that there are additional point page(s) following the original page.

# IMPORTANT INSTRUCTIONS

## General Safety Instructions

**Safety First:** The primary concern of Midmark Corporation is that this Power Podiatry Chair is maintained with the safety of the patient and staff in mind. To assure that services and repairs are completed safely and correctly, proceed as follows:

- (1) Read this entire manual before performing any services or repairs on this chair.
- (2) Be sure you understand the instructions contained in this manual before attempting to service or repair this chair.

## Safety Alert Symbols

Throughout this manual are safety alert symbols that call attention to particular procedures. These items are used as follows:



### DANGER

A **DANGER** is used for an imminently hazardous operating procedure, practice, or condition which, if not correctly followed, will result in loss of life or serious personal injury.



### WARNING

A **WARNING** is used for a potentially hazardous operating procedure, practice, or condition which, if not correctly followed, could result in loss of life or serious personal injury.



### CAUTION

A **CAUTION** is used for a potentially hazardous operating procedure, practice, or condition which, if not correctly followed, could result in minor or moderate injury. It may also be used to alert against unsafe practices.



### EQUIPMENT ALERT

An **EQUIPMENT ALERT** is used for an imminently or potentially hazardous operating procedure, practice, or condition which, if not correctly followed, will or could result in serious, moderate, or minor damage to unit.

### NOTE

A **NOTE** is used to amplify an operating procedure, practice or condition.

## Warranty Instructions

Refer to the Midmark "Limited Warranty" printed on the back cover of the Installation and Operation Manual for warranty information. Failure to follow the guidelines listed below will void the warranty and/or render the 117 Power Podiatry Chair unsafe for operation.

- In the event of a malfunction, do not attempt to operate the chair until necessary repairs have been made.
- Do not attempt to disassemble chair, replace malfunctioning or damaged components, or perform adjustments unless you are one of Midmark's authorized service technicians.
- Do not substitute parts of another manufacturer when replacing inoperative or damaged components. Use only Midmark replacement parts.



**SECTION I  
GENERAL INFORMATION**

**1.1 Scope of Manual**

This manual contains detailed troubleshooting, scheduled maintenance, maintenance, and service instructions for 117 Power Podiatry Chair. This manual is intended to be used by Midmark's authorized service technicians.

**1.2 How to Use Manual**

- A. Manual Use When Performing Scheduled Maintenance.
  - (1) Perform inspections and services listed in Scheduled Maintenance Chart (Refer to para 3.1).
  - (2) If a component is discovered to be faulty or out of adjustment, replace or adjust component in accordance with maintenance/service instructions (Refer to para 4.1).
- B. Manual Use When Chair Is Malfunctioning And Cause Is Unknown.
  - (1) Perform an operational test on chair (Refer to para 2.1).
  - (2) Perform troubleshooting procedures listed in Troubleshooting Guide (Refer to para 2.2).
  - (3) If a component is discovered to be faulty or out of adjustment, replace or adjust component in accordance with maintenance/service instructions (Refer to para 4.1).
- C. Manual Use When Damaged Component Is Known.
  - (1) Replace or adjust component in accordance with maintenance/service instructions (Refer to para 4.1).

**1.3 Description Of 117 Power Podiatry Chair**

- A. General Description (See Figure 1-1).

The 117 Power Podiatry Chair is an examination chair designed specifically for performing general podiatric

procedures (Podiatry - treatment of foot ailments).

The major serviceable components of the chair are the motor pump which includes an up functions relief valve, down functions relief valve, up functions shuttle valve, down function shuttle valve, and anti-cavitation solenoid valve, two capacitors, isolation transformer (export units only), tilt down limit switch, base down limit switch, control panel assembly which includes a manual functions relay (CR1), auto return relay (CR2), time delay relay, and terminal blocks, BACK UP / DOWN switches (RH and LH), TILT UP / DOWN switches (RH and LH), AUTO RETURN "RETURN" switches (RH and LH), AUTO RETURN "STOP" switches (RH and LH), foot control which includes TABLE UP switches and TABLE DOWN switches, tilt cylinder, back cylinder, needle valve (older units only) base cylinder, reclining arm mechanism, foot section brake, base slide assembly, and chain assembly.

- B. Theory of Operation (See Figure 5-1, Sheets 1 and 2 for wiring diagrams, Figure 5-2 for electrical schematics, and Figures 5-3 and 5-4 for hydraulic flow diagrams)


Electrical Power:

Line voltage is supplied directly to the switches of the chair.

Up Functions Electrical Operation:

Line voltage is continuously supplied to line side terminals of all switches. Then, when a TILT UP, BACK UP, or BASE UP switch is pressed, the current flows thru the two poles of the selected switch. One pole of switch allows current to flow across the cylinder's solenoid valve and time delay relay, energizing the cylinder solenoid valve. The time delay relay delays current flow across the coil of the cylinder solenoid valve for 1/10 of a second, which allows time for the motor pump to develop hydraulic pressure. This prevents the selected function from drifting downward before starting to raise up and prevents a jerky start. The other pole of the switch allows current to flow across the manual functions relay (CR1), energizing the relay. When the manual functions relay (CR1) is energized, three subswitches within the relay are switched, the normally open (N.O.) subswitch CR1-A, the normally closed (N.C.) subswitch CR1-B, and the

# SECTION I GENERAL INFORMATION

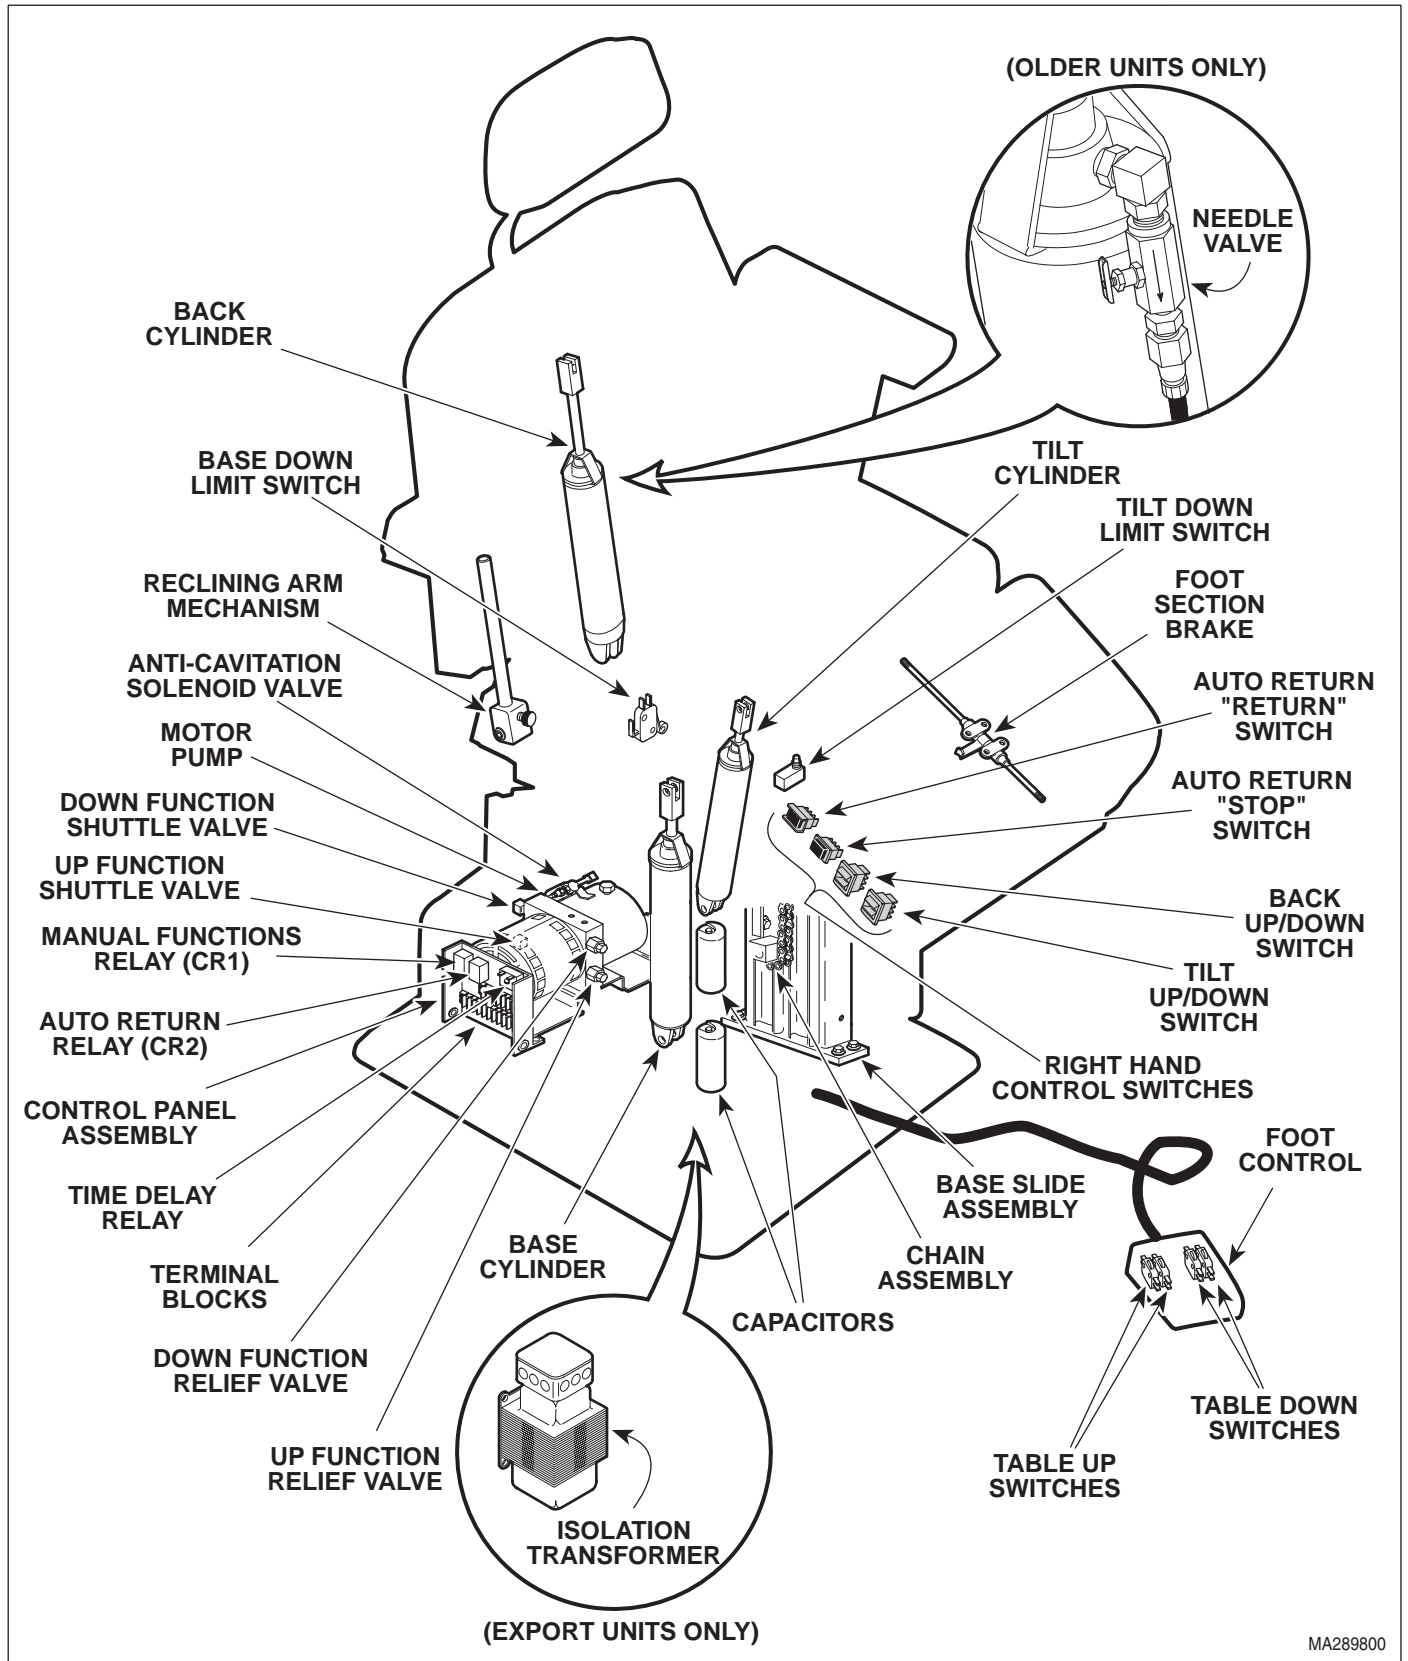

(EXPORT UNITS ONLY)

MA289800

Figure 1-1. Major Components



N.C. subswitch CR1-C. If a subswitch was a normally open (N.O.) switch, it then switches to closed position (current can flow). If a subswitch was a normally closed (N.C.) switch, it then switches to an open position (current cannot flow).

The N.O. subswitch CR1-A closes, which applies current across the coil of the motor pump, causing the pump to run and supply pressure for the selected UP function. There are two capacitors in the motor pumps circuit which provide motor start and motor run power. Current is also applied across the coil of the anti-cavitation solenoid valve, energizing the valve and causing it to open. The N.C. subswitch CR1-B opens, which disables all DOWN functions while an UP function button is depressed. This prevents the motor pump from being run in the forward and reverse directions simultaneously, possibly damaging it. The N.C. subswitch CR1-C opens, which disables the AUTO RETURN "RETURN" and "STOP" buttons, the tilt down limit switch, and the base down limit switch. This also prevents the motor pump from being run in the forward and reverse directions simultaneously, possibly damaging it.

#### Up Functions Hydraulic Operation:

When the motor pump starts pumping, suction is created by the rotating pump gears, which allows oil to defeat the reservoir check valve and flow into the pump gears. The pump gears pressurize the oil which flows to the up function shuttle valve. The check ball and shuttle in the up function shuttle valve are pushed to the open position by the oil, allowing oil to flow through the shuttle valve by flowing around the check ball (with the shuttle in the open position, oil is prevented from flowing through the reservoir ports and returning to the reservoir). The oil then flows through the open cylinder solenoid valve at the base of the selected cylinder, extending the cylinder rod. When the cylinder rod extends, oil is forced out of the rod end of the cylinder, through the open anti-cavitation solenoid valve and to the down function shuttle valve. The check ball and the shuttle in the down function shuttle valve are pushed to the closed position by the oil, which prevents oil from flowing through the shuttle valve and into the motor pump, but allows the oil to flow through the newly uncovered reservoir ports into the reservoir. When the cylinder rod reaches the end of its travel, the up function relief valve opens when the pressure reaches 525 - 600 PSI (36.2 - 41.4 BARS) and allows the oil to return to the reservoir. This prevents the motor pump from developing pressures that are too high and damaging

the hydraulic system components, hoses, or the motor pump itself.

When the operator releases the selected function's switch, the motor pump shuts down and the anti-cavitation solenoid valve and the cylinder solenoid valve de-energize, causing the valves to close.

#### Down Functions Electrical Operation:

Line voltage is continuously supplied to line side terminals of all switches. Then, when a TILT DOWN, BACK DOWN, or BASE DOWN switch is pressed, the current flows thru the two poles of the selected switch. One pole of switch allows current to flow across the cylinder's solenoid valve and time delay relay, energizing the cylinder solenoid valve. The time delay relay delays current flow across the coil of the cylinder solenoid valve for 1/10 of a second, which allows time for the motor pump to develop hydraulic pressure. This prevents the selected function from drifting before starting to move and also prevents a jerky start. The other pole of the switch allows current to flow thru the N.C. subswitch CR1-B and then across the coil of the motor pump, causing the pump to run and supply pressure for the selected DOWN function. There are two capacitors in the motor pumps circuit which provide motor start and motor run power.

#### Down Functions Hydraulic Operation:

When the motor pump starts pumping, suction is created by the rotating pump gears, which allows oil to defeat the reservoir check valve and flow into the pump gears. The pump gears pressurize the oil which flows to the down function shuttle valve. The check ball and shuttle in the down function shuttle valve are pushed to the open position by the oil, allowing oil to flow through the shuttle valve by flowing around the check ball (with the shuttle in the open position, oil is prevented from flowing through the reservoir ports and returning to the reservoir). The oil then flows through the anti-cavitation solenoid valve and into the rod end of the cylinder, causing the cylinder rod to retract. When the cylinder rod retracts, oil is forced out of the base of the cylinder, through the open cylinder solenoid valve to the up function shuttle valve. The check ball and the shuttle in the up function shuttle valve are pushed to the closed position by the oil, which prevents oil from flowing through the shuttle valve and into the motor pump, but allows the oil to flow through the newly uncovered

## SECTION I GENERAL INFORMATION

reservoir ports into the reservoir. When the cylinder rod reaches the end of its travel, the down functions relief valve opens when the pressure reaches 250 - 325 PSI (17.2 - 22.4 BARS) and allows the oil to return to the reservoir. This prevents the motor pump from developing pressures that are too high and damaging the hydraulic system components, hoses, or the motor pump itself.

When the operator releases the selected function's switch, the motor pump shuts down and the cylinder solenoid valve de-energizes, causing the valve to close.

### Auto Return Function Operation:

When the operator presses one of the two AUTO RETURN "RETURN" buttons, current is applied across the normally closed contacts of the tilt down limit switch and base down limit switch and then across the coil of the auto return relay (CR2), energizing the relay. When the auto return relay (CR2) is energized, three subswitches within the relay are switched; the N.O. subswitch CR2-A, the N.O. subswitch CR2-B, and the N.O. subswitch CR2-C.

When subswitch CR2-A switches, current now flows across the N.C. AUTO RETURN "STOP" switches and the coil of the auto return relay (CR2), keeping the relay energized even after the operator has released the AUTO RETURN "RETURN" switch. This also allows the STOP buttons to become functional. Pressing a STOP button will open the circuit, which will de-energize the auto return relay (CR2), thereby stopping the auto return function. When subswitch CR2-B switches, current flows across the tilt cylinder's solenoid valve and the time delay relay, energizing the tilt cylinder solenoid valve. The time delay relay delays current flow across the coil of the tilt cylinder solenoid valve for 1/10 of a second, which allows time for the motor pump to develop hydraulic pressure. This prevents the selected function from drifting before starting to move and also prevents a jerky start. When subswitch CR2-C switches, current flows across the coil of the motor pump, causing the pump to run and supply pressure for the AUTO RETURN sequence. There are two capacitors in the motor pump circuit which provide motor start and motor run power.

The TILT function lowers until the tilt down limit switch is tripped. There are three sets of contacts in the tilt down limit switch. When the tilt down limit switch is tripped, one contact set (terminals 3 and 4) opens, de-energizing the tilt cylinder solenoid valve. The second

contact set (terminals 5 and 6) closes, energizing the base cylinder solenoid valve. The third contact set (terminals 7 and 8) opens, leaving the base down limit switch as the sole source of power for the auto return relay (CR2). When the base cylinder solenoid valve is energized, the base function lowers until the base down limit switch is tripped. There are two sets of contacts in the base down limit switch. When the base down limit switch is tripped, one contact set (terminals 3 and 4) opens, de-energizing the base cylinder solenoid valve. The second contact set (terminals 7 and 8) opens, opening the auto return relay (CR2) and causing the relay to de-energize. The auto return sequence is now complete.

If the operator needs to stop the table top from lowering for any reason, one of the two AUTO RETURN "STOP" buttons can be pressed. When one of N.C. "STOP" buttons is pressed, the circuit to the auto return relay (CR2) is opened, removing current flow from the coil of the auto return relay (CR2) and causing it to de-energize. Current flow to the coil of the cylinder solenoid valve and motor pump is stopped, causing the auto return function to stop.

### General Information:

The anti-cavitation solenoid valve is in the hydraulic system to prevent oil from escaping out of the rod end of a cylinder while the chair is not being moved. Otherwise, a cylinder rod would be able to extend on its own if upward pressure was placed on that function of the chair top by the doctor or patient.

The cylinder solenoid valves are in the hydraulic system to prevent oil from escaping out of the base of the cylinder assemblies. Otherwise, a cylinder assembly could retract on its own, allowing the table top to drift.

On some older units, there is a needle valve attached to the rod end of the back cylinder. On these units, the needle valve is used to adjust the speed of the back cylinder.

The motor has a thermal overload switch which automatically activates if motor becomes overheated, shutting the motor down. The motor is designed for intermittent, not continuous duty. Running the motor continuously will cause the overload switch to activate.

## 1.4 Specifications

Factual data for the 117 Power Podiatry Chair is provided in Table 1-1. Also, see Figure 1-2.


# SECTION I GENERAL INFORMATION

**Table 1-1. Specifications**

Description	Data
<b>Weight:</b>	
Without Shipping Carton .....	392 lb (177.8 kg)
With Shipping Carton .....	475 lb (215.5 kg)
<b>Shipping Carton ..</b> 74.25 in. "L" x 29 in. "W" x 33 in. "H" (188.6 cm x 73.66 cm x 83.8 cm)	
<b>Dimensions (See Figure 1-2):</b>	
Table Top Length (w/o headrest) .....	59 in. (149.9 cm)
Table Top Length (min) .....	68 in. (172.7 cm)
Table Top Length (w/ headrest & foot section extended) .....	96 in. (243.8 cm)
Table Top Width (w/ armrests) .....	26 in. (66.0 cm)
Overall Width .....	26 in. (66.0 cm)
<b>Table Positioning:</b>	
Tilt Section (S/N AJ1000 Thru AJ3143) .....	0 - 17°
Tilt Section (S/N AJ3144 and FE1000 Thru Present) .....	0 - 27°
Back Section .....	0 - 85°
Table Top Height (Adjustable): .....	26.0 in. to 42.0 in. (66.0 cm to 106.7 cm)
<b>Table Speeds (@ 60 Hz.):</b>	
Base Up .....	9 ± 1 seconds
Back Up .....	9 ± 1 seconds
Tilt Up .....	5 ± 1 seconds
<b>Weight Capacity (Maximum) .....</b>	<b>300 lb. (136.0 kg)</b>
<b>Oil Used In Hydraulic System .....</b>	<b>Light Grade Medicinal Mineral Oil</b>
<b>Oil Capacity .....</b>	<b>Approx. 2.5 quarts (2.4 liters)</b>
<b>Motor Pump Reservoir Capacitor ....</b>	<b>1 quart (0.946 liter)</b>
<b>Electrical Requirements:</b>	
115 VAC Unit.....	110 - 120 VAC, 60 HZ, 12 amp, single phase
230 VAC Unit.....	220 - 240 VAC, 50/60 HZ, 8 amp, single phase
<b>Power Consumption:</b>	
115 VAC Unit .....	1440 WATTS, 12 amps @ 120 VAC
230 VAC Unit.....	1920 WATTS, 8 amps @ 240 VAC

**Recommended Circuit:**

A separate (dedicated) circuit is recommended for this table. The table *should not* be connected to an electrical circuit with other appliances or equipment unless the circuit is rated for the additional load.

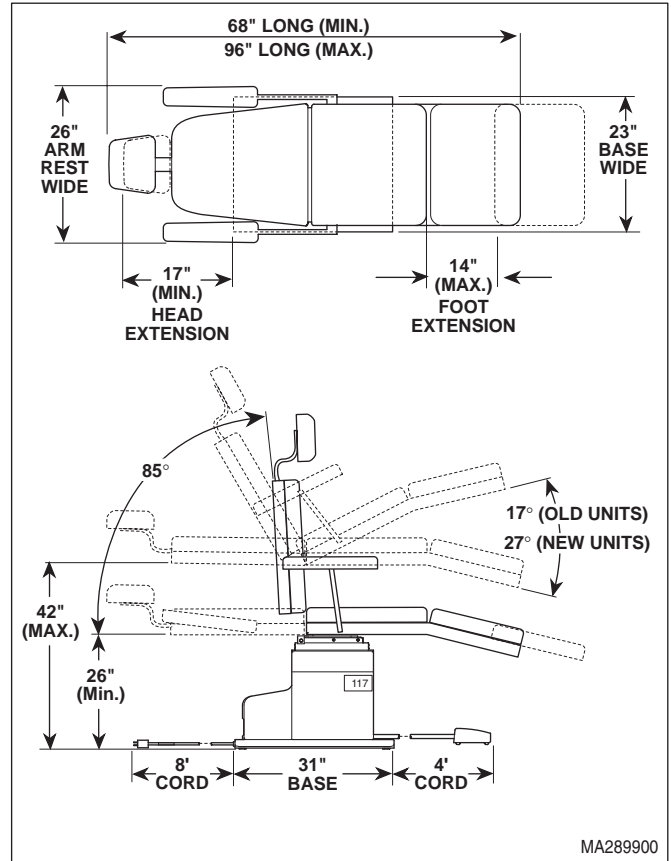


**Figure 1-2. Table Dimensions**

# SECTION I GENERAL INFORMATION

## 1.5 Parts Replacement Ordering

If a part replacement is required, order the part directly from the factory as follows:

- (1) Refer to Figure 1-3 to determine the location of the model number and serial number of the chair and record this data.

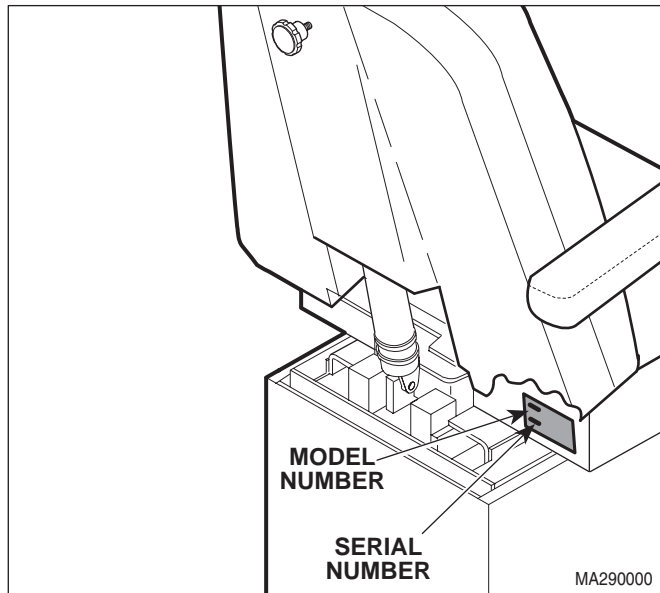

**Figure 1-3. Model Number / Serial Number Location**

- (2) Refer to the Parts List to determine the item numbers of the parts, part numbers of the parts, descriptions of the parts, and quantities of parts needed and record this data (Refer to para 6.1).

### NOTE

Ask the Purchasing Department of the company that owns the chair for this information. Otherwise, this information may be obtained from the dealer that sold the chair.

- (3) Determine the installation date of the chair and record this data.
- (4) Call Midmark with the recorded information and ask for the Medical Products Technical Services Department. See back cover of this manual for the phone number or use the Fax Order Form (See page 7-2 for Fax Order Form).

## 1.6 Special Tools

Table 1-2 lists all of the special tools needed to repair the chair, how to obtain the special tools, and the purpose of each special tool.


**Table 1-2. Special Tool List**

Description of Special Tool	Manufacturer's Name / Address / Phone	Manufacturer's Part Number	Purpose of Special Tool
Multimeter	Commercially Available	Any Type	Used to perform continuity and voltage checks.
Torque Wrench	Commercially Available	Any Type	Used to tighten hardware to specified torque values.

**SECTION II  
TESTING AND TROUBLESHOOTING**

**2.1 Operational Test**

In order to effectively diagnose the malfunction of the chair, it may be necessary to perform an operational test as follows:

 **WARNING**  
Refer to the Operator Manual for complete instructions on operating the chair. Failure to do so could result in personal injury.

**NOTE**  
The Operational Test, for the most part, only describes what should happen when the chair is operated. If the chair does something other than described, a problem has been discovered. Refer to the Troubleshooting Guide to determine the cause of the problem and its correction.

- (1) Plug the chair into a grounded, non-isolated, correctly polarized outlet, that has the proper voltage output for the chair.
- (2) Depress TABLE UP and TABLE DOWN foot switches on the foot control. Depress the BACK UP / DOWN switch to the UP and DOWN positions. Depress the TILT UP / DOWN switch to the UP and DOWN positions.
- (3) Observe. The table top should move in the direction corresponding to the footswitch / switch which is being depressed. The range of movement should match the ranges listed below:

Table Positioning:

Tilt Section (S/N AJ1000 Thru AJ3143)	..... 0 - 17°
Tilt Section (S/N AJ3144 and FE1000 Thru Present)	..... 0 - 27°
Back Section	..... 0 - 85°
Table Top Height (Adjustable):	..... 26.0 in. to 42.0 in. (66.0 cm to 106.7 cm)

No section of the table top should drift on its own after a footswitch / switch is released. Movement should be steady and should match the speeds listed below:

Table Speeds (@ 60 Hz.):

Base Up	..... 9 ±1 seconds
Back Up	..... 9 ±1 seconds
Tilt Up	..... 5 ±1 seconds

- (4) Raise TABLE UP and TILT UP function all the way up.
- (5) Press one of the AUTO RETURN "RETURN" switches. After table top starts to move, press one of the AUTO RETURN "STOP" switches.
- (6) Observe. When the AUTO RETURN "RETURN" switch is pressed, the tilt function should begin to lower (and should keep lowering even after the RETURN switch is released). When the AUTO RETURN "STOP" switch is pressed, the table top should stop lowering.
- (7) Press one of the AUTO RETURN "RETURN" switches and allow the auto return sequence to finish.
- (8) Observe. The tilt function should lower completely and stop; then the base down function should lower all the way down and stop. The motor pump should stop running, indicating that the base down limit switch has been tripped.
- (9) Repeat steps 2 thru 8 using the function switches on the other side of the chair.
- (10) Push down on right side or pull up on left side of brake handle and then slide foot section assembly in and out. Release brake handle.
- (11) Observe. When brake handle is depressed, the foot section assembly should be able to be moved in and out freely. When the brake handle is released, the foot section assembly should be locked in place securely.

**NOTE**  
The release plunger may not automatically return to the locked position by itself. It may need to be worked into its locked position.

- (12) Pull release plunger out and move reclining arm up and down. Lower reclining arm all the way and allow release plunger to lock into position.

# SECTION II TESTING AND TROUBLESHOOTING

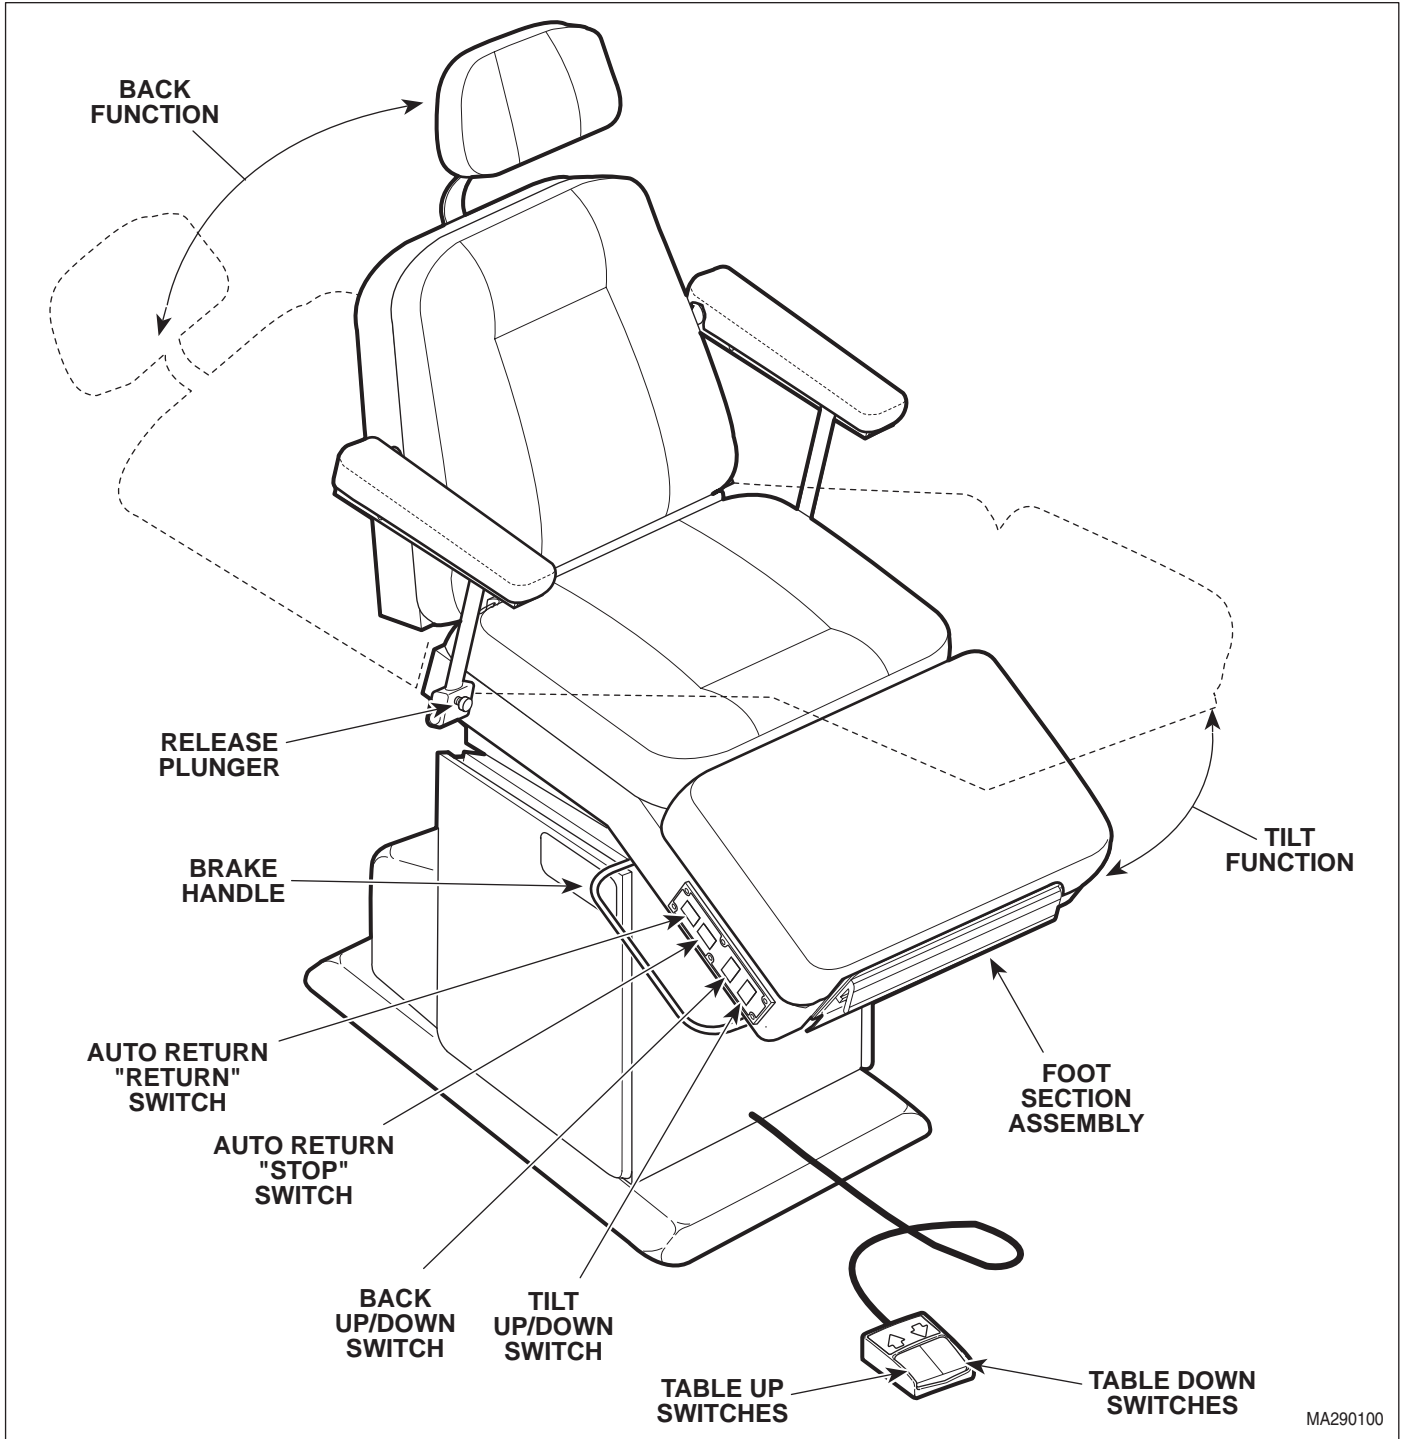


Figure 2-1. Operational Test

## SECTION II TESTING AND TROUBLESHOOTING

- (13) Observe. When the release plunger is pulled out, the reclining arm is unlocked and can be moved. When the reclining arm is lowered completely and the release plunger is released, the release plunger should lock the reclining arm in place.

### 2.2 Troubleshooting Procedures

Table 2-1 is a Troubleshooting Guide which is used to determine the cause of the malfunction.

**Table 2-1. Troubleshooting Guide**

Problem	Symptom	Probable Cause	Check	Correction
Chair will not operate when any of the six up or down functions or auto return function is selected.	When footswitch is depressed, motor pump does not run and cylinder solenoid(s) does not energize (no audible click).	Power cord is not plugged into facility wall outlet, or on export models, power cord is not plugged into connector receptacle on chair.	Check to see if power cord is plugged in.	Plug power cord into facility wall outlet and / or connector receptacle on chair.
		Facility circuit breaker providing power to chair is tripped.	Check facility circuit breaker.	If circuit breaker is tripped, correct the problem, then reset circuit breaker.
		Fuse(s) in AC connector receptacle is blown (export units only).	Perform continuity check on fuses.	Replace fuse(s).
		Wire connections loose.	Check wiring connections from power cord to terminal block.	Clean dirty connections. Repair loose \ damaged connections.
		Isolation transformer is malfunctioning (export units only).	Check input and output voltage of isolation transformer.	If isolation transformer is receiving proper input voltage but is not supplying 115 VAC output, replace isolation transformer.
	When any footswitch / switch is depressed, motor pump does not run, but cylinder solenoid(s) energizes (audible click).	Capacitor(s) is blown (motor pump may be humming).	Replace suspect capacitor(s) with known working capacitor(s).	Replace capacitor(s). Refer to para 4.23.
		Motor thermal overload switch is activated because motor pump overheated.	Wait 15 to 20 minutes.	Allow motor pump to cool and then try to operate chair. If motor pump does not run now, replace motor pump. Refer to para 4.11, 4.12, or 4.13.
		Motor pump is burned out.	Replace suspect motor pump.	Replace motor pump. Refer to para 4.11, 4.12, or 4.13.
		Wire connections loose.	Check wiring from terminal block to motor pump.	Clean dirty connections. Repair loose \ damaged connections.

## SECTION II TESTING AND TROUBLESHOOTING

Table 2-1. Troubleshooting Guide - Continued

Problem	Symptom	Probable Cause	Check	Correction
Chair will not operate when any of the six up or down functions or auto return function is selected - Continued.	When any footswitch / switch is depressed, motor pump runs, but table top does not move.	Time delay relay is malfunctioning.	Use a jumper wire to bypass time delay relay. If table moves, time delay relay is malfunctioning.  Put a multimeter in line w/time delay relay and run each cylinder one at a time.	A multimeter reading >1.2 amps indicates a faulty cylinder has caused relay to fail. Replace the cylinder <b>and</b> the time delay relay.  If reading is <1.2 amps, replace time delay relay <b>only</b> . Refer to para 4.22.
	When any footswitch / switch is depressed, motor pump runs and solenoid can be heard energizing.	Hydraulic system is low on mineral oil.	Check oil level in reservoir.	If necessary, add oil to reservoir. Refer to para 4.3.
	When any footswitch / switch is depressed, motor pump hums, but does not run.	Capacitor(s) is blown.	Replace suspect capacitor(s) with known working capacitor(s).	Replace capacitor(s). Refer to para 4.23.
		Motor pump is locked up or burned out.	Replace suspect motor pump with known working motor pump.	Replace motor pump. Refer to para 4.11, 4.12, or 4.13.
The TABLE UP, TILT UP, and BACK UP functions do not work, but TABLE DOWN, TILT DOWN, and BACK DOWN functions do.	Motor pump runs when an up function footswitch / switch is depressed, but table top does not move.	Anti-cavitation solenoid valve is malfunctioning.	Check for slight magnetism on bottom side of anti-cavitation solenoid valve, indicating solenoid is not burned out or replace suspect anti-cavitation solenoid valve with known working anti-cavitation solenoid valve.	Replace anti-cavitation solenoid valve. Refer to para 4.7 or 4.8.
		Wire connections loose.	Check all wiring connections from terminal block to anti-cavitation solenoid valve. Use multimeter to check for proper voltage levels.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
		Up function shuttle valve is malfunctioning.	Check to see if check ball is loose in up function shuttle valve or adjacent elbow (check ball should be held in shuttle valve by metal ring).	Replace up function shuttle valve. Refer to para 4.4.



## SECTION II TESTING AND TROUBLESHOOTING

**Table 2-1. Troubleshooting Guide - Continued**

Problem	Symptom	Probable Cause	Check	Correction
The TABLE UP, TILT UP, and BACK UP functions do not work, but TABLE DOWN, TILT DOWN, and BACK DOWN functions do - Continued.	Motor pump runs when an up function footswitch / switch is depressed, but table top does not move - Continued.	Up functions relief valve is malfunctioning (popping relief too early).	Replace suspect up functions relief valve with known working relief valve.	Replace up functions relief valve. Refer to para 4.9.
		Motor pump is defective.	Replace suspect motor pump with known working motor pump.	Replace motor pump. Refer to para 4.11, 4.12, or 4.13.
		Wire connections loose.	Check all wiring connections from terminal block to motor pump. Use multimeter to check for proper voltage levels.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
	Motor pump does not run when an up function is selected, but does when a down function is selected.	Motor pump is defective	Replace suspect motor pump with known working motor pump.	Replace motor pump. Refer to para 4.11, 4.12, or 4.13.
		Wire connections loose.	Check all wiring connections from terminal block to motor pump.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
		Manual functions relay (CR1) is malfunctioning.	Check to see if manual functions relay (CR1) is energizing when an up function is selected. Also, check to see if there is voltage at terminal 4 of subswitch CR1-A when manual functions relay (CR1) is energized.	If manual functions relay (CR1) will not energize or if subswitch CR1-A does not close when CR1 is energized, then replace manual functions relay (CR1). Refer to para 4.24.
The TABLE DOWN, TILT DOWN, and BACK DOWN functions do not work, but TABLE UP, TILT UP, and BACK UP functions do.	Motor pump runs when a down function footswitch / switch is depressed, but table top does not move.	Down function shuttle valve is malfunctioning.	Check to see if check ball is loose in down function shuttle valve or adjacent elbow (check ball should be held in shuttle valve by metal ring).	Replace down function shuttle valve. Refer to para 4.5 or 4.6.
		Down functions relief valve is malfunctioning (popping relief too early).	Replace suspect down functions relief valve with known working relief valve.	Replace down functions relief valve. Refer to para 4.10.
		Motor pump is defective.	Replace suspect motor pump with known working motor pump.	Replace motor pump. Refer to para 4.11, 4.12, and 4.13.
		Wire connections loose.	Check all wiring connections from terminal block to motor pump.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.

## SECTION II TESTING AND TROUBLESHOOTING

Table 2-1. Troubleshooting Guide - Continued

Problem	Symptom	Probable Cause	Check	Correction
The TABLE DOWN, TILT DOWN, and BACK DOWN functions do not work, but TABLE UP, TILT UP, and BACK UP functions do - Continued.	Motor pump does not run when a down function is selected, but runs when an up function is selected.	Motor pump is defective.	Replace suspect motor pump with known working motor pump.	Replace motor pump. Refer to para 4.11, 4.12, or 4.13.
		Wire connections loose.	Check all wiring connections from terminal block to motor pump.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
		Subswitch CR1-B of manual functions relay (CR1) is malfunctioning - contacts are stuck open .	Check to see if contacts of subswitch N.C. CR1-B are closed when manual function relay (CR1) is not energized. There should be continuity between terminals 2 and 8 of subswitch CR1-B when CR1 is not energized.	If there is no continuity between terminals 2 and 8 of subswitch CR1-B when CR1 is not energized, replace manual function relay (CR1). Refer to para 4.24.
TABLE UP function works, but TABLE DOWN function does not or TABLE DOWN function works but TABLE UP function does not. All other functions work.	Motor pump runs but base cylinder solenoid valve does not energize or vice versa.	TABLE UP / DOWN footswitch(es) are out of adjustment.	Check adjustment of TABLE UP / DOWN footswitches.	Adjust TABLE UP / DOWN footswitches. Refer to para 4.21.
		One of TABLE UP / DOWN footswitches is malfunctioning.	Perform a continuity check on suspect footswitch in ON and OFF positions or replace suspect footswitch with known working footswitch.	Replace footswitch. Refer to para 4.21.
		Wire connection to footswitch is loose.	Check all wiring connections on suspect footswitch.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
BACK UP function works, but BACK DOWN function does not or BACK DOWN function works but BACK UP function does not. All other functions work.	Motor pump does not run and back cylinder solenoid valve does not energize.	BACK UP / DOWN switch is malfunctioning.	See Figure 2-2 (page 2-11) for this check. Perform a continuity check on BACK UP / DOWN switch as follows: Press BACK UP / DOWN switch to DOWN and then check for continuity across contact points A and B. Press BACK UP / DOWN switch to UP and then check for continuity across contact points C and D.	If continuity check fails, replace BACK UP / DOWN switch. Refer to para 4.20.
	Motor pump runs but back cylinder solenoid valve does not energize or vice versa.	Wire connection to BACK UP / DOWN switch is loose.	Check all wiring connections on suspect BACK UP / DOWN switch.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.

## SECTION II TESTING AND TROUBLESHOOTING

**Table 2-1. Troubleshooting Guide - Continued**

Problem	Symptom	Probable Cause	Check	Correction
BACK UP function works, but BACK DOWN function does not or BACK DOWN function works but BACK UP function does not. All other functions work - Continued.	Motor pump runs but back cylinder solenoid valve does not energize or vice versa - Continued.	BACK UP / DOWN switch is malfunctioning.	See Figure 2-2 (page 2-11) for this check. Perform a continuity check on BACK UP / DOWN switch as follows: Press BACK UP / DOWN switch to DOWN and then check for continuity across contact points A and B. Press BACK UP / DOWN switch to UP and then check for continuity across contact points C and D.	If continuity check fails, replace BACK UP / DOWN switch. Refer to para 4.20.
TILT UP function works, but TILT DOWN function does not or TILT DOWN function works but TILT UP function does not. All other functions work.	Motor pump does not run and tilt cylinder solenoid valve does not energize.	TILT UP / DOWN switch is malfunctioning.	See Figure 2-2 (page 2-11) for this check. Perform a continuity check on TILT UP / DOWN switch as follows: Press TILT UP / DOWN switch to DOWN and then check for continuity across contact points A and B. Press TILT UP / DOWN switch to UP and then check for continuity across contact points C and D.	If continuity check fails, replace TILT UP / DOWN switch. Refer to para 4.20.
	Motor pump runs but tilt cylinder solenoid valve does not energize or vice versa.	Wire connection to TILT UP / DOWN switch is loose.	Check all wiring connections on suspect TILT UP / DOWN switch.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
		TILT UP / DOWN switch is malfunctioning.	See Figure 2-2 (page 2-11) for this check. Perform a continuity check on TILT UP / DOWN switch as follows: Press TILT UP / DOWN switch to DOWN and then check for continuity across contact points A and B. Press TILT UP / DOWN switch to UP and then check for continuity across contact points C and D.	If continuity check fails, replace TILT UP / DOWN switch. Refer to para 4.20.
TABLE UP and TABLE DOWN functions do not work. All other functions work.	Motor pump runs when TABLE UP or TABLE DOWN foot pedal is depressed, but table top does not move.	Base cylinder solenoid valve is malfunctioning.	Check to see if base cylinder solenoid valve energizes (audible click) when TABLE UP or TABLE DOWN footswitch is depressed.	Replace base cylinder. Refer to para 4.18.
		Wire running from terminal block to base cylinder solenoid valve is broken or disconnected.	Check continuity of wire and connections.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
	Motor pump does not run when TABLE UP or TABLE DOWN foot pedal is depressed.	White wire which is running to a pole on each footswitch is broken or disconnected.	Check continuity of white wire and connections.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.

## SECTION II TESTING AND TROUBLESHOOTING

Table 2-1. Troubleshooting Guide - Continued

Problem	Symptom	Probable Cause	Check	Correction
BACK UP and BACK DOWN functions do not work. All other functions work.	Motor pump runs when BACK UP or BACK DOWN function is selected, but table top does not move.	Back cylinder solenoid valve is malfunctioning.	Check to see if back cylinder solenoid valve energizes (audible click) when BACK UP or BACK DOWN function is selected.	Replace back cylinder. Refer to para 4.15.
		Wire running from terminal block to back cylinder solenoid valve is broken or disconnected.	Check continuity of wire and connections.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
		Needle valve is plugged or adjusted closed (needle valve is only on some older units).	Check to see if needle valve is out of adjustment.	Adjust or clean needle valve. Refer to para 4.16. If necessary, replace needle valve.
	Motor pump runs when BACK UP or BACK DOWN function is selected, but back section moves too slowly or too quickly.	Needle valve is plugged or adjusted closed (needle valve is only on some older units).	Check to see if needle valve is out of adjustment.	Adjust or clean needle valve. Refer to para 4.16. If necessary, replace needle valve.
TILT UP and TILT DOWN functions do not work. All other functions work.	Motor pump runs when TILT UP or TILT DOWN function is selected, but table top does not move.	Tilt cylinder solenoid valve is malfunctioning.	Check to see if tilt cylinder solenoid valve energizes (audible click) when TILT UP or TILT DOWN function is selected.	Replace tilt cylinder. Refer to para 4.17.
		Wire running from terminal block to tilt cylinder solenoid valve is broken or disconnected.	Check continuity of wire and connections.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
Auto return function does not operate properly.	Nothing happens when the AUTO RETURN "RETURN" switch is pressed.	AUTO RETURN "RETURN" switch is malfunctioning.	Perform continuity check on AUTO RETURN "RETURN" switch. When switch is depressed, there should be continuity.	Replace AUTO RETURN "RETURN" switch. Refer to para 4.19.
		AUTO RETURN "STOP" switch is malfunctioning - stuck open.	Perform continuity check on AUTO RETURN "STOP" switch. When switch is not depressed, there should be continuity.	Replace AUTO RETURN "STOP" switch. Refer to para 4.19.
		Auto return relay (CR2) is malfunctioning - not energizing.	Check to see if auto return relay (CR2) is energizing when AUTO RETURN "RETURN" button is depressed.	If auto return relay (CR2) will not energize, replace auto return relay (CR2). Refer to para 4.24.
		Base down limit switch is tripped.	Chair is already lowered all the way down, tripping limit switch or base down limit switch is out of adjustment, causing base down limit switch to remain tripped or to trip earlier than desired.	Adjust base down limit switch. Refer to para 4.26.
		Tilt down limit switch is tripped.	Chair is already lowered all the way down, tripping limit switch or tilt down limit switch is out of adjustment, causing tilt down limit switch to remain tripped or to trip earlier than desired.	Adjust tilt down limit switch. Refer to para 4.25.

## SECTION II TESTING AND TROUBLESHOOTING

**Table 2-1. Troubleshooting Guide - Continued**

Problem	Symptom	Probable Cause	Check	Correction
Auto return function does not operate properly - Continued.	When the AUTO RETURN "RETURN" switch is pressed, motor pump runs, but table top does not move.	Subswitch CR2-B of auto return relay (CR2) is malfunctioning - contacts are stuck open.	Check to see if contacts of N.O. subswitch CR2-B are closed when auto return relay (CR2) is energized. There should be 115 VAC at terminal 4 of subswitch CR2-B when relay CR2 is energized.	If 115 VAC is not present at terminal 4 of subswitch CR2-B when relay CR2 is energized, replace auto return relay (CR2). Refer to para 4.24.
		Wire connections loose.	Check wire connections. Perform continuity check on wires. Use multimeter to check for proper voltage levels.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.
		Tilt down limit switch is malfunctioning.	When tilt down limit switch is untripped, there should be continuity between terminals 3 and 4 of limit switch.	If there is no continuity between terminals 3 and 4 of tilt down limit switch when switch is in untripped state, replace tilt down limit switch. Refer to para 4.25.
		Tilt down limit switch is malfunctioning.	When tilt down limit switch is tripped, there should be continuity between terminals 5 and 6 of limit switch.	If there is no continuity between terminals 5 and 6 of tilt down limit switch when switch is tripped, replace tilt down limit switch. Refer to para 4.25.
	When the AUTO RETURN "RETURN" switch is pressed, tilt or base cylinder solenoid valve energizes (audible click), but motor pump does not run.	Subswitch CR2-C of auto return relay (CR2) is malfunctioning - contacts are stuck open.	Check to see if contacts of N.O. subswitch CR2-C are closed when auto return relay (CR2) is energized. There should be 115 VAC at terminal 6 of subswitch CR2-C when CR2 is energized.	If 115 VAC is not present at terminal 6 of subswitch CR2-C when relay CR2 is energized, replace auto return relay (CR2). Refer to para 4.24.
Auto return function stops when operator releases the AUTO RETURN "RETURN" button.		One of the two N.C. AUTO RETURN "STOP" switches are stuck open.	Perform continuity check on N.C. AUTO RETURN "STOP" switch. Should be continuity across switch when switch is not depressed.	Replace AUTO RETURN "STOP" switch. Refer to para 4.19.
		N.O. subswitch CR2-A of auto return relay (CR2) does not close.	Perform check on N.O. subswitch CR2-A. There should be 115 VAC at terminal 8 of auto return relay (CR2), when AUTO RETURN "RETURN" button is pressed.	If 115 VAC is not present at terminal 8 of subswitch CR2-A when relay CR2 is energized, replace auto return relay (CR2). Refer to para 4.24.
		Wire connections loose.	Check wire connections to terminals 5 and 8 of auto return relay (CR2). Perform continuity check on wires. Use multimeter to check for proper voltage levels.	Clean any dirty connections. Tighten any loose connections. Replace any damaged connections.

## SECTION II TESTING AND TROUBLESHOOTING


Table 2-1. Troubleshooting Guide - Continued

Problem	Symptom	Probable Cause	Check	Correction
Auto return function does not operate properly - Continued.	Motor pump continues to run after table top is completely lowered.	Base down limit switch is out of adjustment.	Check adjustment of base down limit switch.	Adjust base down limit switch. Refer to para 4.26.
		Tilt down limit switch is malfunctioning.	See Figure 5-1 for this check. There should not be continuity between terminals 7 and 8 of tilt down limit switch when limit switch is tripped.	Replace tilt down limit switch. Refer to para 4.25.
		Base down limit switch is malfunctioning.	See Figure 5-1 for this check. There should not be continuity between terminals 7 and 8 of base down limit switch when switch when limit switch is tripped.	Replace base down limit switch. Refer to para 4.26.
		Auto return relay (CR2) is malfunctioning - stuck in energized position.	See Figure 5-1 for this check. Perform continuity check on all subswitch contacts.	Replace auto return relay (CR2). Refer to para 4.24.
	Auto return function does not stop when one of the AUTO RETURN "STOP" buttons are pressed.	The AUTO RETURN "STOP" button is malfunctioning - contacts are broken open.	Perform continuity check on AUTO RETURN "STOP" button.	Replace AUTO RETURN "STOP" button. Refer to para 4.19.
		N.O. subswitch CR2-A of auto return relay (CR2) is stuck closed.	Perform check on N.O. subswitch CR2-A. There should not be 115 VAC at terminal 8 of auto return relay (CR2) after a STOP button has been pressed.	If 115 VAC is present at terminal 8 of subswitch CR2-A after STOP button has been pressed, replace auto return relay (CR2). Refer to para 4.24.
Any of the three functions drift by themselves.	Chair functions properly otherwise.	A cylinder solenoid valve is stuck in open position or is malfunctioning.	Try to flush foreign objects out of cylinder solenoid valve by running oil through cylinder in both directions ten times.	Replace malfunctioning cylinder assembly.
		A footswitch / switch is malfunctioning and holding cylinder solenoid valve in the open position.	Perform continuity check on suspect function's footswitch / switch.	Replace footswitch or switch.
Back section of table top may be lifted by hand or tilt function may drift by itself.	Chair functions properly otherwise.	Anti-cavitation solenoid valve is malfunctioning.	Replace suspect anti-cavitation solenoid valve with known working anti-cavitation solenoid valve.	Replace anti-cavitation solenoid valve. Refer to para 4.7 or 4.8.

## SECTION II TESTING AND TROUBLESHOOTING

**Table 2-1. Troubleshooting Guide - Continued**

Problem	Symptom	Probable Cause	Check	Correction
Chair moves fine for light patient, but will not move or moves slowly for very heavy patient.	Occurs for both the up and down functions.	Hydraulic system is low on mineral oil.	Check oil level in reservoir.	If necessary, add oil to reservoir. Refer to para 4.3.
		Up functions and down functions relief valves are malfunctioning.	Replace suspect relief valves with known working relief valves.	Replace up functions and down functions relief valves. Refer to paras 4.9 and 4.10.
	Occurs for up functions only.	Up functions relief valve is malfunctioning.	Replace suspect up functions relief valve with known working relief valve.	Replace up functions relief valve. Refer to para 4.9.
	Occurs for down functions only.	Down function relief valve is malfunctioning.	Replace suspect down functions relief valve with known working relief valve.	Replace down functions relief valve. Refer to para 4.10.
Excessive sideways play of chair top.	Chair is not stable and can be moved from side to side.	Chain assemblies are loose.	Check tension of chain assemblies.	Adjust tension of chain assemblies. Refer to para 4.27.
		Base slide assembly is worn or deformed.	Check condition of base slide assembly.	Replace base slide assembly. Refer to para 4.28.

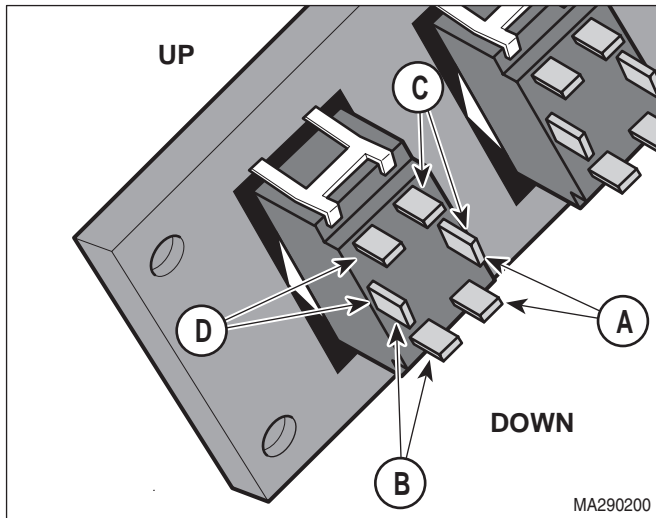

**Figure 2-2. Continuity Check of Switch**





**SECTION III  
SCHEDULED MAINTENANCE**

**3.1 Scheduled Maintenance**

Table 3-1 is a Scheduled Maintenance Chart which lists the inspections and services that should be

performed periodically on the chair. These inspections and services should be performed as often as indicated in the chart.

**Table 3-1. Scheduled Maintenance Chart**

Interval	Inspection or Service	What to Do
Semi-annually	Obvious damage	Visually check condition of chair for obvious damage such as: cracks in components, missing components, dents in components, leaking oil, or any other visible damage which would cause chair to be unsafe to operate or would compromise its performance. Repair chair as necessary.
	Fasteners / hardware	Check chair for missing or loose fasteners / hardware. Replace any missing hardware and tighten any loose hardware as necessary.
	Warning and instructional decals	Check for missing or illegible decals. Replace decals as necessary.
	Pivot points / moving parts / accessories	Lubricate all exposed pivot points, moving parts, and accessories with silicone based lubricant.
	Hydraulic hoses and fittings	Check all hydraulic hoses and fittings for leaks. Replace any components causing leaks. Replace any hoses which have kinks, cuts, holes, or other damage.
	Foot control	Check that foot control works correctly. Make sure foot pedals contact switches properly. Adjust foot switches if necessary. Refer to para 4.21.
	Hydraulic functions	Check that all three functions operate properly. If not, refer to the Troubleshooting Guide to determine the cause of the problem. Clean or replace components as necessary.
	Cylinders	Inspect all cylinders for signs of internal leaking or for weak operation. Replace cylinders as necessary.
	Drift in chair	Check each cylinder to see if it drifts. Replace cylinder if necessary.
	Oil level	Check oil level in motor pump. Add oil to motor pump if necessary. Refer to para 4.3.
	Needle valve (on some older units only)	Check speed of back cylinder. The back cylinder should extend or retract fully in 9 +/-1 seconds. Adjust needle valve as necessary. Refer to para 4.16.
	Excessive sideways play of chair top	Check that chair top does not have excessive side play. Adjust chain assembly if necessary. Refer to para 4.27.
	Anti-cavitation solenoid valve	Check to see if back section may be lifted by hand or if the tilt function drifts by itself. If so, replace anti-cavitation solenoid valve. Refer to para 4.7 or 4.8.
	Auto return function	Check both AUTO RETURN "RETURN" buttons and both AUTO RETURN "STOP" buttons for proper operation. If necessary, replace buttons. Refer to para 4.19. Check that the auto return function operates properly.
	Upholstery	Check all upholstery for rips, tears, or excessive wear. Replace cushions as necessary.
	Reclining arm	Check reclining arm for proper operation. Make sure retaining plunger hold reclining arm in position when used. Repair as necessary.
	Foot section brake	Check to see if brake for foot section assembly is locking and releasing correctly. Replace brake if necessary.
	Accessories	Check that all accessories have all of their components and that they function properly. If necessary, repair or replace the accessory.
Operational Test	Perform an Operational Test to determine if the chair is operating within its specifications (Refer to para 2.1). Replace or adjust any malfunctioning components.	



**SECTION IV  
MAINTENANCE / SERVICE INSTRUCTIONS**

**4.1 Introduction**



**WARNING**

Refer to the Operator Manual for complete instructions on operating the chair. Failure to do so could result in personal injury.

**NOTE**

Perform an operational test on the chair after the repair is completed to confirm the repair was properly made and that *all* malfunctions were repaired.

The following paragraphs contain removal, installation, repair, and adjustment procedures for the chair.

**4.2 Motor Cover Assembly Removal / Installation**

**A. Removal**




**WARNING**

Always disconnect the power cord from the wall outlet before removing any of the chair's covers / shrouds or making any repairs to prevent the possibility of electrical shock. Failure to comply with these instructions could result in severe personal injury or death.

- (1) Unplug power cord from wall outlet.
- (2) Remove six screws (1, Figure 4-1) and motor cover assembly (2) from back outer shroud (3).

**B. Installation**

- (1) Install motor cover assembly (2) against back outer shroud (3) and secure with six screws (1), making sure top edge of motor cover assembly is inserted behind lip of back outer shroud.
- (2) Plug power cord into wall outlet.

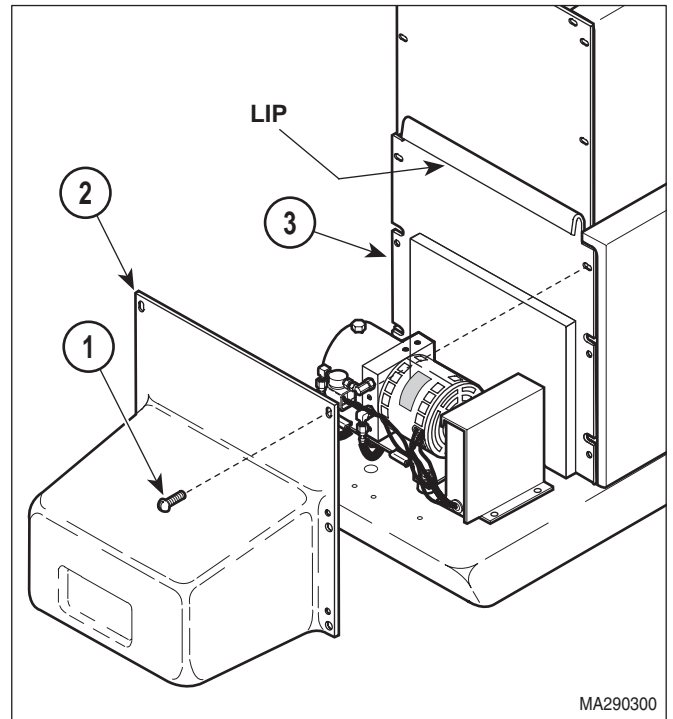

**Figure 4-1. Motor Cover Assembly Removal / Installation**

**4.3 Checking / Adding Oil To Motor Pump**

**A. Checking / Adding Oil**

- (1) Move the TABLE DOWN, BACK DOWN, and TILT DOWN functions all the way down.
- (2) Remove motor cover assembly (Refer to para 4.2).
- (3) Remove filler cap (1, Figure 4-2) from motor pump (2).
- (4) Remove screw (3) and gasket (4) from motor pump (2).
- (5) Check oil level. If oil level in reservoir is not even with oil level check hole, oil must be added.

## SECTION IV MAINTENANCE / SERVICE

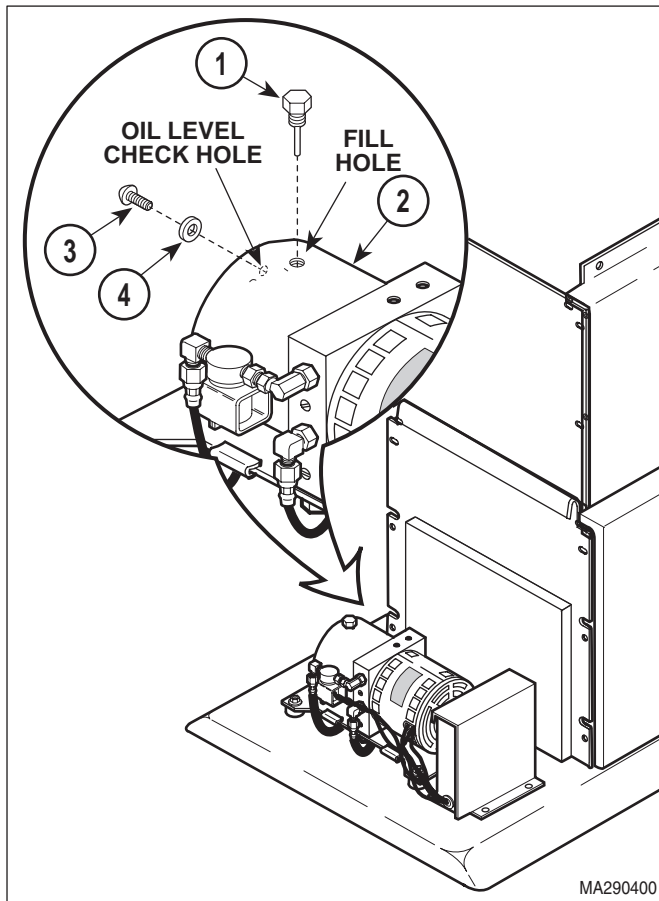


Figure 4-2. Checking / Adding Oil To Motor Pump

- (6) Place a rag under oil level check hole.



### EQUIPMENT ALERT

Hydraulic system is designed for use with light grade mineral oil only. Failure to comply could result in hydraulic system failure.

- (7) Add oil to fill hole until oil starts to run out of oil level check hole.
- (8) Install gasket (4) and screw (3) on motor pump (2).
- (9) Install filler cap (1) on motor pump (2).
- (10) Move each function to its up and down limit several times. Then repeat steps 1 thru 9.
- (11) Install motor cover assembly (Refer to para 4.2).
- (12) Dispose of used oil in accordance with local regulations.

## 4.4 Up Functions Shuttle Valve Removal / Installation

### A. Removal



### WARNING

Always disconnect the power cord from the wall outlet before removing any of the chair's covers / shrouds or making any repairs to prevent the possibility of electrical shock. Failure to comply with these instructions could result in severe personal injury or death.

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover (Refer to para 4.2).


### NOTE

The up functions shuttle valve is lower than the oil level in the motor pump reservoir and oil will flow out of the up functions shuttle valve once the hose assembly is disconnected.

- (3) Place drain pan under up functions shuttle valve (1, Figure 4-3).
- (4) Disconnect hose assembly (2) from elbow of up functions shuttle valve (1).
- (5) Remove up functions shuttle valve (1) from motor pump (3).

### B. Installation

- (1) Coat two o-rings on up functions shuttle valve (1) with mineral oil or vaseline.
- (2) Install up functions shuttle valve (1) in motor pump (3).
- (3) Connect hose assembly (2) to elbow of up functions shuttle valve (1).
- (4) If necessary, add oil to motor pump (Refer to para 4.3).
- (5) Install motor cover assembly (Refer to para 4.2).

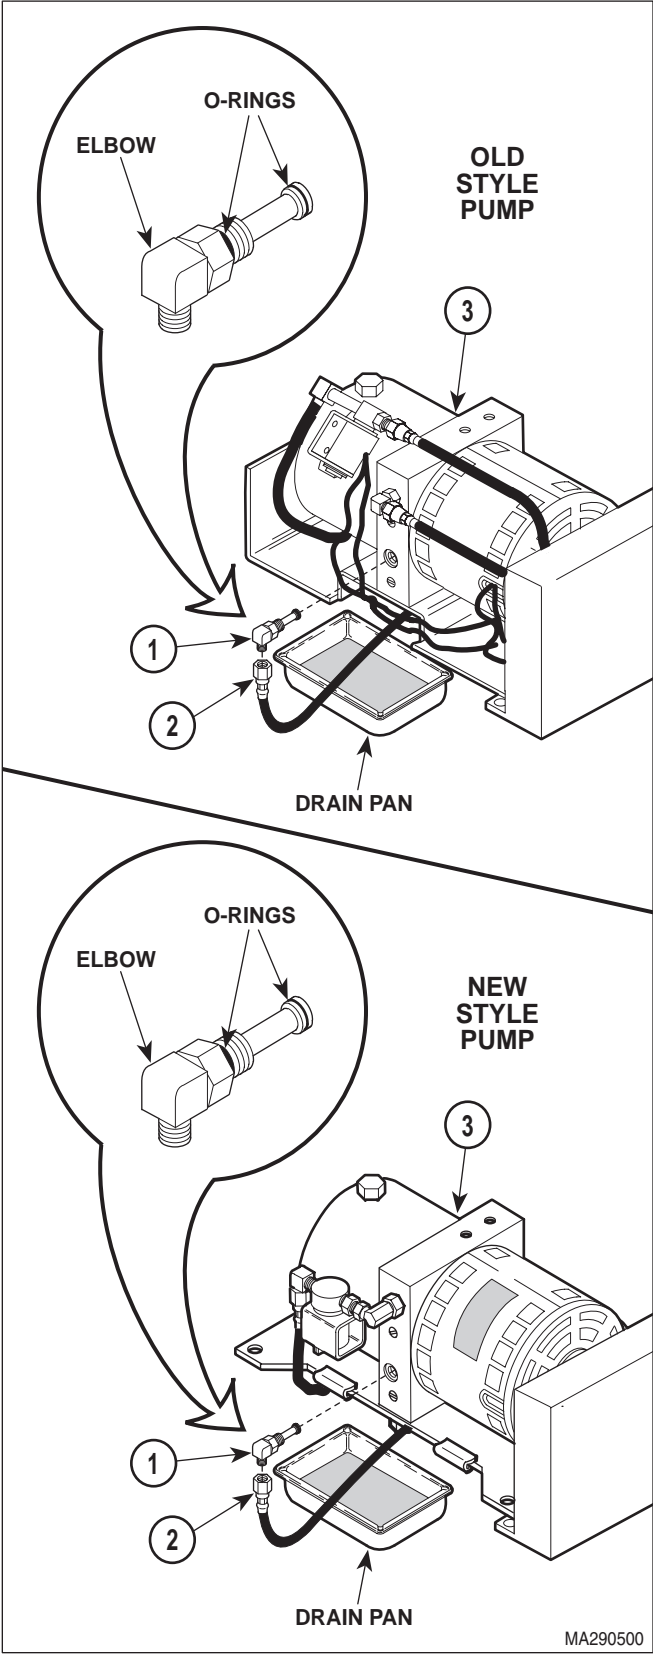


**Figure 4-3. Up Functions Shuttle Valve Removal / Installation**

- (6) Plug power cord into wall outlet.
- (7) Dispose of used oil in accordance with local regulations.

**4.5 Down Functions Shuttle Valve Removal / Installation (Units With Old Style Anti-Cavitation Solenoid Valve)**

**A. Removal**

**WARNING**  

**Always disconnect the power cord from the wall outlet before removing any of the chair's covers / shrouds or making any repairs to prevent the possibility of electrical shock. Failure to comply with these instructions could result in severe personal injury or death.**

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).


**NOTE**  
 The down functions shuttle valve is slightly lower than the oil level in the motor pump reservoir and oil will flow out of the down functions shuttle valve once the hose assembly is disconnected.

- (3) Place rags or drain pan under down functions shuttle valve (1, Figure 4-4).
- (4) Disconnect hose assembly (2) from elbow of down functions shuttle valve (1).
- (5) Remove down functions shuttle valve (1) from motor pump (3).

**B. Installation**

- (1) Coat two o-rings on down functions shuttle valve (1) with mineral oil or vaseline.
- (2) Install down functions shuttle valve (1) in motor pump (3).

## SECTION IV MAINTENANCE / SERVICE

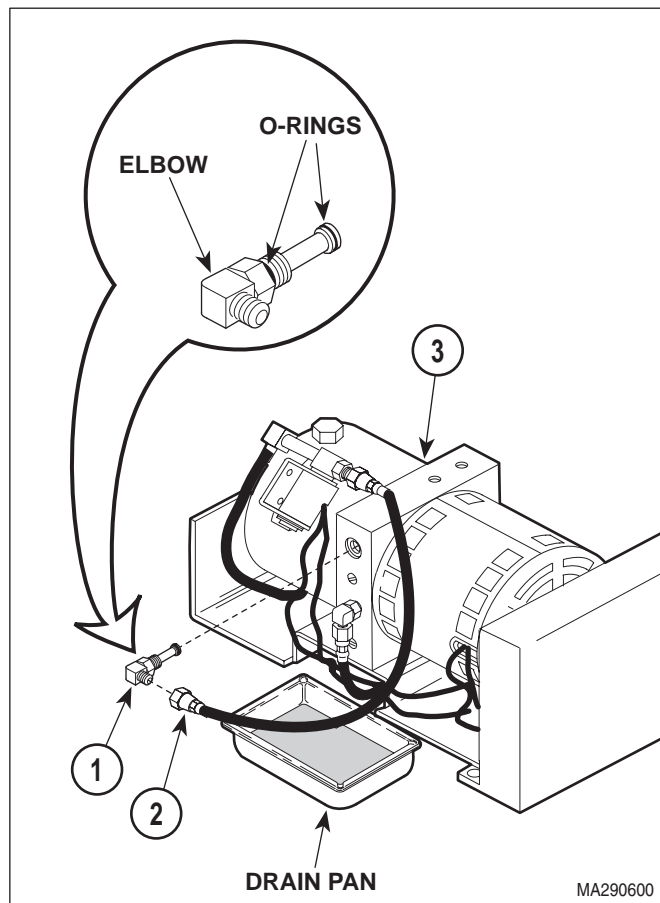

**Figure 4-4. Down Functions Shuttle Valve Removal / Installation**

- (3) Connect hose assembly (2) to elbow of down functions shuttle valve (1).
- (4) If necessary, add oil to motor pump (Refer to para 4.3).
- (5) Install motor cover assembly (Refer to para 4.2).
- (6) Plug power cord into wall outlet.
- (7) Dispose of used oil in accordance with local regulations.

### 4.6 Down Functions Shuttle Valve Removal / Installation (Units With New Style Anti-Cavitation Solenoid Valve)

#### A. Removal



#### WARNING

Always disconnect the power cord from the wall outlet before removing any of the chair's covers / shrouds or making any repairs to prevent the possibility of electrical shock. Failure to comply with these instructions could result in severe personal injury or death.

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).

#### NOTE

The down functions shuttle valve is slightly lower than the oil level in the motor pump reservoir and oil will flow out of the down functions shuttle valve once the hose assembly is disconnected.


- (3) Place rags or drain pan under down functions shuttle valve (1, Figure 4-5).
- (4) Using a wrench to hold male connector (2) stationary, loosen jam nut of elbow (3). Disconnect elbow from male connector.
- (5) Remove elbow (3) from down function shuttle valve (1).
- (6) Remove down functions shuttle valve (1) from motor pump (4).

#### B. Installation

#### NOTE

The down functions shuttle valve is sent from factory with an elbow installed on it. Remove it per step 1.

- (1) Remove elbow from down function shuttle valve (1). Discard elbow.

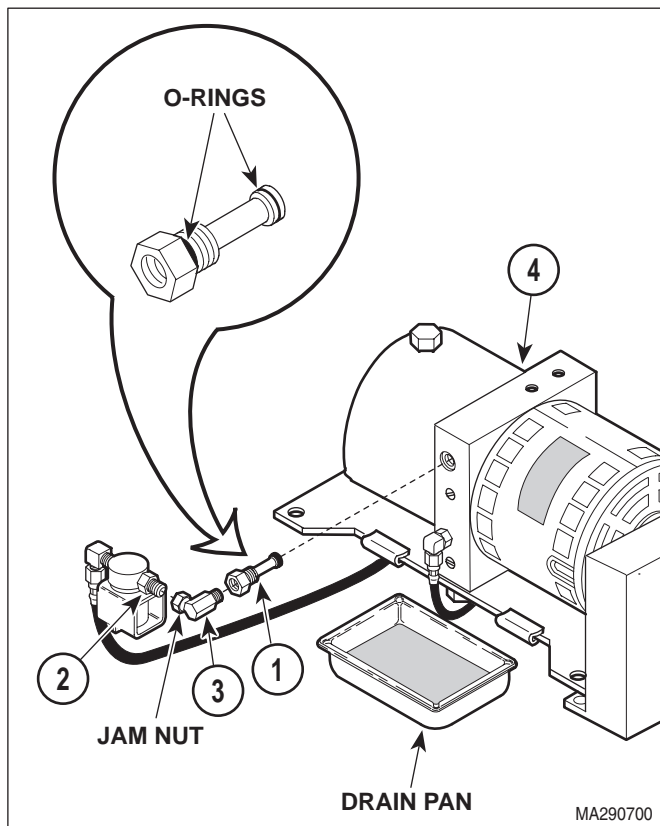

**Figure 4-5 Down Functions Shuttle Valve Removal / Installation**

- (2) Coat two o-rings on down functions shuttle valve (1) with mineral oil or vaseline.
- (3) Install down functions shuttle valve (1) in motor pump (4).
- (4) Coat threads of male connector (2) and elbow (3) with pipe thread tape or sealant.
- (5) Install elbow (3) on down functions shuttle valve (1).
- (6) Connect elbow (3) to male connector (2) and secure by tightening jam nut.
- (7) If necessary, add oil to motor pump (Refer to para 4.3).
- (8) Install motor cover assembly (Refer to para 4.2).
- (9) Plug power cord into wall outlet.

- (10) Dispose of used oil in accordance with local regulations.

#### **4.7 Anti-Cavitation Solenoid Valve Removal / Installation (Units With Old Style Anti-Cavitation Solenoid Valve)**

##### **A. Removal**

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).

##### **NOTE**


Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (3) Remove two or six screws (1, Figure 4-6) and control cover (2) from control panel (3).
- (4) Loosen two terminal screws; then tag and disconnect anti-cavitation solenoid valve wires (4) from terminal block (5).
- (5) Pull anti-cavitation solenoid valve wires (4) out thru wire hole.
- (6) Disconnect hose assembly (6) from male connector (7).
- (7) Disconnect hose assembly (8) from male elbow (9).
- (8) Remove two screws (10), lockwashers (11), and anti-cavitation solenoid valve (12) from bracket (13).
- (9) Remove male connector (7) and male elbow (9) from anti-cavitation solenoid valve (12).

##### **B. Installation**

- (1) After November 1, 1993, new style anti-cavitation solenoid valves will be shipped instead of the present style, which will not mount to the motor pump of the unit you are repairing. In order to use the new style anti-cavitation solenoid valve, disassemble components of new style anti-cavitation valve and reinstall them on the bracket of old style anti-cavitation solenoid valve. To perform this procedure, refer to para 4.31.

## SECTION IV MAINTENANCE / SERVICE

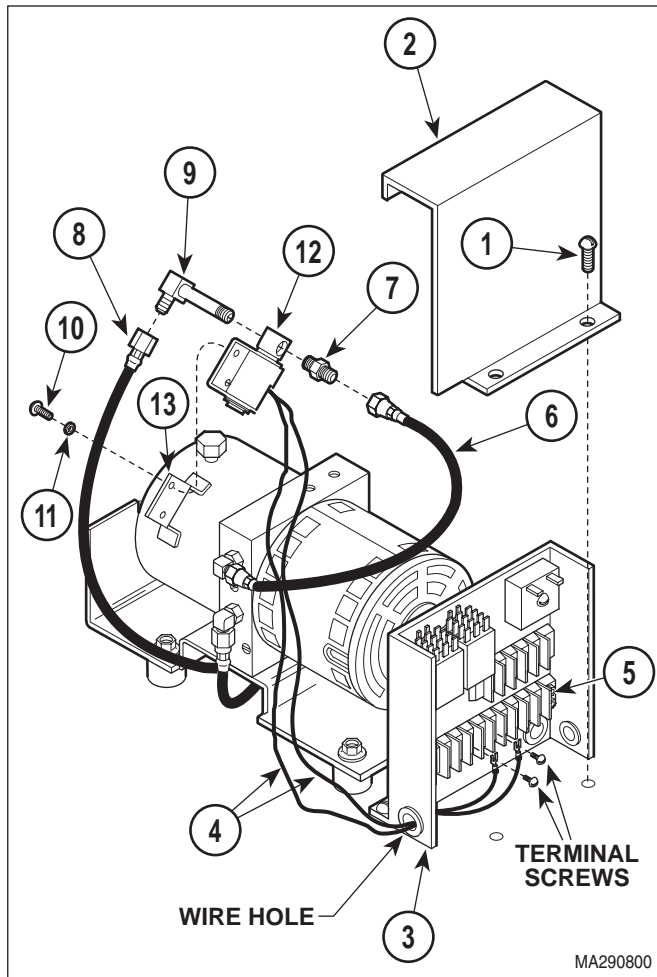

**Figure 4-6. Anti-cavitation Solenoid Valve Removal / Installation**



### EQUIPMENT ALERT

Do not coat last two threads of male elbow and male connector with teflon tape or sealant. Otherwise, little particles of the tape / sealant can break loose and can contaminate hydraulic system.

- (2) Coat threads of male elbow (9) and male connector (7) with pipe thread tape or sealant.
- (3) Install male elbow (9) and male connector (7) on anti-cavitation solenoid valve (12).
- (4) Install anti-cavitation solenoid valve (12) on bracket (13) and secure with two lockwashers (11) and screws (10).

- (5) Connect hose assembly (8) to male elbow (9).
- (6) Connect hose assembly (6) to male connector (7).
- (7) Feed two anti-cavitation solenoid valve wires (4) thru wire hole.
- (8) Connect two anti-cavitation solenoid valve wires (4) to terminal block (5) and secure by tightening two terminal screws.
- (9) Install control cover (2) on control panel (3) and secure with two or six screws (1).
- (10) Install motor cover assembly (Refer to para 4.2).
- (11) Plug power cord into wall outlet.

### 4.8 Anti-Cavitation Solenoid Valve Removal / Installation (Units With New Style Anti-Cavitation Solenoid Valve)

#### A. Removal


- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).

#### NOTE

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (3) Remove two or six screws (1, Figure 4-7) and control cover (2) from control panel (3).
- (4) Loosen two terminal screws; then tag and disconnect anti-cavitation solenoid valve wires (4) from terminal block (5).
- (5) Pull anti-cavitation solenoid valve wires (4) out thru wire hole.
- (6) Disconnect hose assembly (6) from elbow (7).
- (7) Using a wrench to hold male connector (8) stationary, loosen jam nut of elbow (9). Disconnect male connector from elbow.



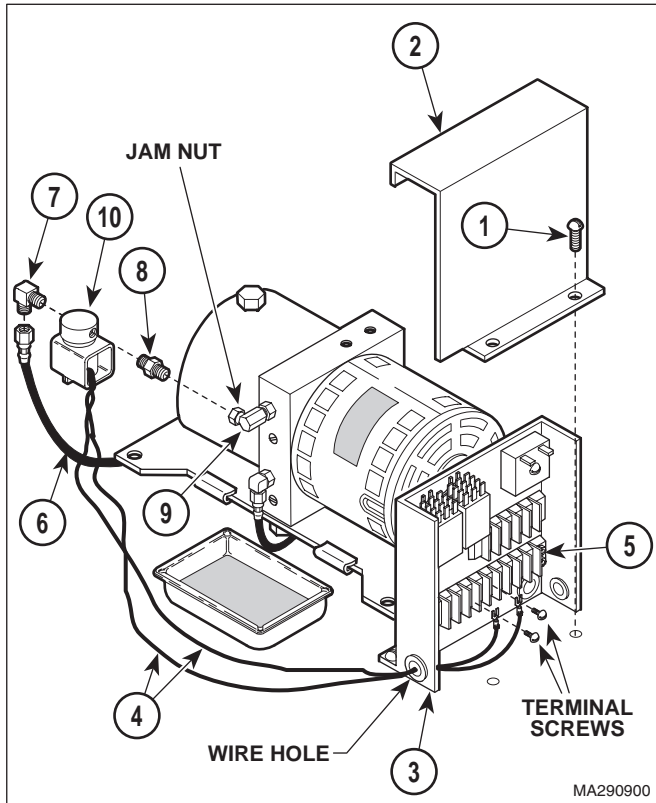

**Figure 4-7 Anti-cavitation Solenoid Valve Removal / Installation**

(8) Remove elbow (7) and male connector (8) from anti-cavitation solenoid valve (10).

**B. Installation**



**EQUIPMENT ALERT**

Do not coat last two threads of elbow (7) and male connector (8) with teflon tape or sealant. Otherwise, little particles of the tape / sealant can break loose and can contaminate hydraulic system.

- (1) Coat threads of elbow (7) and male connector (8) with pipe thread tape or sealant.
- (2) Install elbow (7) and male connector (8) on anti-cavitation solenoid valve (10).
- (3) Connect hose assembly (6) to elbow (7).
- (4) Coat threads of male connector (8) with pipe thread tape or sealant.

- (5) Connect elbow (9) to male connector (8) and secure by tightening jam nut.
- (6) Feed two anti-cavitation solenoid valve wires (4) thru wire hole.
- (7) Connect two anti-cavitation solenoid valve wires (4) to terminal block (5) and secure by tightening two terminal screws.
- (8) Install control cover (2) on control panel (3) and secure with two or six screws (1).
- (9) Install motor cover assembly (Refer to para 4.2).
- (10) Plug power cord into wall outlet.

**4.9 Up Functions Relief Valve Removal / Installation**

**A. Removal**

- (1) If possible, raise TABLE UP function all the way up.
- (2) Unplug power cord from wall outlet.
- (3) Remove motor cover assembly (Refer to para 4.2).
- (4) Remove four screws (1, Figure 4-8) and back outer shroud (2) from left and right hand outer shrouds (3).

**NOTE**


The back inner shroud must be removed if it will obstruct removal of up functions relief valve.

- (5) If necessary, remove eight screws (4) and back inner shroud (5) from left and right hand inner shrouds (6).

**NOTE**

Oil will flow out of relief valve port when up functions relief valve is removed. Either have the new up functions relief valve ready to install or place a drain pan under relief valve port to catch oil.

## SECTION IV MAINTENANCE / SERVICE

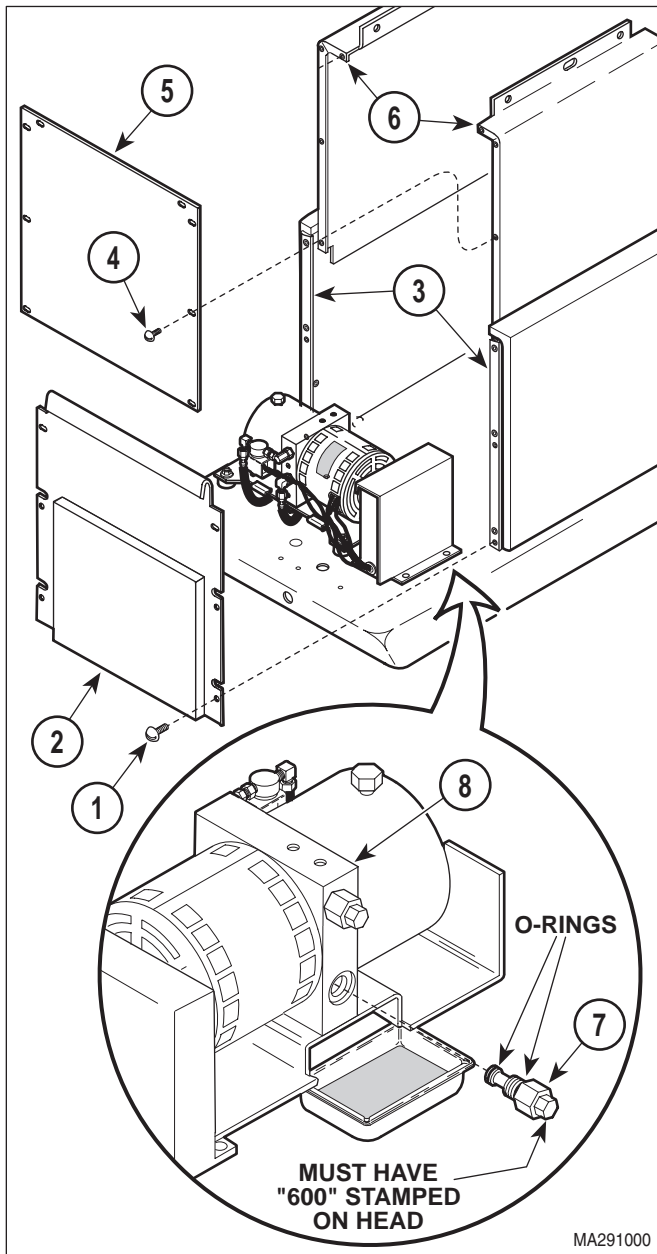

**Figure 4-8. Up Functions Relief Valve Removal / Installation**

- (6) Remove up functions relief valve (7) from motor pump (8).

### B. Installation

- (1) Coat two o-rings on up functions relief valve (7) with mineral oil or vaseline.



#### **EQUIPMENT ALERT**


Make sure relief valve has "600" stamped on its hex head; it *must not* be stamped "L2". Failure to install proper relief valve will result in faulty table performance.

- (2) Install up functions relief valve (7) in motor pump (8).
- (3) If removed, install back inner shroud (5) on left and right inner shrouds (6) and secure with eight screws (4).
- (4) Install back outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (5) If necessary, add oil to motor pump (Refer to para 4.3).
- (6) Install motor cover assembly (Refer to para 4.2).
- (7) Plug power cord into wall outlet.
- (8) Dispose of used oil in accordance with local regulations.

### 4.10 Down Functions Relief Valve Removal / Installation

#### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).
- (3) Remove four screws (1, Figure 4-9) and back outer shroud (2) from left and right hand outer shrouds (3).

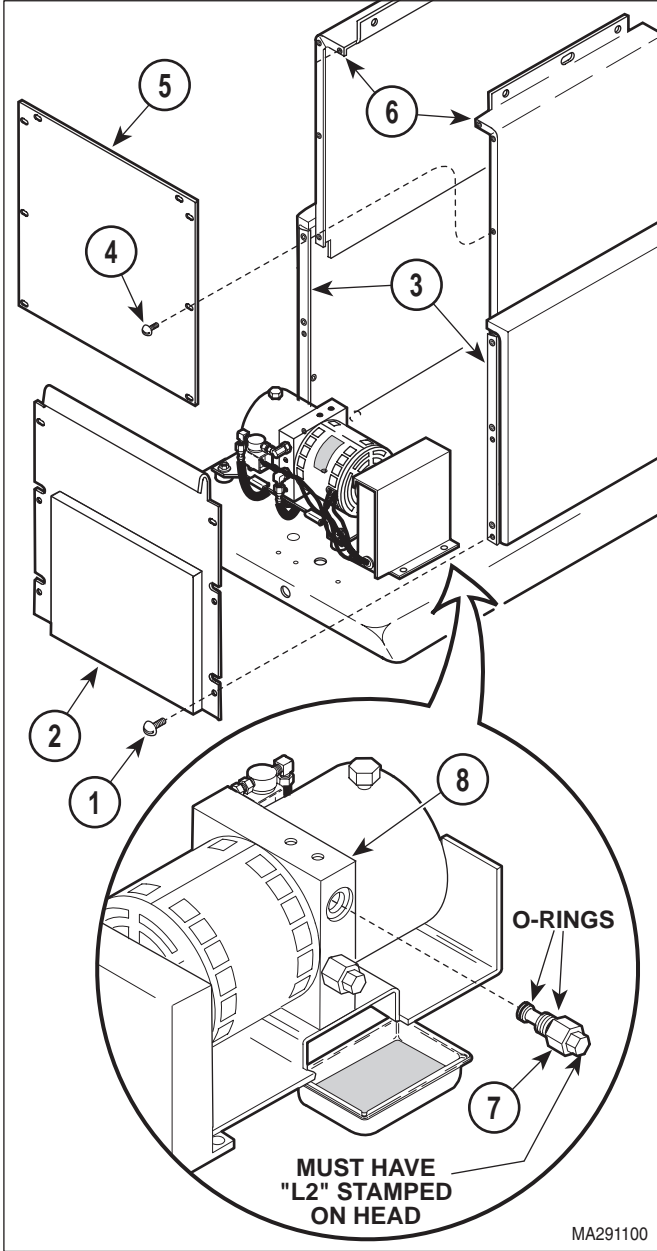

**Figure 4-9. Down Functions Relief Valve Removal / Installation**

**NOTE**

The back inner shroud must be removed if it will obstruct removal of down functions relief valve.

- (4) If necessary, remove eight screws (4) and back inner shroud (5) from left and right hand inner shrouds (6).

**NOTE**

Oil will flow out of relief valve port when down functions relief valve is removed. Either have the new down functions relief valve ready to install or place a drain pan under relief valve port to catch oil.

- (5) Remove down functions relief valve (7) from motor pump (8).

**B. Installation**

- (1) Coat two o-rings on down functions relief valve (7) with mineral oil or vaseline.



**EQUIPMENT ALERT**

Make sure relief valve has "L2" stamped on its hex head; it *must not* be stamped "600". Failure to install proper relief valve will result in faulty table performance.

- (2) Install down functions relief valve (7) in motor pump (8).
- (3) If removed, install back inner shroud (5) on left and right inner shrouds (6) and secure with eight screws (4).
- (4) Install back outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (5) If necessary, add oil to motor pump (Refer to para 4.3).
- (6) Install motor cover (Refer to para 4.2).
- (7) Plug power cord into wall outlet.
- (8) Dispose of used oil in accordance with local regulations.

## SECTION IV MAINTENANCE / SERVICE

### 4.11 Motor Pump Assembly - Complete Removal / Installation

#### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover (Refer to para 4.2).
- (3) Remove four screws (1, Figure 4-10) and back outer shroud (2) from left and right hand outer shrouds (3).

#### NOTE

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (4) Remove two or six screws (4) and control cover (5) from control panel (6).
- (5) Loosen three terminal screws; then tag and disconnect three motor pump wires (7) from terminal block (8).
- (6) Pull motor pump wires (7) out thru wire hole.
- (7) Loosen two terminal screws; then tag and disconnect anti-cavitation solenoid valve wires (9) from terminal block (8).
- (8) Pull anti-cavitation solenoid valve wires (9) out thru wire hole.
- (9) Remove four nuts (10) from four motor mounts (11).
- (10) Disconnect hose assembly (12) from male elbow (13).
- (11) Place a drain pan under elbow (14).
- (12) Disconnect hose assembly (15) from elbow (14). Allow oil to drain into drain pan.
- (13) Remove motor pump assembly (16) from four motor mounts (11).

#### B. Installation


- (1) Install motor pump assembly (16) on four motor mounts (11) and secure with four nuts (10).

- (2) Connect hose assembly (15) to elbow (14).
- (3) Connect hose assembly (12) to male elbow (13).
- (4) Feed two anti-cavitation solenoid valve wires (9) thru wire hole.
- (5) Connect two anti-cavitation solenoid valve wires (9) to terminal block (8) and secure by tightening two terminal screws.
- (6) Feed three motor pump wires (7) thru wire hole.
- (7) Connect three motor pump wires (7) to terminal block (8) and secure by tightening three terminal screws.
- (8) Install control cover (5) on control panel (6) and secure with two or six screws (4).
- (9) Install back outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (10) Add oil to motor pump (Refer to para 4.3).
- (11) Install motor cover assembly (Refer to para 4.2).
- (12) Plug power cord into wall outlet.
- (13) Dispose of used oil in accordance with local regulations.

### 4.12 Motor Pump Removal / Installation (Units With Old Style Anti-Cavitation Solenoid Valve)

#### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove motor pump assembly - Complete (Refer to para 4.11).
- (3) Remove filler cap and drain any remaining oil into drain pan (See Figure 4-11).

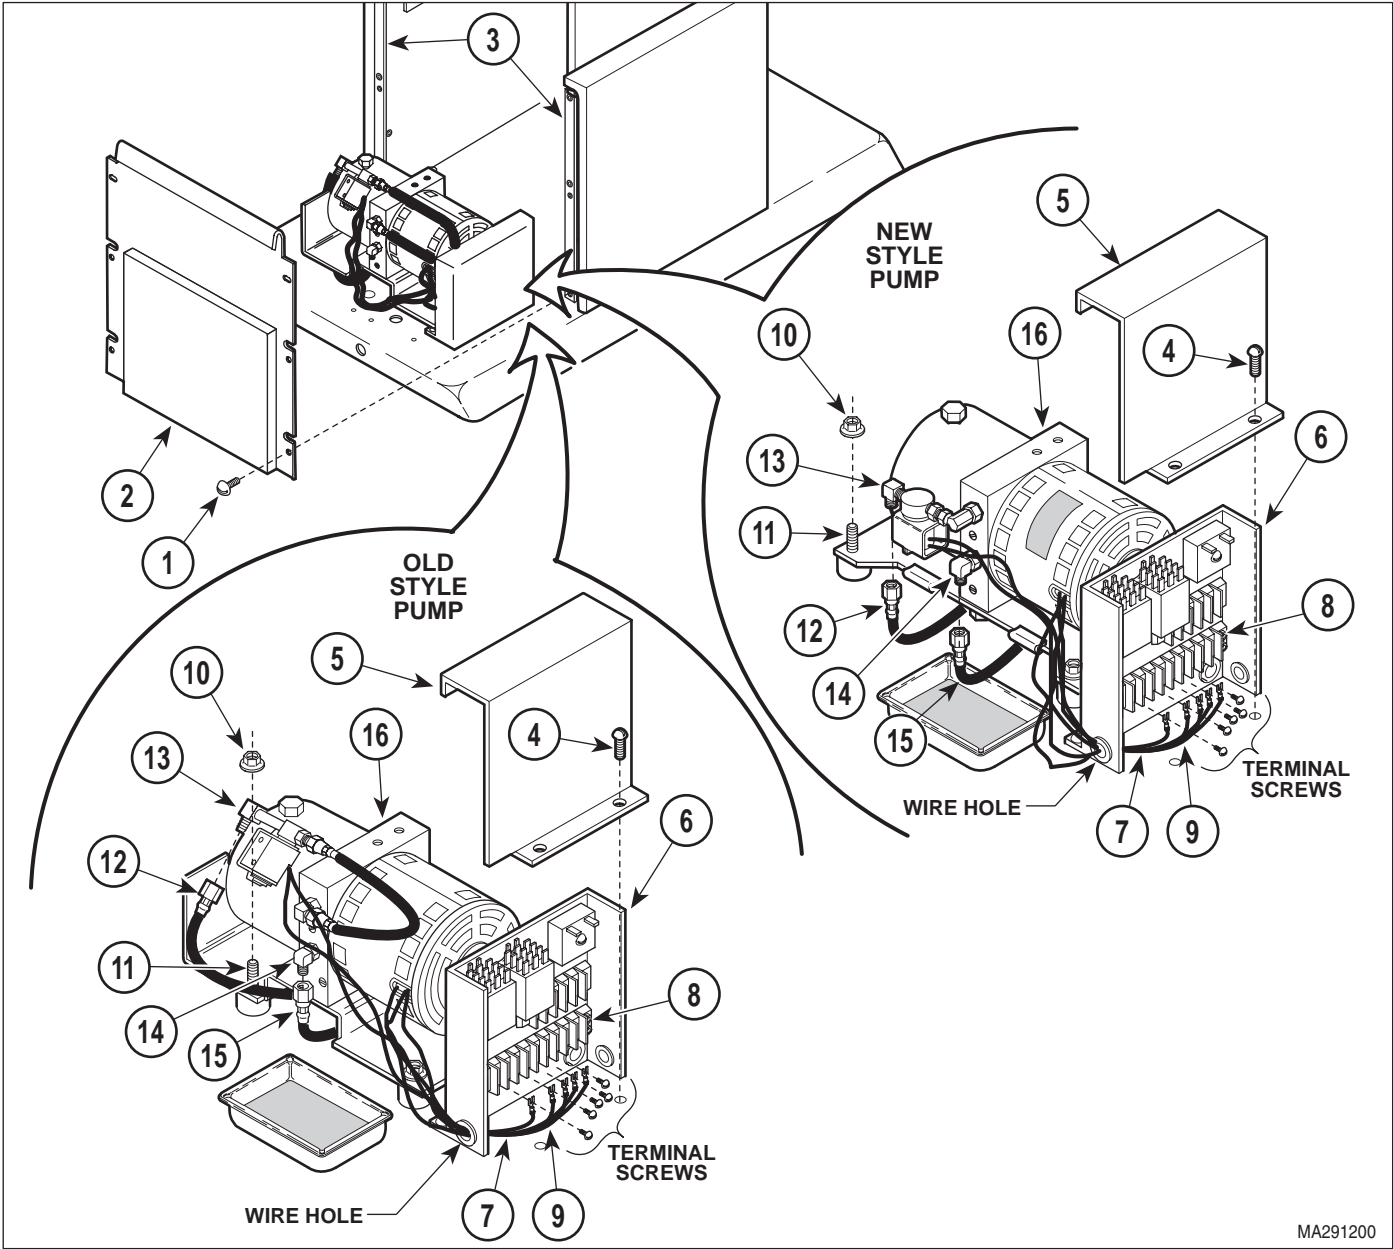


MA291200

**Figure 4-10. Motor Pump Assembly - Complete Removal / Installation**


- (4) Disconnect hose assembly (1, Figure 4-11) from elbow of down functions shuttle valve (2).
  - (5) Remove two screws (3), lockwashers (4), and anti-cavitation solenoid valve assembly (5) from bracket.
  - (6) Remove down functions shuttle valve (2) and up functions shuttle valve (6) from motor pump (7).
  - (7) Loosen outer jam nut (8).
  - (8) Remove two screws (9), lockwashers (10), and motor base (11) from motor pump (7).
- B. Installation**
- (1) Install motor base (11) on motor pump (7) and secure with two lockwashers (10) and screws (9).

## SECTION IV MAINTENANCE / SERVICE

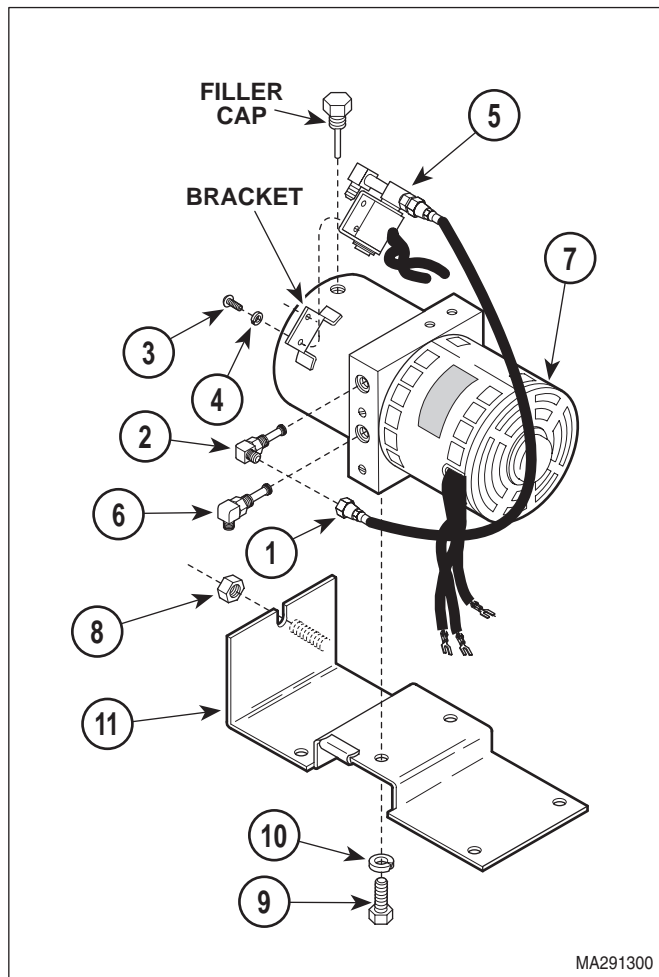

**Figure 4-11. Motor Pump Removal / Installation**

- (2) Tighten outer jam nut (8).
  - (3) Coat o-rings of up functions shuttle valve (4) and down functions shuttle valve (2) with mineral oil or vaseline.
  - (4) Install up functions shuttle valve (6) and down functions shuttle valve (2) on motor pump (7).
  - (5) Install anti-cavitation solenoid valve assembly (5) on bracket and secure with two lockwashers (4) and screws (3).
  - (6) Connect hose assembly (1) to elbow of down functions shuttle valve (2).
  - (7) Install motor pump assembly (Refer to para 4.11).
  - (8) Plug power cord into wall outlet.
- ### 4.13 Motor Pump Removal / Installation (Units With New Style Anti-Cavitation Solenoid Valve)
- #### A. Removal
- (1) Unplug power cord from wall outlet.
  - (2) Remove motor pump assembly - Complete (Refer to para 4.11).
  - (3) Remove filler cap and drain any remaining oil into drain pan (See Figure 4-12).
  - (4) Using a wrench to hold male connector (1, Figure 4-12) stationary, loosen jam nut of elbow (2). Disconnect male connector/anti-cavitation solenoid valve (1) from elbow (2).
  - (5) Remove down functions shuttle valve (3) and up functions shuttle valve (4) from motor pump (5).
  - (6) Remove two screws (6), lockwashers (7), and motor base (8) from motor pump (5).
- #### B. Installation
- (1) Install motor base (8) on motor pump (5) and secure with two lockwashers (7) and screws (6).
  - (2) Coat o-rings of up functions shuttle valve (4) and down functions shuttle valve (3) with mineral oil or vaseline.
  - (3) Install up functions shuttle valve (4) and down functions shuttle valve (3) on motor pump (5).
  - (4) Coat threads of male connector (1) with pipe thread tape or sealant.
  - (5) Connect male connector (1)/anti-cavitation solenoid valve to elbow (2) and secure by tightening jam nut.

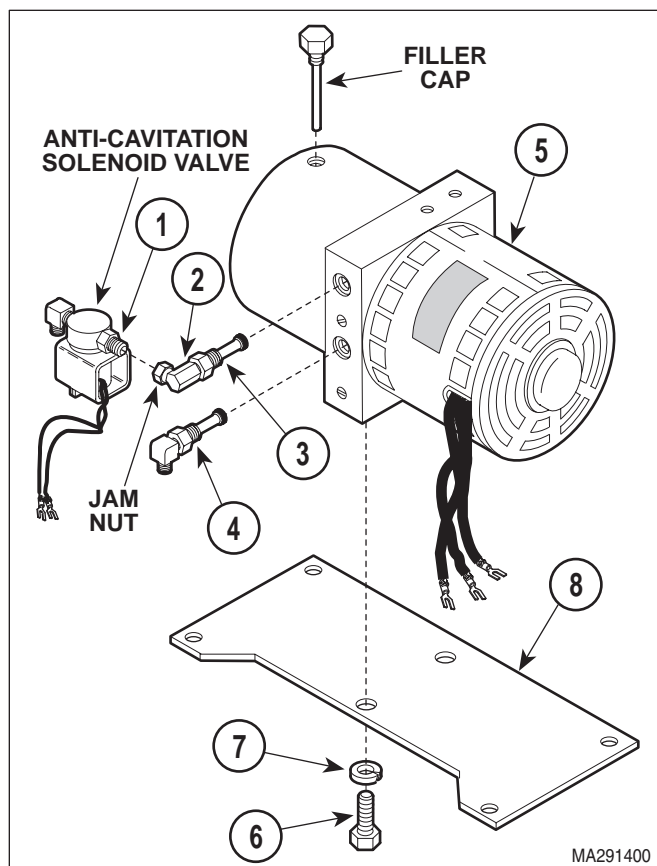

**Figure 4-12. Motor Pump Removal / Installation**

- (6) Install motor pump assembly (Refer to para 4.11).
- (7) Plug power cord into wall outlet.

#### 4.14 Motor Shaft Seal Removal / Installation (Applies Only To Units With Serial Numbers FE-1000 Thru Present)

##### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove motor pump (Refer to para 4.13).

##### NOTE

Reservoir is difficult to remove. Use a screwdriver to pry reservoir off of manifold block, but make sure not to damage o-ring.

- (3) Remove four screws (1, Figure 4-13) and reservoir (2) from manifold block (3).
- (4) Remove magnet (4) from strainer (5).
- (5) Remove four screws (6) and pump housing (7) from manifold block (3).
- (6) Remove pump gear (8) and woodruff key (9) from shaft of rotor assembly (10).
- (7) Remove four screws (11) and motor housing (12) from manifold block (3).
- (8) Push rotor assembly (10) inward toward manifold block (3); then remove retaining ring (13) from end of rotor assembly shaft.
- (9) Remove rotor assembly (10) from manifold block (3).
- (10) Using a screwdriver, pry motor shaft seal (14) out of manifold block (3).

##### B. Installation

- (1) Clean all metal shavings off of all components.
- (2) Coat new motor shaft seal (14) with vaseline or mineral oil.




##### EQUIPMENT ALERT

Do not allow motor shaft seal to become cocked during installation or it will become impossible to install without damaging it.

- (3) Using a hammer and 3/4 inch socket, install motor shaft seal (14) in manifold block (3).
- (4) Slide shaft of rotor assembly (10) thru manifold block (3) and secure in place by installing retaining ring (13) on end of rotor assembly shaft.
- (5) Install motor housing (12) on manifold block (3) and secure with four screws (11).
- (6) Install woodruff key (9) and pump gear (8) on shaft of rotor assembly (10).

## SECTION IV MAINTENANCE / SERVICE

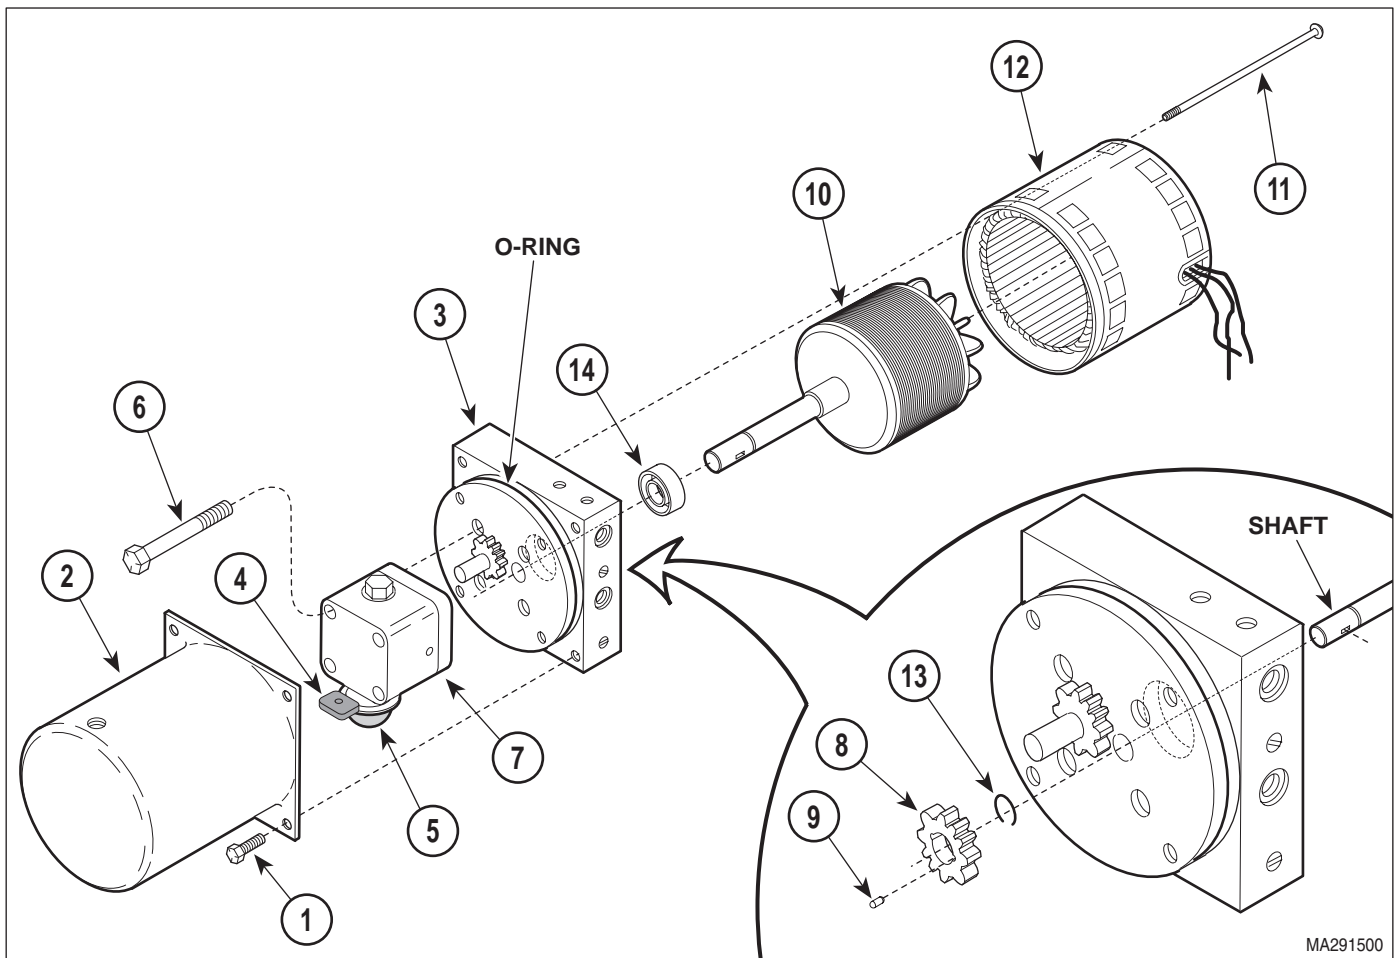

**Figure 4-13. Motor Shaft Seal  
Removal / Installation**

- (7) Install pump housing (7) on manifold block (3) and secure with four screws (6).
- (8) Install magnet (4) on strainer (5).
- (9) Make sure o-ring on manifold block is present and clean. Coat o-ring with mineral oil.

### NOTE

Strainer (5) may get in way when reservoir is being installed. If so, rotate strainer out of the way.


- (10) Install reservoir (2) on manifold block (3) and secure with four screws (1).
- (11) Install motor pump (Refer to para 4.13).
- (12) Plug power cord into wall outlet.

## 4.15 Back Cylinder Removal / Installation

### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove four screws (1, Figure 4-14) and front outer shroud (2) from left and right hand outer shrouds (3).
- (3) Remove eight screws (4) and front inner shroud (5) from left and right hand inner shrouds (6).
- (4) Remove screw (7) and wire clip (8) securing wires and hoses to base weldment (9).



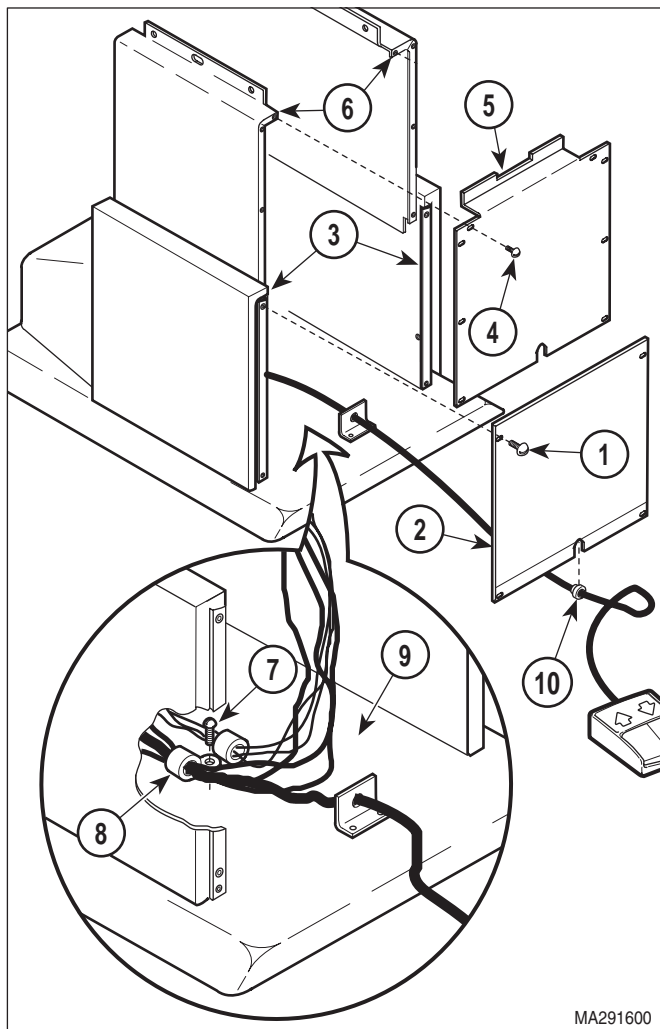


**Figure 4-14. Table Access**

- (5) Remove motor cover assembly (Refer to para 4.2).

**NOTE**

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).


- (6) Remove two or six screws (1, Figure 4-15) and control cover (2) from control panel (3).
- (7) Loosen two terminal screws; then tag and disconnect back cylinder wires (4) from terminal block (5).
- (8) Pull back cylinder wires (4) out thru wire hole.

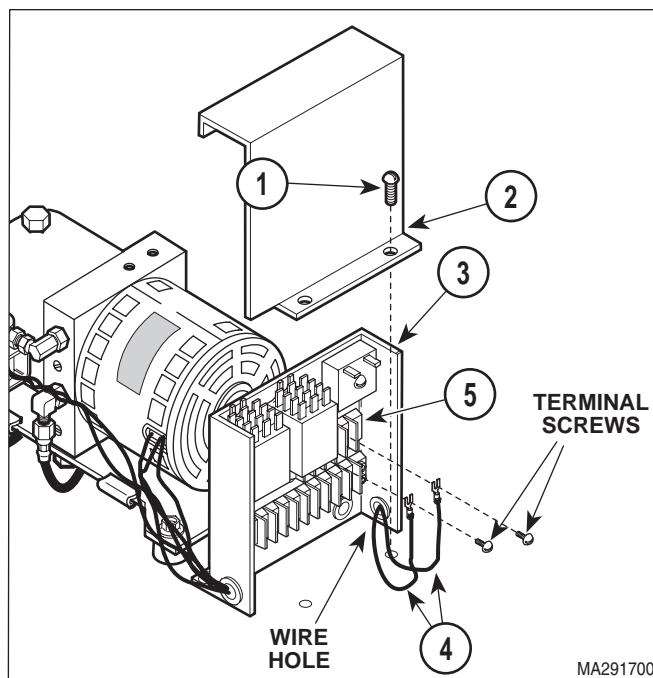

**Figure 4-15. Back Cylinder Wires Disconnection / Connection**

- (9) Remove locking knob (1, Figure 4-16) from back weldment (2).
- (10) Remove four screws (3) and back cover (4) from back weldment (2).
- (11) Cut two cable ties which are securing hose assemblies (5 and 6) to back cylinder (7).
- (12) While supporting back weldment (2), remove four E-rings (8), two clevis pins (9), and partially separate back cylinder (7) from cylinder brackets (10). Fold back section over onto seat section.
- (13) Tag hose assemblies (5 and 6).
- (14) Disconnect hose assembly (5) from back cylinder (7).
- (15) Disconnect hose assembly (6) from back cylinder (7).
- (16) Cut necessary cable ties and remove back cylinder (7) from chair.

## SECTION IV MAINTENANCE / SERVICE

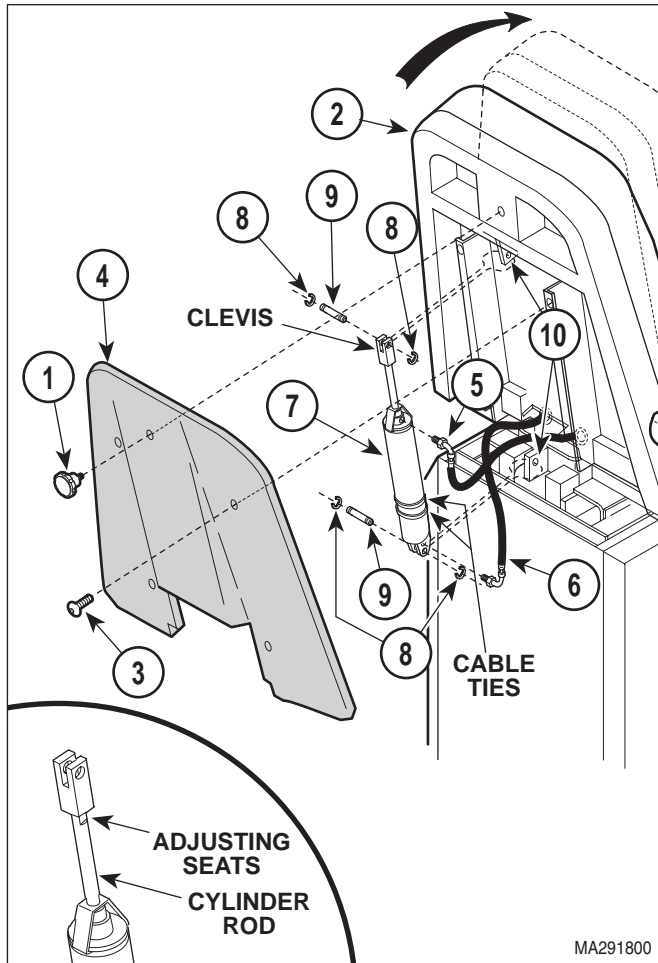

**Figure 4-16. Back Cylinder Removal / Installation**

### B. Installation

#### NOTE

No sealant is required when connecting hose assemblies. The back cylinder has an o-ring in each port which seals the hose assemblies.

- (1) Connect hose assembly (6, Figure 4-16) to back cylinder (7).
- (2) Connect hose assembly (5) to back cylinder (7).
- (3) Install back cylinder (7) on cylinder brackets (10) and secure with two clevis pins (9) and four E-rings (8).
- (4) Secure hose assemblies (5 and 6) to back cylinder (7) with two cable ties.

- (5) Route back cylinder wires (4, Figure 4-15) thru chair.
- (6) Feed back cylinder wires (4) thru wire hole.
- (7) Connect two back cylinder wires (4) to terminal block (5) and secure by tightening two terminal screws.
- (8) Re-secure back cylinder wire harness as necessary with cable ties.

#### NOTE

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (9) Install control cover (2) on control panel (3) and secure with two or six screws (1).
- (10) Secure wires and hoses to base weldment (9, Figure 4-14) with wire clip (8) and screw (7). Install any cable ties removed during removal.
- (11) Install front inner shroud (5) on left and right hand outer shrouds (6) and secure with eight screws (4).
- (12) Install front outer shroud (2) on left and right hand inner shrouds (3) and secure with four screws (1).
- (13) Make sure strain relief bushing (10) is installed in front outer shroud (2).
- (14) Plug power cord into wall outlet.
- (15) Lower TILT DOWN function all the way down.
- (16) Lower BACK DOWN function all the way down.



#### EQUIPMENT ALERT

TILT DOWN function must be completely lowered for following step. Failure to do so will result in incorrect adjustment.

- (17) If back section *is not* level with floor when the BACK DOWN function is completely lowered, perform steps 18 thru 20. If back section *is* level when the BACK DOWN function is completely lowered, go to step 21. See Figure 4-16.



**EQUIPMENT ALERT**


The cylinder rod must be partially extended before performing step 19. If the cylinder rod is fully extended or retracted when step 19 is being performed, damage to seals will occur.

- (18) Raise BACK UP function up until cylinder rod is extended halfway.
- (19) Place a wrench on adjusting seats of cylinder rod and use it to rotate cylinder rod to adjust clevis up or down as necessary. See Figure 4-16.
- (20) Repeat steps 16 thru 19 until back section is level when BACK DOWN function is completely lowered.
- (21) Install back cover (4, Figure 4-16) on back weldment (2) and secure with four screws (3).
- (22) Install locking knob (1) on back weldment (2).
- (23) If necessary, add oil to motor pump (Refer to para 4.3).
- (24) Install motor cover assembly (Refer to para 4.2).

**4.16 Back Cylinder Needle Valve Adjustment (Applies Only To Units With Serial Numbers AJ-1000 Thru Present)**

**A. Adjustment**

- (1) Remove locking knob (1, Figure 4-17) from back weldment (2).
- (2) Remove four screws (3) and back cover (4) from back weldment (2).
- (3) Loosen locknut (5) on needle valve (6).
- (4) Lower BACK DOWN function all the way down.
- (5) Using a stop watch to record time, raise BACK UP function all the way up.

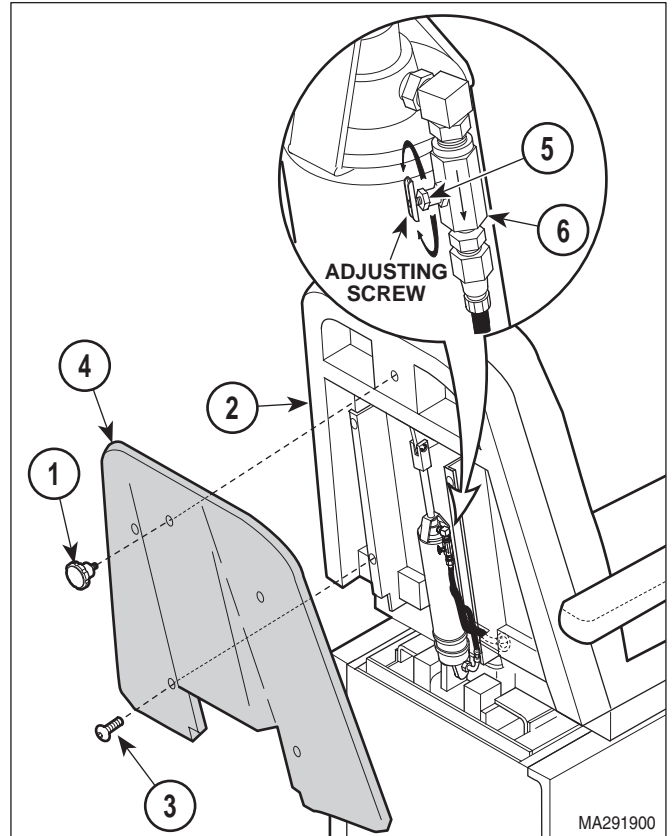

**Figure 4-17. Back Cylinder Needle Valve Adjustment**

- (6) Back section should raise completely in 8 to 9 seconds. If back section raises too slowly, turn adjusting screw in counterclockwise direction. If back section raises too quickly, turn adjusting screw in clockwise direction.
- (7) Repeat steps 4 thru 6 until back section raises completely in 8 to 9 seconds.
- (8) Tighten locknut (5), making sure adjusting screw does not turn.
- (9) Install back cover (4) on back weldment (2) and secure with four screws (3).

## SECTION IV MAINTENANCE / SERVICE

### 4.17 Tilt Cylinder Removal / Installation


#### A. Removal

- (1) If possible, lower TILT DOWN function all the way down.
- (2) Unplug power cord from wall outlet.
- (3) Remove motor cover assembly (Refer to para 4.2).

#### NOTE

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (4) Remove two or six screws (1, Figure 4-18) and control cover (2) from control panel (3).
- (5) Loosen two terminal screws; then tag and disconnect two tilt cylinder wires (4) from terminal block (5).

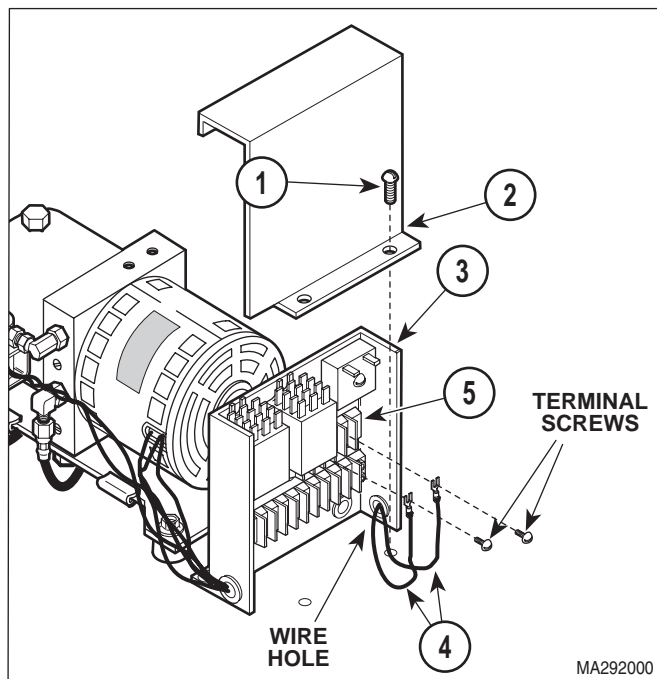

**Figure 4-18. Tilt Cylinder Wire  
Disconnection / Connection**

- (6) Pull tilt cylinder wires (4) out thru wire hole.
- (7) Remove four screws (1, Figure 4-19) and front outer shroud (2) from left and right hand outer shrouds (3).
- (8) Remove eight screws (4) and front inner shroud (5) from left and right hand inner shrouds (6).
- (9) Disconnect return manifold (7) from rod end of tilt cylinder (8).
- (10) Disconnect power manifold (9) from base of tilt cylinder (8).
- (11) Cut cable ties which secure hose assemblies and wire harnesses to tilt cylinder (8).



#### WARNING

**The foot end of table top must be supported while removing tilt cylinder. Failure to do will allow table top to fall which could result in serious personal injury.**

#### NOTE

Cut cable ties as necessary to remove tilt cylinder.

- (12) While supporting foot end of table top, remove four E-rings (10), two clevis pins (11), and tilt cylinder (8) from brackets (12).

#### B. Installation


- (1) Install tilt cylinder (8, Figure 4-19) on brackets (12) and secure with two clevis pins (11) and four E-rings (10).



#### WARNING

**Make sure the safety cable is properly installed on the return and power manifolds. Failure to do so could result in serious personal injury to patient or operator.**

- (2) Connect power manifold (9) to base of tilt cylinder (8).
- (3) Connect return manifold (7) to rod end of tilt cylinder (8).

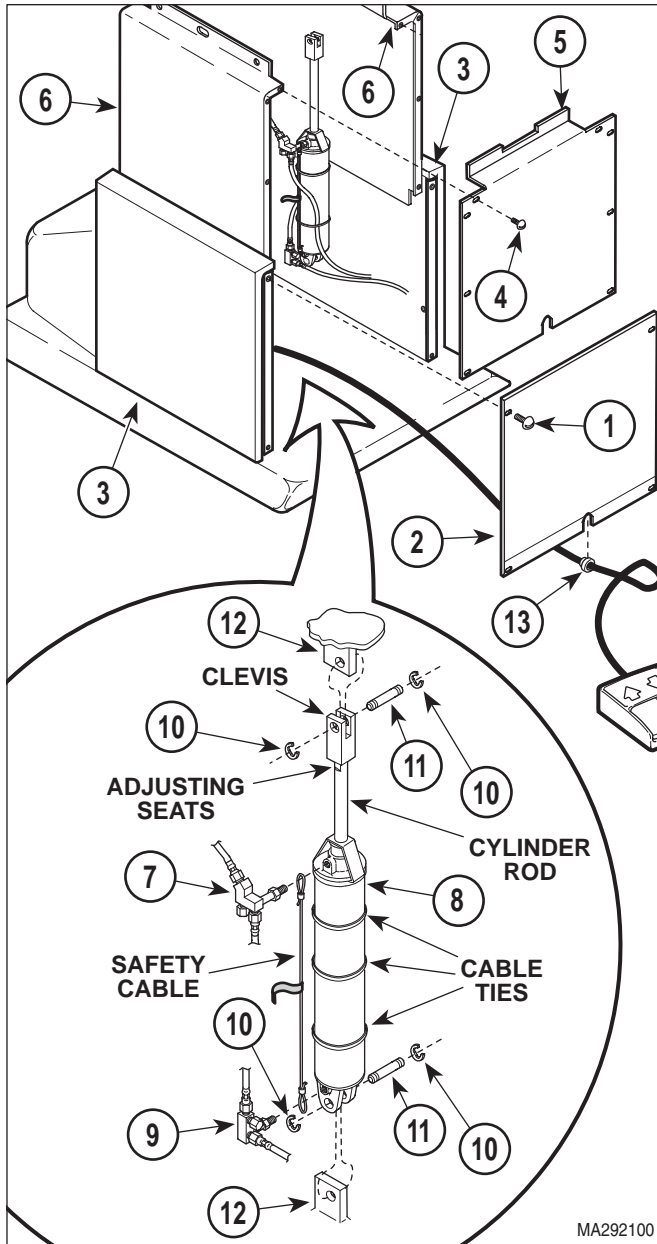

**Figure 4-19. Tilt Cylinder Removal / Installation**

- (4) Secure wire harnesses and hose assemblies to tilt cylinder (8) with cable ties.
- (5) Route tilt cylinder wires (4, Figure 4-18) thru table.
- (6) Feed tilt cylinder wires (4) thru wire hole in control panel (3).

- (7) Connect two tilt cylinder wires (4) to terminal block (5) and secure by tightening two terminal screws.
- (8) Install control cover (2) on control panel (3) and secure with two or six screws (1).
- (9) Install any cable ties which were removed.
- (10) Plug power cord into wall outlet.
- (11) Lower TILT DOWN function all the way down.
- (12) If seat section *is not* level with floor when the TILT DOWN function *is* completely lowered, perform steps 13 thru 15. If seat section is level when the TILT DOWN function is completely lowered, go to step 16.



**EQUIPMENT ALERT**

The cylinder rod must be partially extended before performing step 14. If the cylinder rod is fully extended or retracted when step 14 is being performed, damage to seals will occur.

- (13) Raise TILT UP function up until cylinder rod is extended halfway.
- (14) Place a wrench on adjusting seats of cylinder rod and use it to rotate cylinder rod to adjust clevis up or down as necessary. See Figure 4-19.
- (15) Repeat steps 11 thru 14 until seat section is level when TILT DOWN function is completely lowered.
- (16) Install front inner shroud (5, Figure 4-19) on left and right hand inner shrouds (6) and secure with eight screws (4).
- (17) Install front outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (18) Make sure strain relief bushing (13) is installed on front outer shroud (2).
- (19) If necessary, add oil to motor pump (Refer to para 4.3).

## SECTION IV MAINTENANCE / SERVICE

- (20) Install motor cover assembly (Refer to para 4.2).

### 4.18 Base Cylinder Removal / Installation

#### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).
- (3) Remove four screws (1, Figure 4-20) and back outer shroud (2) from left and right hand outer shrouds (3).
- (4) Remove eight screws (4) and back inner shroud (5) from left and right hand inner shrouds (6).
- (5) Remove four screws (7) and brace (8) from base slide assembly (9).
- (6) Plug power cord into wall outlet.
- (7) If TABLE DOWN function is operable, place a block under middle slide of base slide assembly (9). Then lower the TABLE DOWN function until the middle slide of the base slide assembly is resting on block and pressure is off clevis pin (10). If TABLE DOWN function is not operable, move table top to a horizontal position and place supports under each end of table.

#### NOTE

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (8) Remove two or six screws (1, Figure 4-21) and control cover (2) from control panel (3).
- (9) Loosen two terminal screws; then tag and disconnect base cylinder wires (4) from terminal block (5).
- (10) Pull base cylinder wires (4) out thru wire hole.

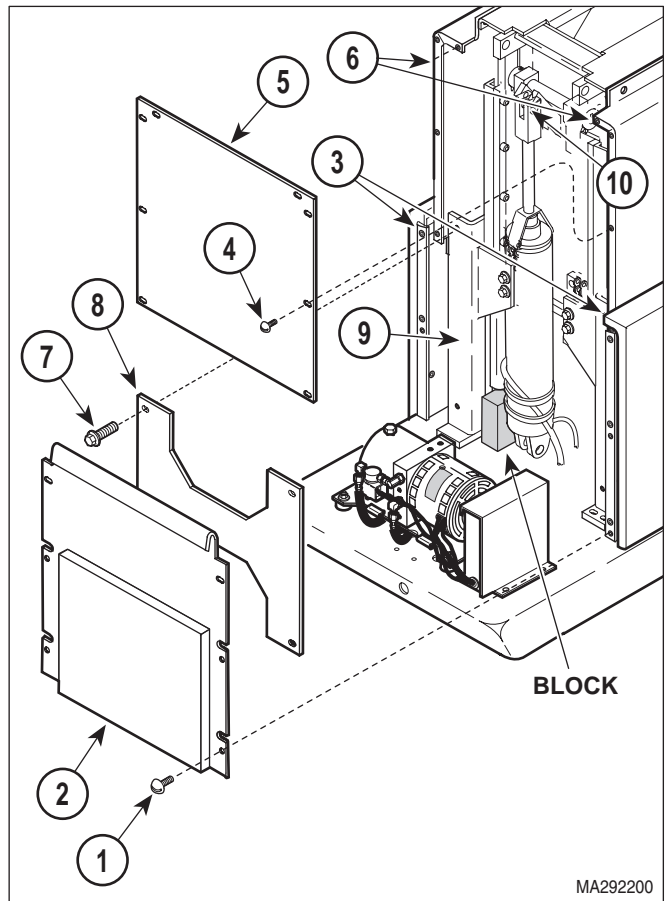



Figure 4-20. Base Cylinder Access



#### WARNING

Make sure table top is properly secured from lowering or tipping over when base cylinder is disconnected from table top. Clevis pin (2, Figure 4-22) should not have any weight on it if table top is supported properly. Failure to have table top properly secured could result in serious personal injury or death.

- (11) Remove hitch pin clip (1, Figure 4-22) and clevis pin (2) from rod end of base cylinder (3).
- (12) Remove hitch pin clip (4), clevis pin (5), and partially separate base cylinder (3) from brackets (6).
- (13) Cut two cable ties securing hose assembly (7) to base cylinder (3).

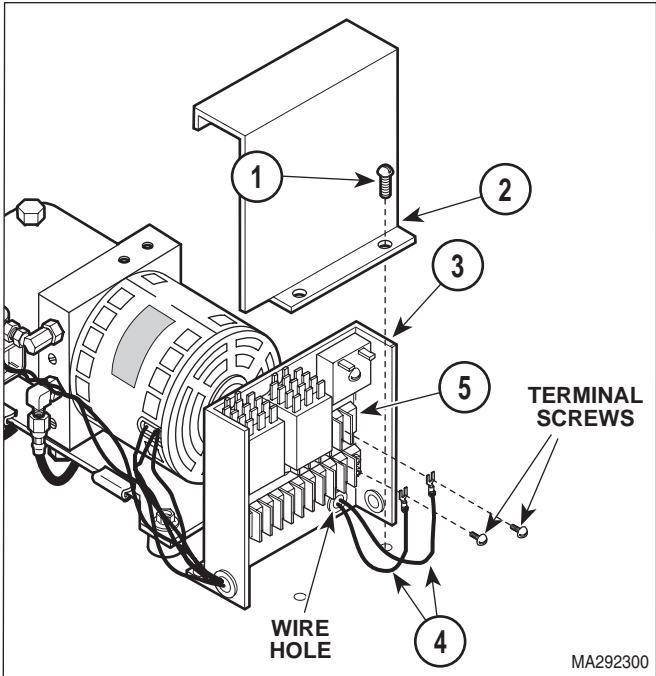

**Figure 4-21. Base Cylinder Wires Disconnection / Connection**

- (14) Disconnect hose assembly (7) from base cylinder (3).
- (15) Place rags under base tee (8).

**NOTE**

When base tee is disconnected from base cylinder, oil will be free to flow out of the motor pump thru the base tee. Either be ready to install the new base cylinder or have drain pan and rags ready to catch the oil.

- (16) Disconnect base tee (8) from base cylinder (3). Remove base cylinder from table.


**B. Installation**

- (1) Position base cylinder (3, Figure 4-22) on table.
- (2) Connect base tee (8) to base cylinder (3).
- (3) Connect hose assembly (7) to base cylinder (3).
- (4) Secure hose assembly (7) to base cylinder (3) with two cable ties.
- (5) Install base cylinder (3) on brackets (6) and secure with clevis pins (2 and 5) and hitch pin clips (1 and 4).
- (6) Feed base cylinder wires (4, Figure 4-21) thru wire hole.
- (7) Connect two base cylinder wires (4) to terminal block (5) and secure by tightening two terminal screws.

**NOTE**

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (8) Install control cover (2) on control panel (3) and secure with two or six screws (1).
- (9) Plug power cord into wall outlet.

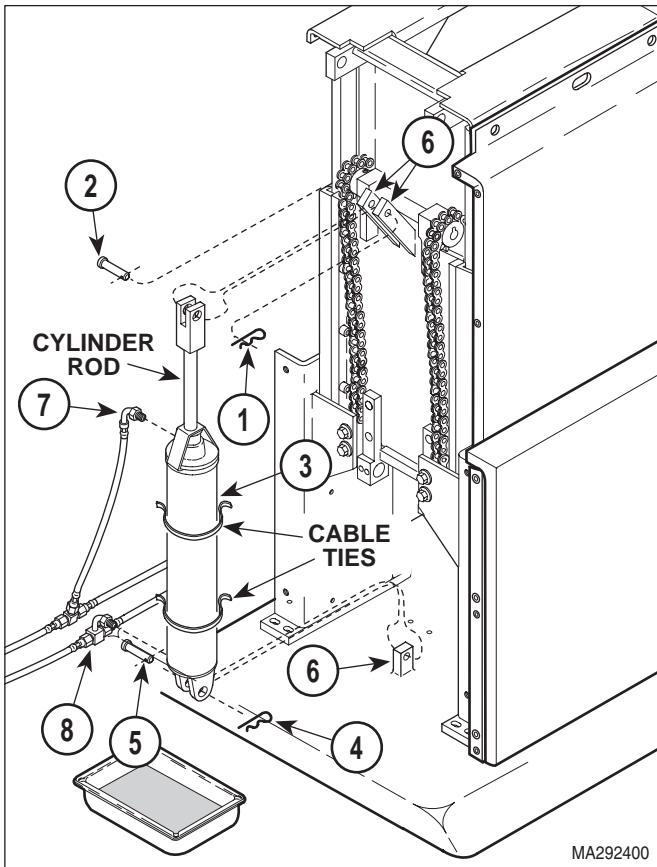

**Figure 4-22. Base Cylinder Removal / Installation**

## SECTION IV MAINTENANCE / SERVICE

- (10) See Figure 4-20. Raise TABLE UP function slightly and remove block from under middle slide of base slide assembly (9) or remove supports from under table top.
- (11) Lower TABLE DOWN function all the way down.
- (12) See Figure 4-23. If there *is not* a 1/16 to 1/8 inch (1.6 to 3.2 mm) gap between inner member weldment and top of middle slide when the TABLE DOWN function is completely lowered (it is especially important that the inner member weldment does not come into contact with the top of the middle slide), perform steps 13 thru 15. If gap is correct when the TABLE DOWN function is completely lowered, go to step 16.

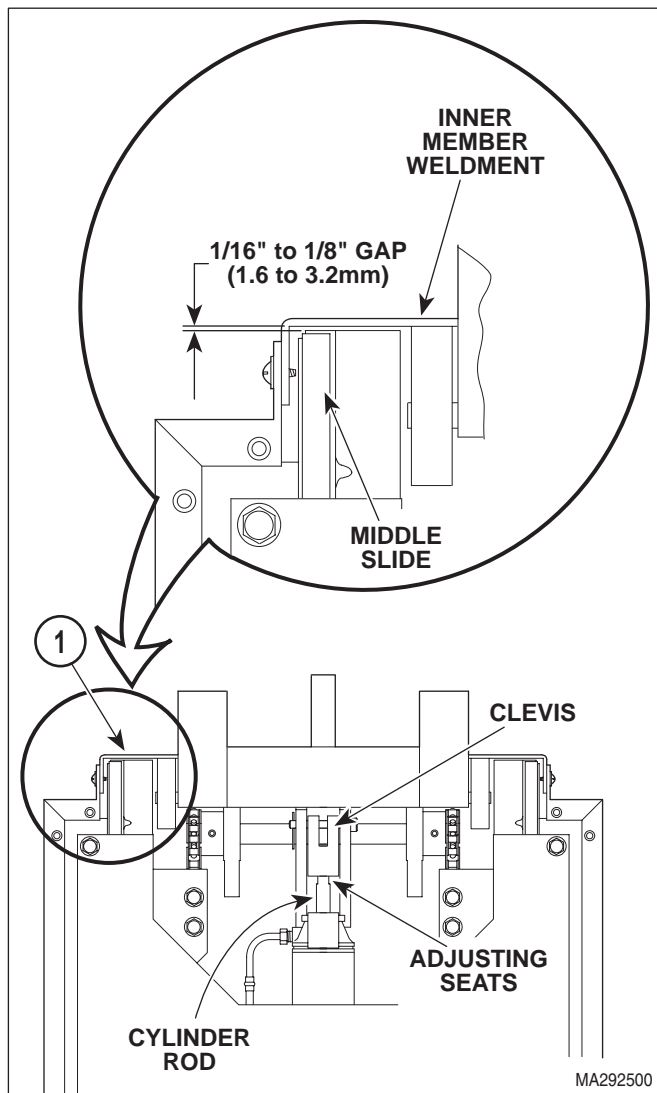


Figure 4-23. Base Cylinder Clevis Adjustment



### EQUIPMENT ALERT

The cylinder rod must be partially extended before performing step 14. If the cylinder rod is fully extended or retracted when step 14 is being performed, damage to seals will occur.

- (13) Raise TABLE UP function up until cylinder rod is extended halfway.
- (14) Place a wrench on adjusting seats of cylinder rod and use it to rotate cylinder rod to adjust clevis up or down as necessary.
- (15) Repeat steps 11 thru 14 until there *is* a 1/16 to 1/8 inch (1.6 to 3.2 mm) gap between inner member weldment and middle slide of base slide assembly when the TABLE DOWN function is completely lowered.
- (16) Install brace (8, Figure 4-20) on base slide assembly (9) and secure with four screws (7).
- (17) Install any cable ties removed during removal.
- (18) Install back inner shroud (5) on left and right hand inner shrouds (6) and secure with eight screws (4).
- (19) Install back outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (20) If necessary, add oil to motor pump (Refer to para 4.3).
- (21) Install motor cover assembly (Refer to para 4.2).

### 4.19 AUTO RETURN "RETURN" or "STOP" Switch Removal / Installation

#### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove six screws (1, Figure 4-24) and separate switch plate (2) from seat weldment (3).




**4.20 BACK UP / DOWN Or TILT UP / DOWN Switch Removal / Installation**

**A. Removal**

- (1) Unplug power cord from wall outlet.
- (2) Remove six screws (1, Figure 4-25) and separate switch plate (2) from seat weldment (3).
- (3) Disconnect six wires (4) from switch (5).
- (4) Depress four tabs of switch (5), while simultaneously pulling the switch out of switch plate (2).

**B. Installation**

- (1) Push switch (5) into switch plate (2) until it "pops" into place.

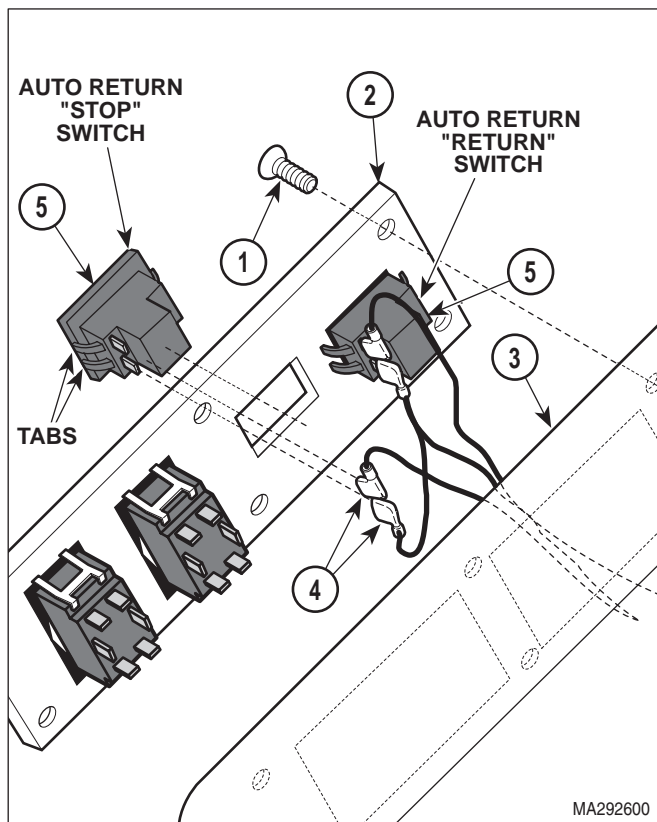


**Figure 4-24. AUTO RETURN "RETURN" or "STOP" Switch Removal / Installation**

- (3) Disconnect two wires (4) from "RETURN" or "STOP" switch (5).
- (4) Depress four tabs of "RETURN" or "STOP" switch (5), while simultaneously pulling the switch out of switch plate (2).

**B. Installation**

- (1) Push "RETURN" or "STOP" switch (5) into switch plate (2) until it "pops" into place.
- (2) Connect two wires (4) to terminals of "RETURN" or "STOP" switch (5).
- (3) Install switch plate (2) on seat weldment (3) and secure with six screws (1).
- (4) Plug power cord into wall outlet.

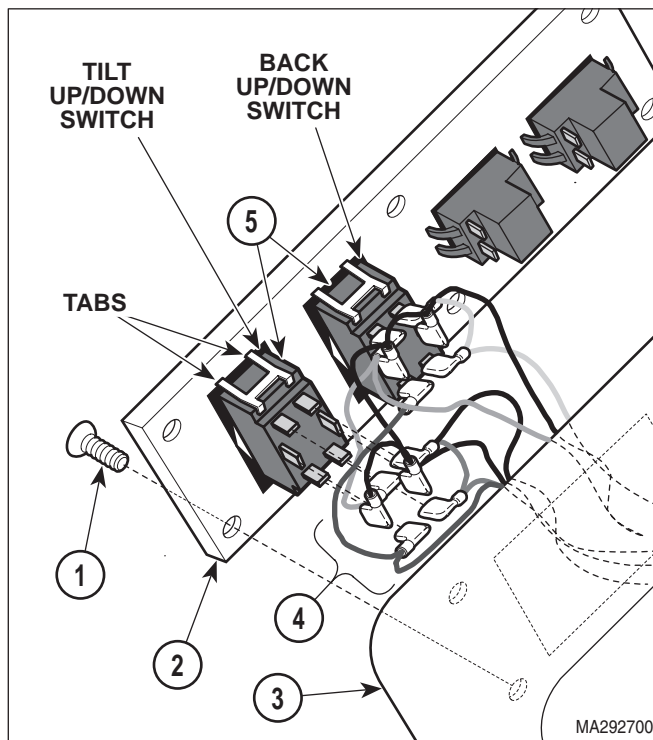

**Figure 4-25. BACK UP / DOWN or TILT UP / DOWN Switch Removal / Installation**

## SECTION IV MAINTENANCE / SERVICE

- (2) Connect six wires (4) to terminals of switch (5).
- (3) Install switch plate (2) on seat weldment (3) and secure with six screws (1).
- (4) Plug power cord into wall outlet.

### 4.21 TABLE UP or TABLE DOWN Switches Removal / Installation / Adjustment

#### A. Removal

- (1) Unplug power cord from wall outlet.

#### NOTE

The procedure & illustration describes the removal / installation of the TABLE UP switches. Removal of the TABLE DOWN switches is the same.

- (2) Remove screw (1, Figure 4-26), lockwasher (2), and foot pedal (3) from foot control housing (4).

#### NOTE

The inside switch is the switch that activates the base cylinder solenoid valve while the outside switch is the switch which activates the motor pump. This is true for both the TABLE UP and the TABLE DOWN sets of switches.


- (3) Remove locknut (5), screw (6), three insulators (7), and two switches (8) from mounting plate (9).
- (4) Disconnect two wires (10) from switch (8) being removed.

#### B. Installation / Adjustment

#### NOTE

If adjusting switches only, perform steps 1 and 2 of removal and then steps 2 thru 11 of installation / adjustment

- (1) Connect two wires (10) to terminals of switch (8).

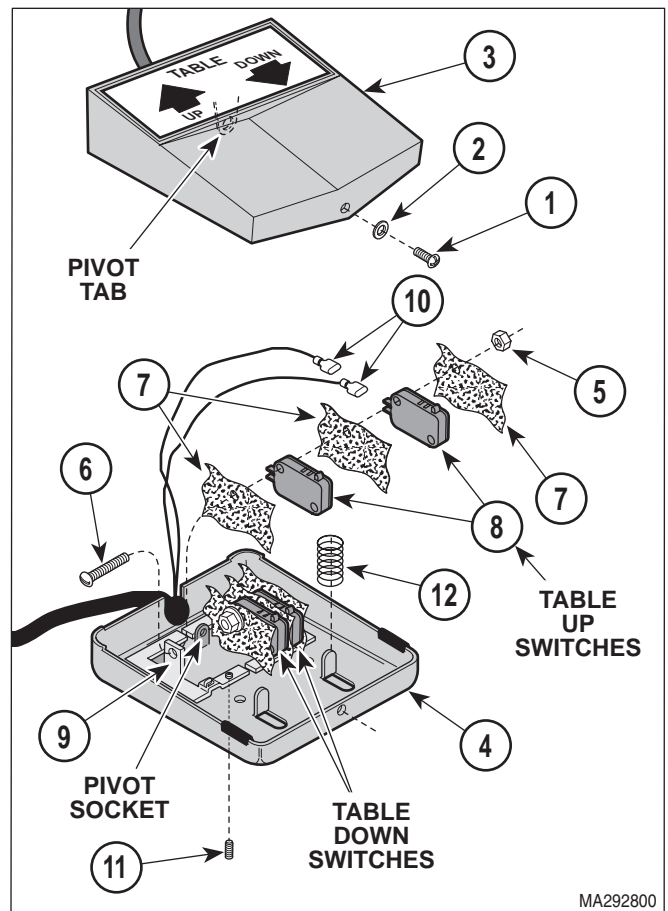

**Figure 4-26. TABLE UP or TABLE DOWN Switches  
Removal / Installation / Adjustment**

- (2) Unscrew setscrew (11) as far as it will go without removing it.

#### NOTE

Make sure the inside switch is pushed down as far as it will go before tightening locknut (5). This is necessary because the inside switch must be down all the way so it can be adjusted properly.

- (3) Install switches (8) on mounting plate (9) and secure with three insulators (7), screw (6), and locknut (5), making sure outside switch is secured by tab of mounting plate.
- (4) Ensure springs (12) are in position and have not fallen off.

- (5) Install foot pedal (3) on foot control housing (4) and secure with lockwasher (2) and screw (1), making sure pivot tab of foot pedal is inserted in pivot socket of foot control housing.
- (6) Tighten setscrew (11) just until it comes into contact with inside switch (8).
- (7) Plug power cord into wall outlet.
- (8) Slowly depress foot pedal to activate function which needs adjustment and observe.
- (9) Observe. A light touch should cause the motor pump to activate followed closely by the base cylinder solenoid valve.  
If adjustment is necessary, go to step 10.

**NOTE**

Tightening setscrew will cause the base cylinder solenoid valve to activate sooner.

- (10) Tighten setscrew (11) approximately 1/4 turn at a time.
- (11) Repeat steps 8 thru 10 until inner switch is adjusted properly.

**4.22 Time Delay Relay Removal / Installation**


**A. Removal**

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).

**NOTE**

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (3) Remove two or six screws (1, Figure 4-27) and control cover (2) from control panel (3).
- (4) Tag and disconnect two wires (4) from terminals of time delay relay (5).
- (5) Remove nut (6), screw (7), washer (8), and time delay relay (5) from control panel (3).

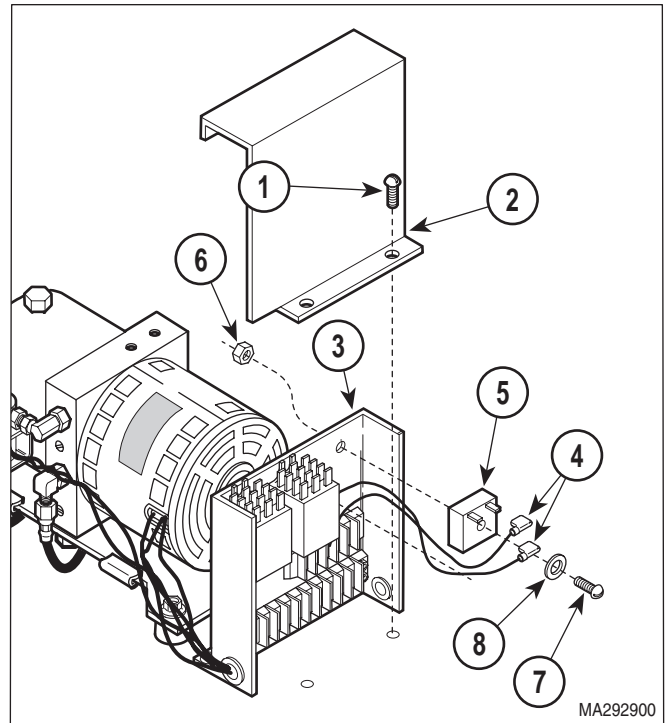

**Figure 4-27. Time Delay Relay  
Removal / Installation**

**B. Installation**

- (1) Install time delay relay (5) on control panel (3) and secure with washer (8), screw (7), and nut (6).
- (2) Connect two wires (4) to terminals of time delay relay (5).

**NOTE**

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (3) Install control cover (2) on control panel (3) and secure with two or six screws (1).
- (4) Install motor cover assembly (Refer to para 4.2).
- (5) Plug power cord into wall outlet.

## SECTION IV MAINTENANCE / SERVICE

### 4.23 Capacitors Removal / Installation

#### A. Removal

##### NOTE

Units with Serial Numbers AJ-3090 Thru Present have only one capacitor instead of two (unless they have been upgraded to two capacitors with the upgrade kit). For those units, this paragraph may be used as a guide only.

- (1) Unplug power cord from wall outlet.
- (2) Remove four screws (1, Figure 4-28) and front outer shroud (2) from left and right hand outer shrouds (3).
- (3) If necessary to gain access to capacitors, remove eight screws (4) and front inner shroud (5) from left and right hand inner shrouds (6).
- (4) Cut cable tie securing wires to capacitor (7).
- (5) Using a screwdriver, pry tab of capacitor mounting bracket (8) upward and remove capacitor (7) from capacitor mounting bracket.
- (6) Remove capacitor cap (9) from capacitor (7).



##### WARNING

A capacitor contains stored electricity. Never touch terminals of a capacitor, even if power has been shut off or disconnected. Always discharge capacitor before touching capacitor terminals or wires. Failure to comply with these instruction could result in serious personal injury or death.

- (7) Discharge capacitor (7).
- (8) Disconnect wires (10 and 11) from terminals of capacitor (7).
- (9) Using a screwdriver, pry tab of capacitor mounting bracket (12) upward and remove capacitor (13) from capacitor mounting bracket.
- (10) Remove capacitor cap (14) from capacitor (13).

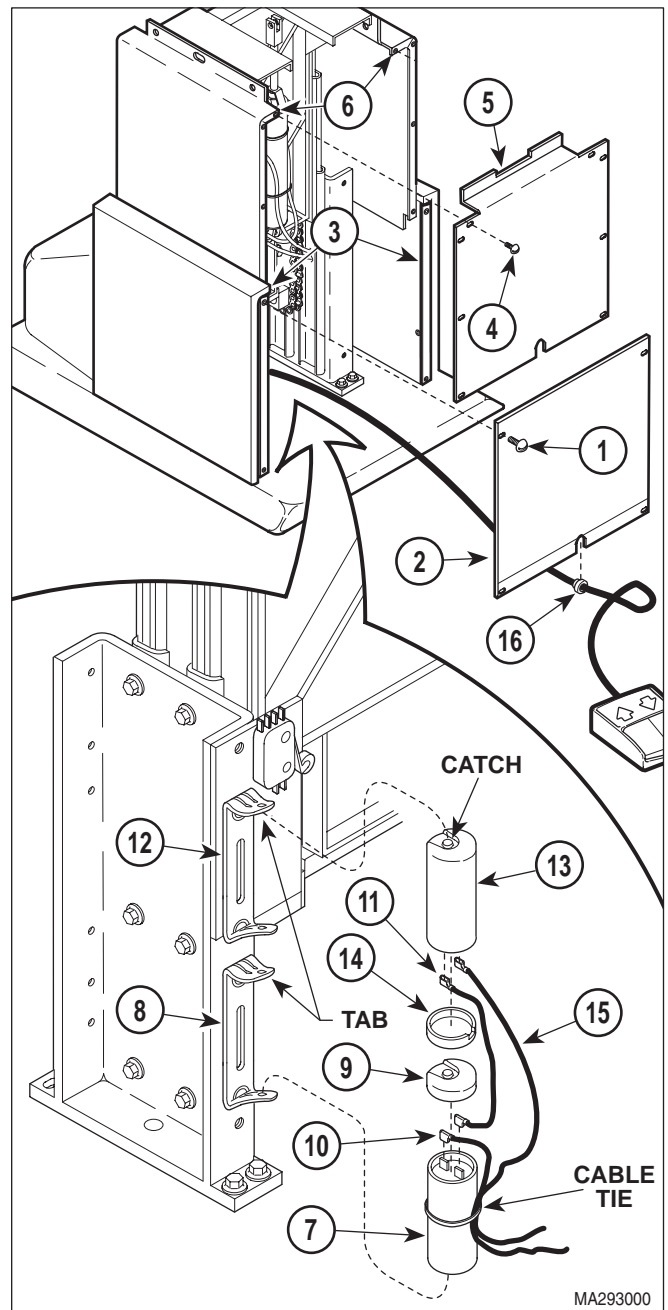


Figure 4-28. Capacitors Removal / Installation



**WARNING**

**A capacitor contains stored electricity. Never touch terminals of a capacitor, even if power has been shut off or disconnected. Always discharge capacitor before touching capacitor terminals or wires. Failure to comply with these instruction could result in serious personal injury or death.**

- (11) Discharge capacitor (13).
- (12) Disconnect wires (11 and 15) from terminals of capacitor (13).

**B. Installation**

- (1) Connect capacitor wires (11 and 15) to terminals of capacitor (13).
- (2) Install capacitor cap (14) on capacitor (13).
- (3) Position bottom of capacitor (13) on capacitor mounting bracket (12) and then push the top of the capacitor in. Using a screwdriver, force tab of capacitor mounting bracket (12) down over catch.
- (4) Connect capacitor wires (10 and 11) to terminals of capacitor (7).
- (5) Install capacitor cap (9) on capacitor (7).
- (6) Position bottom of capacitor (7) on capacitor mounting bracket (8) and then push the top of the capacitor in. Using a screwdriver, force tab of capacitor mounting bracket (8) down over catch.
- (7) Install cable tie to secure wire to capacitor (7).
- (8) If removed, install front inner shroud (5) on left and right hand inner shrouds (6) and secure with eight screws (4).
- (9) Install front outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).

- (10) Make sure strain relief bushing (16) is installed in front outer shroud (2).
- (11) Plug power cord into wall outlet.

**4.24 Auto Return Relay [CR2] or Manual Functions Relay [CR1] Removal / Installation**


**A. Removal**

- (1) Unplug power cord from wall outlet.
- (2) Remove motor cover assembly (Refer to para 4.2).

**NOTE**

Older units will have four additional screws (1) securing the control cover (2) to control panel (3).

- (3) Remove two or six screws (1, Figure 4-29) and control cover (2) from control panel (3).

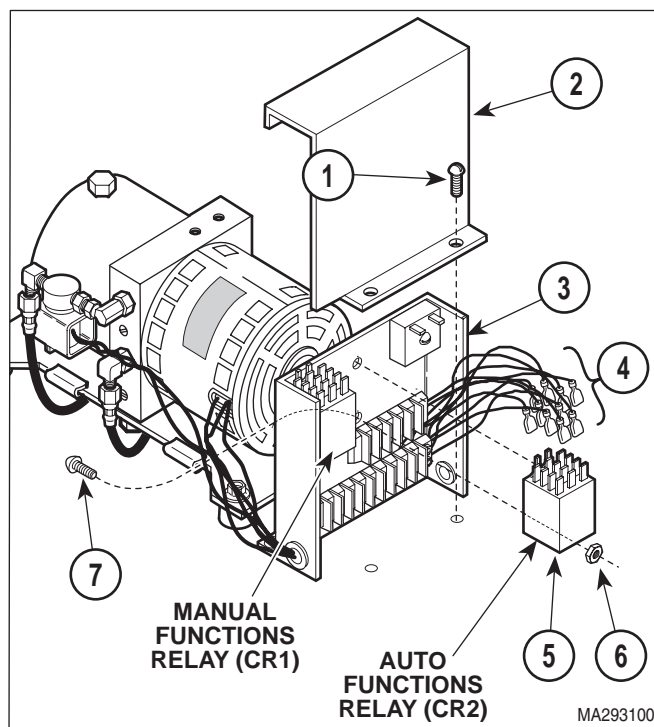

**Figure 4-29. Auto Return Relay [CR2] or Manual Functions Relay [CR1] Removal / Installation**

## SECTION IV MAINTENANCE / SERVICE

- (4) Tag and disconnect eight wires (4) from relay [CR1] or [CR2] (5).
- (5) Remove two nuts (6), screws (7), and relay [CR1] or [CR2] (5) from control panel (3).

### B. Installation

- (1) Install relay [CR1] or [CR2] (5) on control panel (3) and secure with two screws (7) and nuts (6).
- (2) Connect eight wires (4) to relay [CR1] or [CR2] (5).
- (3) Install control cover (2) on control panel (3) and secure with two or six screws (1).
- (4) Install motor cover assembly (Refer to para 4.2).
- (5) Plug power cord into wall outlet.

### 4.25 Tilt Down Limit Switch Removal / Installation


#### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove four screws (1, Figure 4-30) and front outer shroud (2) from left and right hand outer shrouds (3).
- (3) Remove eight screws (4) and front inner shroud (5) from left and right hand inner shrouds (6).
- (4) Remove nut (7), lockwasher (8), and tilt down limit switch (9) from inner member (10).
- (5) Tag and disconnect five wires (11) from terminals of tilt down limit switch (9).

#### B. Installation / Adjustment

##### NOTE

If performing adjustment only, perform steps 1 thru 3 of removal and then perform steps 4 thru 12 of installation / adjustment.

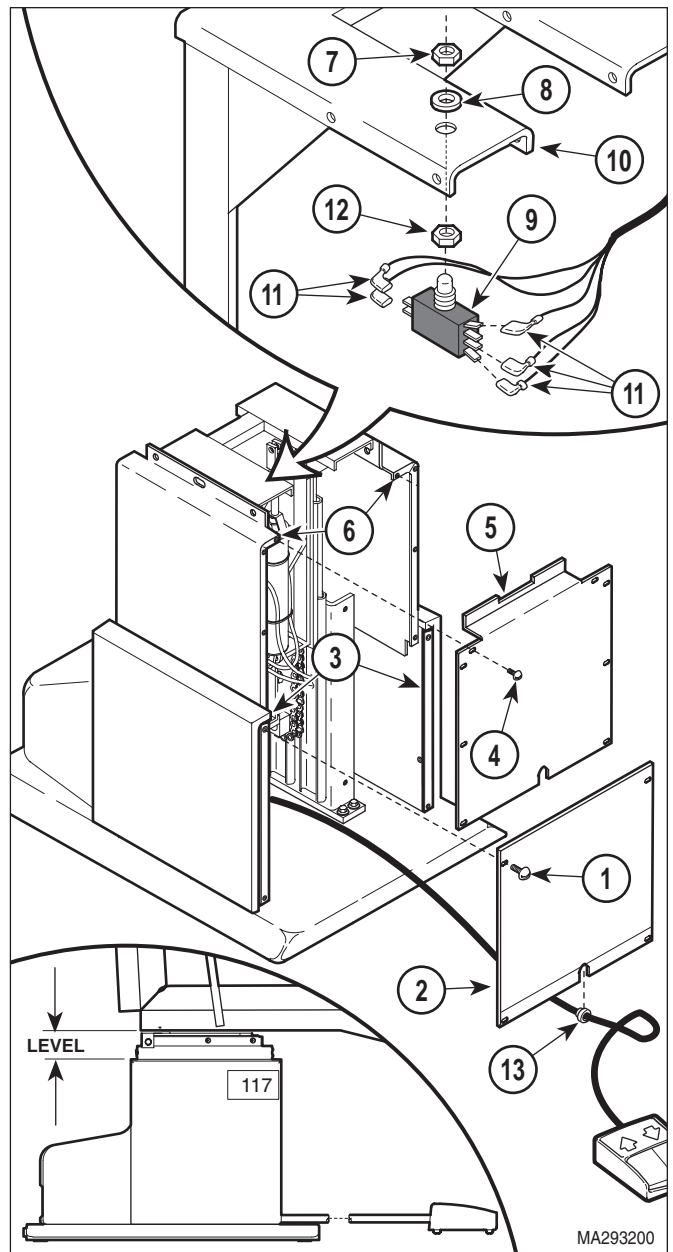

**Figure 4-30. Tilt Down Limit Switch Removal / Installation**


- (1) Connect five wires (11) to terminals of tilt down limit switch (9).
- (2) Screw nut (12) all the way on tilt down limit switch (9).
- (3) Install tilt down limit switch (9) on inner member (10) and secure with lockwasher (8) and nut (7).

- (4) Plug power cord into wall outlet.
- (5) Run TILT DOWN function all the way down.
- (6) If seat weldment is level with top of inner member, no adjustment is necessary. Go to step 10.  
If seat weldment is not level with top of inner member, adjustment is necessary. Go to step 7.
- (7) Raise TILT UP function all the way up.
- (8) Loosen nut (7). Then adjust nut (12) as deemed necessary. Then tighten nut (7).
- (9) Repeat steps 5 thru 8 until seat weldment is level with top of inner member when TILT DOWN function is all the way down.
- (10) Install front inner shroud (5) on left and right hand inner shrouds (6) and secure with eight screws (4).
- (11) Install front outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (12) Make sure strain relief bushing (13) is installed on front outer shroud (2).

#### 4.26 Base Down Limit Switch Removal / Installation / Adjustment

##### A. Removal

- (1) Unplug power cord from wall outlet.
- (2) Remove four screws (1, Figure 4-31) and front outer shroud (2) from left and right hand outer shrouds (3).
- (3) Remove eight screws (4) and front inner shroud (5) from left and right hand inner shrouds (6).
- (4) Tag and disconnect four wires (7) from terminals of base down limit switch (8).
- (5) Remove two nuts (9), lockwashers (10), screws (11), and base down limit switch (8) from auto return bracket (12).

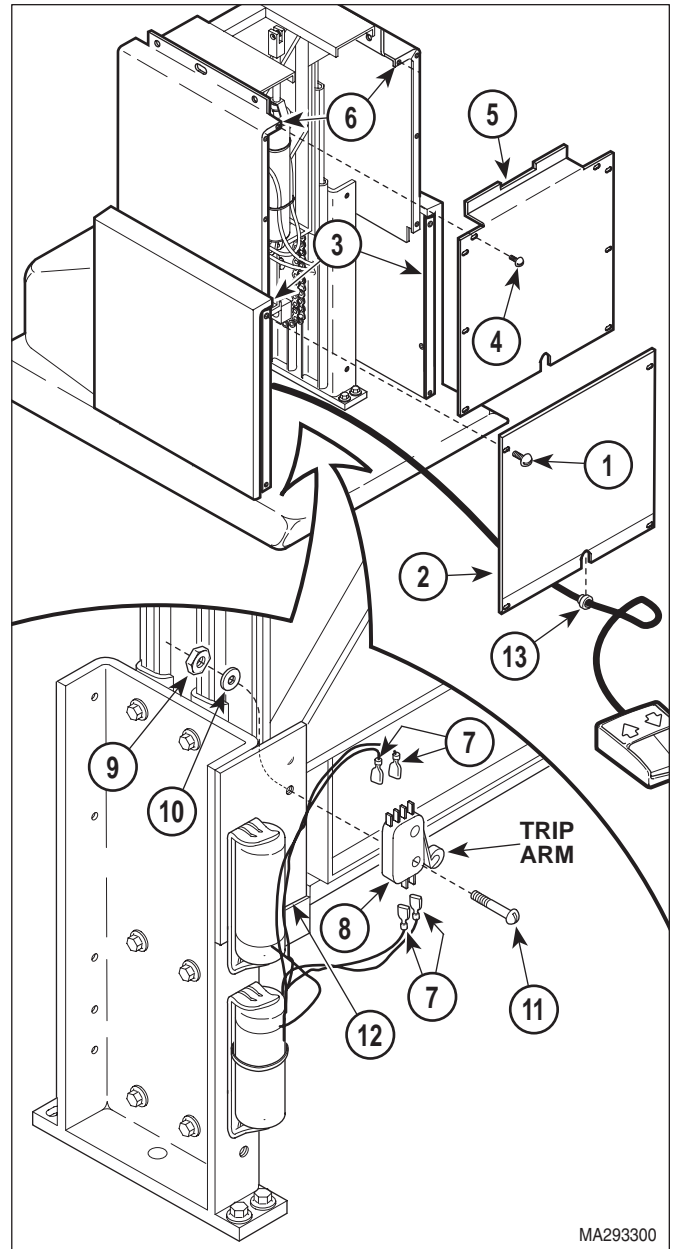

**Figure 4-31. Base Down Limit Switch Removal / Installation / Adjustment**

##### B. Installation

- (1) Install base down limit switch (8) on auto return bracket (12) and secure with two screws (11), lockwashers (10), and two nuts (9).
- (2) Connect four wires (7) to terminals of base down limit switch (8).

## SECTION IV MAINTENANCE / SERVICE

### C. Adjustment

- (1) If base down limit switch was not replaced and is only being adjusted, perform steps 1 thru 3 of removal to gain access to base down limit switch.

#### NOTE

If the motor pump continues to run after the AUTO RETURN function has lowered the table top all the way down, the base down limit switch must be adjusted so its trip arm contacts the trip plate before the table top is completely lowered.

- (2) Loosen two nuts (9) and adjust base down limit switch (8) as necessary so trip arm of base down limit switch is getting tripped by trip plate just before the AUTO RETURN function lowers the table top all the way down.



#### WARNING

**Do not touch any bare wires or electrical shock could occur. Do not place hands or head inside base area of table while it is being lowered. Failure to follow these safety precautions could result in serious personal injury or death.**

- (3) Plug power cord into wall outlet.
- (4) Raise TABLE UP function all the way up.
- (5) Press AUTO RETURN "RETURN" button.
- (6) If the motor pump automatically shuts off when AUTO RETURN function stops, base down limit switch is adjusted properly. If the motor pump continues to run after table top is completely lowered, repeat steps 2 thru 6 again.
- (7) Install front inner shroud (5) on left and right hand inner shrouds (6) and secure with eight screws (4).
- (8) Install front outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (9) Make sure strain relief bushing (13) is installed on front outer shroud (2).

### 4.27 Chain Assembly Adjustment

#### A. Adjustment

- (1) Raise TABLE UP function all the way up.
- (2) Unplug power cord from wall outlet.
- (3) Remove four screws (1, Figure 4-32) and front outer shroud (2) from left and right hand outer shrouds (3).
- (4) Remove eight screws (4) and front inner shroud (5) from left and right hand inner shrouds (6).
- (5) Loosen four screws (7).




#### EQUIPMENT ALERT

Adjust chains so they are tight, yet have a slight spring back. Also, adjust chains so there is an equal amount of tension on each chain. Failure to do so will result in chains loosening earlier and uneven wear.

- (6) Insert a pry bar or large screwdriver into adjustment gap and pry downward on idler adjustment weldment (8) until chains (9) are tight, but not drum tight. Tighten four screws (7).
- (7) Install front inner shroud (5) on left and right hand inner shrouds (6) and secure with eight screws (4).
- (8) Install front outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (9) Plug power cord into wall outlet.
- (10) Make sure strain relief bushing (10) is installed on front outer shroud (2).



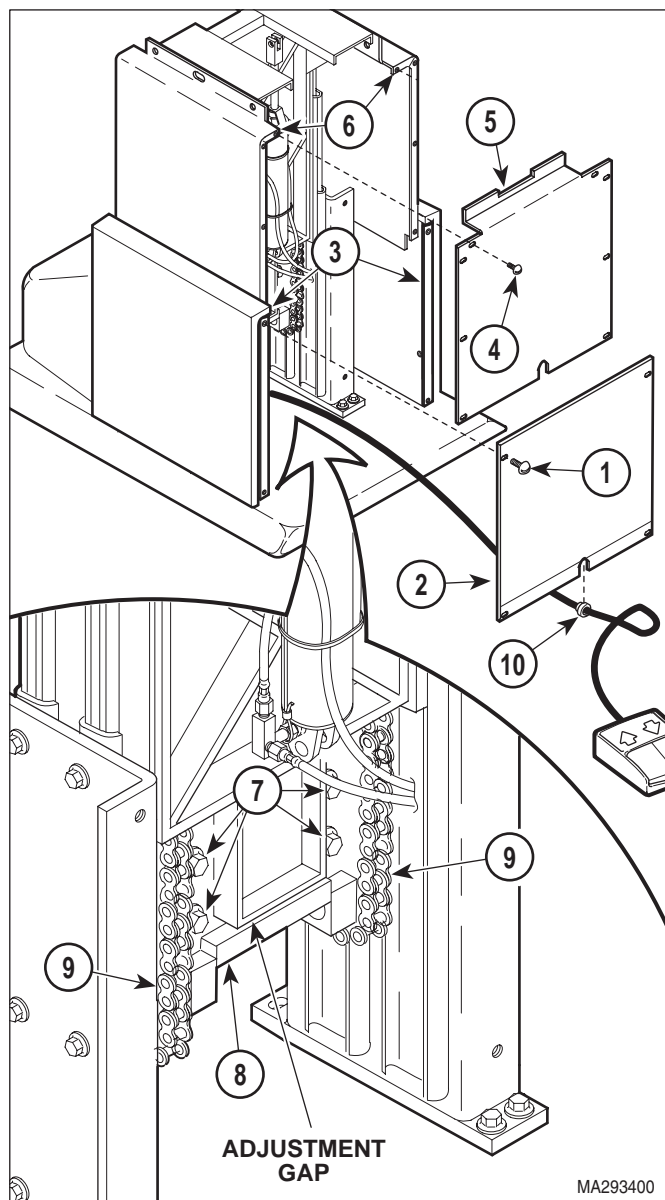

**Figure 4-32. Chain Assembly Adjustment**

## 4.28 Base Slide Assembly Removal / Installation

### A. Removal

- (1) If possible, raise TABLE UP function all the way up.
- (2) Move the back and seat sections of the table top to a horizontal position.

- (3) Unplug power cord from wall outlet.
- (4) Remove motor cover assembly (Refer to para 4.2).
- (5) Remove four screws (1, Figure 4-33) and back outer shroud (2) from left and right hand outer shrouds (3).
- (6) Remove eight screws (4) and back inner shroud (5) from left and right hand inner shrouds (6).
- (7) Remove four screws (7) and front outer shroud (8) from left and right hand outer shrouds (3).
- (8) Remove eight screws (9) and front inner shroud (10) from left and right hand inner shrouds (6).
- (9) Remove six screws (11), washers (12), and left and right hand inner shrouds (6) from base slide assembly (13).
- (10) Remove six screws (14) and partially separate left and right hand outer shrouds (3) from base weldment (15).




### WARNING

The supports must be capable of holding up table top after table top is disconnected from base slide assembly and the base slide assembly is removed. Failure to support table top properly could result in table top falling out-of-control which could result in serious personal injury or death.

- (11) Place supports (See Figure 4-34) under foot section and back section of table top, making sure weight of table top is being supported by supports. If necessary, plug power cord into outlet and lower table top onto supports. Unplug power cord from outlet.
- (12) Remove two E-rings (1, Figure 4-34), clevis pin (2), and separate tilt cylinder (3) from bracket (4).

**SECTION IV  
MAINTENANCE / SERVICE**

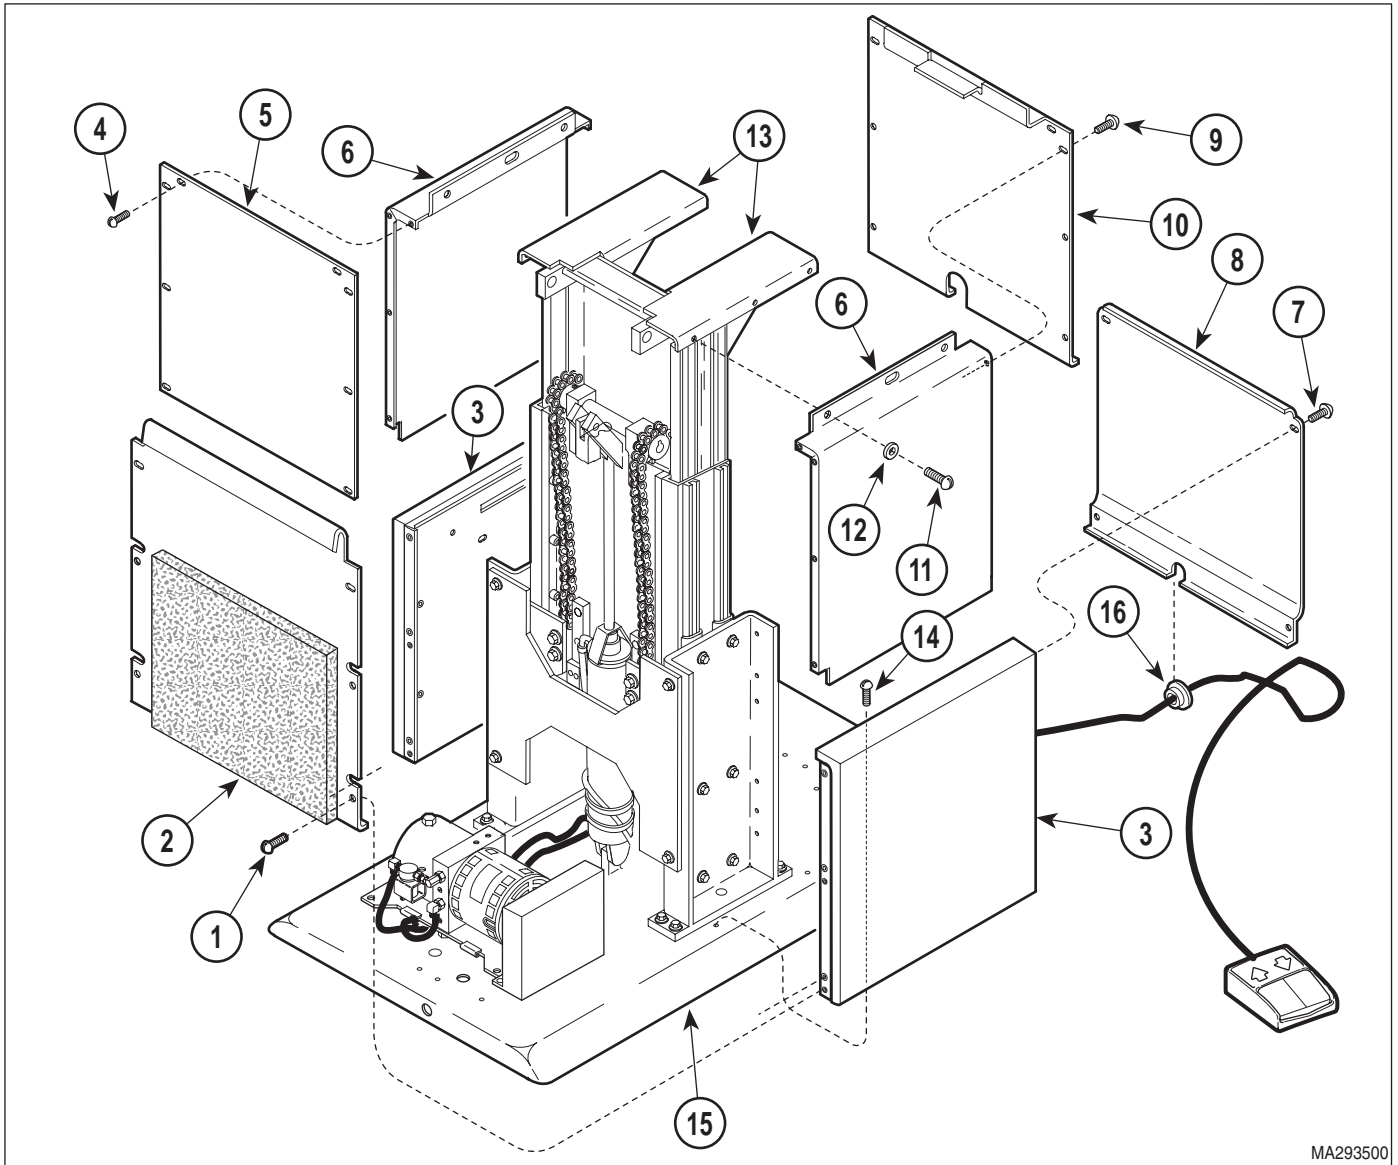

MA293500

**Figure 4-33. Shrouds Removal / Installation**

(13) Loosen four setscrews (5). Remove two tilt pivot pins (6) from base slide assembly (7).

(14) Plug power cord into wall outlet. Lower TABLE DOWN function all the way down. Unplug power cord from wall outlet.




**WARNING**

Make sure table top is properly supported for the following step. Table top will rest only on supports after this step. Also do not touch any wires inside of table when power cord is plugged in. This could result in electrical shock. Failure to comply with this warning could result in serious personal injury or death.



**WARNING**

Make sure base slide assembly is fully retracted (collapsed) before disconnecting base cylinder. Failure to do so will result in base slide assembly collapsing after base cylinder is disconnected which could result in serious personal injury.

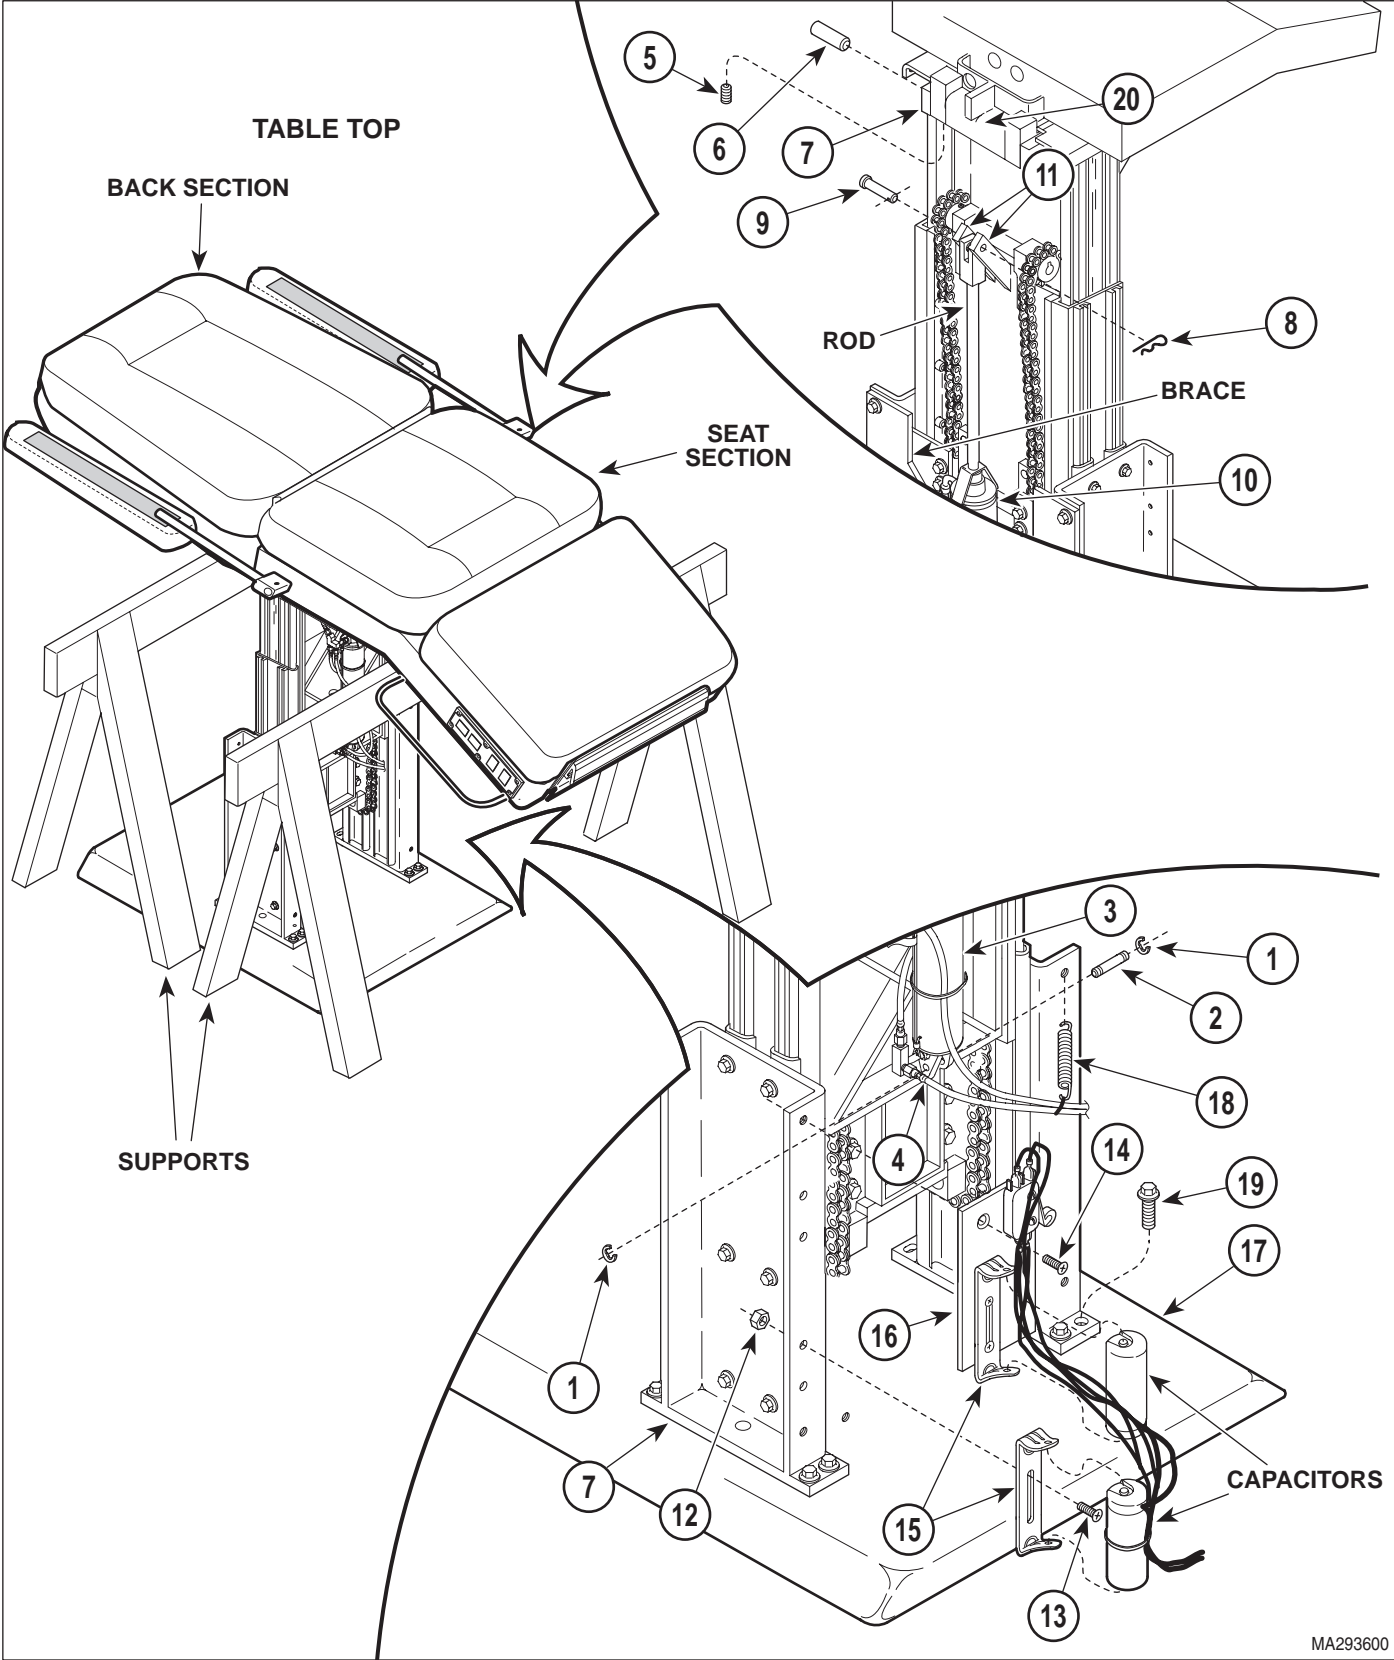

MA293600

**Figure 4-34. Base Slide Assembly Removal / Installation**

## SECTION IV MAINTENANCE / SERVICE

- (15) Remove hitch pin clip (8), clevis pin (9), and separate rod of base cylinder (10) from bracket (11).
- (16) Remove capacitors (Refer to para 4.23).
- (17) Remove five nuts (12), four screws (13), one screw (14), two capacitor mounting brackets (15), and partially separate auto return bracket assembly (16) from base slide assembly (7). Lay auto return bracket assembly out of the way on base weldment (17).
- (18) Disconnect spring (18) from base slide assembly (7).
- (19) Remove eight screws (19) from base slide assembly (7).

### NOTE

If necessary, remove four screws and brace to allow base slide assembly to be pulled over base cylinder.

- (20) With the help of an assistant, remove base slide assembly (7) from base weldment (17).

### B. Installation

- (1) With the help of an assistant, install base slide assembly (7, Figure 4-34) on base weldment (17), making sure base cylinder (10) gets inserted between brace and base slide assembly.
- (2) Secure base slide assembly (7) on base weldment (17) with eight screws (19).
- (3) Connect spring (18) to base slide assembly (7).
- (4) Install auto return bracket assembly (16) and two capacitor mounting brackets (15) on base slide assembly (7) and secure with one screw (14), four screws (13), and five nuts (12).
- (5) Install capacitors (Refer to para 4.23).
- (6) Install rod end of base cylinder (10) on bracket (11) and secure with clevis pin (9) and hitch pin clip (8).

### NOTE

Install beveled edge of tilt pivot pins first. The beveled edge allows the tilt pivot pins to be started more easily.

- (7) Raise TABLE UP function until base slide assembly (7) is aligned with seat weldment (20). Secure base slide assembly to seat weldment with two tilt pivot pins (6).
- (8) Secure tilt pivot pins (6) in place by tightening four setscrews (5).
- (9) Install base of tilt cylinder (3) on bracket (4) and secure with clevis pin (2) and two E-rings (1).
- (10) Remove supports from under head section and seat section of table top.
- (11) If necessary, adjust base down limit switch (Refer to para 4.26).
- (12) Install left and right hand outer shrouds (3, Figure 4-33) on base weldment (15) and secure with six screws (14).
- (13) Install left and right hand inner shrouds (6) on base slide assembly (13) and secure with six washers (12) and screws (11).
- (14) Install front inner shroud (10) on left and right hand inner shrouds (6) and secure with eight screws (9).
- (15) Install front outer shroud (8) on left and right hand outer shrouds (3) and secure with four screws (7).
- (16) Install back inner shroud (5) on left and right hand inner shrouds (6) and secure with eight screws (4).
- (17) Install back outer shroud (2) on left and right hand outer shrouds (3) and secure with four screws (1).
- (18) Make sure strain relief bushing (16) is installed on front outer shroud (8).

- (19) Install motor cover assembly (Refer to para 4.2).
- (20) Plug power cord into wall outlet.

### 4.29 Reclining Arm Adjustment


#### A. Adjustment

- (1) Raise BACK UP function all the way up.

**NOTE**

When correctly adjusted, the left and right reclining arms (1) will be level with the seat section and the reclining arms will also be even with each other.

- (3) Loosen jam nut (1, Figure 4-35) on reclining arm (2).

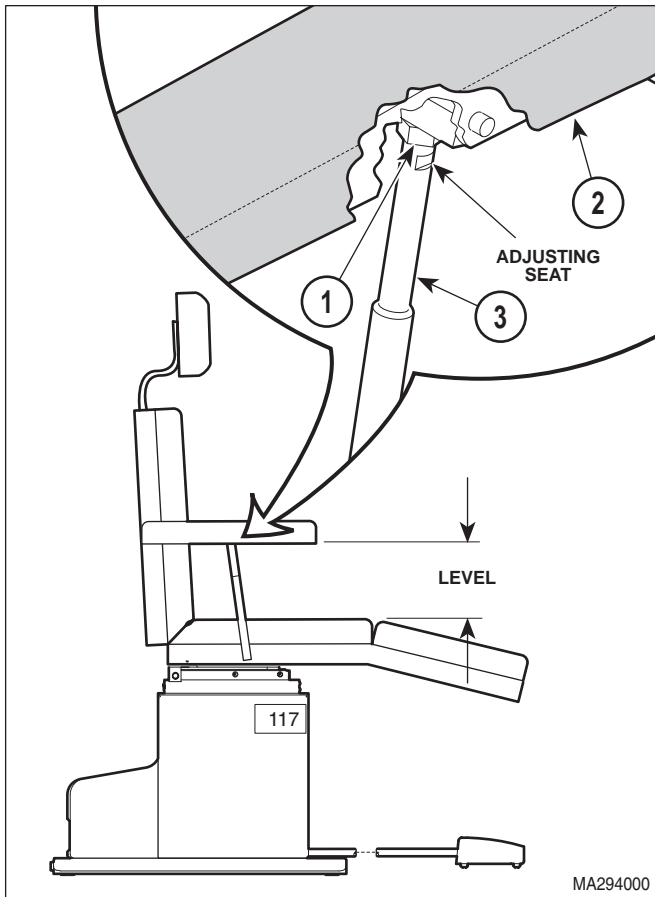

**Figure 4-35. Reclining Arm Adjustment**

- (4) Using wrench on adjusting seat, adjust inner rod (3) up or down until reclining arm (2) is level with seat section.
- (5) Tighten jam nut (1).
- (6) Repeat steps (3) thru (5) for other reclining arm (2), except, adjust this reclining arm so it is even with first reclining arm adjusted.

### 4.30 Hydraulic System Flushing Procedure

**NOTE**


The following procedure is recommended when:

- The hydraulic system is excessively contaminated with dirt particles or water, causing repeated malfunctions of hydraulic components.
- An oil other than light weight mineral oil has been added to the hydraulic system, causing the table to malfunction or perform erratically.

#### A. Flushing Procedure

- (1) Lower TABLE DOWN, BACK DOWN, and TILT DOWN functions all the way down.
- (2) Remove motor cover assembly (Refer to para 4.2).
- (3) Remove filler cap (1, Figure 4-36) from reservoir (2).
- (4) Get a suitable drain pan with a capacity of approximately 2 quarts (1.9 liters).
- (5) Using a syringe or suction device, remove all oil from the reservoir (2).
- (6) Refill reservoir (2) with light grade mineral oil.
- (7) Disconnect hose (A) from down functions shuttle valve (3) and place end of hose in drain pan.

**SECTION IV  
MAINTENANCE / SERVICE**

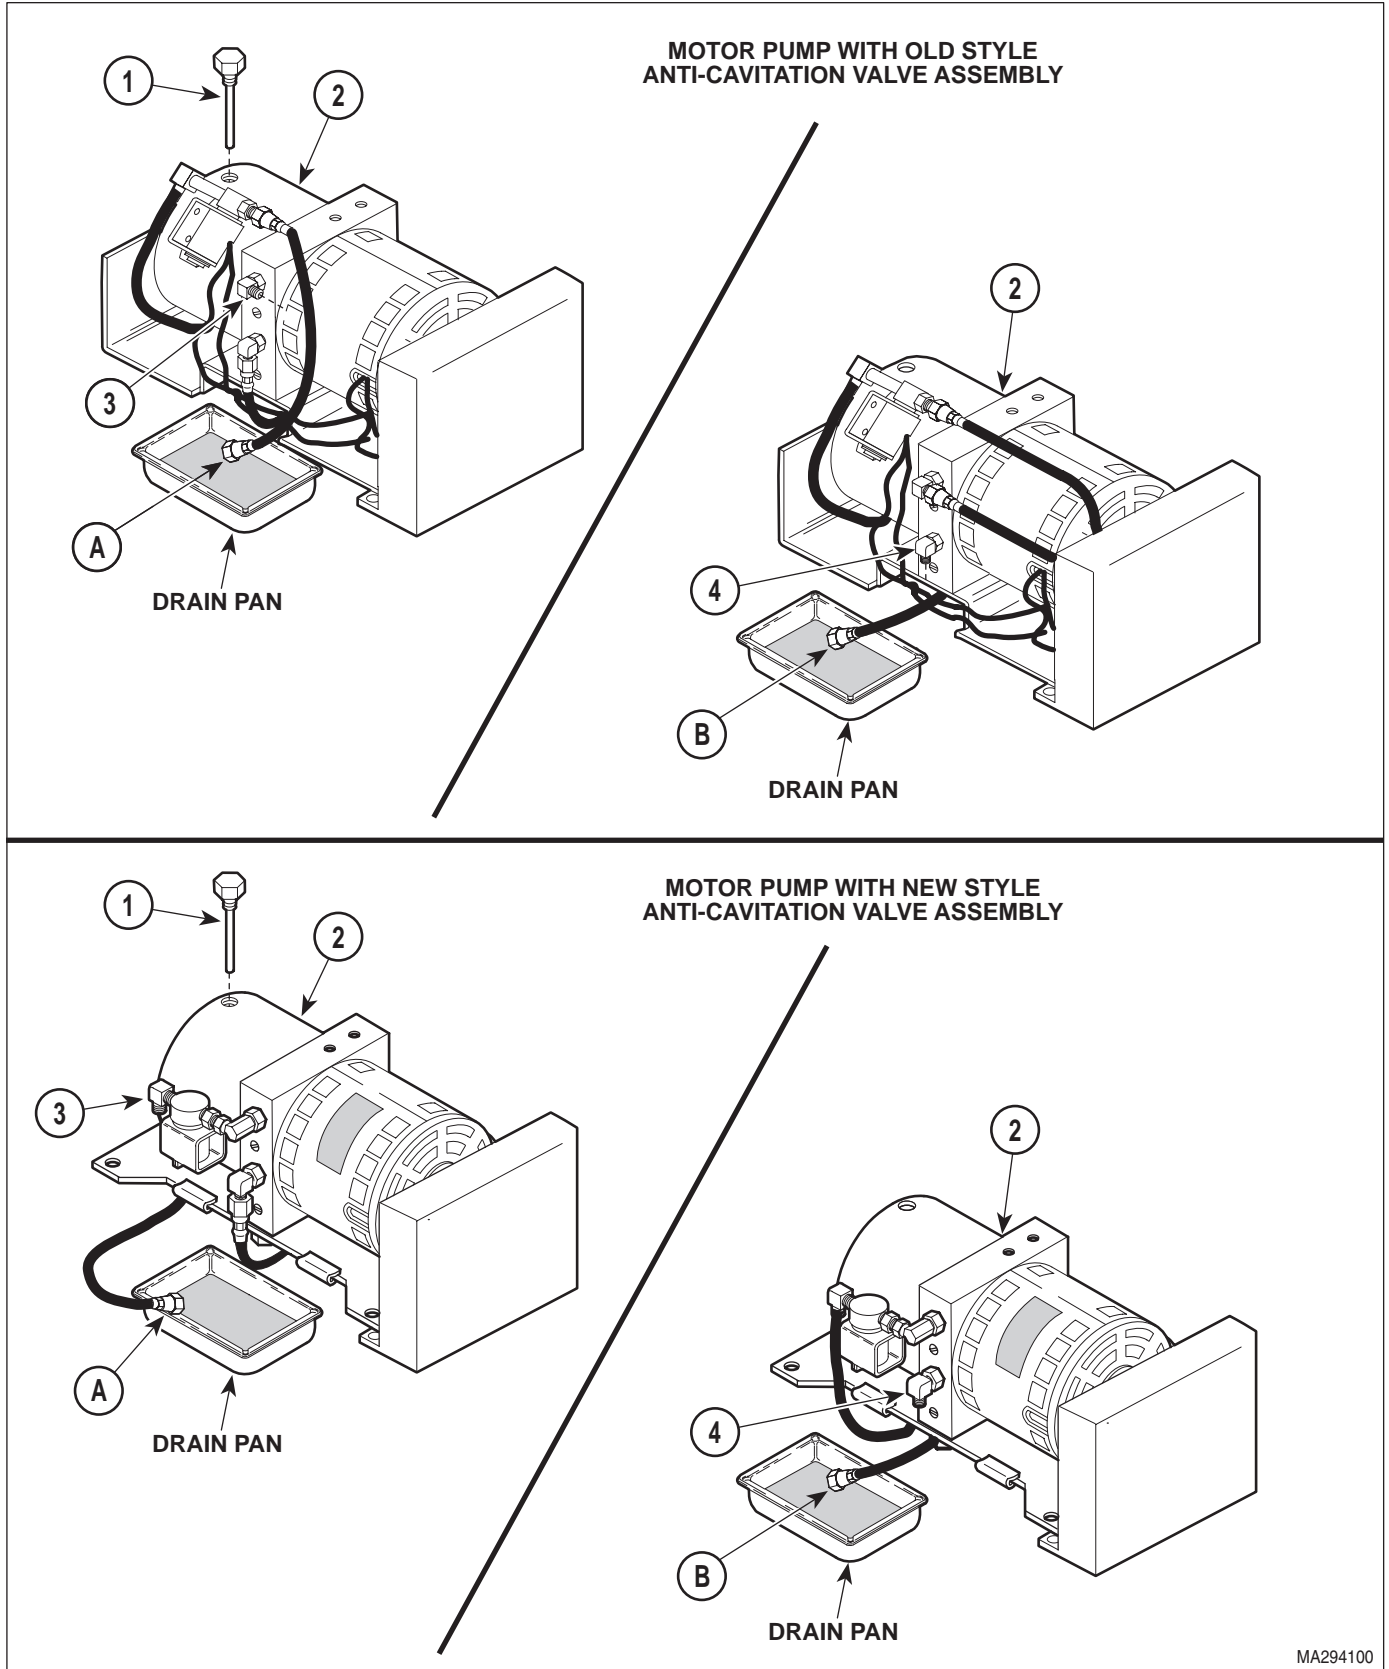

MA294100

**Figure 4-36. Hydraulic System Flushing Procedure**

- (8) Raise TABLE UP, BACK UP, and TILT UP functions all the way up, while making sure to keep refilling reservoir (2) with light grade mineral oil as necessary.
- (9) Connect hose (A) to down functions shuttle valve (3).
- (10) Disconnect hose (B) from up functions shuttle valve (4) and place end of hose in drain pan.
- (11) Lower TABLE DOWN, BACK DOWN, and TILT DOWN functions all the way down, while making sure to keep refilling reservoir (2) with light grade mineral oil as necessary.
- (12) Connect hose (B) to up functions shuttle valve (4).
- (13) Repeat steps 7 thru 12 until oil being removed is clear and contains no dirt particles.
- (14) Run all the functions up and down until all air is purged from the hydraulic system.


- (15) Lower all functions; then check oil level and add or remove oil as necessary (Refer to para 4.3).
- (16) Install motor cover assembly (Refer to para 4.2).
- (17) Dispose of used oil in accordance with local regulations.

**4.31 Old Style Anti-Cavitation Solenoid Valve Rebuild**

**A. Disassembly Of New Style Anti-Cavitation Solenoid Valve**

- (1) Loosen screw (1, Figure 4-37) and remove wire clip (2) from groove of solenoid valve (3).
- (2) Remove solenoid valve (3), coil (4), and spring tab (5) from bracket (6).

**B. Disassembly Of Old Style Anti-Cavitation Solenoid Valve**

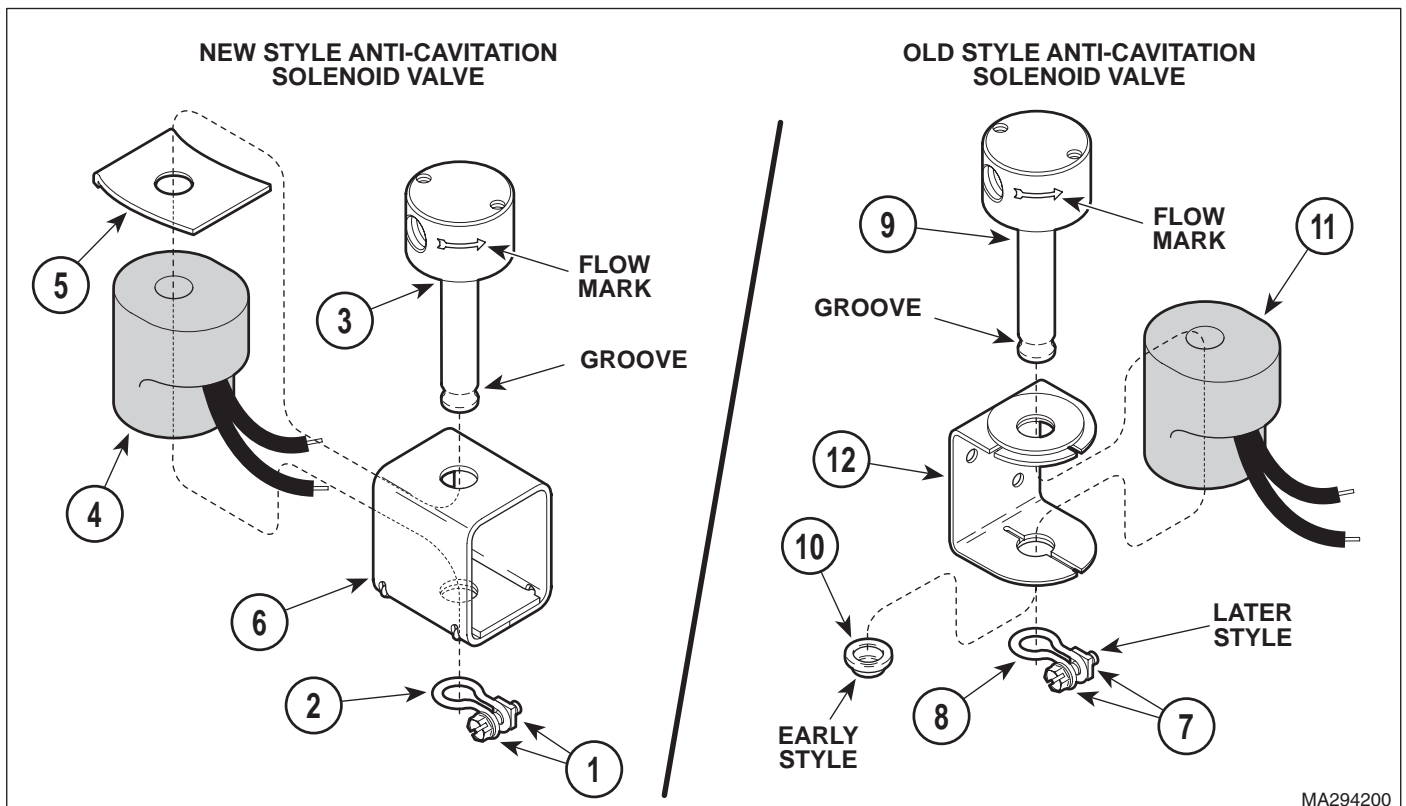

**Figure 4-37. Old Style Ant-Cavitation Solenoid Valve Rebuild**

## SECTION IV MAINTENANCE / SERVICE

### NOTE

There are two types of fasteners used to secure the solenoid valve; a wire clip or locking cap.

- (1) Loosen screw (7, Figure 4-37) and remove wire clip (8) from groove of solenoid valve (9) **or** remove locking cap (10) from groove of solenoid valve (9).
- (2) Remove solenoid valve (9) and coil (11) from bracket (12).

### C. Assembly Of Old Style Anti-Cavitation Solenoid Valve

- (1) Install new coil (4, Figure 4-37) and solenoid valve (3) on bracket (12).
- (2) Install wire clip (2) on groove of solenoid valve (3) and secure by tightening screw (1).




**SECTION V  
SCHEMATICS AND DIAGRAMS**

**5.1 Electrical Schematics / Wiring Diagrams**


wiring connections between the electrical components in the table.

Figures 5-1 and 5-2 illustrate the logic/current flow and

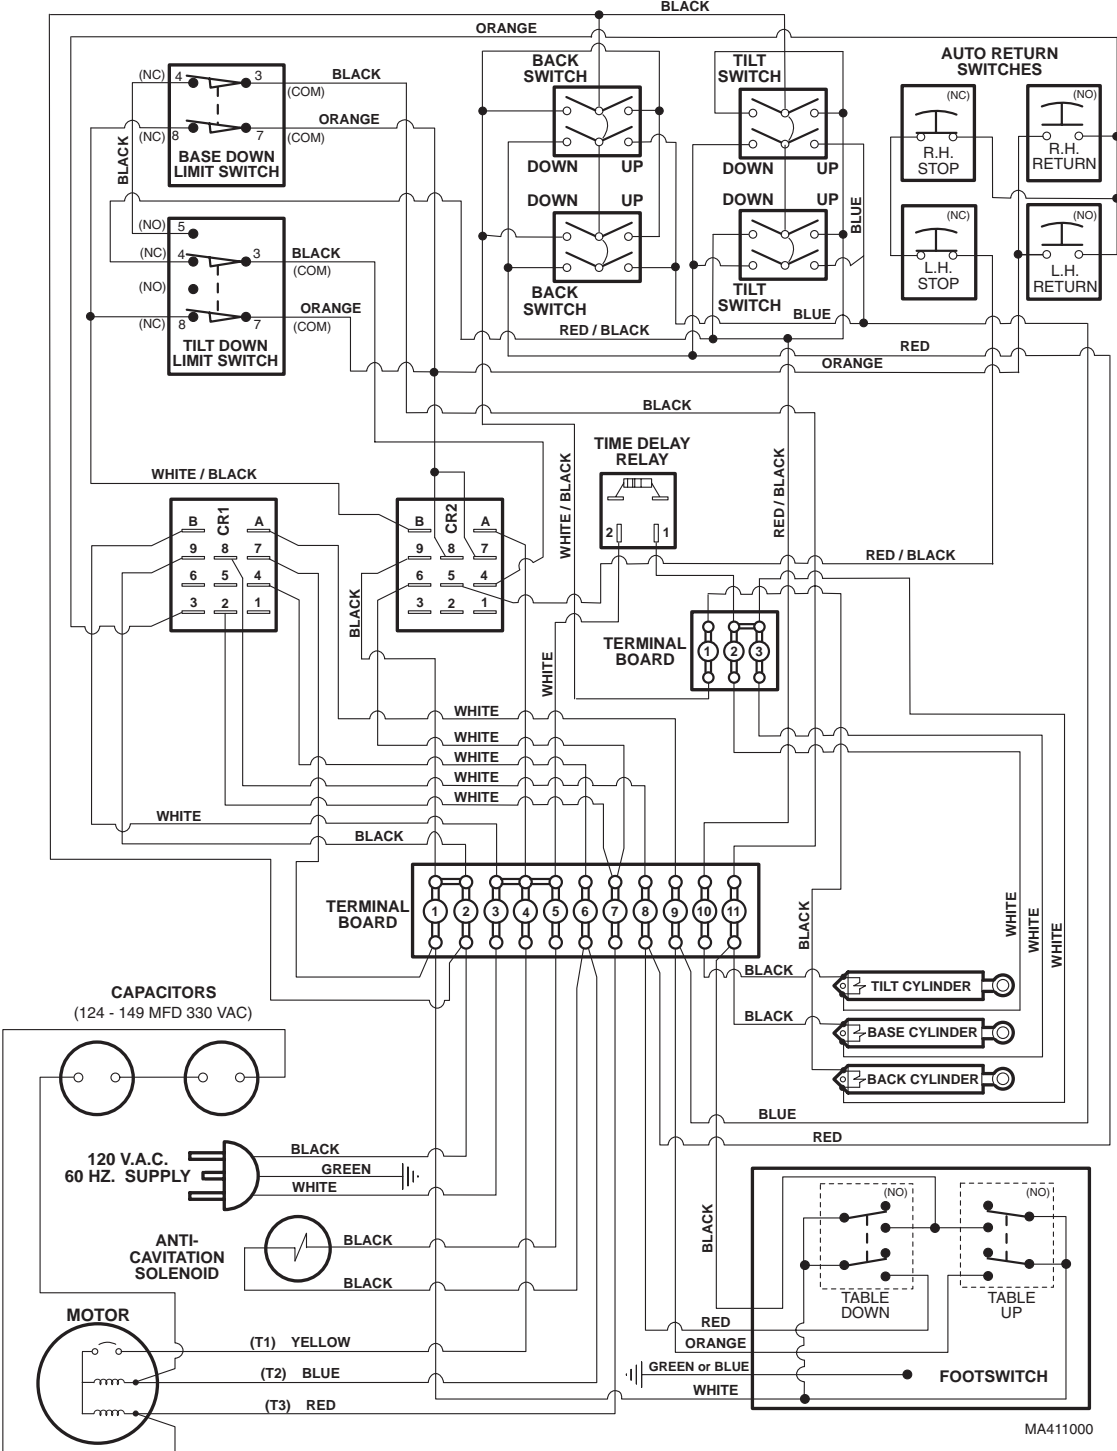

**Figure 5-1. Wiring Diagram, Sheet 1 of 3 (Used on Units With Serial Numbers AJ-1000 Thru AJ-3089 )**


# SECTION V SCHEMATICS AND DIAGRAMS

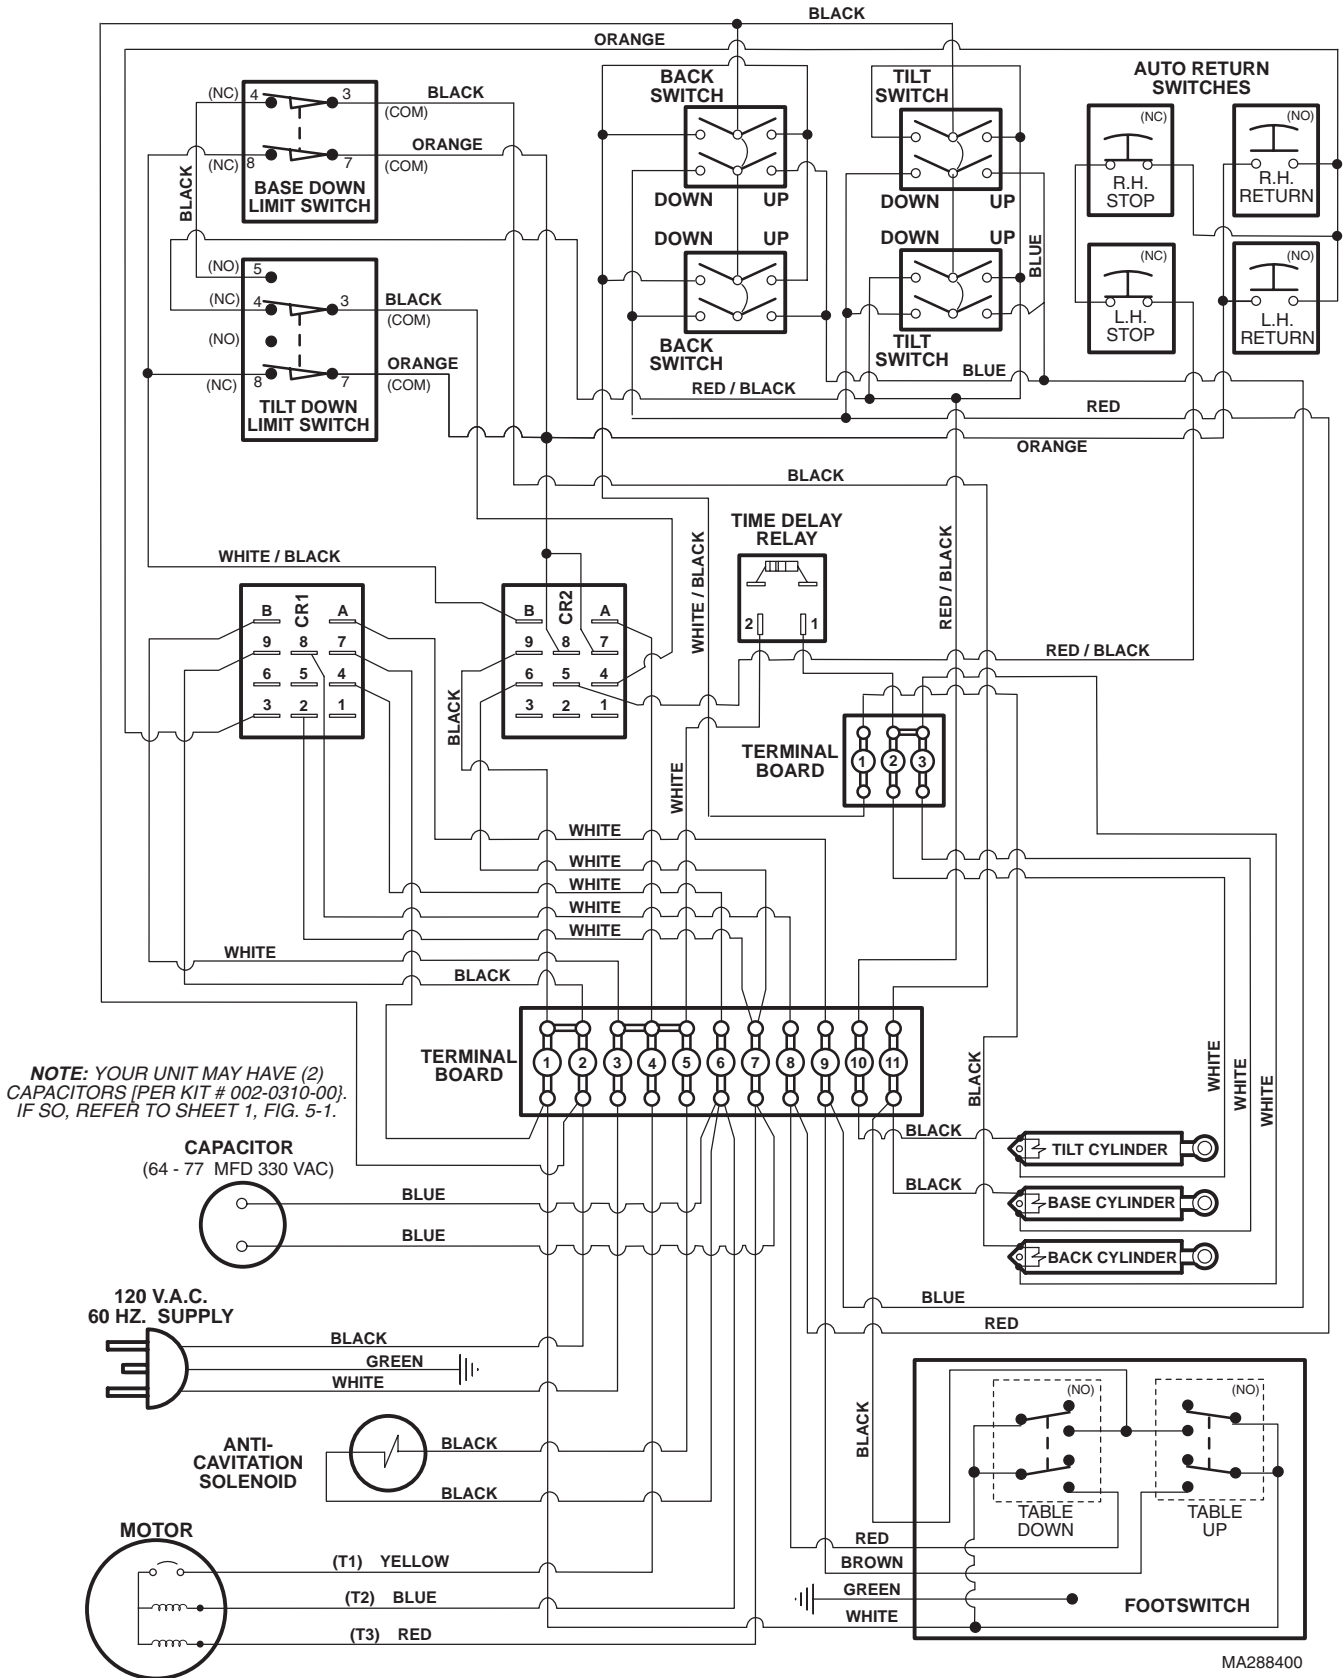

MA288400

Figure 5-1. Wiring Diagram, Sheet 2 of 3. (Used On Units With Serial Numbers AJ-3090 Thru Present)

# SECTION V SCHEMATICS AND DIAGRAMS

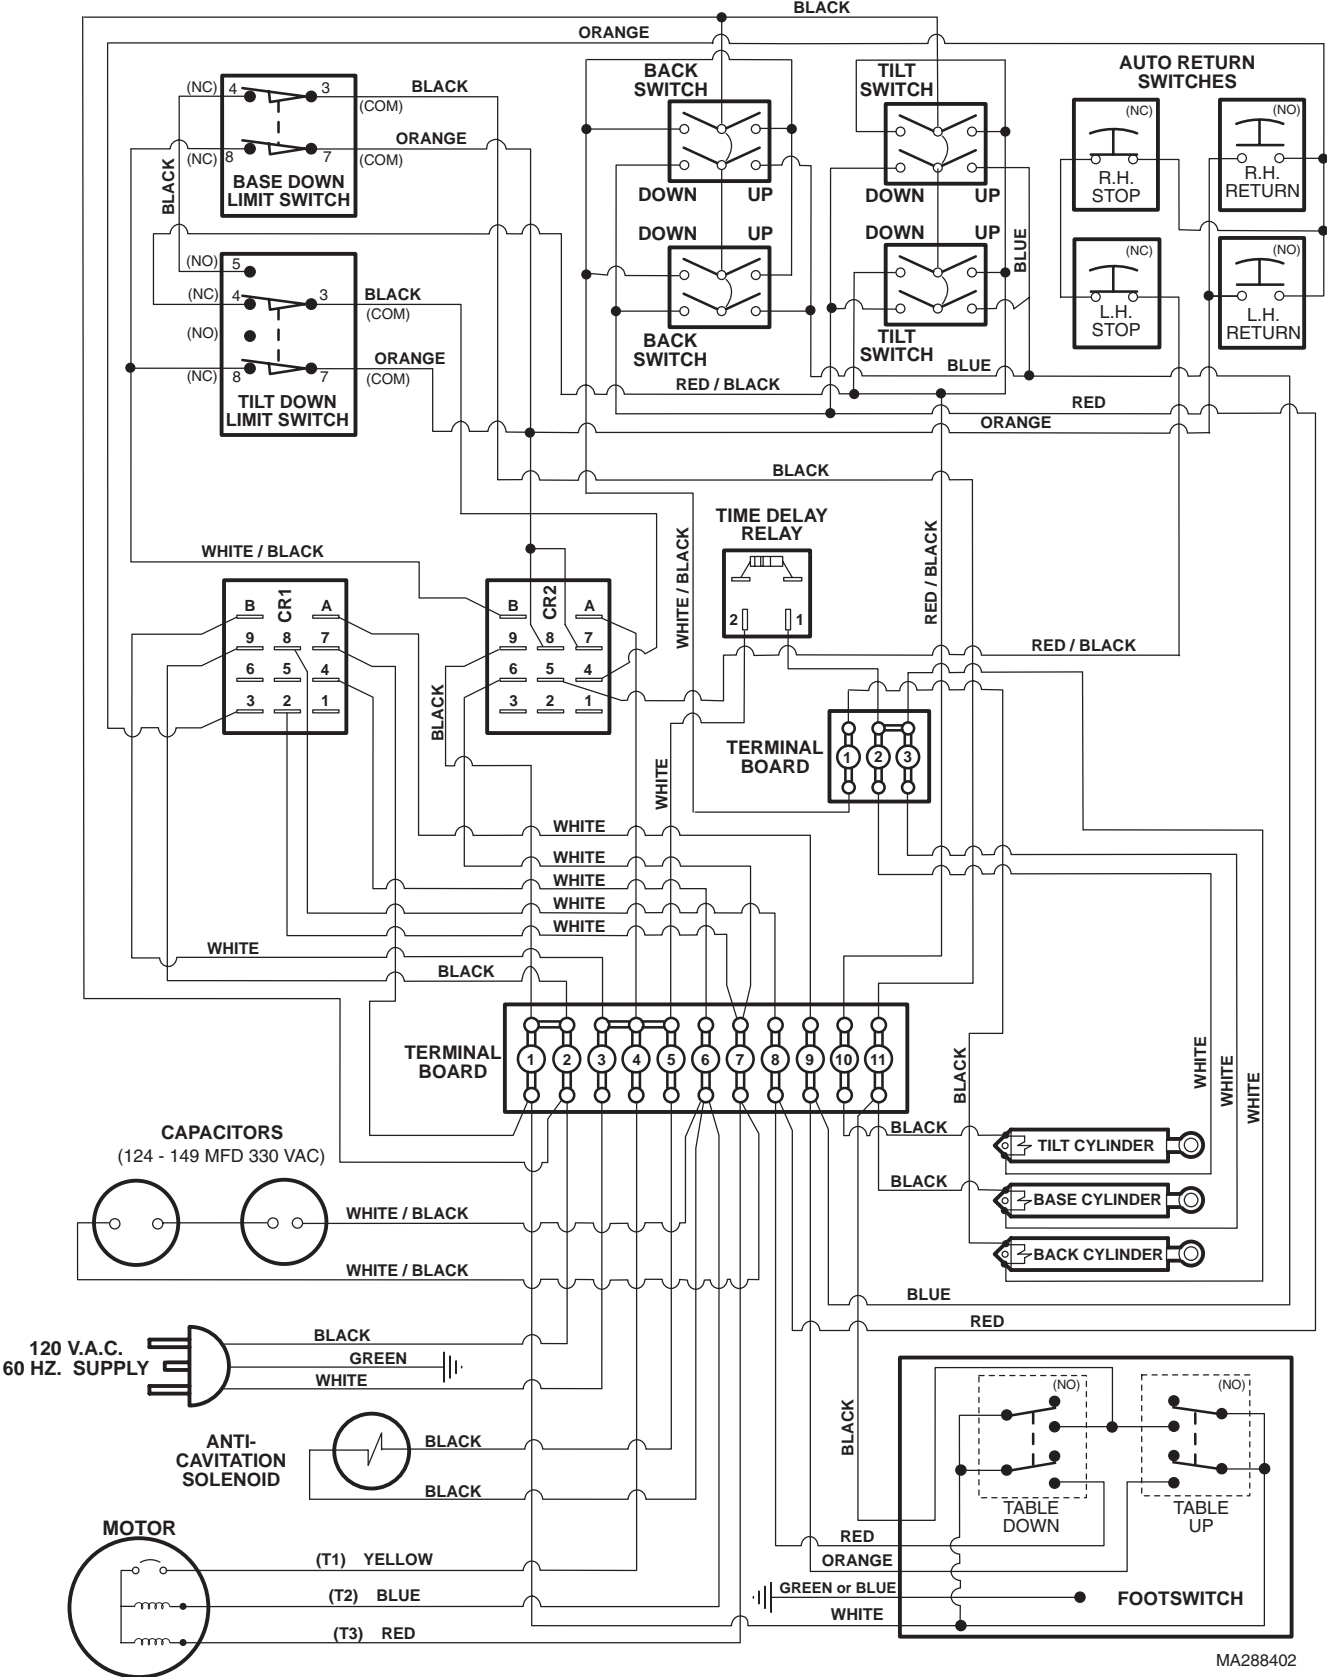

MA288402

Figure 5-1. Wiring Diagram, Sheet 3 of 3. (Used On Units With Serial Numbers FE-1000 Thru Present)

# SECTION V SCHEMATICS AND DIAGRAMS

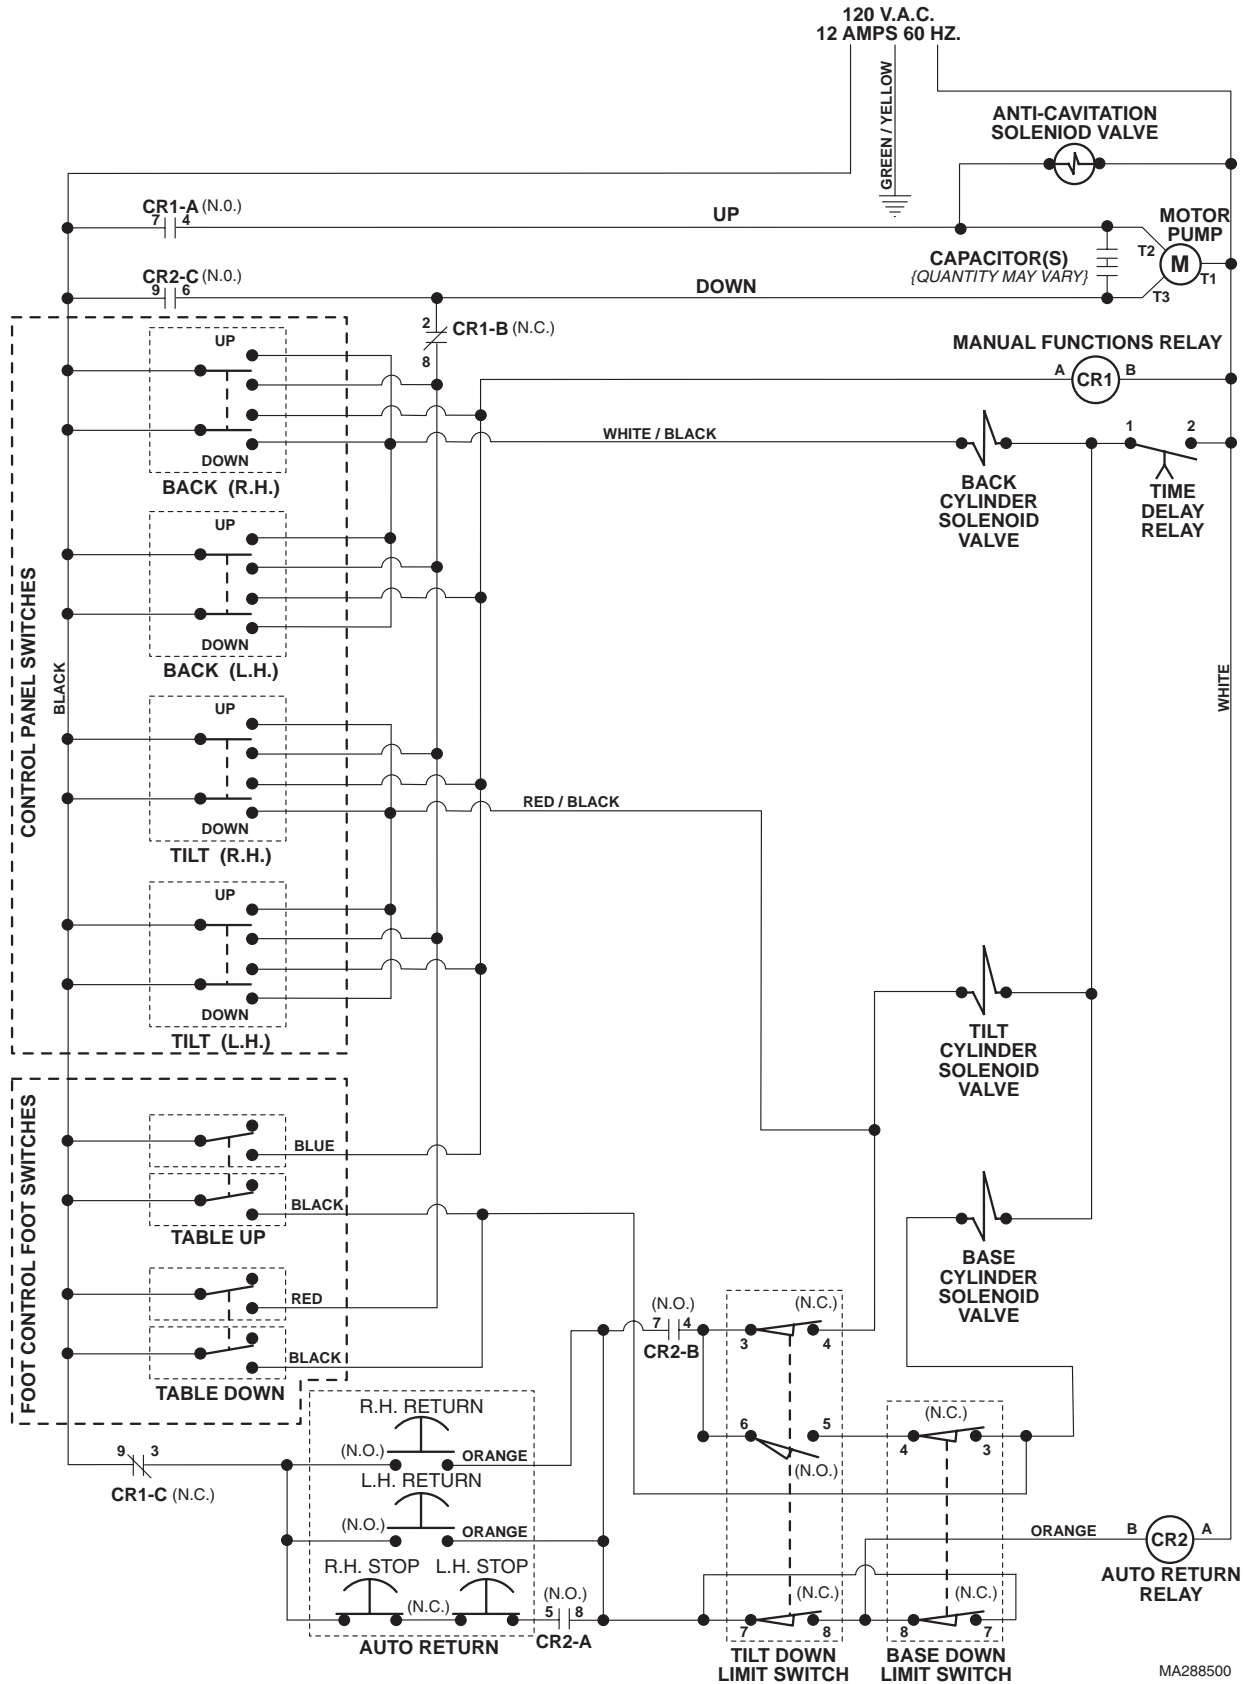


Figure 5-2. Electrical Schematic

# SECTION V SCHEMATICS AND DIAGRAMS

## 5.2 Hydraulic Flow Diagrams

Figure 5-3 illustrates the hydraulic oil flow through the

chair when an up function is selected. Figure 5-4 illustrates the hydraulic oil flow through the chair when a down function is selected.

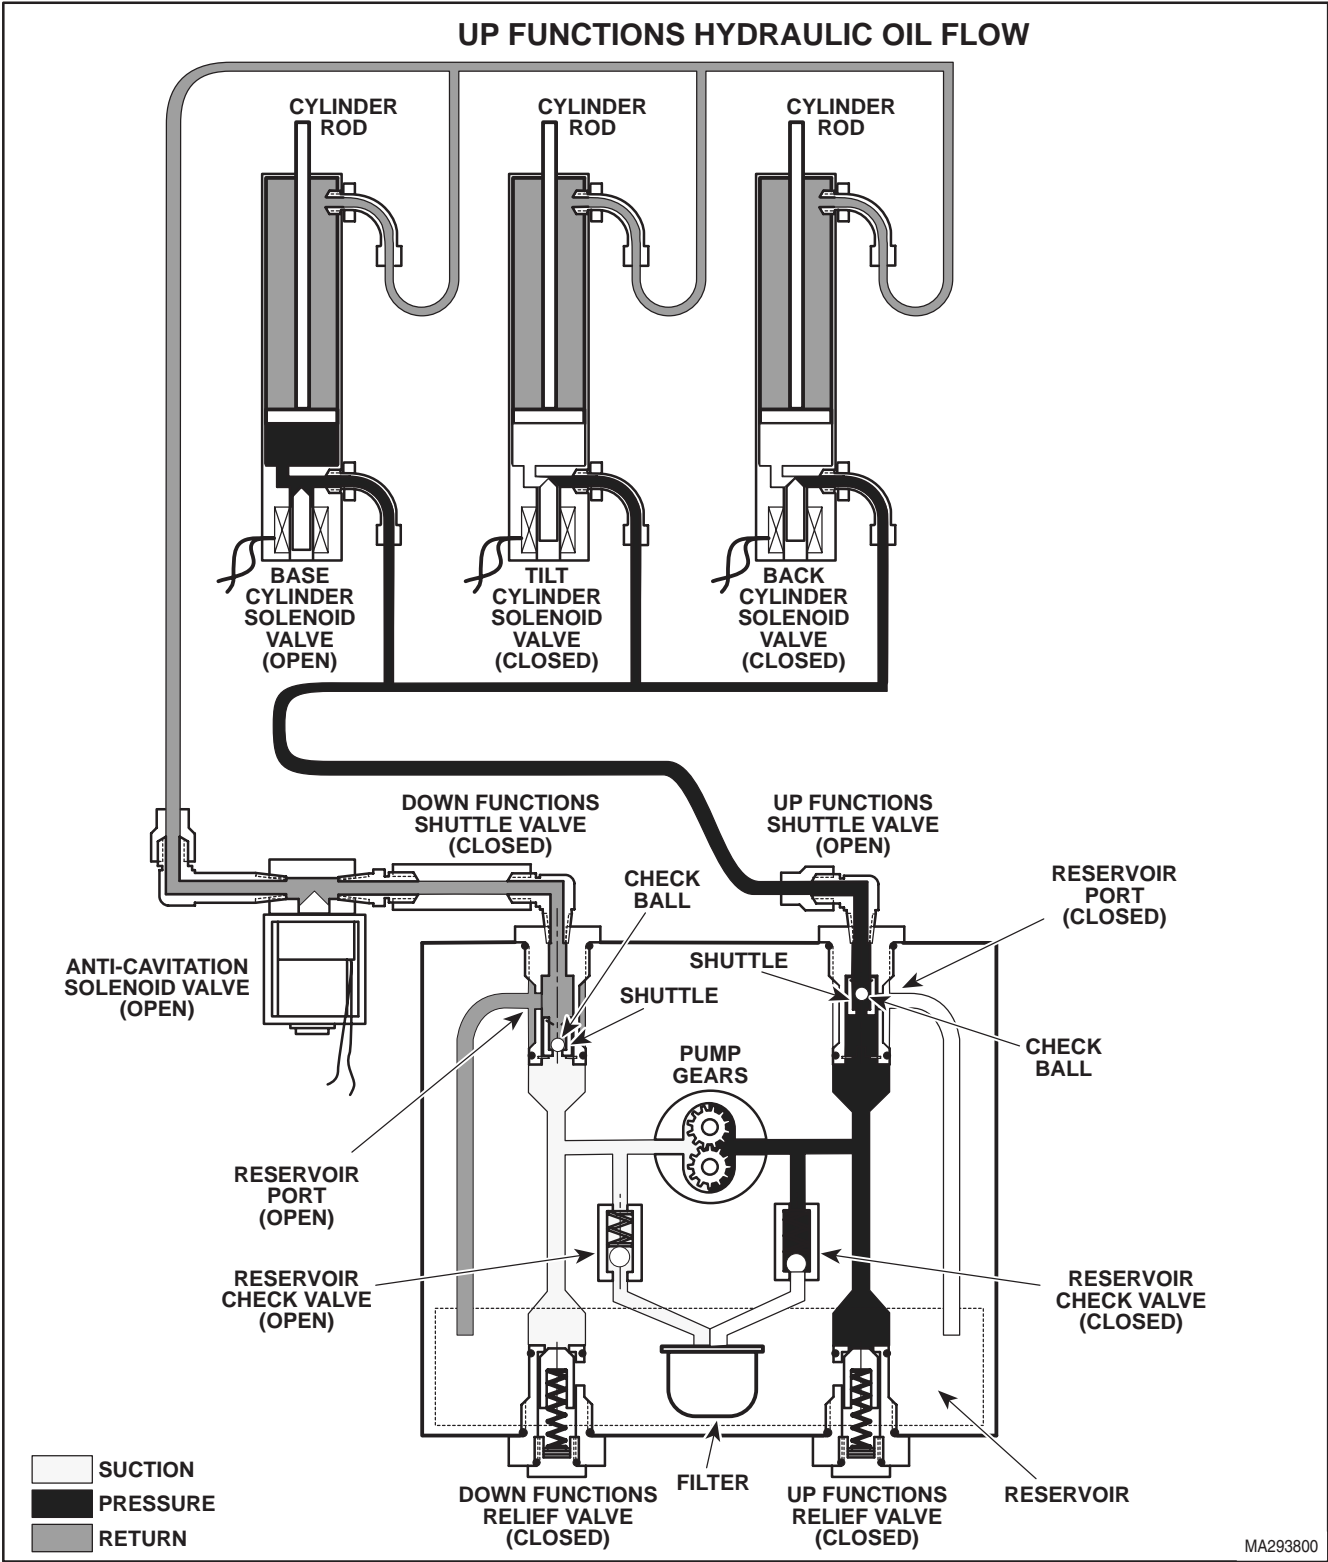


Figure 5-3. Up Functions Hydraulic Flow Diagram

# SECTION V SCHEMATICS AND DIAGRAMS

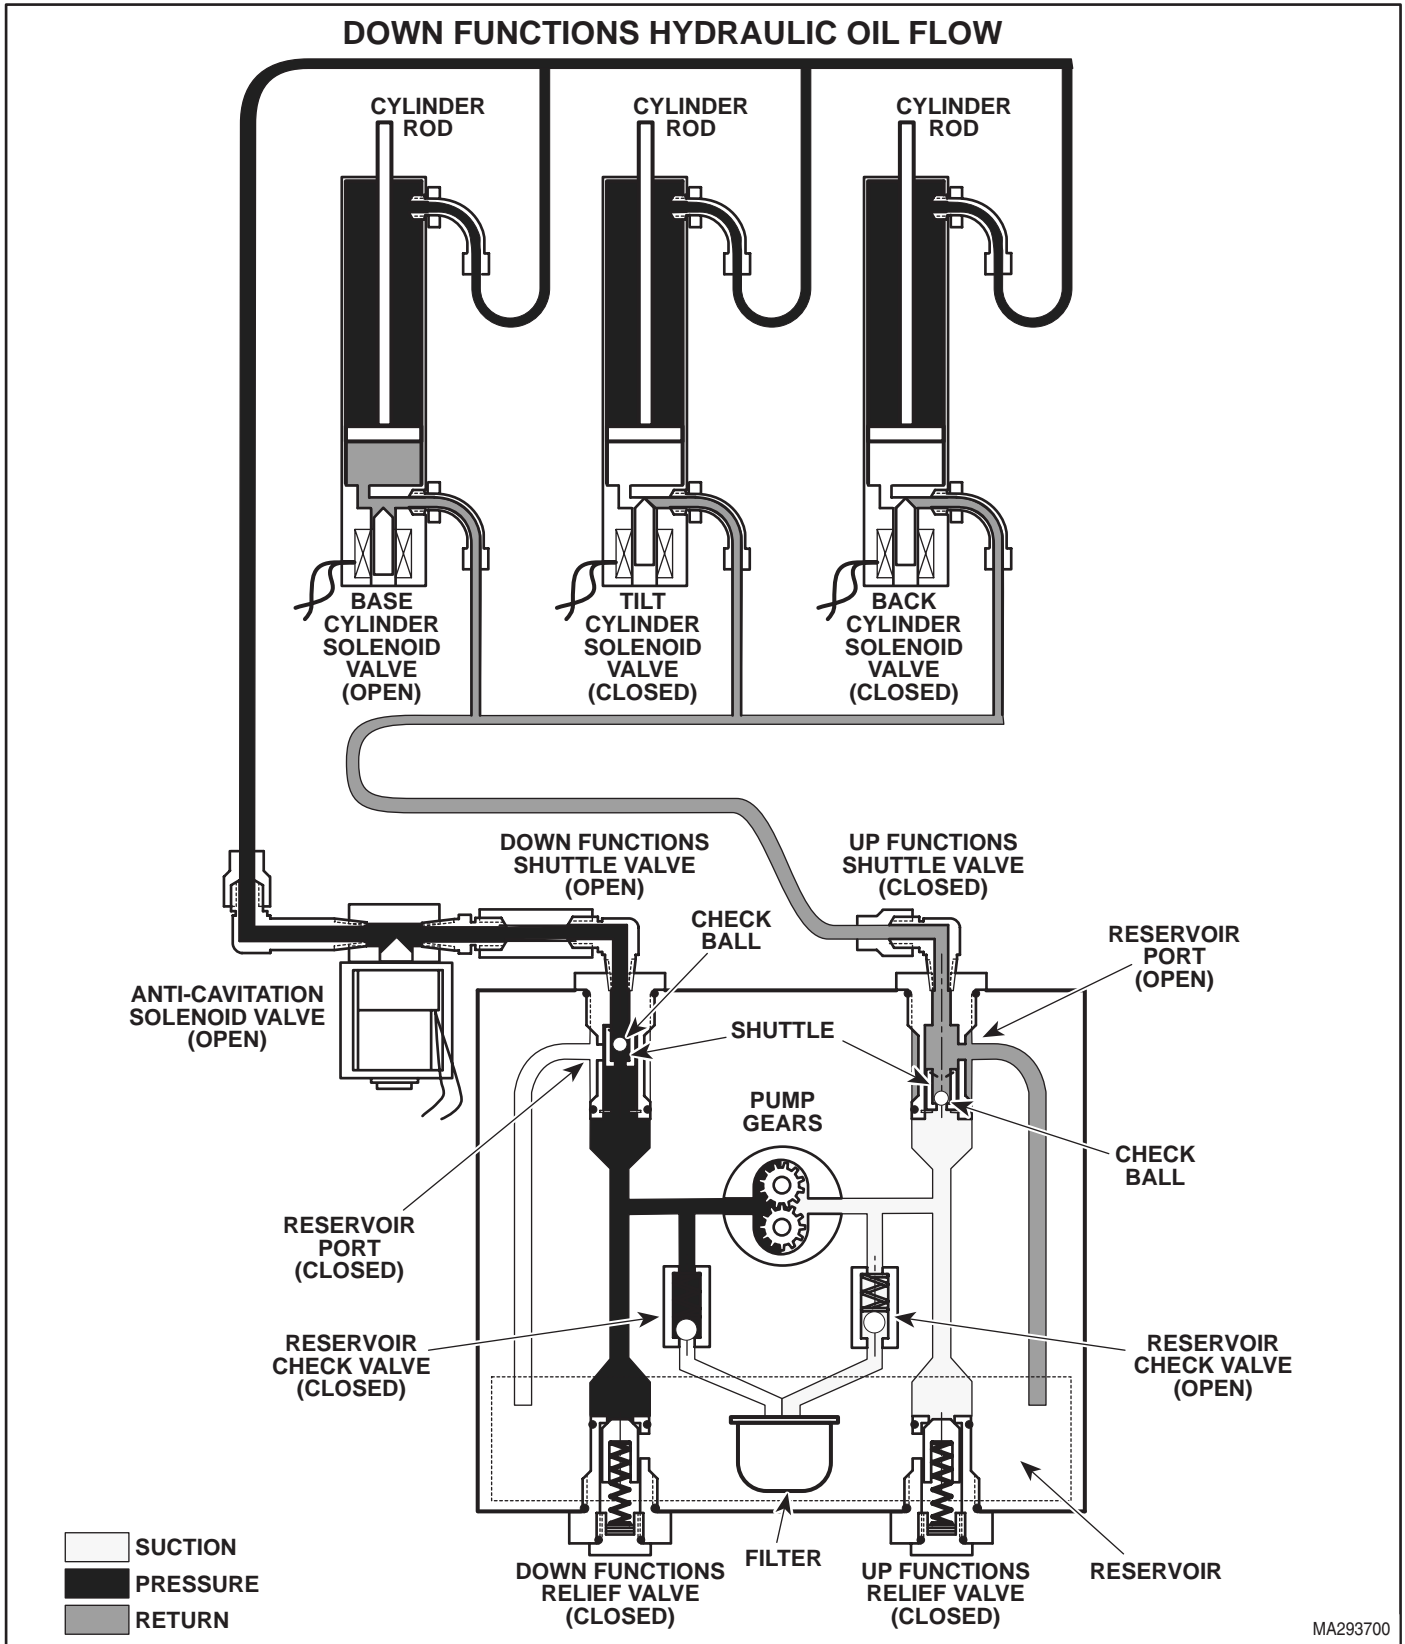


Figure 5-4. Down Functions Hydraulic Flow Diagram

## **SECTION VI PARTS LIST**

### **6.1 Introduction**

The illustrated parts list provides information for identifying and ordering the parts necessary to maintain the unit in peak operating condition. Refer to paragraph 1.5 for parts ordering information.

The parts list also illustrates disassembly and assembly relationships of parts.

### **6.2 Description of Columns**

The *Item* column of the parts list gives a component its own unique number. The same number is given to the component in the parts illustration. This allows a part number of a component to be found if the technician can visually spot the part on the illustration. The technician simply finds the component in question on the illustration and notes the item number of that component. Then, he finds that item number in the parts list. The row corresponding to the item number gives the technician the part number, a description of the component, and quantity of parts per subassembly. Also, if a part number is known, the location of that component can be determined by looking for the item number of the component on the illustration.

The *Part No.* column lists the MIDMARK part number for that component.

The *Description* column provides a physical description of the component.

The *Qty.* column lists the number of units of a particular component that is required for the subassembly. The letters "AR" denote "as required" when quantities of a particular component cannot be determined, such as: adhesive.


Bullets [ • ] in the *Part No.* column and the *Description* column show the indenture level of a component. If a component does not have a bullet, it is a main component of that illustration. If a component has a bullet, it is a subcomponent of the next component listed higher in the parts list than itself that does not have a bullet. Likewise, if a component has two bullets, it is a subcomponent of the next component listed higher in the parts list than itself that has only one bullet.

### **6.3 Torque Specifications and Important Assembly Notes**

When specific assembly torque specifications, measurements, or procedures have been identified, by our engineering department, as required to assure proper function of the unit, those torque specifications measurements, and procedures will be noted on the parts illustrations. Adherence to these requirements is essential.

# Pictorial Index

## SECTION VI PARTS LIST

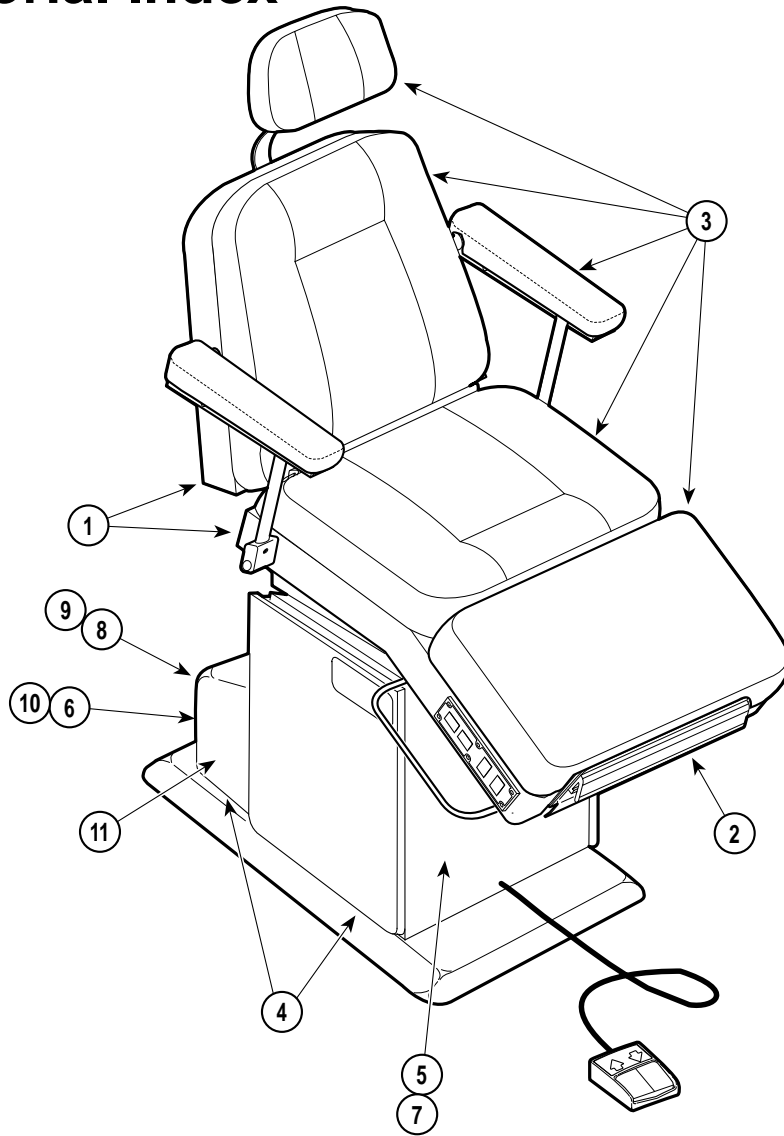

MA288100

### Used on units with Serial Numbers AJ-1000 thru Present

Item	Part No.	Description	Page	Item	Part No.	Description	Page
		117PowerPodiatry Table		9	•	• Base Electrical Components-Export (AJ-1000 thru AJ-1276)	6-11
1	•	• Back and Seat Components	6-3		•	• Base Electrical Components-Export (AJ-1277 thru Present)	6-11.1
2	•	• Leg Components	6-4	10	•	• Motor/Pump Components (AJ-1000 thru AJ-3090)	6-12
3	•	• Upholstery Set (AJ-1000 thru AJ-1276)	6-5		•	• Motor/Pump Components (AJ-3090 thru Present)	6-12.1
	•	• Upholstery Set (AJ-1277 thru Present)	6-5.1	11	•	• Control Panel Assembly	6-13
4	•	• Base Cover and Enclosures	6-6	OPTIONAL ACCESSORIES Refer to MEDICAL ACCESSORY BOOK {004-0096-00}			
5	•	• Base Mechanical Components	6-7				
6	•	• Hydraulic System (AJ-1000 thru AJ-3143)	6-8	13	• 9A6400X	• Vision Block Screen	9A64
	•	• Hydraulic System (AJ-3144 thru Present)	6-8.1	14	• 9A75001	• Caster Base Assembly	9A75
7	•	• Base Slide Assembly	6-9	15	• 9A83001	• Instrument Tray	9A83
8	•	• Base Electrical Components-Domestic (AJ-1000 thru AJ-1272)	6-10	16	• 9A18400X	• Base Rail Kit	9A184
	•	• Base Electrical Components-Domestic (AJ-1273 thru AJ-1276)	6-10.1	17	• 9A197001	• Swivel Wheel Caster Accessory	9A197
	•	• Base Electrical Components-Domestic (AJ-1277 thru Present)	6-10.2				


Always Specify Model & Serial Number





# Back and Seat Components

## SECTION VI PARTS LIST

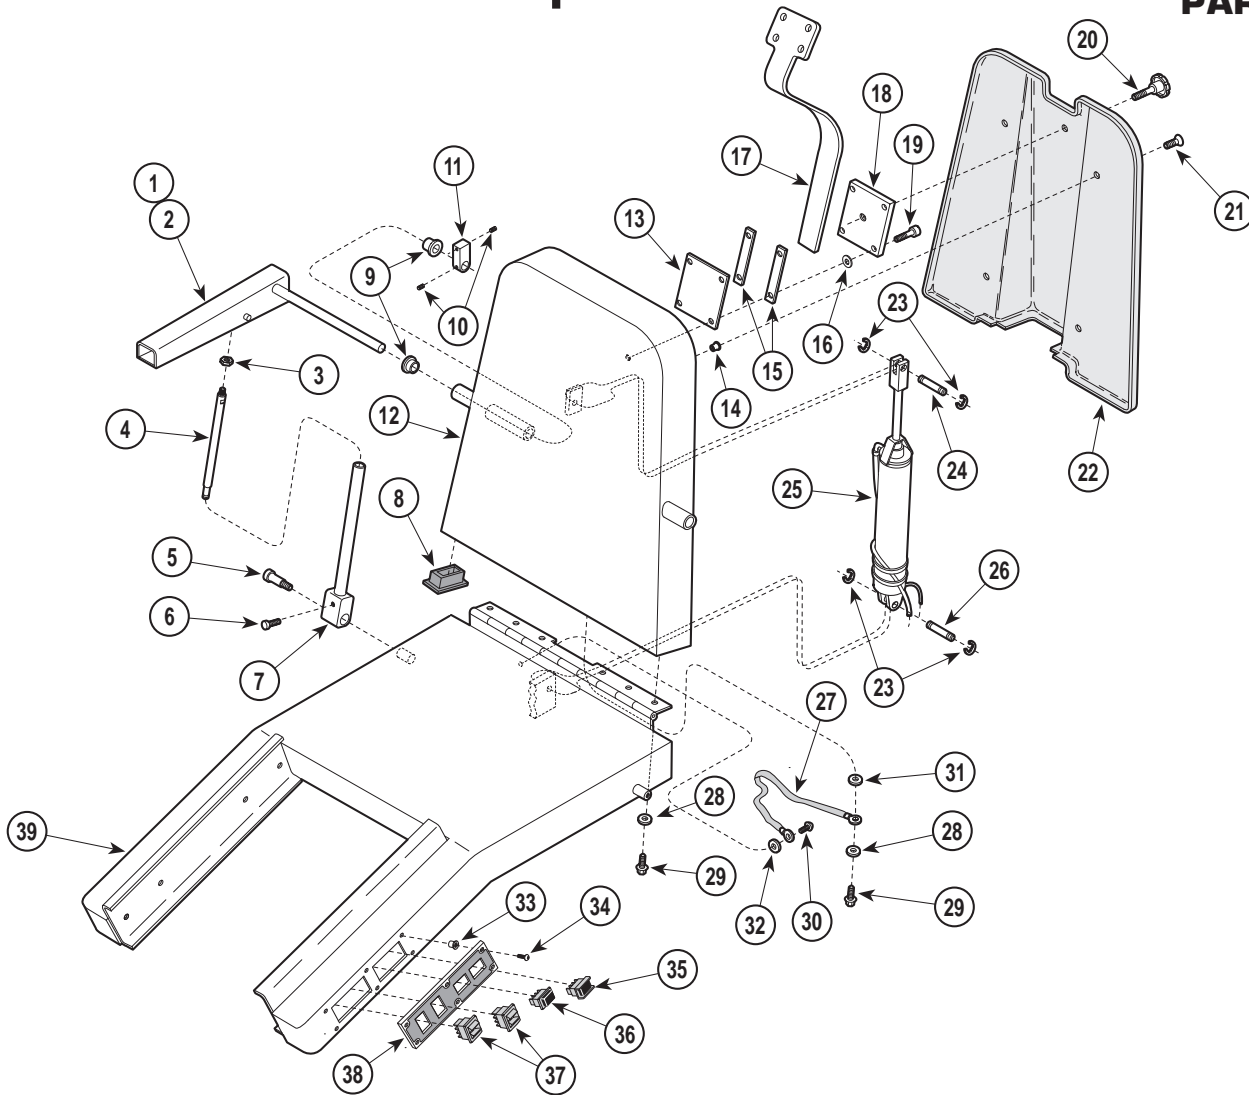

MA286200


### Used on units with Serial Numbers AJ-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	030-0300-00	Reclining Arm - R.H. (Shown)	1	21	040-0010-28	Screw	4
2	030-0300-02	Reclining Arm - L.H. (Opposite)	1	22	053-0147-00	Back Cover	1
3	041-0375-02	Jam Nut	2	23	042-0007-00	E-Ring	4
4	057-0120-00	Inner Rod	2	24	042-0006-00	Clevis Pin	1
5	042-0014-03	Shoulder Screw	2	25		Back Cylinder (Refer to "Hydraulic System" Elsewhere)	1
6	016-0335-00	Spring Plunger	2	26	042-0006-01	Clevis Pin	1
7	030-0322-00	Outer Arm Weldment - R.H. (Shown)	1	27	015-0082-02	Grounding Braid	1
	030-0322-02	Outer Arm Weldment - L.H. (Opposite)	1	28	045-0001-03	Lockwasher	6
8	053-0115-01	Rectangular Plug	4	29	040-0250-10	Screw	6
9	016-0131-02	Bushing	4	30	040-0010-04	Screw	1
10	040-0250-05	Set Screw	4	31	045-0001-05	Lockwasher	1
11	051-0271-00	Arm Stop	2	32	045-0001-31	Lockwasher	1
12	030-0297-00	Back Weldment	1	33	042-0045-02	Nutsert	12
13	050-0907-00	Spacer	1	34	040-0008-28	Screw	12
14	042-0045-01	Nutsert	4	35	015-0424-00	Auto Return Switch	2
15	051-0264-00	Guide Bar	2	36	015-0376-00	Stop Switch	2
16	045-0001-13	Spring Washer	4	37	015-0408-00	Rocker Switch	4
17	030-0291-00	Headrest Weldment	1	38	061-0144-00	Switch Plate - L.H. (Shown)	1
18	050-0908-00	Lock Plate	1		061-0143-00	Switch Plate - R.H. (Opposite)	1
19	040-0250-33	Screw	4	39	030-0337-00	Seat Weldment	1
20	016-0175-00	Knob	1				

Always Specify Model & Serial Number

# Back and Seat Components

## SECTION VI PARTS LIST

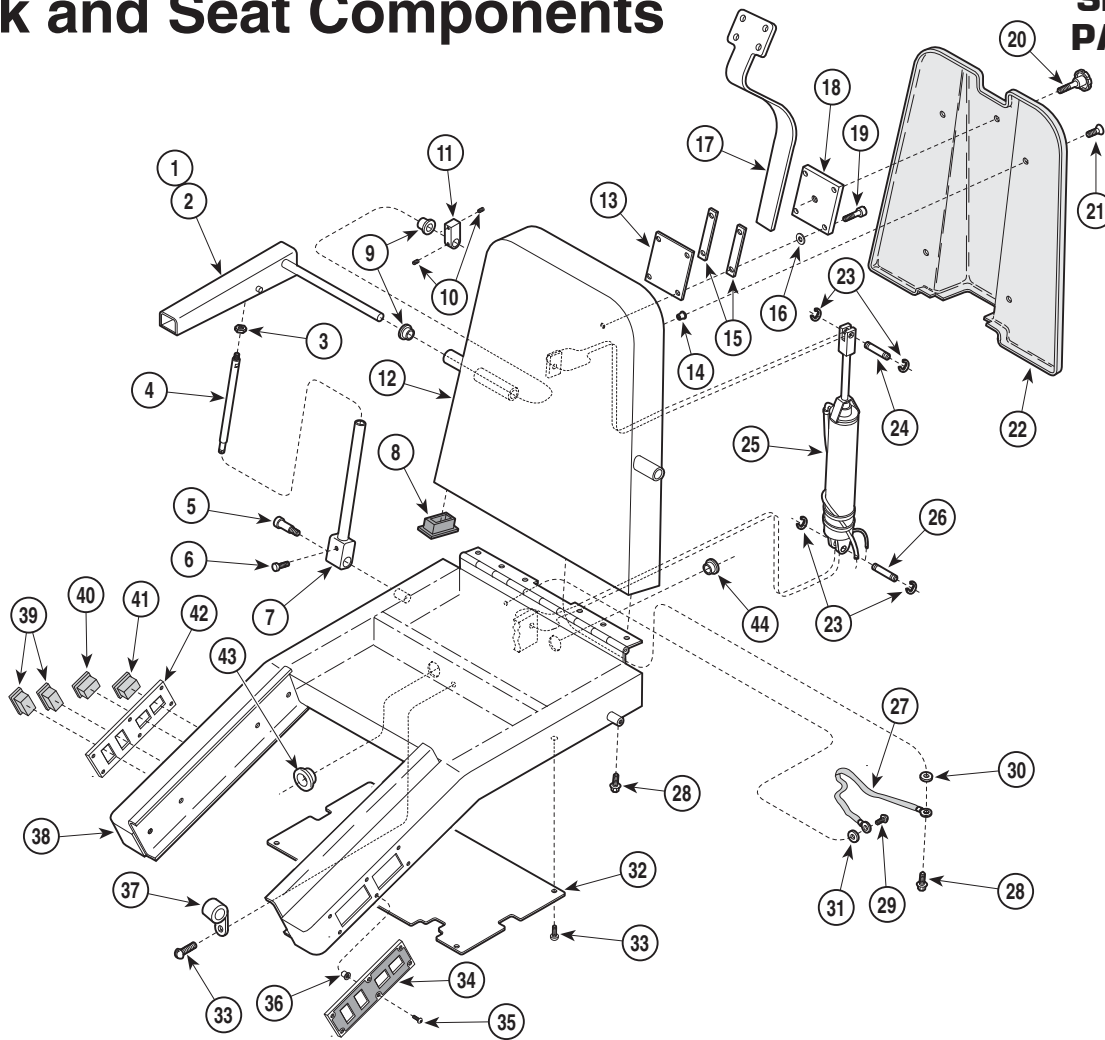

MA287800


### Used on units with Serial Numbers FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	030-0300-00	Reclining Arm - R.H. (Shown)	1	24	042-0006-00	Clevis Pin	1
2	030-0300-02	Reclining Arm - L.H. (Opposite)	1	25		Back Cylinder (Refer to "Hydraulic System" Elsewhere)	1
3	041-0375-02	Jam Nut	2	26	042-0006-01	Clevis Pin	1
4	057-0120-00	Inner Rod	2	27	015-0082-02	Grounding Braid	1
5	042-0014-03	Shoulder Screw	2	28	040-0250-88	Screw	6
6	016-0335-00	Spring Plunger	2	29	040-0010-04	Screw	1
7	030-0322-00	Outer Arm Weldment - R.H. (Shown)	1	30	045-0001-05	Lockwasher	1
	030-0322-02	Outer Arm Weldment - L.H. (Opposite)	1	31	045-0001-31	Lockwasher	1
8	053-0115-01	Rectangular Plug	4	32	050-3504-20	Seat Cover	1
9	016-0131-02	Bushing	4	33	040-0010-47	Screw	5
10	040-0250-05	Set Screw	4	34	050-3596-00	Switchplate	1
11	051-0271-00	Arm Stop	2		<del>061-0613-01</del>	Switch Label - L.H. (Not Shown)	1
12	030-0297-20	Back Weldment	1	35	040-0008-28	Screw	12
13	050-0907-00	Spacer	1	36	042-0045-02	Nutsert	12
14	042-0045-01	Nutsert	4	37	015-0001-02	Wire Clip	1
15	051-0264-00	Guide Bar	2	38	030-0999-20	Seat Weldment	1
16	045-0001-13	Spring Washer	4	39	015-0408-00	Rocker Switch	4
17	N.L.A.	Headrest Weldment	1	40	015-0376-00	Stop Switch	2
18	050-0908-00	Lock Plate	1	41	015-0424-00	Auto Return Switch	2
19	040-0250-33	Screw	4	42	050-3596-00	Switchplate	1
20	016-0175-00	Knob	1		<del>061-0613-00</del>	Switch Label - R.H. (Not Shown)	1
21	040-0010-28	Screw	4	43	053-0068-06	Snap Bushing	4
22	053-0147-01	Back Cover	1	44	053-0068-08	Snap Bushing	2
23	042-0007-00	E-Ring	4				

N.L.A. Denotes "No Longer Available"  
Always Specify Model & Serial Number

# Leg Components

## SECTION VI PARTS LIST

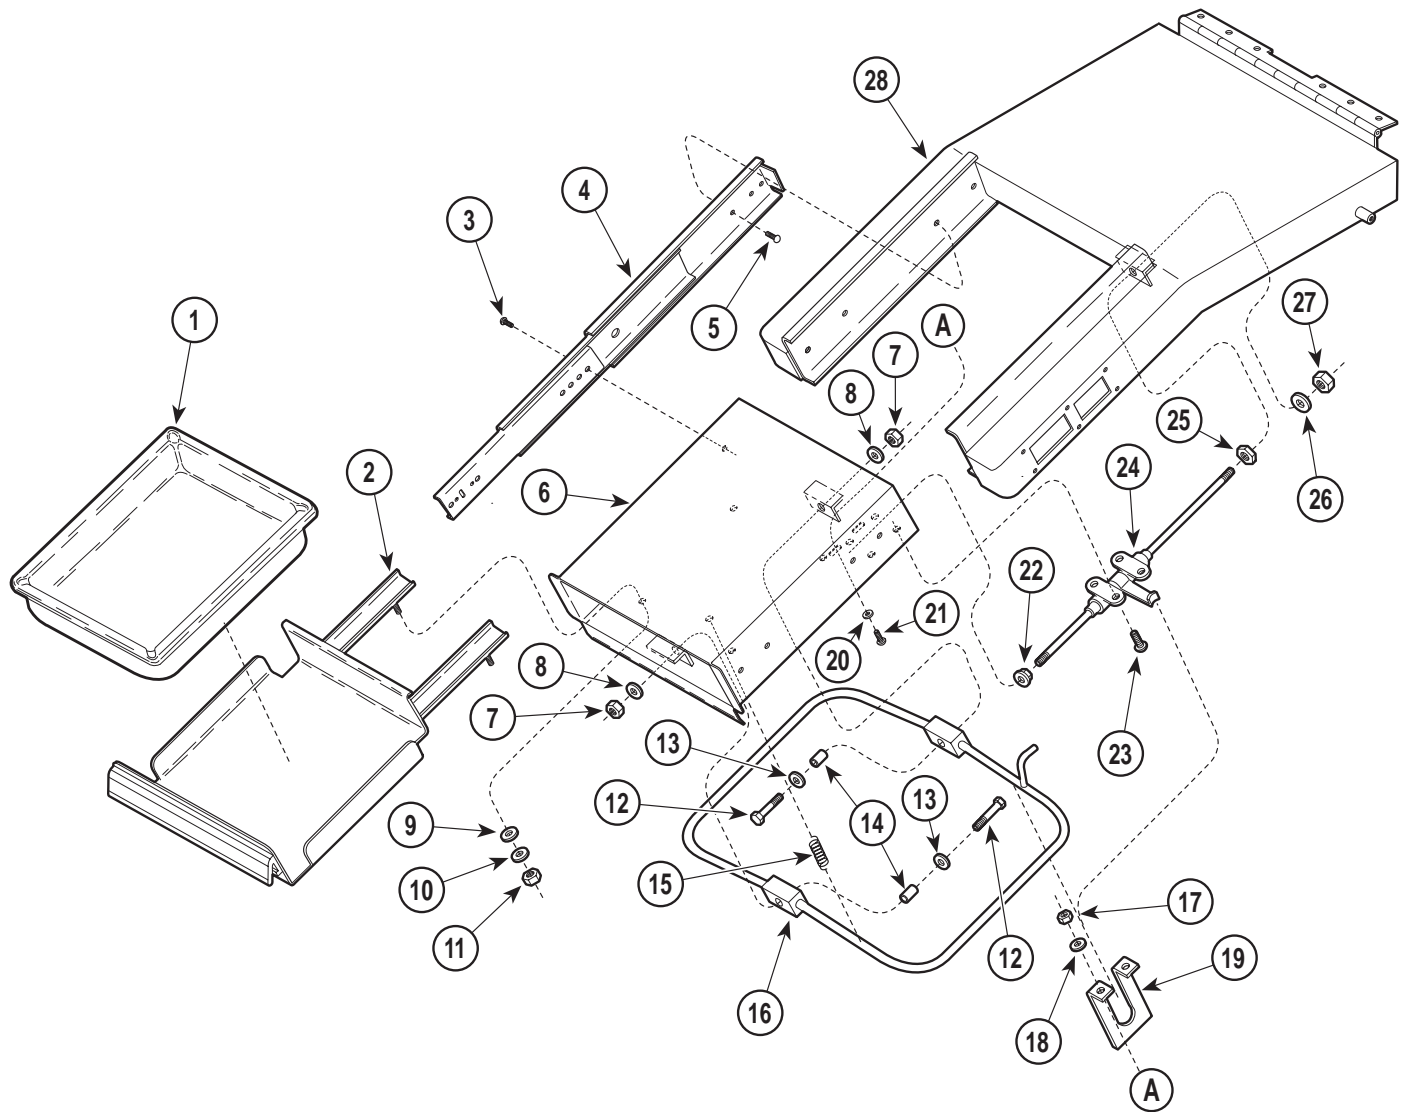

MA286300


### Used on units with Serial Numbers AJ-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	016-0373-00	Pan .....	1	15	025-0027-00	Extension Spring .....	1
2	029-0421-00	Pan Holder Assembly .....	1	16	030-0339-00	Handle Weldment .....	1
3	040-0010-21	Screw .....	8	17	041-0010-00	Nut .....	2
4	016-0192-00	Slide .....	2	18	045-0001-18	Lockwasher .....	2
5	040-0010-55	Screw .....	8	19	050-1010-00	Handle Stop .....	1
6	030-0338-00	Foot Section Weldment .....	1	20	045-0001-15	Washer .....	2
7	041-0375-04	Nut .....	2	21	040-0010-23	Screw .....	2
8	045-0001-24	Lockwasher .....	2	22	041-0375-06	Nut .....	1
9	045-0001-39	Washer .....	4	23	040-0010-00	Screw .....	4
10	045-0001-19	Lockwasher .....	4	24	016-0191-00	Mechanical Lock .....	1
11	041-0008-00	Nut .....	4	25	041-0375-08	Jam Nut .....	1
12	040-0375-21	Screw .....	2	26	045-0001-09	Lockwasher .....	1
13	045-0001-40	Washer .....	2	27	041-0375-07	Nut .....	1
14	052-0080-00	Pivot Tube (Apply Petroleum Jelly #064-0001-00 to O.D. & I.D.) .....	2	28		Seat Weldment (Refer to "Back and Seat Components" Elsewhere) .....	Ref

Always Specify Model & Serial Number

# Leg Components

## SECTION VI PARTS LIST

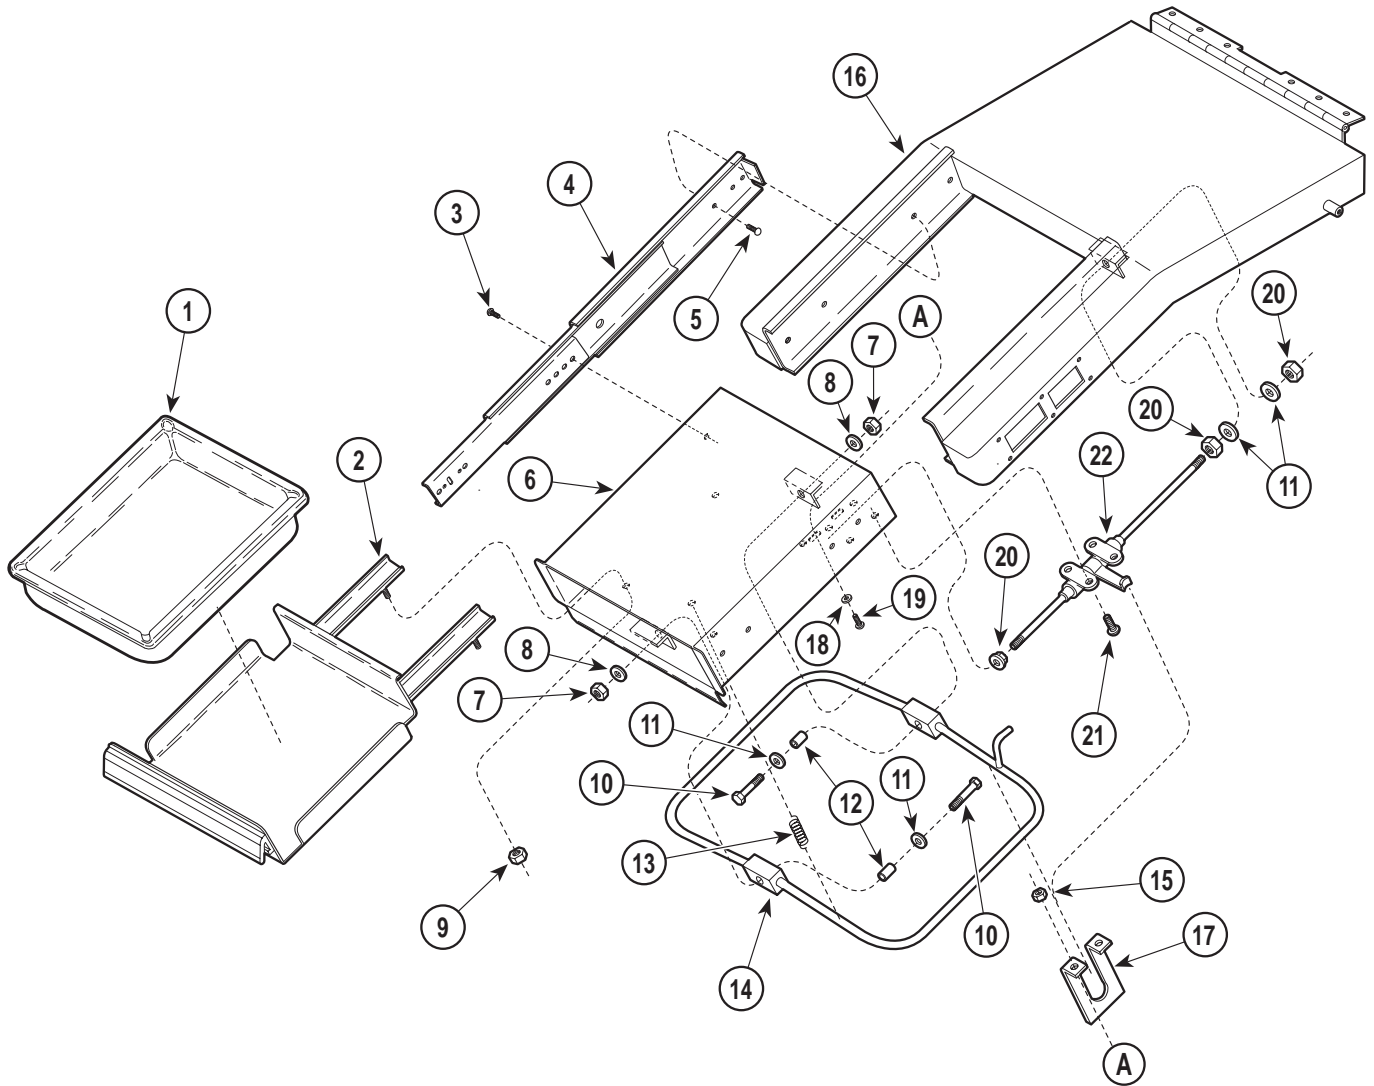

MA286301


### Used on units with Serial Numbers FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	016-0373-00	Pan 1		13	025-0027-00	Extension Spring .....	1
2	029-0421-01	Pan Holder Assembly .....	1	14	030-0339-02	Handle Weldment .....	1
3	040-0010-21	Screw (Apply Loctite #042-0024-00) .....	8	15	041-0010-00	Nut .....	2
4	016-0192-00	Slide .....	2	16		Seat Weldment (Refer to "Back and Seat Components" Elsewhere) .....	Ref
5	040-0010-55	Screw (Apply Loctite #042-0024-00) .....	8	17	050-1010-20	Handle Stop .....	1
6	030-0338-20	Footrest Weldment .....	1	18	045-0001-15	Washer .....	2
7	041-0375-04	Nut .....	2	19	040-0010-23	Screw .....	2
8	045-0001-24	Lockwasher .....	2	20	041-0375-13	Nut .....	3
9	041-0008-02	Nut .....	4	21	040-0010-47	Screw .....	4
10	040-0375-21	Screw .....	2	22	016-0191-00	Mechanical Lock .....	1
11	045-0001-40	Washer .....	4				
12	052-0080-00	Pivot Tube (Apply Petroleum Jelly #064-0001-00 to O.D. & I.D.) .....	2				

Always Specify Model & Serial Number

# Upholstery Set

## SECTION VI PARTS LIST

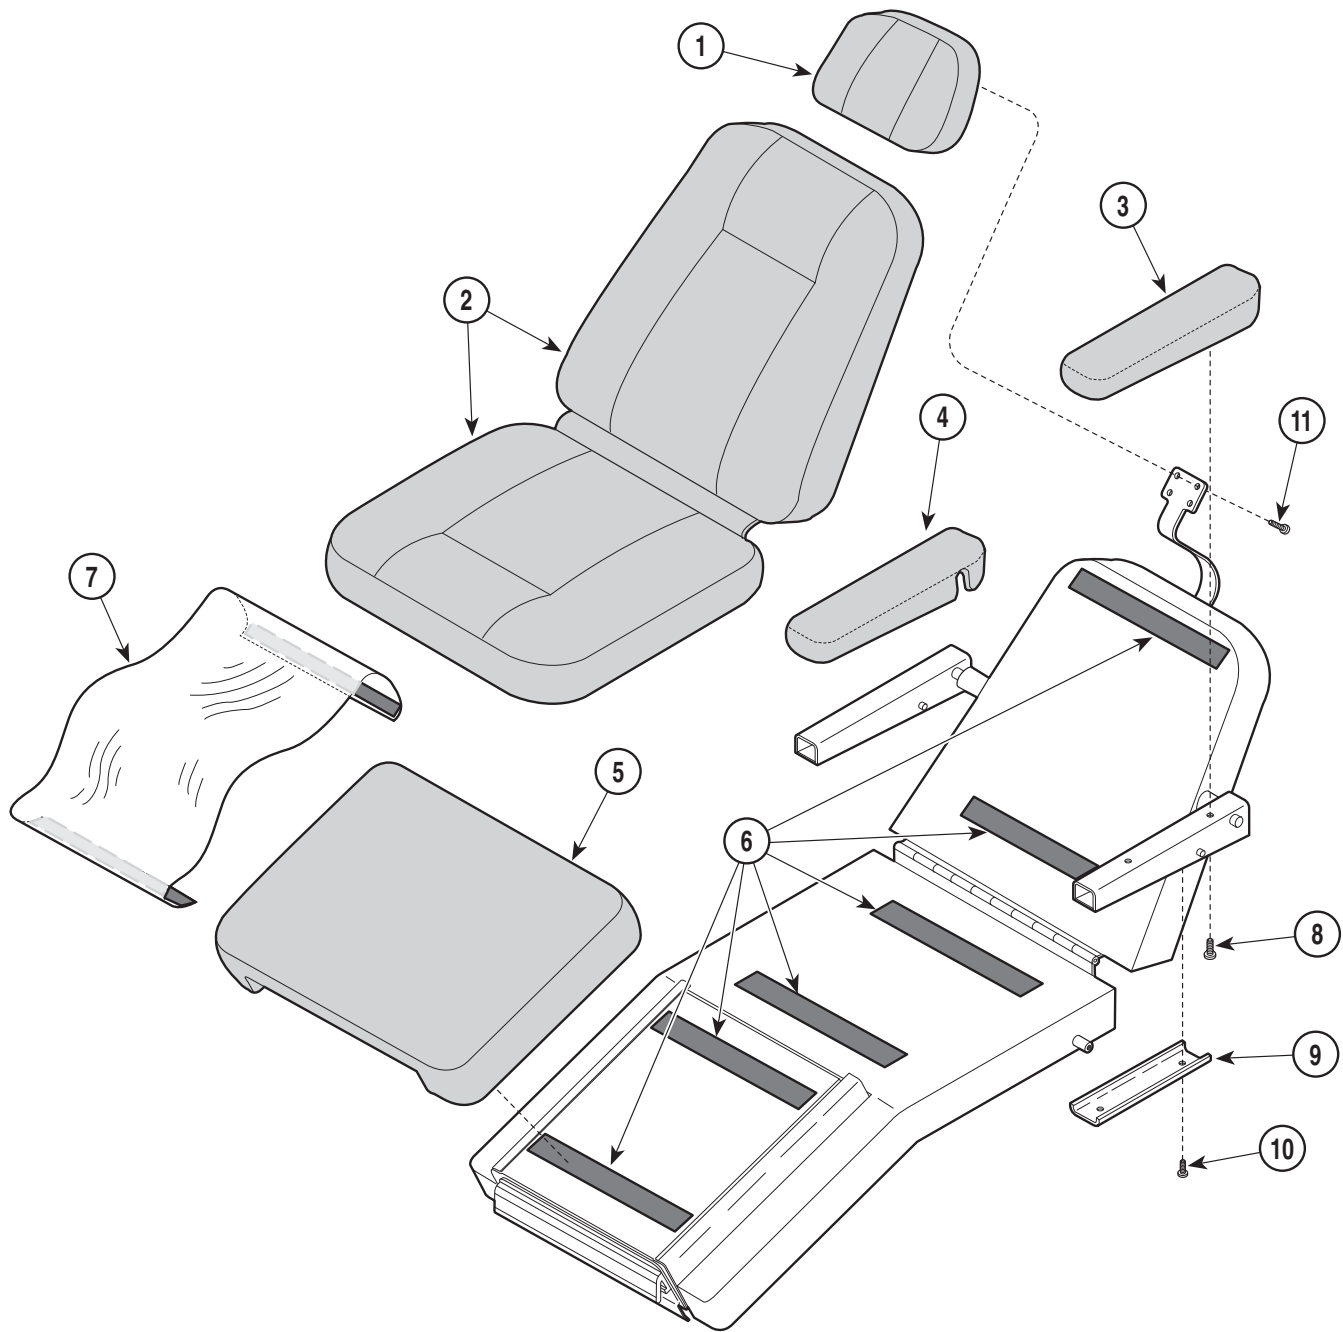

MA286400

### Used on units with Serial Numbers AJ-1000 thru AJ-1276


Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
		Upholstery Set (Includes Items 1 thru 11 {*Specify Color}) .....	1	6	•053-0131-02	• Velcro Hook Tape .....	6
1	•028-0075-00	• Headrest Cushion {*Specify Color} .....	1	7	•029-0423-00	• Clear Vinyl Foot Cover .....	1
2	•028-0095-00	• Back & Seat Cushion {*Specify Color} .....	1	8	•040-0010-46	• Screw .....	4
3	•028-0094-00	• L.H. Arm Cushion {*Specify Color*} .....	1	9	•050-0928-00	• Arm Cover .....	2
4	•028-0093-00	• R.H. Arm Cushion {*Specify Color} .....	1	10	•040-0006-21	• Screw .....	4
5	•028-0096-00	• Foot Section Cushion {*Specify Color} .....	1	11	•040-0010-51	• Screw .....	4

\* Click on the Color Selector link above to see available colors.

Always Specify Model & Serial Number

# Upholstery Set

## SECTION VI PARTS LIST

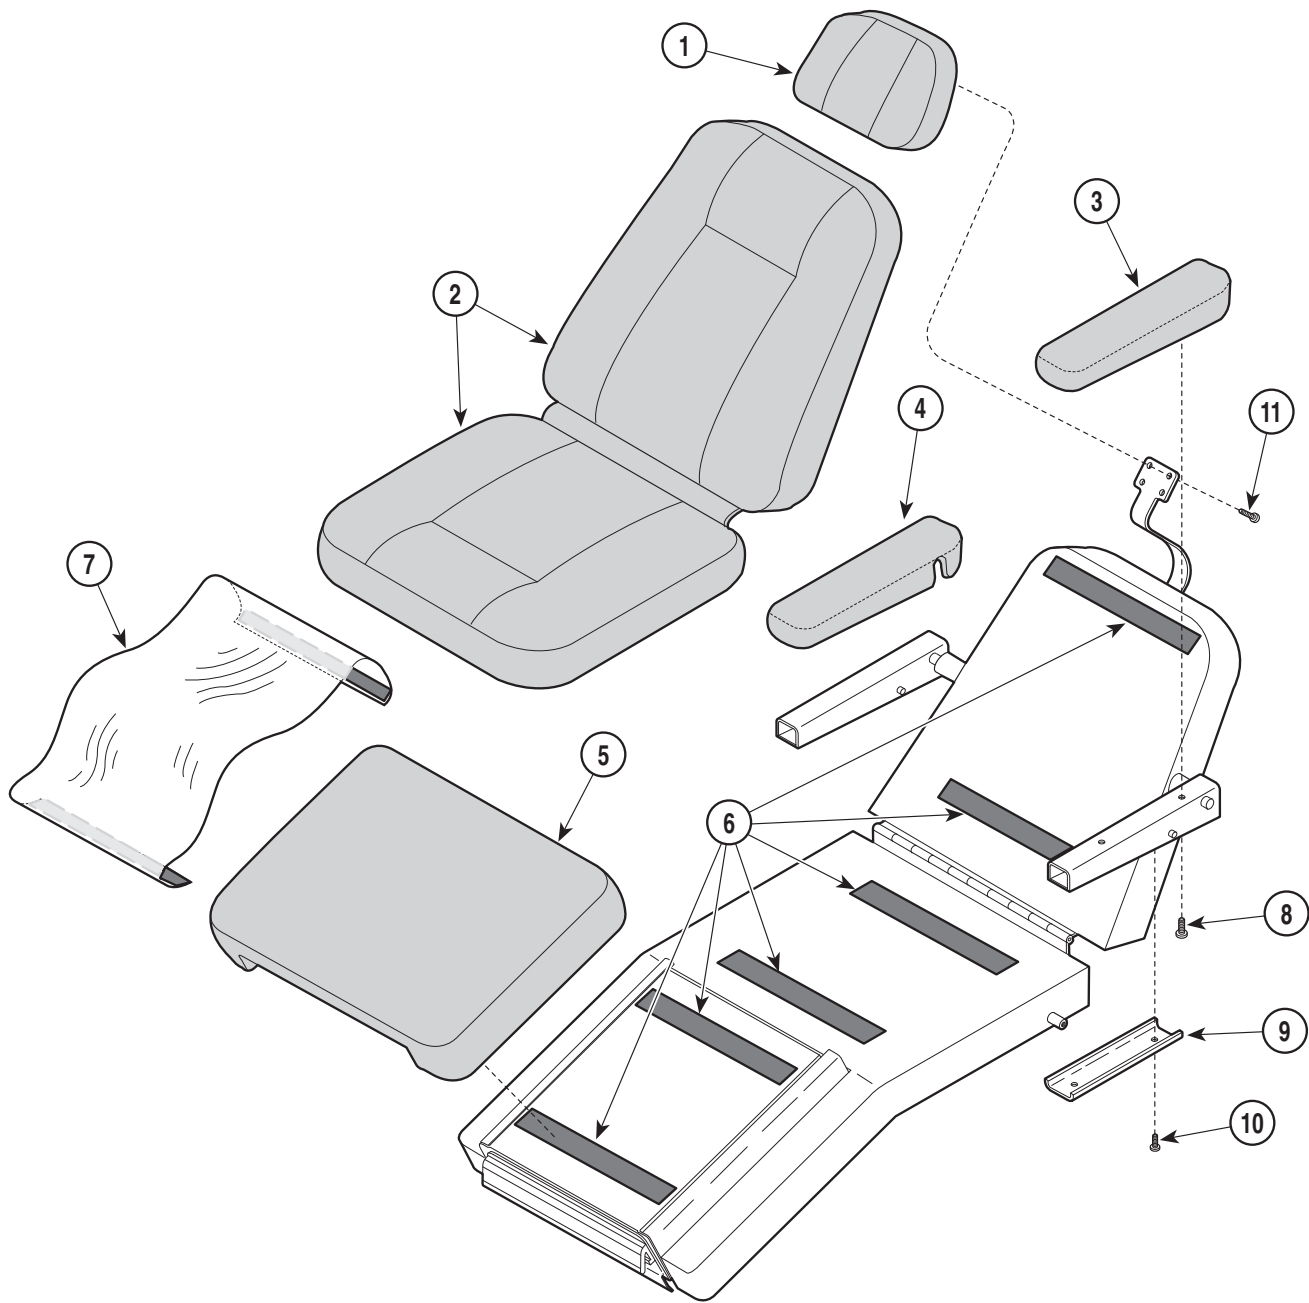

MA286400

### Used on units with Serial Numbers AJ-1277 thru Present


Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
		Upholstery Set (Includes Items 1 thru 11 {*Specify Color}) .....	1	6	•053-0131-02	• Velcro Hook Tape .....	6
1	•028-0075-00	• Headrest Cushion {*Specify Color} .....	1	7	•029-0423-00	• Clear Vinyl Foot Cover .....	1
2	•028-0095-00	• Back & Seat Cushion {*Specify Color} ..	1	8	•040-0010-46	• Screw .....	4
3	•028-0104-00	• L.H. Arm Cushion {*Specify Color} .....	1	9	•050-0928-00	• Arm Cover .....	2
4	•028-0103-00	• R.H. Arm Cushion {*Specify Color} .....	1	10	•040-0006-21	• Screw .....	4
5	•028-0096-00	• Foot Section Cushion {*Specify Color} ..	1	11	•040-0010-51	• Screw .....	4

\* Click on the Color Selector link above to see available colors.

**Always Specify Model & Serial Number**

# Upholstery Set

## SECTION VI PARTS LIST

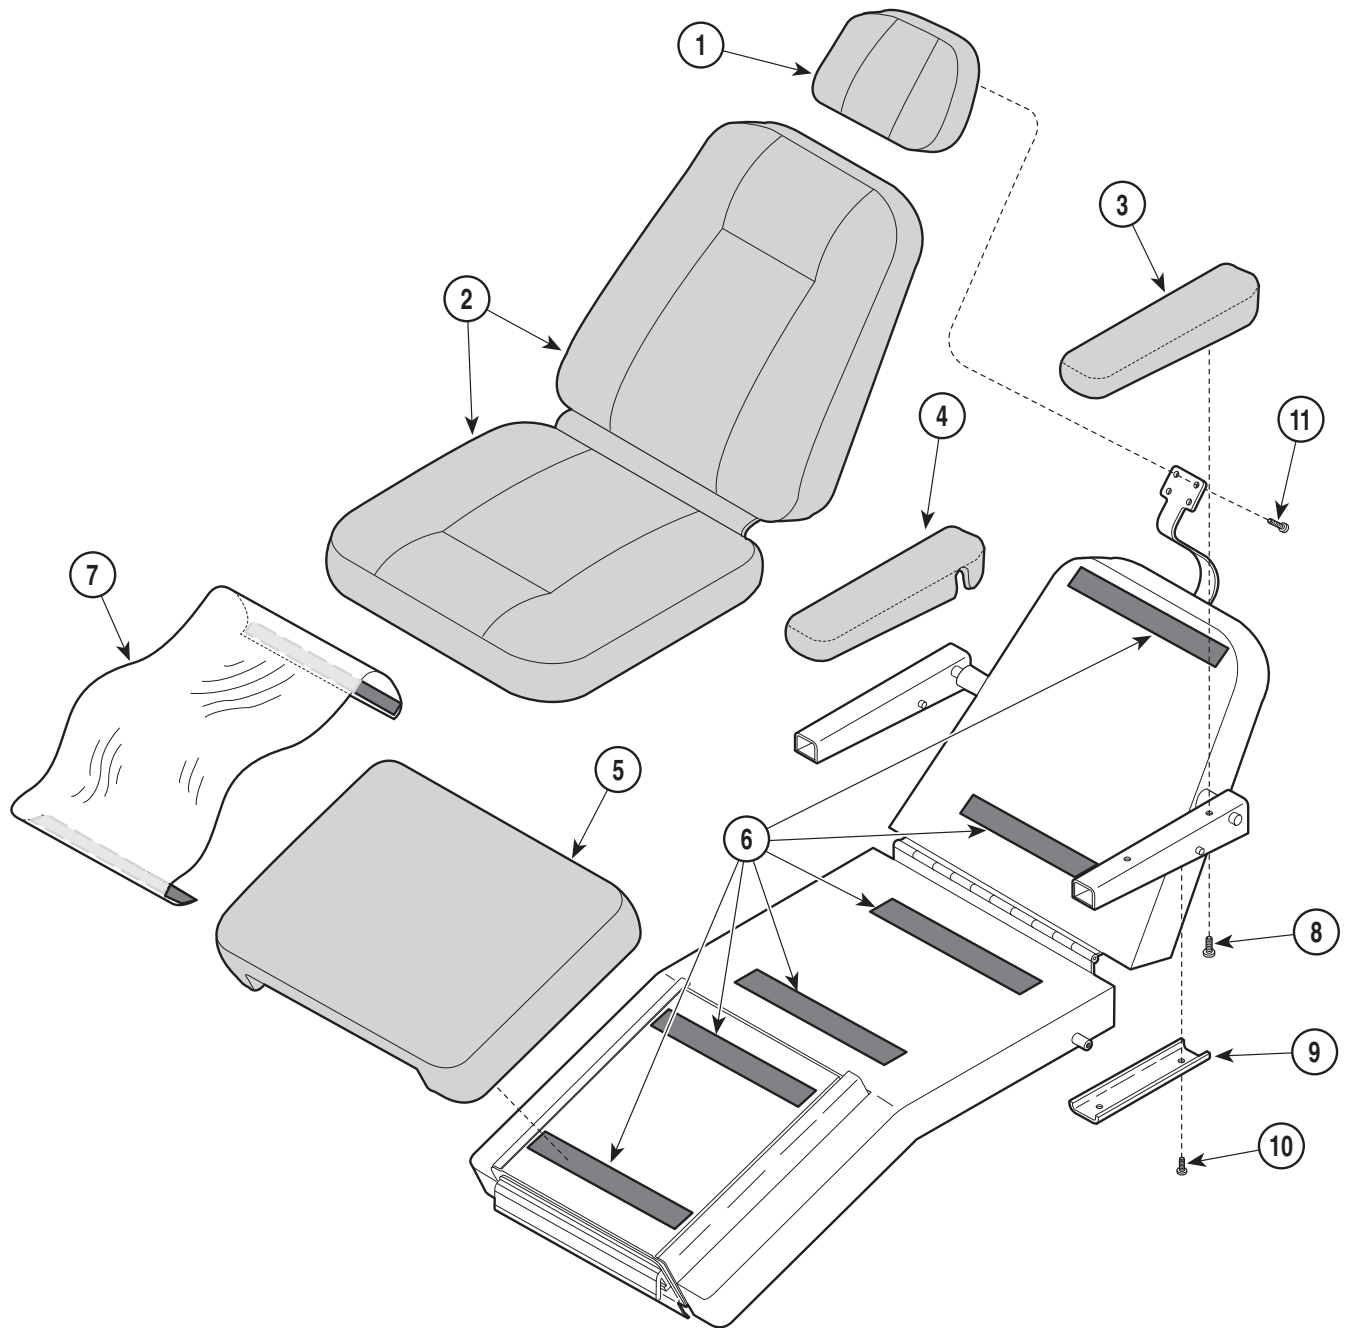

MA286400

### Used on units with Serial Numbers FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
		Upholstery Set (Includes Items 1 thru 11 {*Specify Color}) .....	1	6	• 053-0131-02	• Velcro Hook Tape .....	6
1	• <del>028-0075-00</del>	• Headrest Cushion {*Specify Color} .....	1	7	• 029-0423-00	• Clear Vinyl Foot Cover .....	1
2	• <del>028-0095-XX</del>	• Back & Seat Cushion {*Specify Color} .	1	8	• 040-0010-46	• Screw .....	4
3	• <del>028-0104-XX</del>	• L.H. Arm Cushion {*Specify Color} .....	1	9	• 050-0928-20	• Arm Cover .....	2
4	• <del>028-0103-XX</del>	• R.H. Arm Cushion {*Specify Color} .....	1	10	• 040-0006-21	• Screw .....	4
5	• <del>028-0096-XX</del>	• Foot Section Cushion {*Specify Color} .	1	11	• 040-0010-51	• Screw .....	4


\* Click on the Color Selector link above to see available colors.

**Always Specify Model & Serial Number**



# Base Covers And Enclosures

## SECTION VI PARTS LIST

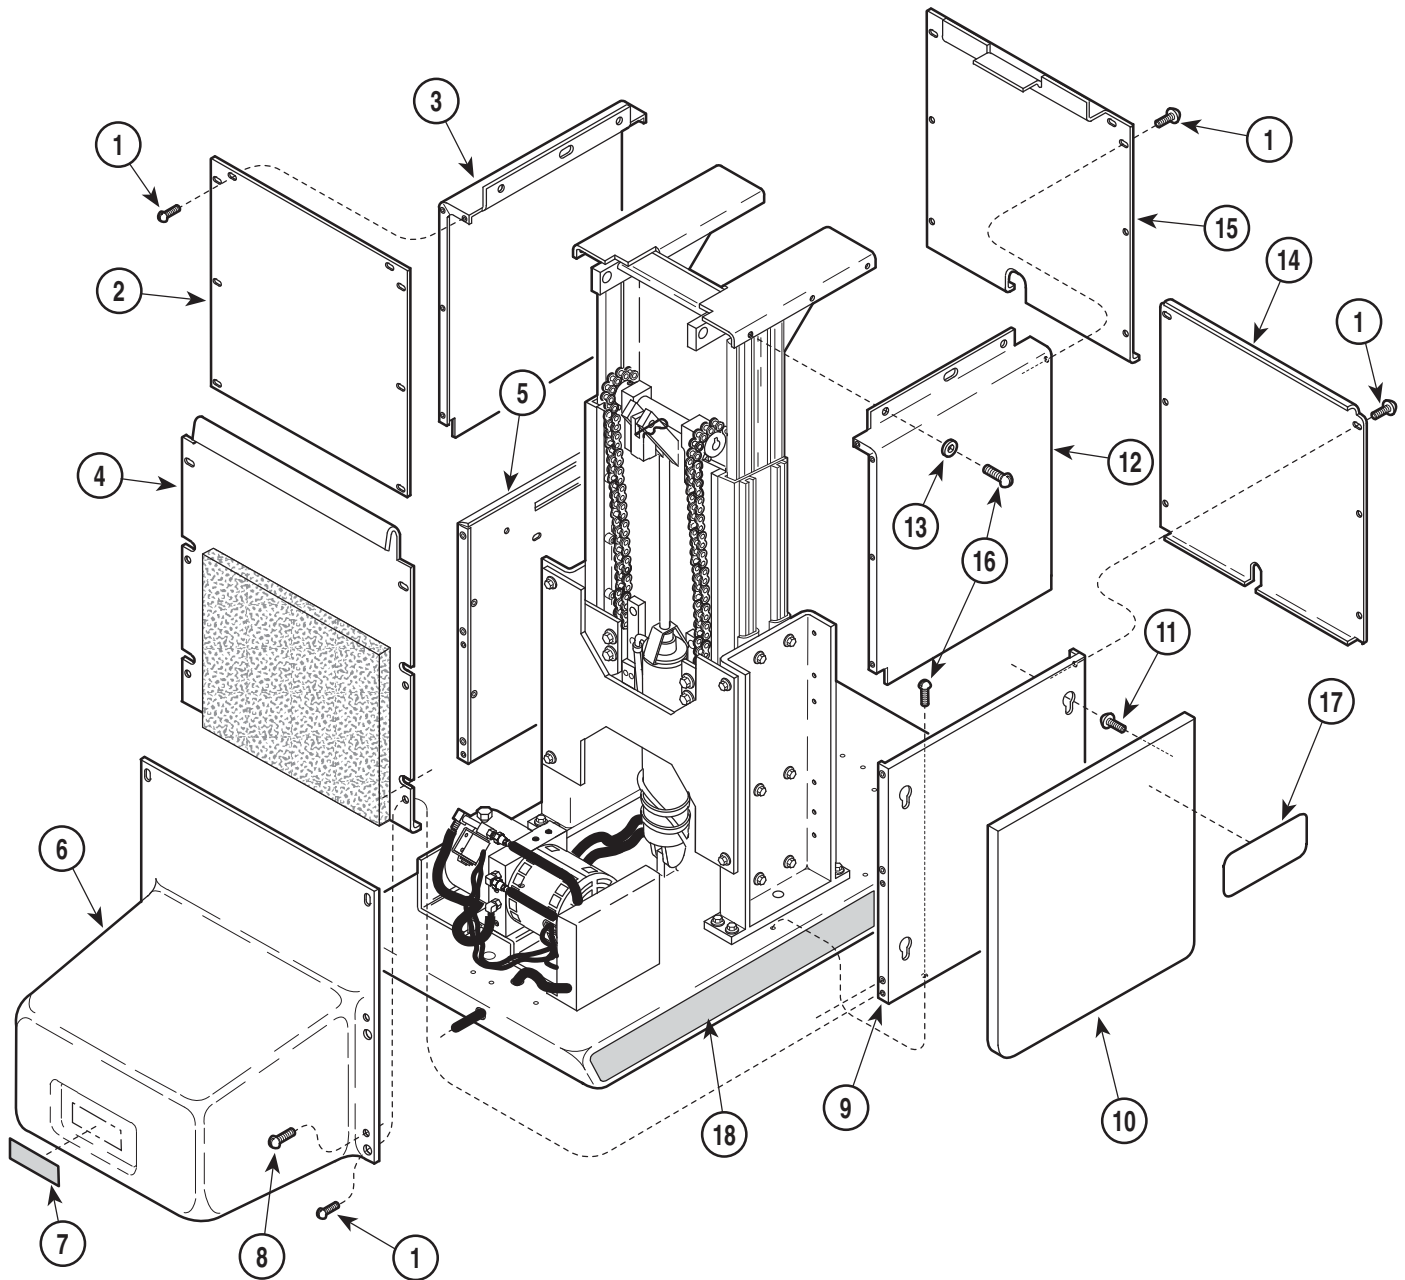

MA226802


### Used on units with Serial Number AJ-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	040-0008-29	Screw	24	9	050-0998-00	R.H. Outer Shroud (Less Nutserts)	1
2	050-0362-00	Back Inner Shroud	1		• 042-0045-01	• Nutsert	7
3	050-0947-01	L.H. Inner Shroud (Less Nutserts)	1		• 042-0045-02	• Nutsert	4
	• 042-0045-02	• Nutsert	8	10	N.L.A.	Side Panel Assembly (Includes Item 11 {Specify Color})	2
4	<del>029-0355-00</del>	Back Outer Shroud Assembly	1		• 040-0006-00	• Screw	4
5	050-0998-01	L.H. Outer Shroud (Less Nutserts)	1	11	050-0947-00	R.H. Inner Shroud (Less Nutsert)	1
	• 042-0045-01	• Nutsert	7		• 042-0045-02	• Nutsert	8
	• 042-0045-02	• Nutsert	4	13	045-0001-15	Washer	6
6	029-0354-00	Motor Cover Assembly (Domestic Units Only)	1	14	050-0948-00	Front Outer Shroud	1
	029-0357-00	Motor Cover Assembly (Export Units Only)	1	15	050-0463-00	Front Inner Shroud	1
7	061-0033-00	Caution Label (Domestic Units Only)	1	16	040-0010-47	Screw	12
8	040-0010-34	Screw	6	17	061-0123-11	Nameplate - 117	2
				18	053-0079-00	Scuff Plate	2

N.L.A. Denotes "No Longer Available"  
Always Specify Model & Serial Number

# Base Covers And Enclosures

## SECTION VI PARTS LIST

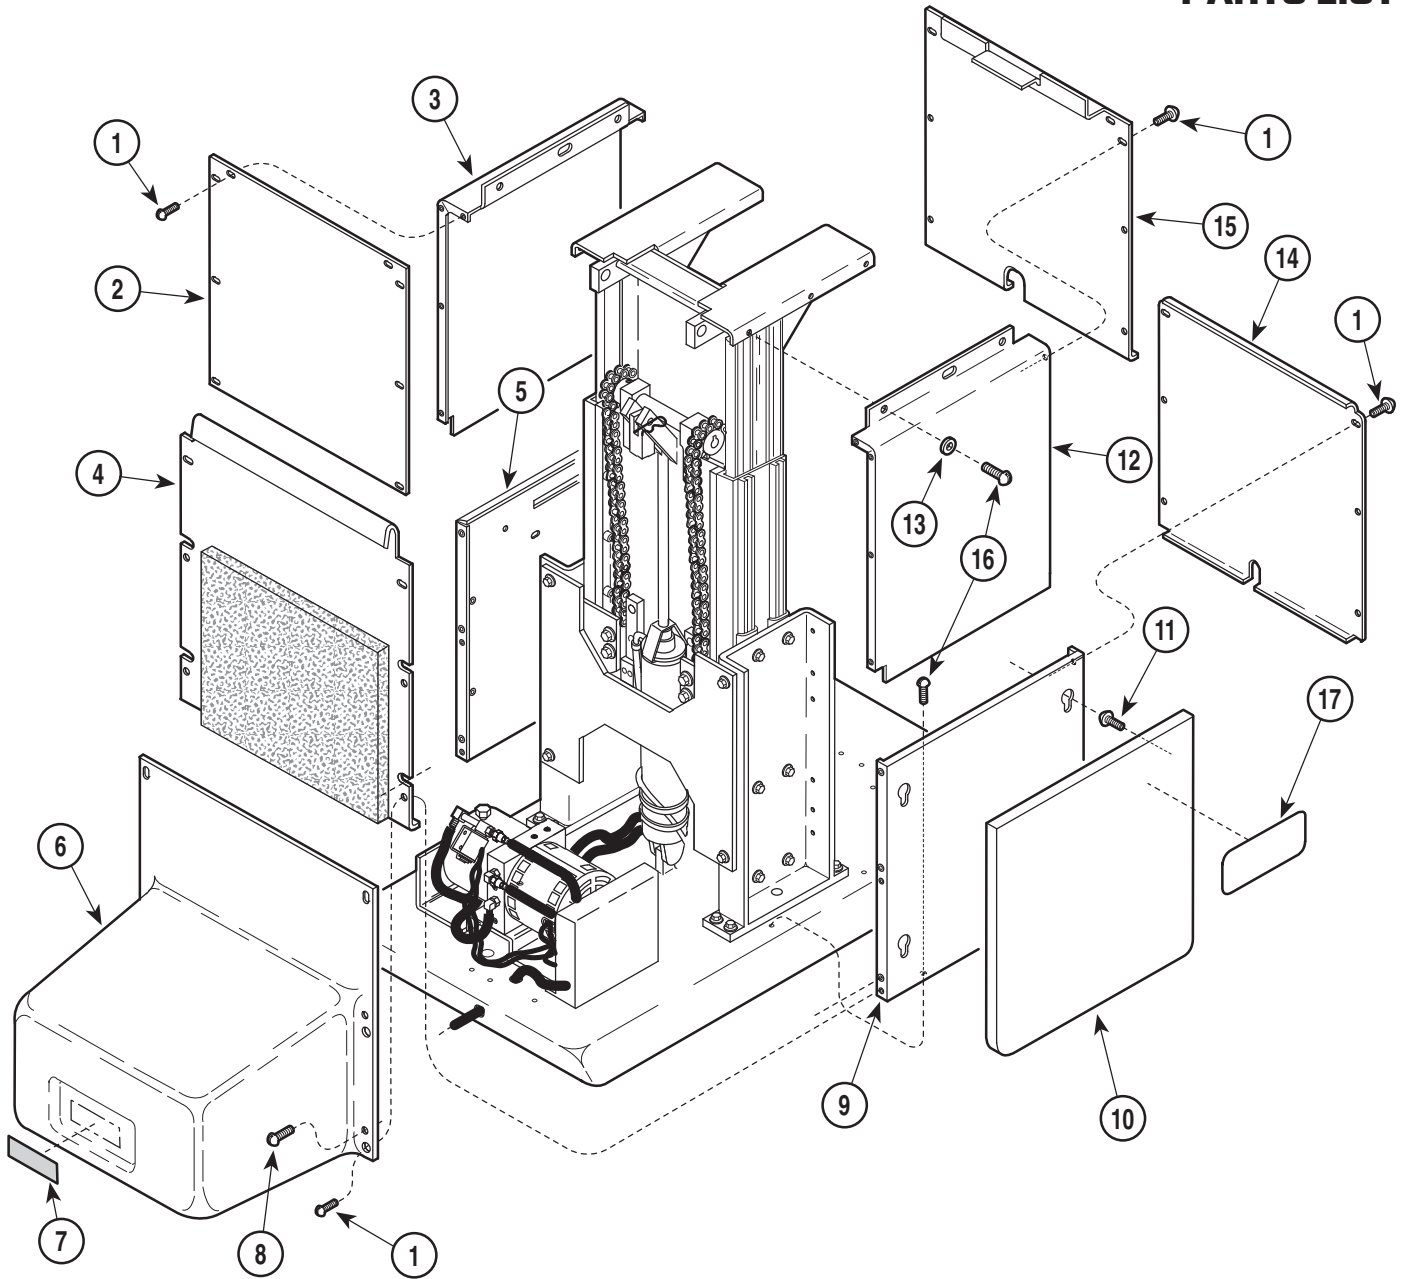


MA226803

### Used on units with Serial Number FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	040-0008-29	Screw .....	24		•042-0045-01	• Nutsert .....	7
2	050-2677-20	Back Inner Shroud .....	1		•042-0045-02	• Nutsert .....	4
3	050-0947-21	L.H. Inner Shroud (Less Nutserts) .....	1	10	N.L.A.	Side Panel Assembly (Includes Item 11 {Specify Color}) .....	2
		• Nutsert .....	8	11	•040-0006-00	• Screw .....	4
4	029-0355-01	Back Outer Shroud Assembly .....	1	12	050-0947-20	R.H. Inner Shroud (Less Nutsert) .....	1
5	050-0998-21	L.H. Outer Shroud (Less Nutserts) .....	1		•042-0045-02	• Nutsert .....	8
		• Nutsert .....	7	13	045-0001-15	Washer .....	6
		• Nutsert .....	4	14	050-0948-20	Front Outer Shroud .....	1
6	029-0354-01	Motor Cover Assembly .....	1	15	050-0463-20	Front Inner Shroud .....	1
7	061-0033-00	Caution Label .....	1	16	040-0010-47	Screw .....	12
8	040-0010-34	Screw .....	6	17	061-0237-12	Nameplate - 117 .....	2
9	050-0998-20	R.H. Outer Shroud (Less Nutserts) .....	1				

*N.L.A. Denotes "No Longer Available"*  
Always Specify Model & Serial Number

# Base Mechanical Components

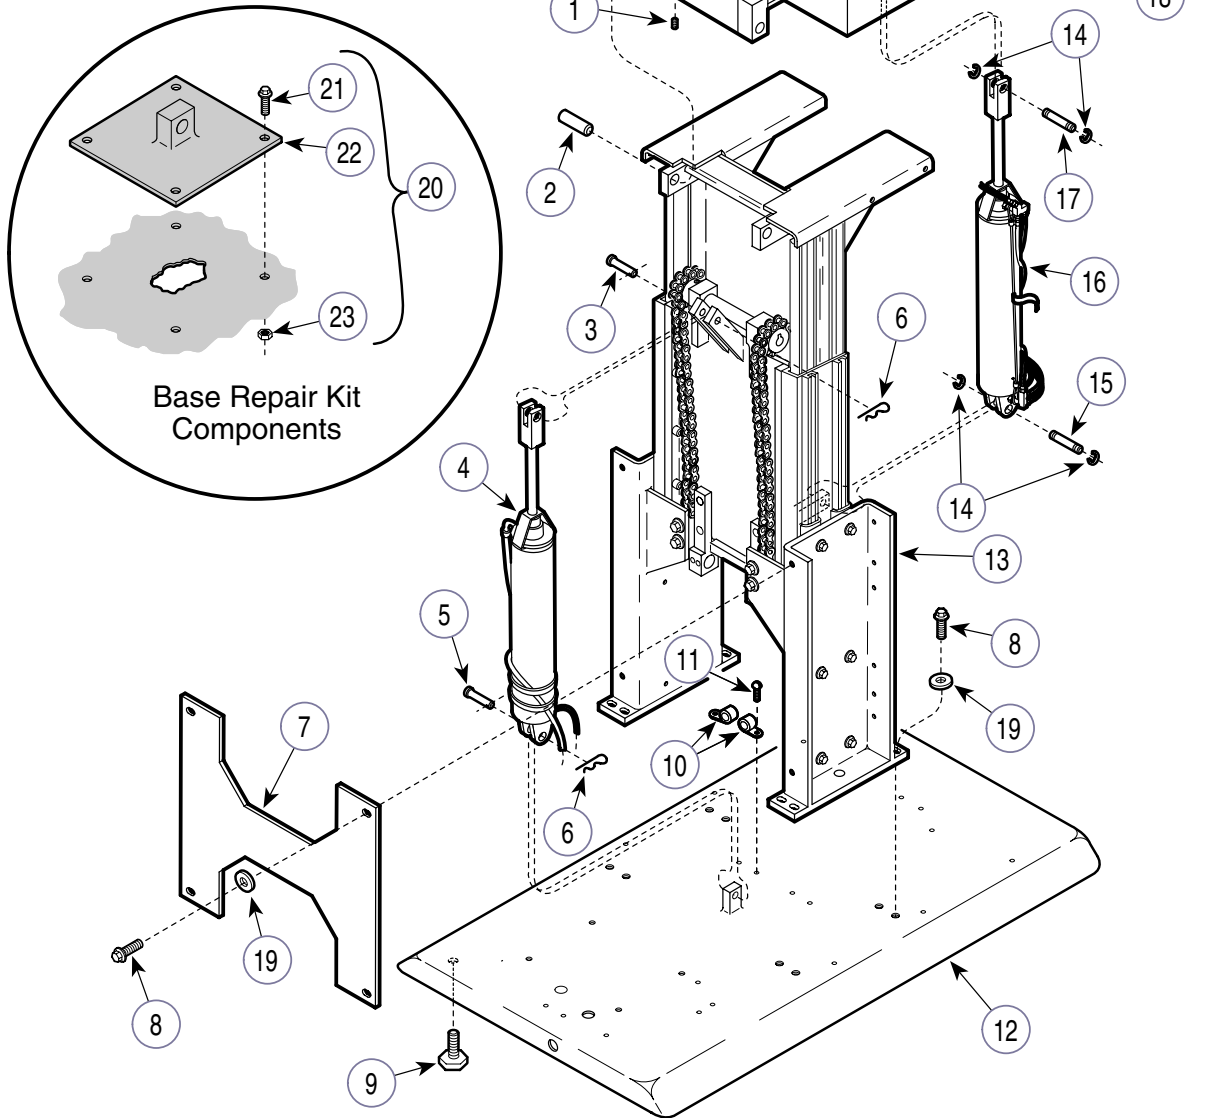


MA286502

**Used on units with Serial Number AJ-1000 thru Present**

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	040-0250-04	Set Screw .....	4	13		Base Slide Assembly (Refer to Breakdown Elsewhere) .....	Ref
2	057-0027-00	Tilt Pivot Pin .....	2	14	042-0007-00	E-Ring .....	4
3	042-0005-03	Clevis Pin (Apply Petroleum Jelly #064-0001-00) .....	2	15	042-0006-01	Clevis Pin .....	1
4		Base Cylinder (Refer to "Hydraulic System" Elsewhere) .....	Ref	16		Tilt Cylinder Assembly (Refer to "Hydraulic System" Elsewhere) .....	Ref
5	042-0005-01	Clevis Pin .....	1	17	042-0006-00	Clevis Pin .....	1
6	042-0004-00	Hitch Pin Clip .....	2	18		Seat Weldment (Refer to "Seat Components" Elsewhere) .....	Ref
7	050-1475-00	Brace .....	1	19	045-0001-09	Lockwasher .....	12
8	040-0375-06	Screw .....	12	20	002-0514-00	Base Repair Kit (Includes Items 21 thru 22)	
9	016-0001-00	Leveling Screw .....	4	21	• 040-0250-89	• Screw .....	4
10	015-0001-00	Wire Clip .....	3	22	• 030-1010-00	• Base Cylinder Mount Weldment .....	1
11	040-0010-04	Screw .....	2	23	• 041-0250-13	• Nut .....	4
12	030-0281-00	Stationary Base Weldment .....	1				

**Always Specify Model & Serial Number**

# Base Mechanical Components

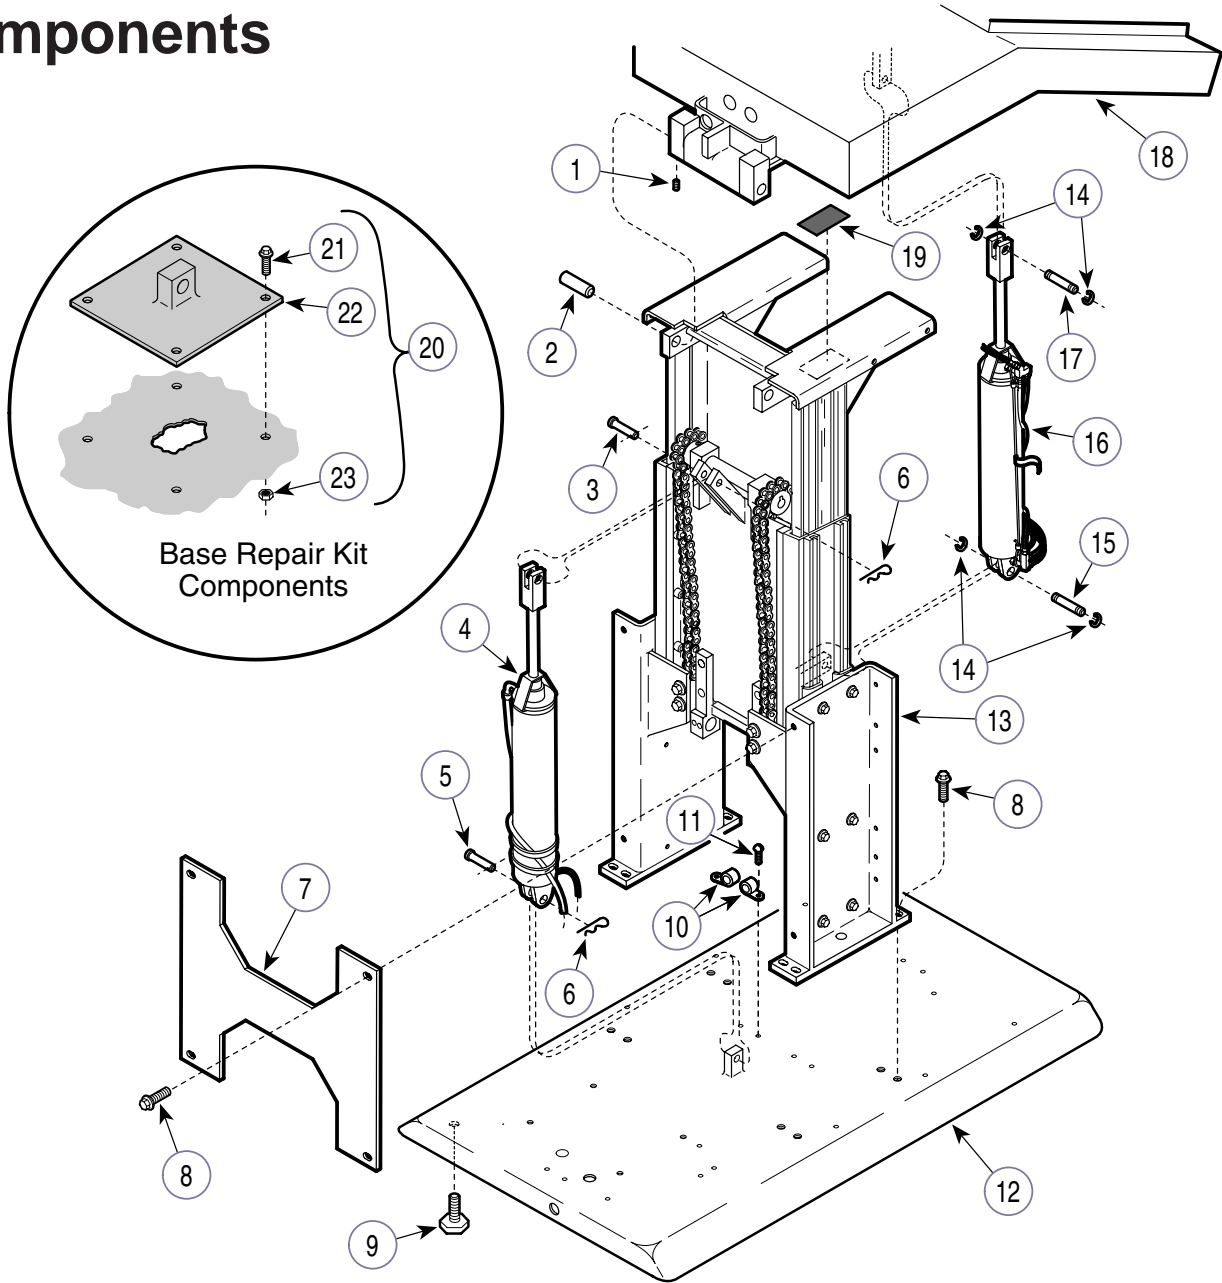

MA286503


**Used on units with Serial Number FE-1000 thru Present**

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	040-0250-04	Set Screw .....	4	13		Base Slide Assembly (Refer to Breakdown Elsewhere) .....	Ref
2	057-0027-00	Tilt Pivot Pin (Apply Petroleum Jelly #064-0001-00) .....	2	14	042-0007-00	E-Ring .....	4
3	042-0005-03	Clevis Pin .....	1	15	042-0006-01	Clevis Pin .....	1
4		Base Cylinder (Refer to "Hydraulic System" Elsewhere) .....	Ref	16		Tilt Cylinder Assembly (Refer to "Hydraulic System" Elsewhere) .....	Ref
5	042-0005-01	Clevis Pin .....	1	17	042-0006-00	Clevis Pin .....	1
6	042-0004-00	Hitch Pin Clip .....	2	18		Seat Weldment (Refer to "Seat Components" Elsewhere) .....	Ref
7	050-1475-20	Brace .....	1	19	061-0620-00	U/L Label .....	1
8	040-0375-00	Screw .....	12	20	002-0514-00	Base Repair Kit (Includes Items 21 thru 22)	
9	016-0001-00	Leveling Screw .....	4	21	• 040-0250-89	• Screw .....	4
10	015-0001-00	Wire Clip .....	2	22	• 030-1010-00	• Base Cylinder Mount Weldment .....	1
11	040-0010-04	Screw .....	2	23	• 041-0250-13	• Nut .....	4
12	030-1057-00	Stationary Base Weldment .....	1				

**Always Specify Model & Serial Number**

# Hydraulic System

## SECTION VI PARTS LIST

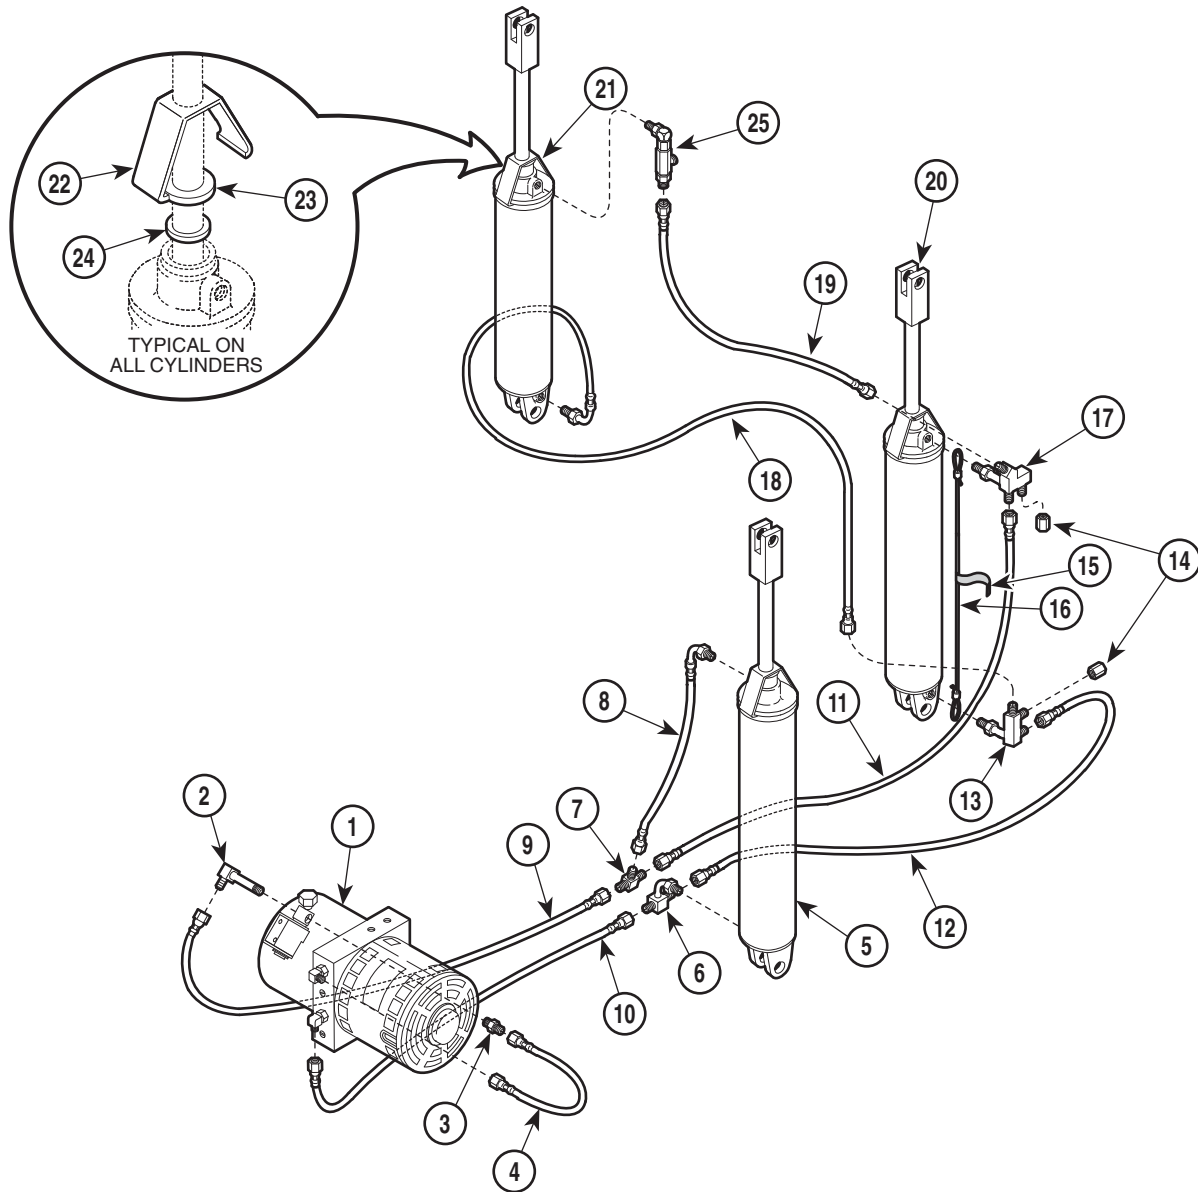

MA288000


### Used on units with Serial Number AJ-1000 thru AJ-3143

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to "Motor / Pump Components" Elsewhere) .....	Ref	18	002-0125-00	Hose Assembly Kit .....	1
2	014-0114-00	Male Elbow .....	1	19	002-0178-00	Hose Assembly Kit .....	1
3	014-0099-00	Male Connector .....	1	20	002-0137-00	Tilt Cylinder Kit .....	1
4	002-0117-00	Hose Assembly Kit .....	1	21	002-0003-00	Back Cylinder Kit .....	1
5	002-0001-00	Base Cylinder Kit .....	1	22	025-0032-00	Rod Wiper Bracket .....	AR
6	014-0135-00	Base Tee .....	1	23	054-0109-00	Felt Wiper (1") .....	AR
7	014-0098-00	Union Tee .....	1	24	054-0108-00	Felt Wiper (11/16") .....	AR
8	002-0120-00	Hose Assembly Kit .....	1	25		Valve Assembly (Includes the Following):	
9	002-0118-00	Hose Assembly Kit .....	1		• 014-0109-00	• Adapter .....	1
10	002-0119-00	Hose Assembly Kit .....	1		• 014-0125-00	• Needle Valve .....	1
11	002-0122-00	Hose Assembly Kit .....	1		• 014-0099-00	• Male Connector .....	1
12	002-0121-00	Hose Assembly Kit .....	1		• 014-0128-00	• Male Elbow .....	1
13	014-0136-00	Tilt Power Manifold .....	1	26	015-0013-00	Cable Tie (Not Shown) .....	AR
14	014-0179-00	Manifold Cap .....	2	27	015-0013-02	Cable Tie (Not Shown) .....	AR
15	061-0113-00	Safety Cable Label .....	1	28	015-0016-00	Cable Tie (Not Shown) .....	AR
16	016-0161-00	Safety Cable .....	1	29	015-0017-00	Cable Tie (Not Shown) .....	AR
17	014-0137-00	Return Manifold .....	1				

Always Specify Model & Serial Number

# Hydraulic System

## SECTION VI PARTS LIST

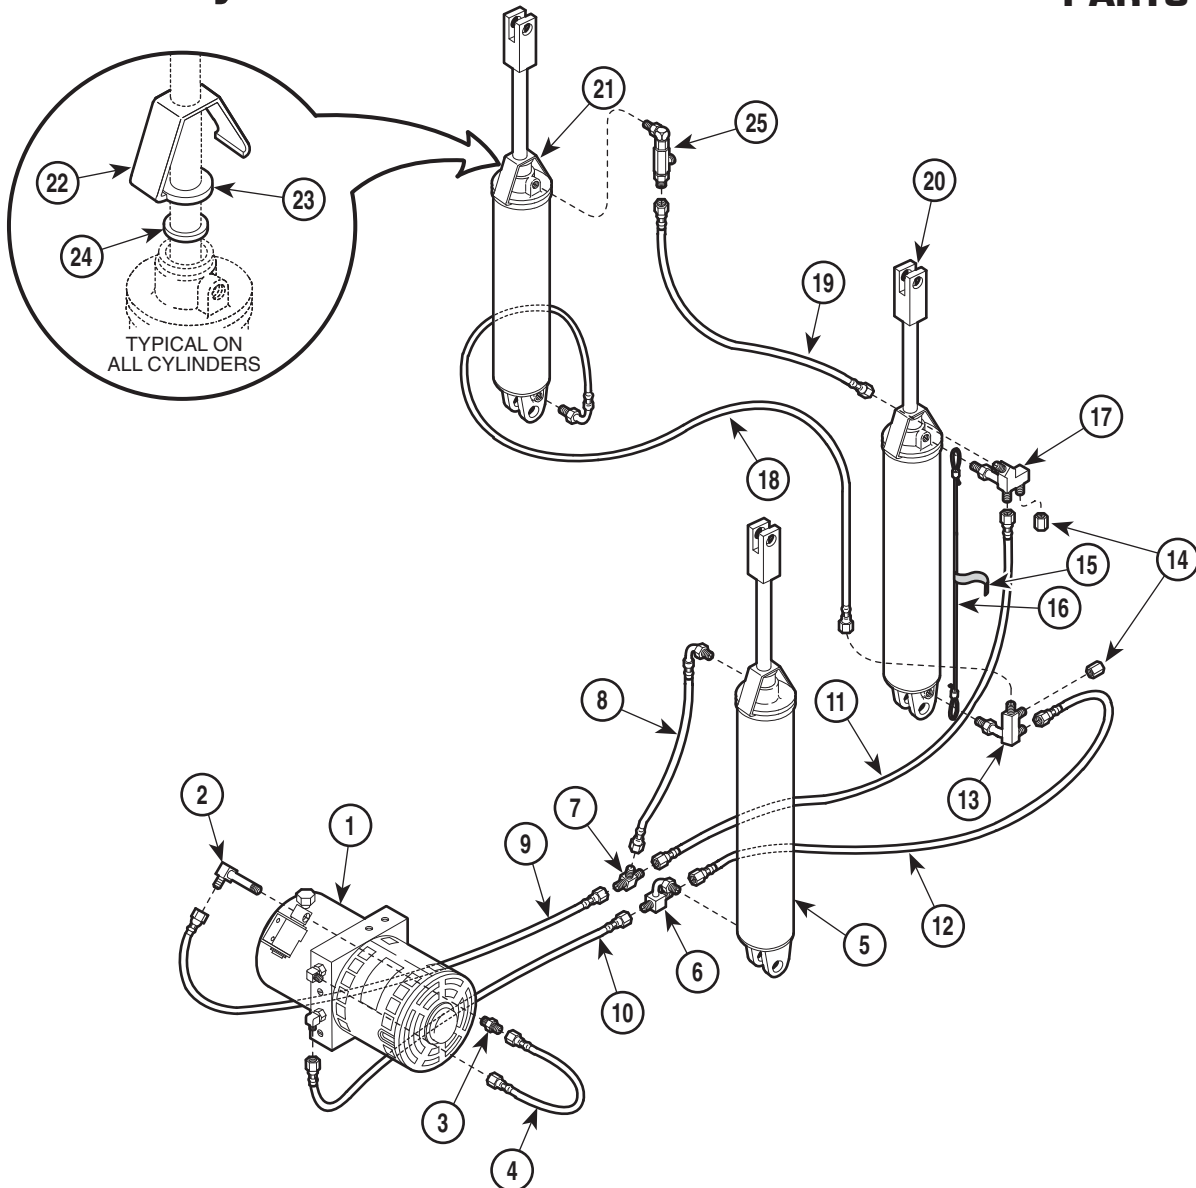

MA288000


### Used on units with Serial Number AJ-3144 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to "Motor / Pump Components" Elsewhere) .....	Ref	18	002-0125-00	Hose Assembly Kit .....	1
2	<del>014-0114-00</del>	Male Elbow .....	1	19	002-0178-00	Hose Assembly Kit .....	1
3	014-0099-00	Male Connector .....	1	20	002-0271-00	Tilt Cylinder Kit .....	1
4	002-0117-00	Hose Assembly Kit .....	1	21	002-0003-00	Back Cylinder Kit .....	1
5	002-0001-00	Base Cylinder Kit .....	1	22	025-0032-00	Rod Wiper Bracket .....	AR
6	014-0135-00	Base Tee .....	1	23	054-0109-00	Felt Wiper (1") .....	AR
7	014-0098-00	Union Tee .....	1	24	054-0108-00	Felt Wiper (11/16") .....	AR
8	002-0120-00	Hose Assembly Kit .....	1	25		Valve Assembly (Includes the Following:)	
9	<del>002-0118-00</del>	Hose Assembly Kit .....	1		• 014-0109-00	• Adapter .....	1
10	002-0119-00	Hose Assembly Kit .....	1		• 014-0125-00	• Needle Valve .....	1
11	002-0122-00	Hose Assembly Kit .....	1		• 014-0099-00	• Male Connector .....	1
12	002-0121-00	Hose Assembly Kit .....	1		• 014-0128-00	• Male Elbow .....	1
13	014-0136-00	Tilt Power Manifold .....	1	26	015-0013-00	Cable Tie (Not Shown) .....	AR
14	014-0179-00	Manifold Cap .....	2	27	015-0013-02	Cable Tie (Not Shown) .....	AR
15	061-0113-00	Safety Cable Label .....	1	28	015-0016-00	Cable Tie (Not Shown) .....	AR
16	016-0161-00	Safety Cable .....	1	29	015-0017-00	Cable Tie (Not Shown) .....	AR
17	014-0137-00	Return Manifold .....	1				

Always Specify Model & Serial Number

# Hydraulic System

## SECTION VI PARTS LIST

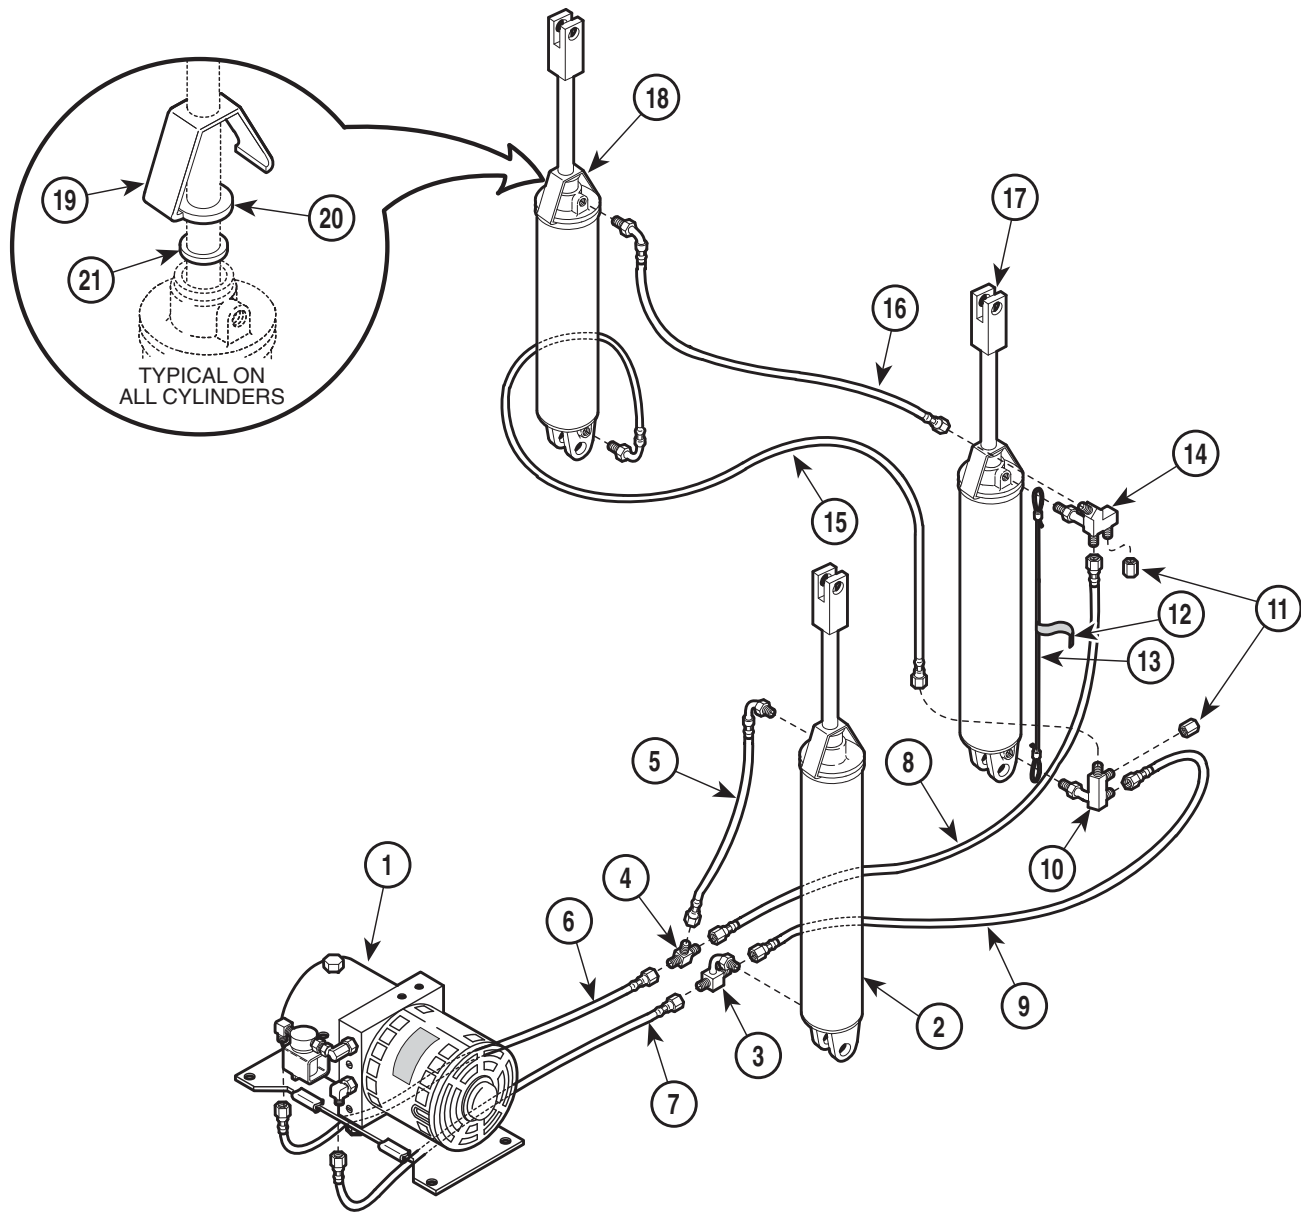

MA288001


### Used on units with Serial Number FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to "Motor / Pump Components" Elsewhere) .....	Ref	13	016-0161-00	Safety Cable .....	1
2	002-0001-00	Base Cylinder Kit .....	1	14	014-0137-00	Return Manifold .....	1
3	014-0135-00	Base Tee .....	1	15	002-0125-00	Hose Assembly Kit .....	1
4	014-0098-00	Union Tee .....	1	16	002-0126-00	Hose Assembly Kit .....	1
5	002-0120-00	Hose Assembly Kit .....	1	17	002-0271-00	Tilt Cylinder Kit .....	1
6	<del>002-0118-00</del>	Hose Assembly Kit .....	1	18	002-0346-00	Back Cylinder Kit .....	1
7	002-0119-00	Hose Assembly Kit .....	1	19	025-0032-00	Rod Wiper Bracket .....	AR
8	002-0122-00	Hose Assembly Kit .....	1	20	054-0109-00	Felt Wiper (1") .....	AR
9	002-0121-00	Hose Assembly Kit .....	1	21	054-0108-00	Felt Wiper (11/16") .....	AR
10	014-0136-00	Tilt Power Manifold .....	1	22	015-0013-00	Cable Tie (Not Shown) .....	AR
11	014-0179-00	Manifold Cap .....	2	23	015-0013-02	Cable Tie (Not Shown) .....	AR
12	061-0113-00	Safety Cable Label .....	1	24	015-0016-00	Cable Tie (Not Shown) .....	AR
				25	015-0017-00	Cable Tie (Not Shown) .....	AR

Always Specify Model & Serial Number

# Base Slide Assembly

## SECTION VI PARTS LIST

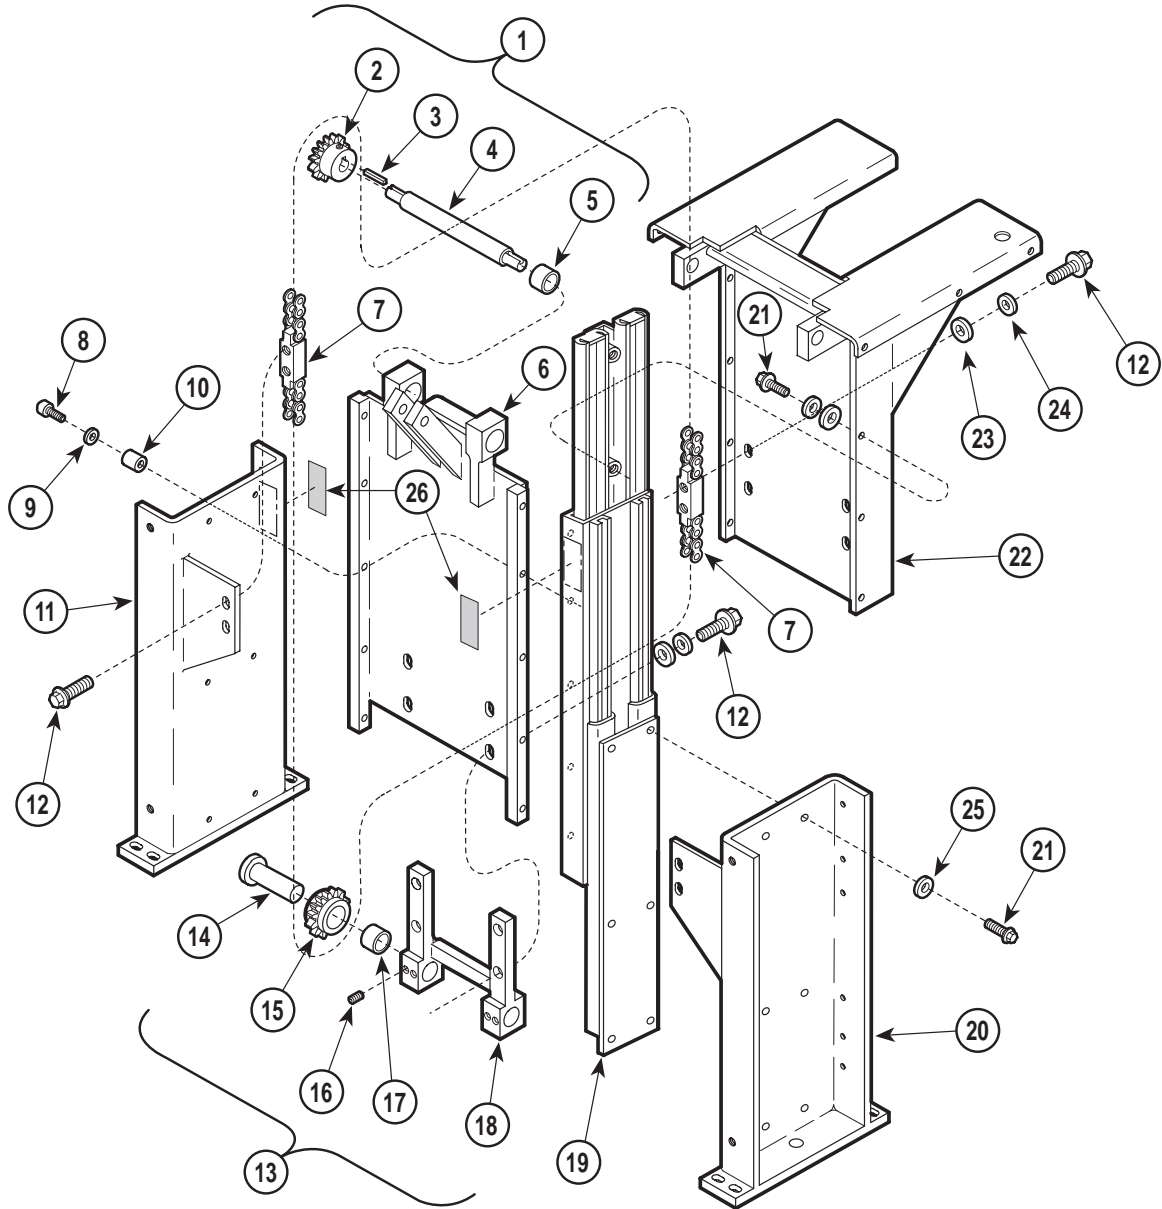

MA286600

### Used on units with Serial Number AJ-1000 thru Present


Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	029-0426-00	Base Slide Assembly (Includes Items 1 thru 25)	1	13	029-0071-00	• Idler Adjuster Assembly (Includes Items 14 thru 18)	1
	• 029-0072-00	• Middle Member Assembly (Includes Items 2 thru 6)	1	14	•• 030-0274-00	•• Journal Weldment	1
2	•• 016-0151-00	•• Sprocket (Includes Set Screw)	2	15	•• 016-0152-00	•• Sprocket	2
3	•• 042-0008-00	•• Machine Key	2	16	•• 040-0250-04	•• Set Screw	4
4	•• 057-0105-00	•• Axle	1	17	•• 016-0149-00	•• Bearing	2
5	•• 016-0149-00	•• Bearing	2	18	•• 030-0273-00	•• Idler Adjuster Weldment	1
6	•• 030-0094-00	•• Middle Member Weldment	1	19	• 016-0234-01	• L.H. Base Slide (Opposite)	1
7	• 029-0070-00	• Chain Assembly	2		• 016-0234-00	• R.H. Base Slide (Shown)	1
8	• 040-0008-30	• Screw	10	20	• 030-0092-00	• R.H. Support Channel Weldment	1
9	• 045-0001-10	• Lockwasher	10	21	• 040-0250-10	• Screw	20
10	• 052-0015-00	• Spacer	10	22	• 030-0096-01	• Inner Member Weldment	1
11	• 030-0092-01	• L.H. Support Channel Weldment	1	23	• 041-0001-01	• Washer	12
12	• 040-0375-06	• Screw	12	24	• 041-0001-09	• Lockwasher	12
				25	• 041-0001-03	• Washer	20
				26	061-0045-00	Cover Caution Label	2

Always Specify Model & Serial Number



# Base Slide Assembly

## SECTION VI PARTS LIST

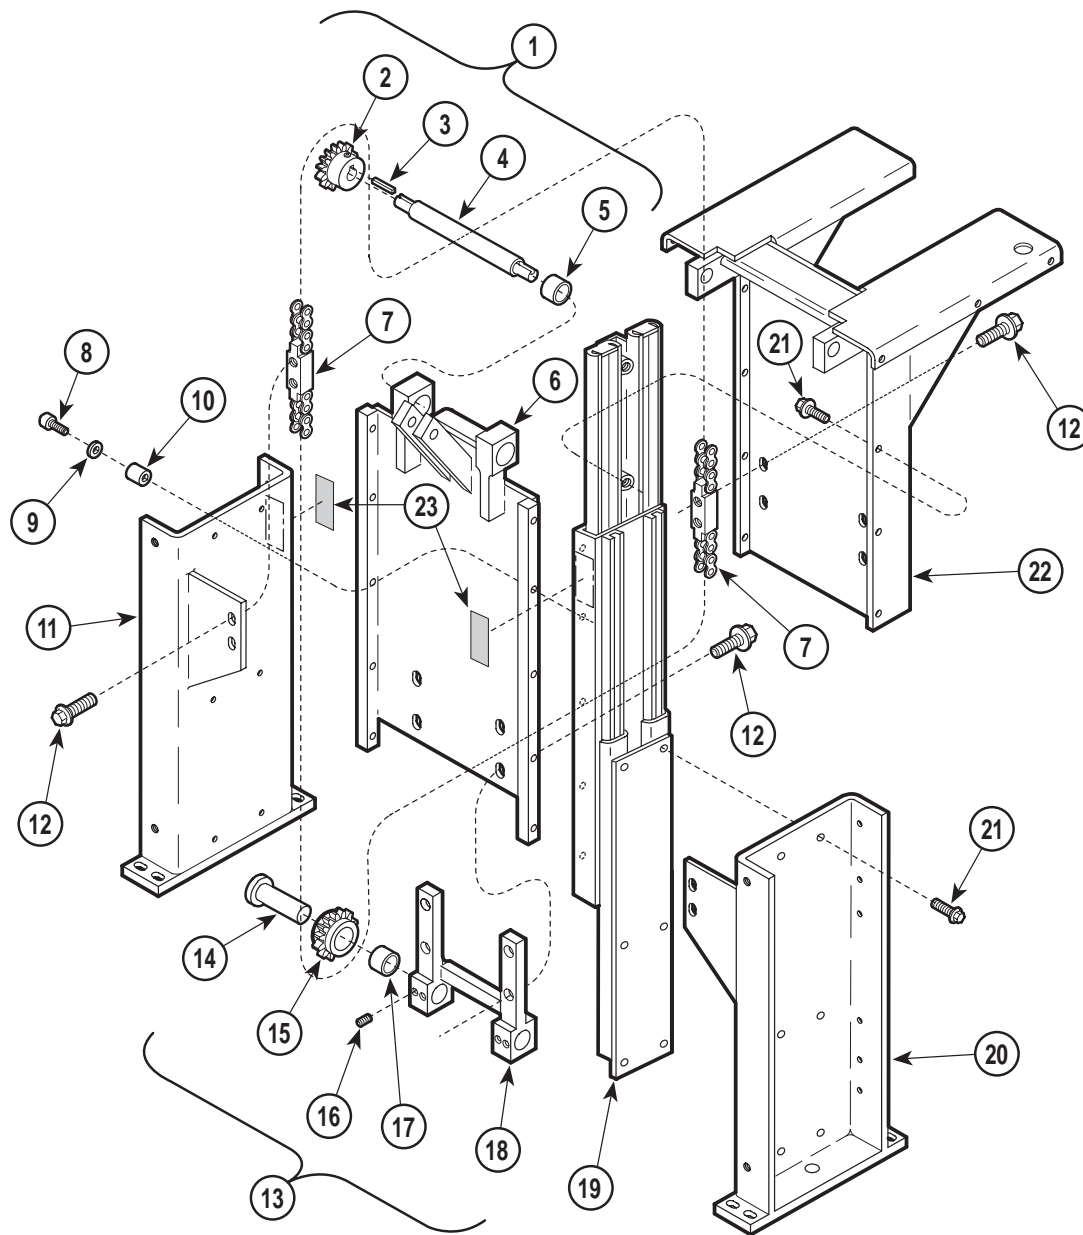

MA286601


### Used on units with Serial Number FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	029-0069-02	Base Slide Assembly (Includes Items 1 thru 22)	1	12	• 040-0375-00	• Screw	12
	• 029-0072-03	• Middle Member Assembly (Includes Items 2 thru 6)	1	13	• 029-0071-03	• Idler Adjuster Assembly (Includes Items 14 thru 18)	1
2	•• 016-0151-00	•• Sprocket (Includes Set Screw)	2	14	•• 030-0274-00	•• Journal Weldment	1
3	•• 042-0008-00	•• Machine Key	2	15	•• 016-0152-00	•• Sprocket	2
4	•• 057-0105-00	•• Axle	1	16	•• 040-0250-04	•• Set Screw	4
5	•• 016-0149-00	•• Bearing	2	17	•• 016-0149-00	•• Bearing	2
6	•• 030-0094-21	•• Middle Member Weldment	1	18	•• 030-0273-20	•• Idler Adjuster Weldment	1
7	• 029-0070-00	• Chain Assembly	2	19	• 016-0234-01	• L.H. Base Slide (Opposite)	1
8	• 040-0008-30	• Screw	10		• 016-0234-00	• R.H. Base Slide (Shown)	1
9	• 045-0001-10	• Lockwasher	10	20	• 030-0092-20	• R.H. Support Channel Weldment	1
10	• 052-0015-00	• Spacer	10	21	• 040-0250-88	• Screw	20
11	• 030-0092-21	• L.H. Support Channel Weldment	1	22	• 030-0917-21	• Inner Member Weldment	1
				23	061-0045-00	Cover Caution Label	2

Always Specify Model & Serial Number

# Base Electrical Components - Domestic

## SECTION VI PARTS LIST

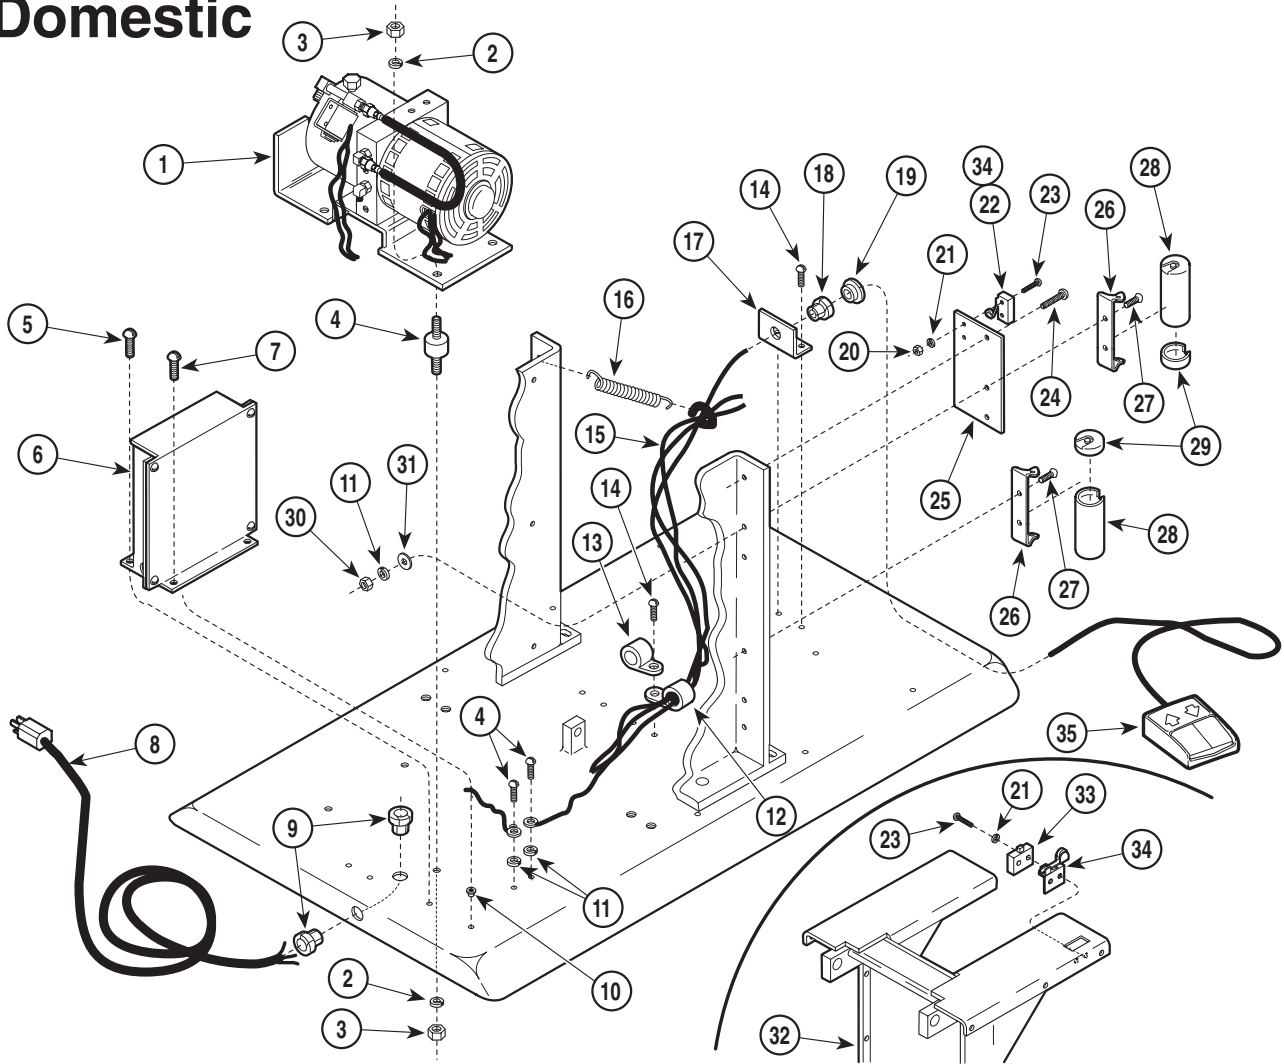

MA286702


### Used on units with Serial Number AJ-1000 thru AJ-1272

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to Breakdown Elsewhere)	1	19	053-0068-10	Snap Bushing	1
2	045-0001-03	Lockwasher	8	20	041-0004-00	Nut	2
3	041-0250-00	Nut	8	21	045-0001-43	Lockwasher	4
4	053-0051-00	Motor Mount	4	22	015-0381-00	Limit Switch	1
5	040-0010-47	Screw	4	23	040-0004-07	Screw	4
6		Control Panel (Refer to "Control Panel Assembly" Elsewhere)	1	24	040-0010-12	Screw	1
7	040-0010-34	Screw	2	25	050-0952-20	Auto Return Bracket	2
8	002-0040-00	Power Cord Set Kit	1	26	015-0412-02	Capacitor Mounting Bracket	2
9	015-0002-01	Strain Relief Bushing	2	27	040-0010-28	Screw	4
10	042-0045-01	Nutsert	4	28	002-0044-00	Capacitor Kit (Includes Item 29)	2
11	045-0001-31	Lockwasher	2	29	• 015-0413-01	• Capacitor Cap	2
12	015-0001-00	Wire Clip	1	30	041-0010-00	Nut	5
13	015-0014-00	Wire Clip	1	31	045-0001-15	Washer	5
14	040-0010-04	Screw	3	32		Inner Member Weldment (Refer to "Base Slide Assembly" Elsewhere)	Ref
15	(N.L.A.)	Wiring Harness (was 015-0406-00)	1	33	015-0381-00	Limit Switch	1
16	025-0025-00	Spring	1	34	015-0383-00	Switch Actuator	2
17	050-1014-00	Strain Relief Bracket	1	35		Refer to Foot Control Assembly	Ref
18	015-0008-00	Strain Relief Bushing	1				

(N/L/A) denotes "No Longer Available"  
Always Specify Model & Serial Number

# Base Electrical Components - Domestic

## SECTION VI PARTS LIST

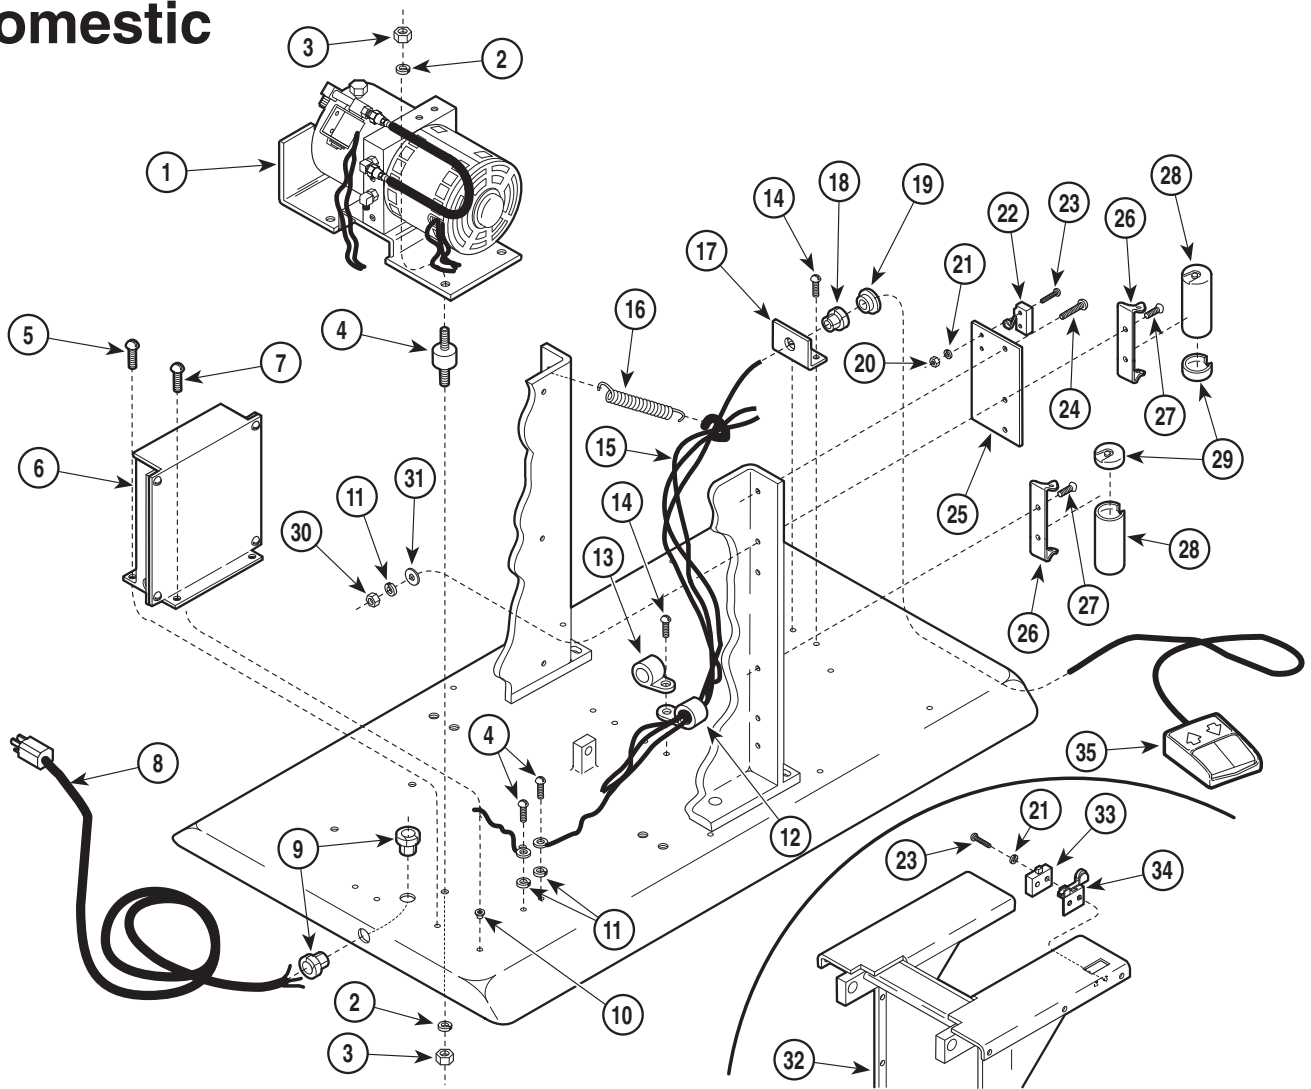

MA286703


### Used on units with Serial Number AJ-1273 thru AJ-1276

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to Breakdown Elsewhere) .....	1	19	053-0068-10	Snap Bushing .....	1
2	045-0001-03	Lockwasher .....	8	20	041-0004-00	Nut .....	2
3	041-0250-00	Nut .....	8	21	045-0001-43	Lockwasher .....	4
4	053-0051-00	Motor Mount .....	4	22	<del>015-0421-00</del>	Limit Switch .....	1
5	040-0010-47	Screw .....	4	23	040-0004-07	Screw .....	4
6		Control Panel (Refer to "Control Panel Assembly" Elsewhere) .....	1	24	040-0010-12	Screw .....	1
7	040-0010-34	Screw .....	2	25	050-0952-20	Auto Return Bracket .....	2
8	002-0040-00	Power Cord Set Kit .....	1	26	015-0412-02	Capacitor Mounting Bracket .....	2
9	015-0002-01	Strain Relief Bushing .....	2	27	040-0010-28	Screw .....	4
10	042-0045-01	Nutsert .....	4	28	002-0044-00	Capacitor Kit (Includes Item 29) .....	2
11	045-0001-31	Lockwasher .....	2	29	• 015-0413-01	• Capacitor Cap .....	2
12	015-0001-00	Wire Clip .....	1	30	041-0010-00	Nut .....	5
13	015-0014-00	Wire Clip .....	1	31	045-0001-15	Washer .....	5
14	040-0010-04	Screw .....	3	32		Inner Member Weldment (Refer to "Base Slide Assembly" Elsewhere) .....	Ref
15	(N.L.A.)	Wiring Harness (was 015-0406-00) .....	1	33	015-0381-00	Limit Switch .....	1
16	025-0025-00	Spring .....	1	34	015-0383-00	Switch Actuator .....	2
17	050-1014-00	Strain Relief Bracket .....	1	35		Refer to Foot Control Assembly .....	Ref
18	015-0008-00	Strain Relief Bushing .....	1				

(N/L/A) denotes "No Longer Available"  
Always Specify Model & Serial Number

# Base Electrical Components - Domestic

## SECTION VI PARTS LIST

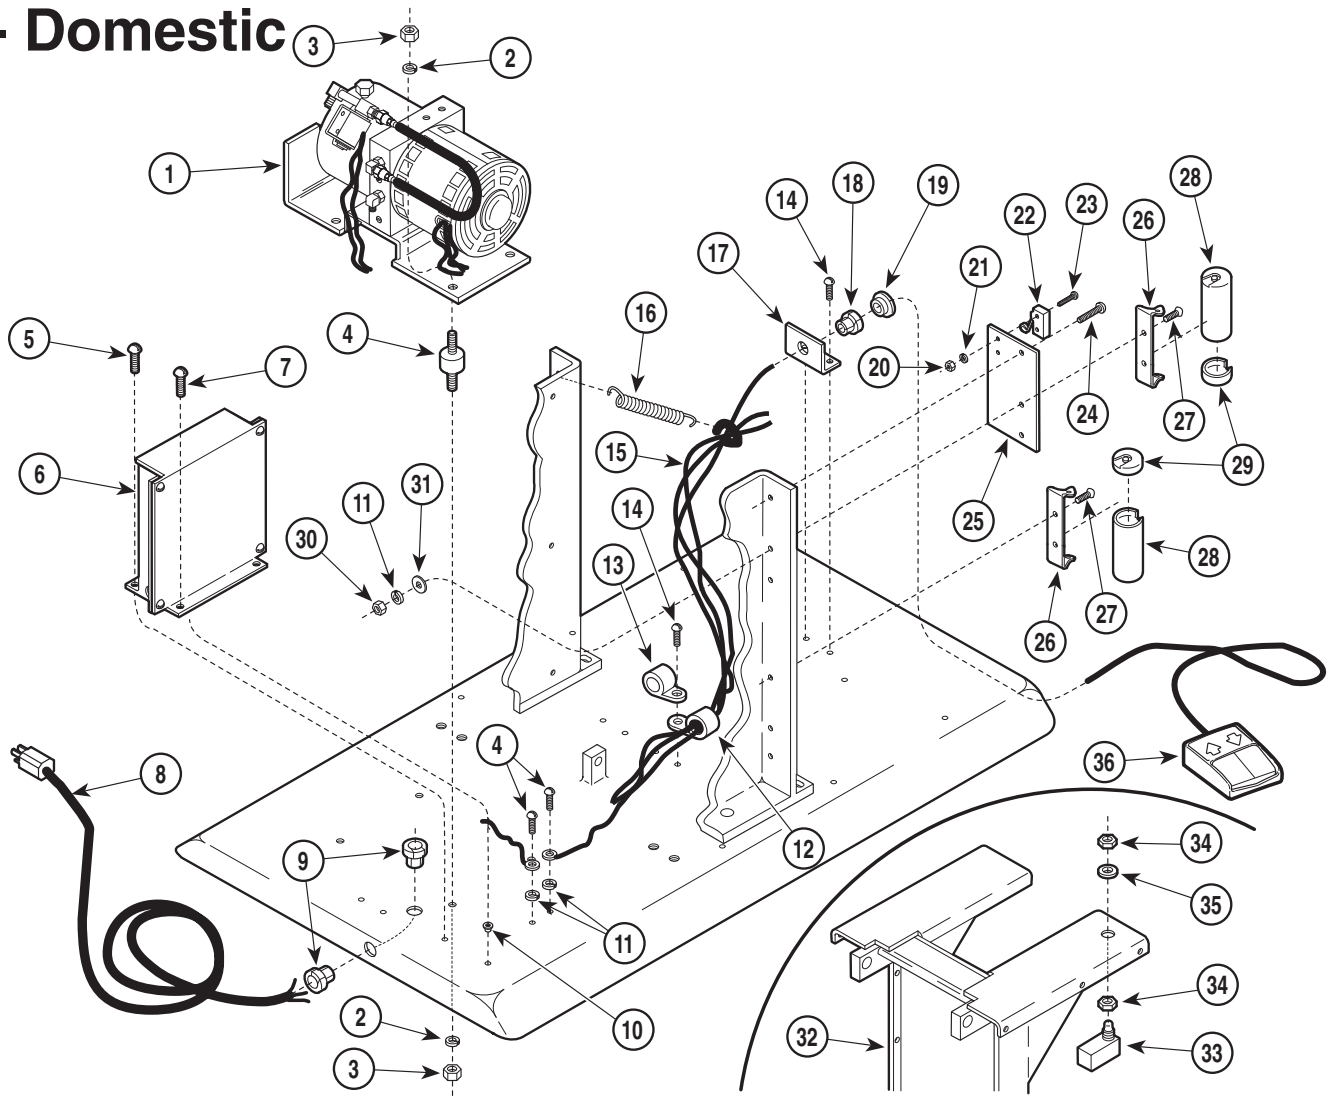

MA286700


### Used on units with Serial Number AJ-1277 thru AJ-3090

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to Breakdown Elsewhere) .....	1	19	053-0068-10	Snap Bushing .....	1
2	045-0001-03	Lockwasher .....	8	20	041-0004-00	Nut .....	2
3	041-0250-00	Nut .....	8	21	045-0001-43	Lockwasher .....	2
4	053-0051-00	Motor Mount .....	4	22	<del>015-0421-00</del>	Limit Switch .....	1
5	040-0010-47	Screw .....	4	23	040-0004-07	Screw .....	2
6		Control Panel (Refer to "Control Panel Assembly" Elsewhere) .....	1	24	040-0010-12	Screw .....	1
7	040-0010-34	Screw .....	2	25	050-0952-20	Auto Return Bracket .....	2
8	002-0040-00	Power Cord Set Kit .....	1	26	015-0412-02	Capacitor Mounting Bracket .....	2
9	015-0002-01	Strain Relief Bushing .....	2	27	040-0010-28	Screw .....	4
10	042-0045-01	Nutsert .....	4	28	002-0044-00	Capacitor Kit (Includes Item 29) .....	2
11	045-0001-31	Lockwasher .....	2	29	• 015-0413-01	• Capacitor Cap .....	2
12	015-0001-00	Wire Clip .....	1	30	041-0010-00	Nut .....	5
13	015-0014-00	Wire Clip .....	1	31	045-0001-15	Washer .....	5
14	040-0010-04	Screw .....	3	32		Inner Member Weldment (Refer to "Base Slide Assembly" Elsewhere) .....	Ref
15	(N.L.A.)	Wiring Harness (was 015-0406-00) .....	1	33	015-0422-00	Limit Switch .....	1
16	025-0025-00	Spring .....	1	34	041-0375-09	Panel Nut .....	2
17	050-1014-00	Strain Relief Bracket .....	1	35	045-0001-30	Lockwasher .....	1
18	015-0008-00	Strain Relief Bushing .....	1	36		Refer to Foot Control Assembly .....	Ref

(N/L/A) denotes "No Longer Available"  
Always Specify Model & Serial Number

# Base Electrical Components - Domestic

## SECTION VI PARTS LIST

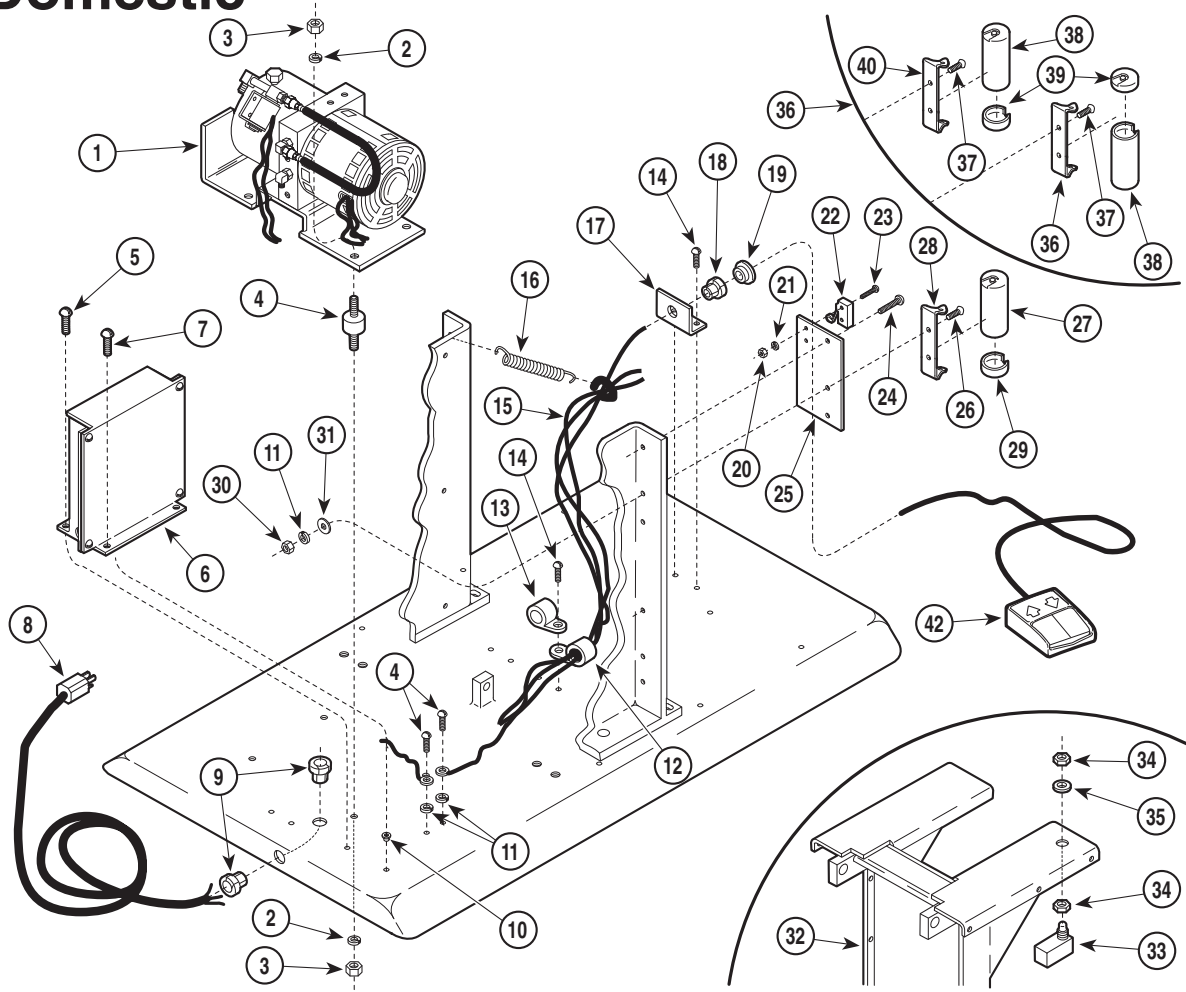

MA286701


### Used on units with Serial Number AJ-3090 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to Breakdown Elsewhere) .....	1	23	040-0004-07	Screw .....	2
2	045-0001-03	Lockwasher .....	8	24	040-0010-12	Screw .....	1
3	041-0250-00	Nut .....	8	25	050-0952-20	Auto Return Bracket .....	2
4	053-0051-00	Motor Mount .....	4	26	040-0010-28	Screw .....	2
5	040-0010-47	Screw .....	4	27	002-0043-00	Capacitor Kit (Includes Item 28 & 29) .....	1
6		Control Panel (Refer to "Control Panel Assembly" Elsewhere) .....	1	28	• 015-0412-00	• Capacitor Mounting Bracket .....	1
7	040-0010-34	Screw .....	2	29	• 015-0413-01	• Capacitor Cap .....	1
8	002-0040-00	Power Cord Set Kit .....	1	30	041-0010-00	Nut .....	3
9	015-0002-01	Strain Relief Bushing .....	2	31	045-0001-15	Washer .....	3
10	042-0045-01	Nutsert .....	4	32		Inner Member Weldment (Refer to "Base Slide Assembly" Elsewhere) .....	Ref
11	045-0001-31	Lockwasher .....	2	33	015-0422-00	Limit Switch .....	1
12	015-0001-00	Wire Clip .....	1	34	041-0375-09	Panel Nut .....	2
13	015-0014-00	Wire Clip .....	1	35	045-0001-30	Lockwasher .....	1
14	040-0010-04	Screw .....	3	36	002-0310-00	Capacitor Retrofit Kit (Includes Items 37 thru 41) .....	1
15	015-0601-00	Wiring Harness Assembly .....	1	37	• 040-0010-28	• Screw .....	4
16	025-0025-00	Spring .....	1	38	• 015-0437-07	• Capacitor (124 / 149 MFD - 250V) .....	2
17	050-1014-00	Strain Relief Bracket .....	1	39	• 015-0413-01	• Capacitor Cap .....	2
18	015-0008-00	Strain Relief Bushing .....	1	40	• 015-0412-00	• Capacitor Mounting Bracket .....	2
19	053-0068-10	Snap Bushing .....	1	41	• 041-0010-02	• Nut .....	4
20	041-0004-00	Nut .....	2	42		Refer to <i>Foot Control Assembly</i> .....	Ref
21	045-0001-43	Lockwasher .....	2				
22	<del>015-0421-00</del>	Limit Switch .....	1				

Always Specify Model & Serial Number

# Base Electrical Components - Domestic

## SECTION VI PARTS LIST

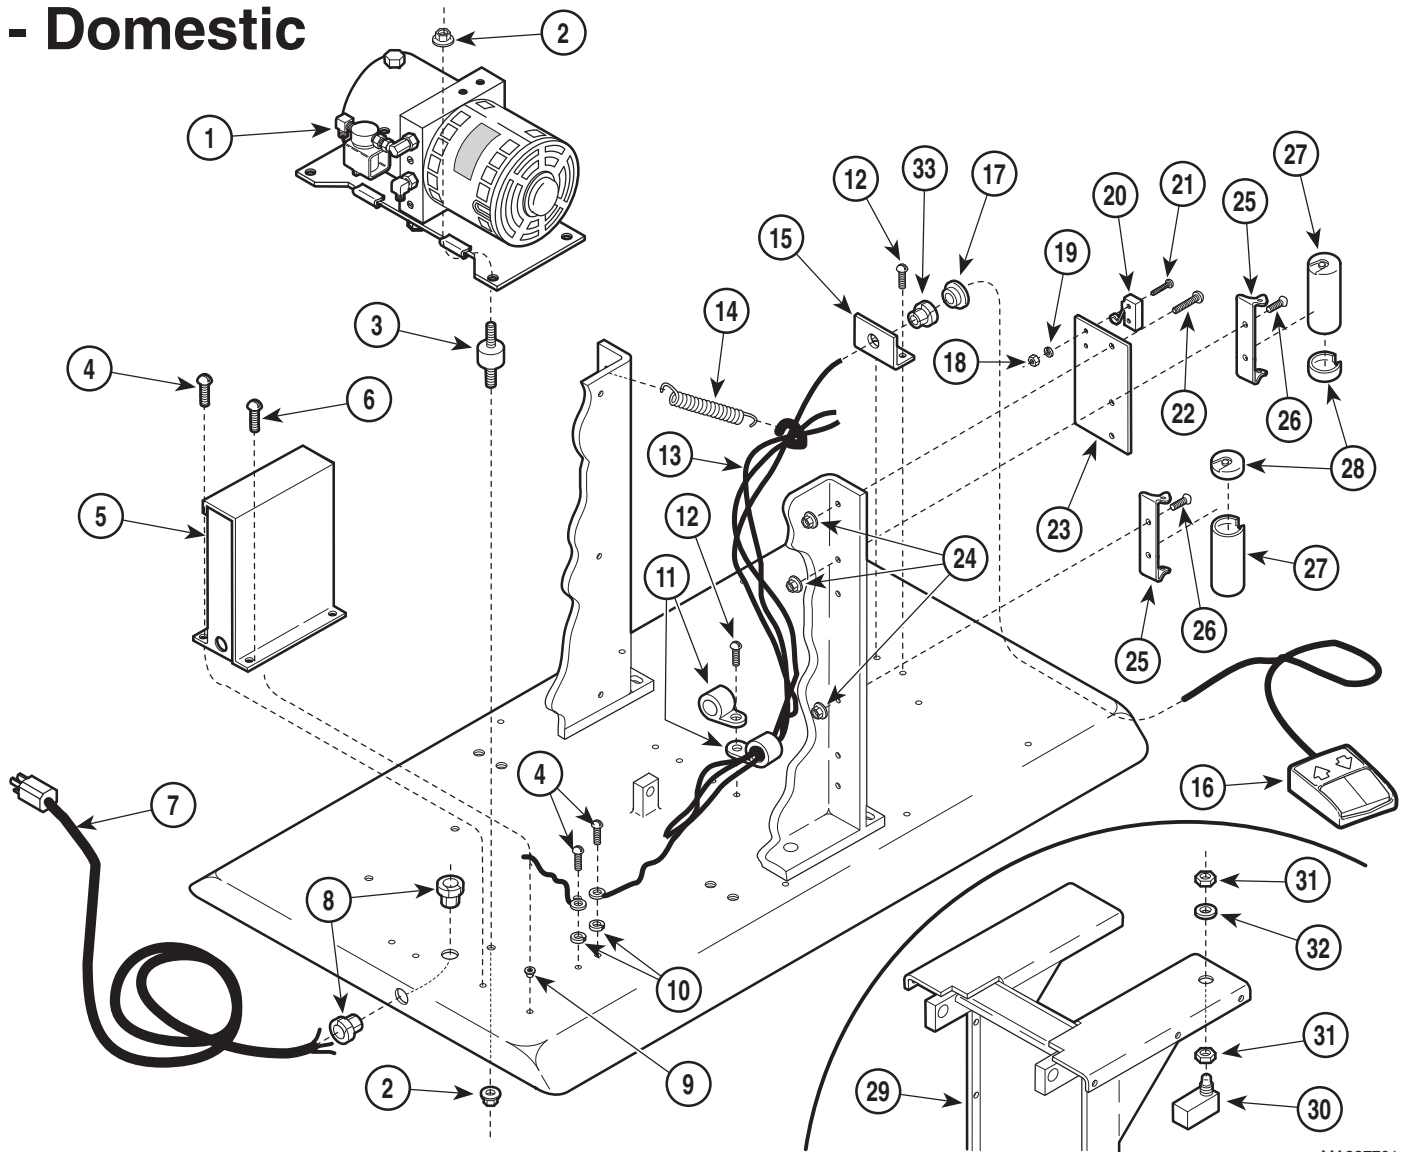

MA287701


### Used on units with Serial Number FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to "Pump / Motor Components" Elsewhere) .....	1	17	053-0068-10	Snap Bushing .....	1
2	041-0250-13	Nut .....	8	18	041-0004-00	Nut .....	2
3	053-0051-00	Motor Mount .....	4	19	045-0001-43	Lockwasher .....	2
4	040-0010-47	Screw .....	4	20	<del>015-0421-00</del>	Limit Switch .....	1
5		Control Panel (Refer to "Control Panel Assembly" Elsewhere) .....	1	21	040-0004-07	Screw .....	2
6	040-0010-34	Screw .....	2	22	040-0010-12	Screw .....	1
7	002-0040-00	Power Cord Set Kit .....	1	23	050-0952-20	Auto Return Bracket .....	2
8	015-0002-01	Strain Relief Bushing .....	2	24	041-0010-02	Nut .....	5
9	042-0045-01	Nutsert .....	4	25	015-0412-02	Capacitor Mounting Bracket .....	2
10	045-0001-31	Lockwasher .....	2	26	040-0010-28	Screw .....	4
11	015-0014-00	Wire Clip .....	1	27	002-0044-00	Capacitor Kit (Includes Item 28) .....	2
12	040-0010-04	Screw .....	3	28	• 015-0413-01	• Capacitor Cap .....	2
13	015-1079-00	Wiring Harness Assembly .....	1	29		Inner Member Weldment (Refer to "Base Slide Assembly" Elsewhere) .....	Ref
14	025-0025-00	Spring .....	1	30	015-0422-00	Limit Switch .....	1
15	050-0957-01	Strain Relief Bracket .....	1	31	041-0375-09	Panel Nut .....	2
16		Refer to Foot Control Assembly .....	Ref	32	045-0001-30	Lockwasher .....	1
				33	015-0002-00	Strain Relief Bushing .....	1

Always Specify Model & Serial Number

# Base Electrical Components - Export

## SECTION VI PARTS LIST

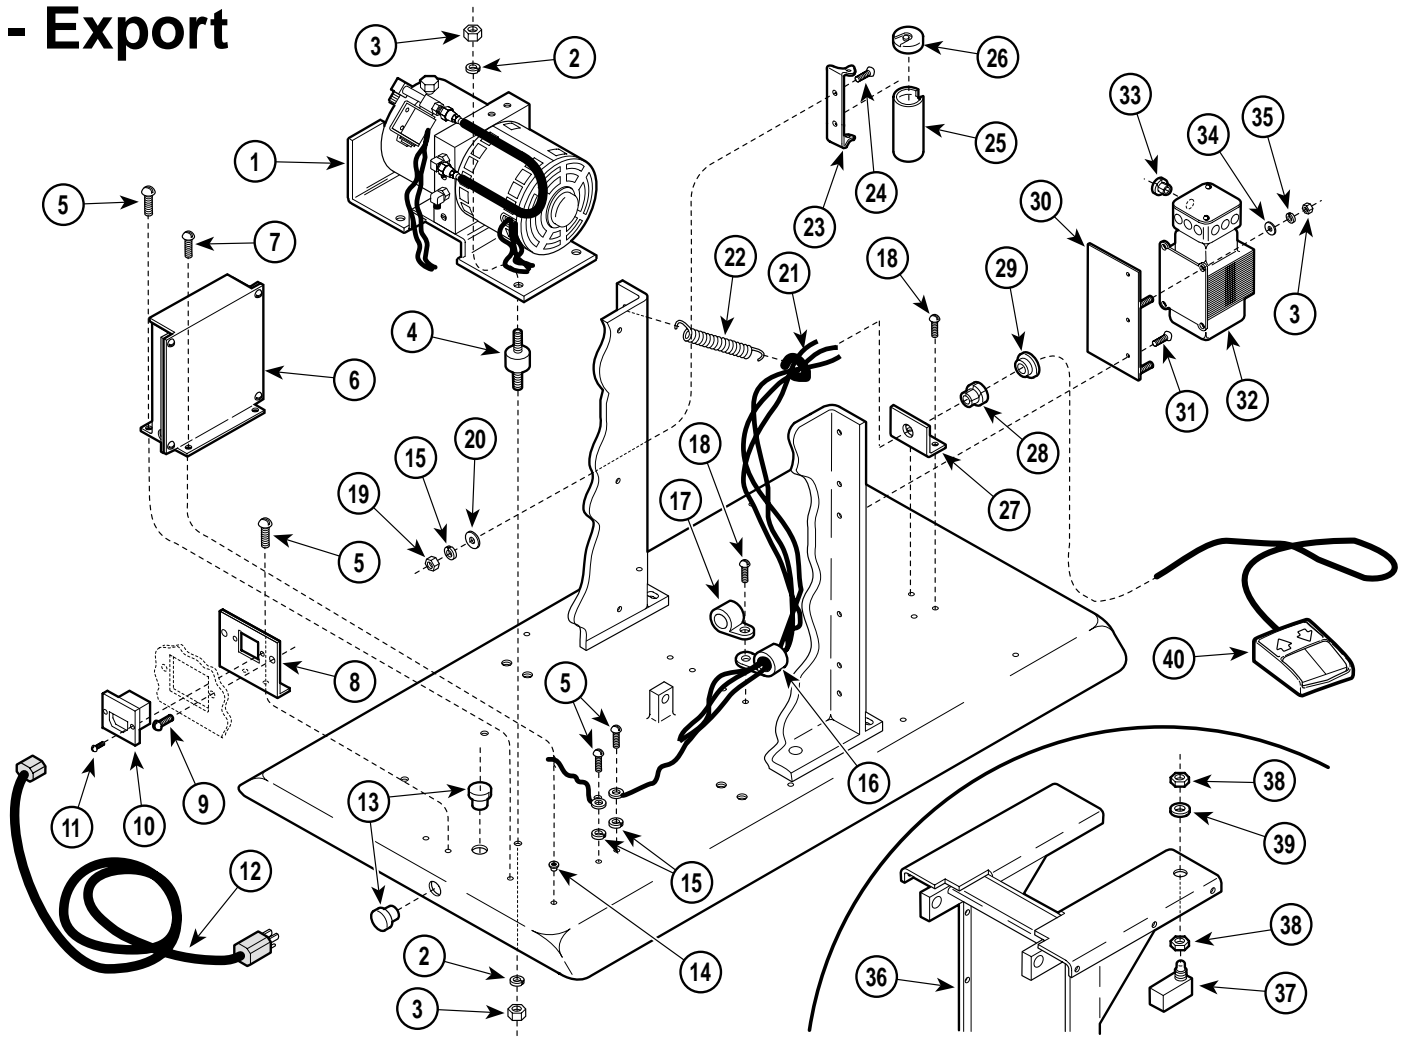

MA286800

### Used on units with Serial Number AJ-1000 thru AJ-1276


Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to "Pump / Motor Components" Elsewhere) .....	1	21		Wire Assembly (Refer to "Wiring Diagram" Elsewhere {Section 5}) .....	Ref
2	045-0001-03	Lockwasher .....	8	22	025-0025-00	Spring .....	1
3	041-0250-00	Nut .....	12	23	015-0412-00	Capacitor Mounting Bracket .....	2
4	053-0051-00	Motor Mount .....	4	24	040-0010-28	Screw .....	4
5	040-0010-47	Screw .....	6	25	002-0044-00	Capacitor Kit (Includes Item 28) .....	2
6		Control Panel (Refer to "Control Panel Assembly" Elsewhere) .....	1	26	• 015-0413-01	• Capacitor Cap .....	2
7	040-0010-34	Screw .....	2	27	050-1014-00	Strain Relief Bracket .....	1
9	050-2489-00	Receptacle Bracket .....	1	28	015-0002-04	Strain Relief Bushing .....	1
9	040-0010-04	Screw .....	2	29	053-0068-10	Snap Bushing .....	1
10	015-0364-00	A.C. Connector Receptacle .....	1	30	030-0323-00	Transformer Mounting Bracket .....	1
	• 015-0346-01	• Fuse .....	1	31	040-0010-12	Screw .....	3
11	040-0004-11	Screw .....	2	32	015-0118-00	Isolation Transformer .....	1
12	015-0363-00	Cord Set .....	1	33	053-0068-02	Snap Bushing .....	1
13	053-0071-00	Caplug .....	2	34	045-0001-02	Washer .....	4
14	042-0045-01	Nutsert .....	4	35	045-0001-03	Lockwasher .....	4
15	045-0001-31	Lockwasher .....	7	36		Inner Member Weldment (Refer to "Base Slide Assembly" Elsewhere) .....	Ref
16	015-0001-00	Wire Clip .....	1	37	015-0422-00	Limit Switch .....	1
17	015-0014-00	Wire Clip .....	1	38	041-0375-09	Panel Nut .....	2
18	040-0010-04	Screw .....	3	39	045-0001-30	Lockwasher .....	1
19	041-0010-00	Nut .....	5	40		Refer to Foot Control Assembly .....	Ref
20	045-0001-15	Washer .....	5				

Always Specify Model & Serial Number

# Base Electrical Components

## - Export

## SECTION VI PARTS LIST

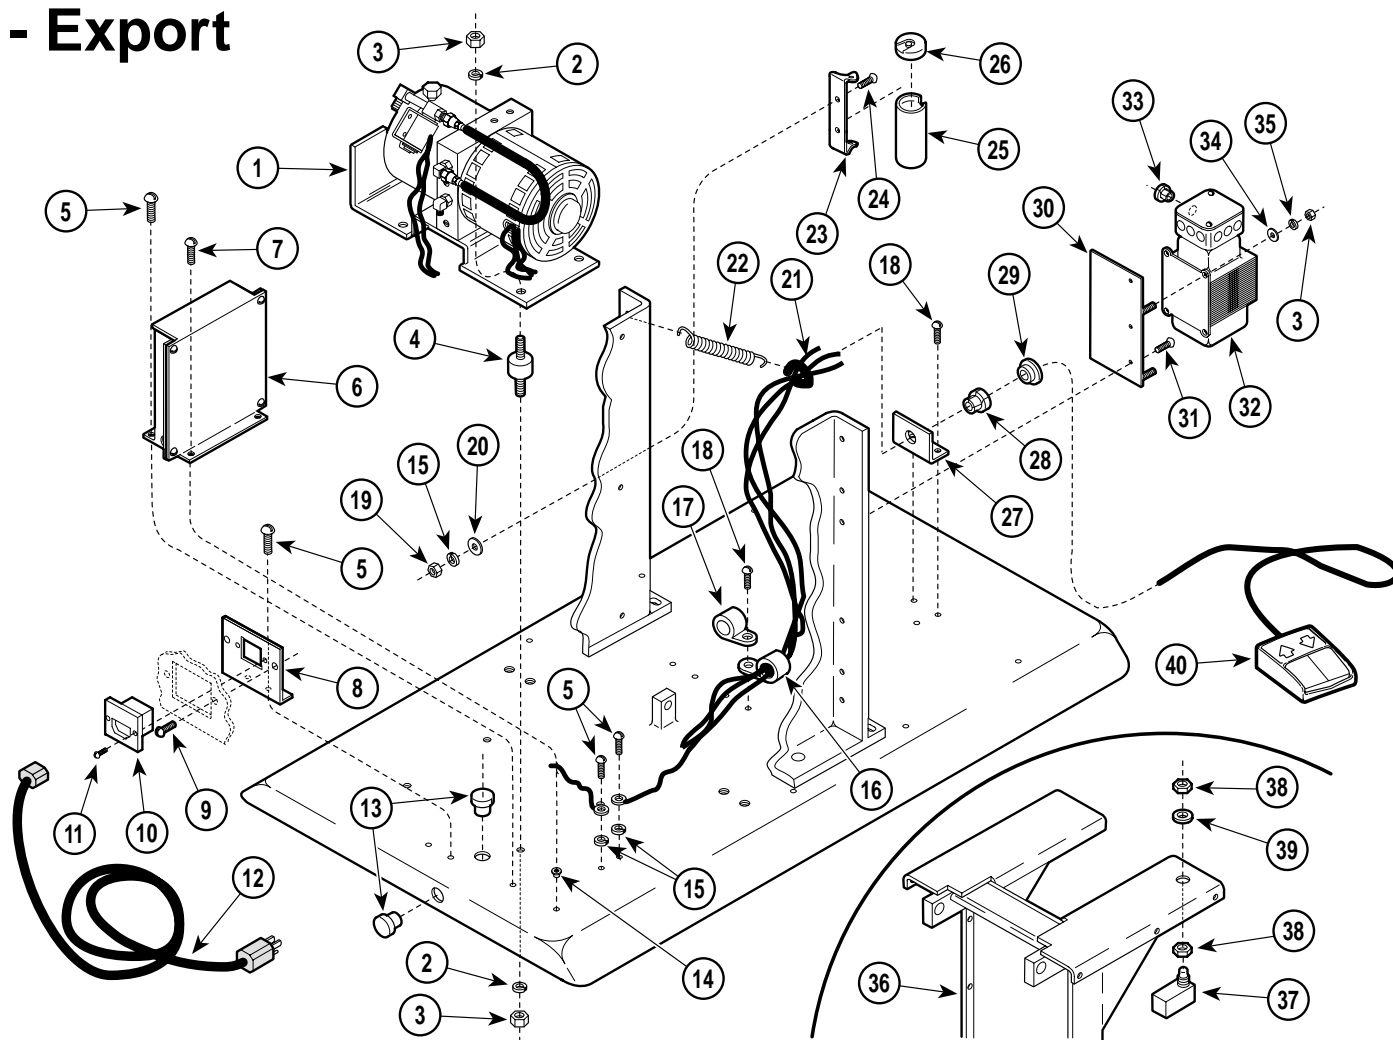

MA286800

### Used on units with Serial Number AJ-1277 thru Present


Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1		Motor / Pump Assembly (Refer to "Pump / Motor Components" Elsewhere) .....	1	21		Wire Assembly (Refer to "Wiring Diagram" Elsewhere {Section 5}) .....	Ref
2	045-0001-03	Lockwasher .....	8	22	025-0025-00	Spring .....	1
3	041-0250-00	Nut .....	12	23	015-0412-00	Capacitor Mounting Bracket .....	2
4	053-0051-00	Motor Mount .....	4	24	040-0010-28	Screw .....	4
5	040-0010-47	Screw .....	6	25	002-0044-00	Capacitor Kit (Includes Item 28) .....	2
6		Control Panel (Refer to "Control Panel Assembly" Elsewhere) .....	1	26	• 015-0413-01	• Capacitor Cap .....	2
7	040-0010-34	Screw .....	2	27	050-1014-00	Strain Relief Bracket .....	1
9	050-2489-00	Receptacle Bracket .....	1	28	015-0002-04	Strain Relief Bushing .....	1
9	040-0010-04	Screw .....	2	29	053-0068-10	Snap Bushing .....	1
10	015-0364-00	A.C. Connector Receptacle .....	1	30	030-0323-00	Transformer Mounting Bracket .....	1
	• 015-0346-01	• Fuse .....	1	31	040-0010-12	Screw .....	3
11	040-0004-11	Screw .....	2	32	015-0118-00	Isolation Transformer .....	1
12	015-0363-00	Cord Set .....	1	33	053-0068-02	Snap Bushing .....	1
13	053-0071-00	Caplug .....	2	34	045-0001-02	Washer .....	4
14	042-0045-01	Nutsert .....	4	35	045-0001-03	Lockwasher .....	4
15	045-0001-31	Lockwasher .....	7	36		Inner Member Weldment (Refer to "Base Slide Assembly" Elsewhere) .....	Ref
16	015-0001-00	Wire Clip .....	1	37	015-0422-00	Limit Switch .....	1
17	015-0014-00	Wire Clip .....	1	38	041-0375-09	Panel Nut .....	2
18	040-0010-04	Screw .....	3	39	045-0001-30	Lockwasher .....	1
19	041-0010-00	Nut .....	5	40		Refer to Foot Control Assembly .....	Ref
20	045-0001-15	Washer .....	5				

Always Specify Model & Serial Number



# Motor / Pump Components

## SECTION VI PARTS LIST

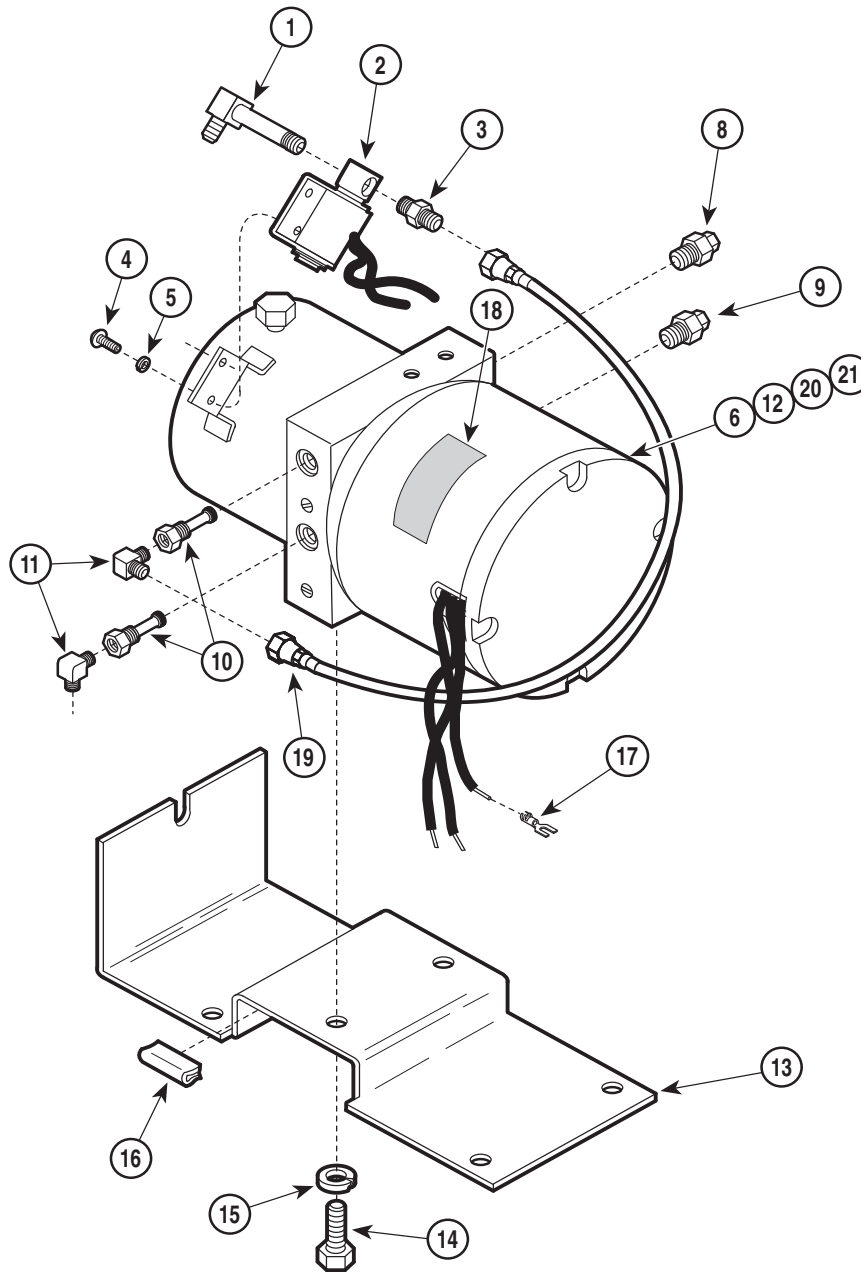

MA531800


### Used on units with Serial Number AJ-1000 thru AJ-3090

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	<del>014-0114-00</del>	Male Elbow .....	1	11	•• 014-0096-00	•• Elbow .....	2
2	002-0038-00	Anticavitation Solenoid Valve Kit .....	1	12	• 014-0262-02	• Reservoir O-Ring Seal (Not Shown) ....	1
3	014-0099-00	Male Connector .....	1	13	050-0955-20	Motor Base .....	1
4	040-0008-04	Screw .....	2	14	040-0500-02	Screw .....	2
5	045-0001-19	Lockwasher .....	2	15	045-0001-33	Lockwasher .....	2
6	002-0127-00	Motor / Pump Assembly (Includes		16	016-0140-00	Trim Lock (Specify Length - 2") .....	1
		Items 7 thru 12) .....	1	17	015-0018-03	Spring Spade Terminal .....	5
7	• 014-0169-00	• Motor Shaft Seal (Not Shown) .....	1	18	061-0135-00	Motor Caution Label .....	1
8	•	• Relief Valve (Low Pressure) .....	1	19	014-0104-00	Hose Assembly .....	1
9	•	• Relief Valve (High Pressure) .....	1	20	014-0020-00	Mineral Oil .....	AR
10	• 014-0168-00	• Shuttle Valve (Includes Item 11) .....	2	21	014-0007-00	Pipe Sealant .....	AR

Always Specify Model & Serial Number

# Motor / Pump Components

## SECTION VI PARTS LIST

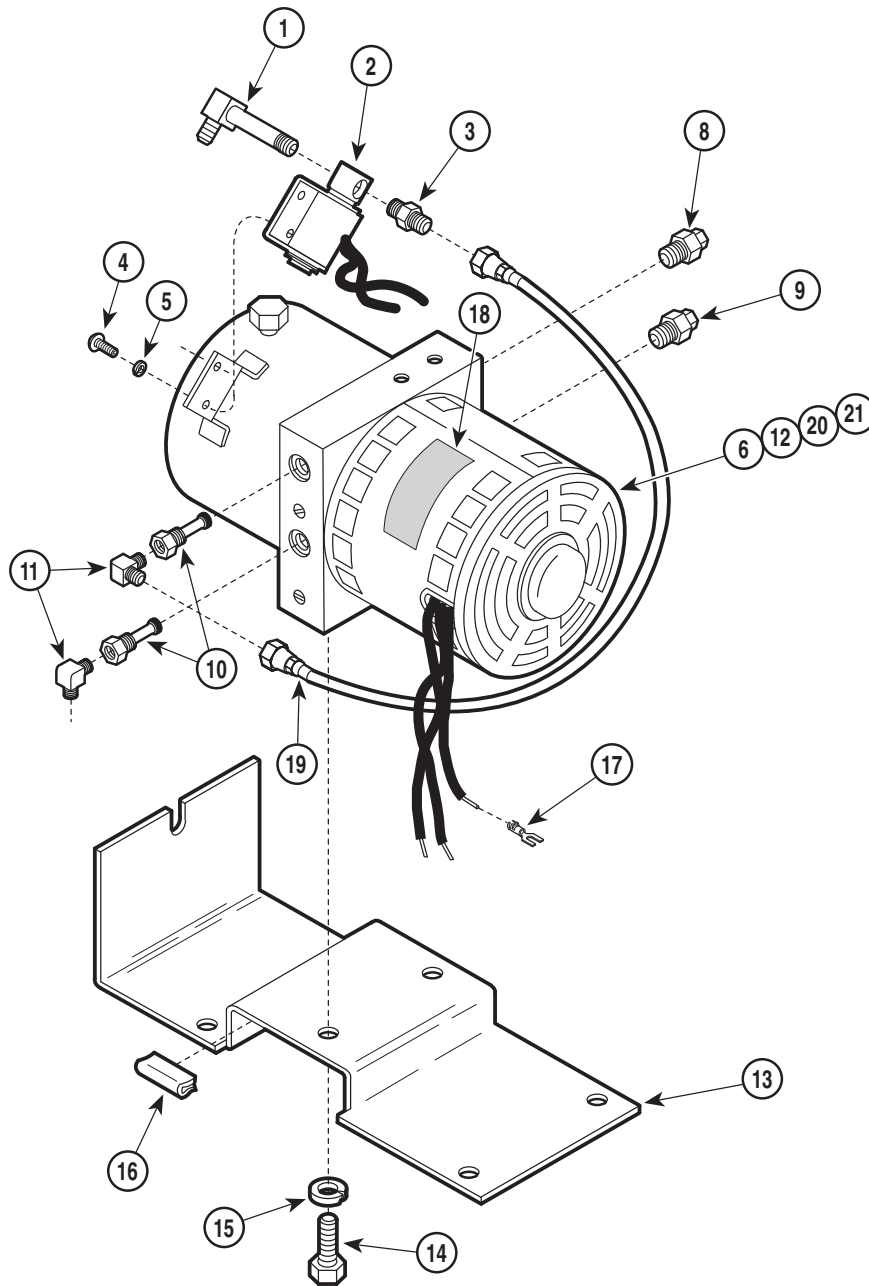

MA2261


### Used on units with Serial Number AJ-3091 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	014-0114-00	Male Elbow .....	1	11	•• 014-0096-00	•• Elbow .....	2
2	002-0038-00	Anticavitation Solenoid Valve Kit .....	1	12	• 014-0104-00	Hose Assembly .....	1
3	014-0099-00	Male Connector .....	1	13	050-0955-20	Motor Base .....	1
4	040-0008-04	Screw .....	2	14	040-0500-02	Screw .....	2
5	045-0001-19	Lockwasher .....	2	15	045-0001-33	Lockwasher .....	2
6	002-0133-00	Motor / Pump Assembly (Includes Items 7 thru 10) .....	1	16	016-0360-00	Trim Lock (Specify Length - 2") .....	1
7	• 014-0169-00	• Motor Shaft Seal (Not Shown) .....	1	17	015-0018-03	Spring Spade Terminal .....	5
8	• 014-0248-00	• Relief Valve (Low Pressure) .....	1	18	061-0135-00	Motor Caution Label .....	1
9	• 014-0249-00	• Relief Valve (High Pressure) .....	1	19	014-0104-00	Hose Assembly .....	1
10	• 014-0168-00	• Shuttle Valve (Includes Item 11) .....	2	20	014-0020-00	Mineral Oil .....	AR
				21	014-0007-00	Pipe Sealant .....	AR

Always Specify Model & Serial Number

# Motor / Pump Components

## SECTION VI PARTS LIST

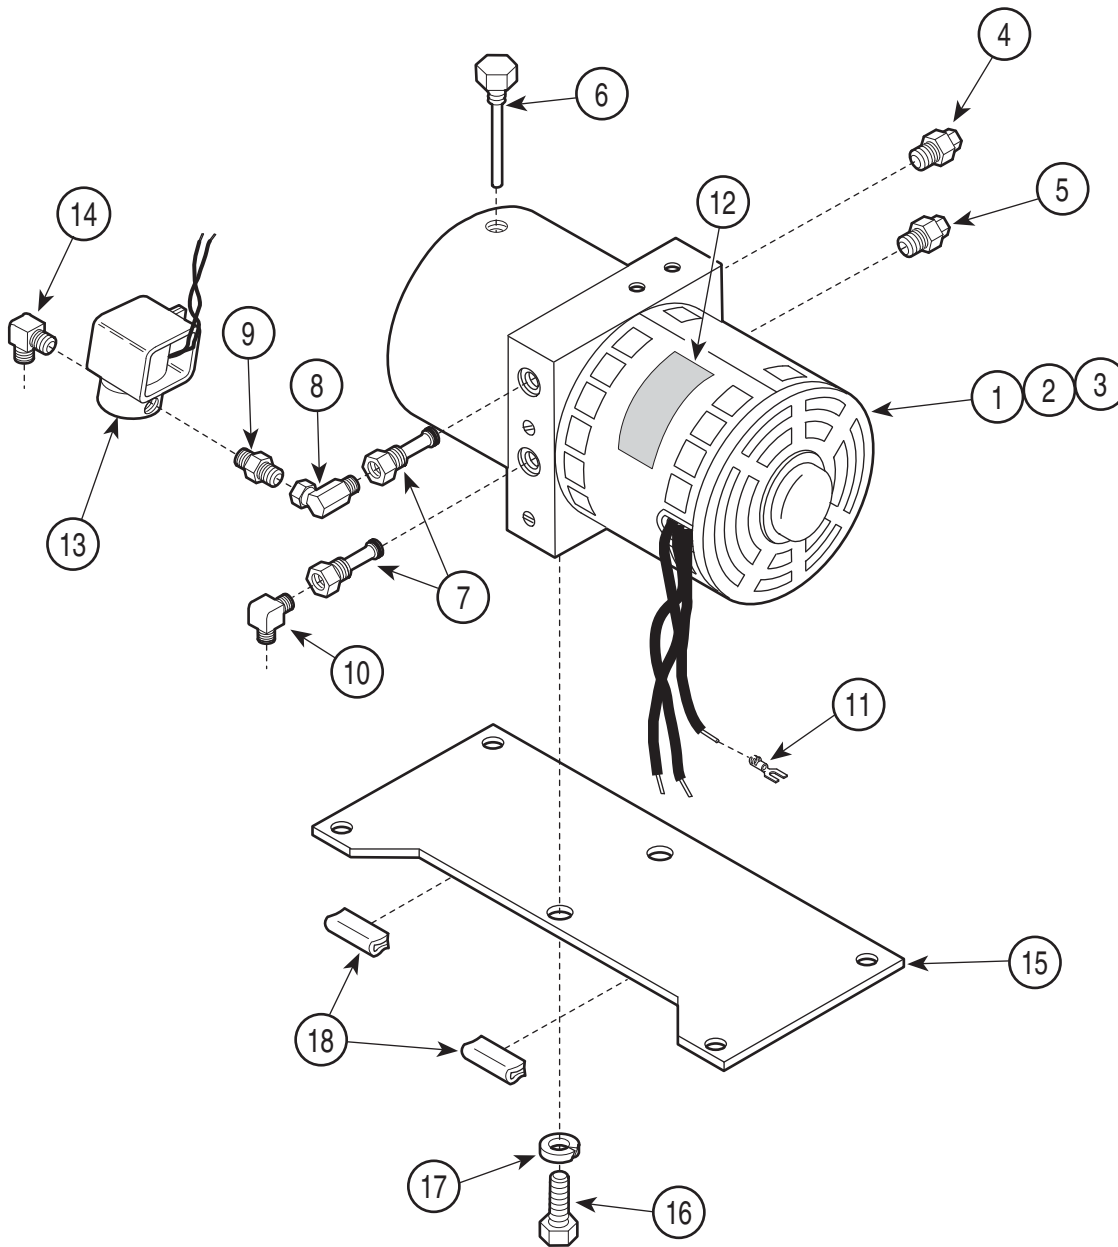

MA531100


### Used on units with Serial Numbers FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	002-0444-00	Motor / Pump Assembly (Includes Items 2 thru 11) .....	1	9	• 014-0045-00	• Connector .....	1
2	• 014-0169-00	• Motor Shaft Seal (Not Shown) .....	1	10	• 014-0096-00	• Elbow .....	1
3	• 014-0262-02	• Reservoir O-Ring Seal (Not Shown) ....	1	11	• 015-0018-03	• Spring Spade Terminal .....	3
4	• 014-0248-00	• Relief Valve (Low Pressure) .....	1	12	061-0135-00	Motor Caution Label .....	1
5	• 014-0249-00	• Relief Valve (High Pressure) .....	1	13	002-0038-00	Anticavitation Solenoid Valve .....	1
6	• 014-0262-01	• Filler Cap .....	1	14	014-0096-00	Elbow .....	1
7	• 014-0168-00	• Shuttle Valve .....	2	15	050-2662-20	Motor Base .....	1
8	• 014-0260-00	• Elbow .....	1	16	040-0500-02	Screw .....	2
				17	045-0001-33	Lockwasher .....	2
				18	016-0360-00	Trim Lock (Specify Length - 2") .....	2

Always Specify Model & Serial Number

# Control Panel Assembly

## SECTION VI PARTS LIST

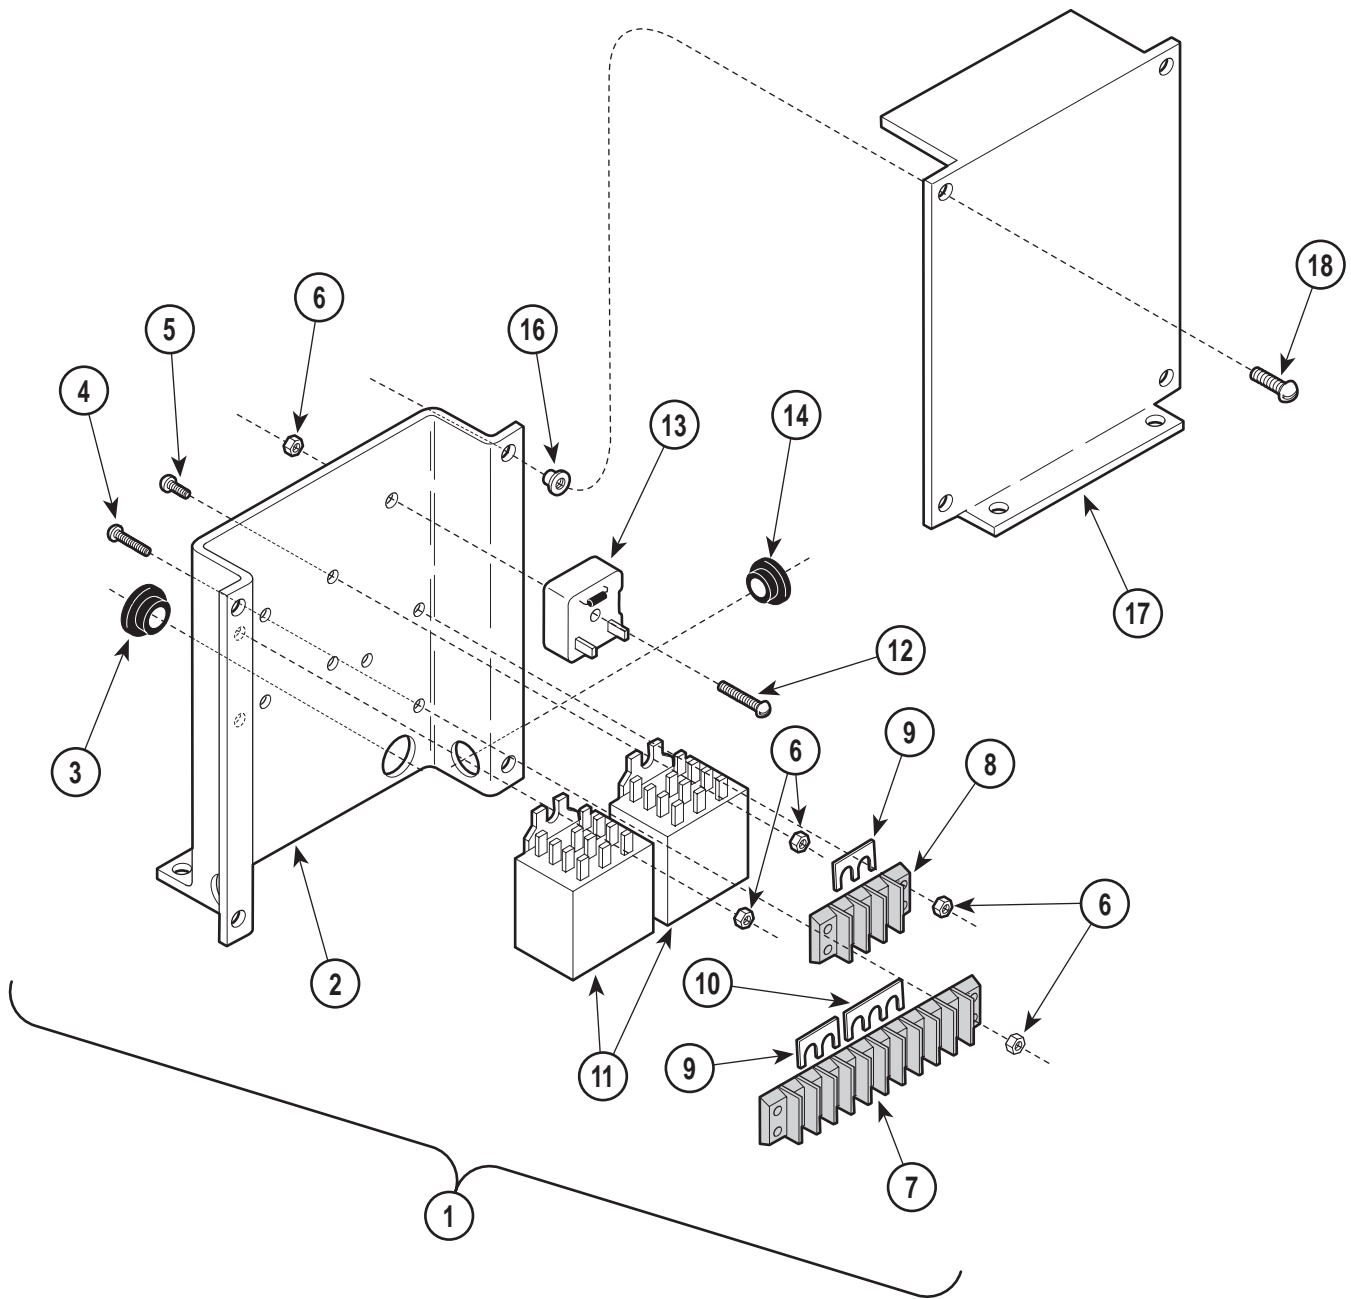

MA287600


### Used on units with Serial Numbers AJ-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	029-0422-00	Control Panel Assembly [Less Cord]		9	•015-0022-01	• Jumper .....	2
		(Includes Items 2 thru 14) .....	1	10	•015-0022-00	• Jumper .....	1
	029-0422-01	Control Panel Assembly [With Cord]		11	•015-0374-00	• Relay .....	2
		(Includes Items 2 thru 15) .....	1	12	•040-0006-11	• Screw .....	1
2	•030-0321-00	• Control Panel Weldment .....	1	13	•002-0041-00	• Time Delay Relay .....	1
3	•053-0068-06	• Snap Bushing .....	1	14	•053-0068-09	• Snap Bushing .....	2
4	•040-0006-33	• Screw .....	4	15	•015-0091-00	• Footswitch Cord (Not Shown) .....	1
5	•040-0006-10	• Screw .....	2	16	042-0045-02	Nutsert .....	4
6	•041-0006-01	• Nut .....	9	17	050-0954-00	Control Cover .....	1
7	•015-0009-01	• Terminal Block .....	1	18	040-0008-29	Screw .....	4
8	•015-0009-05	• Terminal Block .....	1				

Always Specify Model & Serial Number

# Control Panel Assembly

## SECTION VI PARTS LIST

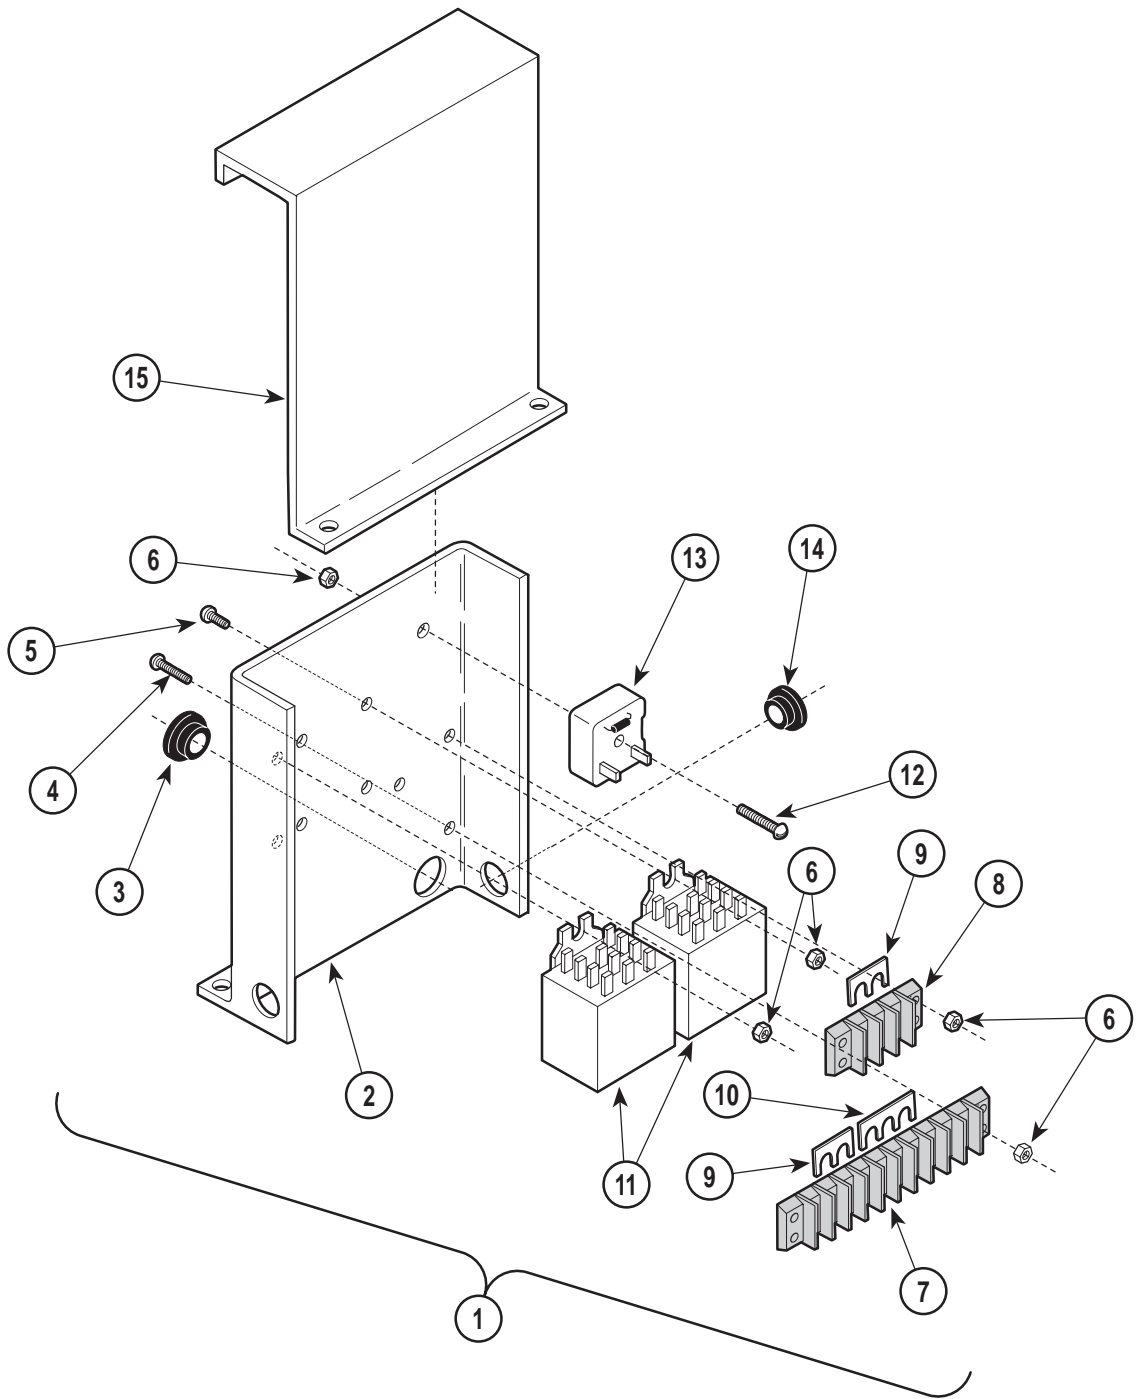

MA287601


### Used on units with Serial Numbers FE-1000 thru Present

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	029-1918-00	Control Panel Assembly (Includes Items 2 thru 14)	1	8	• 015-0009-05	• Terminal Block	1
2	• 030-0321-20	• Control Panel Weldment	1	9	• 015-0022-01	• Jumper	2
3	• 053-0068-06	• Snap Bushing	1	10	• 015-0022-00	• Jumper	1
4	• 040-0006-33	• Screw	4	11	• 015-0374-00	• Relay	2
5	• 040-0006-10	• Screw	4	12	• 040-0006-11	• Screw	1
6	• 041-0006-01	• Nut	9	13	• 002-0041-00	• Time Delay Relay	1
7	• 015-0009-01	• Terminal Block	1	14	• 053-0068-09	• Snap Bushing	2
				15	050-1533-20	Control Cover	1

Always Specify Model & Serial Number

# Foot Control Assembly

## SECTION VI PARTS LIST

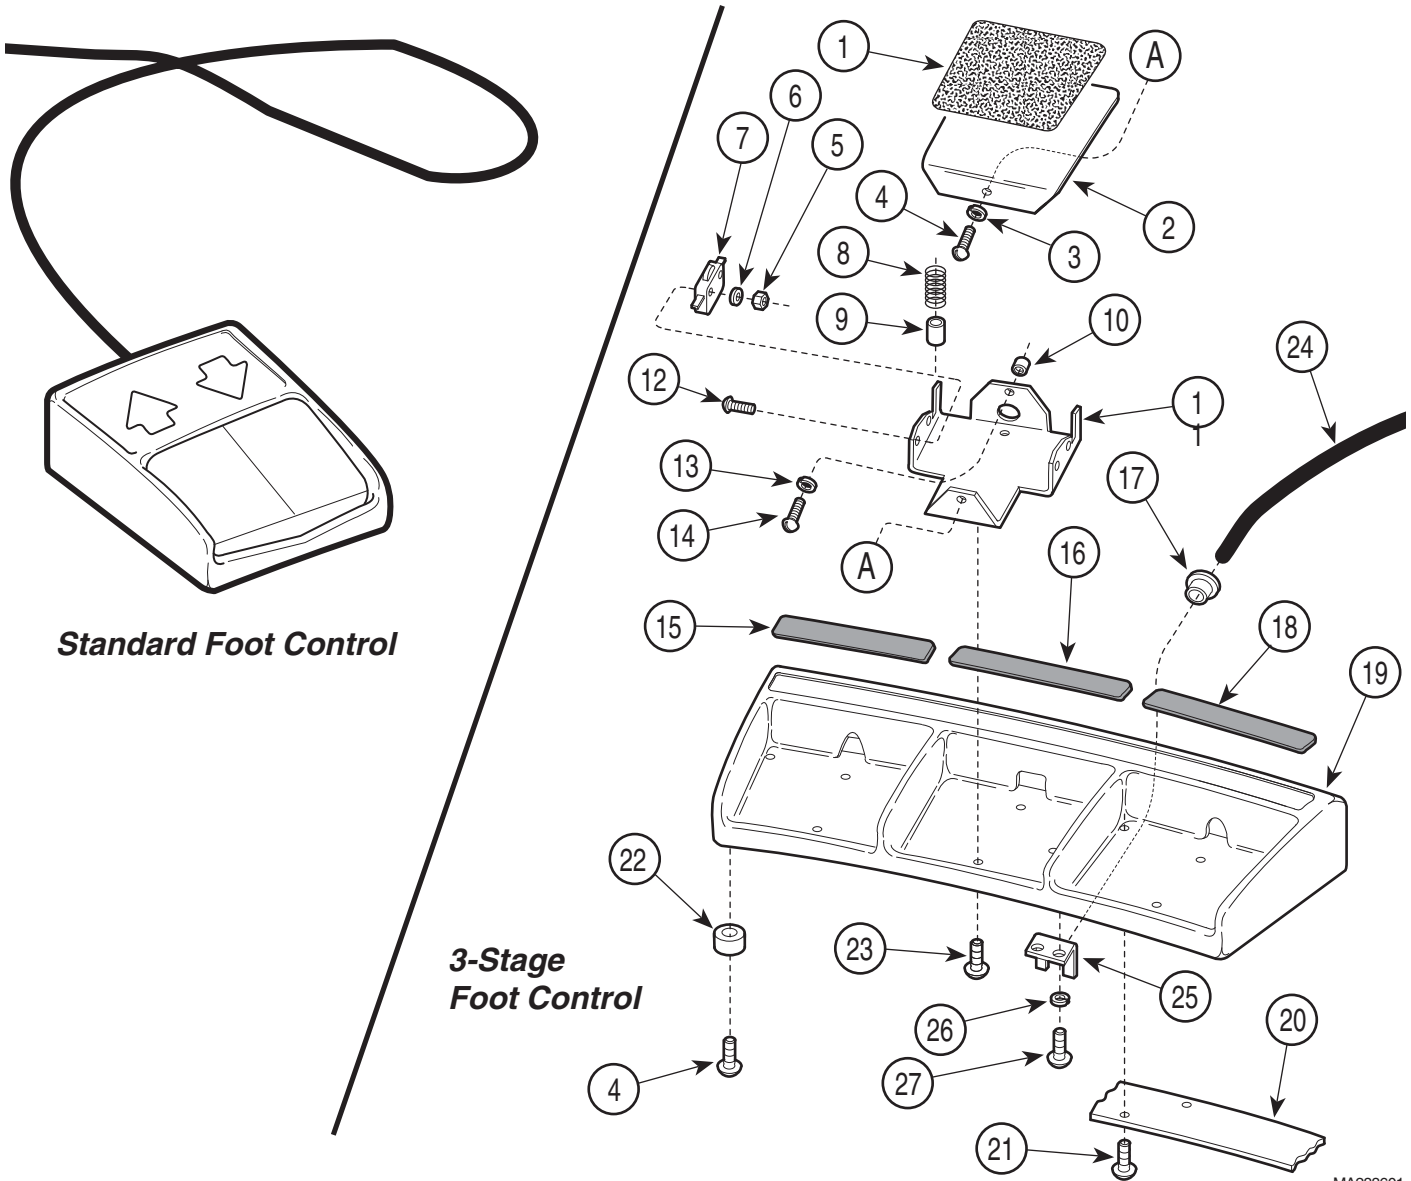

MA288601

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
	<b>015-0404-00</b>	<b>Standard Foot Control</b>		12	• 040-0003-00	• Screw .....	12
	• 002-0101-00	• Microswitch Kit (includes one switch) ....	1	13	• 045-0001-08	• Lockwasher .....	3
	<b>029-0396-00</b>	<b>3-Stage Foot Control w/ cable</b>		14	• 040-0010-36	• Screw .....	3
		(includes items 1 thru 24) .....	1	15	<del>• 061-0136-00</del>	<del>• (No Longer Available) .....</del>	1
	<del>029-0396-01</del>	<del>3-Stage Foot Control w/o cable</del>		16	<del>• 061-0136-01</del>	<del>• (No Longer Available) .....</del>	1
		(includes items 1 thru 23) .....	1	17	• 015-0008-00	• Strain Relief Bushing .....	1
1	• 053-0154-00	• Foot Tread .....	3	18	<del>• 061-0136-02</del>	<del>• (No Longer Available) .....</del>	1
2	• 050-0941-xx	• Footswitch Pedal .....	3	19	• 020-0021-00	• Foot Control Casting .....	1
3	• 052-0076-00	• Spacer .....	3	20	• 050-0956-00	• Wire Channel Cover .....	1
4	• 040-0010-04	• Screw .....	7	21	• 040-0010-00	• Screw .....	8
5	• 041-0003-00	• Nut .....	12	22	• 053-0156-00	• Glide .....	4
6	• 045-0001-07	• Washer .....	12	23	• 040-0010-52	• Screw .....	6
7	• 002-0045-00	• Switch .....	6	24	• 015-0091-00	• Cable .....	1
8	• 025-0009-00	• Spring .....	6	25	050-0957-00	Strain Relief Bracket .....	1
9	• 052-0010-00	• Spacer .....	6	26	045-0001-08	Lockwasher .....	2
10	• 052-0075-00	• Spacer .....	3	27	040-0010-47	Screw .....	2
11	• 050-3258-00	• Footswitch Bracket .....	3	28	002-0398-00	Stabilizer Kit (Not Shown) .....	1

Always Specify Model & Serial Number

## COMMENTS

The Technical Publications Department of Midmark Corporation takes pride in its publications. We are sure that our manuals will fill all of your needs when you are performing scheduled maintenance, servicing, or repairs on a Midmark product.

However, if you find any errors or feel that there should be a change, addition, or deletion to a manual, please let us know!

**Page(s) and Paragraph(s) Needing Changed:**

**Description of Error or Desired Change:**

Please fax or mail a copy of this completed comment sheet to:

Midmark Corporation  
ATTN: Technical Publications Department  
60 Vista Drive  
Versailles, Ohio 45380  
Fax: (937) 526-5542

# FAX ORDERING FORM

(SERVICE PARTS ONLY)

**NOTES:**

- ALL **BLOCKED** AREAS MUST BE COMPLETED.
- USE FOR NON-WARRANTY FAX ORDERS ONLY. WARRANTY ORDERS MUST BE TELEPHONED IN (1-800-MIDMARK).

<b>ATTENTION: SERVICE DEPARTMENT FAX#: 877-249-1793</b>				
ACCT #: _____		P.O. #: _____		DATE: _____
NAME: _____			SHIP TO: _____	
ADDRESS: _____			_____	
CITY, ST.: _____			_____	
CONTACT: _____			_____	
PHONE: _____			_____	
<input type="checkbox"/> NON-EMERGENCY ORDER - TO SHIP WITHIN 72 HOURS IF PART(S) IN STOCK.			<b>METHOD OF SHIPMENT</b> <u>OTHER</u> _____	
<input type="checkbox"/> EMERGENCY ORDER - TO SHIP WITHIN 24 HOURS IF PART(S) IN STOCK (IF ORDER IS RECEIVED BEFORE 1:00 P.M. E.S.T).			<b>UPS</b> <b>FED EX</b>	
SEND NOTIFICATION IF PARTS ARE NOT AVAILABLE TO SHIP WITHIN 24 HOURS VIA E-MAIL OR FAX TO: _____			<input type="checkbox"/> NEXT DAY A.M. <input type="checkbox"/> NEXT DAY A.M.	
			<input type="checkbox"/> NEXT DAY P.M. <input type="checkbox"/> NEXT DAY P.M.	
			<input type="checkbox"/> 2ND DAY <input type="checkbox"/> 2ND DAY	
			<input type="checkbox"/> GROUND <input type="checkbox"/> ECONOMY	
QTY.	PART #	DESCRIPTION (SPECIFY COLOR OF ITEM IF APPLICABLE)	COLOR CODE	PRICE/PER
			<b>TOTAL COST: \$</b>	





Midmark Corporation  
60 Vista Drive  
P.O. Box 286  
Versailles, Ohio 45380-0286  
937-526-3662  
Fax 937-526-5542  
midmark.com



Because we care.

Subject to change without notice.  
Refer to [www.Documark.com](http://www.Documark.com) for latest revision.