

**5500-lb Hydraulic Pallet Jack****Model:TMG-PJ55**

- Please read the product manual completely before assembly
- Check against the parts list to make sure all parts are received
- Wear proper safety goggles or other protective gears while in assembly

Missing parts or questions on assembly?

Please call: 1-877-761-2819 or email: [cs@tmgindustrial.com](mailto:cs@tmgindustrial.com)

Do not return the product to dealer, they are not equipped to handle your requests

## **ATTENTION:**

1. The waste packages should be sorted and put into solid dustbins according to the materials and be collected disposal by local special environment protection bureau. To avoid pollution, it's forbidden to throw away the wastes randomly.
2. To avoid leaking during the use of the products, the user should prepare some absorbable materials (scraps of wooden or dry duster cloth) to absorb the leaking oil in time. To avoid second pollution to the environment, the used absorbable materials should be handed in to special departments in terms of local authorities.

Thank you for using our pallet trucks. Your pallet truck is made of high quality steel and is designed for the horizontal lifting and transport of loads on a pallet or standardized containers on a level, fixed base. For your safety and correct operation, please carefully read this instruction before using it.

**NOTE:** All of the information reported herein is based on data available at the moment of printing. We reserves the right to modify our own products at any moment without notice and liability in any sanctions. So, it is suggested to always verify possible updates and changes.

## 1. GENERAL SPECIFICATIONS

Capacity (lb)	5500
Maximum. Fork Height (mm)	195
Minimum. Fork Height (mm)	85
Fork Length (mm)	1220
Width Overall Forks (mm)	685
Individual Fork Width (mm)	160
Load Wheel Diameter (mm)	Ø 80x70(or Ø 74x70) Nylon, Polyurethane
Steering Wheel Diameter (mm)	Ø 200(or Ø 180) Nylon, Polyurethane, Rubber

Materials and specifications are subject to change without notice.

## 2. ATTACHING DRAW-BAR TO PUMP UNIT

If you have purchased a wooden box of pallet truck, some assembly is required. Certainly, you need some tools, a hammer, a pliers, a spanner, etc; and some parts, one axle with hole (105), two elastic pins (106)(**Note one is in the axle (105)**), these parts are putted in a plastic bag, which is putted into the draw-bar.

**NOTE:** The number of draw-bar and pump should be the same.

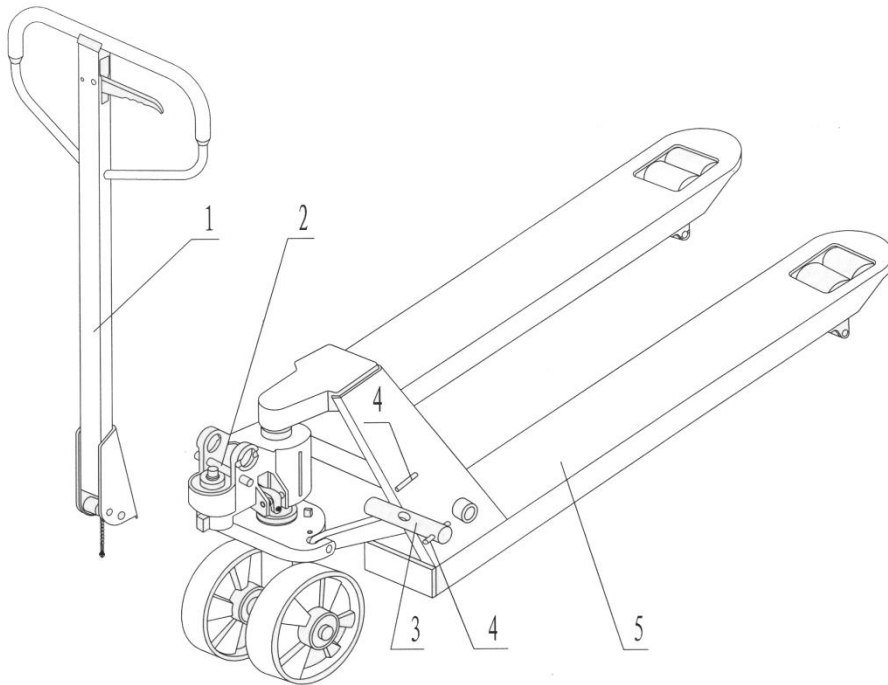


Fig. 1

- 1. Draw-bar 2. Pin 3. Axle with hole 4. Elastic pin 5. Fork frame**

When attaching the handle, you had better squat just behind the pallet truck. Then you:

**2.1** Insert the draw-bar onto the pump piston (303), then use a hammer to insert the axle with hole (105) into the hydraulic pump and draw-bar **from the right to left**. (See fig. 2 ).



Fig. 2

**2.2** Let control handle(117 or 120G) to the '**LOWER**' position, then pass the adjusting nut(104), adjusting bolt(103) and chain(102) through the hole of axle(105) with your hand (See fig. 3).

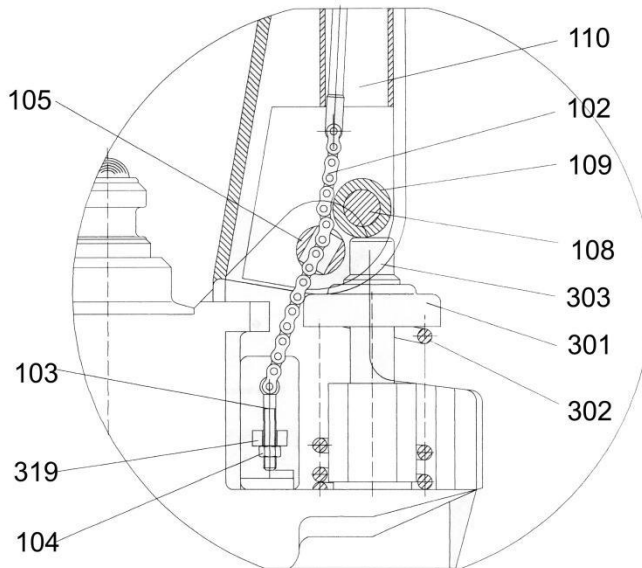


Fig. 3

**2.3** Press the draw-bar (110, 110B or 111G) down, take away the pin(#2) (See Fig. 1).

**2.4** Let the control handle (117 or 120G) on '**RAISE**' position, then raise the lever plate (319) with the pin (#2) and insert the adjusting bolt(103) into the front slot of lever plate (319), note to keep the adjusting nut (104) on the under side of the lever plate.

**2.5** Use a hammer to tap another elastic pin (106) into the axle with hole (105).  
The draw-bar is now assembled to the pump.

### 3. ADJUSTING RELEASE DEVICE

On the draw-bar of this pallet truck, you can find the control handle(117 or 120G) which can be adjusted in three positions :

- |              |  |
|--------------|--|
| <b>Raise</b> | -handle down   |
| <b>Drive</b> | -handle in center position   |
| <b>Lower</b> | -handle up, the lever moves back the drive position when released. |

If however they have been changed, you can adjust according to following step:

- 3.1** If the forks elevate while pumping in the **DRIVE** position, turn the adjusting nut (104) on the adjusting bolt(103) or screw(318) clockwise until pumping action does not raise the forks and the **DRIVE** position functions properly.
- 3.2** If the forks descend while pumping in the **DRIVE** position, turn the nut(104) or screw(318) counter-clockwise until the forks do not lower.
- 3.3** If the forks do not descent when the control handle (117 or 120G) is in the **LOWER** position, turn the nut(104) or screw (318) clockwise until raising the control handle(117 or 120G) lowers the forks. Then check the **DRIVE** position according to item 3.1 and 3.2 to be sure the nut (104) and screw(318) is in the proper position.
- 3.4** If the forks do not elevate while pumping in the **RAISE** position, turn the nut (104) or screw (318) counter-clockwise until the forks elevate while pumping in the **RAISE** position. Then check the **LOWER** and **DRIVE** position according to item 3.1, 3.2 and item 3.3.

## **4. MAINTENANCE**

The pallet truck is largely maintenance-free.

### **4.1 OIL**

Please check the oil level every six months. The oil can be hydraulic oil: ISO VG32, its viscosity should be 30cSt at 40<sup>0</sup> C, total volume is about 0.4lt.

### **4.2 TO BANISH THE AIR**

The air may come into the hydraulic oil because of transportation or pump in upset position. It can cause that the forks do not elevate while pumping in the **RAISE** position. The air can be removed in the following way: let the control handle (117 or 120G) on the **LOWER** position, then move the draw-bar up and down for several times.

### **4.3 DAILY CHECK AND MAINTENANCE**

Daily check of the pallet truck can limit wear as much as possible. Special attention should be paid to the wheels, the axles, as thread, rags, etc. It may block the wheels. The forks should be unloaded and lowered in the lowest position when the job is over.

#### **4.4 LUBRICATION**

All bearings and shafts are provided with long-life grease at the factory. You only need provide with long-life grease at monthly intervals or after each time the truck is cleaned thoroughly to the lubrication points.

### **5. GUIDE TO SAFETY OPERATION**

- 5.1 Operator should read all warning signs and instructions here and on the pallet truck before using this truck.
- 5.2 Do not use on a slopping ground.
- 5.3 Do not operate a pallet truck unless you are familiar with it and have been trained or authorized to do so.
- 5.4 Do not operate a pallet truck unless you have checked its condition. Give special attention to the wheels or rollers, the draw-bar unit, the fork unit, the lever plate, etc. .
- 5.5 To pull the truck, always move the control handle into the drive position. This makes the draw-bar easier to move and depressurizes the pump section of the hydraulics. This preserves the hydraulic seals and the valve components. A long service life can be expected.
- 5.6 Do not take up any people on the pallet truck.
- 5.7 The operator had better take on gloves for labor protecting.
- 5.8 When the goods have been transported, all people should be away from the forks for 600mm.
- 5.9 Do not load goods like fig. 5/B .
- 5.10 Do not load over maximum capacity.
- 5.11 At others special condition or place, the operator should be carefully to operate the pallet truck.

## 6. TROUBLES SHOOTING

NO.	Trouble	Clause	Fixing Methods
1	The forks can not be lifted up the maximum height.	The hydraulic oil is not enough.	Pour in the oil.
2	The forks can not be lifted up.	Without hydraulic oil. The oil has impurities. The nut (104) is too high, keep the pumping valve open. Air come into the hydraulic oil.	Fill in the oil. Change the oil. Adjust the nut(104) or screw (318) (see item 3.4) Banish the air.(see item 4.2)
3	The forks can not be lowered.	The piston rod(328) or pump (322) is deformed resulting from partial loading slanting to one side or over-loading. The fork was kept in the high position for long time with piston rod bared to arise in rusting and jamming of the rod. The adjusting nut (104) or screw (318) is not in correct position.	Replace the piston rod (328) or pump (322).  Keeping the fork in the lowest position if not using, and pay more attention to lubricate the rod.  Adjust the nut (104) or screw (318) (see item 3.3)
4	Leaks	Sealing parts worn or damaged. Some part cracked or worn into small.	Replace with the new one. Replace with the new one.
5	The forks lowered without the release valve working.	The impurities in the oil cause the release valve to be unable to close tight. Some parts of hydraulic system is cracked or bored. Air come into the oil. Sealing parts worn or damaged. The adjusting nut (104) or screw (318) is not in the correct position.	Replace with new oil.  Inspect and replace the waste parts. Banish the air. (See item 4.2) Replace with the new one. Adjusting the nut (104) or screw (318). (See item 3.2)

**NOTE: DO NOT ATTEMPT TO REPAIR THE PALLET TRUCK UNLESS YOU ARE TRAINED AND AUTHORIZED TO DO SO.**



Fig. 4



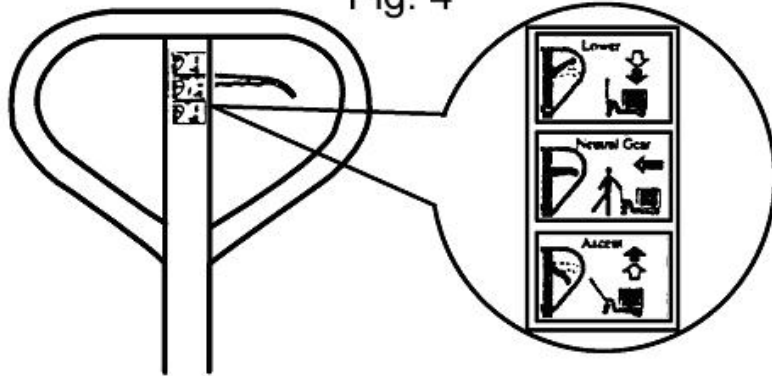



Fig. 5

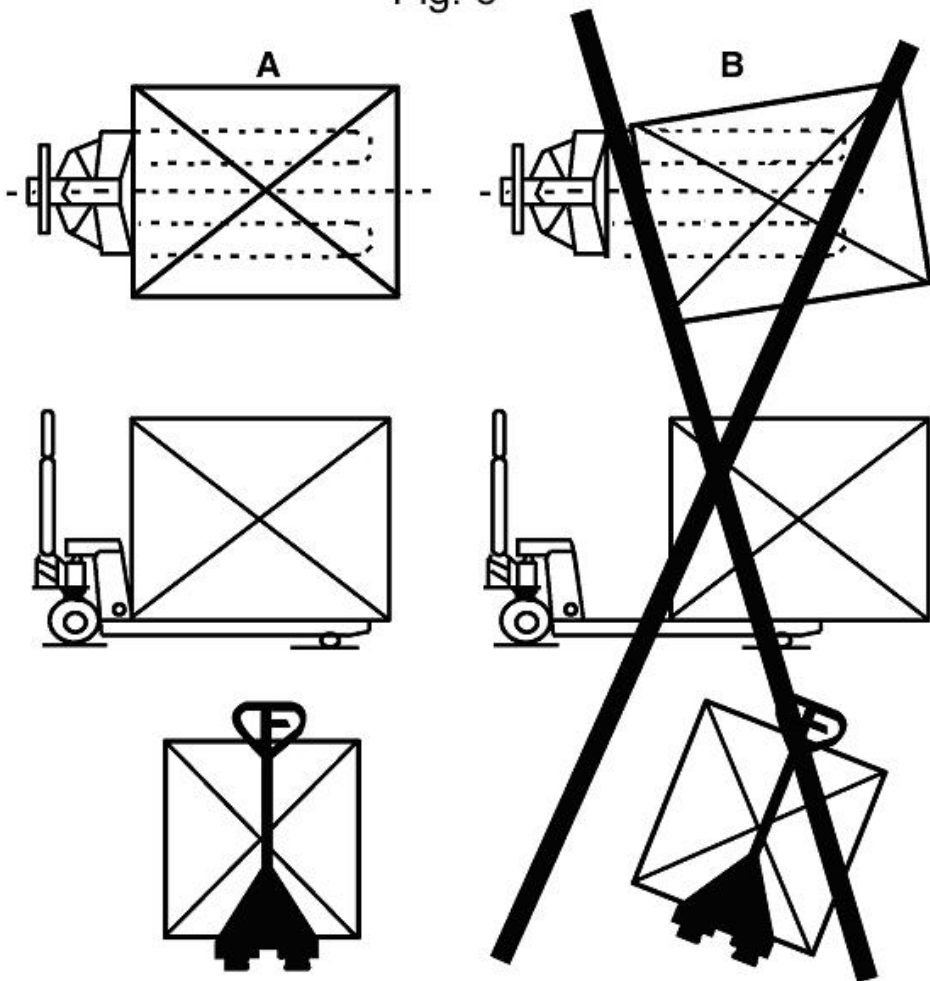

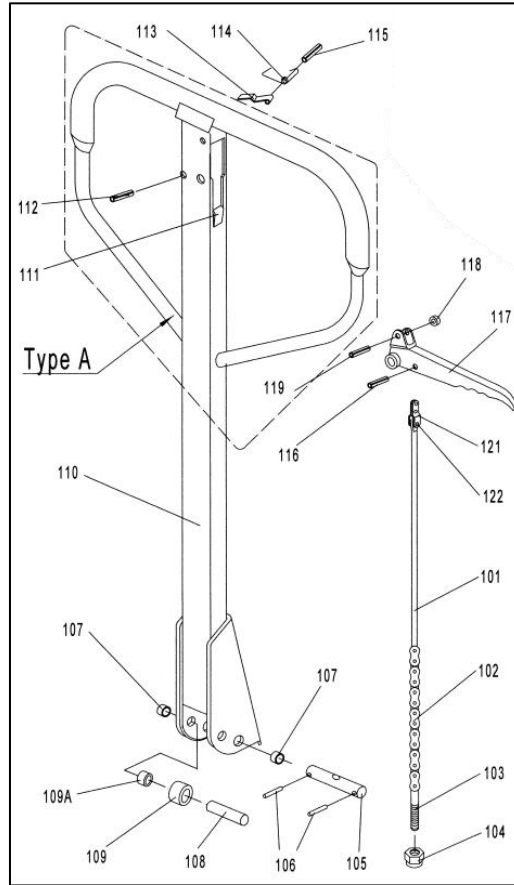

**LIST of DRAW-BAR**


No.	Description	Qty.	No.	Description	Qty.
101	Release Rod	1	111	Stop Rubber	1
102	Chain	1	112	Elastic Pin	1
103	Adjusting Bolt	1	113	Blade Spring	1
104	Adjusting Nut	1	114	Spring	1
105	Axle with Hole	1	115	Elastic Pin	1
106	Elastic Pin	2	116	Elastic Pin	1
107	Bushing	2	117	Control Handle	1
108	Roller Pin	1	118	Roller	1
109	Pressure Roller	1	119	Elastic Pin	1
109A	Bushing	1	120		
110	Draw-bar(For Type A)	1	121	Pull Board	1
110B	Draw-bar(For Type B)	1	122	Pin	1

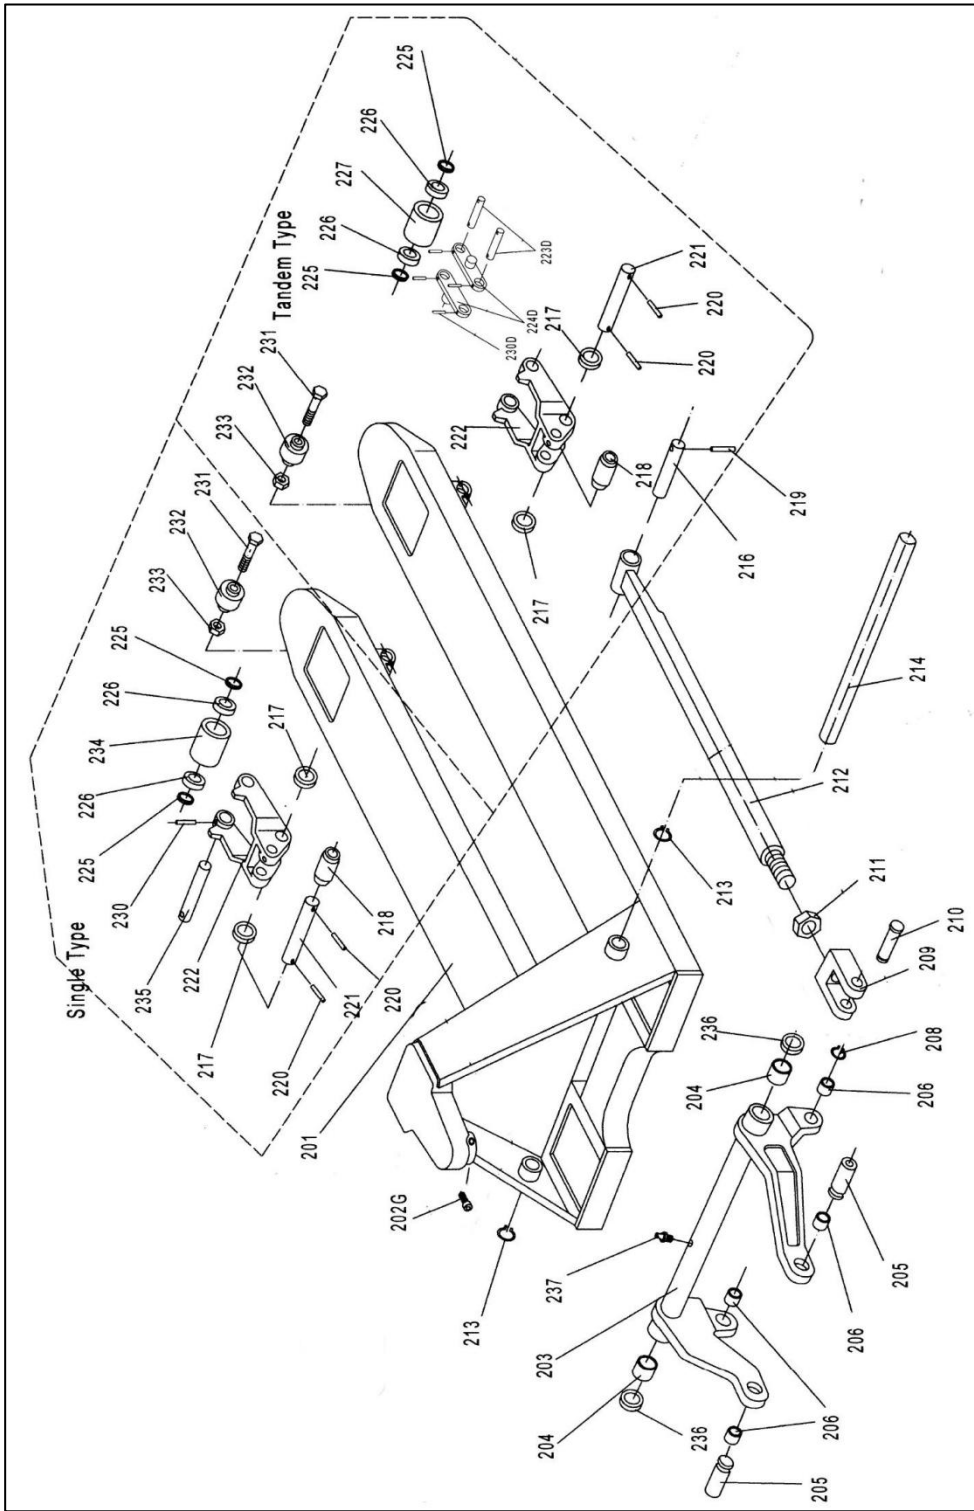

**LIST OF FORK FRAME**

<b>No.</b>	<b>Description</b>	<b>Qty.</b>	<b>No.</b>	<b>Description</b>	<b>Qty.</b>
201	Fork Frame	1	219	Elastic Pin	2
202G	Bolt	1	220	Elastic Pin	4
203	Rock - Arm	1	221	Shaft	2
204	Bushing	2	222	Frame of Roller	2
205	Shaft	2	223D	Shaft for Roller	4
206	Bushing	2	224D	Linking Plate	4
207	Bushing	2	225	Washer	8
208	Retaining Ring	2	226	Bearing	8
209	Joint	2	227	Loading Roller	4
210	Pin	2	230D	Elastic Pin(For Type D)	8 or 2
211	Nut	2	231	Bolt	2
212	Pushing Rod	2	232	Enter Roller	2
213	Retaining Ring	2	233	Locking Nut	2
214	Shaft	1	234	Loading Roller	2
215	Bushing	4	235	Shaft for Roller	2
216	Shaft	2	236	Washer	2
217	Intermediate Roller	4	237	Grease Cup	1
218	Extending Roller	2			

# Hydraulic Pump

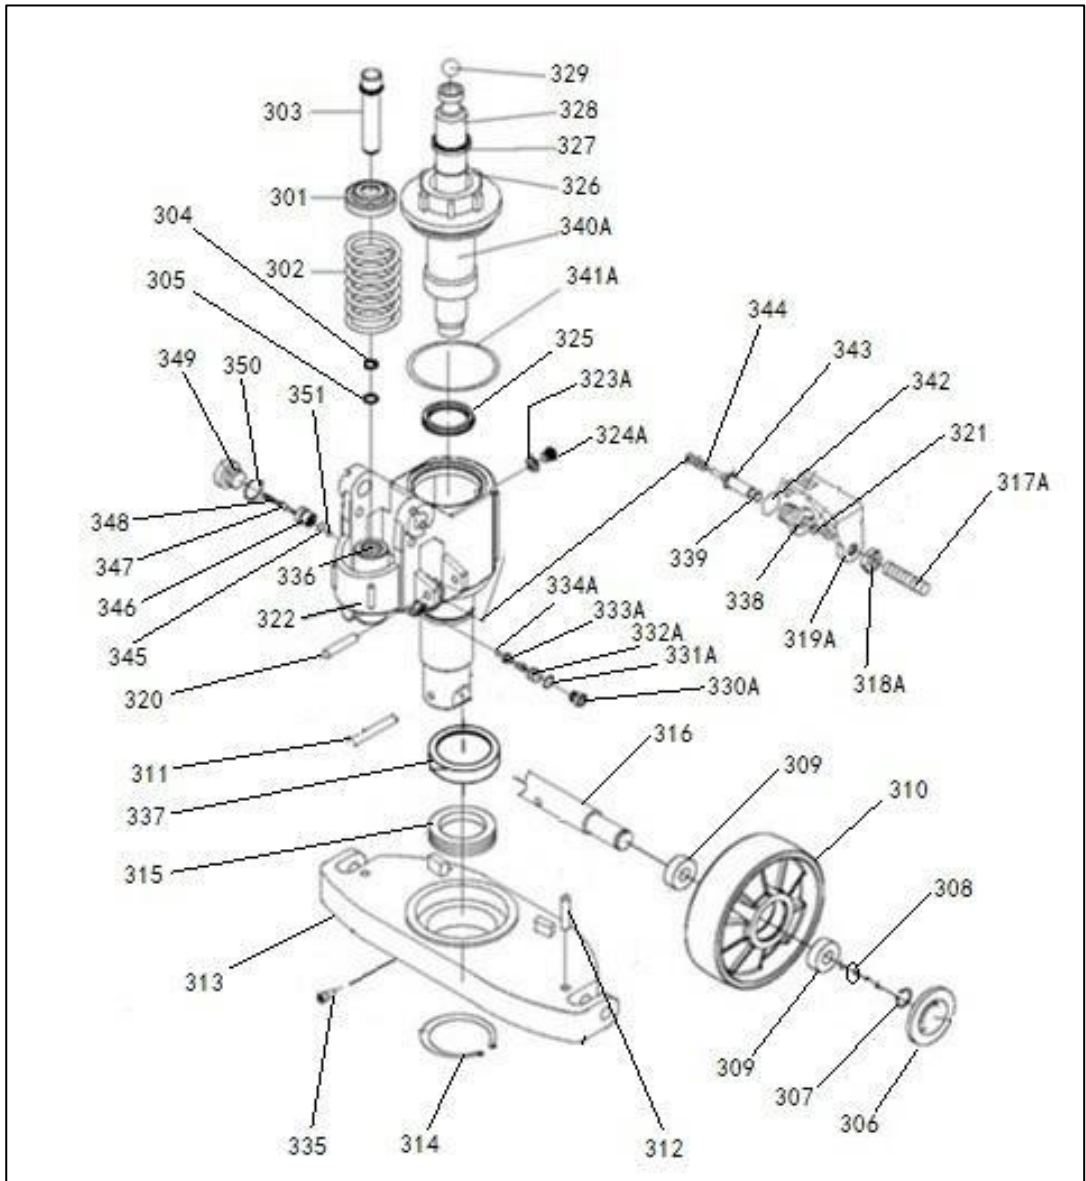

## Hydraulic Pump

No.	Description	Qty.	No.	Description	Qty.
301	Spring Cap	1	327	Dust Ring	1
302	Spring	1	328	Piston Rod	1
303	Pump Piston	1	329	Steel Ball	1
304	Dust Ring	1	330A	Screw Plug	1
305	Seal	1	331A	O - Ring	1
306	Dust Cover	2	332A	Bolt	1
307	Locking Ring	2	333A	Spring	1
308	Washer	2	334A	Spindle of Safety Valve	1
309	Bearing	4	335	Grease Cup	1
310	Loading Wheel	2	336	Cylinder	1
311	Elastic Pin	1	337	Cover of Bearing	1
312	Elastic Pin	2	338	Strike pin set	1
313	Thrust Plate	1	339	Washer	1
314	Retaining Ring	1	340A	Cover with Screw	1
315	Bearing	1	341A	O -ring	1
316	Shaft of loading Wheel	1	342	O- ring	1
317A	Nut	1	343	Strike pin	1
318A	Screw	1	344	Spring	1
319A	Lever Plate	1	345	O RING	1
320	Elastic Pin	1	346	VALVE	1
321A	O-Ring	1	347	VALVE PIN	1
322	Pump Body	1	348	VALVE SPRING	1
323A	Seal Washer	1	349	SEAL SCREW	1
324A	Screw Plug	1	350	O-ring	1
325	Seal	1	351	STEEL BALL	1
326	O – Ring	1			