
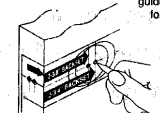


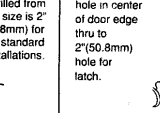
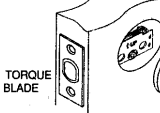
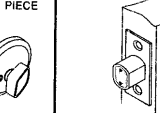

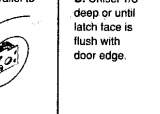
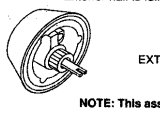
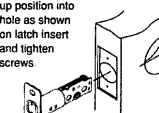
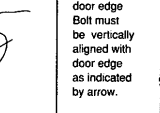
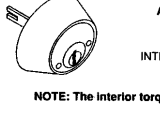
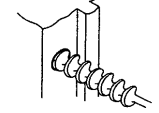
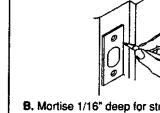
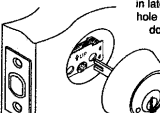
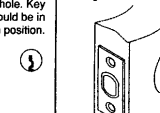
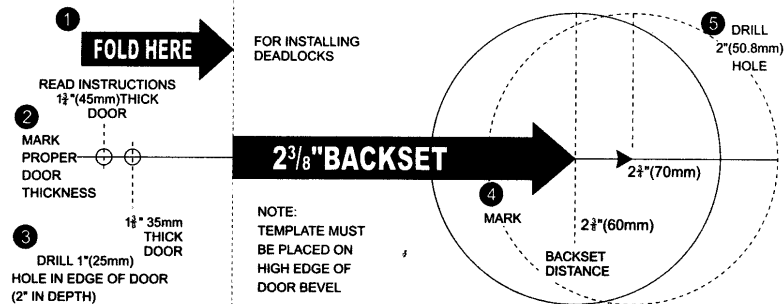


INSTRUCTIONS FOR INSTALLATION OF SINGLE AND DOUBLE CYLINDER DEADLOCKS

FOR USE ON DOORS 1-3/8" TO 1-3/4" (35mm-45mm)

<p style="text-align: center;">1. MARK DOOR</p> <p>A. Fold and apply template to high edge of door bevel and mark center of door edge as indicated on template at the desired height from the floor.</p>  <p>B. Mark center hole on door face through guide on template for either 2-3/8" (60mm) or 2-3/4" (70mm) backset.</p> 	<p style="text-align: center;">5. INSTALL EXTERIOR MECHANISM</p> <p>A. Press cylinder side flush against door making certain the torque blade is properly positioned in latch crank.</p> <p>B. Tapped holes in mounting plate of exterior cylinder should be lined up with latch holes. Key hole should be in down position.</p> <p>TORQUE BLADE SHOULD BE HORIZONTALLY INSERTED INTO LATCH CRANK</p> 	
<p style="text-align: center;">2. DRILL HOLES</p> <p>A. Drill thru door face as marked for lockset. It is recommended that holes be drilled from both sides to prevent splitting. Hole size is 2" (50.8mm) for standard installations.</p>  <p>B. Drill 1"(25mm) hole in center of door edge thru to 2"(50.8mm) hole for latch.</p> 	<p style="text-align: center;">6. INSTALL INTERIOR MECHANISM</p> <p>A. Slide thumb bar and interior rosette onto torque blade.</p>  <p>B. Insert machine screws through holes engaging holes in cylinder and tighten.</p> 	
<p style="text-align: center;">3. INSTALL LATCH</p> <p>A. Insert latch in hole keeping it parallel to face of door. Mark outline and remove latch.</p>  <p>B. Chisel 1/8" deep or until latch face is flush with door edge.</p> 	<p style="text-align: center;">INSTRUCTIONS FOR INSTALLING DOUBLE CYLINDER DEADLOCKS</p> <p>Exterior half is fully assembled with exterior torque blade</p>  <p>EXTERIOR TORQUE BLADE</p> <p>NOTE: This assembly is placed through latch first.</p>	
<p>C. Install deadbolt latch in up position into hole as shown on latch insert and tighten screws.</p>  <p>D. For round face deadbolt press flush to door edge. Bolt must be vertically aligned with door edge as indicated by arrow.</p> 	<p>A. Install interior cylinder</p>  <p>INTERIOR TORQUE BLADE</p> <p>NOTE: The interior torque blade is inserted into the exterior blade.</p>	
<p style="text-align: center;">4. INSTALL STRIKE</p> <p>A. Bore 1" hole 1" minimum deep for deadbolt.</p>  <p>B. Mortise 1/16" deep for strike locating from 1" hole in door insert and tighten screws.</p> 	<p>B. Press interior assembly flush against door making certain the torque blade is properly positioned in latch hole. Key hole should be in down position.</p>  <p>C. Insert (2) two screws through countersunk holes engaging holes in exterior cylinder and tighten.</p> 	



FOR OPTIONAL ADJUSTABLE LATCH - Backset is set at the factory at 2-3/8" (60mm). To adjust latch to 2-3/4" (70mm) position, hold rear of latch and rotate latch case 1/2 turn pulling front of latch forwarder until pin snaps into the 2-3/4" (70mm) position. To return the latch to the 2-3/8" (60mm) position repeat above, but push back with thumb on the latch bolt and push latch bolt and latch case in simultaneously.

