

# VICTROLA™



MODEL: VC-100

**BLUETOOTH CLOCK RADIO**



The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**WARNING:** To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



15.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

16.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.


- 17. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 18. **WARNING:**  
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
- 19. The use of the equipment in moderate climate.
- 20. The ventilation should not be impeded by covering the ventilation openings with items such as, newspapers, tablecloths, curtains, etc.
- 21. No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 22. The symbol with  $\sim$  indicates AC voltage.
- 23. The symbol with  $\equiv$  indicates DC voltage.
- 24. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 25. Attention should be drawn to the environmental aspects of battery disposal.
- 26. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

ACCESSORIES INCLUDED:

- INSTRUCTION MANUAL
- WARRANTY (BACK OF MANUAL)


# PRODUCT OVERVIEW

## Front View

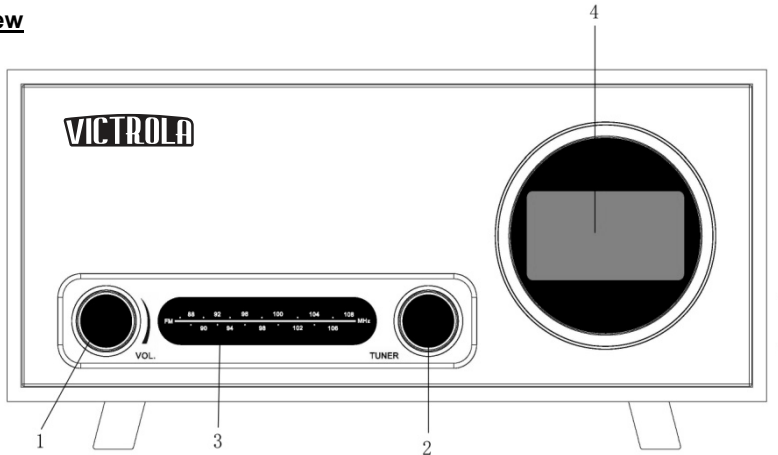


1. **VOLUME:** When unit is ON, rotate to adjust the volume.
2. **RADIO TUNER KNOB:** In FM mode, turn knob to tune to desired station.
3. **ANALOG RADIO**
4. **LED CLOCK DISPLAY**

## Top View

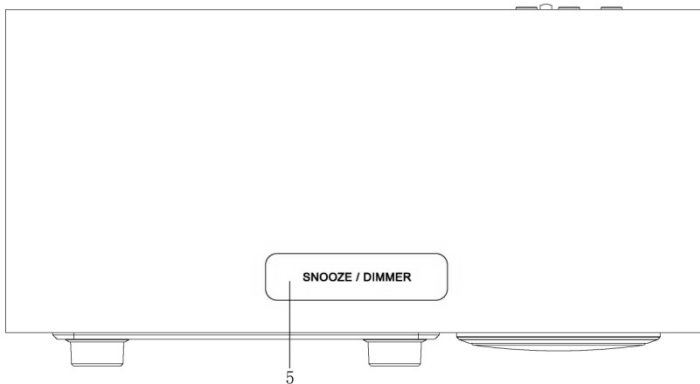

5. **SNOOZE/DIMMER:**  
SNOOZE: When the alarm sounds, press to snooze alarm.  
DIMMER: Touch lightly to adjust the brightness of the LED clock display.

## Rear View

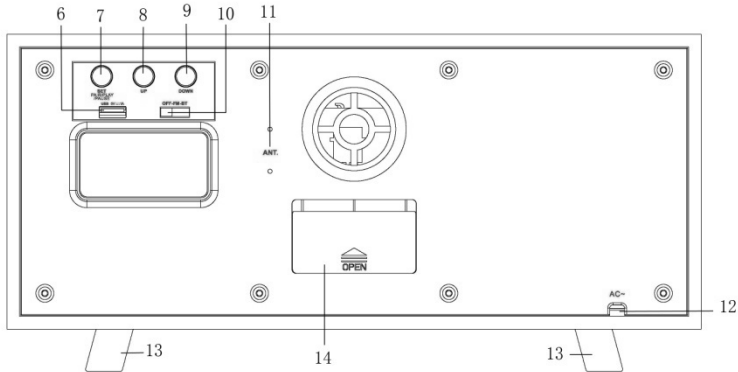


- 6. USB CHARGING PORT:** In OFF or Bluetooth mode, it will charge an external device.
- 7. SET/PAIR/PLAY/PAUSE:** In OFF mode, press and hold to set the time and alarm time. Once the Bluetooth connection is successful, press and hold to disconnect from your external device. Press again to connect the device which has been connected. When listening to music, press to temporarily pause the track, press again to resume.
- 8&9.UP & DOWN:** In Bluetooth mode, press to skip to the previous/next track.
- 10. OFF-FM-BT:** Slide to select function (OFF, FM Radio, Bluetooth)
- 11. FM wire antenna**  
While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.
- 12. AC Power Cord:** Connect the AC plug into a wall outlet.  
*It is strongly recommended that this product be operated only from the type of power source indicated on the marking label.*
- 13. FEET**
- 14. BATTERY COMPARTMENT**

## SETUP / BASIC OPERATION

### BATTERY OPERATION

1. Remove the battery compartment door at the back of unit.



2. Insert two (2) AAA batteries (not included) into the battery compartment, making sure that the batteries are installed in the designated numerical order and that the proper polarities (+ and -) are maintained.


**Note:** The batteries are used for memory backup function only.

### Battery Precautions

Be sure to insert the batteries with correct positive "+" and negative "-" orientation. ALWAYS use batteries of the same type. Never mix different types of batteries together. When using rechargeable batteries, refer to the precautions on their labels. Do not heat or disassemble batteries, and NEVER dispose of old batteries by throwing them in a fire. Do not dispose device into standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate disposal laws and regulations. Please refer to local regulations for proper battery disposal.

### **Setup**

1. Remove any packaging materials from the unit.
2. Connect the AC power cord to a wall outlet.

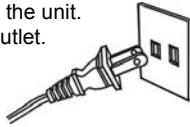

### **Note:**

- It is strongly recommended that this product should be operated only from the type of power source indicated on the marking label.

- To prevent interference, avoid bundling audio signal cables together with the AC power cord.

### **Basic Operation**

1. Select the source by sliding the OFF-FM-BT button.
2. Rotate the VOLUME knob to adjust to the desired sound level.

### **CONDENSATION WARNING:**

When the unit is moved from a cold or warm place, or is used following a sudden temperature change, there is the danger that water vapor in the air may condense on the unit, preventing proper operation. In such cases, leave the unit for 1-2 hours after plugging it into an AC outlet to allow it to stabilize at the temperature of its surroundings.




## **LISTENING TO FM RADIO**

1. Slide the **OFF-FM-BT** button to switch to FM function, "FM" and the time will show on the display.
2. Tune to the desired station by using the Radio Tuner Knob.
3. Rotate the VOLUME knob to adjust your desired volume.

## **LISTENING TO AN EXTERNAL AUDIO DEVICE (BT MODE)**

In BT (Bluetooth) mode, this unit can play music from an external device with the Bluetooth feature.

### **GETTING CONNECTED USING BLUETOOTH**

1. Slide switch to the BT function. The display will show "Blue" with the  icon.
2. The blue LED indicator and the  icon will flash while searching for a device.
3. On your external device, turn the Bluetooth function ON.  
**NOTE:** The effective distance between your external device and this apparatus is 10 meters (33ft).
4. Wait a moment for "VC-100" to appear on the devices list. Press "VC-100" to connect to the unit.  
If asked for a password. Use "0000", then press OK on your external device.
5. Once the Bluetooth connection is successful, the  icon will remain lit.
6. Press the **UP** or **DOWN** button to skip to the previous/next track OR control it from your device.
7. Press **SET/PAIR/PLAY/PAUSE** button to temporarily pause the track, press again to resume.
8. If you want to reconnect your external device after disconnecting, press the **SET/PAIR/PLAY/PAUSE** button to reconnect.

**NOTE:** The PAIR Button will allow you to disconnect from your external device while remaining in BT mode. Press and hold the PAIR button to disconnect and search for a new device. Follow the pairing directions above to connect to the new device.

## SETTING THE TIME

1. Slide the **OFF-FM-BT** button on the OFF mode, which is the clock mode. The time will appear on the display automatically.  
**Note:** *The batteries are used for the memory backup function only.*
2. Press and hold the **SET/PAIR/PLAY/PAUSE** button to adjust the time.
3. The digit of Hour will flash, press the UP or DOWN button to select the hour.
4. Press the **SET/PAIR/PLAY/PAUSE** button to confirm, the minutes will flash.
5. Press the UP or DOWN button to select the minute, and then press the **SET/PAIR** button to confirm.  
**Note:** *It will auto confirm after flashing approximately 5 times. Once the time stops flashing, repeat Steps 2 through 5 to reset the time if necessary.*

## SETTING THE ALARM

1. Press the **SET/PAIR/PLAY/PAUSE** button repeatedly until the “alarm” icon appears on the display.
2. Press the UP or DOWN button to select the hour, then press the **SET/PAIR/PLAY/PAUSE** button to confirm.
3. The minutes will flash on the display, press the UP or DOWN button to select the minutes.
4. Press the **SET/PAIR/PLAY/PAUSE** button to confirm. The display will show *ON* or *OFF*.
5. Press the UP or DOWN button to turn the alarm on or off.
6. Press the **SET/PAIR/PLAY/PAUSE** button to confirm the alarm setting.
7. When the alarm is turned on, the “alarm” icon will flash briefly. Press the **SET/PAIR/PLAY/PAUSE** button to turn off the alarm. The alarm icon will remain stay lit. The alarm is now set to chime daily at the same time.  
**Note:** *It will auto confirm after flashing approximately 5 times. Once the time stops flashing, repeat Steps 2 through 5 to reset the time, if necessary.*

## ALARM OFF / SNOOZE FEATURE

1. When the alarm sounds, press the **SET/PAIR/PLAY/PAUSE** button to silence the alarm.
2. To snooze the alarm, touch the **SNOOZE/DIMMER** button. The alarm will snooze for approximately nine (9) minutes. To cancel the snooze feature and alarm sound, press the **SET/PAIR/PLAY/PAUSE** button. The alarm icon will stop flashing.

## DIMMER FEATURE

Lightly touch the **SNOOZE/DIMMER** button to cycle through the three (3) brightness settings.

## CHARGING AN EXTERNAL DEVICE

1. Connect the AC plug to a wall outlet.
2. Plug a USB cable (not included) into the USB port of the speaker. Plug the other end of the USB cable into a Smartphone or an external device.
3. The unit will charge the device automatically.

**Note:** *Charging function only works in Bluetooth mode or when the unit is OFF.*

## TROUBLESHOOTING GUIDE

	Symptom	Possible Cause	Solution
<b>GENERAL</b>	• Unit will not power on.	• Unit is unplugged.	• Connect the unit to the AC power supply.
	• No sound output from speakers.	• The volume level is set too low. • The input selector does not match the playback source.	• Adjust the volume. • Select the correct input source.
	• Noise/Distortion in sound output.	• The unit is too close to a TV set or another interfering device.	• Turn off the TV or other appliance, and relocate the unit.
	• Unit fails to respond.	• It might result from external factors such as ESD (Electro-static discharge).	• Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
<b>FM RADIO</b>	• Cannot listen to any station, or signal appears weak.	• The station is not tuned-in properly. • A TV set is being used nearby and is interfering with the radio reception.	• Properly tune-in the desired station. • Turn-off the interfering TV set.
	• The sound is distorted.	• The antenna is not oriented properly.	• Re-orient the antenna until reception improves.
<b>BLUETOOTH</b>	• No sound	• The unit is not switched to Bluetooth mode. • Your device's and/or the unit's volume is not turn up. • Your device is too far from the unit or there're some obstacle between your device and the unit.	• Ensure the unit is switched to BT mode. • Move your Bluetooth device closer to unit. • Turn up the volume on your portable device and/or the unit. • Turn OFF your Bluetooth device and unit. Then power them both back ON.
	• Sound has a lot of static	• Your device is too far away.	• Bring your device closer to the turntable.
	• Unable to pair with a Bluetooth device	• Your device doesn't have Bluetooth connectivity. • The Bluetooth pairing is not successful.	• Confirm that your device is Bluetooth compatible. • Re-pair the unit and device again.



# SPECIFICATIONS

## GENERAL

Power Requirements.....	AC 120 V~ 60 Hz
Backup Battery.....	(2) AAA Batteries
Power Consumption.....	11W
Dimensions (W x H x D).....	13 in x 5.51 in x 5.98 in (approx.) 330 x 140 x 152mm (approx.)
Weight.....	4.17 lbs (approx.) 1.89 kg. (approx.)

## AMPLIFIER

Output Power.....	5W
Frequency Response.....	60 to 20,000 Hz

## SPEAKER SYSTEM

Type.....	1-way
Impedance.....	6 ohms
Input Power.....	Max 10W

## FM RADIO

Range.....	.88 to 108 MHz
------------	----------------

## BLUETOOTH

Bluetooth Version.....	Bluetooth V2.1+EDR
Bluetooth Profiles.....	A2DP, AVRCP
Bluetooth Frequency range.....	2.402GHz-2.480GHz
Operating Distance.....	33 feet / 10 meters

## USB

USB port for charging.....	5V  1A
----------------------------	---

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter. To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

## IC STATEMENT

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter. L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body. L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

The device should be installed and operated with a minimum distance of 20cm between the radiator

## CALIFORNIA PROP 65 WARNING



WARNING: This product can expose you to chemicals including lead which is known to the State of California to cause cancer. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

For further assistance with your product, call Innovative Technology at  
TOLL FREE# 1-877-ITECH-97 (1-877-483-2497).

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Made in China.

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

**To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at [www.victrola.com](http://www.victrola.com) to request an RMA (Return Material Authorization) number to return products for service or replacement.** Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of there turning item and our full inspection (IT) may issue a replacement to customer for the same item or one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number. All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address. Please include your check or money order in the amount of

- **USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99 (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics LLC.(for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information.

Send all inquiries or RMA request via our website [www.victrola.com/pages/technical-support](http://www.victrola.com/pages/technical-support).

Innovative Technology Electronics LLC.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

**Website for support: [www.victrola.com/pages/technical-support](http://www.victrola.com/pages/technical-support)**

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.