# 



# 1. How to read the time

- Blade has 2 time display modes [TURNING] & [FLASHING]
- . The default setting is [TURNING]
- To change the time display mode, see section 4 "How to set the time & display modes".
- . Press button A to show the time.

# 1. Turning Mode

The display will light up an blade which rotates around the face 3 times.

Each time it rotates it leaves 1 line lit, indicating in turn:

Thour I group of 10 mins I (single mins)

This is known as the 12-5-9 method of time telling.

#### Examples:

[12] [5] [9] = 12:59 [6] [3] [5] = 6:35 [10] [0] [8] = 10:08

In the image below the line at 3 o'clock is lit, indicating 3



## Turning Mode - Full Example

#### Blade rotates



#### First Spin

After pressing button A the blade rotates, leaving the 4 o'clock line lit.

4 o'clock

### Blade rotates



# Second Spin

On the second rotation the blade leaves the 2 o'clock line lit, indicating 20 minutes.

<sup>►</sup>20 minutes

#### Blade rotates



### Third Spin

On the third rotation the blade leaves the 7 o'clock line lit, indicating 7 minutes. It is 4:27 exactly

7 minutes


#### Note:

If the blade rotates without leaving any line lit, it indicates ZERO

# II. Flashing Mode

The display will light up Hours & Minutes at the same time similar to a regular clock.

One blade will light up to show the hour, one blade will flash to show the minutes. Additional dots may appear to indicate the exact minute.

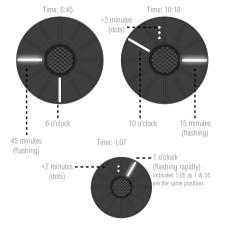


# 3. How to check the date & alarm

- Press button A to change between [TIME] > [DATE] > [ALARM]
- . An icon will show to indicate date or alarm.
- The date or alarm will be displayed in your chosen display mode [TURNING] or [FLASHING]

# Date example [Turning Mode]



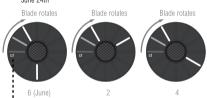

Date icon

\*You may choose to show [Month > Day] or [Day > Month] See section 5 "How to set the date"


### Alarm example [Flashing Mode]

#### 8:33 PM (Alarm ON)



# 4. How to set the time & display modes

- From the time display, press & HOLD button B to begin setting the time.
- · You will be asked to set the following options in sequence.

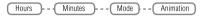

\*Setting mode will exit after 7 seconds of inactivity

# 1. Hours

- . The display will flash the current hour.
- . Press button A to change the hour
- · Press button B to accept.

Hour: 11 AM Hour: 7 Pl






## II. Minutes (group of 10)

In the 12-5-9 time telling method, the "group of 10 mins" are [00, 10, 20, 30, 40, 50]. So in this stage, if the exact minute is 34, you would set 30.

- . The display will flash the current group of 10 minutes.
- · Press button A to change the minutes
- · Press button B to accept.

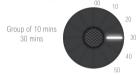

# III. Minutes (single)

In the 12-5-9 time telling method, the "single mins" are [0-9]. So in this stage, if the exact minute is 34, you would set 4.

- . The display will flash the current single minutes.
- · Press button A to change the minutes
- Press button B to accept.

  Single minutes
  4 mins


  9

  8

# IV. Display Mode

Blade has 2 display modes [TURNING] & [FLASHING] See section 1 "How to read the time" for an explaination of each mode.


- . The display will flash the current display mode.
- . Press button A to change the mode
- · Press button B to accept.

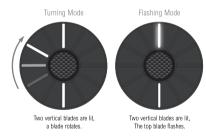

# V. Animation

Blade has an animation mode which causes the watch to animate the display every 15 mins between 6pm & midnight. You may set the animation mode ON or OFF.

- . The display will flash the current animation setting.
- . Press button A to change the setting
- . Press button B to accept & finish.

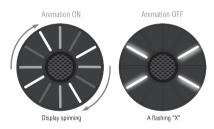

# 5. How to set the date

- . Press button A twice to show the date
- . Press & HOLD button B to begin setting the date.
- The 

  icon will be lit. (date)

\*Setting mode will exit after 7 seconds of inactivity

# I. Month

- The display will flash the current month (1-12).
- . Press button A to change the month
- · Press button B to accept.

# (II. Day (groups of 10)

In the 12-5-9 date telling method, the "group of 10 days" are  $[00,\,10,\,20,\,30]$ . So in this stage, if the exact day is 24, you would set 20.

- The display will flash the current "group of 10" days (0-30).
- . Press button A to change the "group of 10" days
- · Press button B to accept.



# III. Day (single days)

In the 12-5-9 date telling method, the single days are [0-9]. So in this stage, if the exact day is 24, you would set 4.

- The display will flash the current single days (0-9).
- · Press button A to change the "group of 10" days
- Press button B to accept.



Single days 4 days

# IV. Date format

You may set the date to display [Month > Day] or [Day > Month]

- . The display will flash the current date format setting.
- · Press button A to change the setting
- . Press button B to accept & finish.



# 6. How to set the alarm

- · Press button A three times to show the alarm.
- . Press & HOLD button B to begin setting the alarm.
- The = icon will be lit. (alarm)

\*Setting mode will exit after 7 seconds of inactivity

# I. Alarm buzzer

- The | icon will be flashing.
- Press button A to turn the alarm buzzer ON or OFF
- · Press button B to accept.



# II. Alarm hours

- . The display will flash the current alarm hour.
- . Press button A to change the alarm hour
- · Press button B to accept.



# III. Alarm minutes (groups of 10)

In the 12-5-9 time telling method, the "group of 10 mins" are  $[00,\,10,\,20,\,30,\,40,\,50].$  So in this stage, if the exact minute is 09, you would set 0.

- . The display will flash the current group of 10 minutes.
- · Press button A to change the minutes.
- · Press button B to accept.



# IV. Alarm minutes (single minutes)

In the 12-5-9 time telling method, the "single mins" are [0-9]. So in this stage, if the exact minute is 09, you would set 9.

- · The display will flash the current single minutes.
- · Press button A to change the minutes
- . Press button B to accept & finish.



# 7. Charging the watch

- The watch battery can be recharged by connecting the USB charging cable provided to the watch USB port and the other end to your computer's USB port.
  - . To open the watch USB port, use the screw driver included.



- · When charging, the charging light will animate.
- When the charging light stops animating, the watch is 90% charged.
- It is advised that you continue to charge the watch for the full 3.5 hours to ensure the battery is 100% charged.

## Included in the box

- Watch
- · USB cable
- · Screw driver
- Spare USB cap
- Watch manual



# 8. User information

## 1. Battery

- Blade uses a PL301517 rechargable watch battery.
- . The battery should last about 1 month between charges.
- The battery lifetime is expected to be 300 charges.
- Only use the cable provided with the watch for recharging, as it is designed specifically for this watch.

# II. Warranty

 This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

## III. Caution

 This watch has limited resistance to water. Please do not use the watch in the shower, for swimming or for other water related activities.

# **SPECIFICATIONS**

Case Materials	Carbon Fiber / Alloy
Strap Materials	Leather
Case Dimensions	42mm x 49mm x 11mm
Fi-1-1-	0 Fib

Carbon Fiber 210mm (approx.)

Finish Maximum Fit Wrist Size Weight 49a

Display **LED Digital Tube** PL301517 Rechargable Battery



Change the way you think about time