



RONDA RONDA AG


CH-4415 Lausen/Switzerland


www.ronda-startech.com

Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW) Accuracy: +20 / -10 seconds per month In case your watch needs to be repaired or to raise claims

under a guarantee, please contact the point of sales

Cal. 5030.D

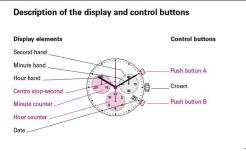

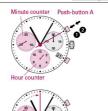


Push-button B

Chronograph: Basic function (Start / Stop / Reset)

Example:

- Start: Press push-button A.
- Stop: to stop the timing, press push-button A once more and read the three chronograph hands: 1h/20min/10 sec.
- Zero positioning:
 Press push-button B.
 (The three chronograph hands will be reset to their zero positions).

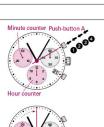

10 to


Push-button B

Chronograph: Accumulated timing

Example: 1 Start: (start timing)

- 2 Stop: (e.g. 15 min 5 sec following 1)
- Restart: (timing is resumed) 4 Stop: (e.g. 13 min 5 sec following 3)
 - = 28 min 10 sec

rease note:
Following ©, the accumulation of the timing can be continued by pressing push button A
(Restart / Stop, Restart / Stop, ...)

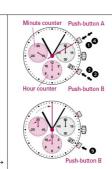

Chronograph: Intermediate or interval timing

- Start: (start timing)
 Display interval:
 e.g. 10 minutes 10 seconds (timing)

- e.g. 10 minutes 10 seconds (timing continues in the background)


 Making up the measured time: (the 3 chronograph hands are quickly advanced to the ongoing measured time).

 Stop: (Final time is displayed)

 Reset:
- Reset: The 3 chronograph hands are returned to their zero position



*lease note: Following **Sturther intervals or intermediates can be displayed by pressing push-button **B (display interval / make up measured time, ...)

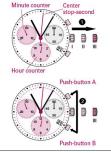

Adjusting the chronograph hands to zero position


Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position **III** (all 3 chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).



- Adjusting the centre stop second Single step A 1 x short Continuous A long Adjusting the next hand B Adjusting the hour counter hand (position 6h)
- Single step A 1 x short Continuous A long Adjusting the next hand B . Adjusting the minute counter hand (position 9h)
- Single step A 1 x short
 Continuous A long 3 Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).

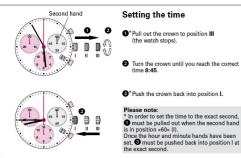



Setting the date (quick mode)

- Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until the correct date 1 appears.
- Push the crown back into position I.



Please note: During the date changing phase between 9 PM and 12 PM; the date must be set to the date of the following day.

0

Setting the date/time following a battery change

- Turn the crown until yesterday's date appears



- - Pull out the crown to position III (the watch stops).
 - Turn the crown until the correct date

 appears.
- *Continue to turn the crown until the correct time 8:30 PM appears. 6 Push the crown back into position I.
- Please note:

 * To set your watch to the exact second, please refer to the chapter entitled «setting the time».

 ** Please observe the AM/PM clock rhythm.



Example: - Date / time on the watch: 17 / 1:25 AM - Present date / time: 4 / 8:30 PM

- Pull out the crown to position II (the watch continues to run).