SwiftyAIR MUDGUARDS

WWW.SWIFTYSCOOTERS.COM

Please read these instructions carefully. If you have any queries relating to the safe assembly of your scooter mudguards do not hesitate to contact us.

SwiftyHQ tel: +44 (0)161 848 8695
Email: support@swiftyscooters.com

TOOLS NEEDED FOR ASSEMBLY

You will need a standard crosshead screwdriver. An 8mm spanner (for the nuts) and a 3mm Allen key (for the hex bolts) is provided. You will also need a 15mm spanner for the wheel nuts, the wheel tool that comes with your scooter is ideal.

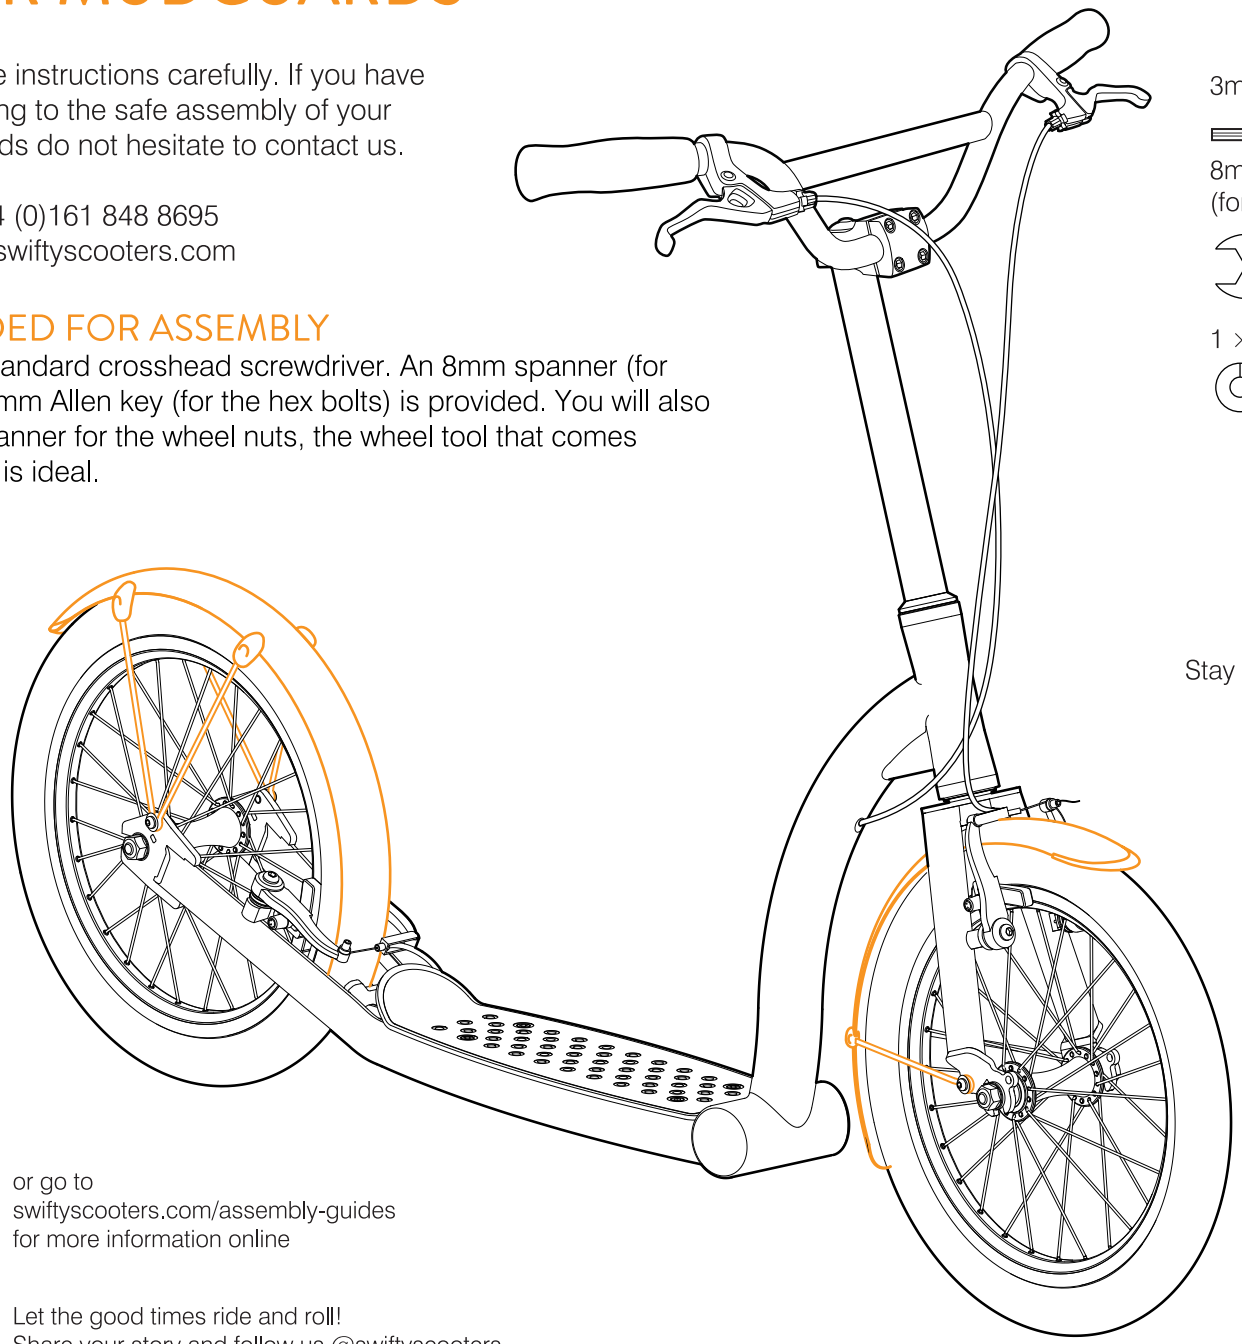

CONTENTS CHECK LIST

- 3mm Allen Key
- 8mm Spanner (for M5 Nuts)
- 1 × Split Washer
- 2 × 10mm Hex Bolts
- 2 × 12mm Hex Bolts
- 2 × 16mm Hex Bolts
- 6 × Flat Washers
- 2 × M5 Nuts
- 1 × M6 Nuts

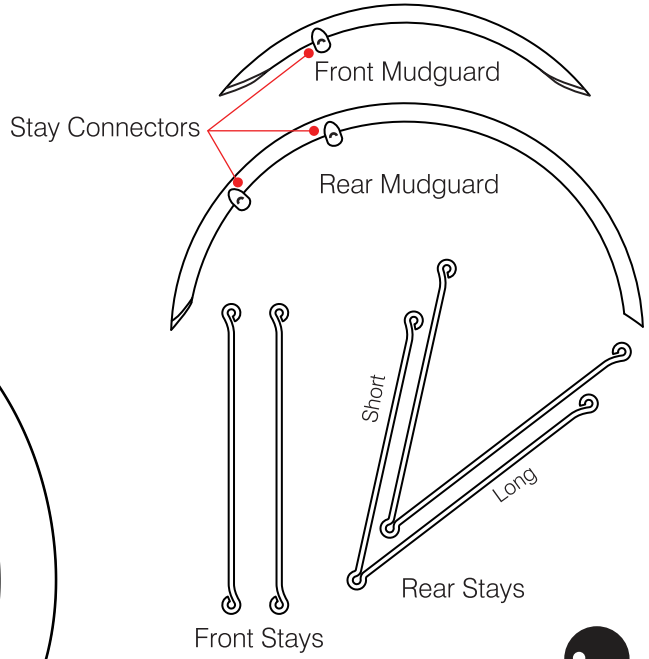

Scan me!

or go to
swiftyscooters.com/assembly-guides
for more information online

Let the good times ride and roll!
Share your story and follow us @swiftyscooters

Swifty SCOOTERS

ASSEMBLY GUIDE

Prepare your scooter by disconnecting the brakes and removing both wheels.
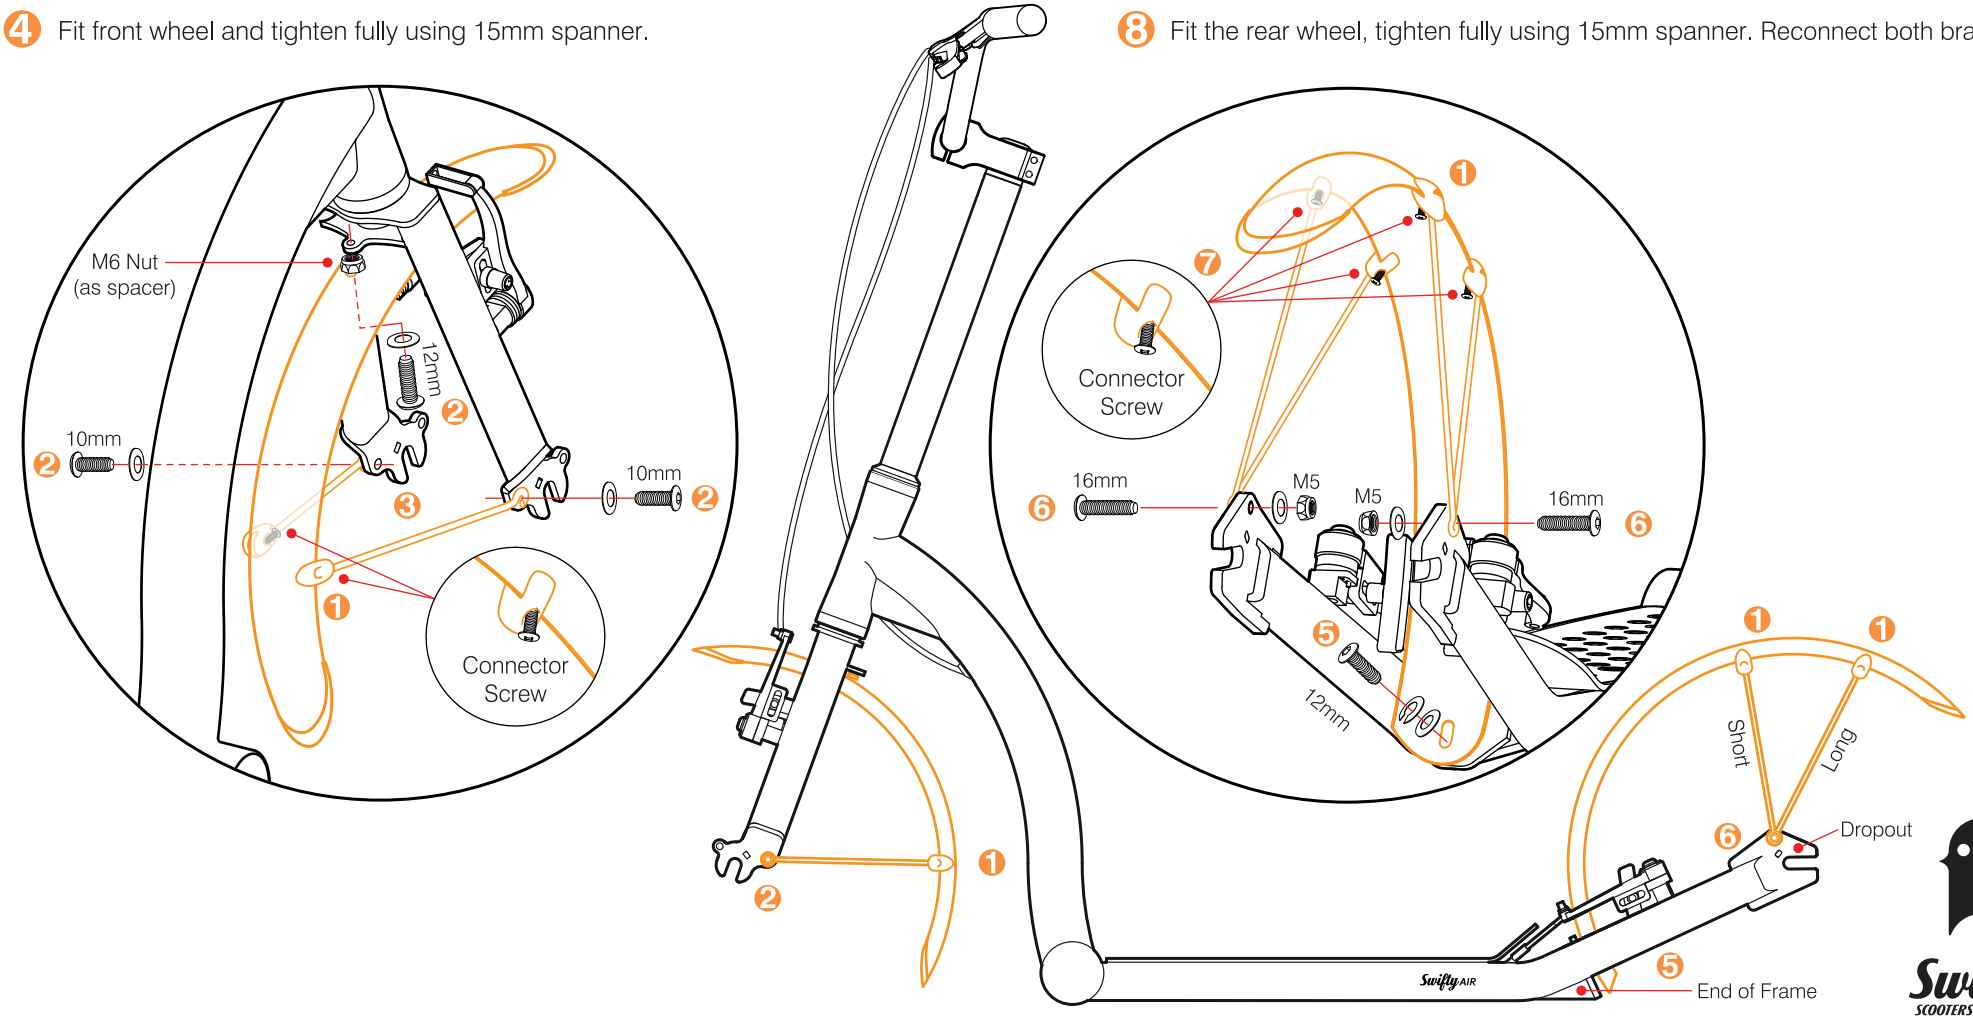
1. Assemble the **Wire Stays** to the correct **Mudguards** as shown in the diagram. Leave the **Connector Screws** untightened as these are used for final positioning in steps **3** and **7**.
2. Attach front mudguard and wire stay to the front fork.Use **12mm and 10mm Bolts, Flat Washers**, and a **M6 Nut** (as spacer). Tighten fully.
3. Secure front stays in position by tightening **Connector Screws** with a crosshead screwdriver.
4. Fit front wheel and tighten fully using 15mm spanner.
5. Secure rear mudguard to the end of frame with **12mm Bolt, Split Washer,** and **Flat Washer**. Tighten fully.
6. Secure rear wire stays to the rear dropout with **16mm Bolts, Nuts,** and **Flat Washers.** Tighten fully.
7. Secure rear stays in position by tightening **Connector Screws** with a crosshead screwdriver.
8. Fit the rear wheel, tighten fully using 15mm spanner. Reconnect both brakes.