forest
Making British gardens great

OVERLAP APEX LOG STORE
INSTRUCTIONS

We recommend using the following tools (not supplied):

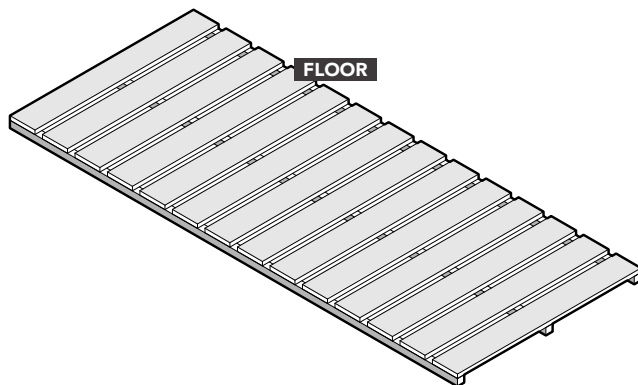| Tape Measure | Pozidrive Screwdriver | Drill & 2-3mm Drill Bits | Sharp Knife | Hammer |

FIXING PACK CONTAINS:
FIXING PACK CODE: *OALGSTFP*

4 x **50mm** Screws **QTY: 32**

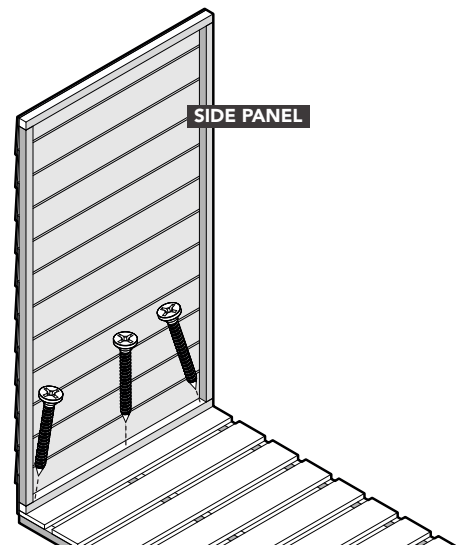3.5 x **30mm** Screws **QTY: 60**

3.5 x **25mm** Screws **QTY: 10**

Felt **Tacks** QTY: **30**

PLEASE KEEP PLASTIC BAGS AND SMALL PARTS AWAY FROM CHILDREN

CHECK AND TIGHTEN ALL THE FIXINGS APPLIED TO THIS PRODUCT ON A REGULAR BASIS.

1

FLOOR

Position the **Floor** in your **desired location**. Your log store must be built on a **solid** and **level base**.

2

50MM SCREWS

SIDE PANEL

Position and secure the Side Panel to the floor bearers beneath. Ensure the panel is flush to the floor.
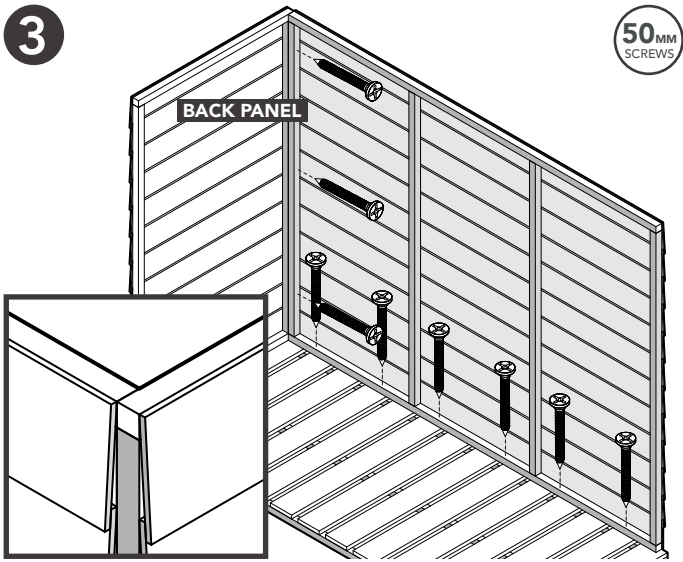
IMPORTANT
Assembly requires 2+ adults.

REMINDER
Always pre-drill before screwing.

Missing something or need more information?
Call our aftersales team on
0333 321 3142

Visit our website for spare instructions and more information
www.forestgarden.co.uk

3

BACK PANEL
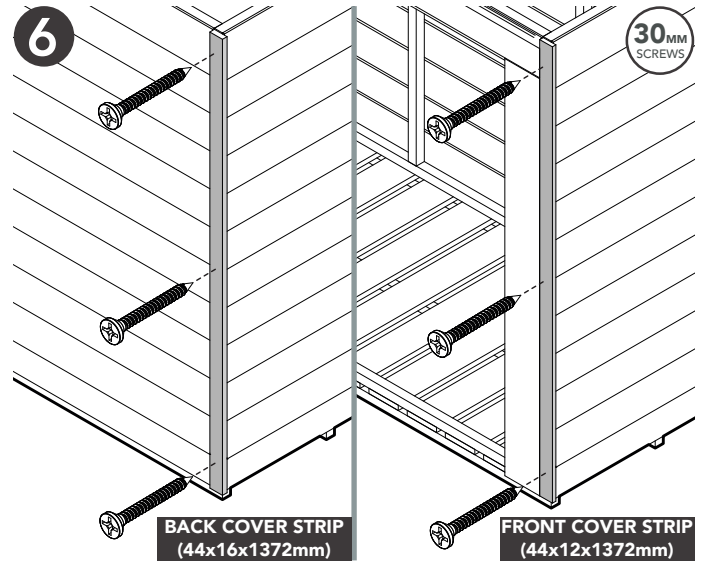
Position and secure the Back Panel to the floor bearers beneath. Screw the Back Panel to the Side Panel. Ensure the corner of the adjoining panels are as shown above.

4 50MM SCREWS
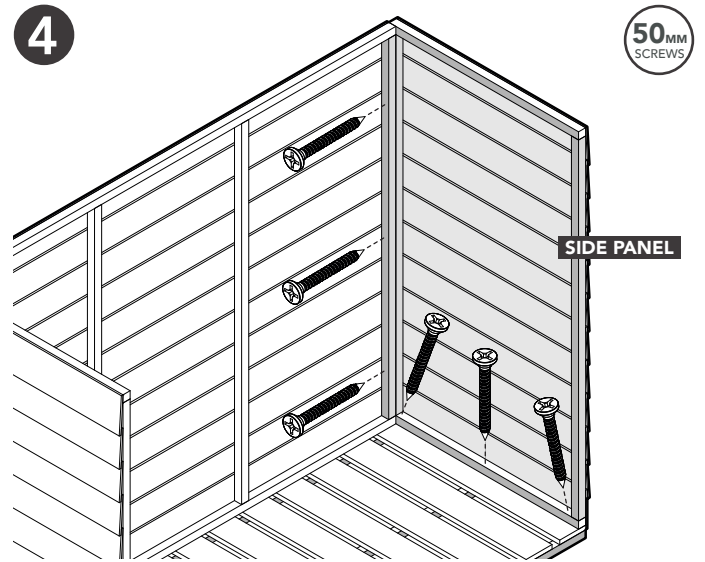
SIDE PANEL

Position and secure the other Side Panel to the floor bearers beneath and the Back Panel.

5 50MM SCREWS
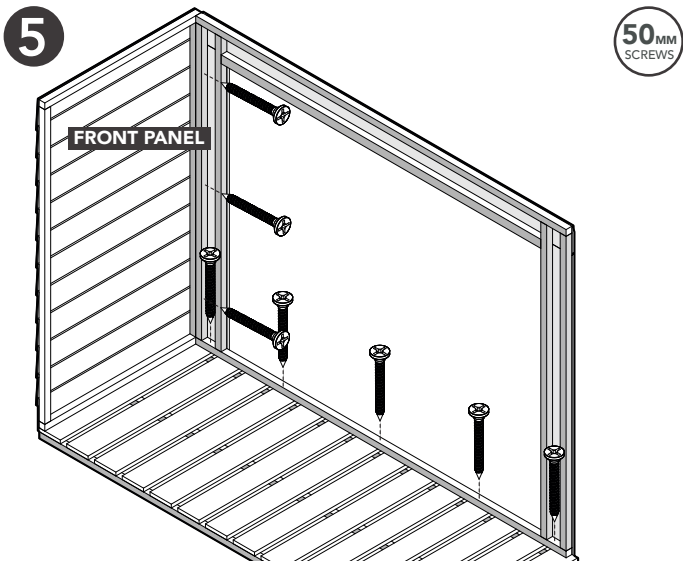
FRONT PANEL

Position and secure the Front Panel to the Side Panels and floor bearers beneath. The screws will need to be drilled into the Side Panels at an angle.

6 30MM SCREWS

BACK COVER STRIP (44x16x1372mm)

FRONT COVER STRIP (44x12x1372mm)

Position and secure the Cover Strips to the front and back corners. Ensure the Cover Strip is flush to the bottom board on the panels.

7 30MM SCREWS
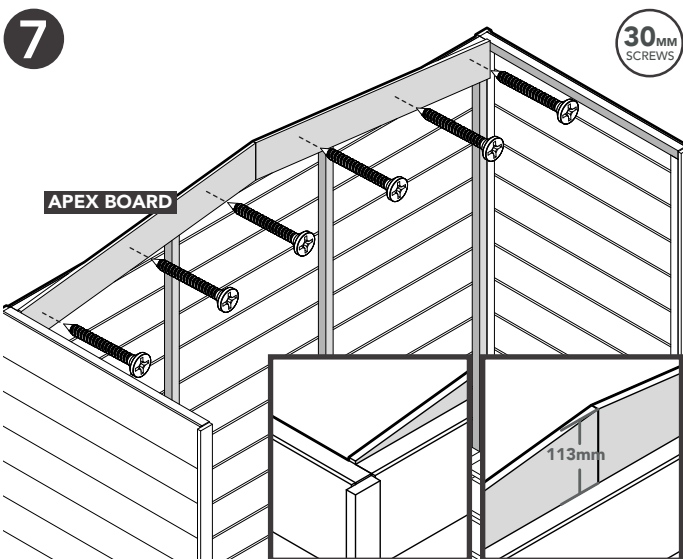
APEX BOARD

113mm

Position and attach the Apex Boards to the Back Panel as shown above. Ensure to screw into the framework behind. The point of the Apex Boards should be offset approximately 113mm from the Back panel.
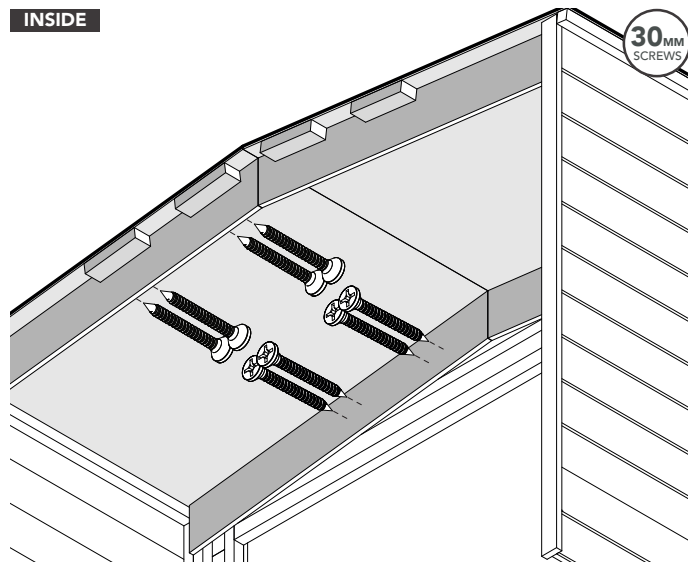
30MM SCREWS
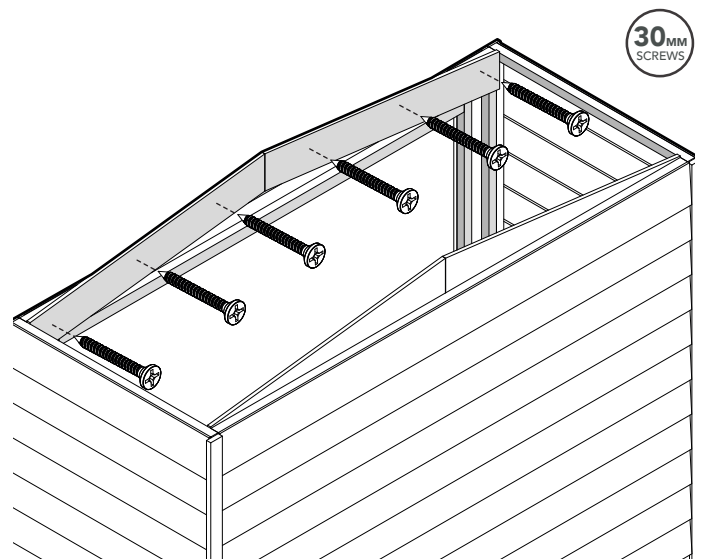
Repeat the process for the other Apex Boards. Position and attach the Apex Boards to the Front Panel as shown above. Ensure to screw into the framework behind.
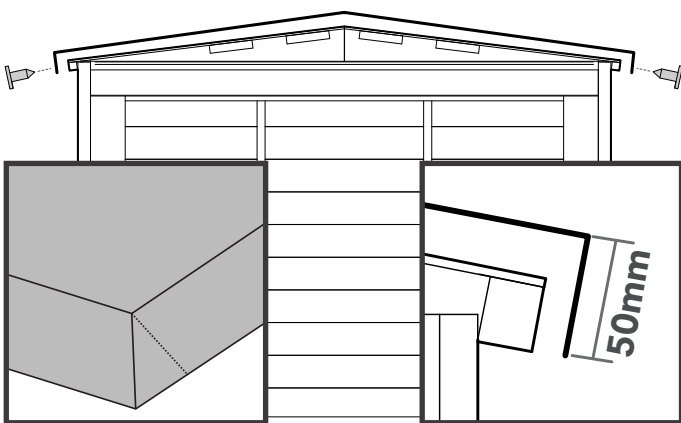
8
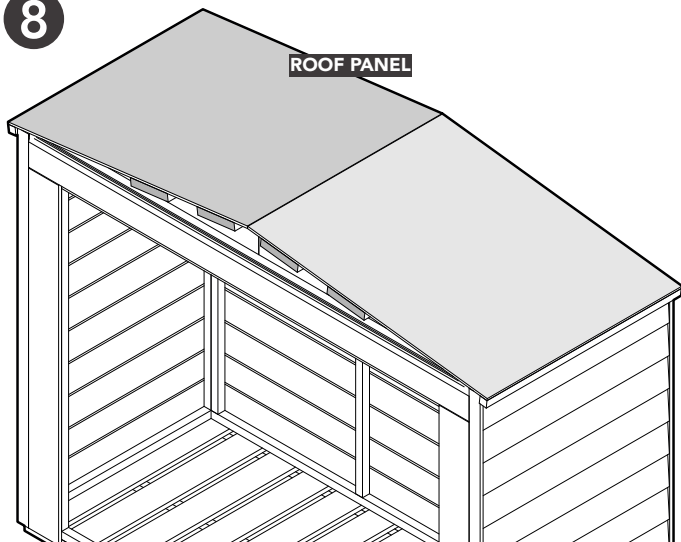
Position your Roof Panels. Ensure they meet in the middle of the apex and line up flush to each other.

30MM SCREWS

From the inside, **secure the Roof Panels** to the Apex Boards to fix in place. Mark out where to pre-drill before securing into place.

9

50mm

Place the felt over the roof and ensure there is approximately 50mm overhang on all sides. Cut and fold the felt at the corners as shown above. Take care when trimming the roof felt.
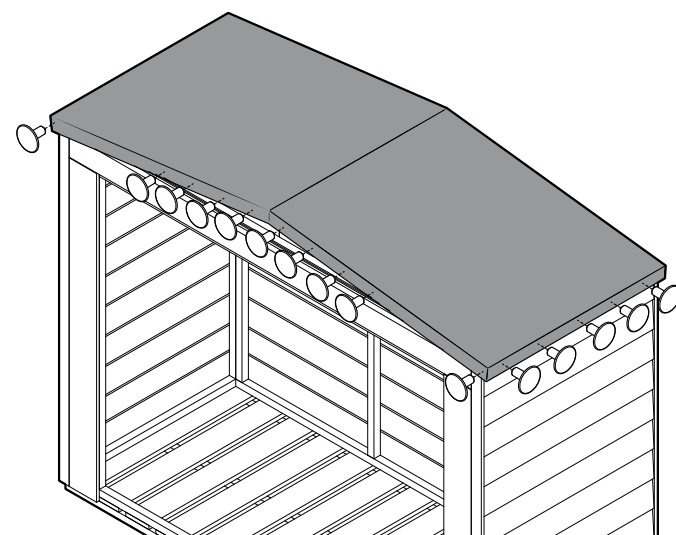
Secure the felt to the roof, using felt tacks. Ensure the felt tacks on the sides are placed in 150mm intervals. Fix 2 x felt tacks per block on each roof panel.

10

SIDE BARGE BOARD

25MM SCREWS
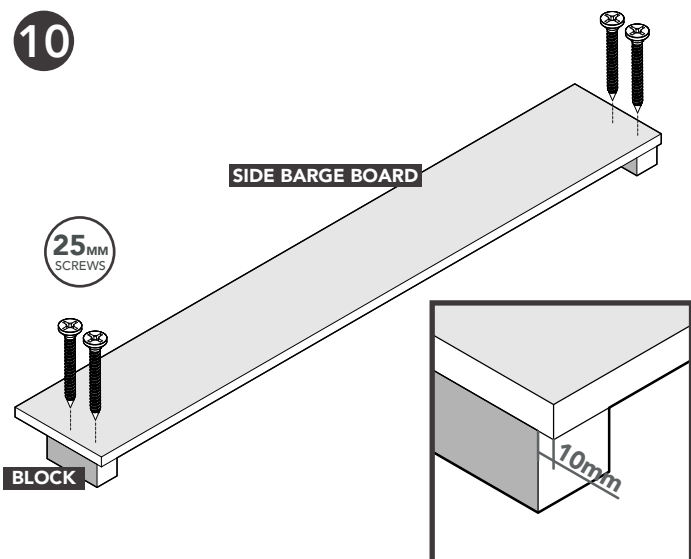
BLOCK

10mm

Position and secure the Blocks to the Side Barge Boards. Ensure the Block is flush to the side with a 10mm offset as shown above.

30MM SCREWS
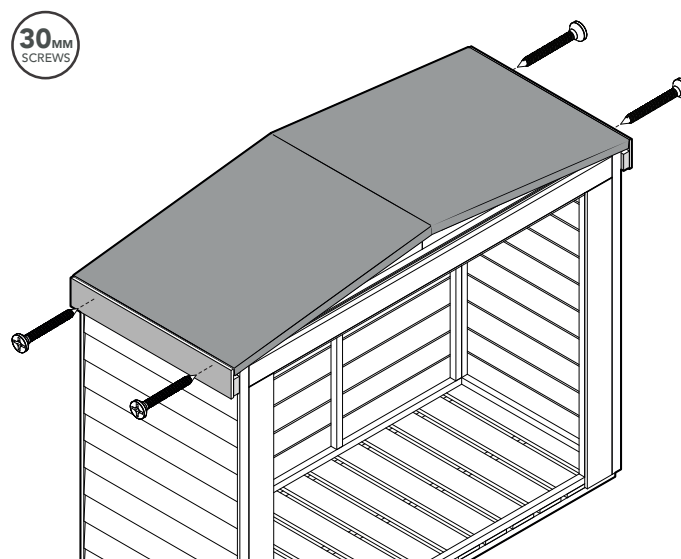
Position and secure the Side Barge Boards to the roof battens as shown above. Ensure the boards are flush to the roof.

11

30MM SCREWS

FRONT/BACK BARGE BOARD

Position and secure the Front/Back Barge Boards to the Roof Panel blocks and Side Barge Board blocks as shown above.

12

25MM SCREWS

FINIAL

Attach the Finial to the centre of the Front Barge Boards.

CHECK YOU HAVE ALL YOUR PARTS PRIOR TO ASSEMBLY.
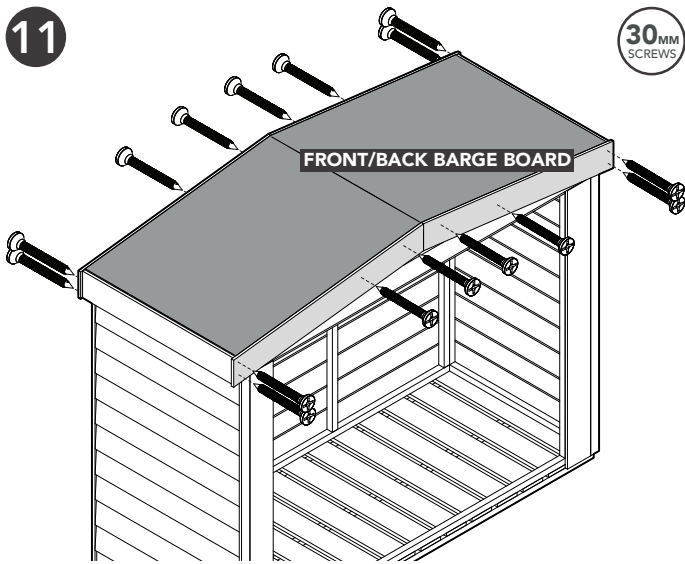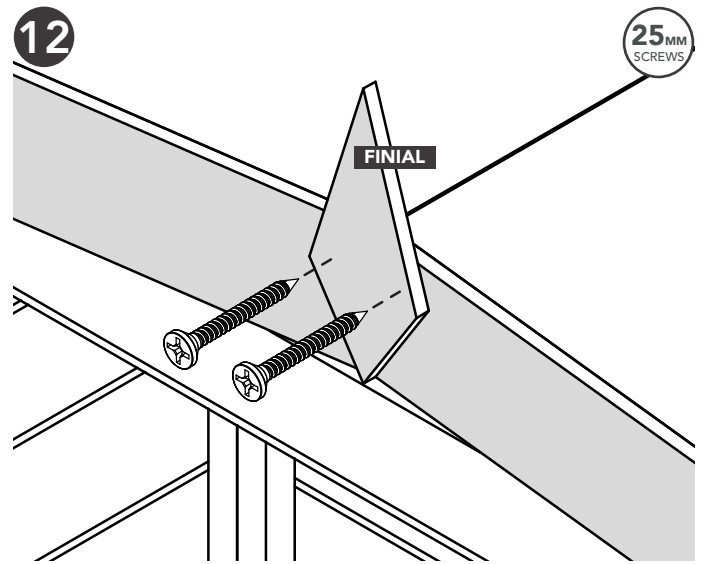**(The parts do not have codes on them. They are listed below should you need to order one.)**

Timber is a natural material of which will shrink and swell as a result of varying moisture content.
Assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted), the manufacturer cannot be held liable for any resulting damage.

The components provided may be heavy. Please lift with caution and with a minimum of 2 people.

Overlap Apex Log Store (OALGST)			
Label	*Part Code*	**Description**	**No.**
A	*OALGSTFLR*	**Floor 750x1828mm**	1
B	*OPOSSP*	**Side Panel 750x1375mm**	2
C	*OPOSBP*	**Back Panel 1772x1375mm**	1
D	*POSFP*	**Front Panel 1772x1375mm**	1
E	*44161372PT*	**Back Cover Strip 44x16x1372mm**	2
F	*44121372PPT*	**Front Cover Strip 44x12x1372mm**	2
G	*121120907PAll83PT*	**Apex Board 121x12x907mm**	4
H	*AOSRF*	**Roof Panel 784x970mm**	2
I	*28280070PT*	**Block 28x28x70mm**	4
J	*121120784PPT*	**Side Barge Board 121x12x784mm**	2
K	*121121010PAll83PT*	**Front/Back Barge Board 121x12x1010mm**	4
L	*FIN25010512PT*	**Finial 250x105mm**	1
M	*85602*	**Green Mineral Felt 1x2.5m**	1

Use the labelled components to help identify the part code and description.

A   **B**   **C**   **D**   **E**   **F**   **G**

H **I** **J** **K** **L**
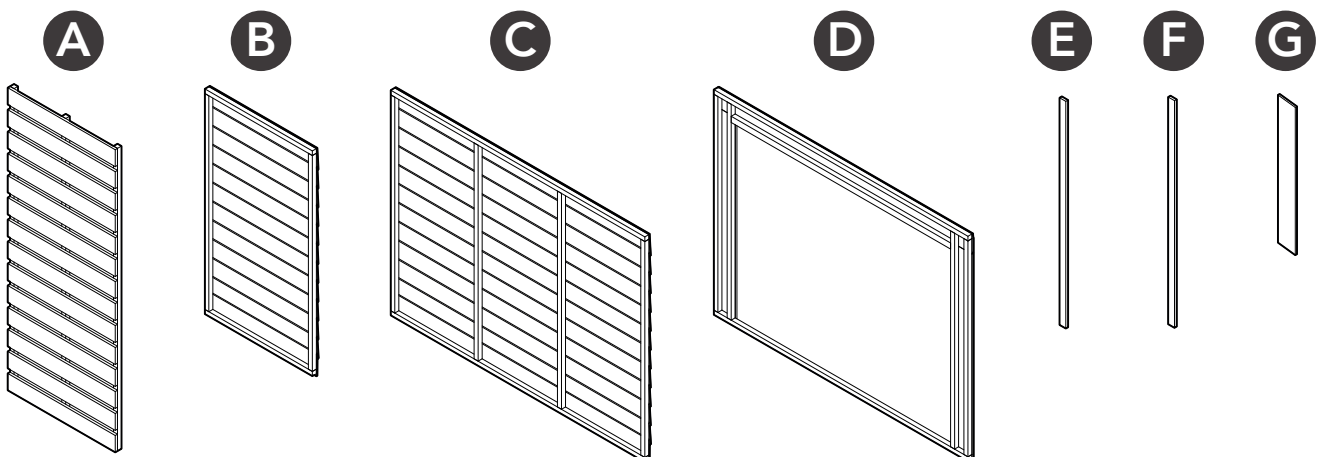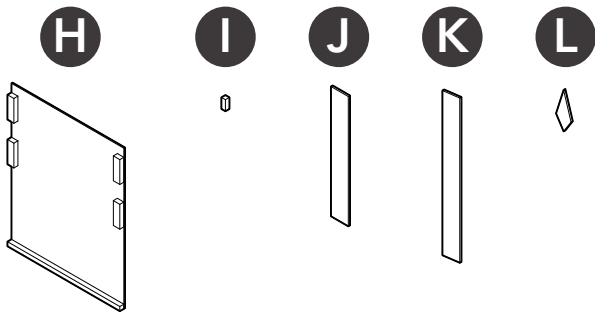
HEALTH & SAFETY

THE ROOF OF THIS LOG STORE IS NOT A LOAD BEARING STRUCTURE

We strongly recommend that PPE (Personal Protective Equipment) is used throughout your build to ensure you are protected from any potential health and safety risks. **Do not exempt yourself from wearing PPE.**

WEAR CUT-RESISTANT GLOVES

WEAR PROTECTIVE GLASSES

WEAR PROTECTIVE BOOTS

WEAR A PROTECTIVE MASK

TREATED TIMBER CONTAINING A BIOCIDAL PRODUCT
CONTROL OF WOOD DESTROYING ORGANISMS

Active Ingredients - Propiconazole, Tebuconazole, IPBC, Permethrine, Benzyl-C12-16-Alkyldimethyl Chlorides. (Dip Treated)
Basic Copper Carbonate, DDA Carbonate, DDA Chloride. (Pressure Treated)

Wear gloves when handling. Avoid inhalation of sawdust. Do not use in contact with drinking water or food. Do not use for animal bedding or in fish ponds. Dispose of treated wood responsibly.