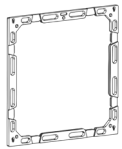# SPACEKIT

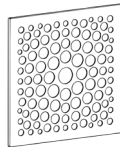## INSTALLATION, STORAGE, AND HANDLING INSTRUCTIONS

2D ACOUSTIC SERIES

WHAT'S INCLUDED

FRAMES

PANELS

WALL-DOG™ SCREWS
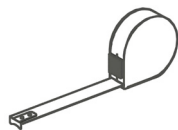
BOWTIES

SPACERS

YOU MAY NEED

PENCIL

TAPE MEASURE

PHILIPS SCREWDRIVER
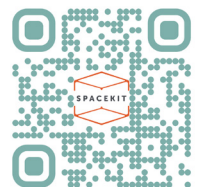
3/16" ANSI BIT

DRILL

CONTENTS

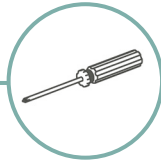Looking for help? Reach us anytime at:

help@spacekit.co

Visit our website for more products & inspiration!

www.spacekit.co

A Using a Wall-Dog™

All Wall-Dog™ screws should be installed by hand with a Philips screwdriver, being careful **not to over-tighten** and strip the hole

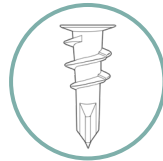Some materials require a pre-drilled 3/16" hole before installing Wall-Dog™ screws
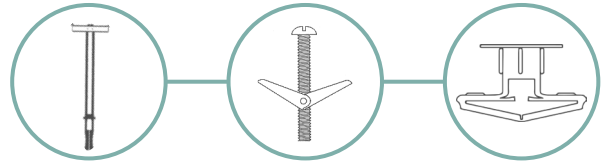
PRE-DRILL REQUIRED?

✓	✗
• Metal Stud • Concrete • Concrete Masonry • Brick • Plaster	• Wood • Drywall

For **drywall**, other anchors can be used in place of the Wall-Dog™ to achieve a more robust mounting solution
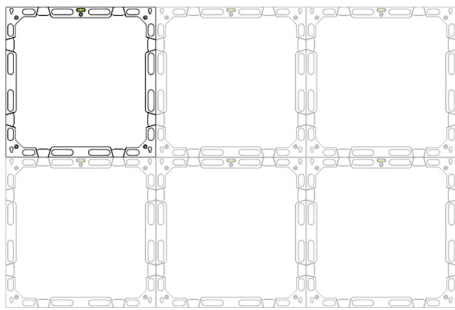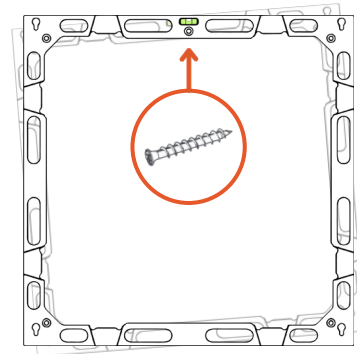
E-Z Ancor®

Drywall Toggles

B Getting Started: Installing the First Frame

1 Select installation starting point

This is typically either a corner frame or a center frame along an edge
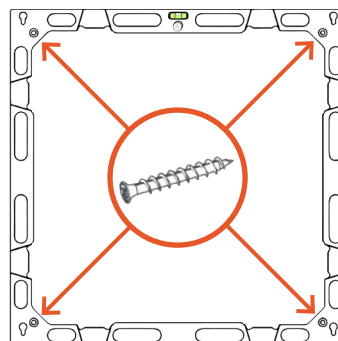
2 Install first screw & level frame

Use top hole directly under the level. Pivot the frame until it is in a flat position

3 Install remaining screws

Install the remaining four (4) corner screws, being careful not to over-tighten them
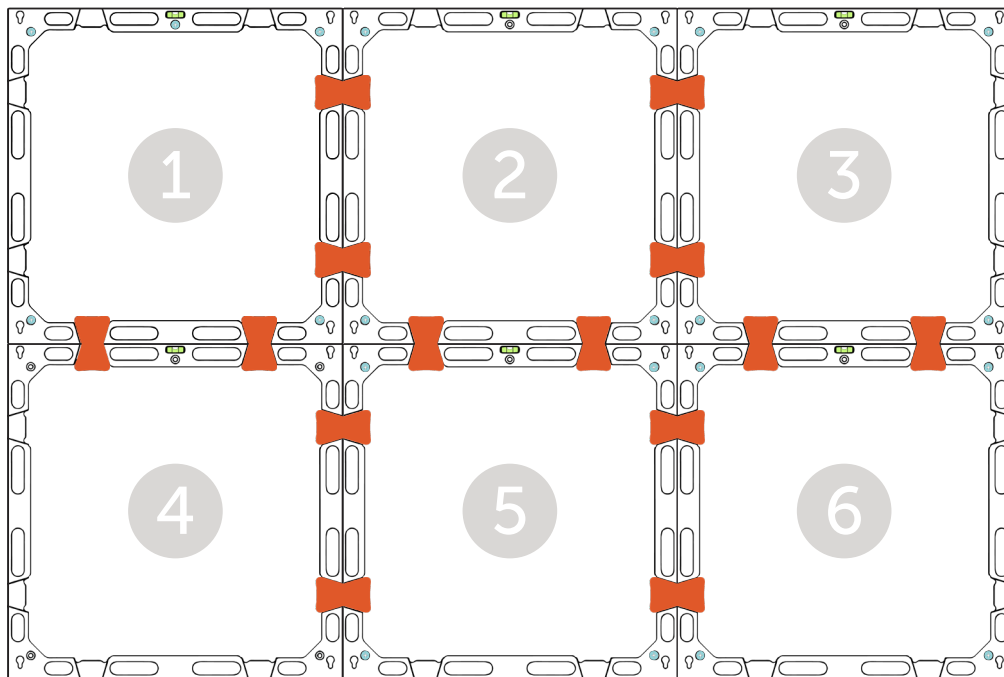
Don't over-tighten
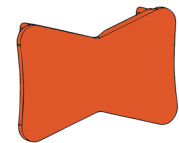
C Understanding How to Build: No Spacing

Adapt the number of frames to your installation
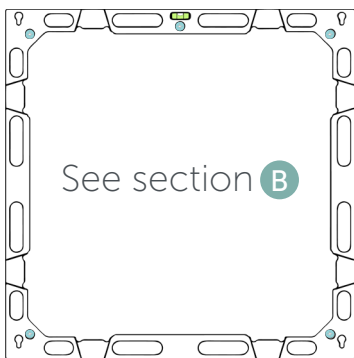
1	2	3
4	5	6

Hardware Used

Wall-Dog™ Screws

Bowtie

---

1 Install the first frame

See section **B**

---

2 Add the second frame using (2) bowties

---
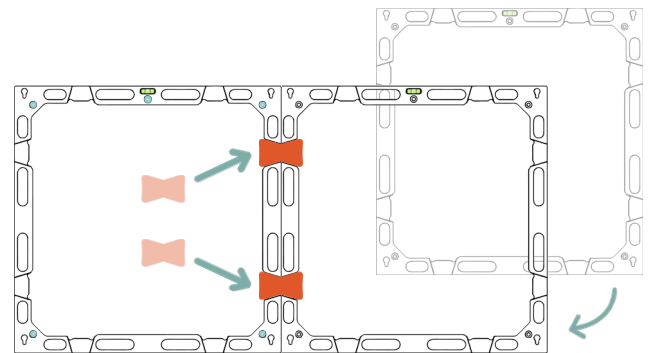
3 Secure in place with (4) corner screws
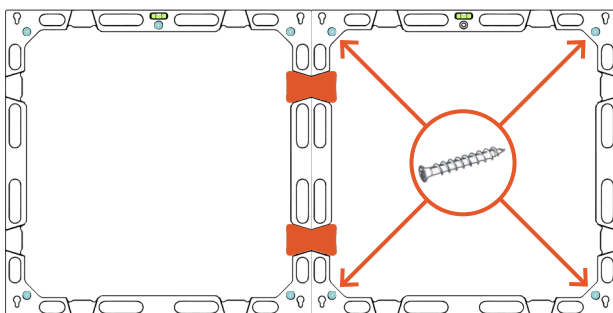
---

4 Add additional frames one at a time

⚠ Ensure the system is level before adding screws to each new frame

Understanding How to Build: Spacing
Adapt the number of frames to your installation

1

2

3

4

5

6

Hardware Used

Wall-Dog™ Screws

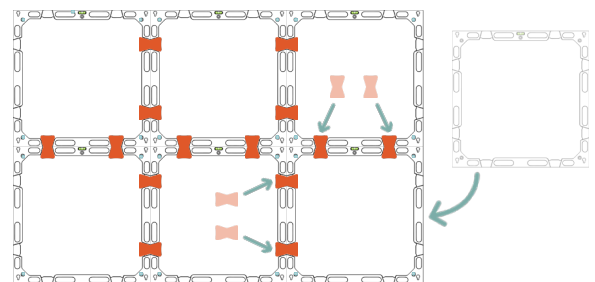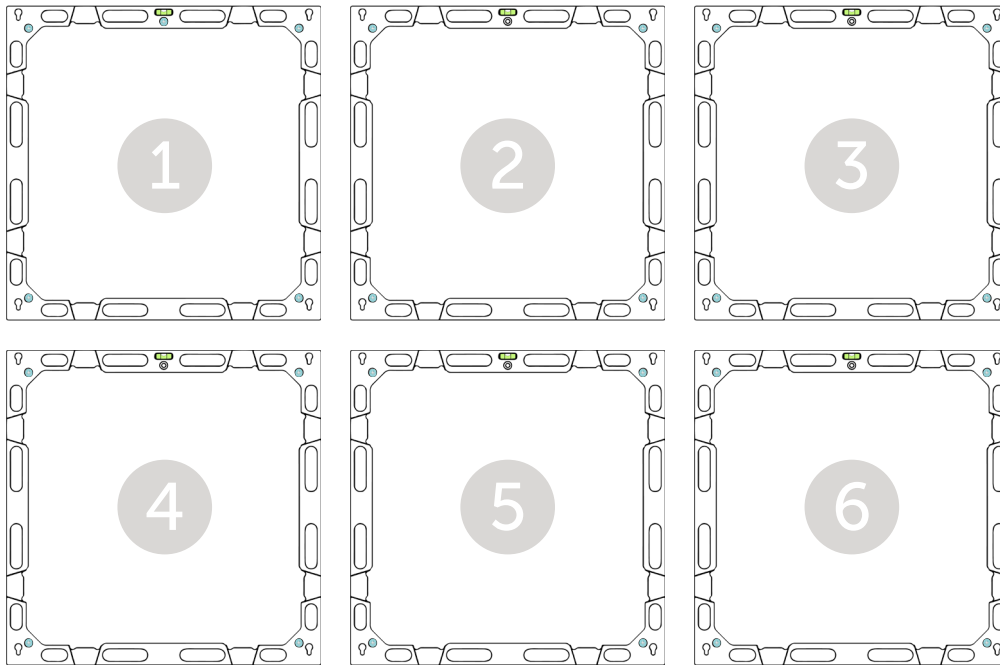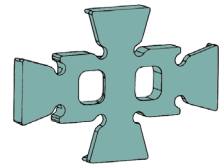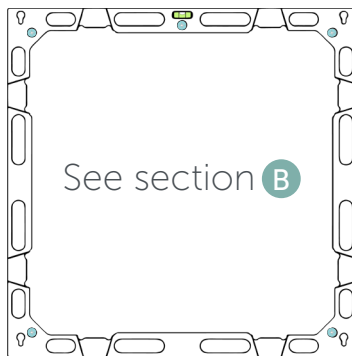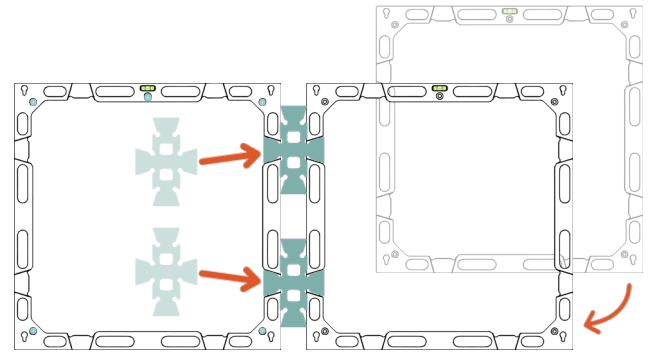### Spacer
Rotate the spacer for 2" or 4" spacing

1 Install the first frame

See section B
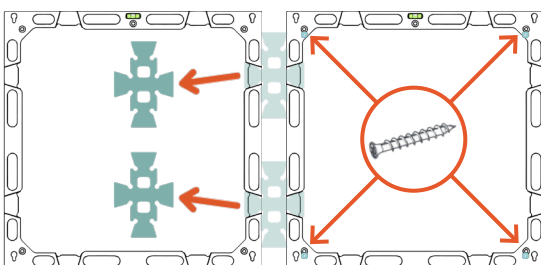
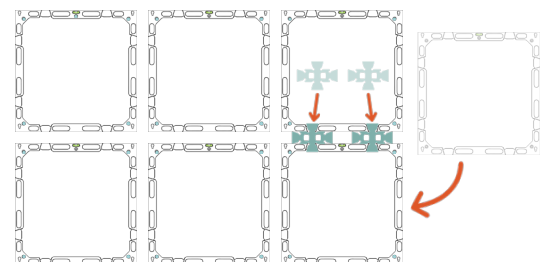**2** Add the second frame using (2) spacers

3 Secure in place with (4) corner screws

Once secured, remove the spacers and use them for the next frame

4 Add additional frames one at a time

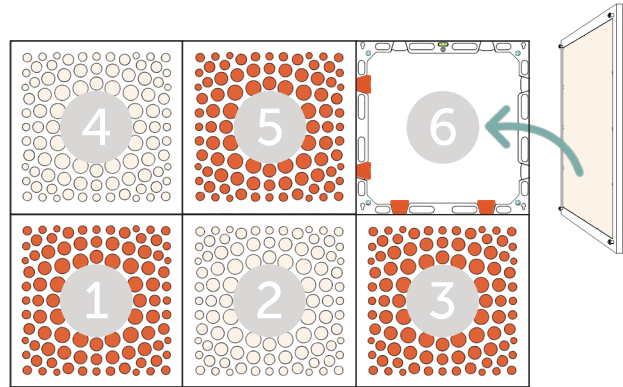⚠ Ensure the system is level before adding screws to each new frame

E Mounting Panels
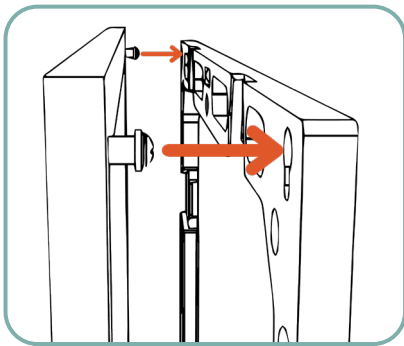
1 Start at the bottom of your installation

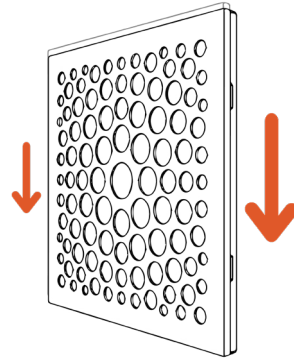Mount panels, beginning with the bottom row and working upwards

Each new panel mounted locks in the one below it

---

2 Press the panel on to the frame

3 Slide the panel down to lock it in

Ensure all sides are flush with the frame

F Updating Your Installation
Re-arrange the panels for a fresh look

Rotate, swap, and add new panel designs to keep your space fresh