Single Monitor Desk Mount

Instruction Manual

75x75mm
100x100mm

32"

2~8kg
4.4~17.6lbs

If you have any questions , please contact our customer service.
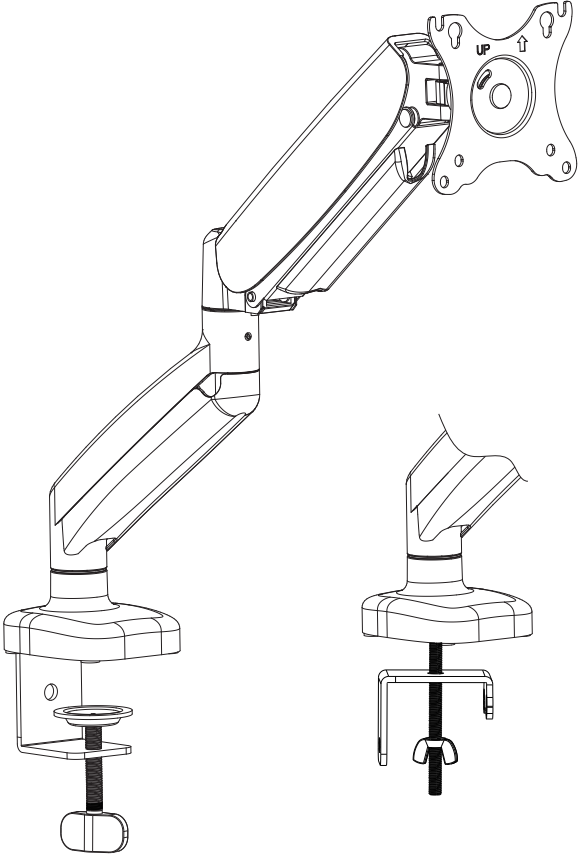
⚠ **WARNING!**

If you have any confusions or are not quite sure about the installation, please do not hesitate to ask for our help.

Before assembly, please check and make sure all necessary accessories are included and undamaged. Improper installation, such as use the product for monitors over its load capacity or for any purpose not explicitly specified, may cause damage or serious injury. We would not be liable for any damage or injury caused by improper mounting or inappropriate use.

The kit contains small items that could be choking hazards if swallowed. Please keep them OUT OF REACH OF CHILDREN UNDER 3 YEARS OLD. ADULT SUPERVISION IS REQUIRED.
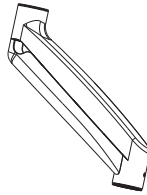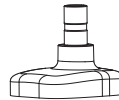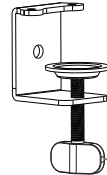
PACKAGE CONTENTS
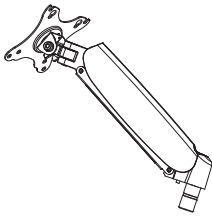
A (x1)
Upper Arm

A1 (x1)
Cable Cover

B (x1)
Lower Arm

C (x1)
Base

D (x1)
Clamp

E (x4)
Pad

F (x1)
Carriage Bolt

G (x1)
Wingnut

All are included in D

D1
Bracket

D2
Bolt Y

D3
Bolt

D4
Washer

D5
Clip Plate
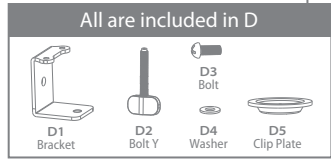
H (x1)
Grommet Base

I (x3)
M6x10

J (x1)
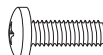3mm Allen Key

K (x1)
4mm Allen Key

L (x1)
6mm Allen Key

M-A (x4)
M4x12

M-B (x4)
M6x12

M-C (x4)
D6 Washer

M-D (x4)
spacer

NOTE: Not all hardware included will be used.
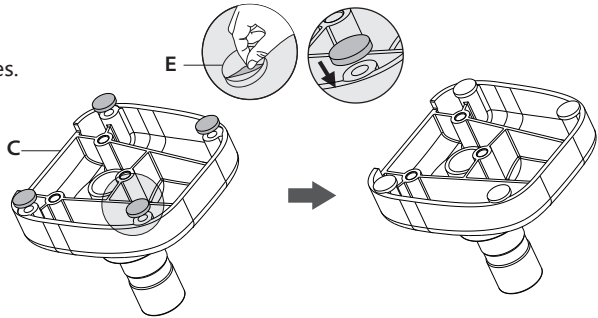
2~8kg
4.4~17.6lbs

DO NOT EXCEED WEIGHT CAPACITY.

ASSEMBLY STEPS

STEP 1: Apply Pads to the Base Bottom

Apply pads (E) to the base
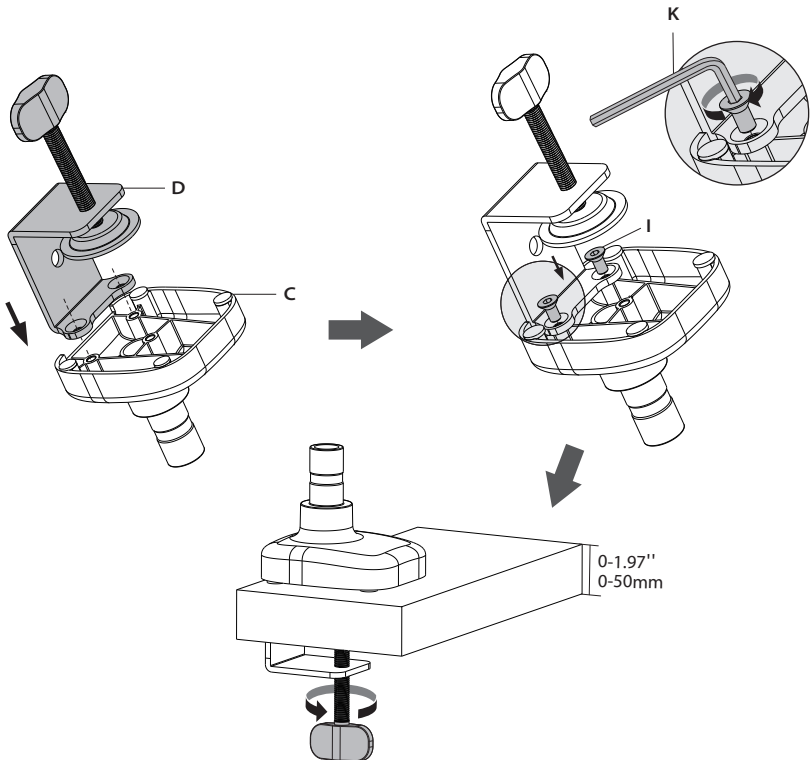bottom to avoid desk scratches.

E

C

STEP 2: Clamp Installation or Grommet Base Installation

OPTION A: Clamp Installation

Mount Clamp (D) to the buttom of Base(C) by tightening screws (I) with 4mm Allen Key(K).

Adjust the Clamp width to fit your desk. Secure stand to the desktop by tightening Bolt Y (D2).

K

D

C

I

0-1.97''
0-50mm

OPTION B: Grommet Base Installation

Firstly detach Bracket(D1) from Clamp (D).

Then run Carriage Bolt(F) through Grommet Base(H) and fix them to Base(C) by tightening screws(I) with 4mm Allen Key(K).
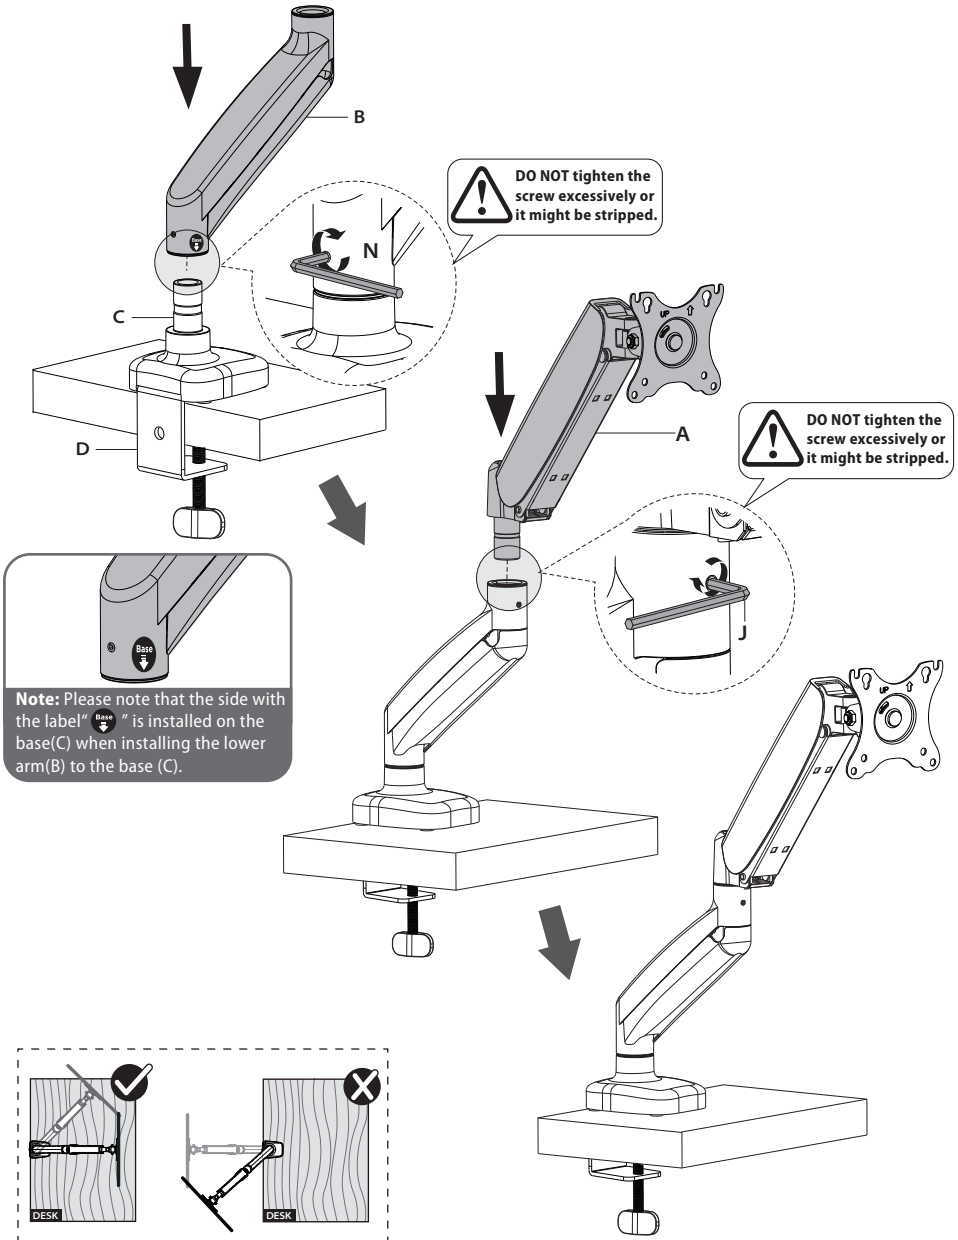
Next get the Carriage Bolt(F) through your desk hole.

Finally, by making Bracket(D1) through Carriage Bolt(F) and stacked above Wingnut(G), and then tightening Wingnut(G), Base(C) would be fixed to your desk securely.

D1

C

H

I

F
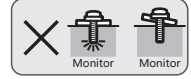
K

0-3.15''
0-80mm

D1

G

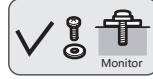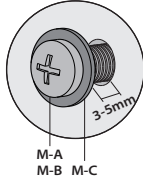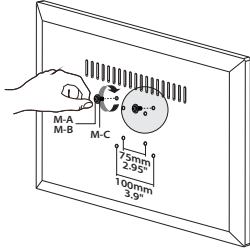Ø 0.39~2.36"
Ø 10~60mm

DESK

DESK
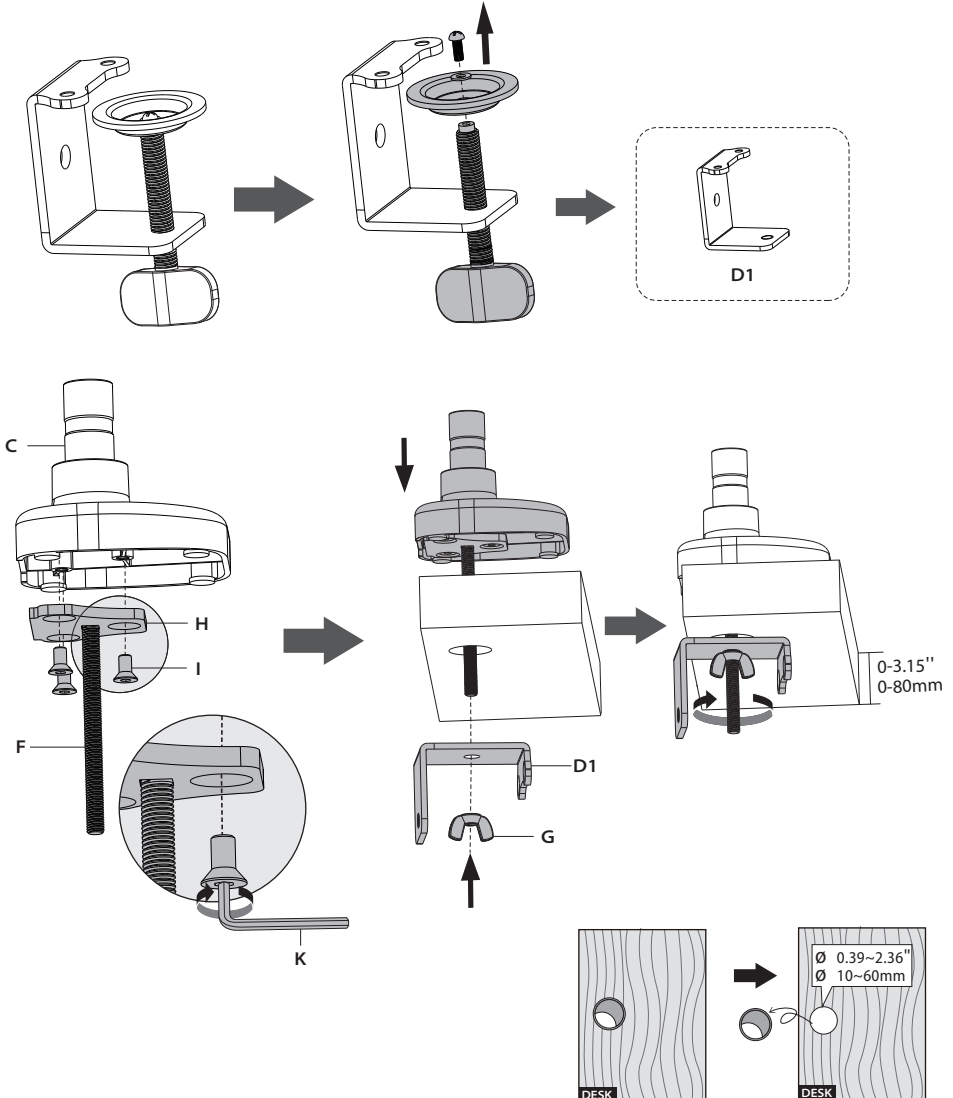
STEP 3: Arm Installation

Install the lower arm (B) and the upper arm (A) to the base (C). Secure the arm by tightening the inside screw using 3mm Allen key (J).


DO NOT tighten the screw excessively or it might be stripped.

DO NOT tighten the screw excessively or it might be stripped.

Note: Please note that the side with the label" Base " is installed on the base(C) when installing the lower arm(B) to the base (C).

DESK

DESK

Please do not move stand outside desk for safety!

STEP 4: Attach Monitor
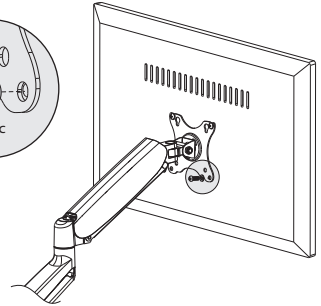

OPTION A: Flat Back Monitor

Firstly choose suitable screws(M-A or M-B) according to the hole size of your monitor back; then assemble two of them with 3-5mm space left. Next hang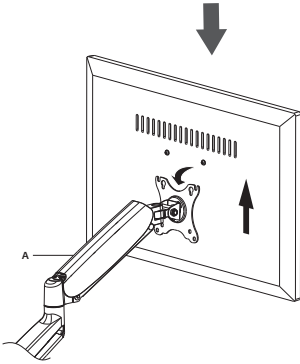 your monitor onto VESA plate of Upper Arm(A). Finally finish the attachment by using a 6mm Allen Key(L) to tighten all chosen screws(M-A or M-B) along with D6 Washers(M-C). Please pay attention to not tighten the screws much excessively which may cause your monitor damage.
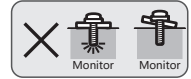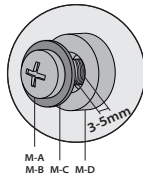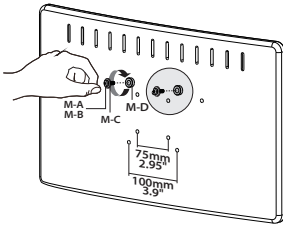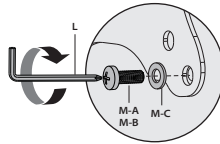
OPTION B: Curved Back Monitor

Firstly choose suitable screws(M-A or M-B) according to the hole size of your monitor back; then assemble two of them with 3-5mm space left. Next hang your monitor onto VESA plate of Upper Arm(A). Finally finish the attachment by using a 6mm Allen Key(L) to tighten all chosen screws(M-A or M-B) along with D6 Washers(M-C) and Spacers(M-D). Please pay attention to not tighten the screws much excessively which may cause your monitor damage.
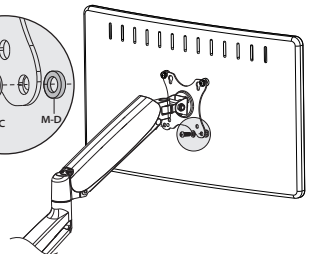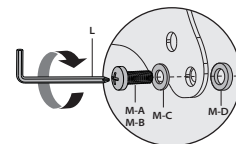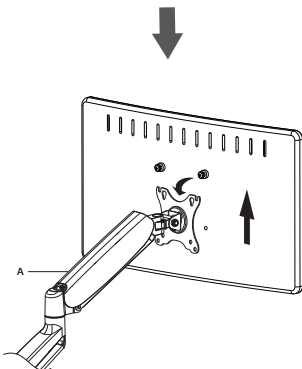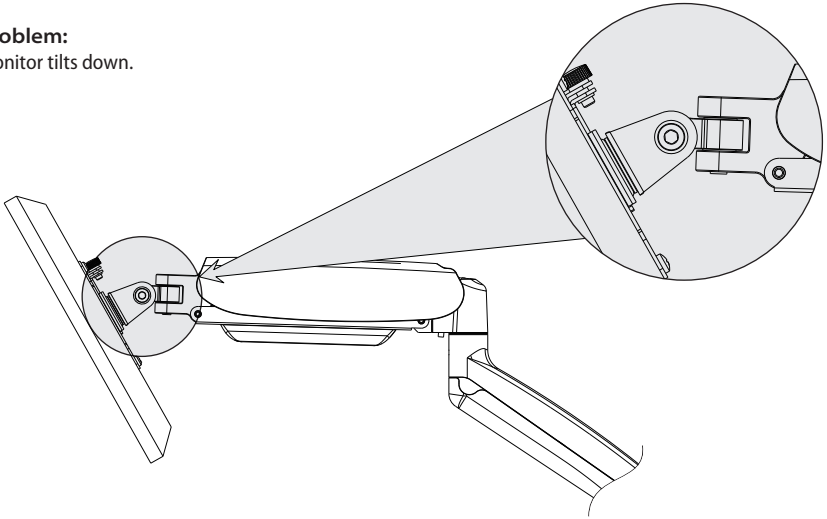
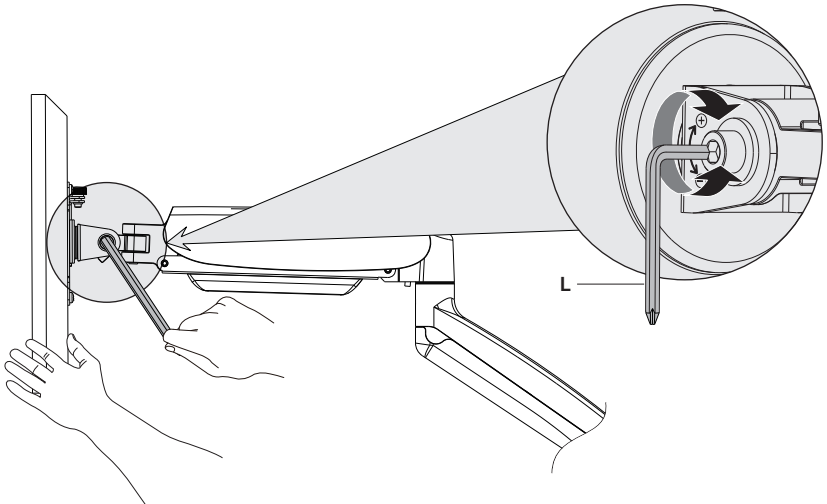# STEP 5: Tilt Adjustment

Problem:
Monitor tilts down.

Solution:
1. Loosen the tilting bolt.
2. Hold the bottom of monitor with one hand and adjust to determine your desired tilt angle.
3. Retighten the tilting bolt to fix the intended angle.

L

STEP 6: Adjust Tension

For intended functioning of the mount, you may need to adjust the tension of Upper Arm (A) in accordance with your monitor weight by 6 mm Allen Key (L).

CAUTION
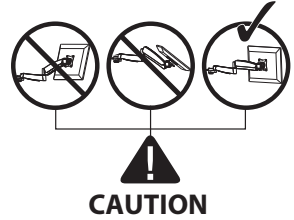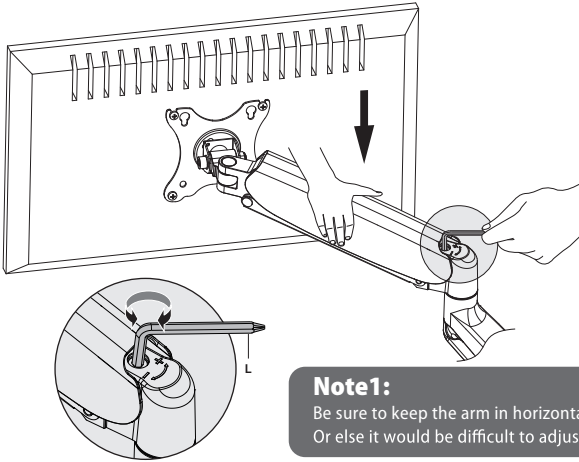
Note1:
Be sure to keep the arm in horizontal position during adjustment.
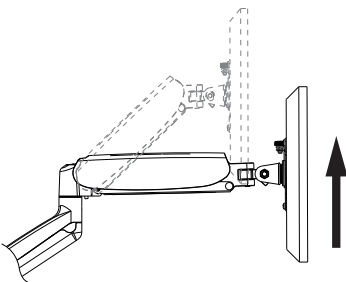Or else it would be difficult to adjust the mount or damage the mount.
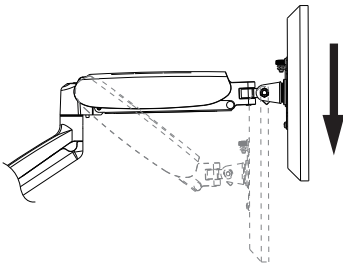
Situation 1: Arm falls down
Upper Arm with monitor falls down and fails to stay where intended.

Solution:
Turn the inside screw counterclockwise("+"direction) to increase gas spring tension until the arm can stay as intended.

Situation 2: Arm rises up
Upper Arm with monitor rises up and fails to stay where intended.

Solution:
Turn the inside screw clockwise("-"direction) to decrease gas spring tension until the arm can stay as intended.

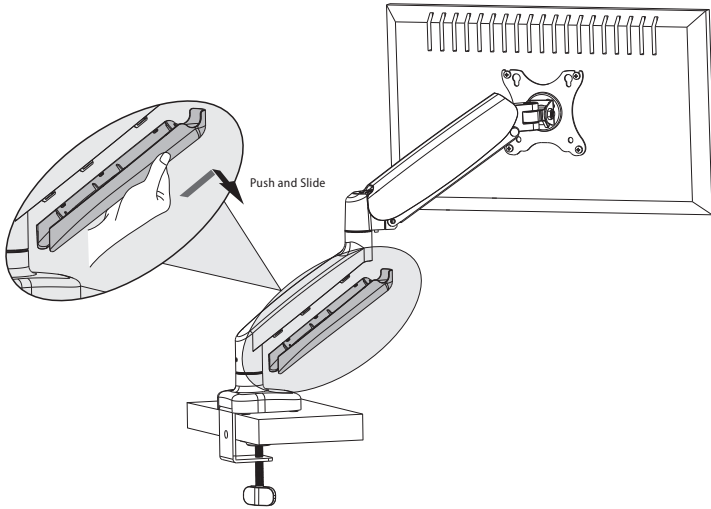**Note2:**
For how many circles the screw should be turned, please refer to the table below.

| Monitor Weight	2kg	3kg	4kg	5kg	6kg	7kg	8kg
Circles (AT LEAST)	min	1	4	8	11	14	17

STEP 7: Cable Management

7-1 Remove Cable Cover

● For lower arm: Remove the bottom plastic cover from lower arm as shown in the diagram below.

Push and Slide

7-2 Attach Cable Cover

● For lower arm: Run cables through the cable cover, then insert and slide the cover down for reattachment;
● For upper arm: Run cables through the cable cover, then with both hands slightly press inwards the tabs
　　　　　　　inside the cover and insert it to upper arm.

Insert and Push

Press

Press

Insert

A1
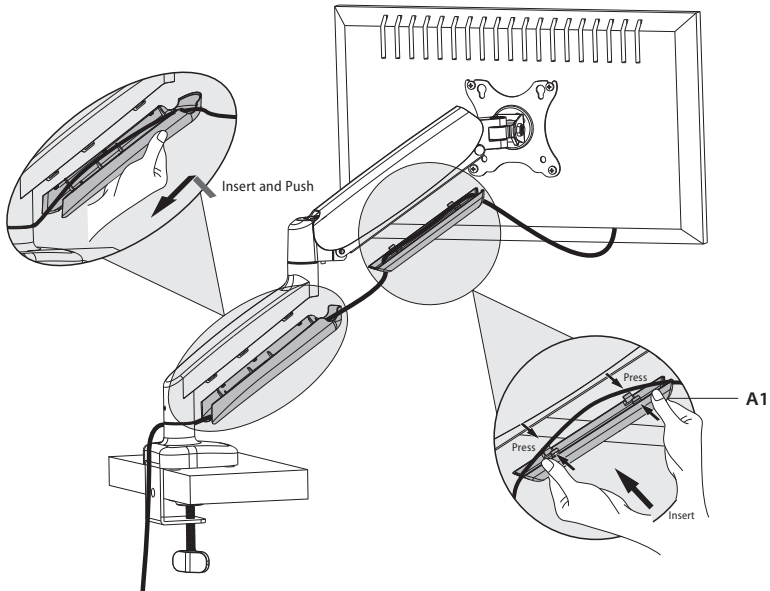
Adjust as Desired

Adjust monitor position and rotation.

☑ **Tilt**
☑ **Swivel**
☑ **Rotation**
☑ **Height**

Swivel 180°

Rotation 360°

Tilt +90° / -45°

Swivel 360°

Swivel 360°

Height
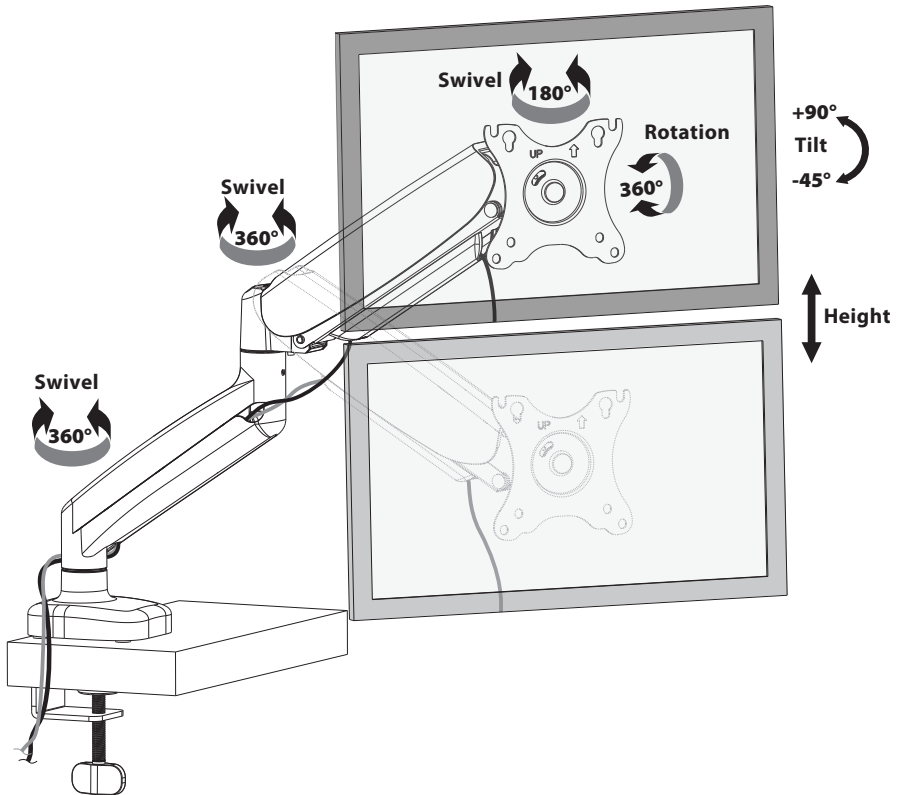
Note: To ensure stability, the tightness of the rotating axis has been preset, so it would be kind of difficult to rotate the VESA plate.
Suggestion: Please attach the monitor first, then hold the two sides of it with both hands, and rotate vigorously.
If that doesn't work out, please do not hesitate to ask for our help.
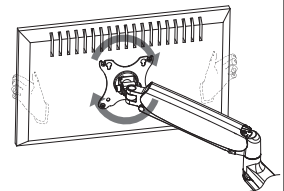
Product Dimensions

10
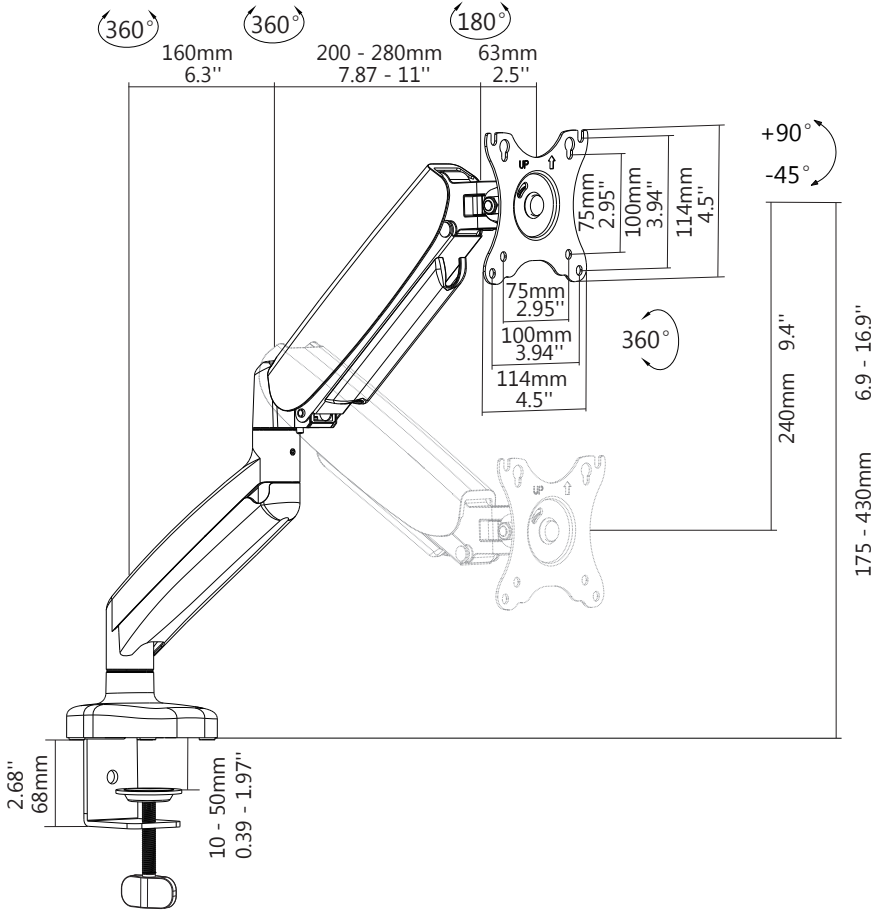
CAUTION AND MAINTENANCE:

• Never allow children to climb, stand, hang, or play on any part of monitor or stand.
• This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
• Check that the bracket is secure and safe to use at regular intervals (at least every three months).