Vector Frame Master Kit 27

The 10ft x 20ft in-line Vector Frame™ Kit 27 is a symmetrical modular exhibit that offers accessible storage, lots of area for messaging and branding and digital promotion! Extrusion frames are coupled with push-fit SEG graphics to create a sleek, seamless appearance. Closet features a ample storage and the kit includes two medium monitor mounts to hang TVs or LCD screens.

features and benefits:

- 50mm silver extrusion frame
- Single-sided SEG push-fit fabric graphics
- Storage closest for convenient storage and locking doors
- Medium monitor bracket holds 32-55" LCD*, max weight: 40 lbs

- Ships freight in a wood crate
- Lifetime hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 228.35"w x 94.49"h x 51.18"d 5800mm(w) x 2400mm(h) x 1300mm(d) Approximate weight: 344 lbs / 156 kg	Refer to related graphic template for more information. Visit: www.tradeshowplus.com
Shipping	**additional information:**
Packing case(s): 1 HALF-WOODCRATE Shipping dimensions: WOOD-CRATE: 101"l x 31"h x 52.75"d 2566mm(l) x 788mm(h) x 1340mm(d) Approximate total shipping weight: 612 lbs / 278 kg	Graphic material: Dye-sublimation SEG push-fit fabric When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided.

This product may include the following materials for recycle: aluminum, select wood, fabric, cardboard, paper, steel, and plastics.

2 person assembly recommended:

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

12/26/2019

Included In Your Kit

Tools, Components, & Connectors

HEX-KEY-SET x1
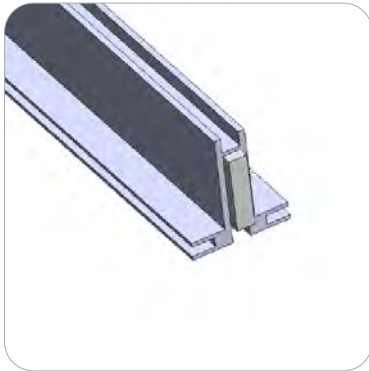
FABRIC STEAMER-ES x1

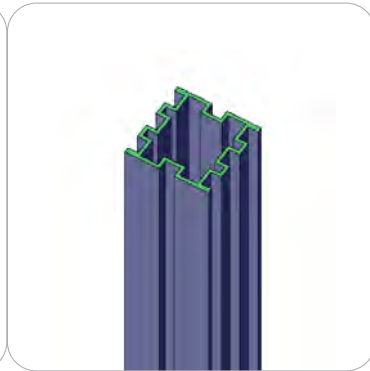5MM-ALLEN-T x8

VF-FCDOOR-50MM-1200-L x1
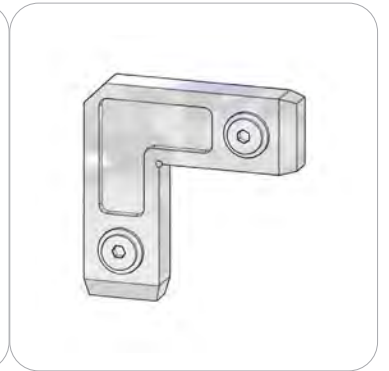
LUM-LED2-ORL-B x5

PHFC2-1200-L-L x4

PHFC2-2400-MCB9-MCB9-SIDE x6

PM2S2-2400 x2
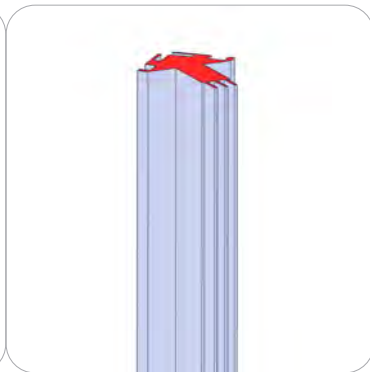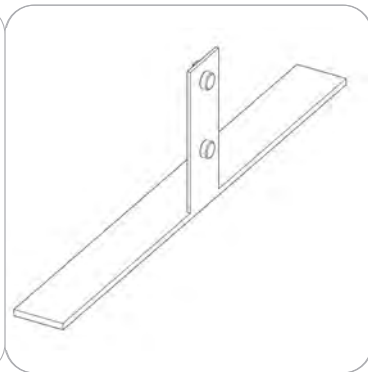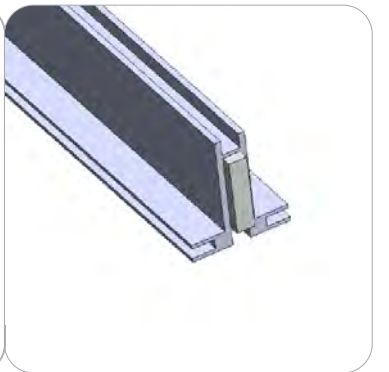
PHFC2-1200-MCB9-MCB9 x4

CB9 x12

PMFC2-CAP x2

PHFC2-2200-MCB9-MCB9 x4

PMFC2-90-2386 x42

SW-FOOT-500-LN x1
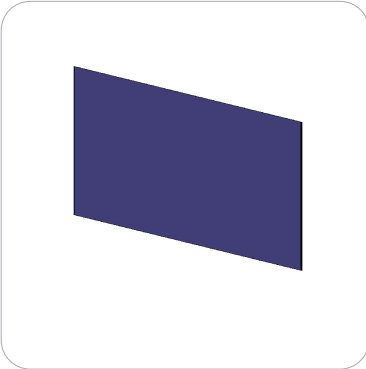
PHFC2-1189-L-L x4

Included In Your Kit

FREESTANDING-SPLIT-MM-2 x2

Tools, Components, & Connectors
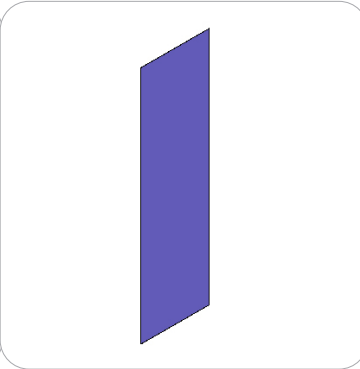
Included In Your Kit

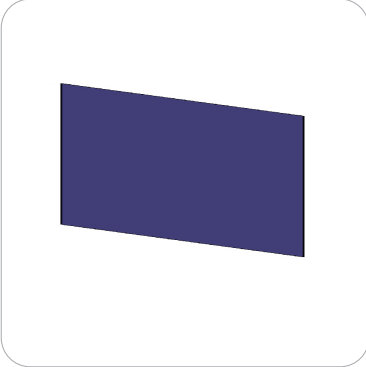Graphics

VF-K-27-A-G x1

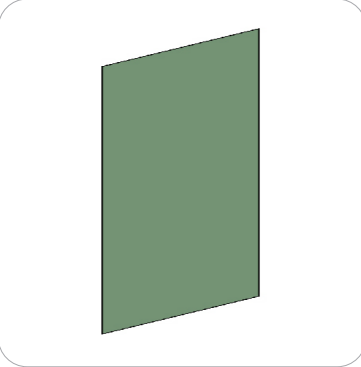VF-K-27-B-G x1

VF-K-27-C-G x1
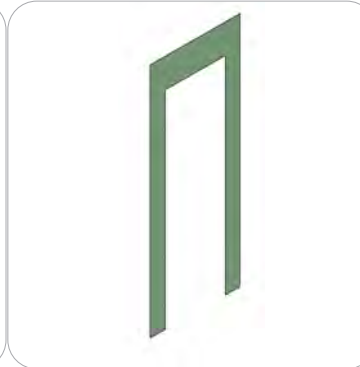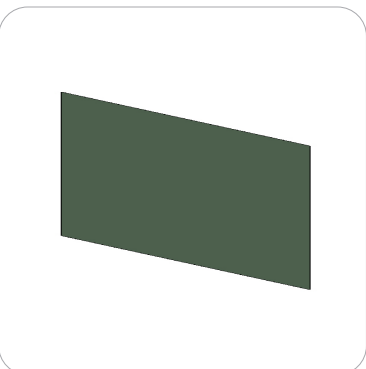
VF-K-27-D-G x1
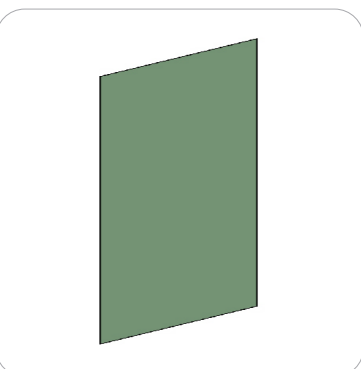
VF-K-27-E-G x1

VF-K-27-F-G x1
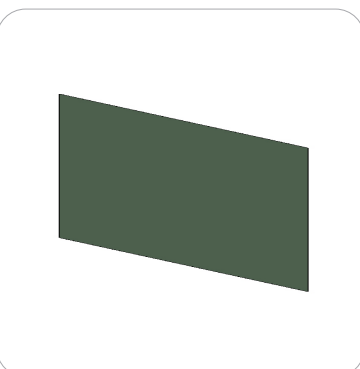
VF-K-27-G-G x1

VF-K-27-H-G x1

VF-K-27-J-G x1

VF-K-27-I-G x1

VF-K-27-L-G x1

VF-K-27-M-G x1

VF-K-27-N-G x1
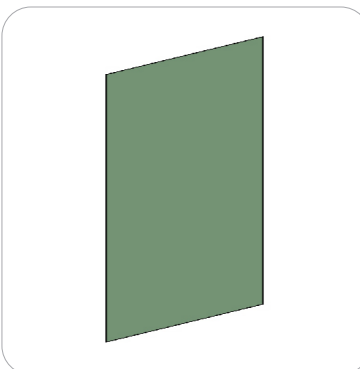
VF-K-27-K-G x1

Kit Components

VF-K-27

VECTOR BACKWALL
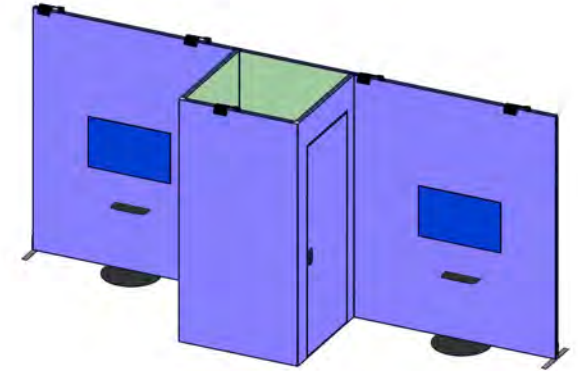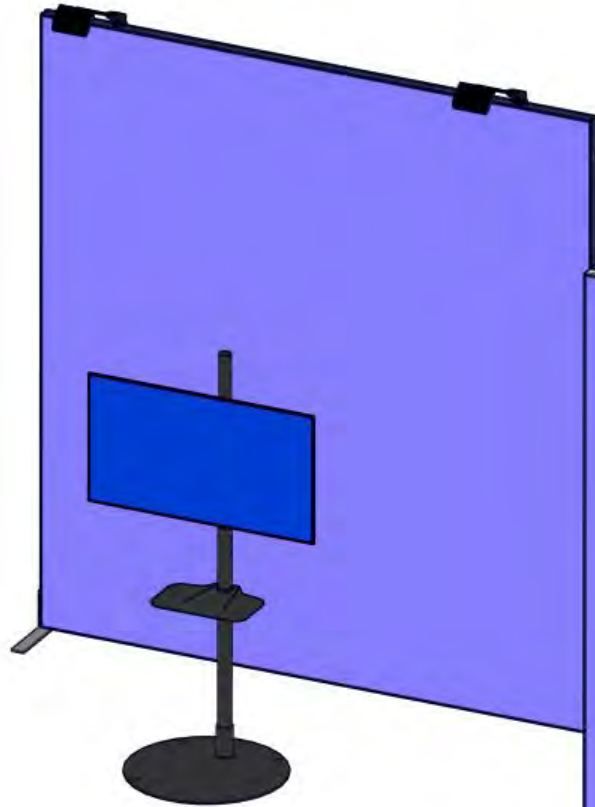
50MM CLOSET

VECTOR BACKWALL

FREESTANDING-SPLIT-MM-2
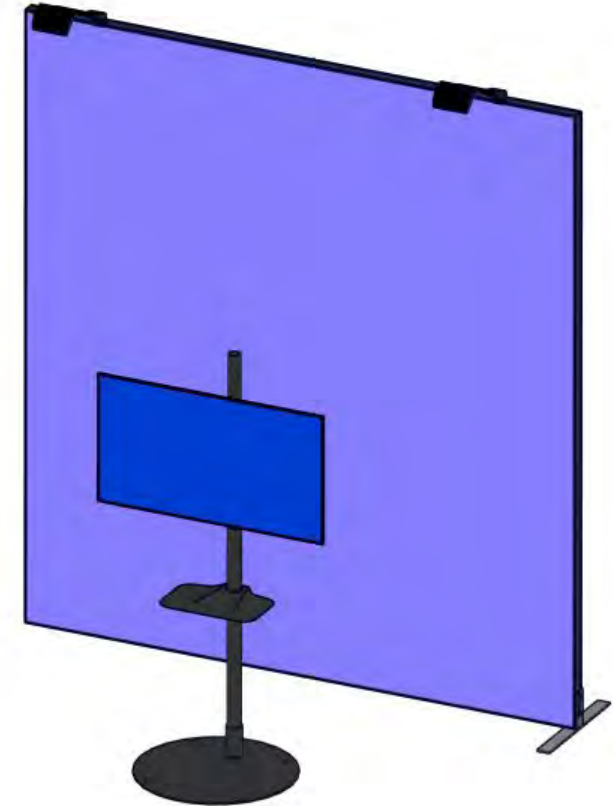
FREESTANDING-SPLIT-MM-2

Closet Assembly

PHFC4-2400-MCB9-MCB9

PHFC2-1200-MCB9-MCB9

CB9
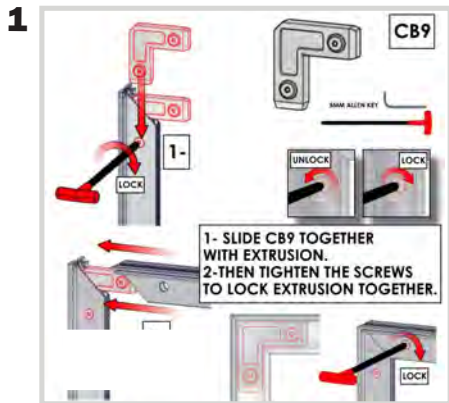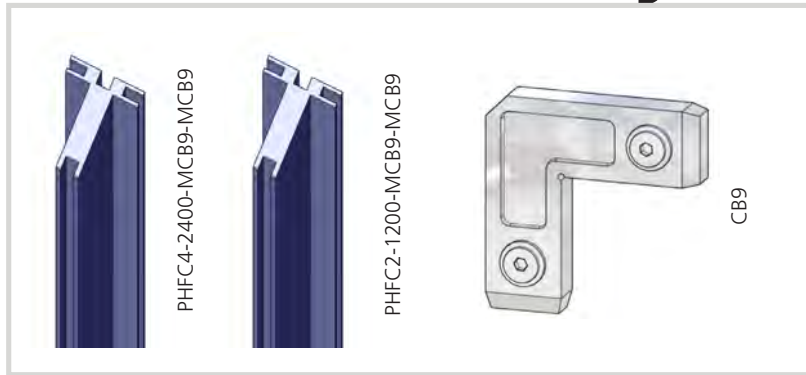
Attach the back frame of the closet together using the Allen Tool and the CB9 Connectors.
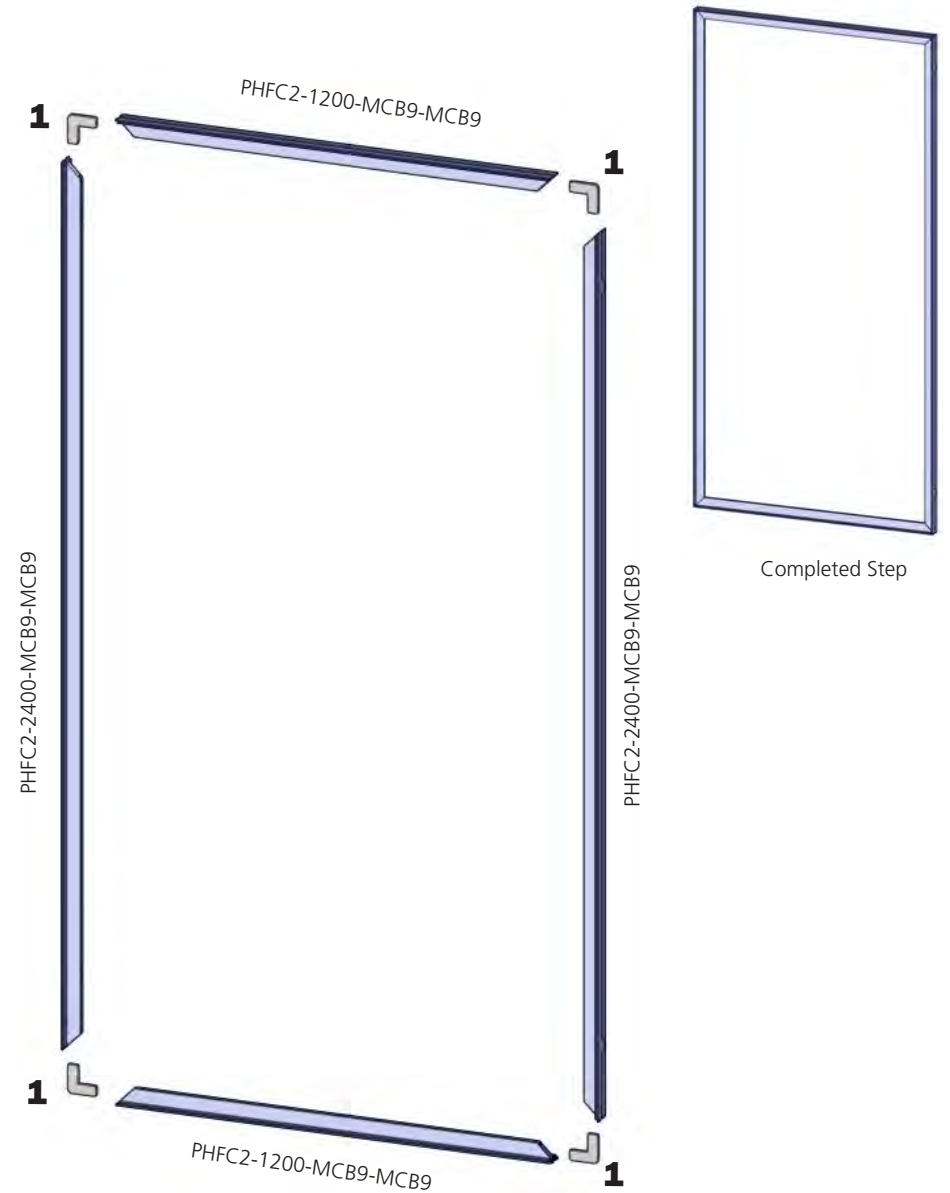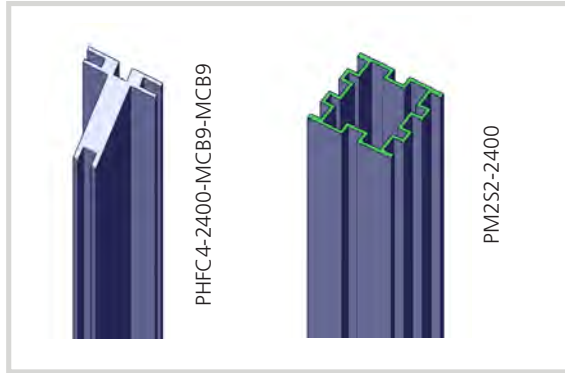
PHFC2-1200-MCB9-MCB9

PHFC2-2400-MCB9-MCB9

PHFC2-2400-MCB9-MCB9

PHFC2-1200-MCB9-MCB9

Completed Step

Closet Assembly

PHFC4-2400-MCB9-MCB9

PM2S2-2400

WARNING!
Locks should ONLY be turned a quarter turn, so as not to STRIP the locks by over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.

WARNING!
Locks should ONLY be turned a quarter turn, so as not to STRIP the locks by over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY
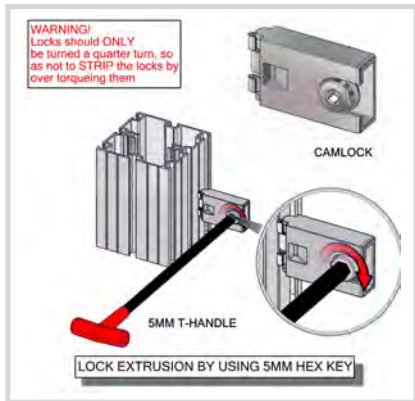
These will attach the PHFC2 to the side of the PMFC2. So you can connect your PM2S2s to the frame from the previous step.

Completed Step

2   2   2   2

PM2S2-2400

PHFC4-2400-MCB9-MCB9

PHFC4-2400-MCB9-MCB9

PM2S2-2400

Closet Assembly

FC-2386

PM2S2-2400

3
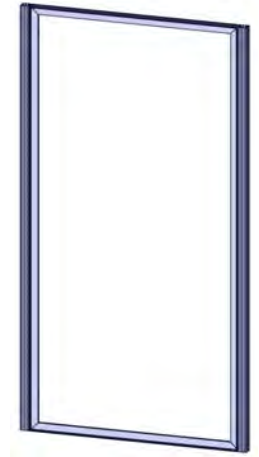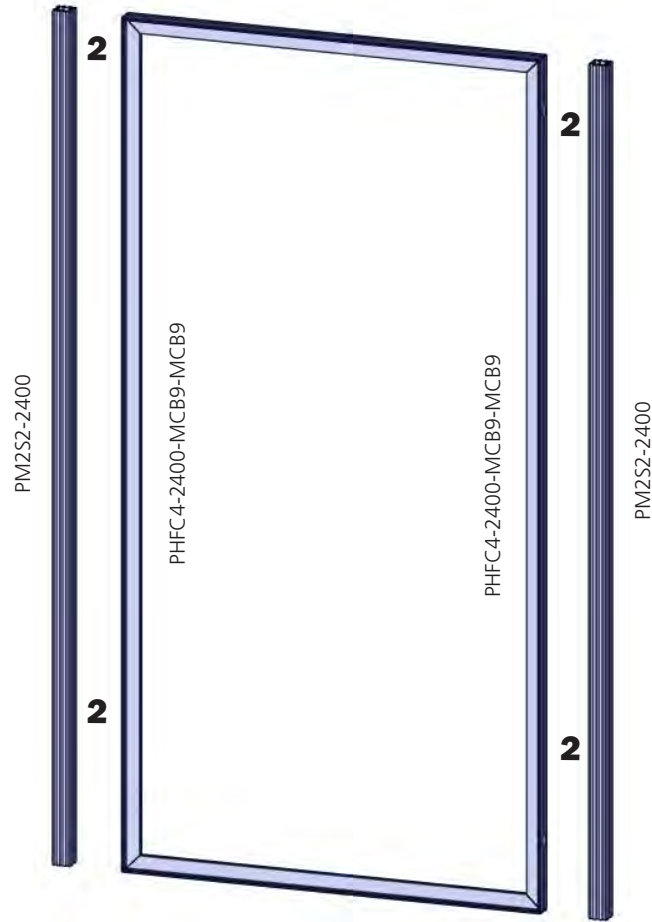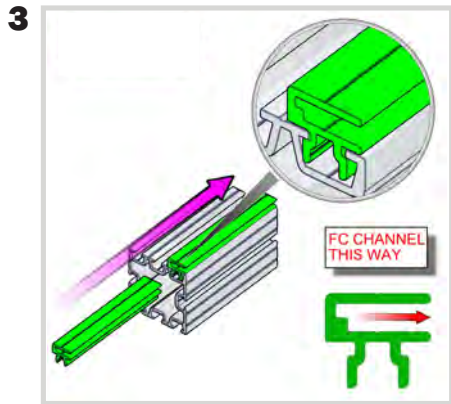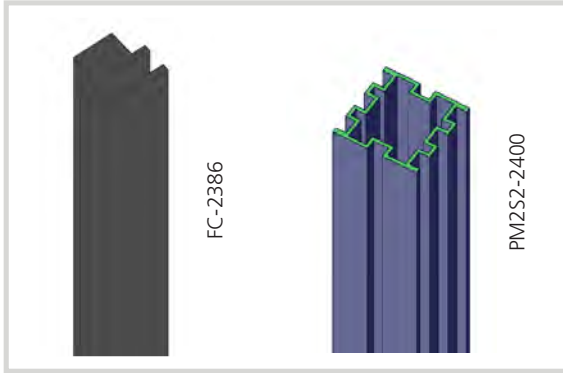
Slide FC Channels into the outside channels of the PM2S2 facing forward.

FC CHANNEL THIS WAY

3
3
3
3

FC-2386

FC-2386

PM2S2-2400

Completed Step

Closet Assembly

VF-FCDOOR-50MM-1200-L
PM2S2-2400
PHFC2-1200-L-L

4

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

LOCK EXTRUSION BY USING 5MM ALLEN KEY
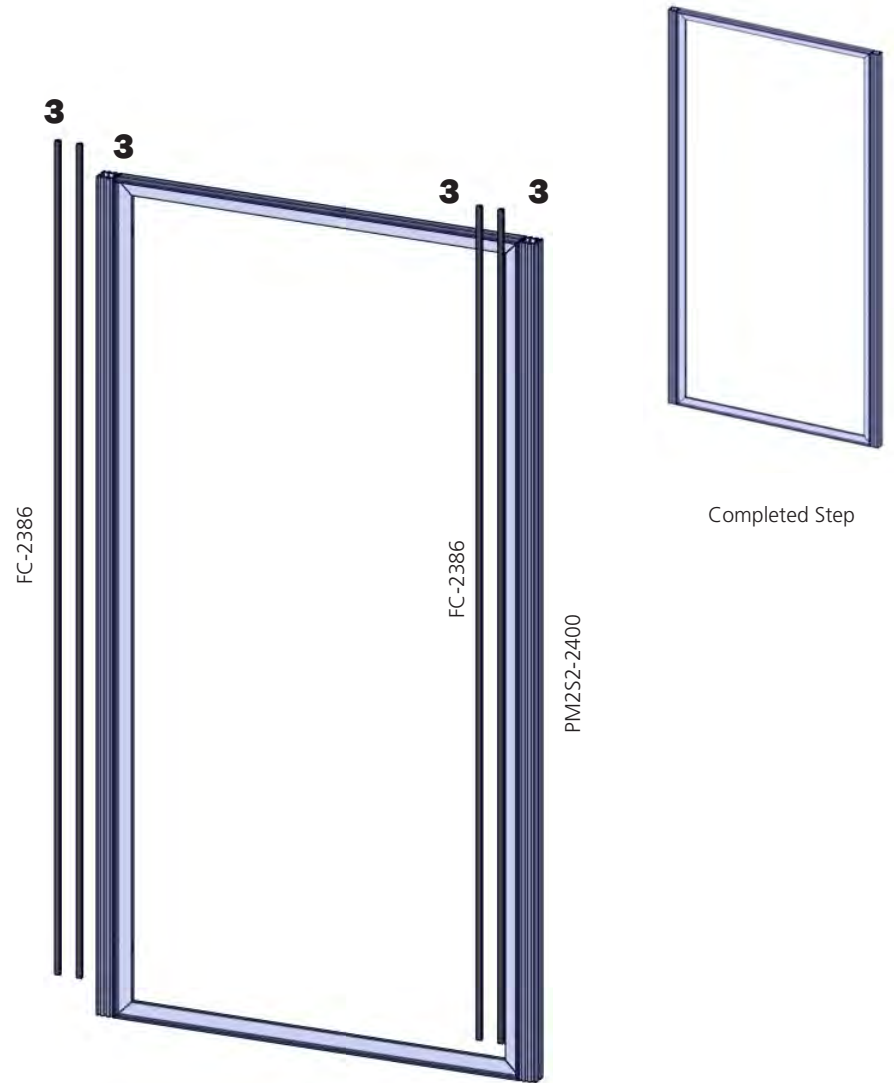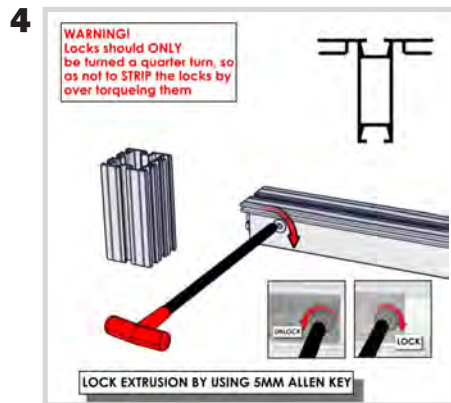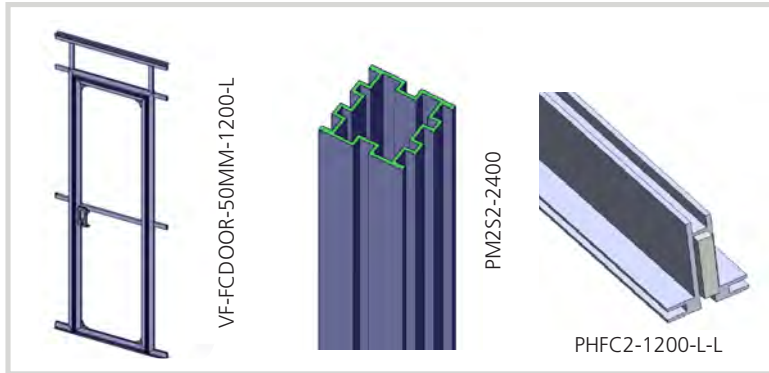
Using the 5mm Allen-T attach the PHFC2s at the top and bottom of your door frame to two of your PM2S2s and the PM2S2s on the other
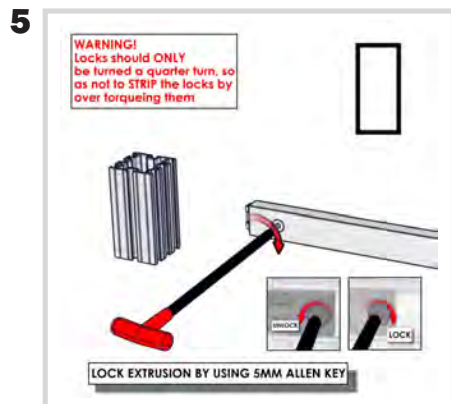
5

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

LOCK EXTRUSION BY USING 5MM ALLEN KEY

Using the 5mm Allen-T attach the PH1s on your door frame to your PM2S2s.

4
4
5
5
4
4

PHFC2-1200-L-L
PM2S2-2400
VF-FCDOOR-50MM-1200-L
PM2S2-2400
PHFC2-1200-L-L
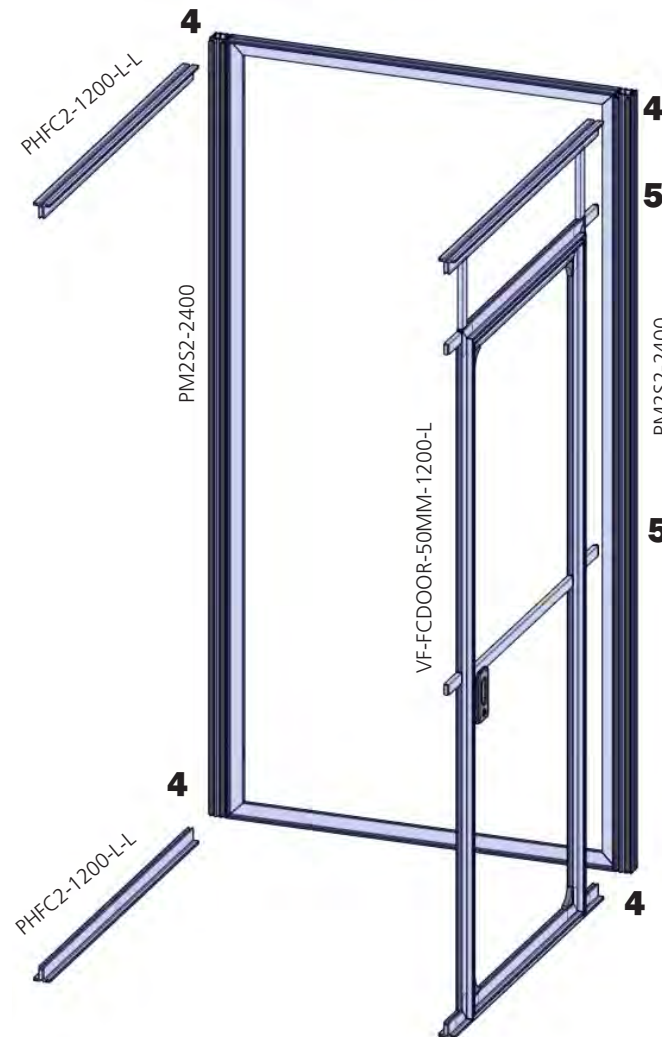
Door frame comes assembled
DO NOT DISASSEMBLE

Completed Step

9

Closet Assembly

PMFC2-90

VF-FCDOOR-50MM-1200-L

PHFC2-1200-L-L

6

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

5MM ALLEN KEY

LOCK EXTRUSION BY USING 5MM ALLEN KEY
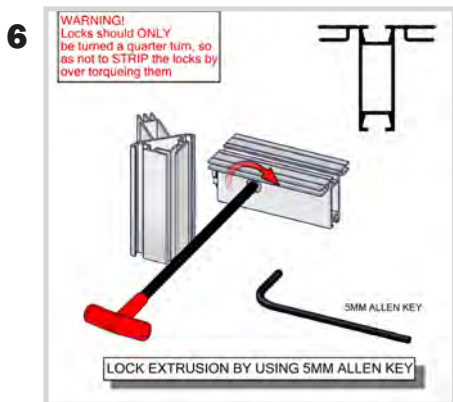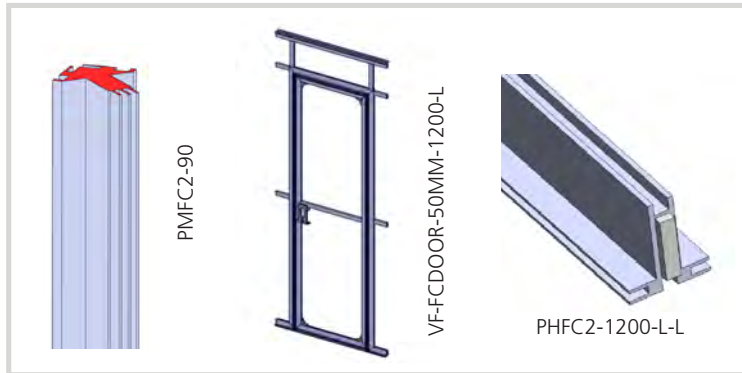
Attach the PHFC2s of your closet to the PMFC2-90s.

7

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

UNLOCK   LOCK

LOCK EXTRUSION BY USING 5MM ALLEN KEY
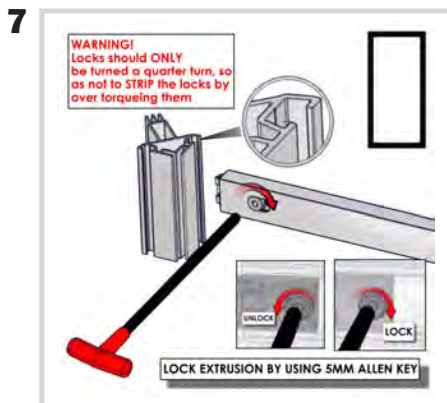
Using the 5mm Allen-T attach the PH1s on your door frame to your PMFC2-90s.

6

6

7

PMFC2-90

PMFC2-90

7

6

6

6

Completed Step

Closet Assembly

PMFC2-90

PMFC2-90-CAP

8

PMFC2-90-CAP

INSERT CAP

INSERT CAP
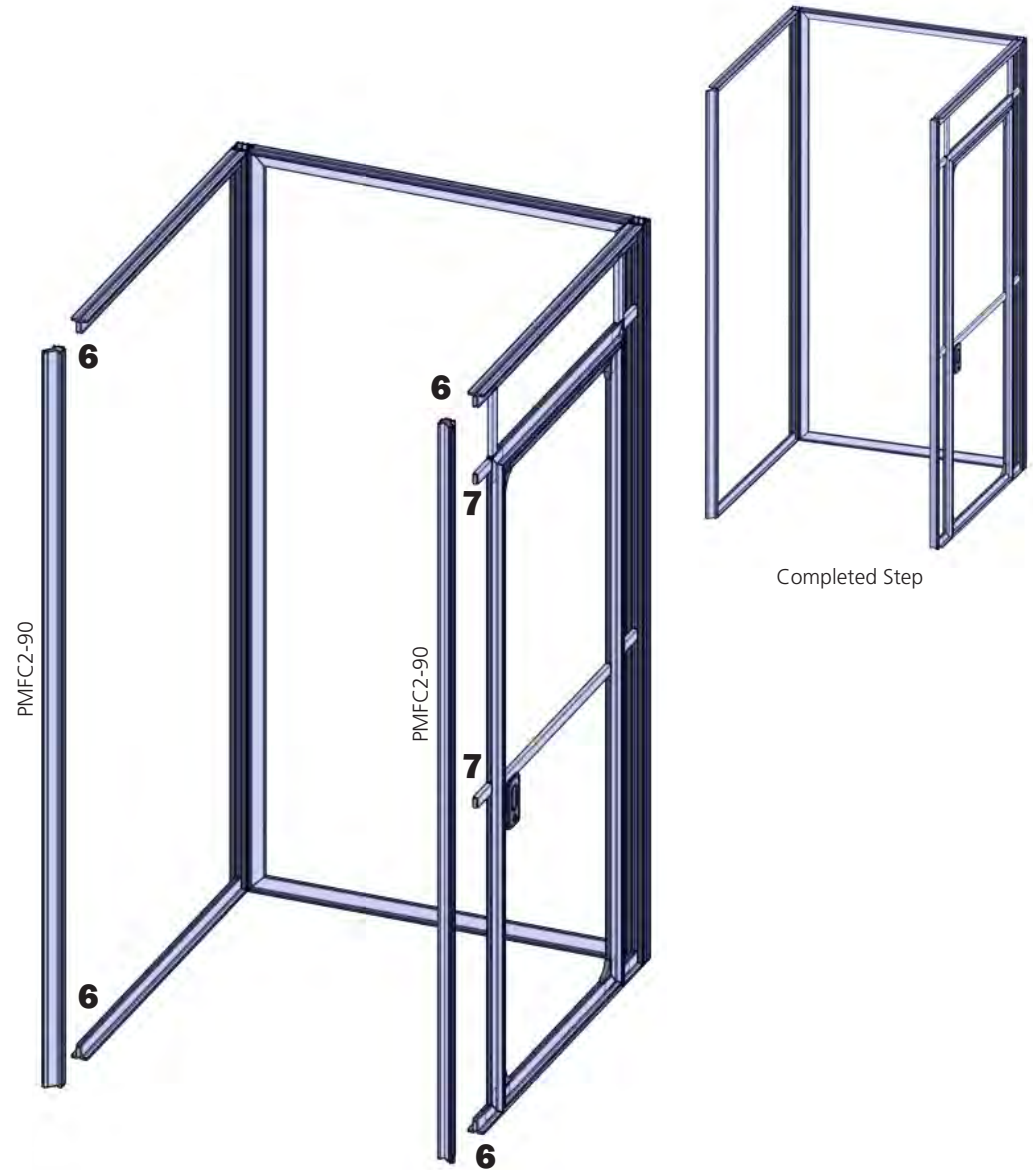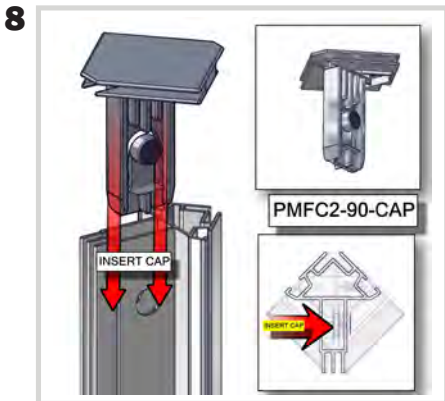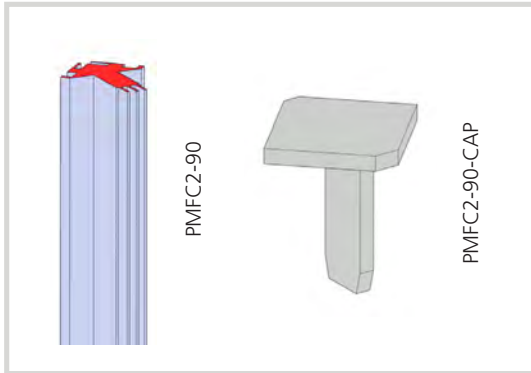
Push down on the snap button on your cap and push it into the top and bottom of PMFC2-90 posts until it snaps in place.

8

8

8

8

8

Completed Step

Closet Assembly

PMFC2-90

PHFC2-1189-L-L

LUM-LED2-ORL-B

9

WARNING!
Locks should ONLY
be turned a quarter turn, so
as not to STRIP the locks by
over torqueing them

5MM ALLEN KEY
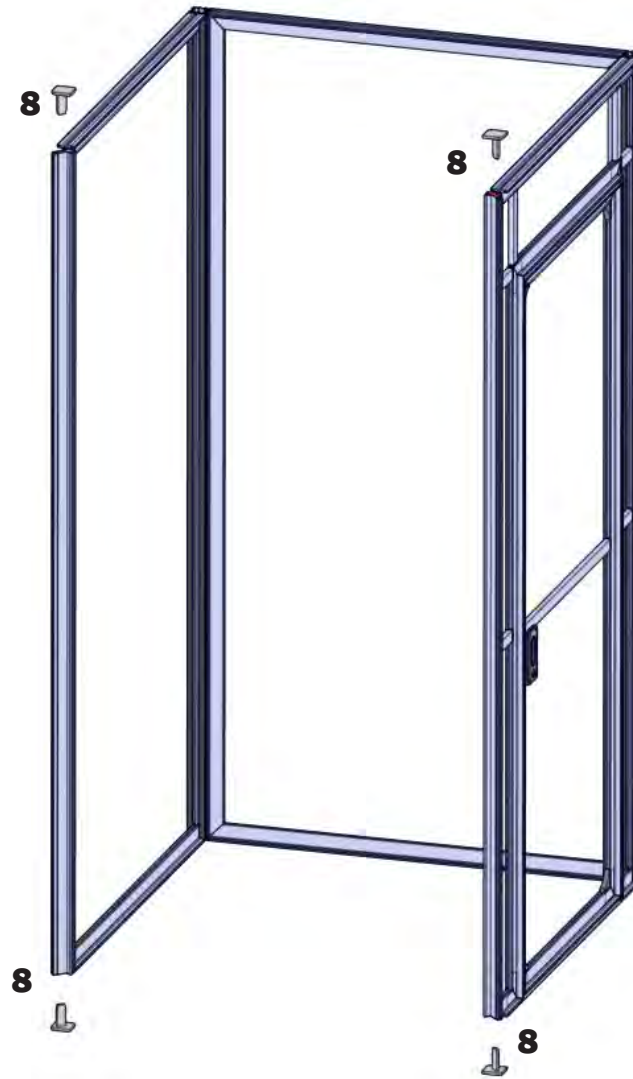
LOCK EXTRUSION BY USING 5MM ALLEN KEY
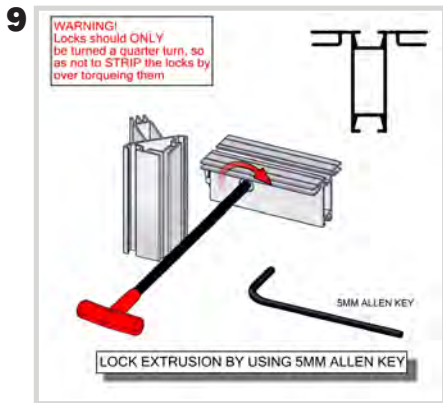
Finish your closet structure by
attaching your PHFC2s in the front
to your PMFC2-90s.

10

LUM-LED2-ORL LIGHT

1-

2-

Using the bottom clip attached to
the light slip the plastic bottom into
the chanel on top of the PHFC2.

10

9 PHFC2-1189-L-L

9

Completed Step

9 PHFC2-1189-L-L

9

9

Closet Graphic Application

VF-K-27-B-G

VF-K-27-C-G

VF-K-27-D-G

VF-K-27-E-G

VF-K-27-G-G

Completed Step

11 FCE-2 TO PHFC2

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.

Place the FCE-2 part of the graphic into the outer channels of the PHFC2.

12 FCE-2 TO FC

FABRIC

START ON FOUR CORNERS

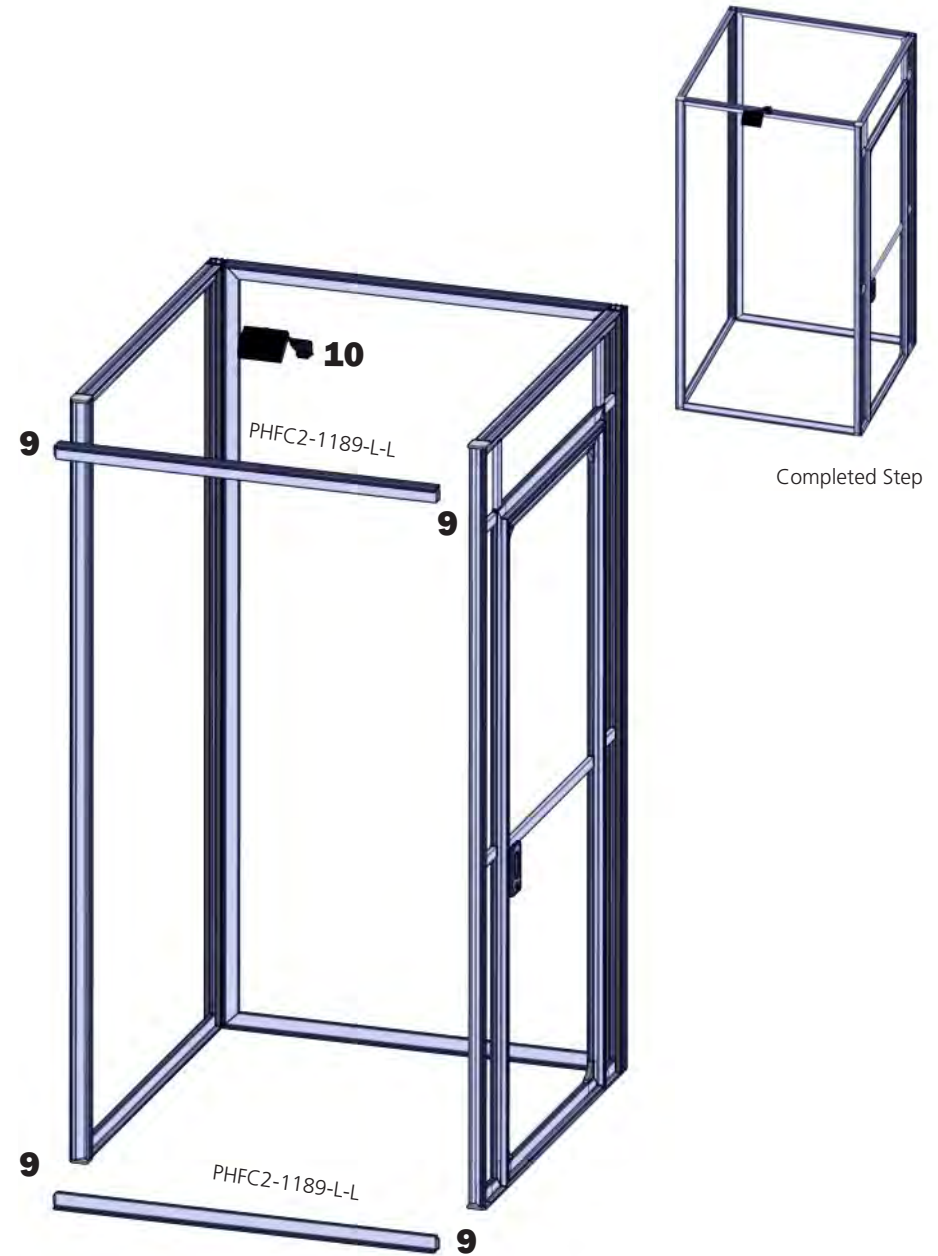1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.
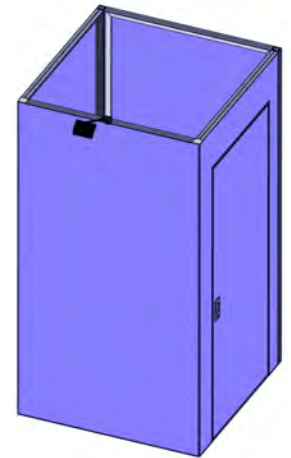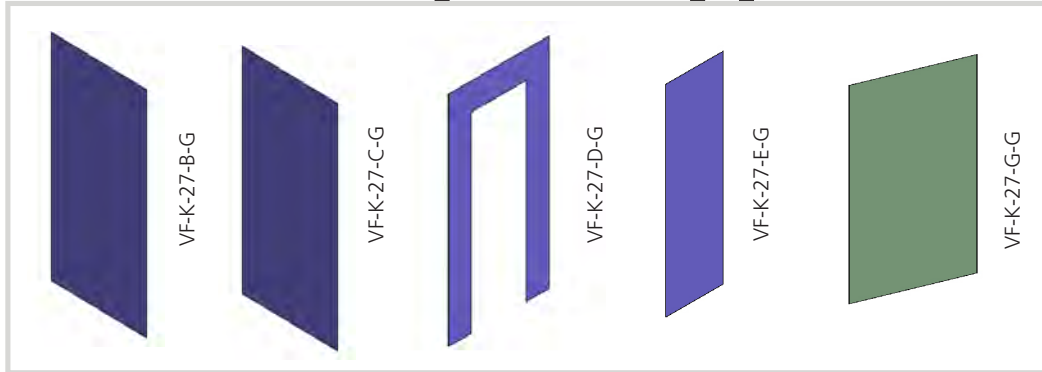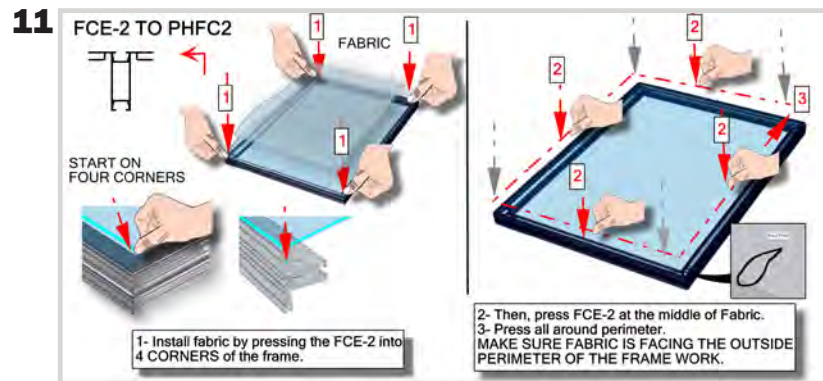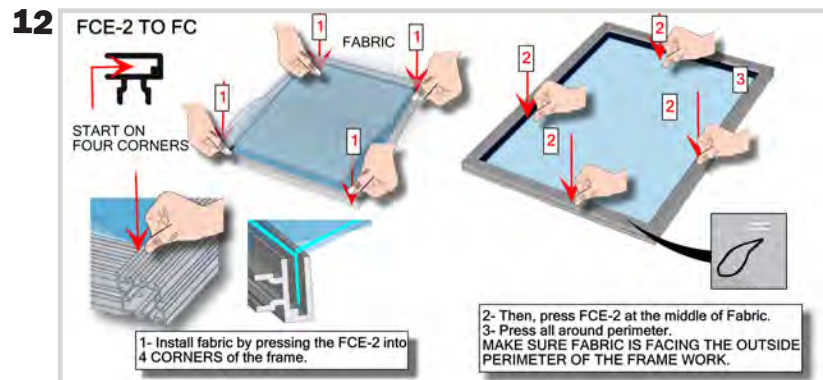
Place the FCE-2 part of the graphics into the FC channel that's attached to the PM2S2 extrusions.

Closet Graphic Application

VF-K-27-B-G VF-K-27-C-G VF-K-27-D-G VF-K-27-E-G VF-K-27-G-G

Completed Step

13

FABRIC GRAPHIC WITH FCE-2

FCE-2 4 SIDES

1-PUSH FABRIC GRAPHIC INTO ALLL 4 SIDES

TOP VIEW

Insert your graphics into the FCE channels of your PMFC2 extrusions.

13

Closet Liner Application

VF-K-27-H-G   VF-K-27-J-G   VF-K-27-I-G   VF-K-27-M-G   VF-K-27-K-G

14

FCE-2 TO PHFC2

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.
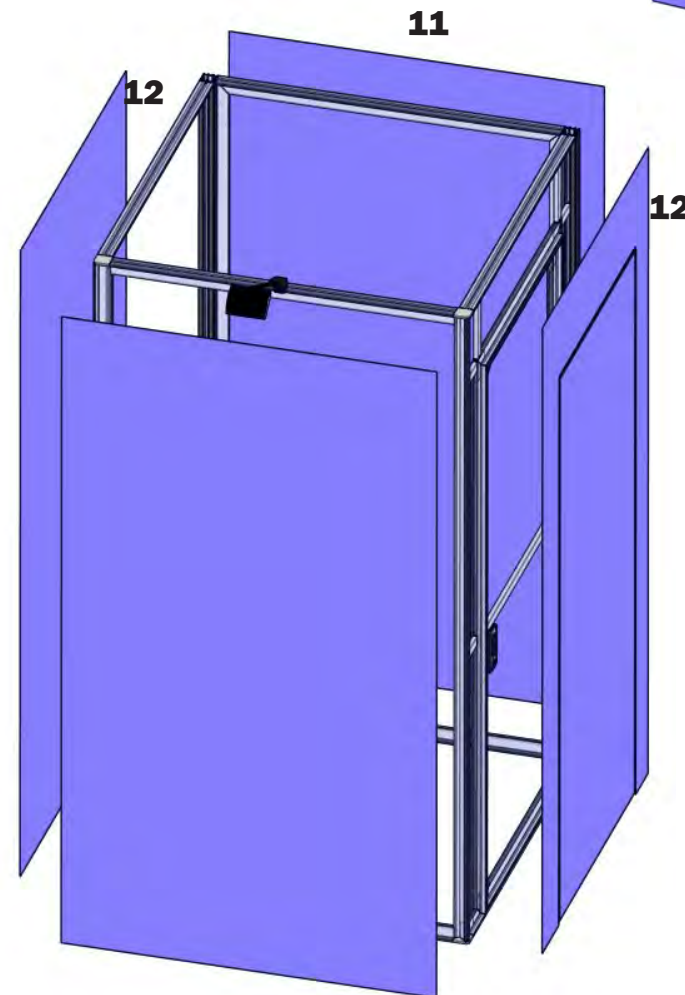
Place the FCE-2 part of the graphic into the outer channels of the PHFC2.

15

FCE-2 TO FC

FABRIC

START ON FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAME WORK.
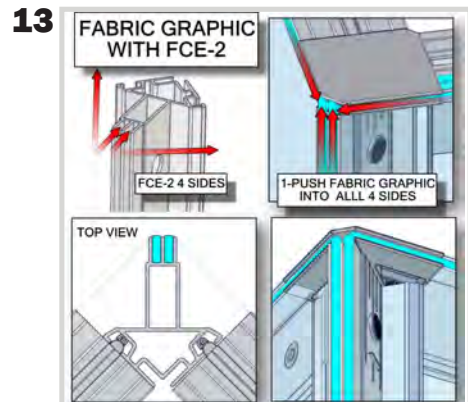
Place the FCE-2 part of the graphics into the FC channel that's attached to the PM2S2 extrusions.

Completed Step

14

15

15

Closet Liner Application

VF-K-27-B-G

VF-K-27-C-G

VF-K-27-D-G

VF-K-27-E-G

VF-K-27-G-G

Completed Step

16

FABRIC GRAPHIC WITH FCE-2

FCE-2 4 SIDES

1-PUSH FABRIC GRAPHIC INTO ALL 4 SIDES

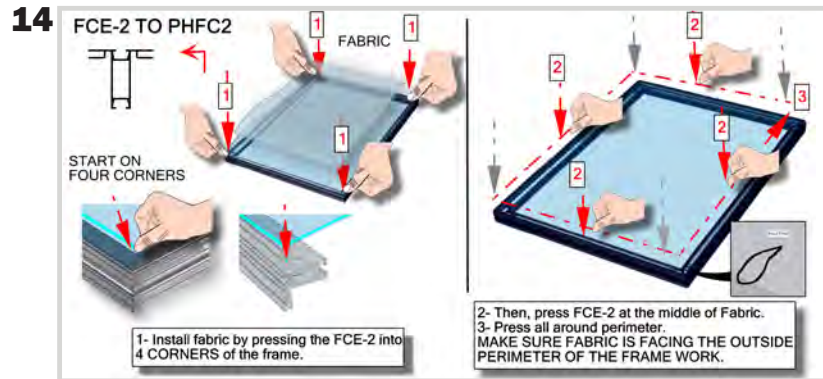TOP VIEW

Insert your graphics into the FCE channels of your PMFC2 extrusions.

16

Backwall Assembly

For this step you will need:

PHFC4-2400-MCB9-MCB9-SIDE

PHFC2-2200-MCB9-MCB9

CB9

17

CB9

5MM ALLEN KEY

1-

UNLOCK   LOCK

LOCK

1- SLIDE CB9 TOGETHER WITH EXTRUSION.
2- THEN TIGHTEN THE SCREWS TO LOCK EXTRUSION TOGETHER.

2-

LOCK

Attach the backwall together using the Allen Tool and the CB9 Connectors.

Completed Step

17

PHFC2-2200-MCB9-MCB9

17

PHFC4-2400-MCB9-MCB9-SIDE

PHFC4-2400-MCB9-MCB9SIDE

17

17

PHFC2-2200-MCB9-MCB9

17

Backwall Assembly

For this step you will need:

LUM-LED2-ORL-B

SW-FOOT-500-LN

18

1- LOOSE THUMBSCREWS

LN-100

2- SLIDE EXTRUSION INTO LN-100

3- GENTLY TIGHTEN SW-FOOT IN PLACE

SW-FOOT
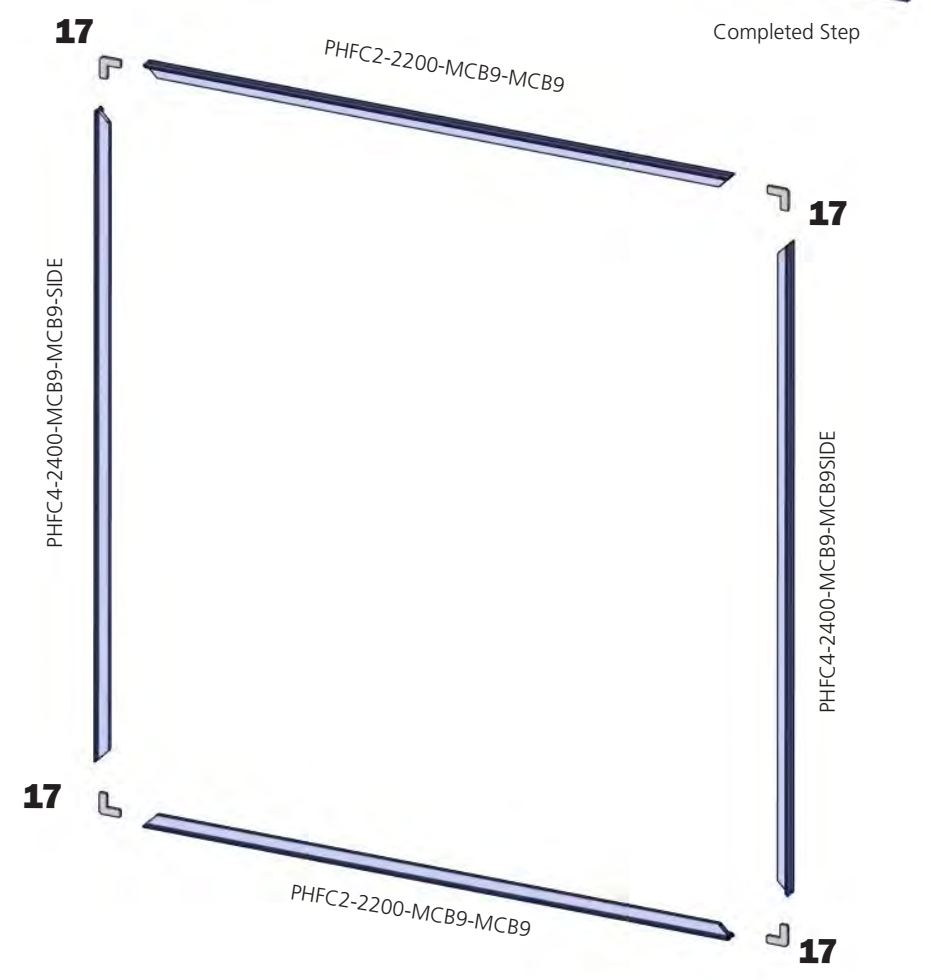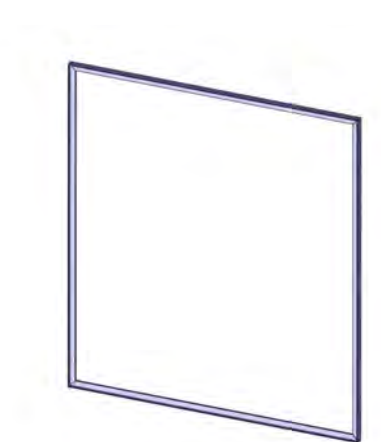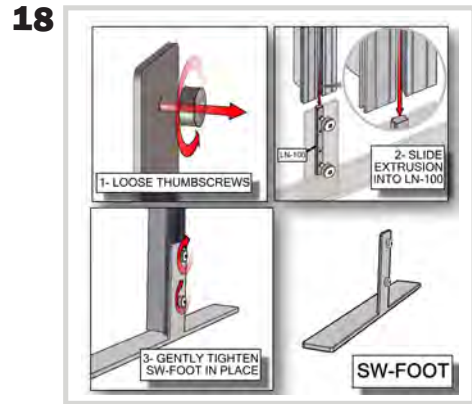
Slide the baseplate on the side of the extrusion in the channel then screw in place with the thumbscrew.

19

LUM-LED2-ORL LIGHT

1-

2-

Using the bottom clip attached to the light slip the plastic bottom into the chanel on top of the PHFC2.

19

19

Completed Step

18
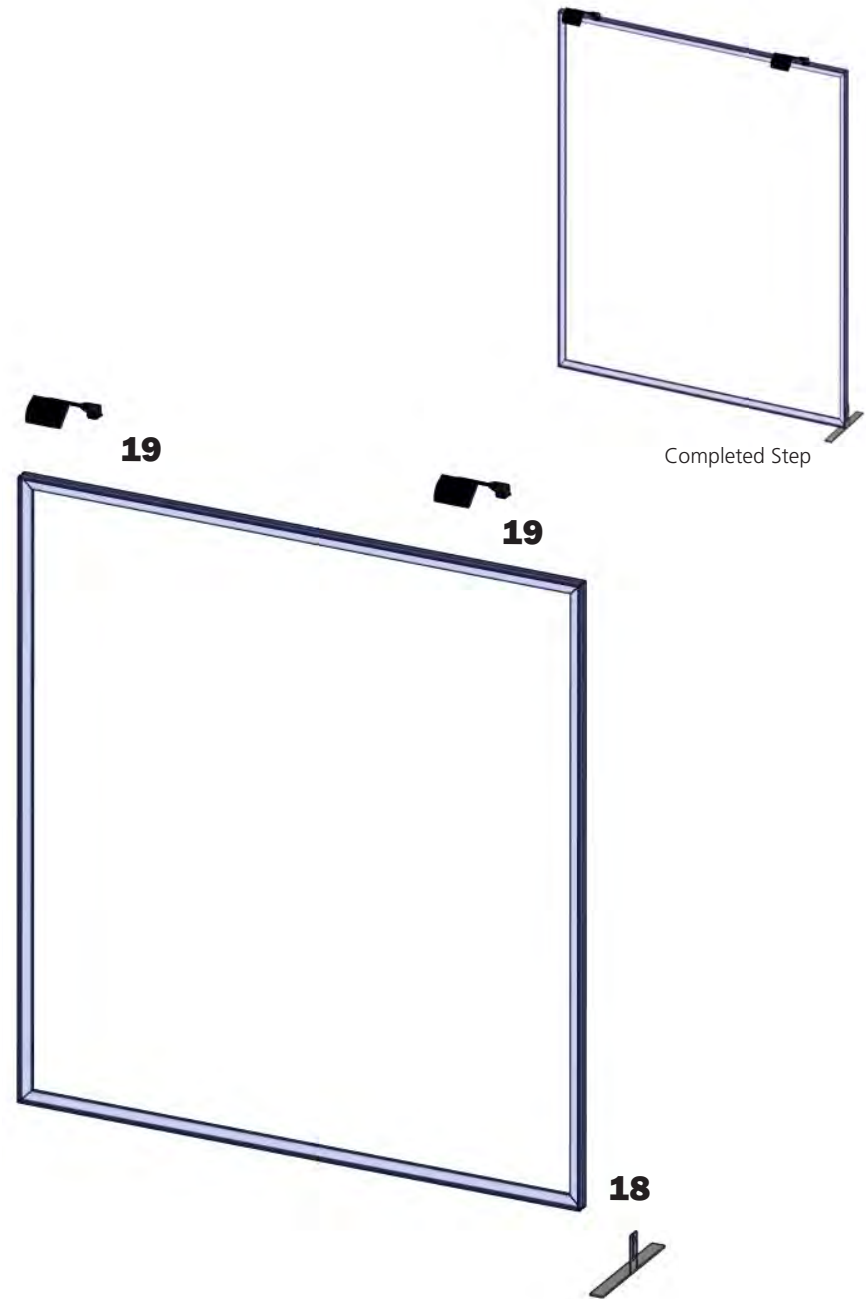
Closet and Backwall Assembly
For this step you will need:
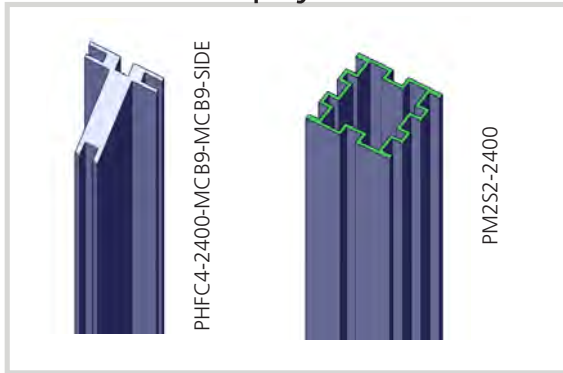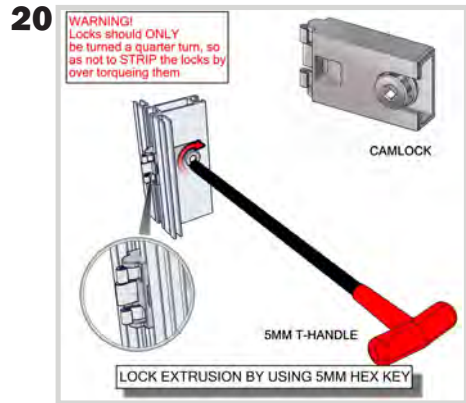
PHFC4-2400-MCB9-MCB9-SIDE

PM2S2-2400

20

WARNING!
Locks should ONLY be turned a quarter turn, so as not to STRIP the locks by over torqueing them

CAMLOCK

5MM T-HANDLE

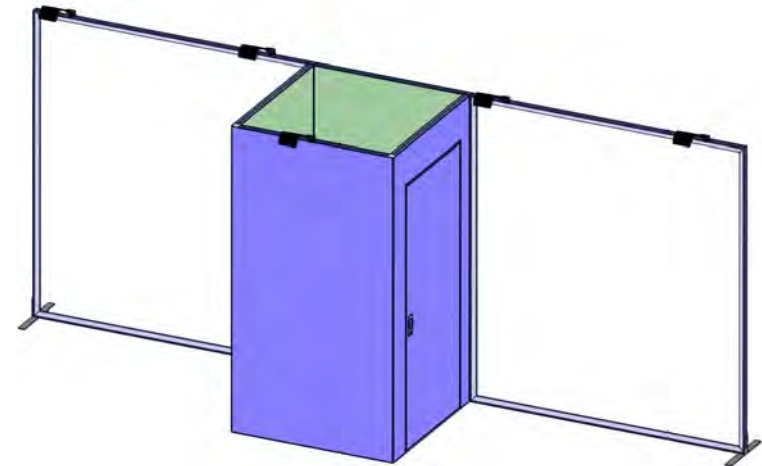LOCK EXTRUSION BY USING 5MM HEX KEY

Inside the PHFC2s are cam locks.

WARNING!
Locks should ONLY be turned a quarter turn, so as not to STRIP the locks by over torqueing them

CAMLOCK

5MM T-HANDLE

LOCK EXTRUSION BY USING 5MM HEX KEY
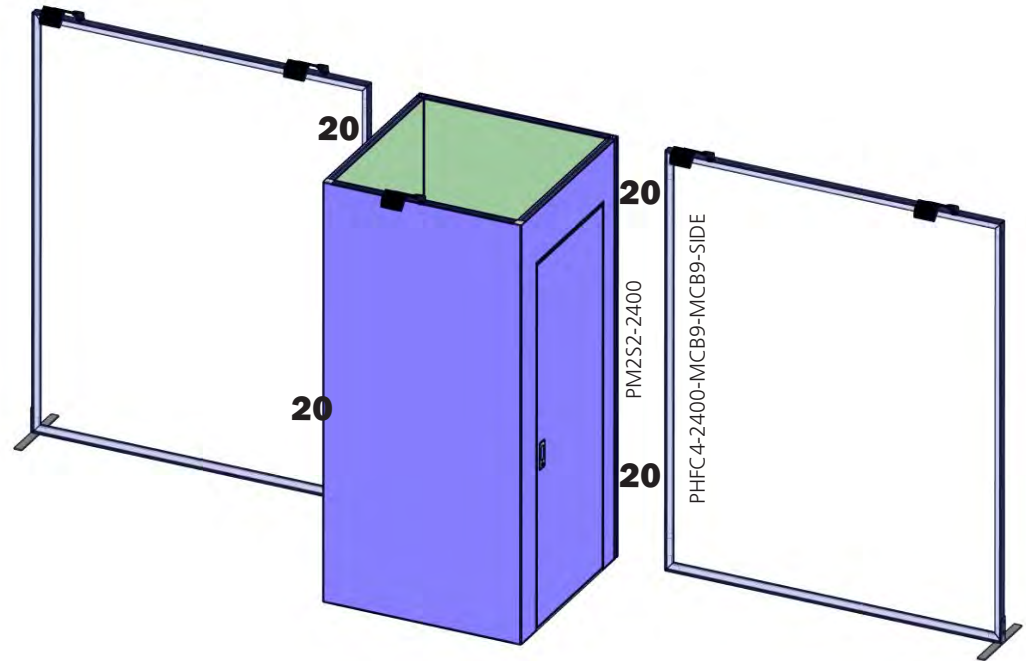
These will attach the PHFC2 to the side of the PMFC2. So you can connect your closet and backwall.

Completed Step

20
20
20
20
20

PM2S2-2400

PHFC4-2400-MCB9-MCB9-SIDE
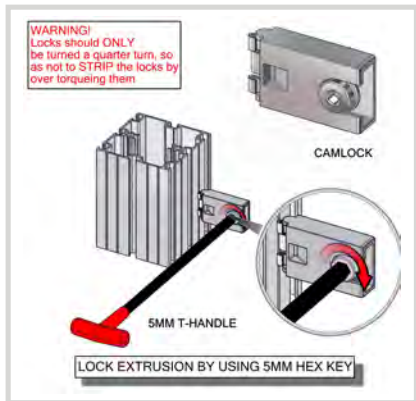
Backwall Graphic & Liner Application

For this step you will need:

VF-K-27-A-G

VF-K-27-F-G

VF-K-27-L-G

VF-K-27-N-G

Completed Step

21

FCE-2 TO PHFC2

FABRIC

START ON
FOUR CORNERS

1- Install fabric by pressing the FCE-2 into 4 CORNERS of the frame.

2- Then, press FCE-2 at the middle of Fabric.
3- Press all around perimeter.
MAKE SURE FABRIC IS FACING THE OUTSIDE PERIMETER OF THE FRAMEWORK.
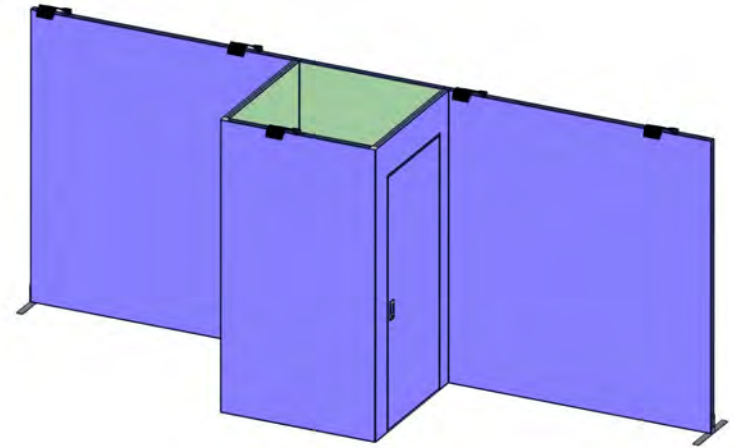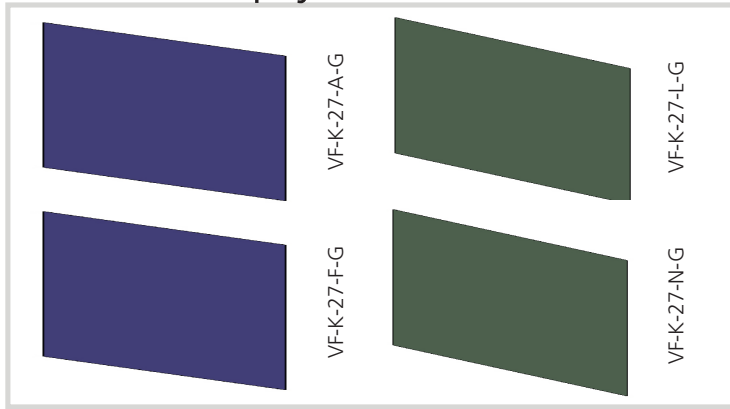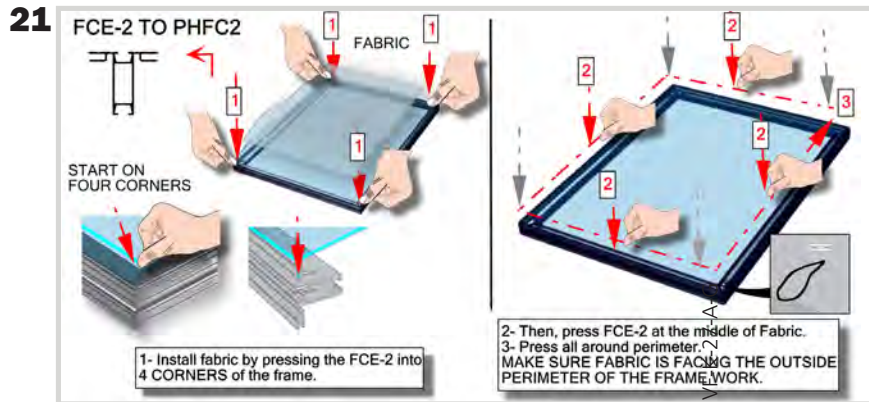
Place the FCE-2 part of the graphic and liner into the outer channels of the PHFC2.

21

21

21

21
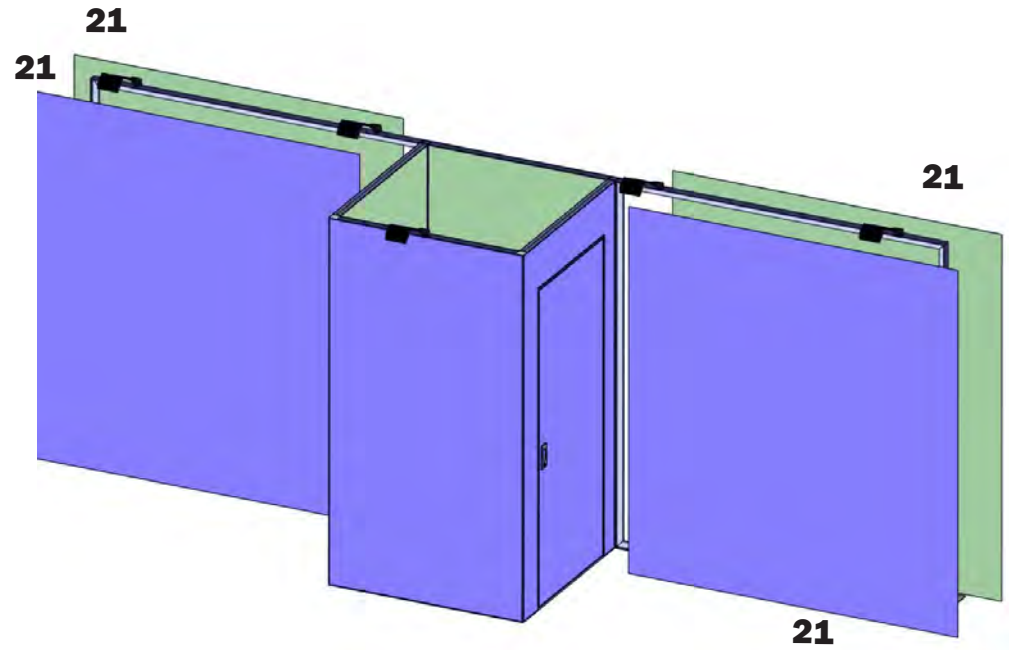
Completing your Kit
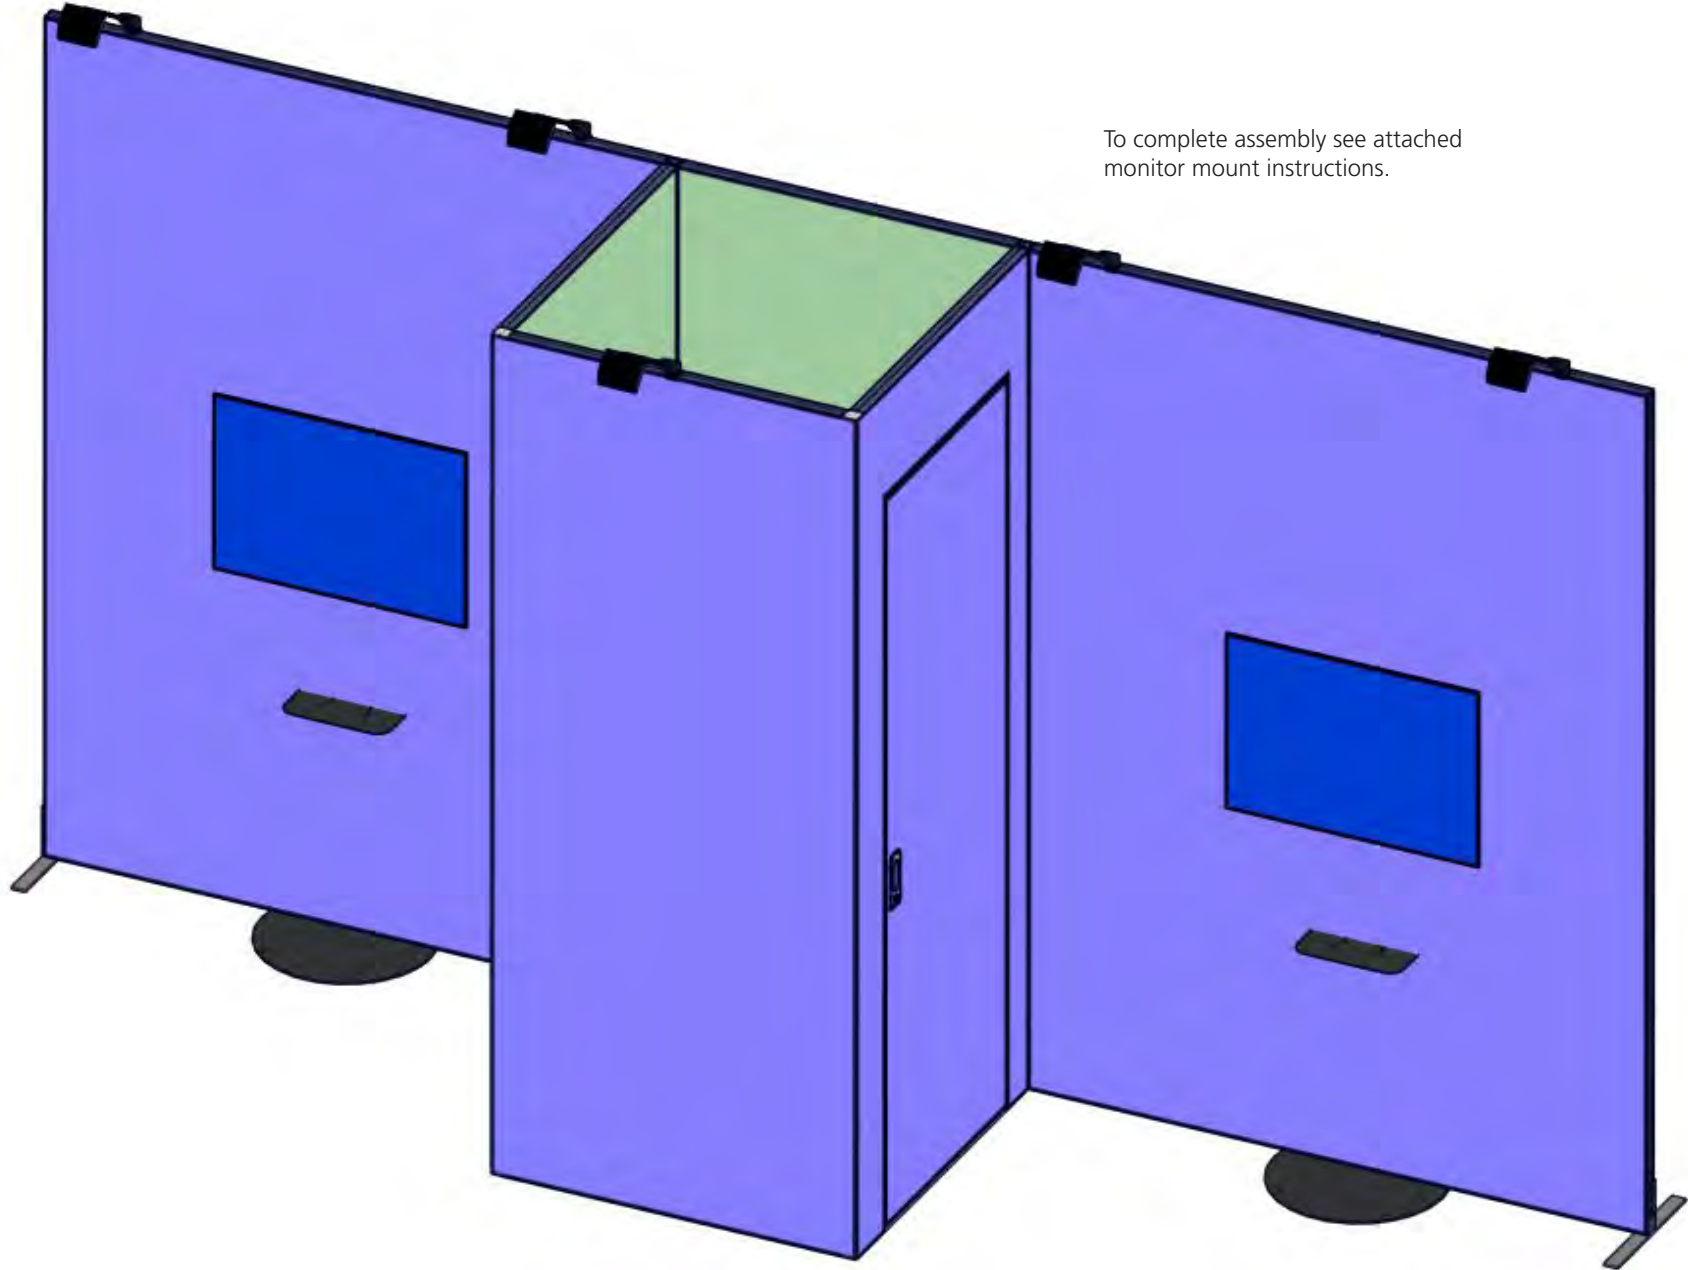
To complete assembly see attached monitor mount instructions.

Free Standing Split Monitor Kiosk

FREESTANDING-SPLIT-MM-2

The Freestanding Moniitor Kiosk supports large screen LCDs and plasma flat panel monitors for use in trade show exhibits, at events and in all types of interior spaces. Video is an excellent way to show your large scale products, solutions and explain your services face to face. This elegant, stand-alone display supoorts a TV with a maximum weight of 40 lbs.

features and benefits:

- Standard black aluminum post and base
- Quick to set up
- Weighted base for added stability
- Supports large monitor 32-70""
- Max TV weight = 40 lbs
- Monitor not included

- Kit includes: Top pole, bottom pole, counter, base, monitor mount assembly
- Lifetime hardware warranty against manufacturer defects

dimensions:

| Hardware	
Assembled unit: 26.25"w x 75.25"h x 23.56"d 667mm(w) x 1912mm(h) x 599mm(d) Approximate weight: 45 lbs / 21 kg	
Shipping	**additional information:**
Packing case(s): 1 Box(es) Shipping dimensions: 34"l x 28"h x 7"d 864mm(l) x 712mm(h) x 178mm(d) Approximate total shipping weight: 50 lbs / 23 kg	When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided.

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

Included In Your Kit

Tools, Components, & Connectors
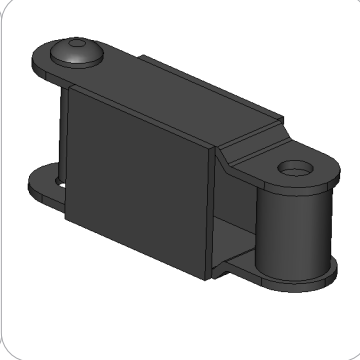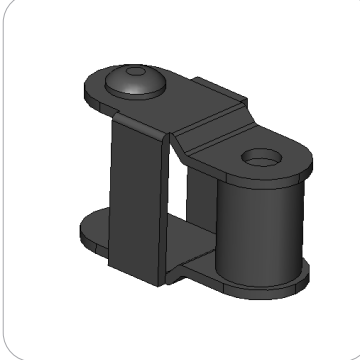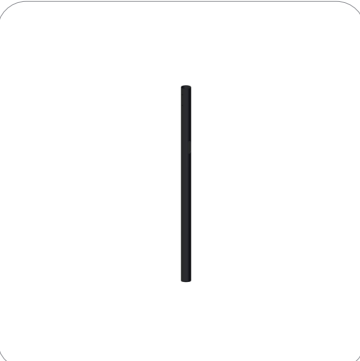
TOP POLE x1
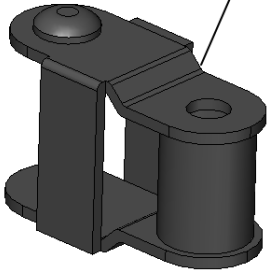
BOTTOM POLE x1

COUNTER x1
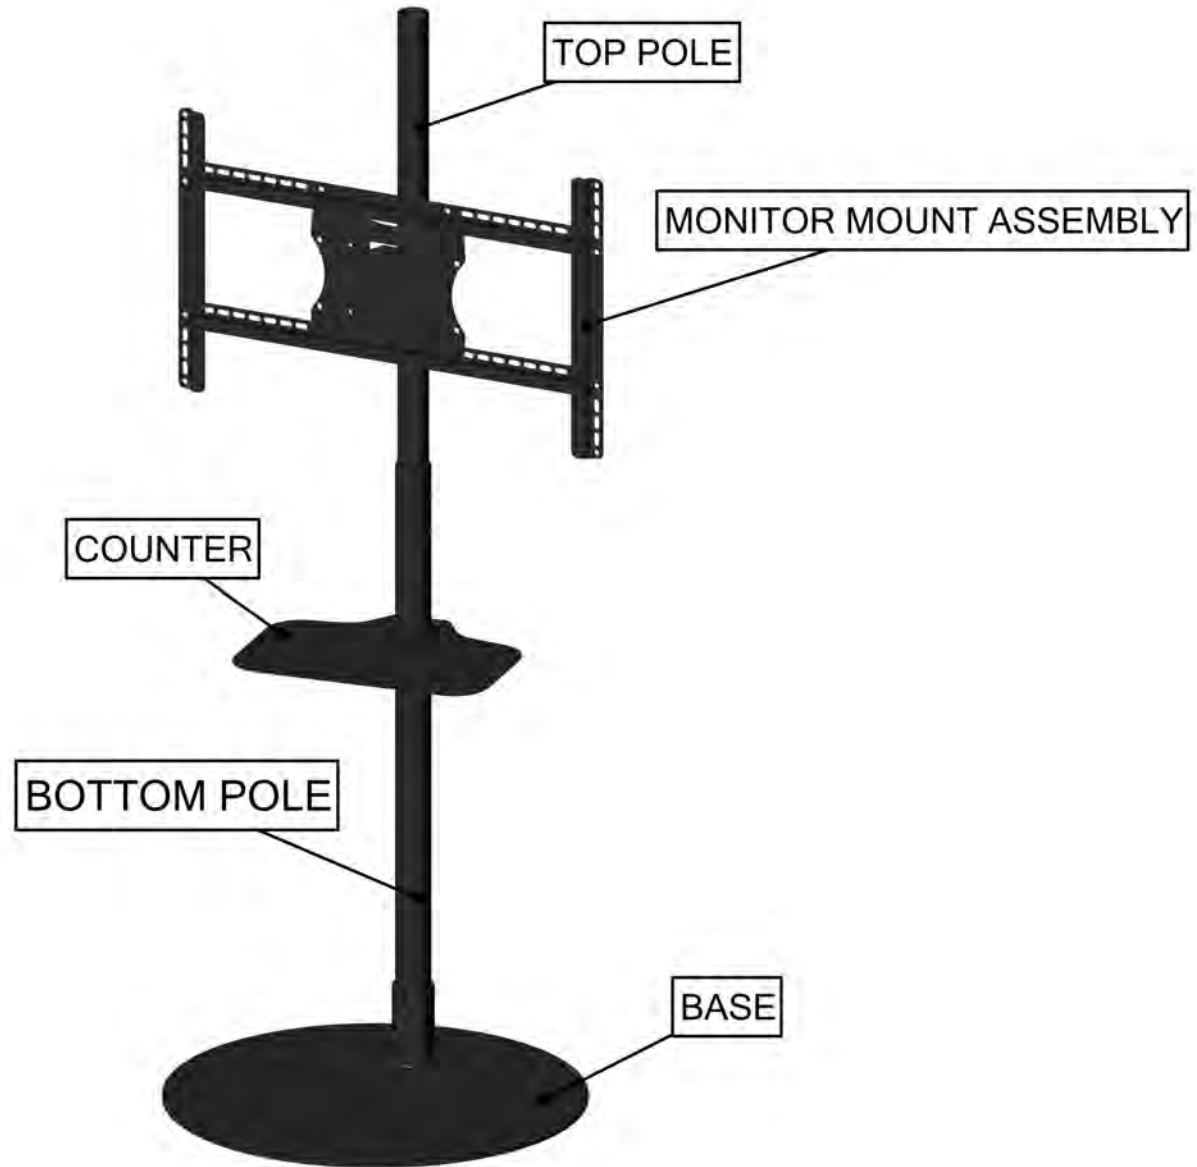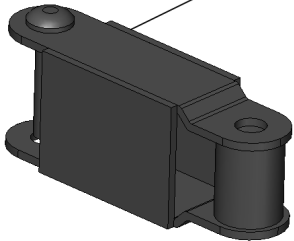
FREESTANDING-SPLIT-EXT-2 x1

FREESTANDING-SPLIT-EXT-4 x1

Exploded Diagram

FREESTANDING-SPLIT-MM-2

FREESTANDING -SPLIT-EXT-2

FREESTANDING-SPLIT-EXT-4

TOP POLE

MONITOR MOUNT ASSEMBLY

COUNTER

BOTTOM POLE

BASE

Kit Assembly

Step by Step

Step 1.

Gather the components to build the bottom section. Use the Exploded View for part labels.

Step 2.

Gather the components to build the top section. Use the Exploded View for part labels.

Step 3.

Gather the components to install counter. Use the Exploded View for part labels.

ADJUST TO DESIRED MEASUREMENT

Step 4.

Gather the components to attach monitor bracket. Use the Exploded View for part labels.

Reference Connection Method(s) 1 for more details.

GROMMET HOLE FOR CORDS

Kit Assembly

Step by Step

Step 5.

Gather the components to build the monitor supports. Use the Exploded View for part labels.

Step 6.

Gather the components to attach supports to the monitor. Use the Exploded View for part labels.

Step 7.

Setup is complete.

Step 8.

2"& 4" EXTENTION HARDWARE

The extention parts help extend monitor 2" or 4" out from the stand, if needed for placement behind display or any other obstruction. More dietails follow this page.
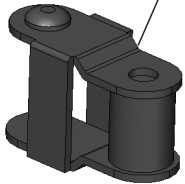
FREESTANDING -SPLIT-EXT-2

FREESTANDING-SPLIT-EXT-4

Kit Assembly

Step by Step

Step 9.

Gather the components to attach 2" monitor supports. Use the Exploded View for part labels.
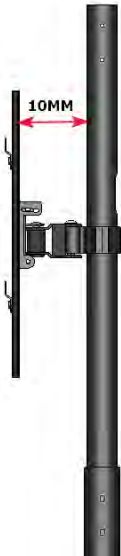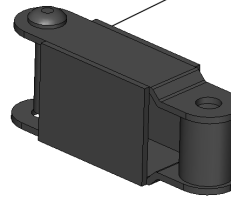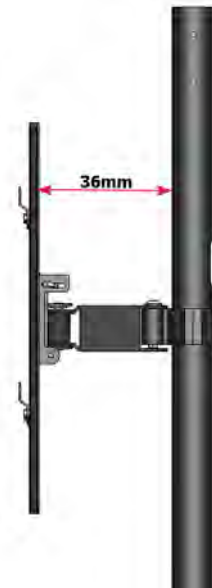
FREESTANDING -SPLIT-EXT-2

10MM

Step 10.

Gather the components to attach 4" supports to the monitor. Use the Exploded View for part labels.

FREESTANDING-SPLIT-EXT-4

36mm

Connection Methods

Connection Method 1: ATTACH MOUNT TO STAND

First, attach bracket to stand using both hands to hold in place. Once front and back brackets are lined up, insert bolts. Tighten to ensure monitor mount does not move. Do not over tighten, may damage stand or hardware. Monitor should be attached last. Do not try to attach brackets with monitor attached. This may lead to damaging monitor or injury.

Connection Method 2: ATTACH 2" FREESTANDING-SPLIT-EXT-2

First, attach bracket to stand using both hands to hold in place. Once front and back brackets are lined up, insert bolts. Tighten to ensure monitor mount does not move. Do not over tighten, may damage stand or hardware. Monitor should be attached last. Do not try to attach brackets with monitor attached. This may lead to damaging monitor or injury.

Connection Method 3: ATTACH 4" FREESTANDING-SPLIT-EXT-4

First, attach bracket to stand using both hands to hold in place. Once front and back brackets are lined up, insert bolts. Tighten to ensure monitor mount does not move. Do not over tighten, may damage stand or hardware. Monitor should be attached last. Do not try to attach brackets with monitor attached. This may lead to damaging monitor or injury.