OKASHA®
Make your life Smart

Super Smart
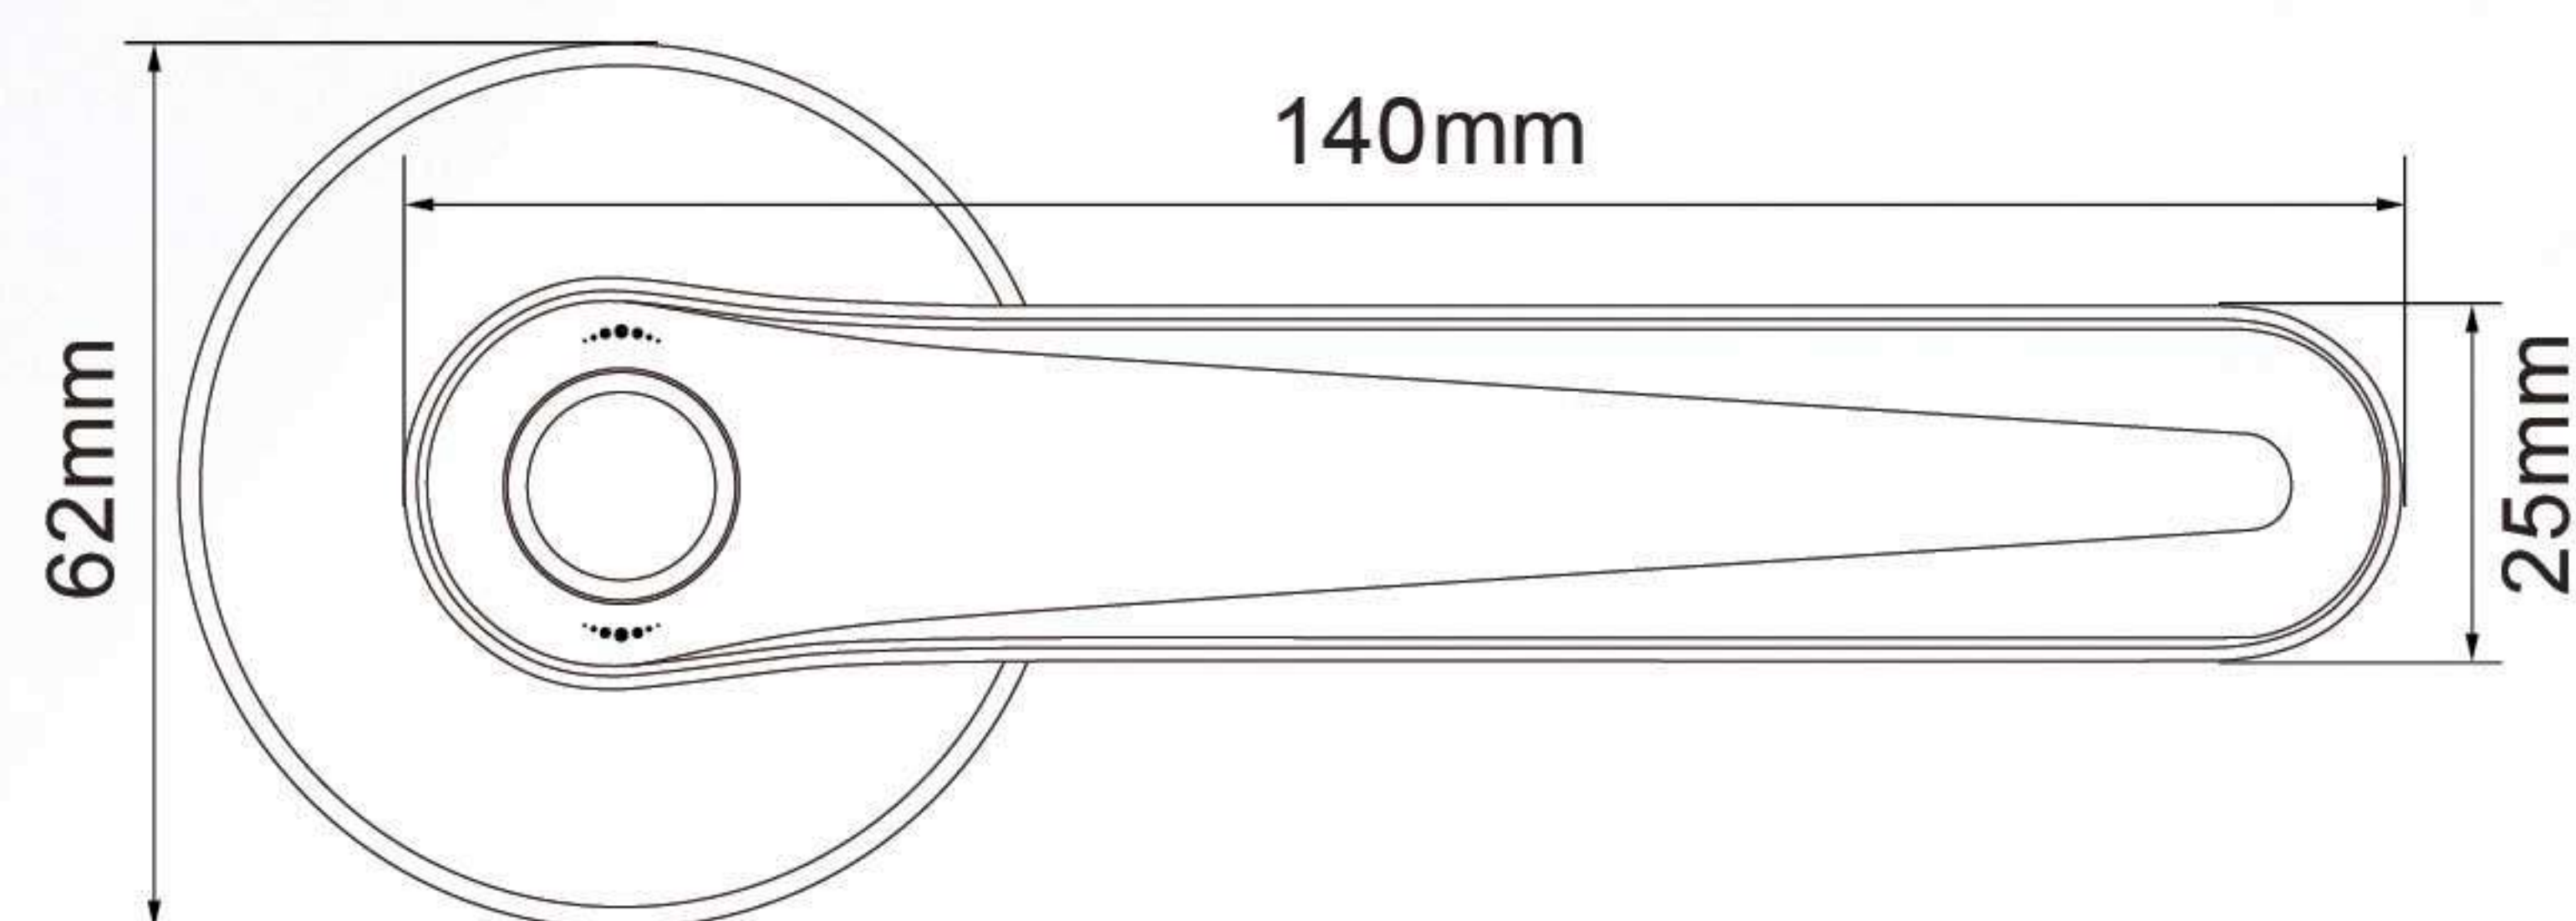# Door Lock
## User Manual

okashasmart.com

CATALOGUE

Product Parameters

Operating voltage : 6V (4 batteries)	
Operating temperature : -20°C-60°C	
Fingerprint capacity : 3 administrators 47 regular users	
Fingerprint module : Semiconductor	
Working current : 180mA	
Working humidity : 10%-90%RH	
Static power consumption : 30uA	
Open the door : Fingerprints and keys	

Indicator / Buzzer Prompt Instructions

Verification success	The indicator light is always bright blue, the buzzer has a long sound
Verification failure	Red light flashing, buzzer 3 short sound
Match Success	Blue indicator light is always on, buzzer chimes
Match failure	Red light flash 3, buzzer 3 short sound
Enter the registration status	The pink light is always on
Enter the administrator fingerprint verification status	Pink light shining
Verify Success Status	Blue LED Light Long
Verify Failed Status	Red Light Flashing
Reset successfully	Green light on

Product size

140mm

62mm

25mm

Adaptor lock body
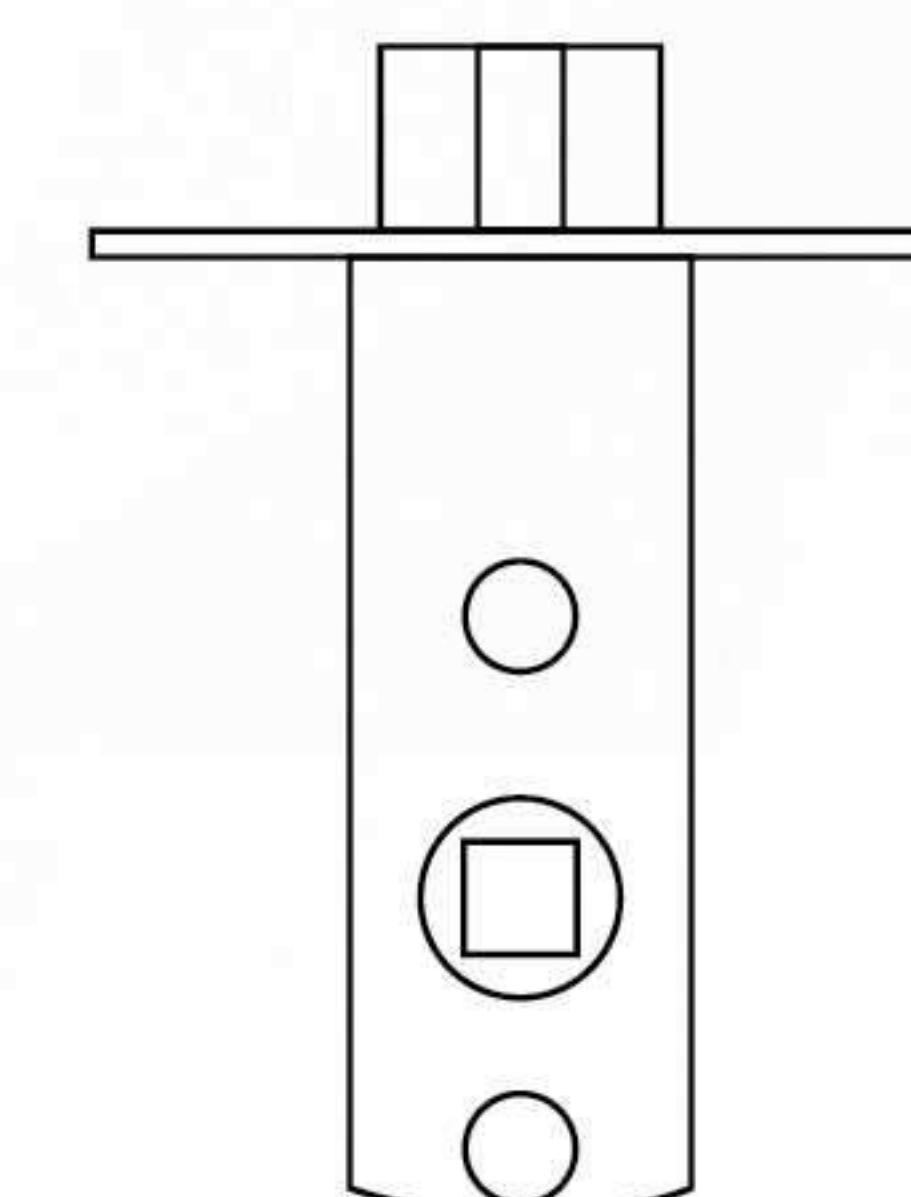
Single tongue standard
lock body

APP Download and Installation

Scan the QR code below to download the "Okasha Smart" App in App Store(iOS) or Play Store(Android). Then register the account with your phone number or email address.

Download on the **App Store**

**Google Play**

APP Registration, Login

APP Registration:

You don't have an APP account yet, choose log in or log in via SMS verification code.

Click "Create New Account" to enter the account registration page. Follow the prompts to get the SMS verification code and set the password.

If you already have an account, you can click "Log in with an existing account" to log in to the app. Login mode supports password, verification code, social account login.
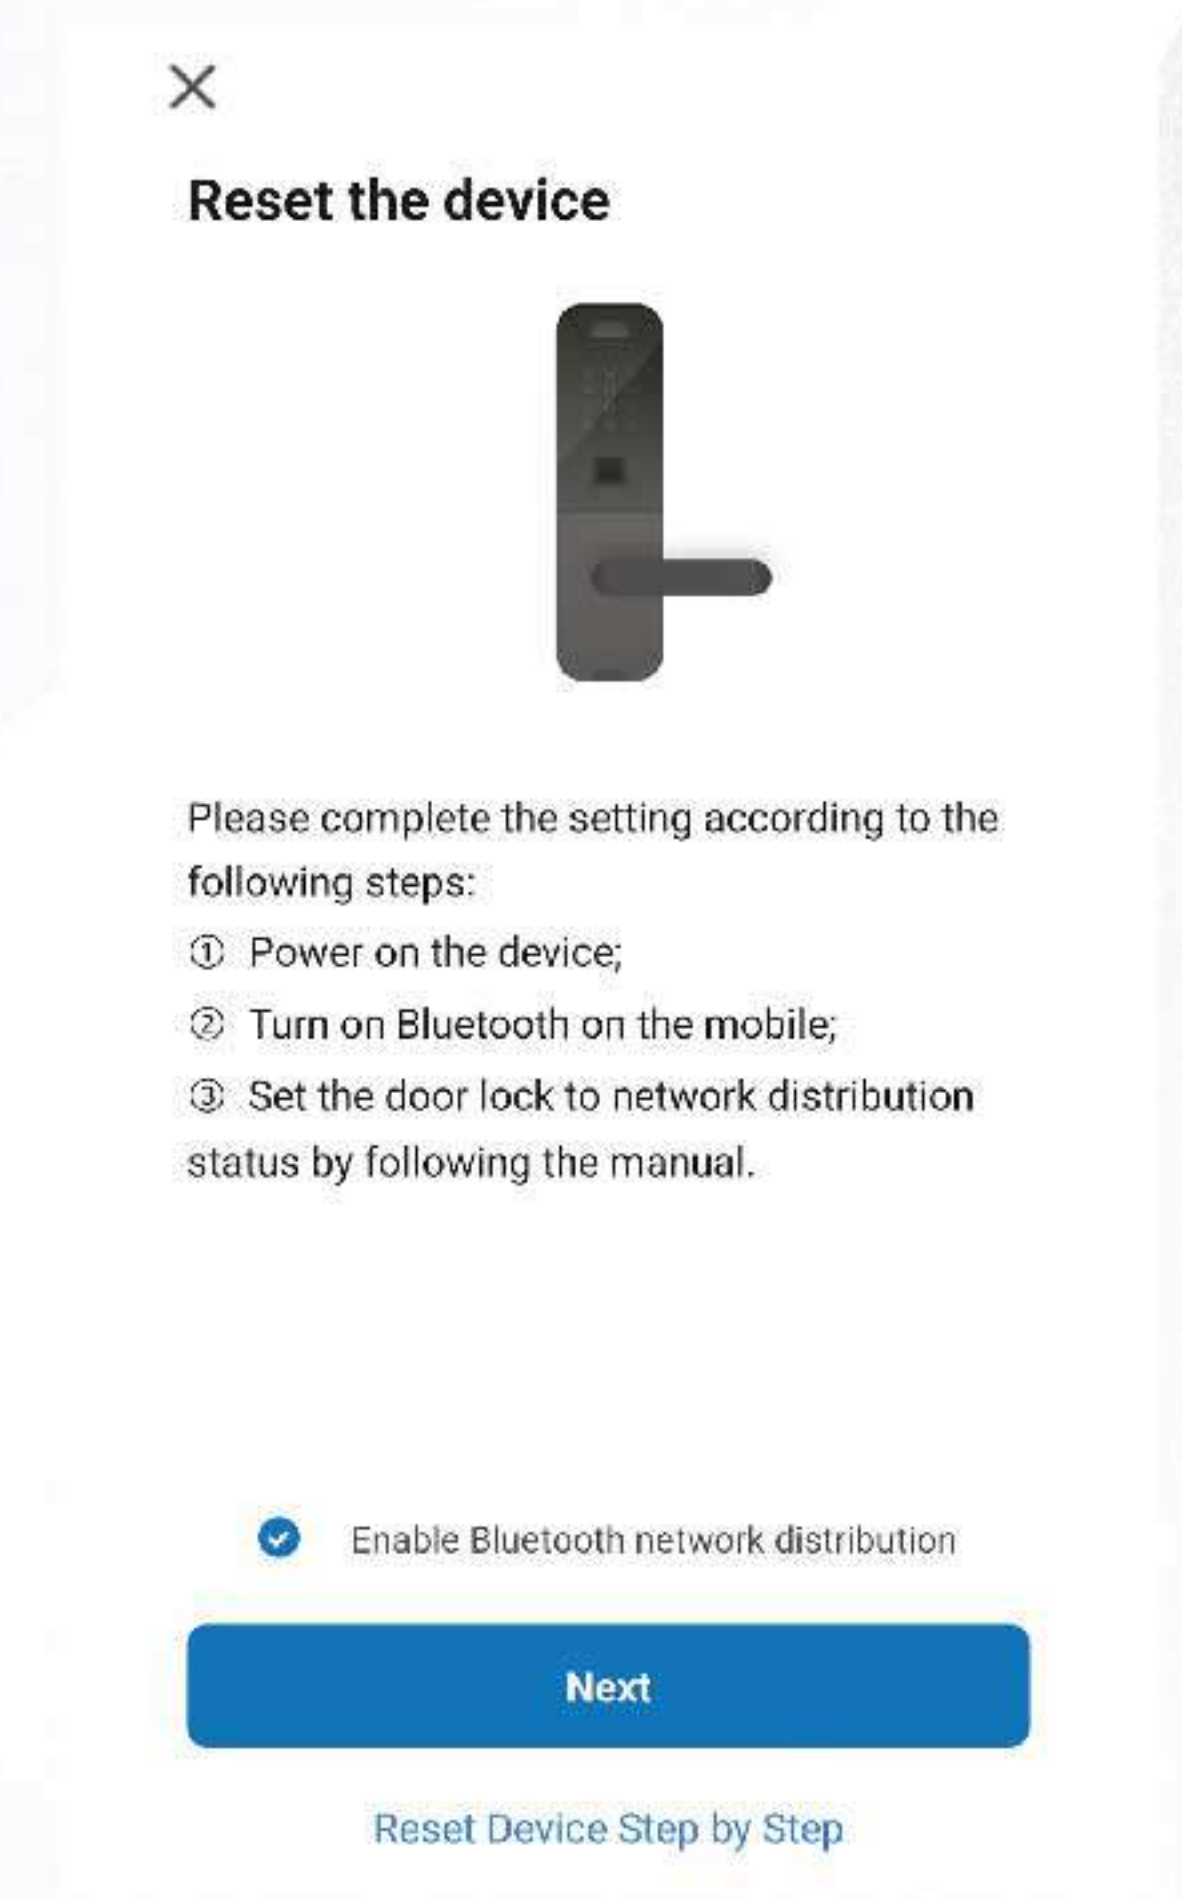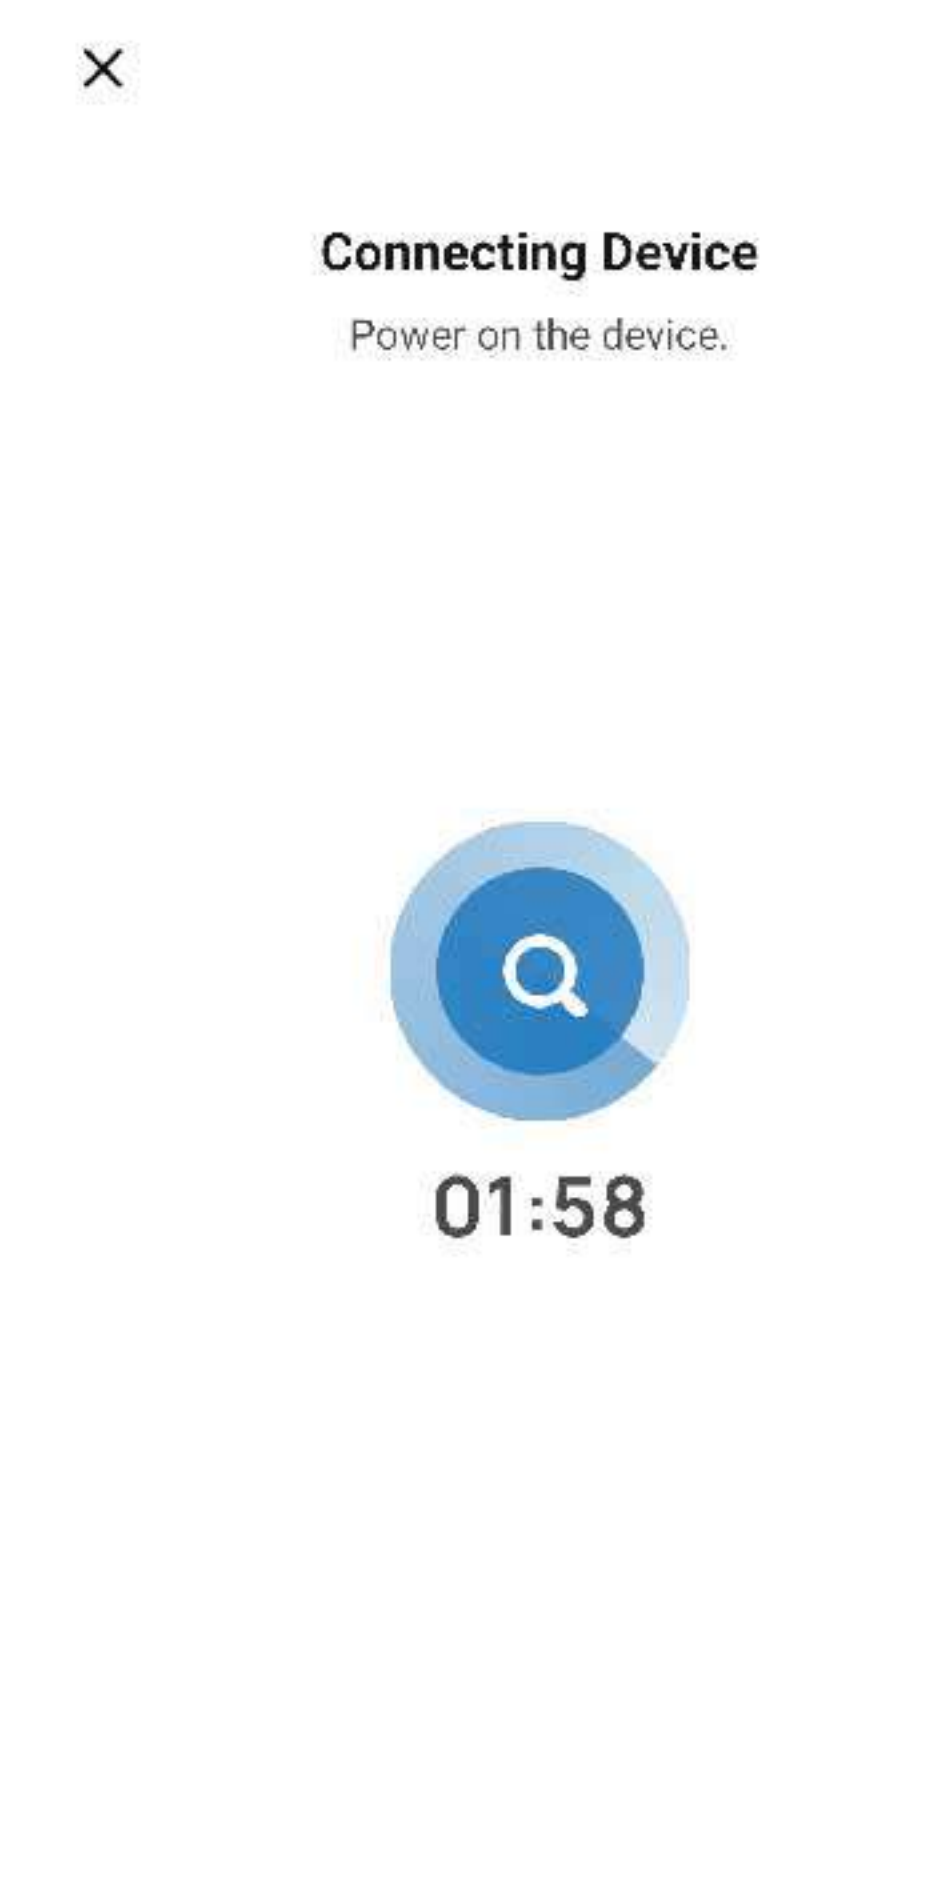
Add Device
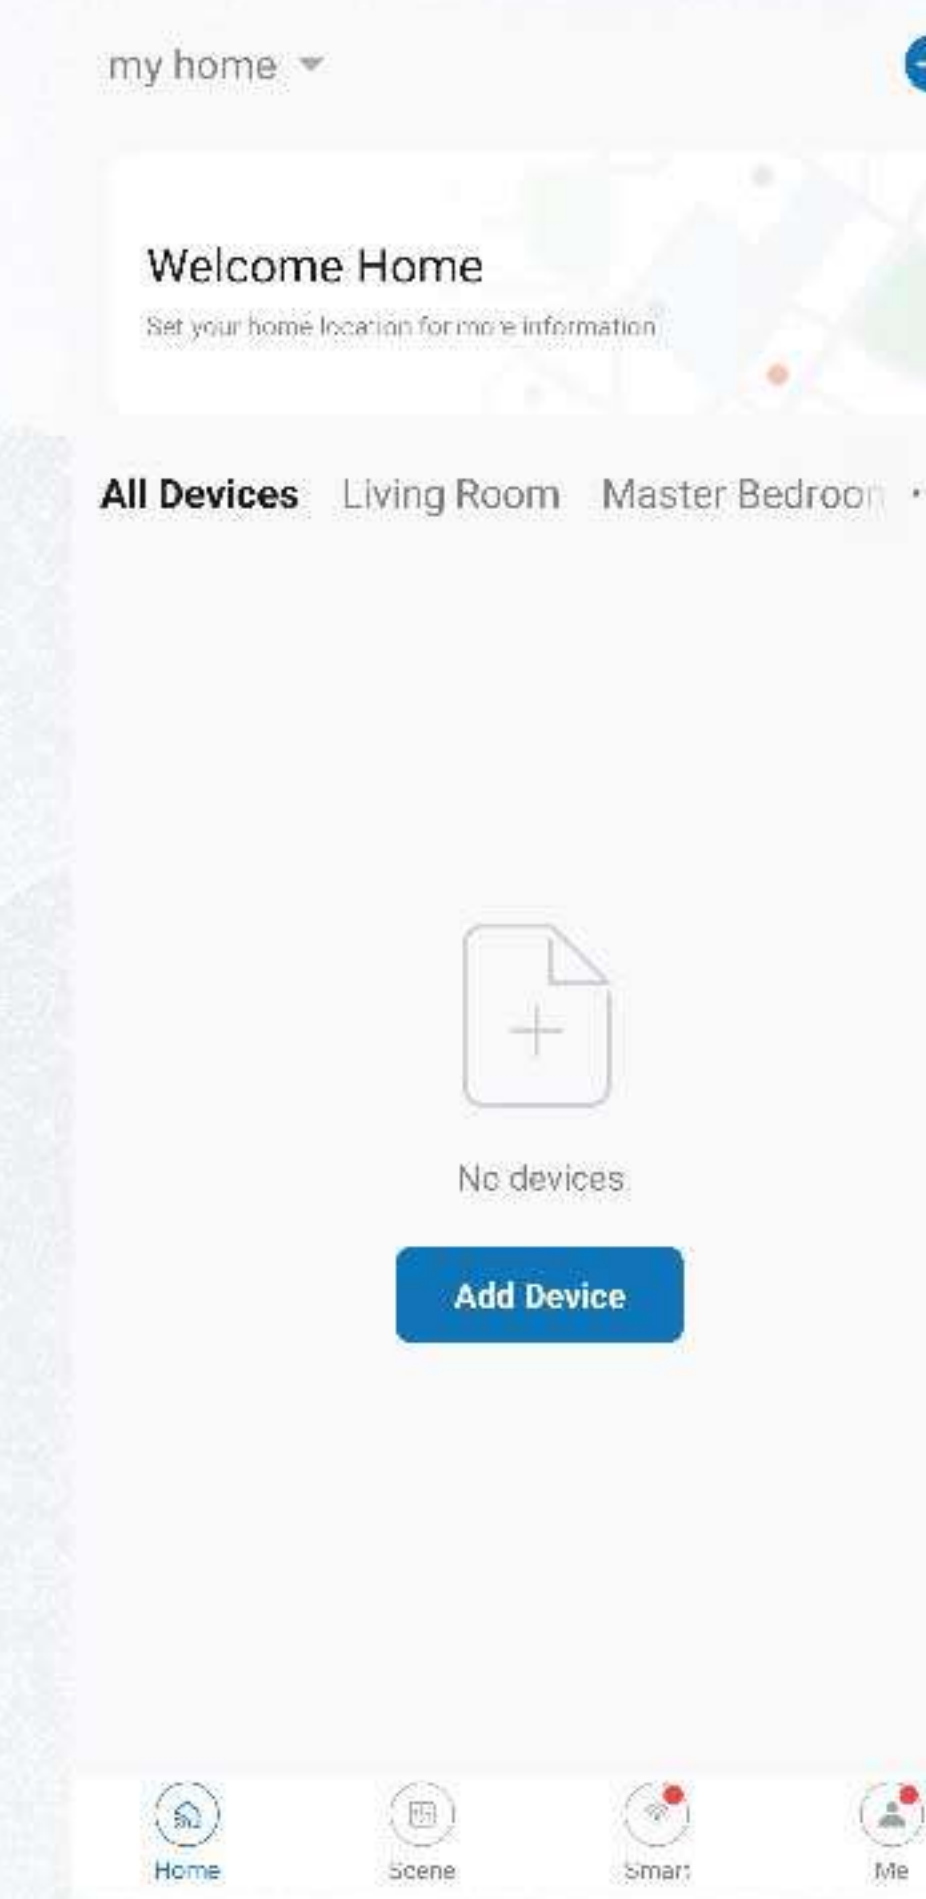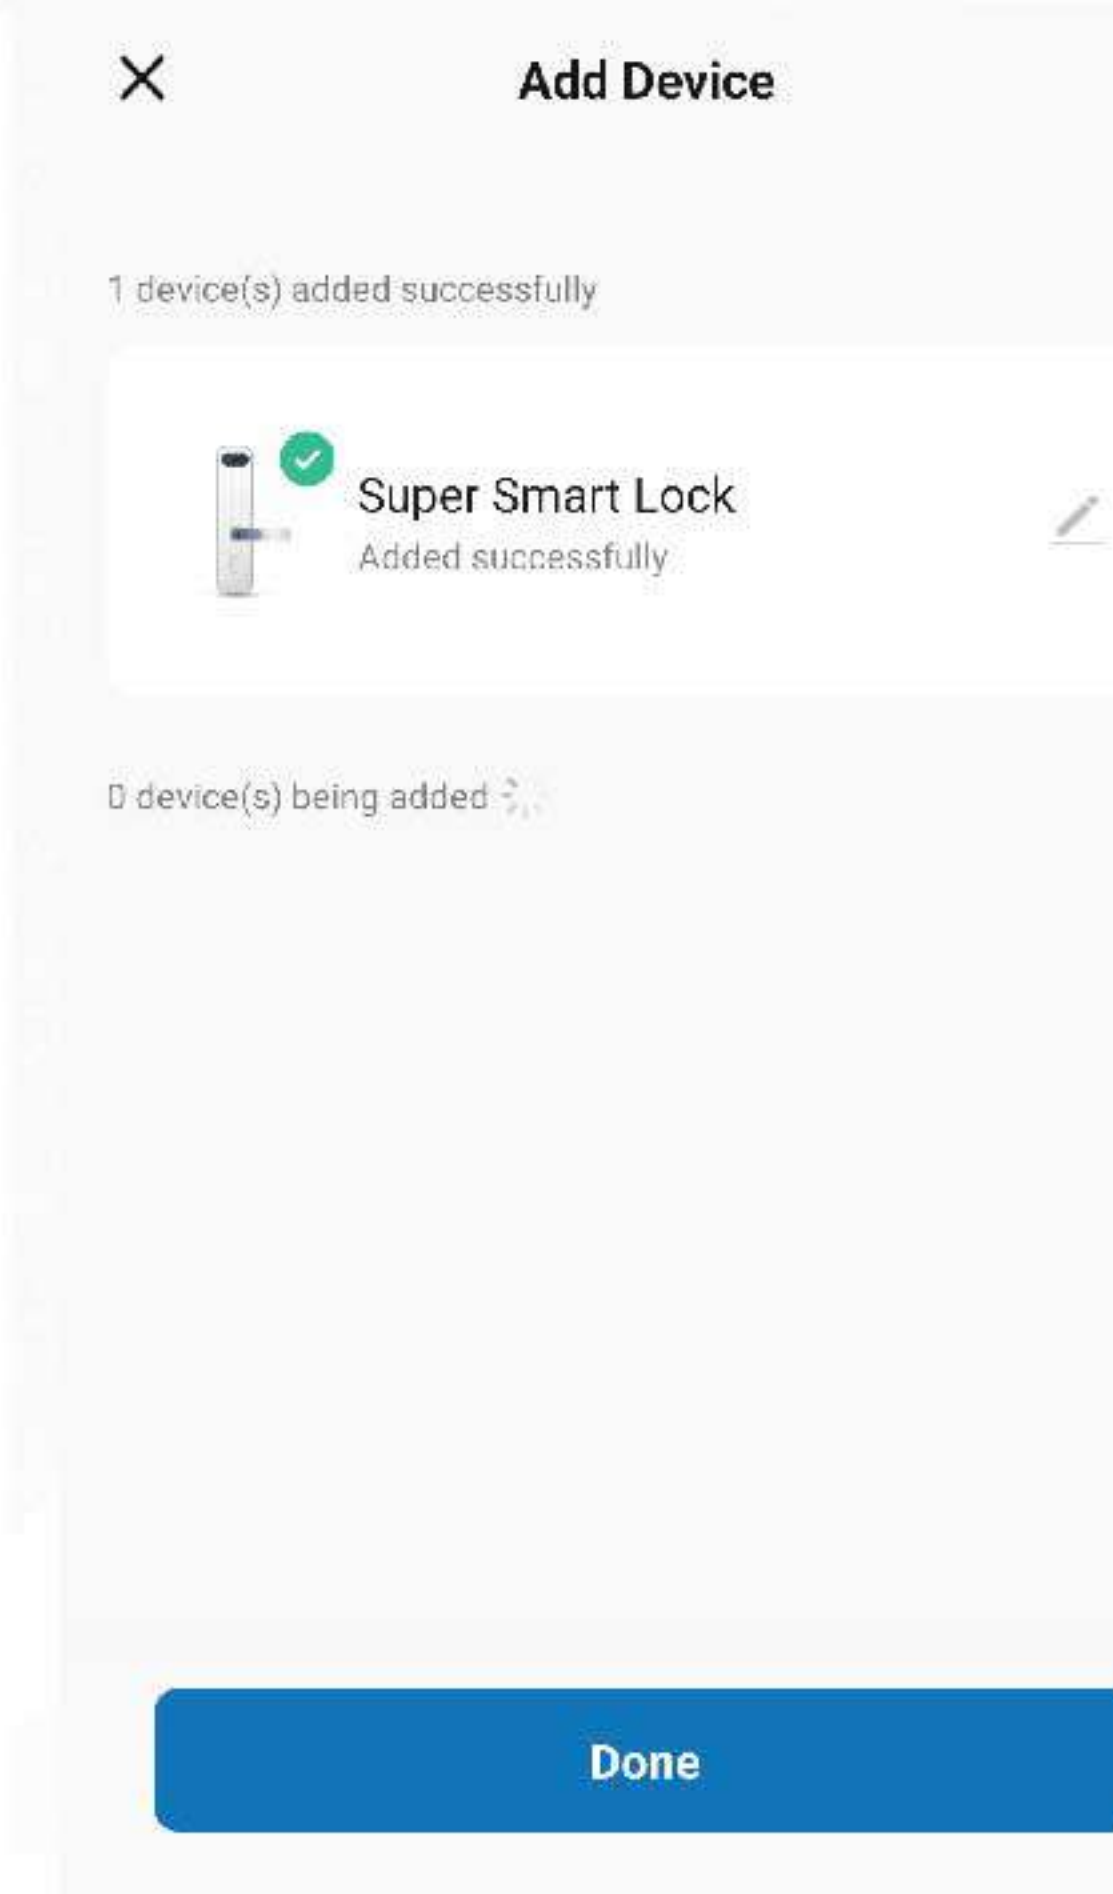

Click Add Device
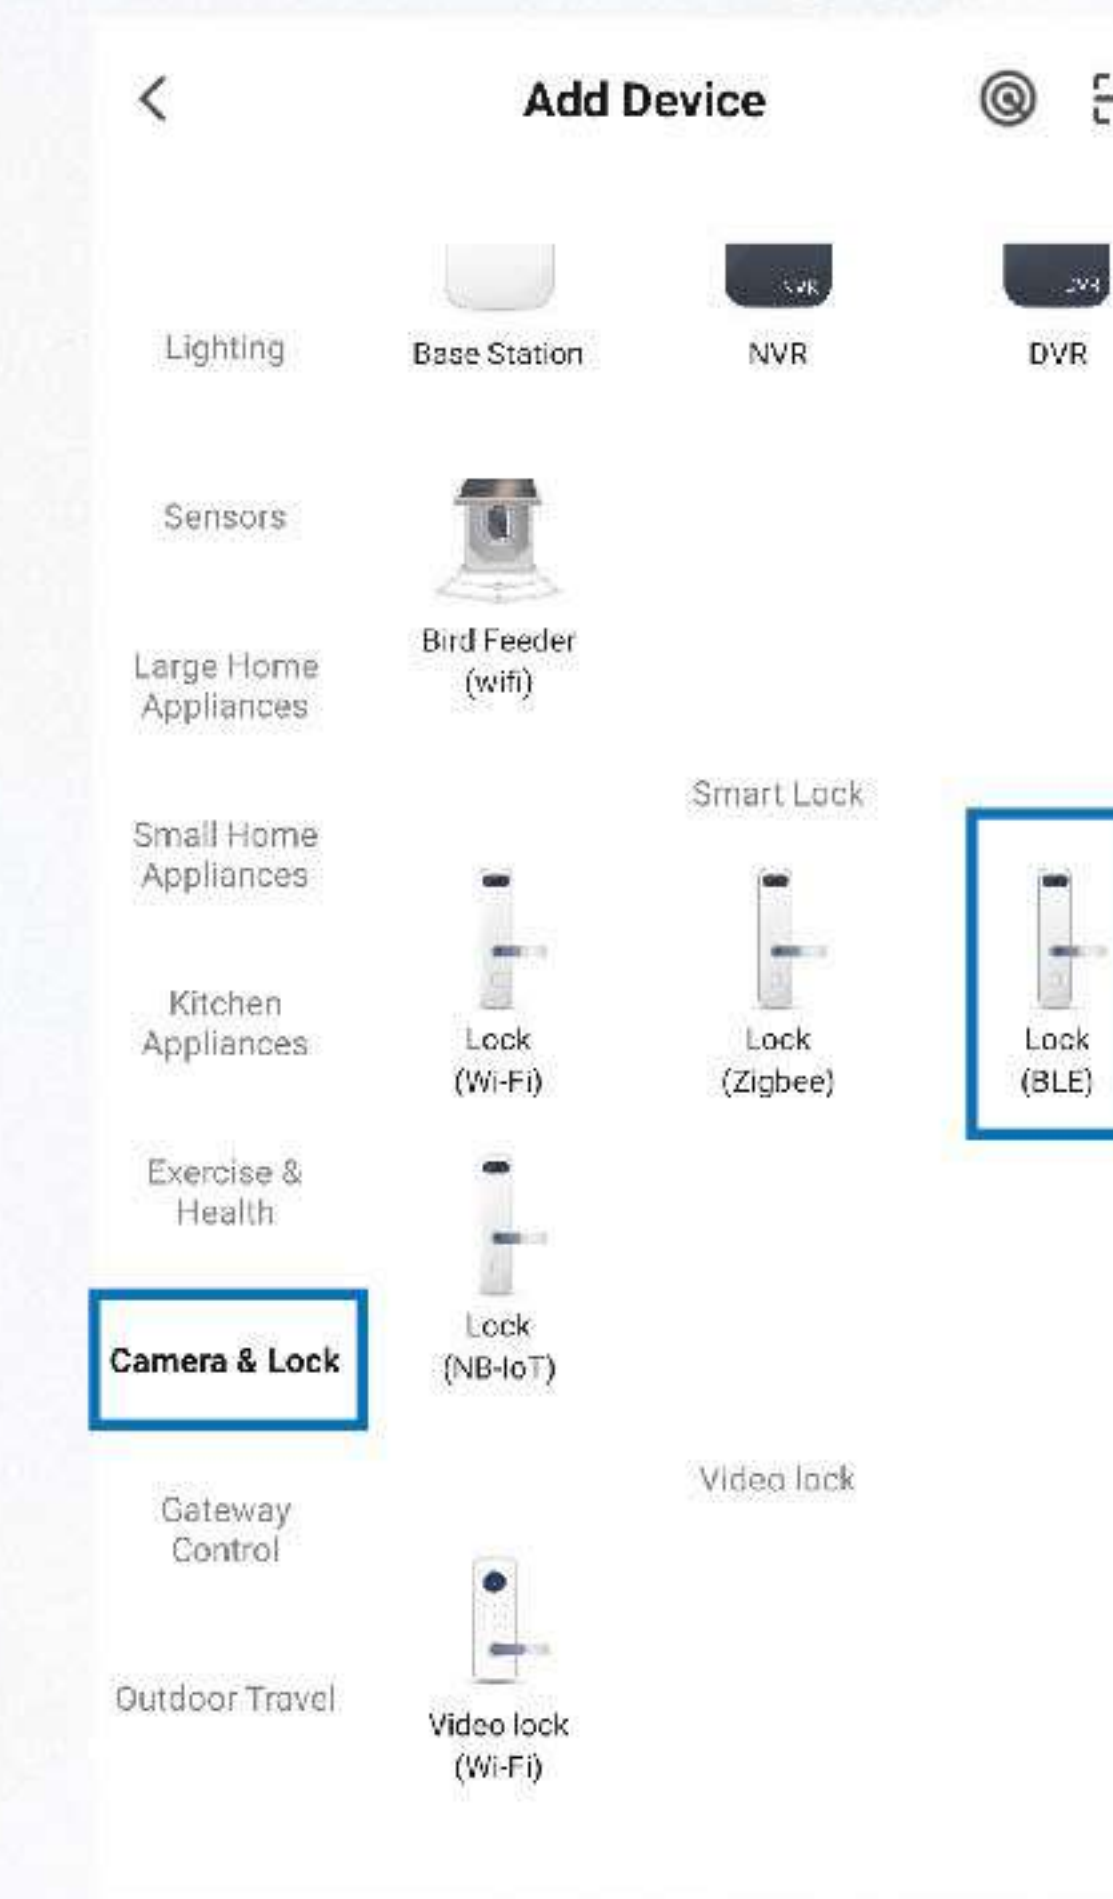
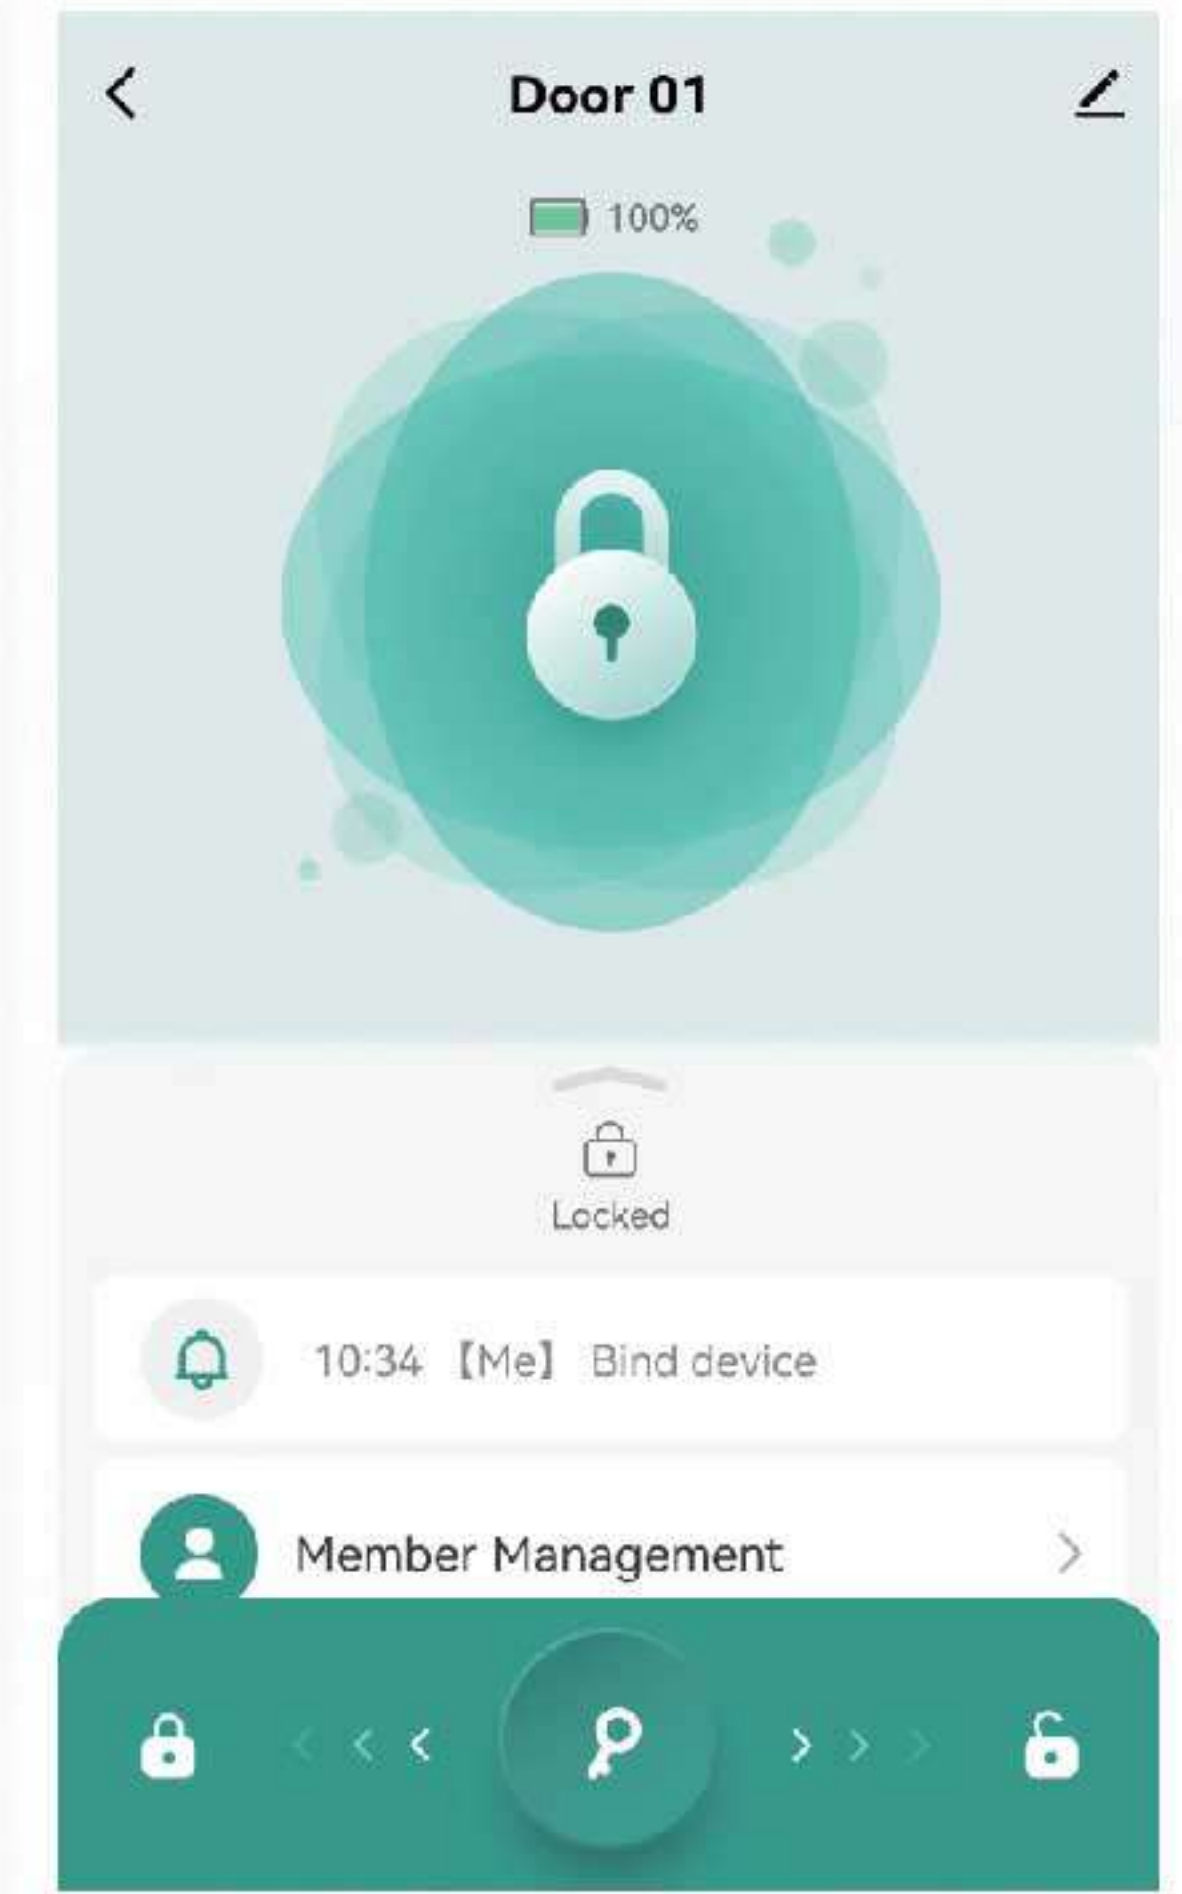Find the Camera & Lock Select Lock (BLE)

Select Start Bluetooth Click Next

Touch Fingerprint Wake Up System Waiting Link Device
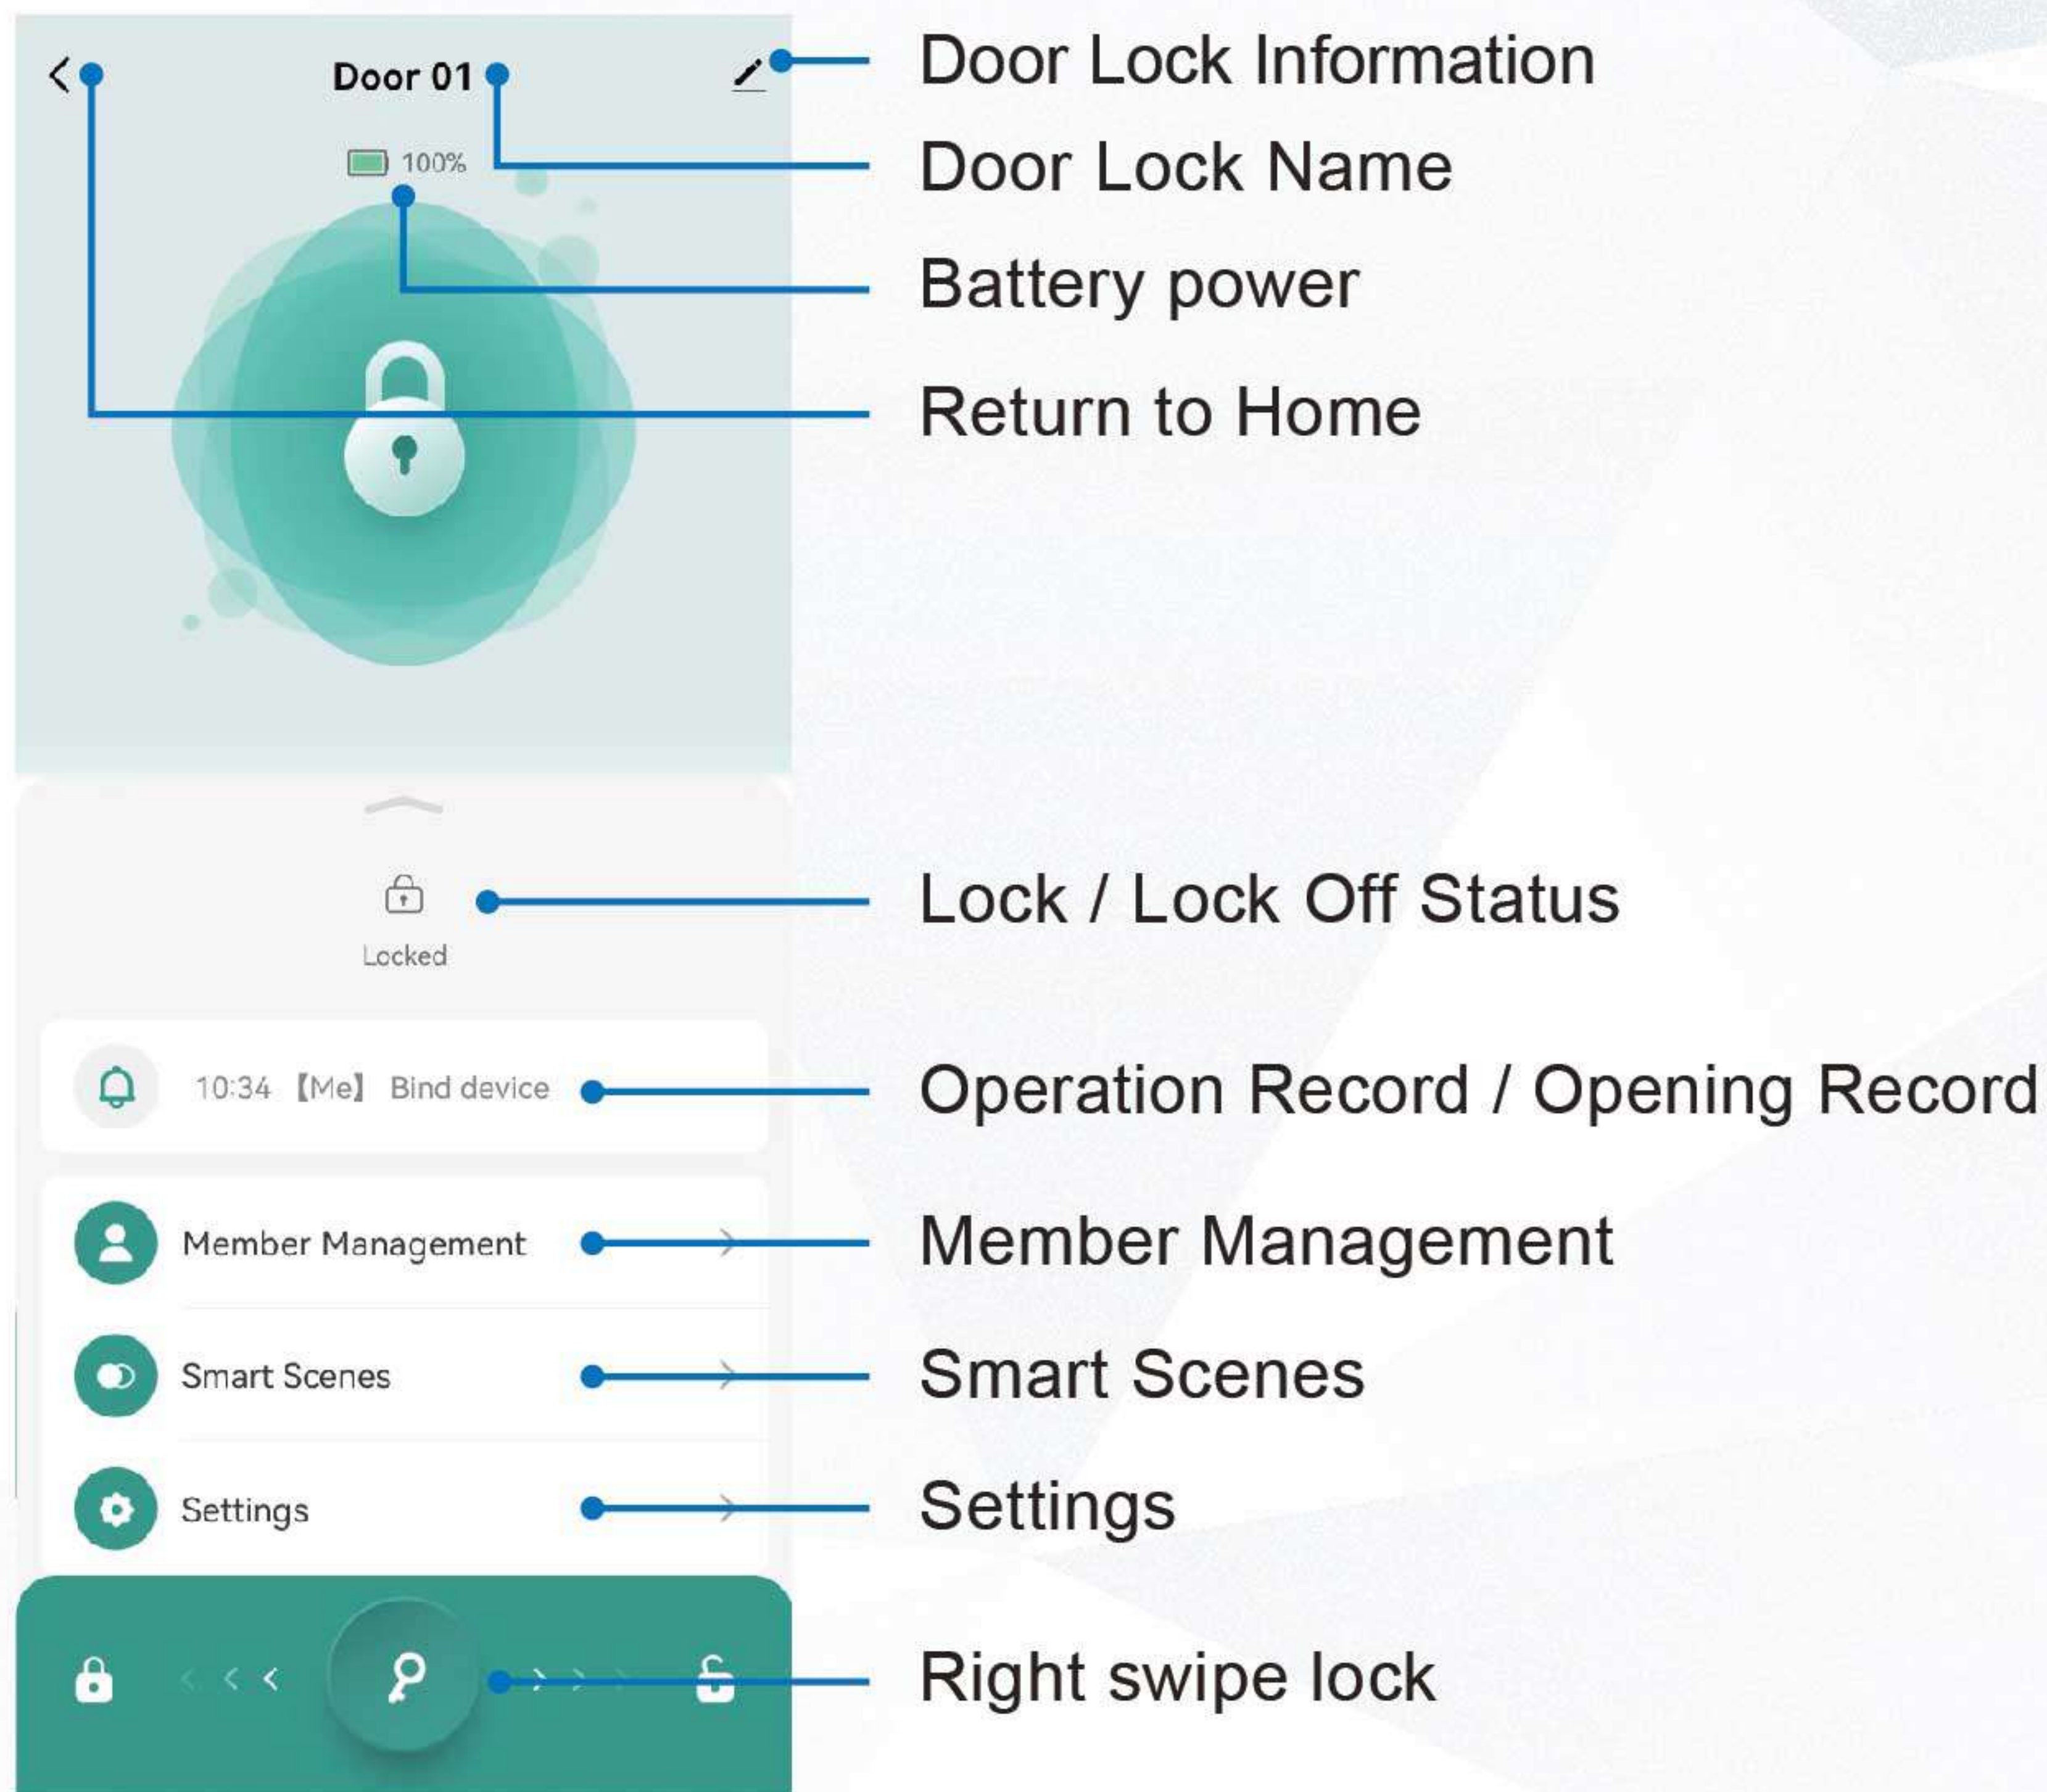

Link Success Click to Done

Enter the door lock main interface

Bluetooth Door Lock Panel - Home

Door Lock Information

Door Lock Name

Battery power

Return to Home

Lock / Lock Off Status

Operation Record / Opening Record

Member Management

Smart Scenes
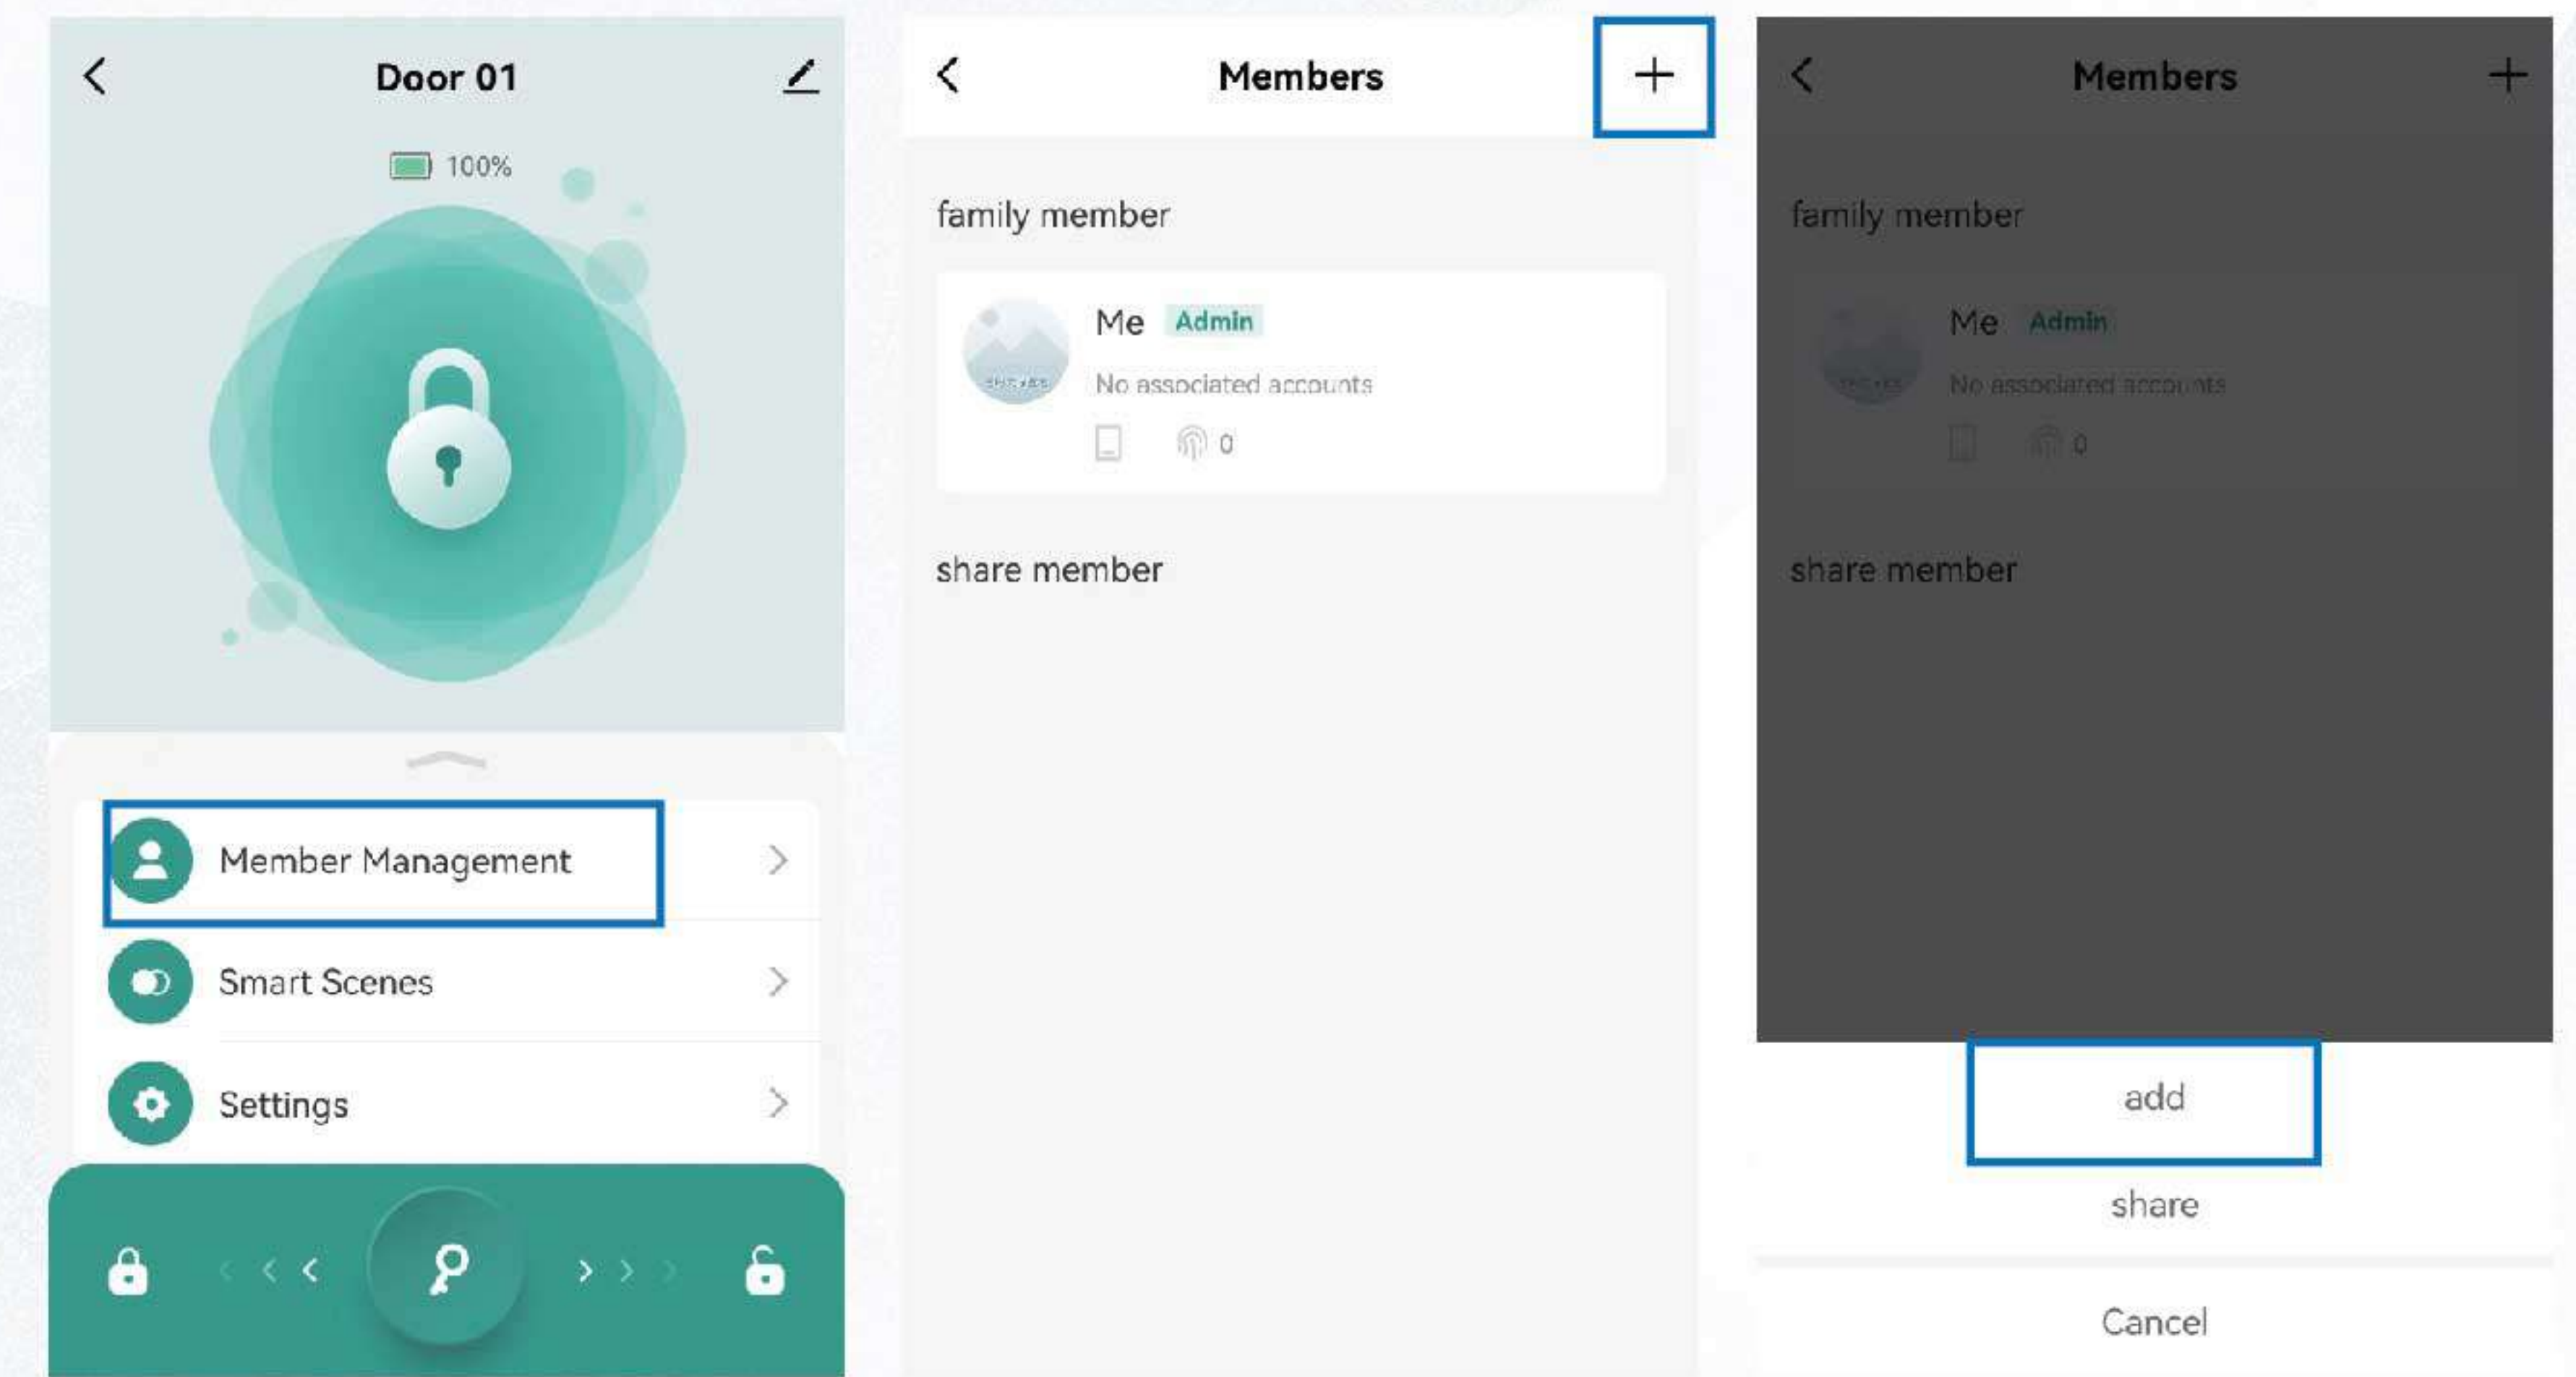
Settings

Right swipe lock

The Home Center displays the Bluetooth connection

Make sure that Bluetooth is turned on and that the phone is operated within 5 meters of the door lock. If Bluetooth is not connected, it shows "Can not connect Bluetooth," can not be unlocked directly through the APP.
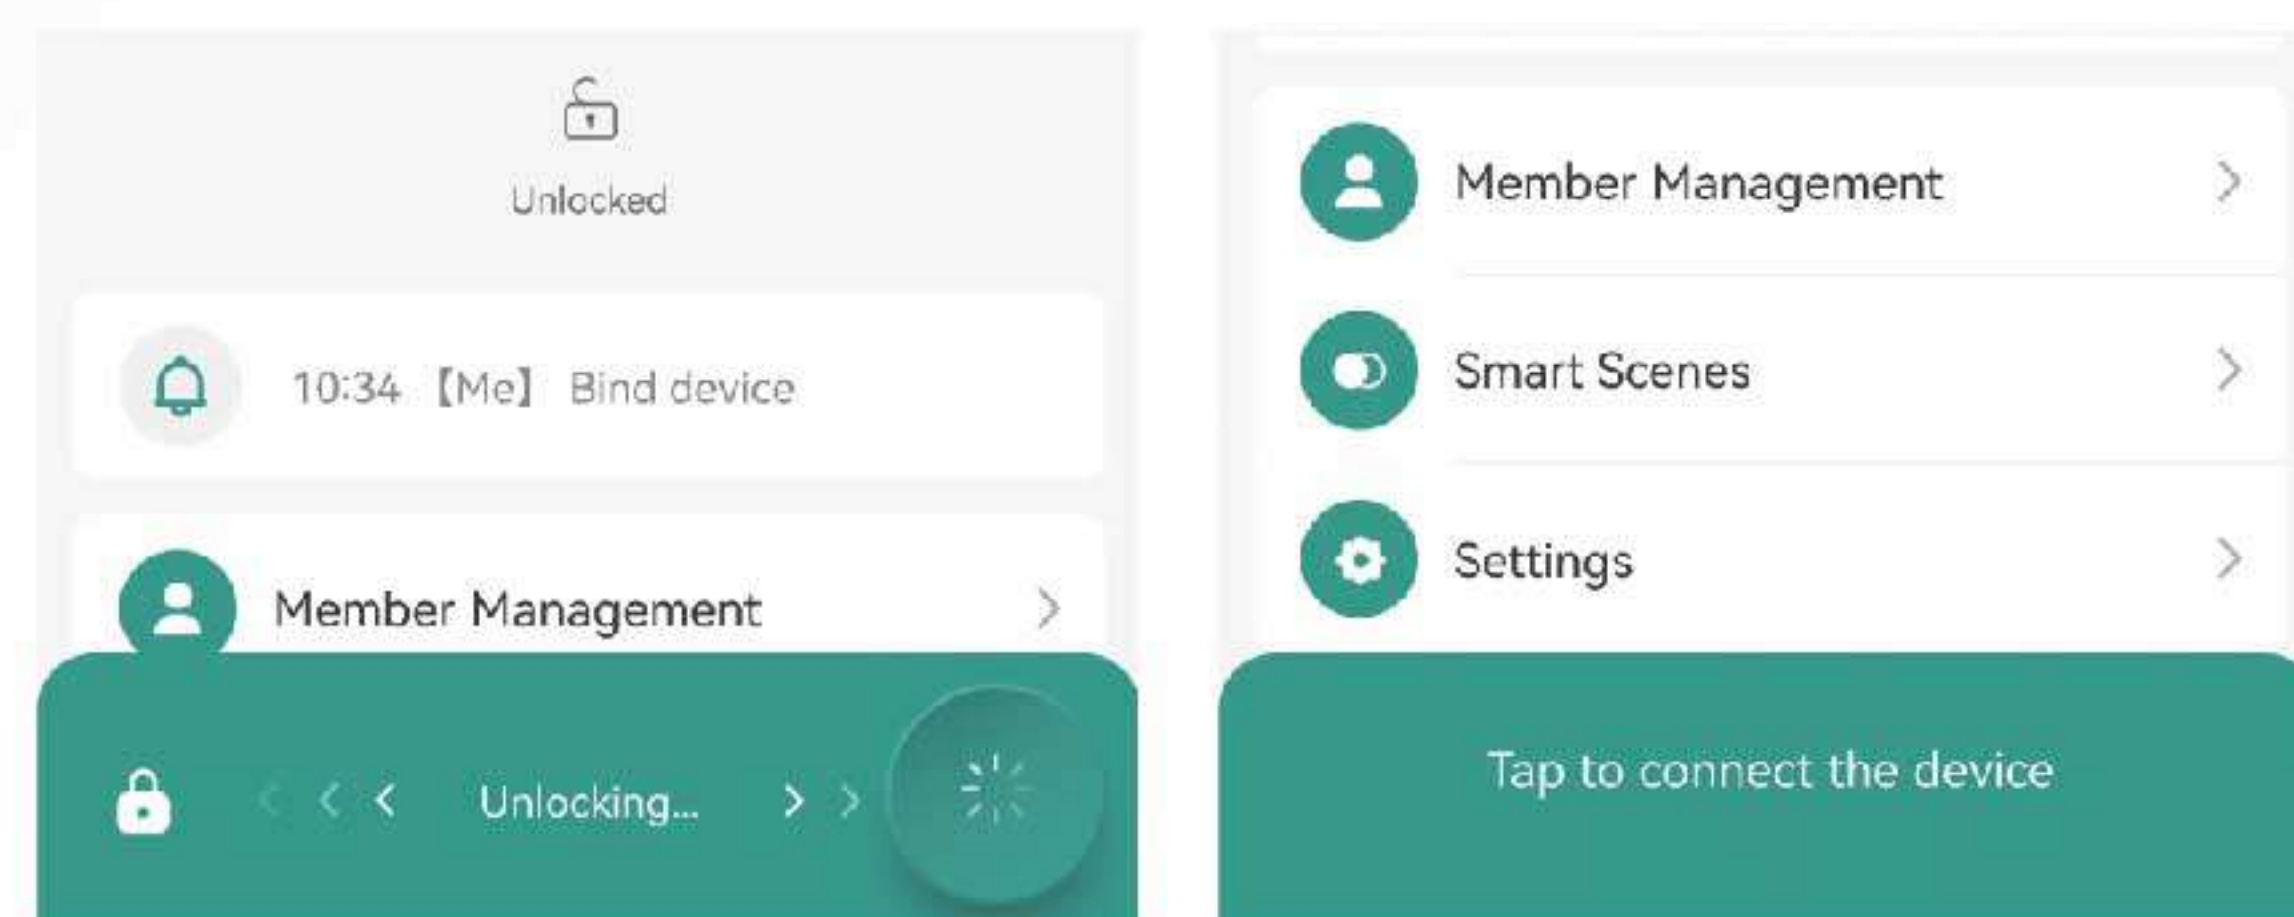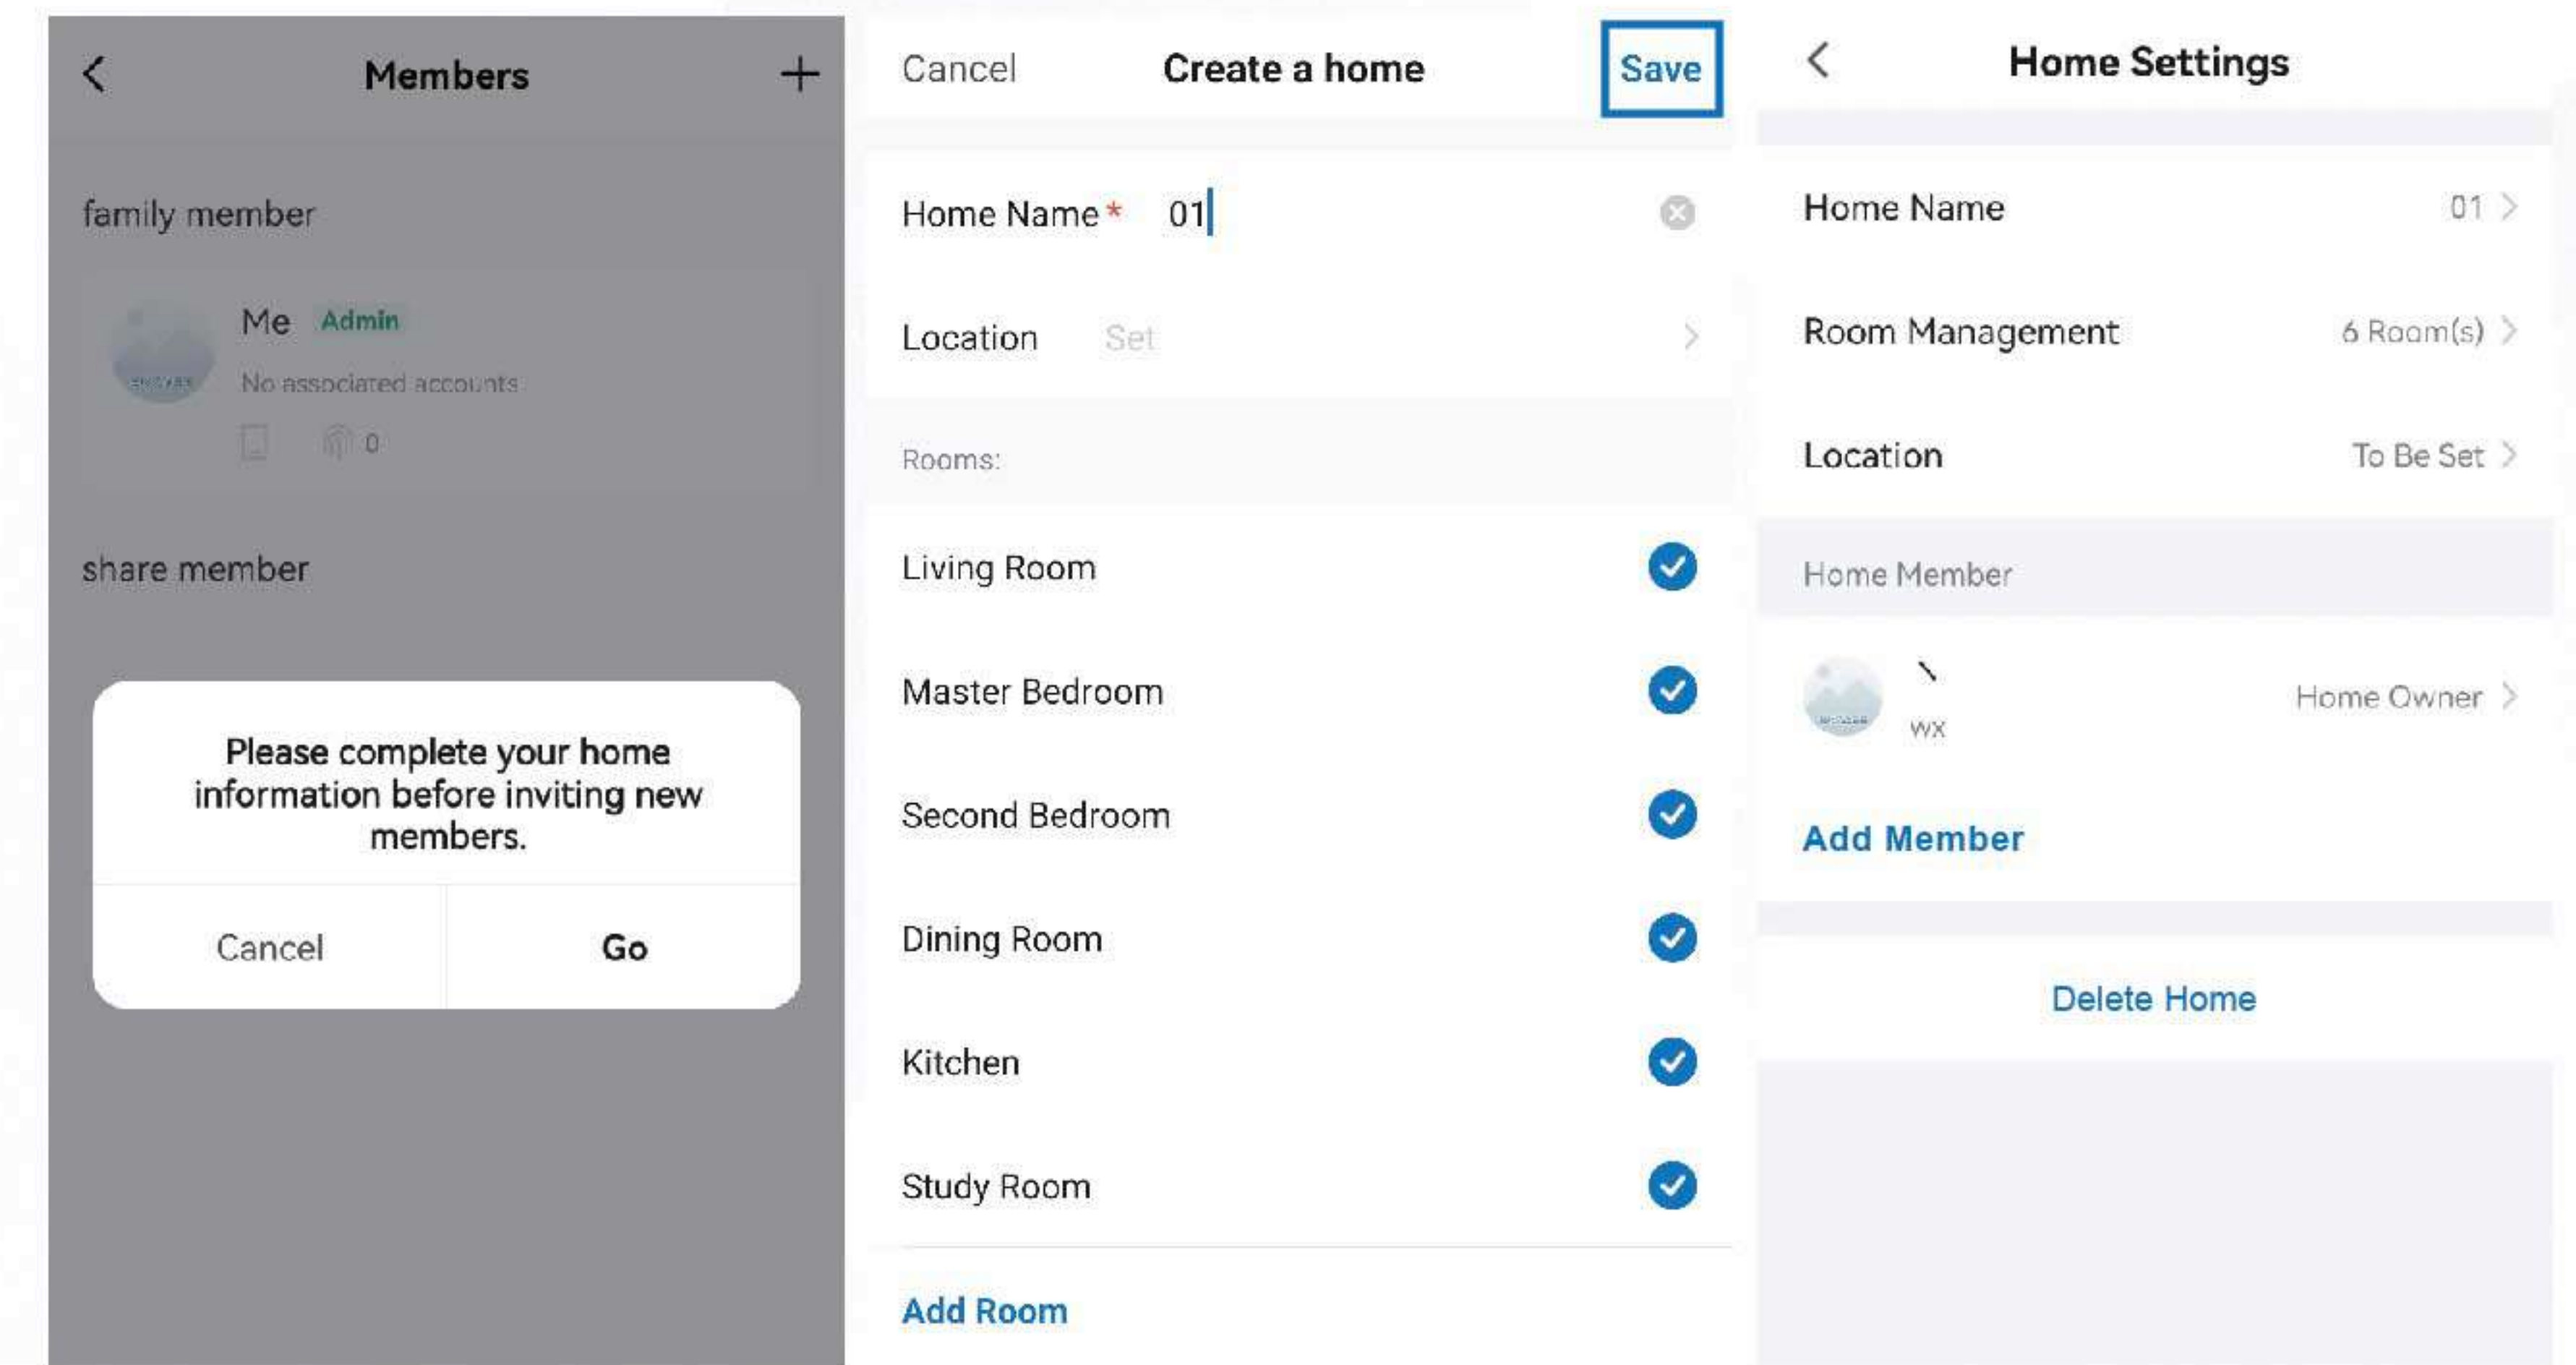
Member Management - Improving Family Members

Click Member Management
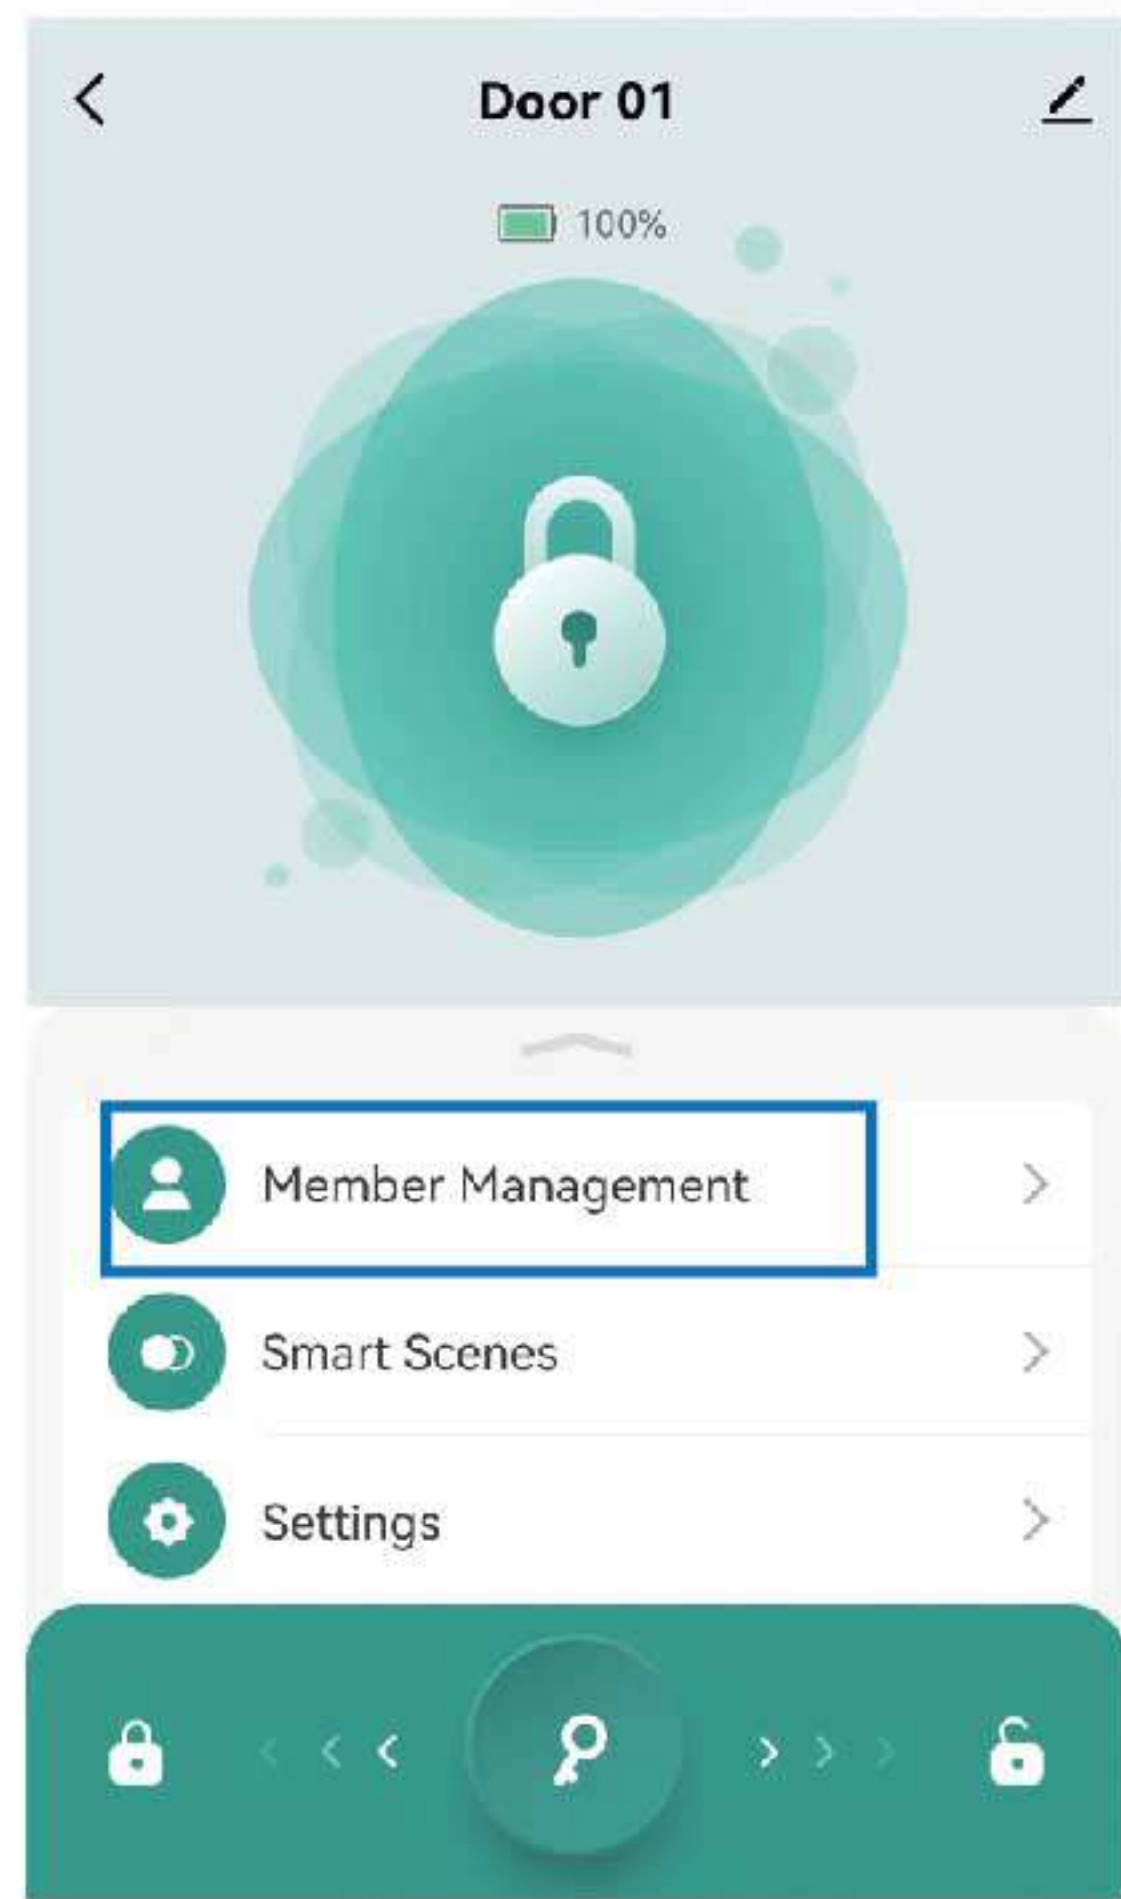
Click "+" on the top right

Select add

Click Go

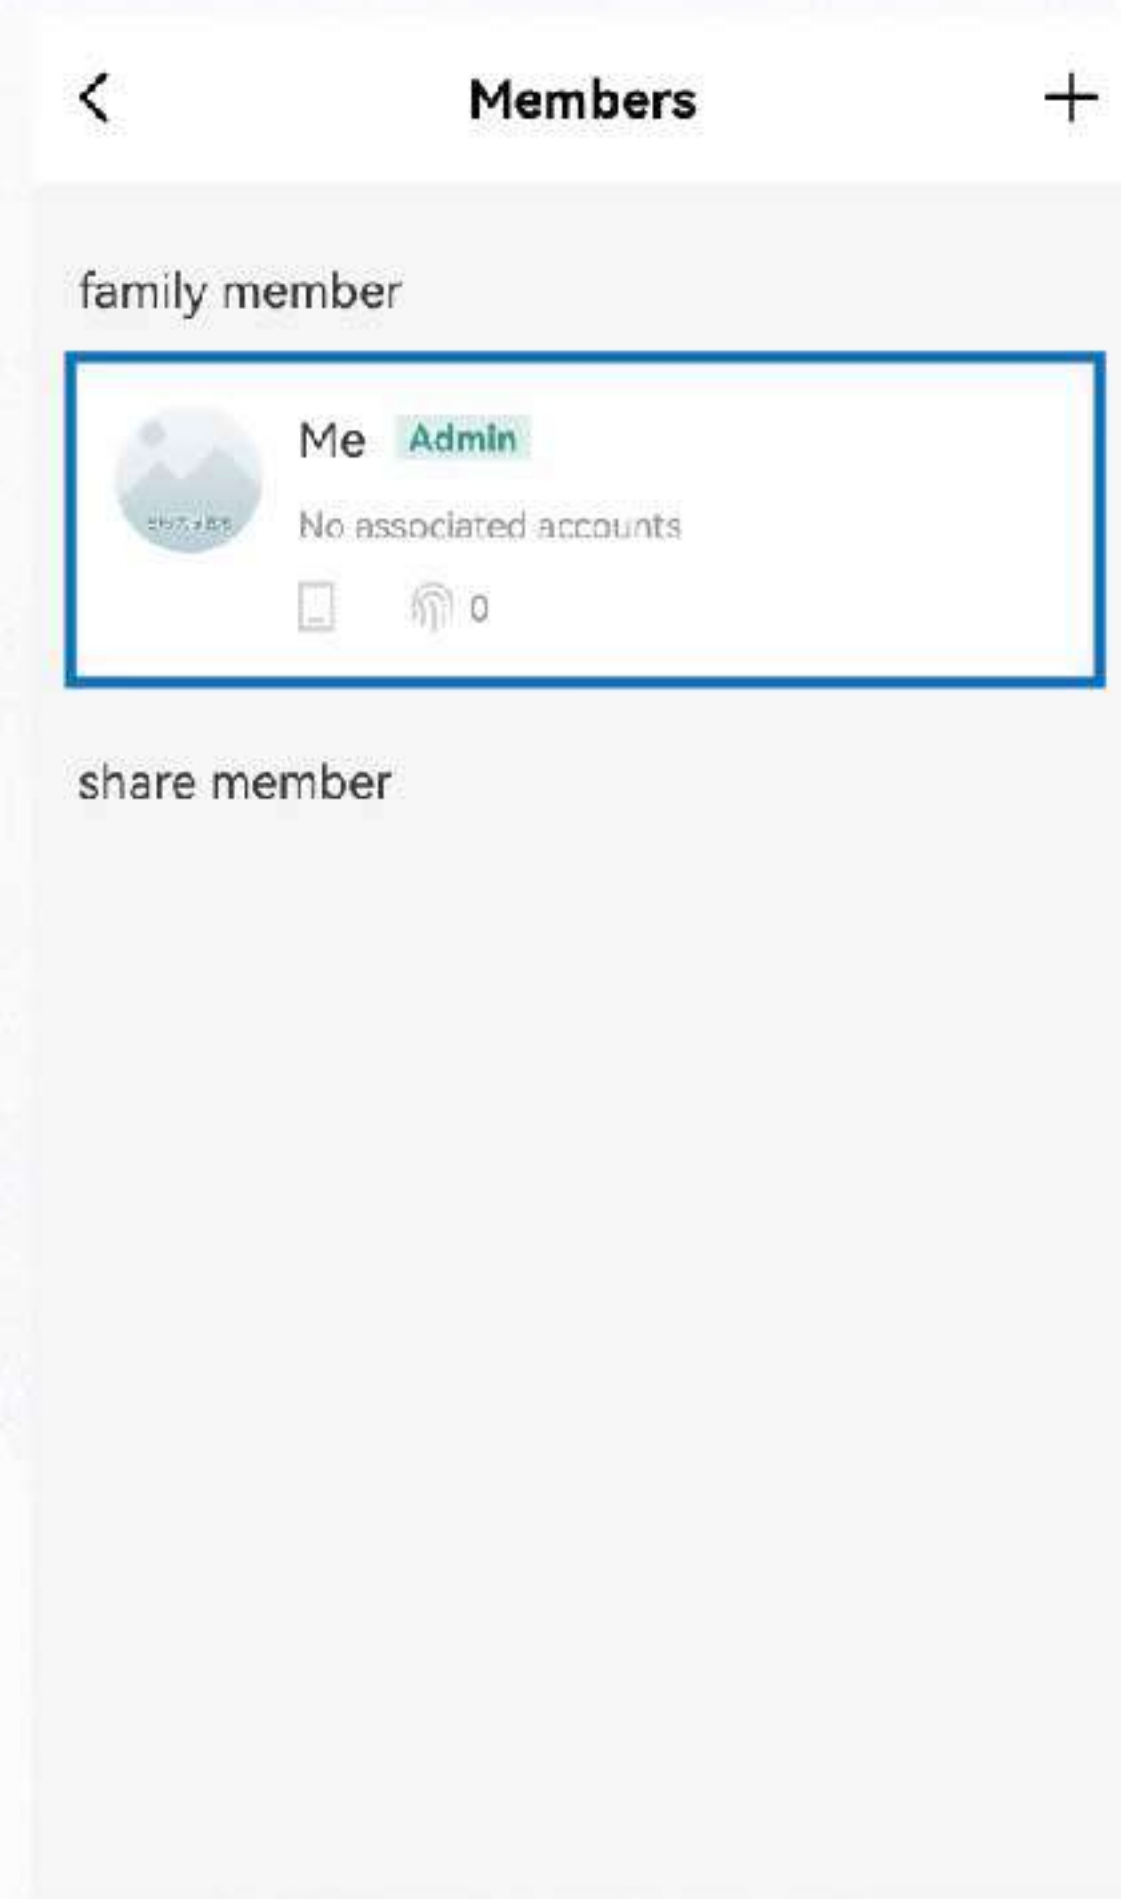Improving Family Information Click Save

You can rename / view / add / remove when finished
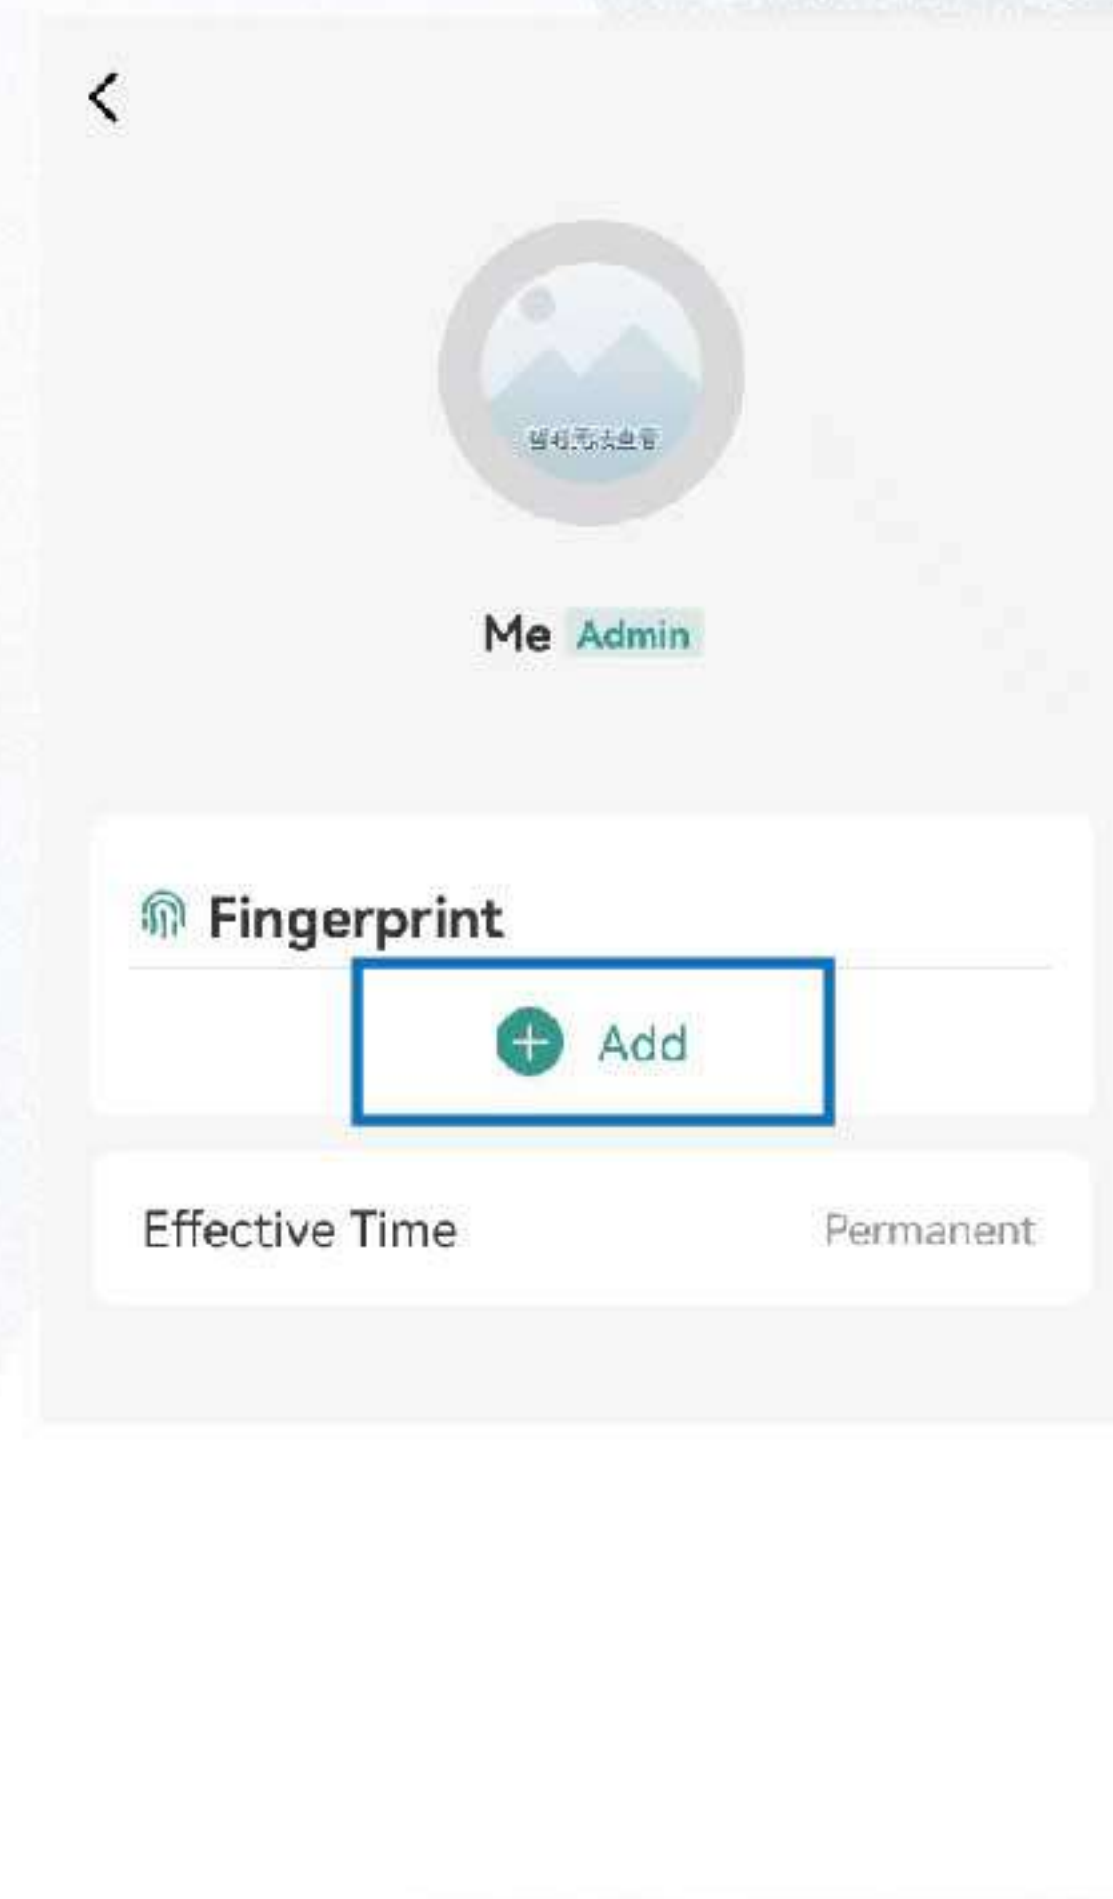
Member Management - Set Administrator Fingerprint
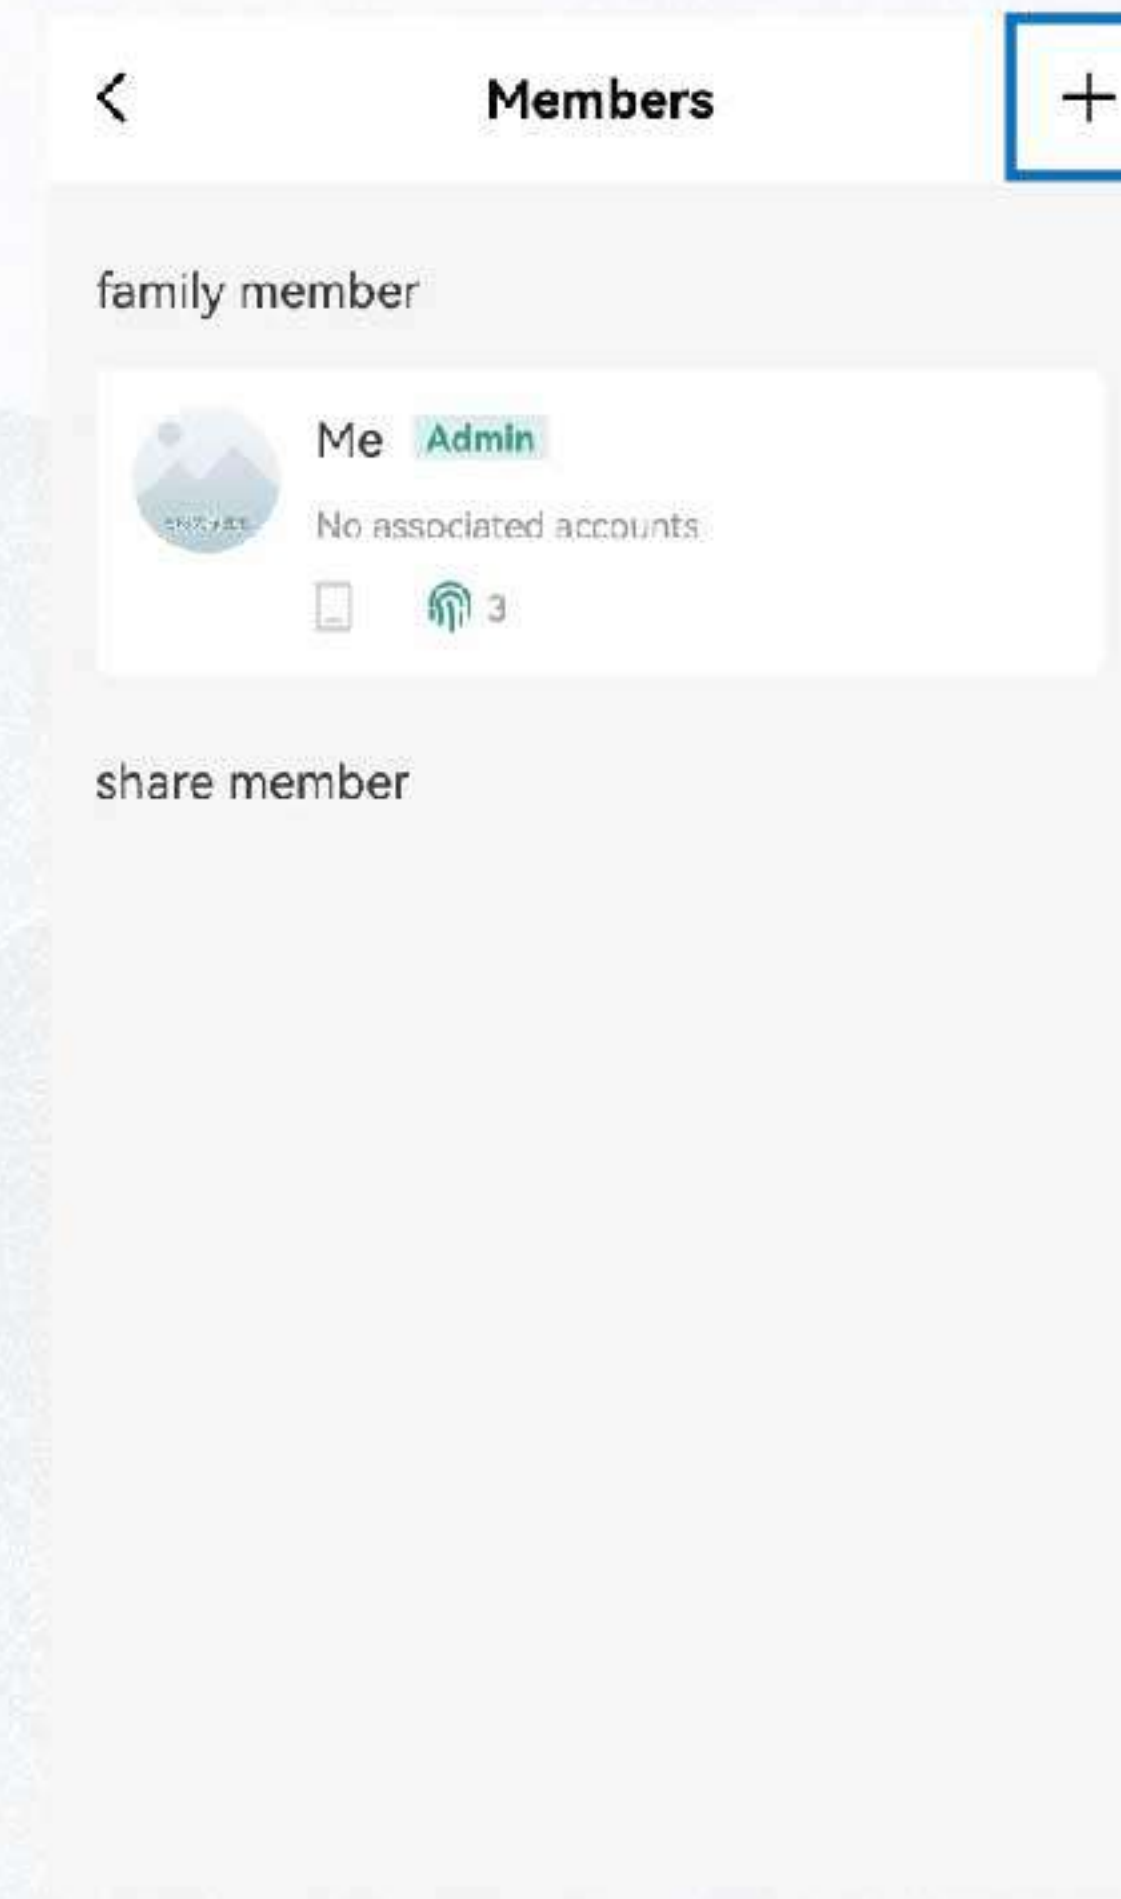

Click Member Management

Click Me Admin

Click + Add

Click to start adding

Fingerprint pressed 6 times

Set the fingerprint name Click OK
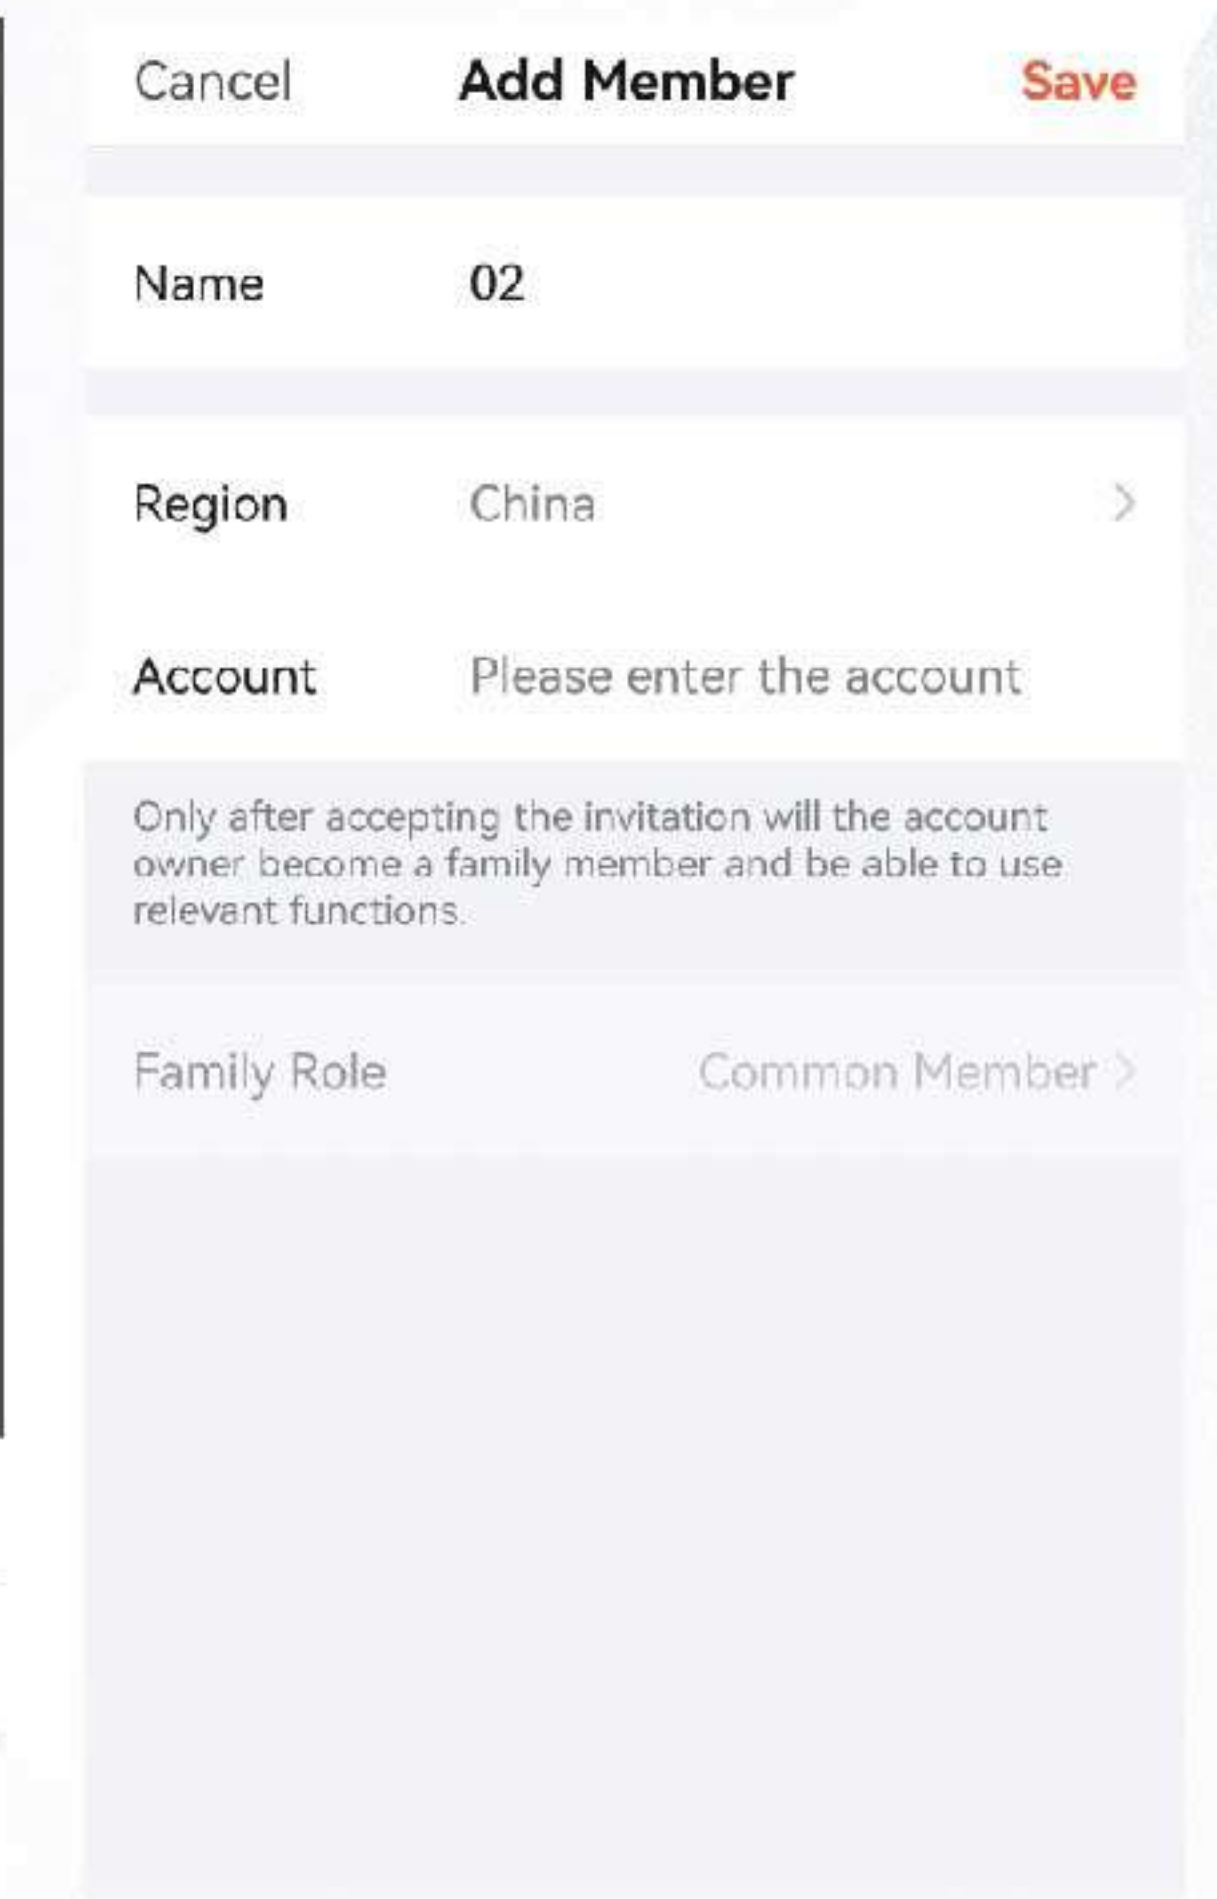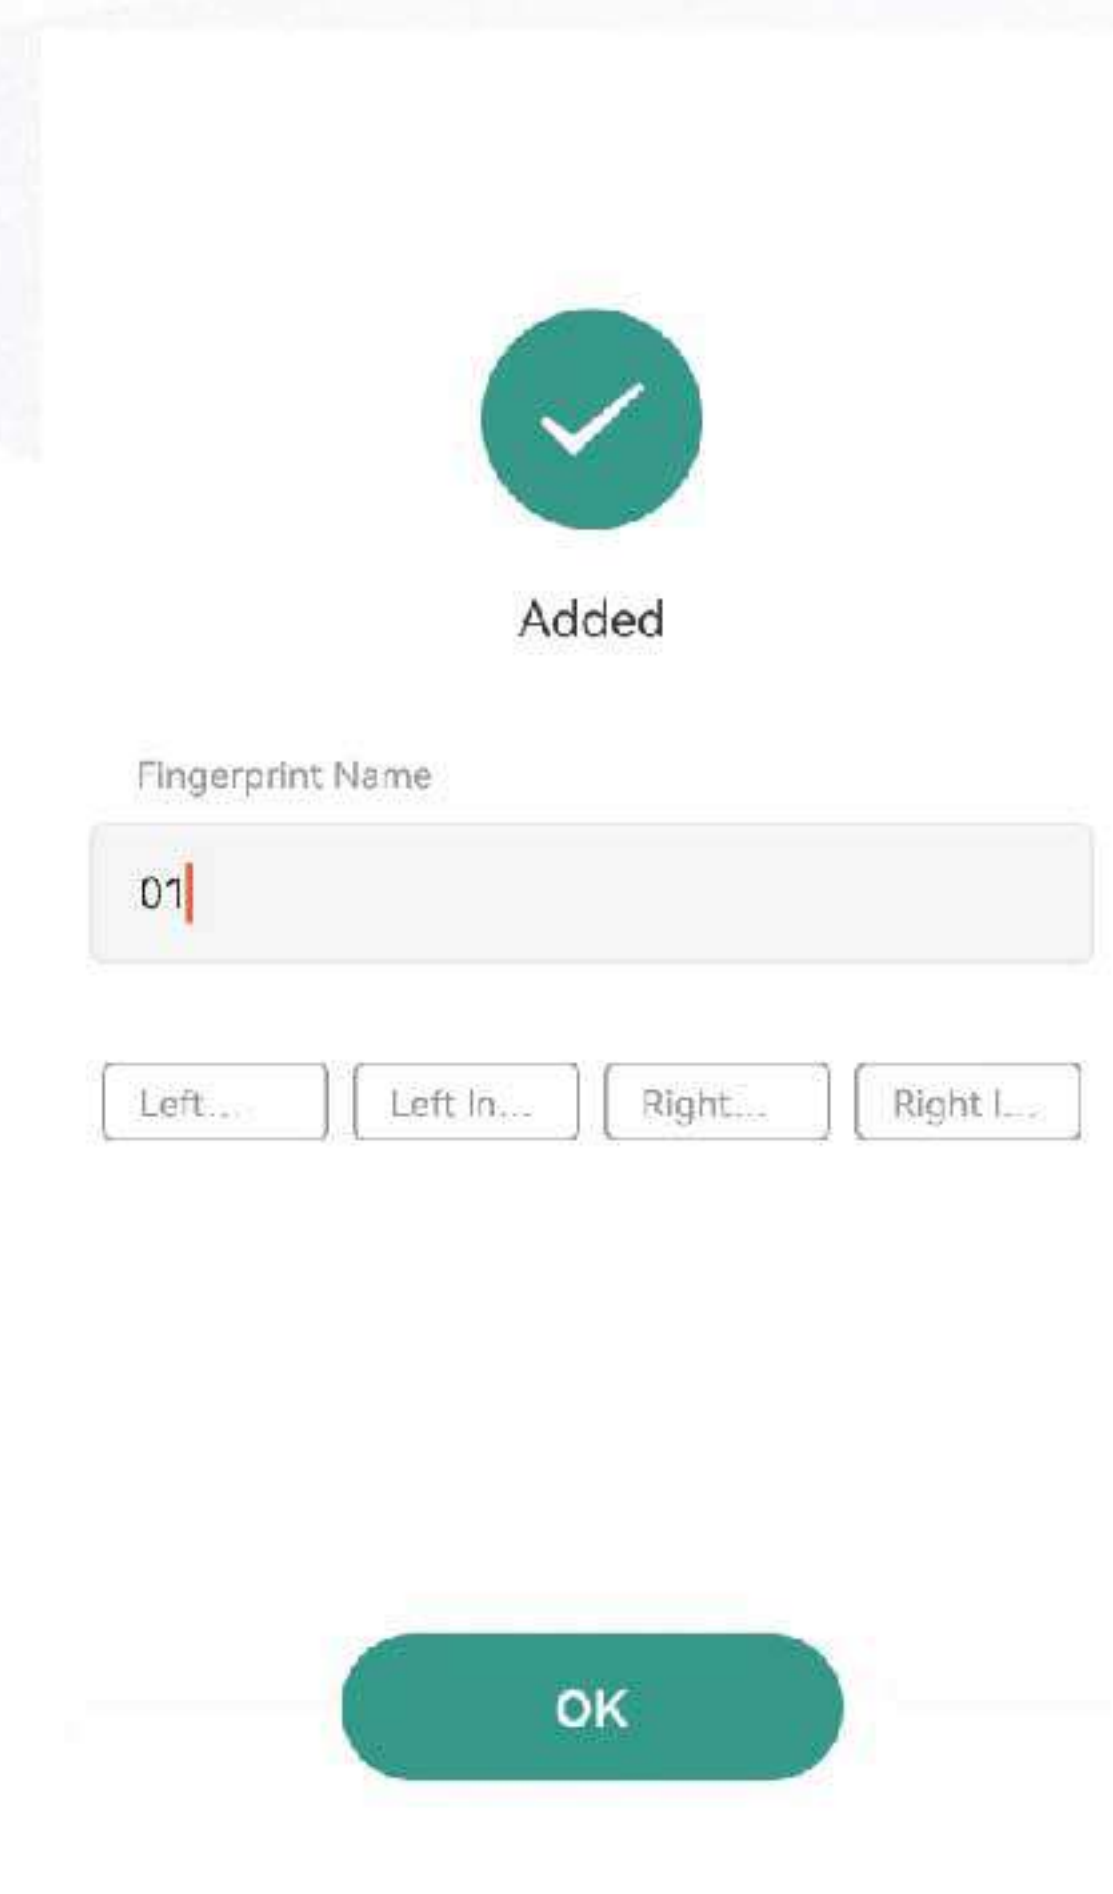
Member Management - Set Fingerprint Permissions

In the Member Admin Panel Click "+"
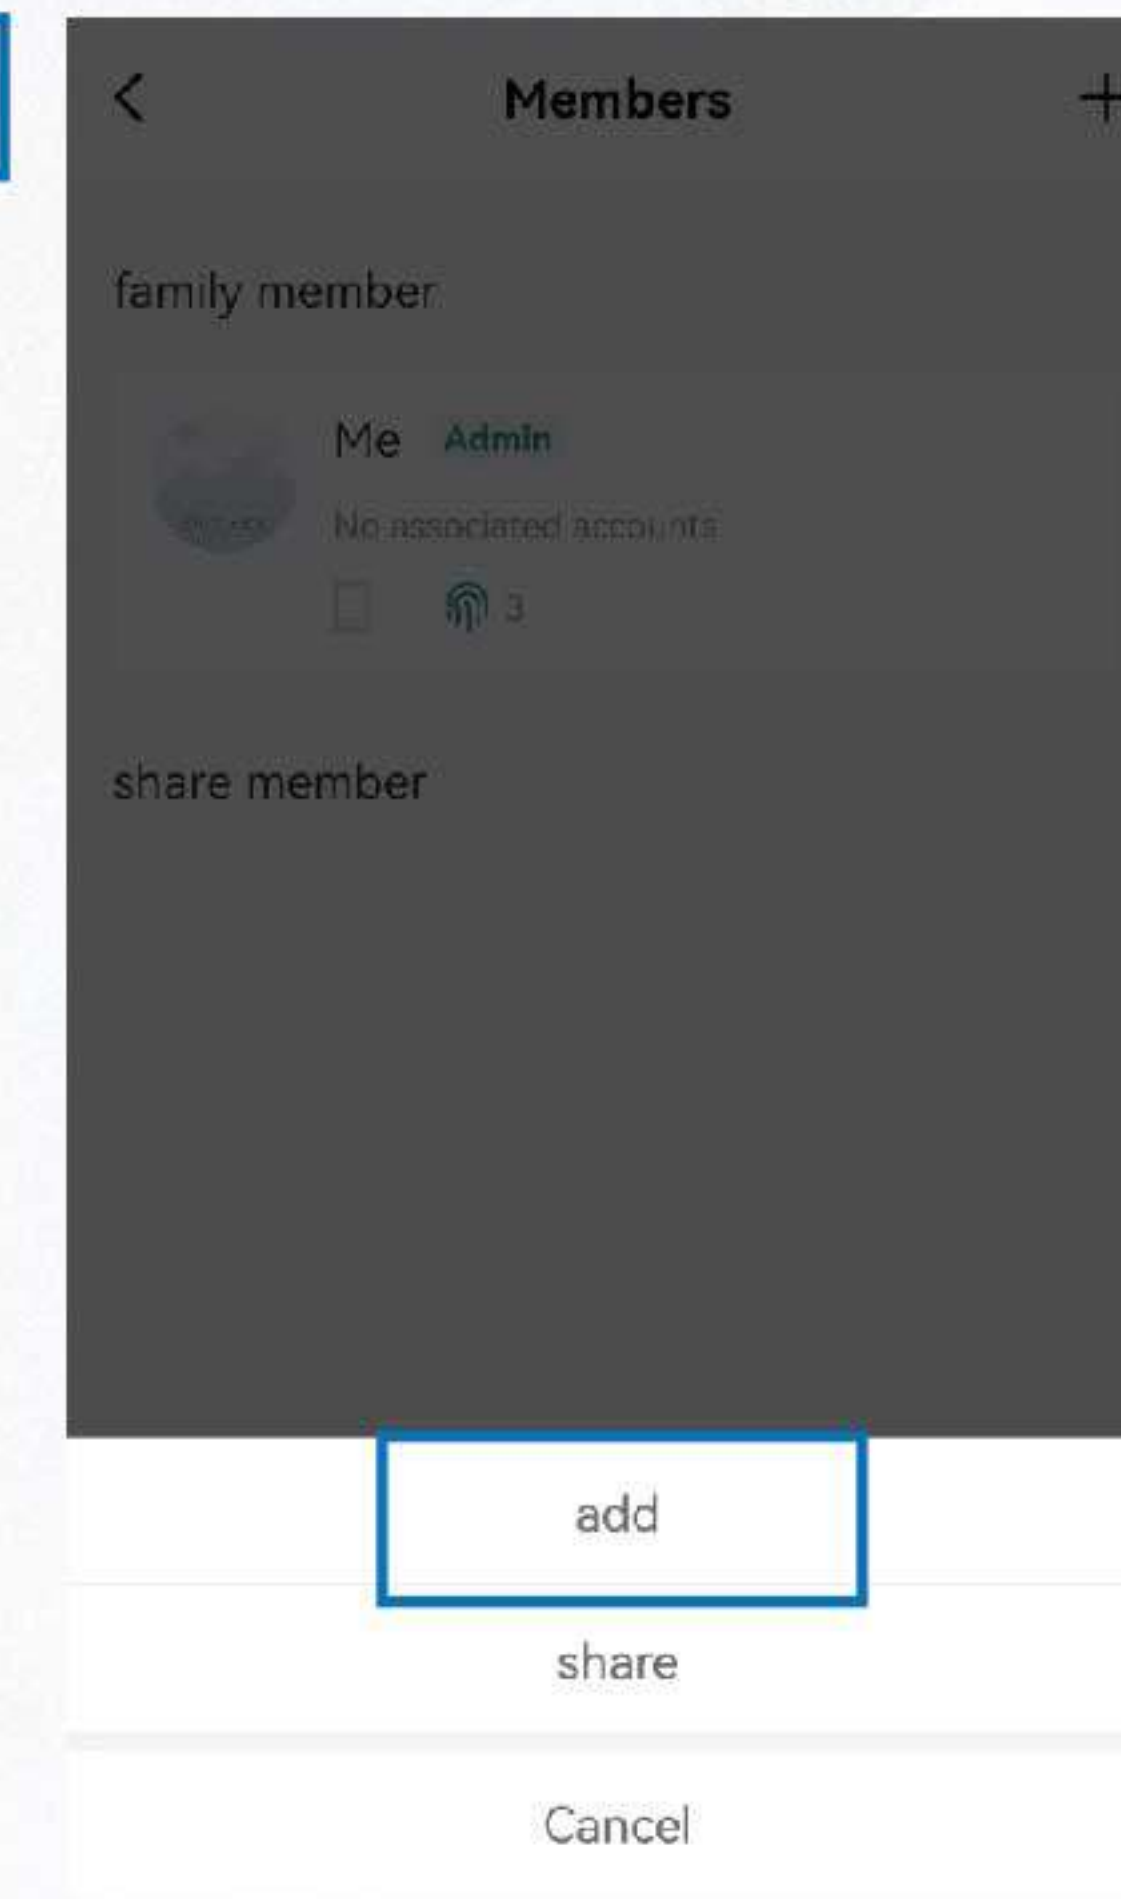
Click add

Set Member Name Click to save

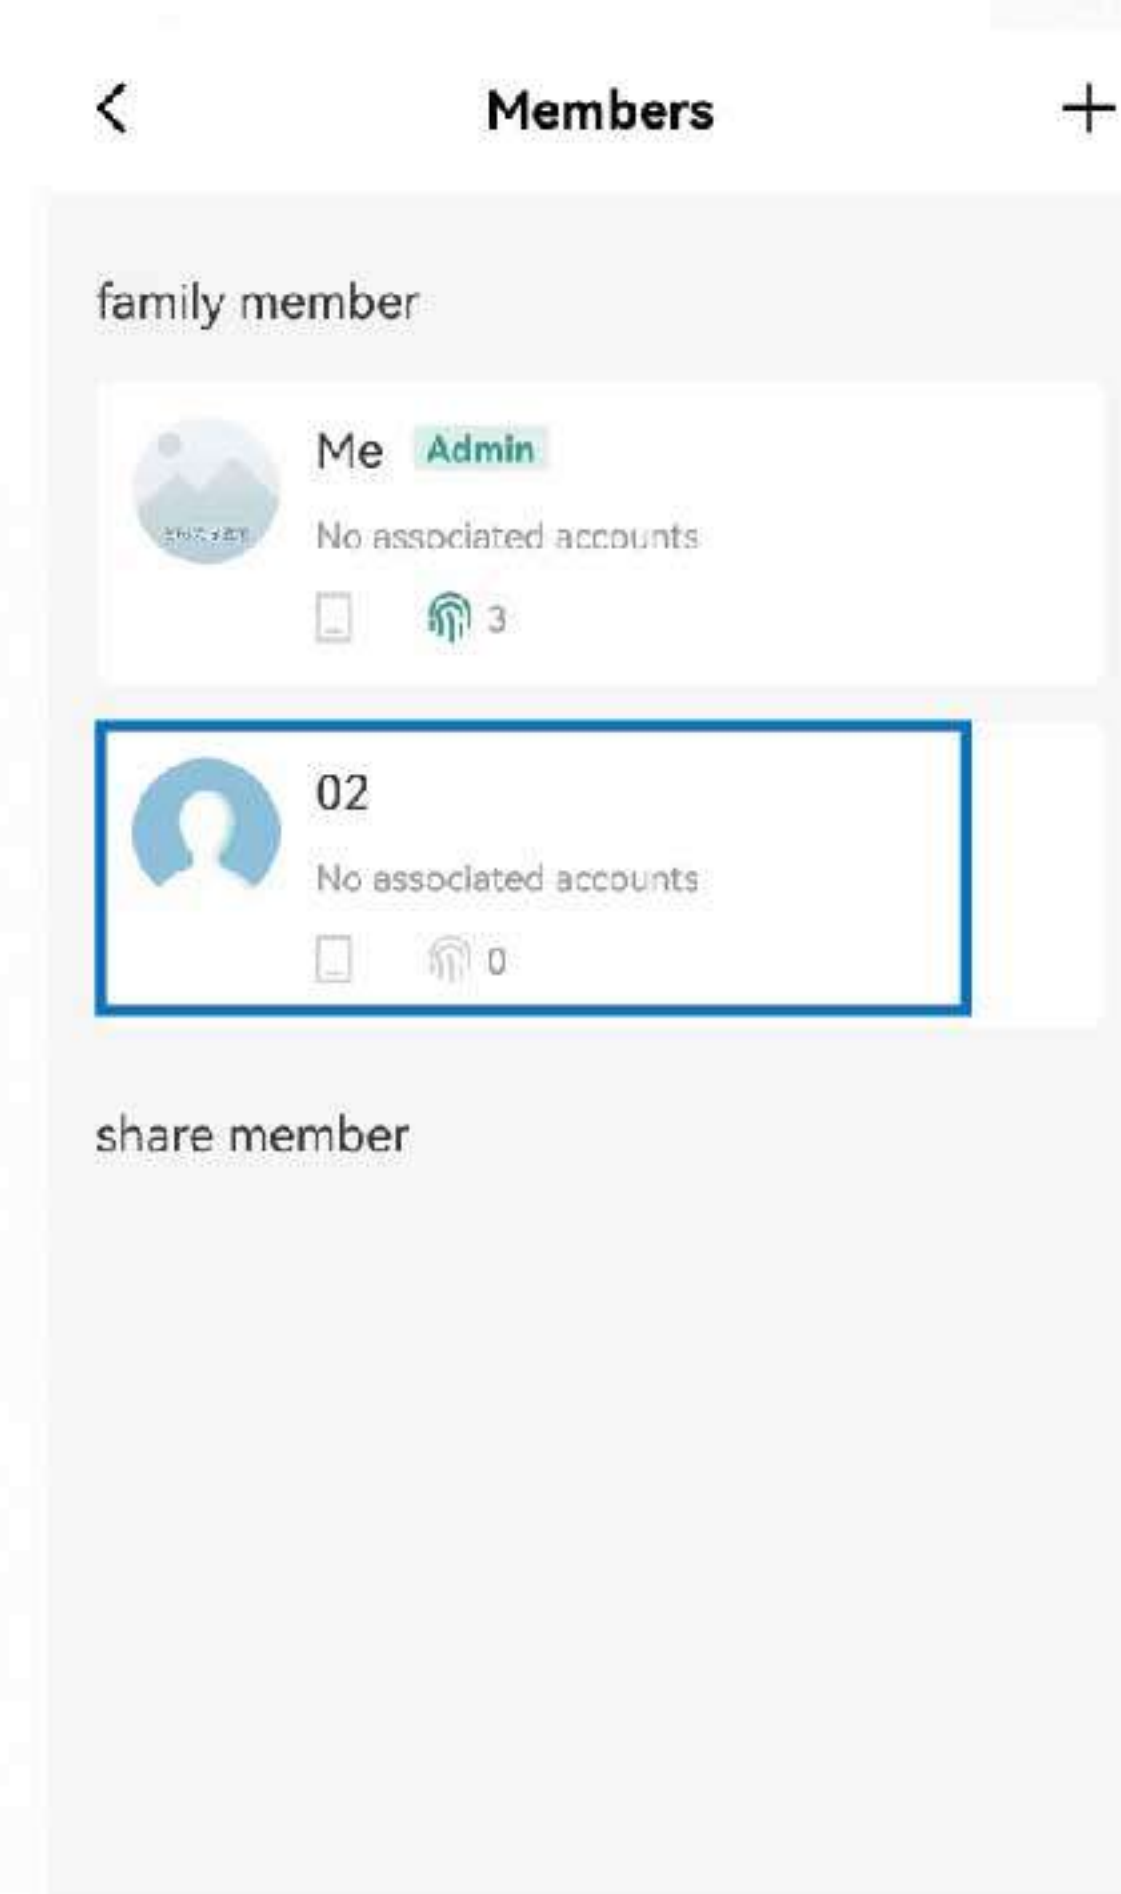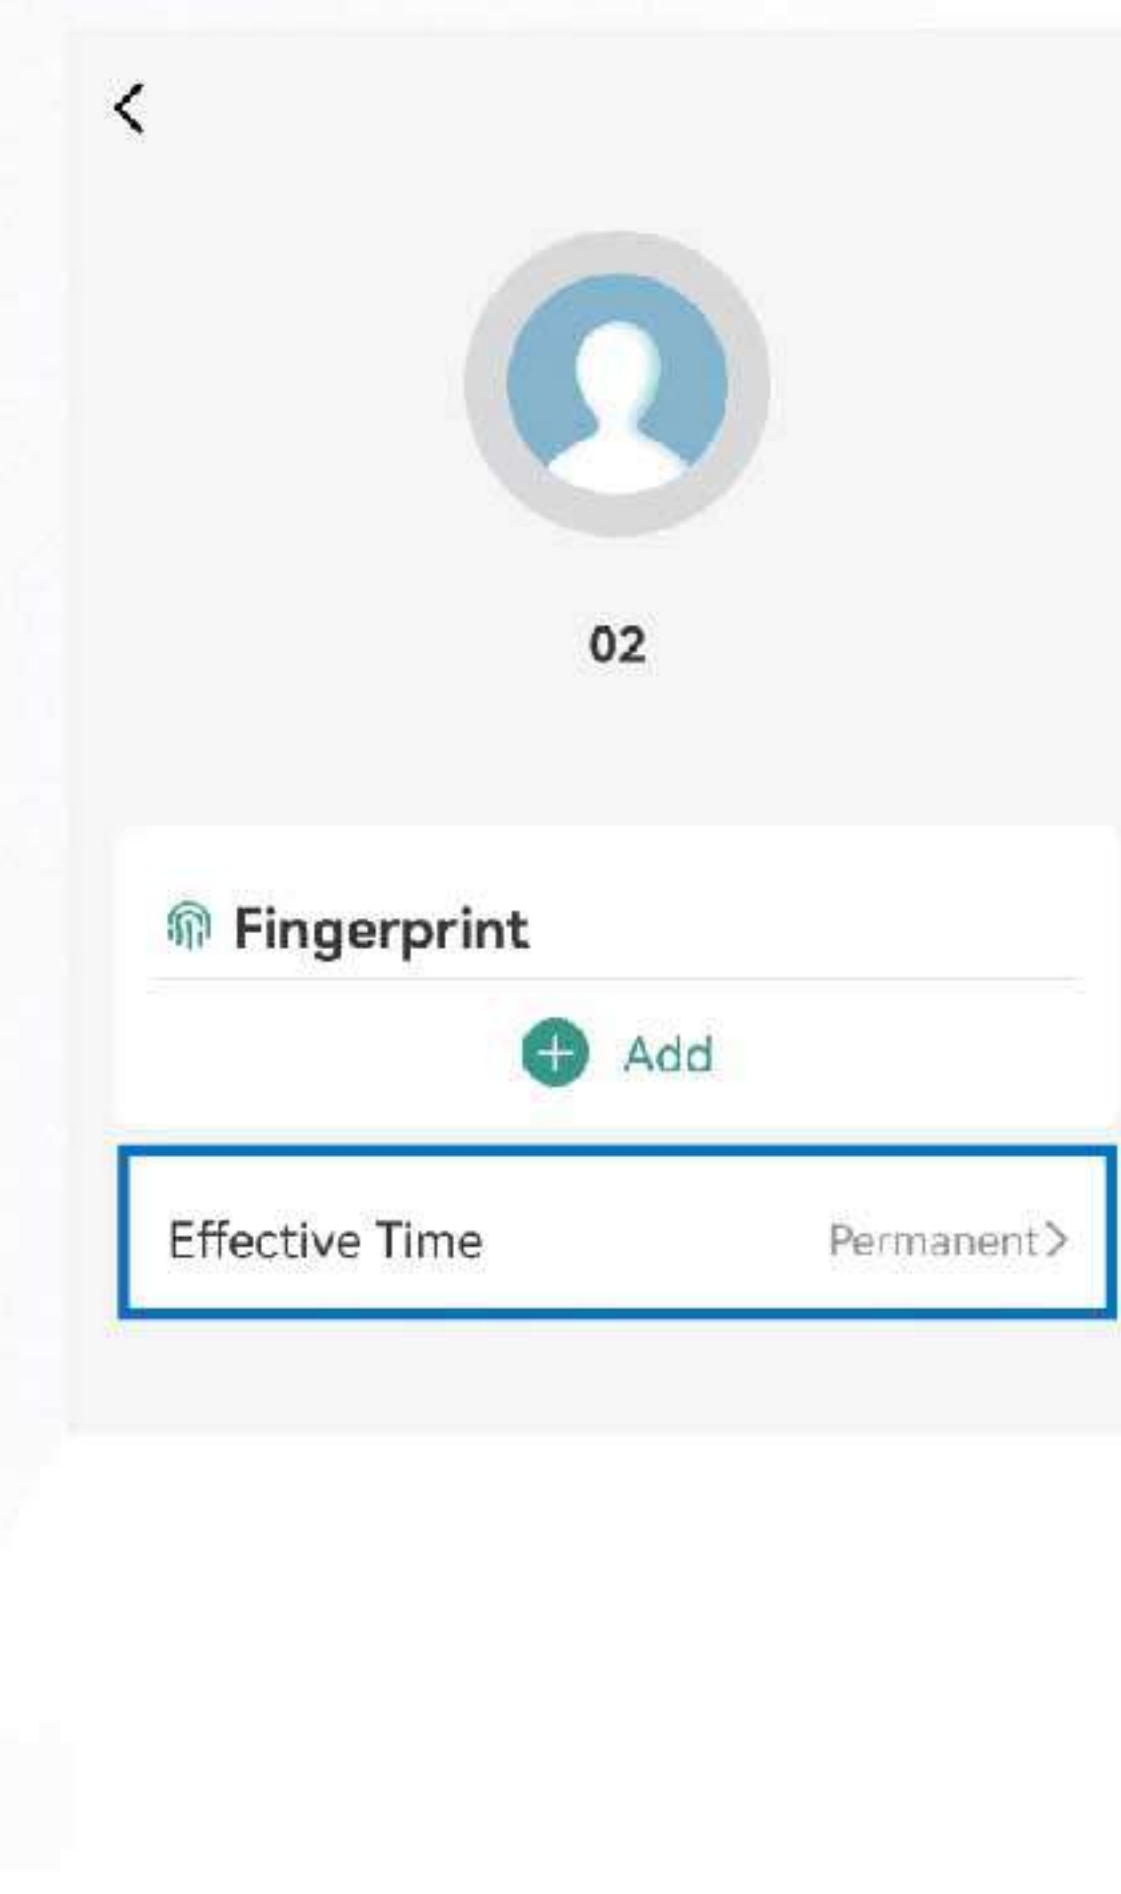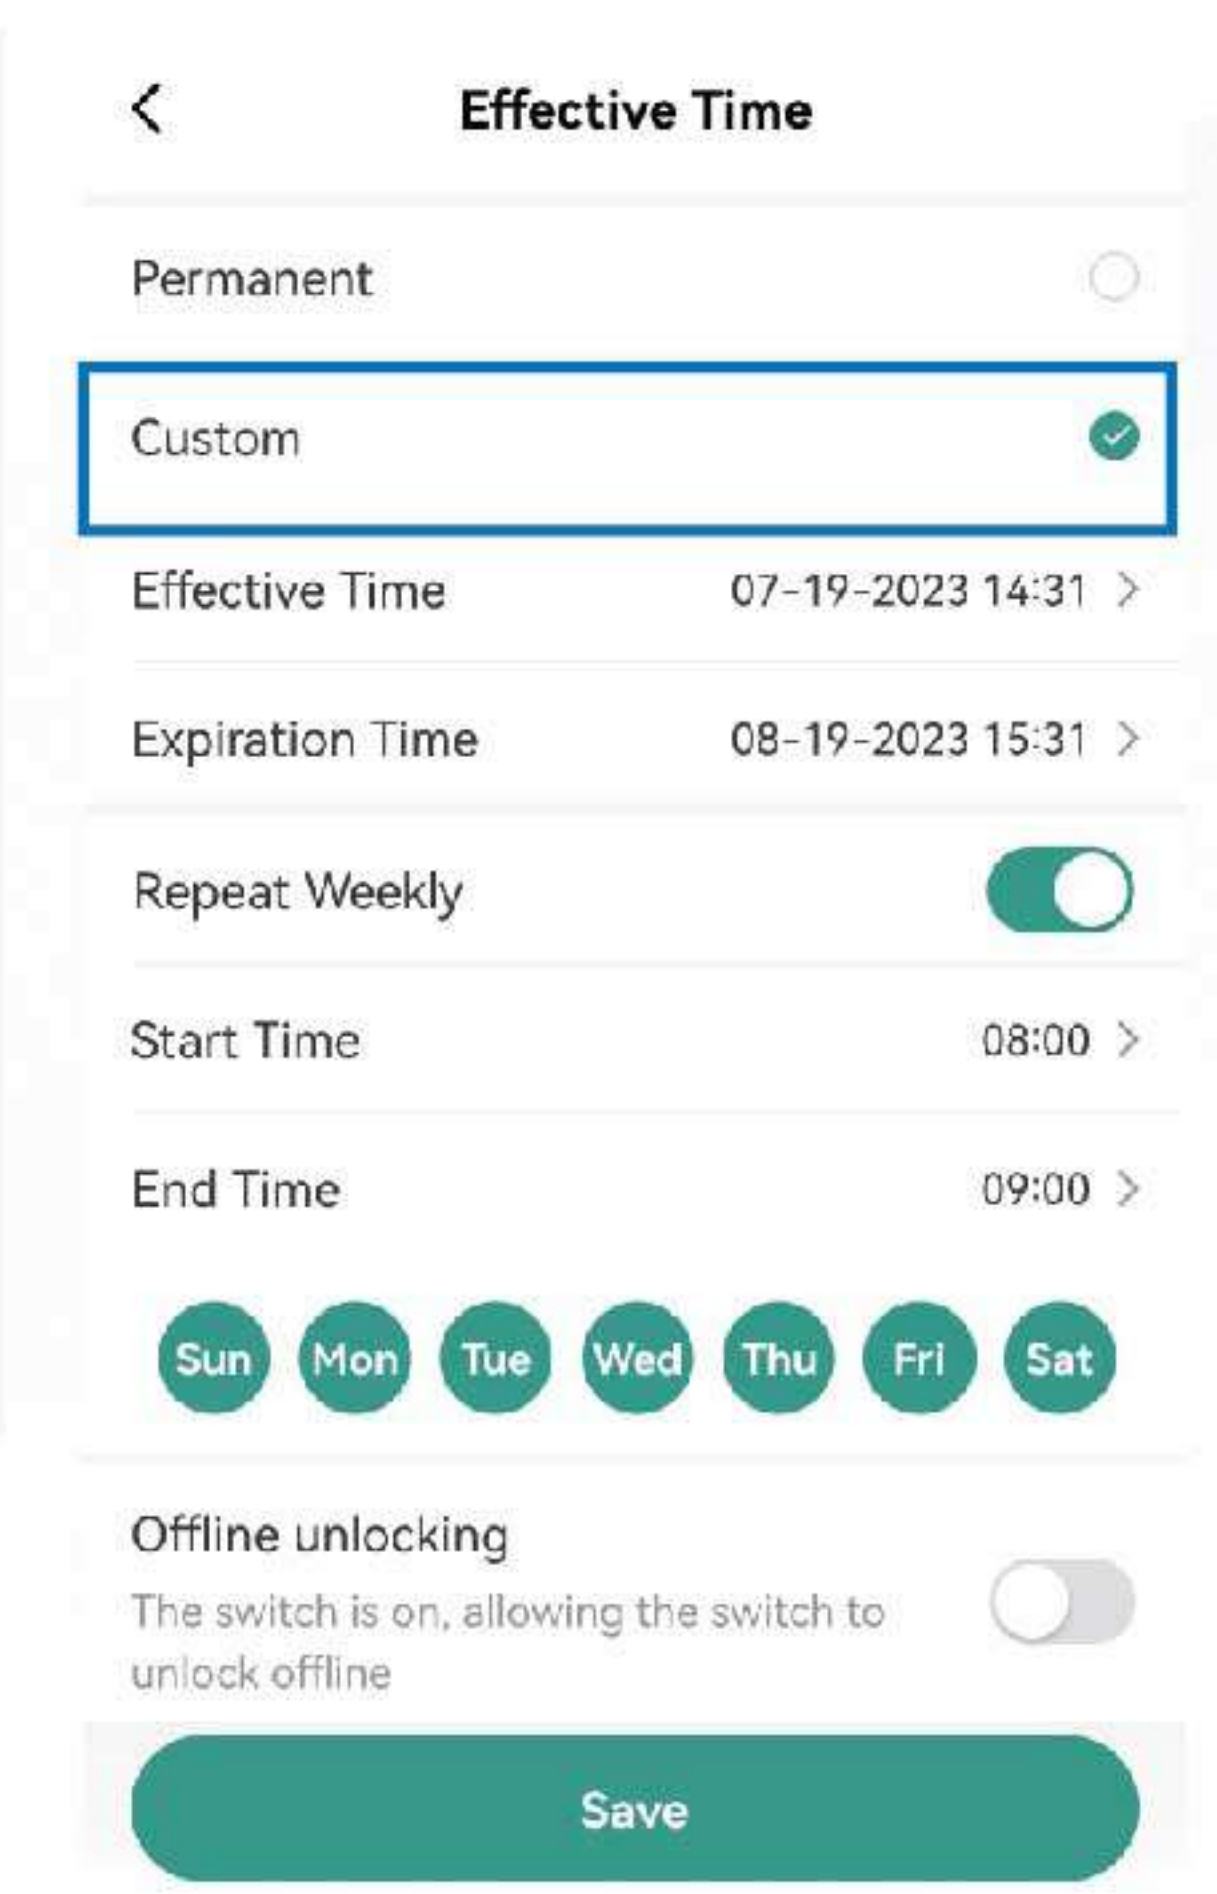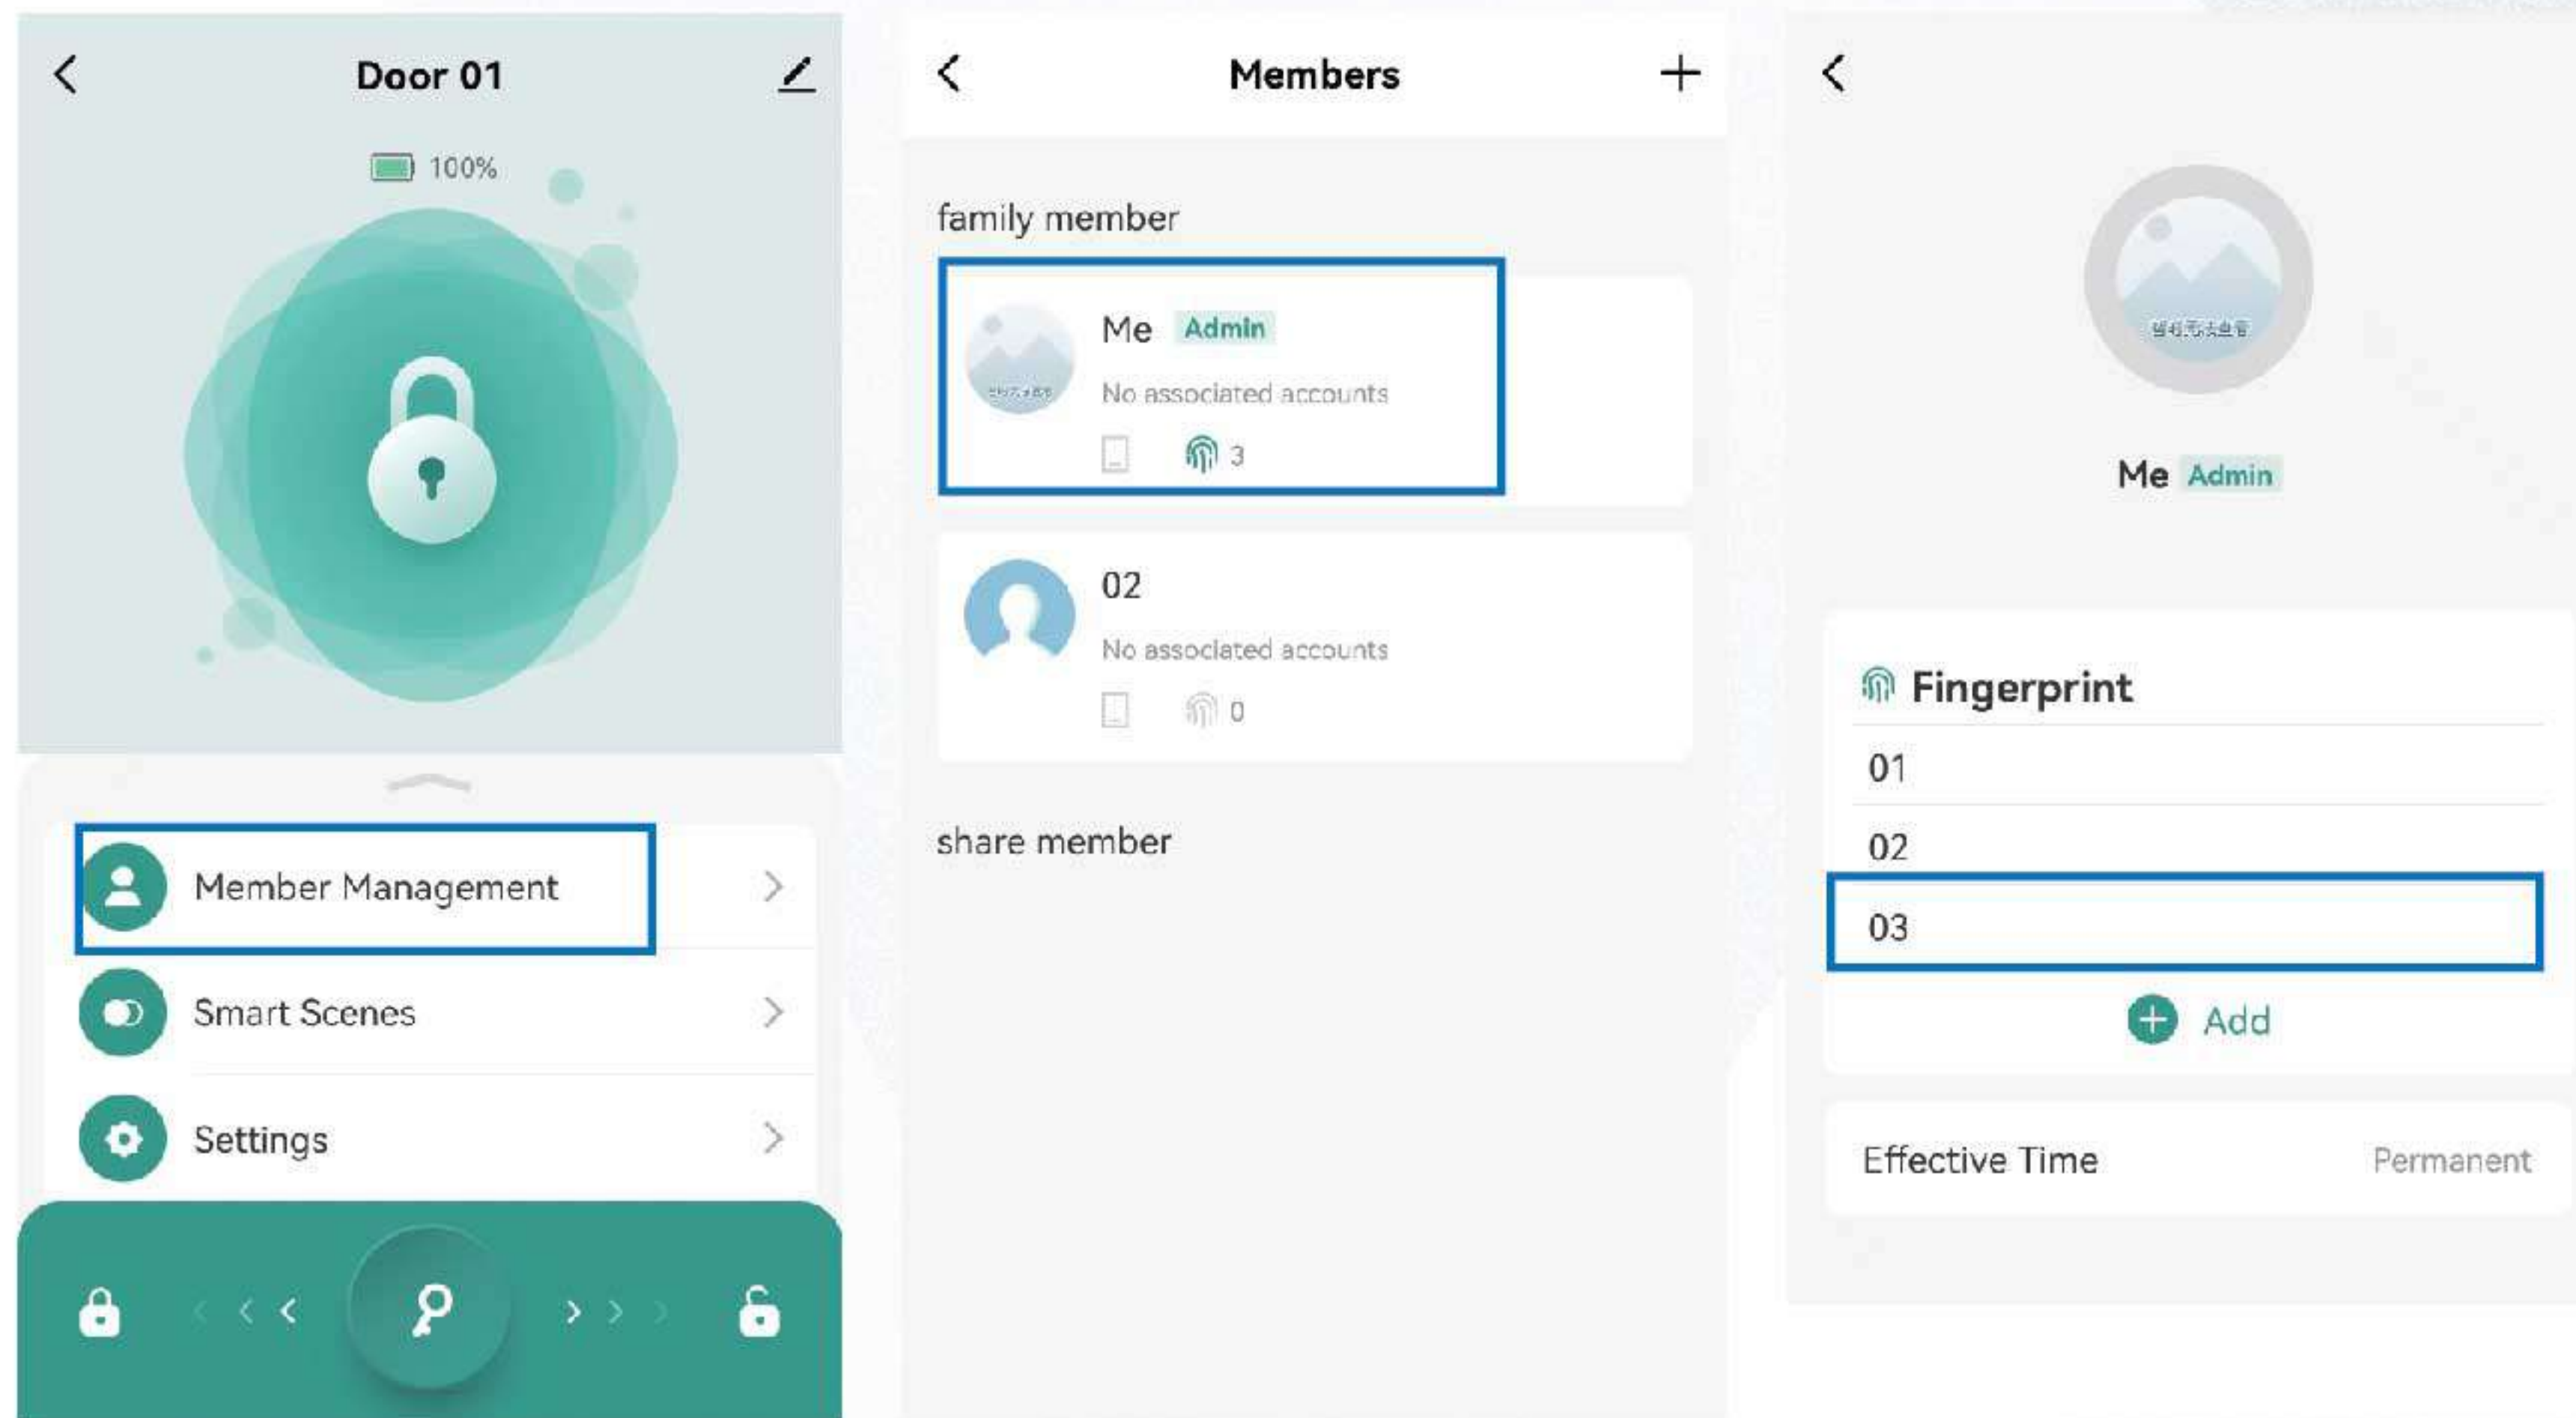In the Member Admin Panel Select the member

Select Effective Time
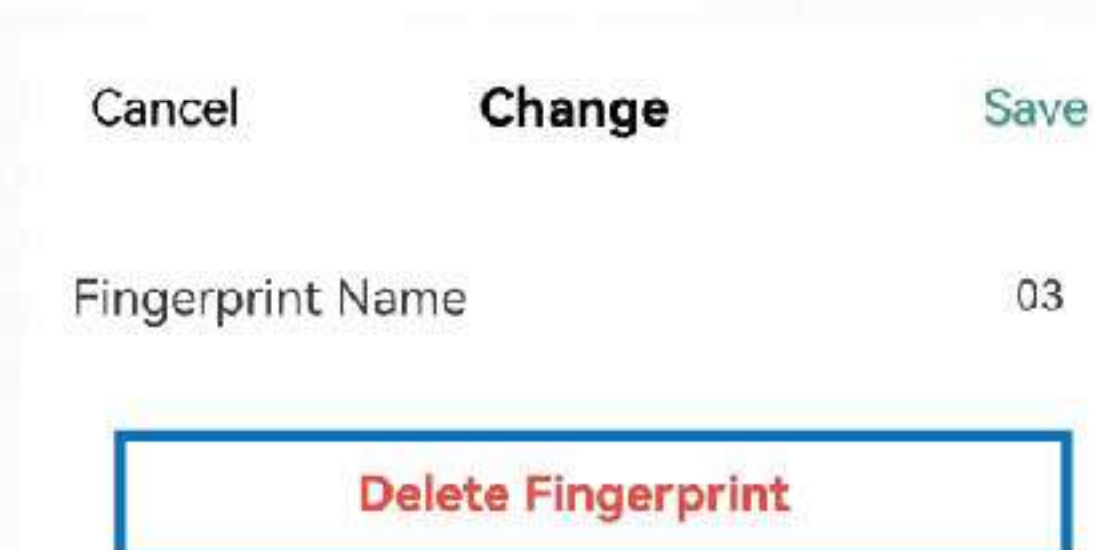

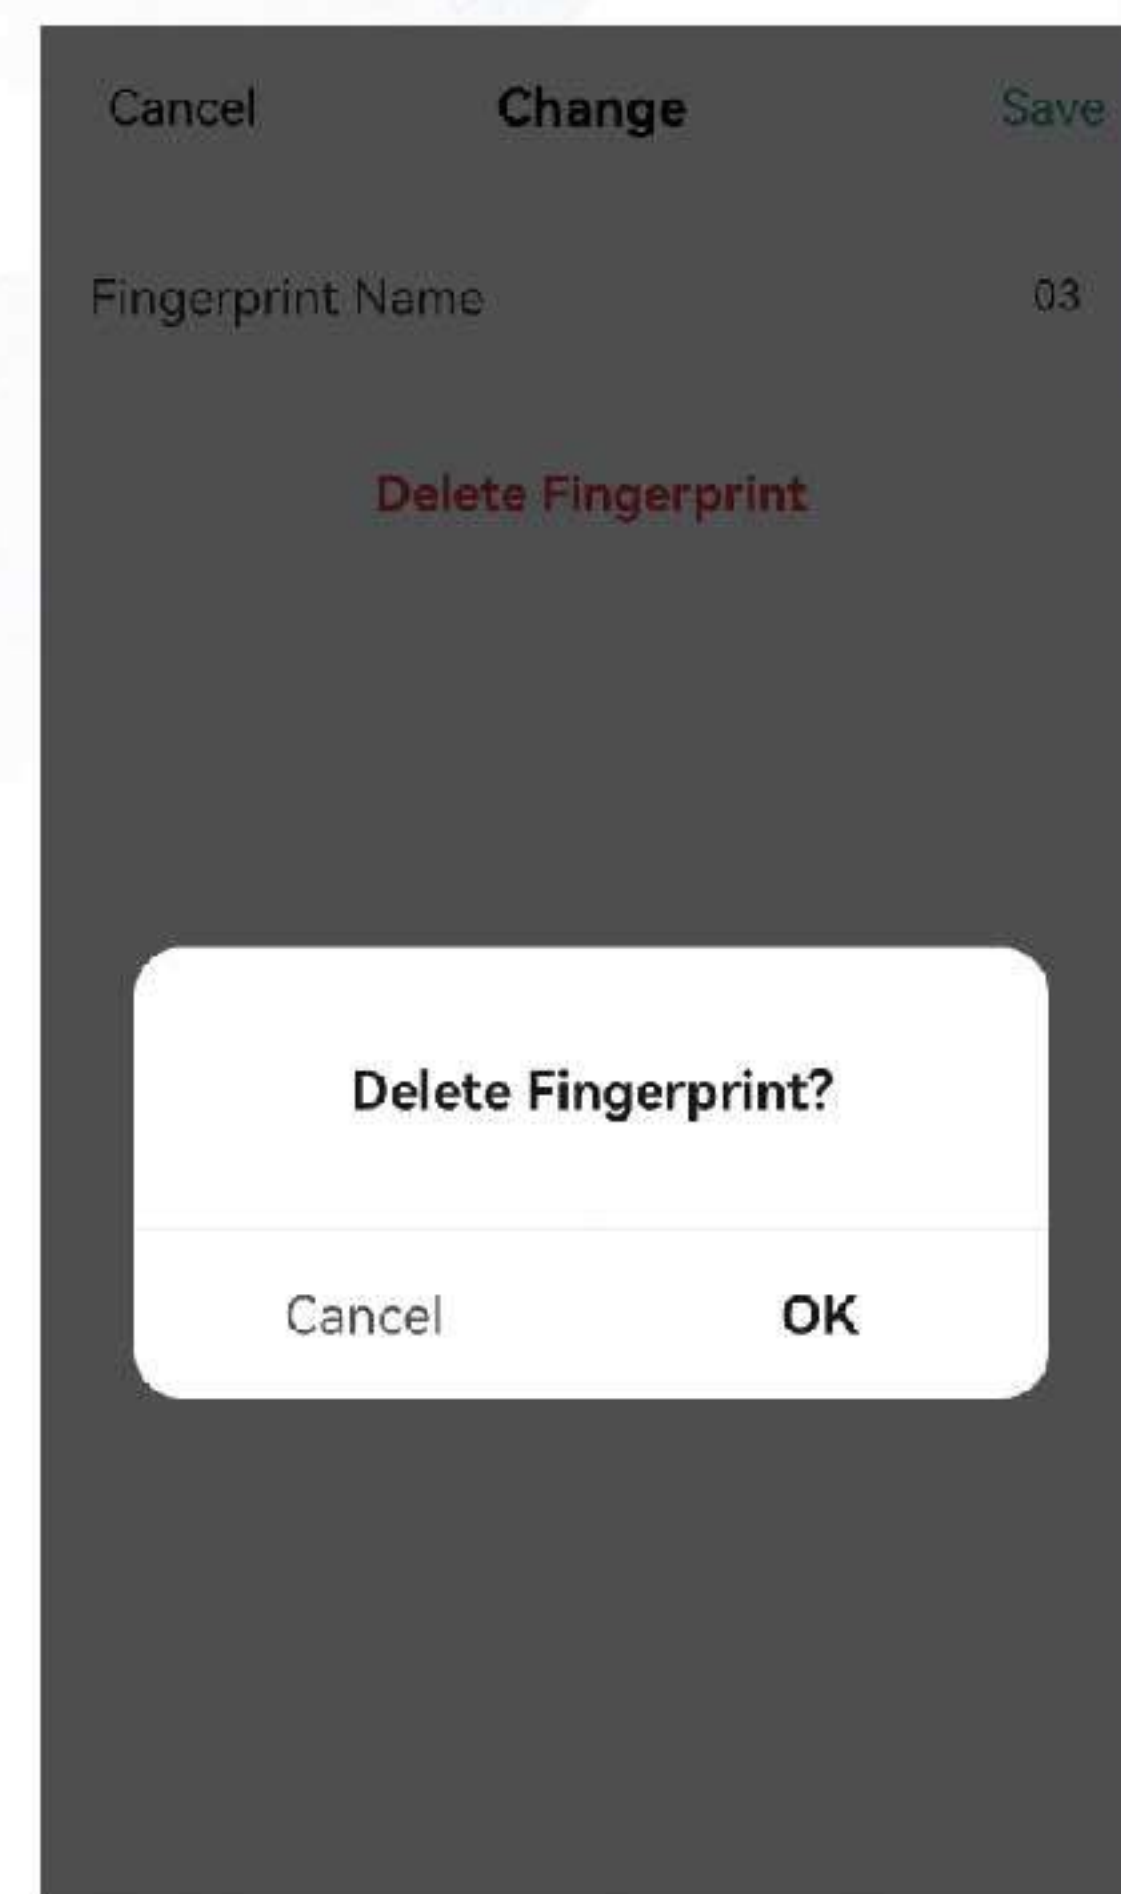Select Custom, Set Fingerprint Permissions Click Save

Delete Fingerprint

Click Member Management
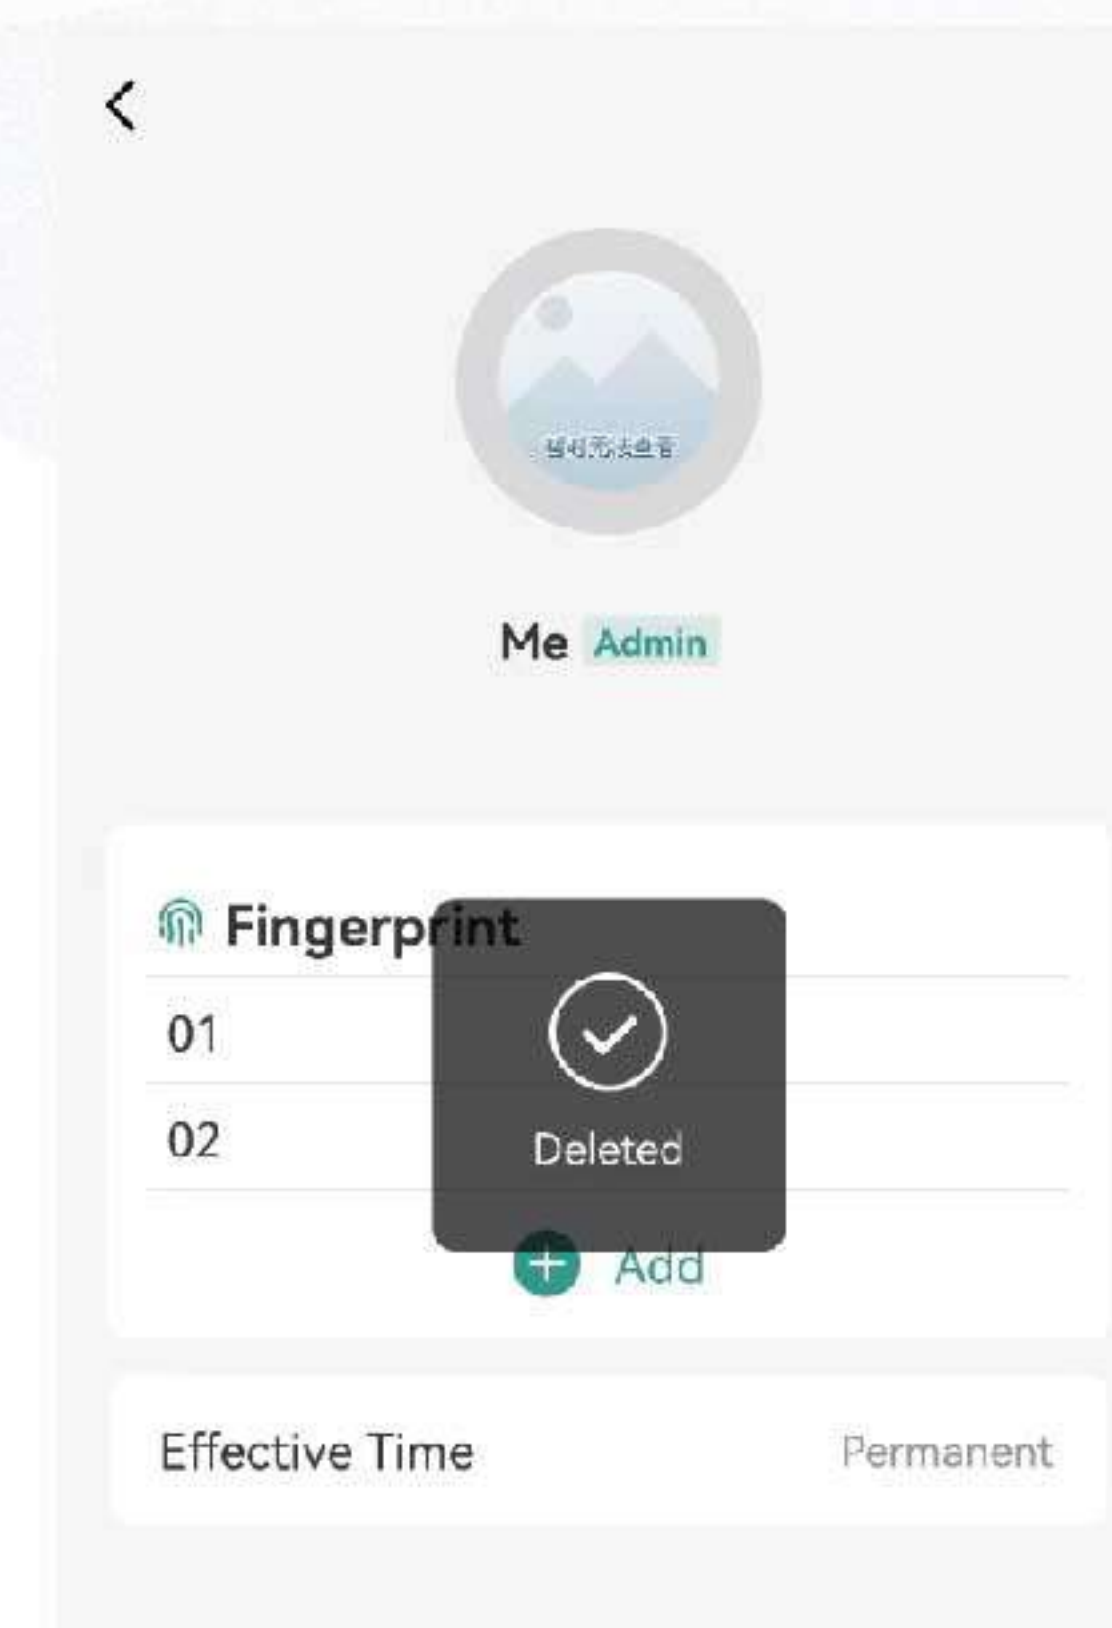
Select the member to remove the fingerprint

Select the fingerprint you want to delete


Click Delete Fingerprint

Click OK

**Fingerprint deleted successfully**

Door lock operation record

The records of the open door log are arranged in reverse order, the unlocked ID with the user name is directly user name, and the unlocked ID is displayed.

When the door lock is connected to the Bluetooth of the mobile phone, the door record will be displayed to the APP in real time, otherwise the record will be stored locally in the door lock, waiting for the next Bluetooth connection and retransmission after opening the door.
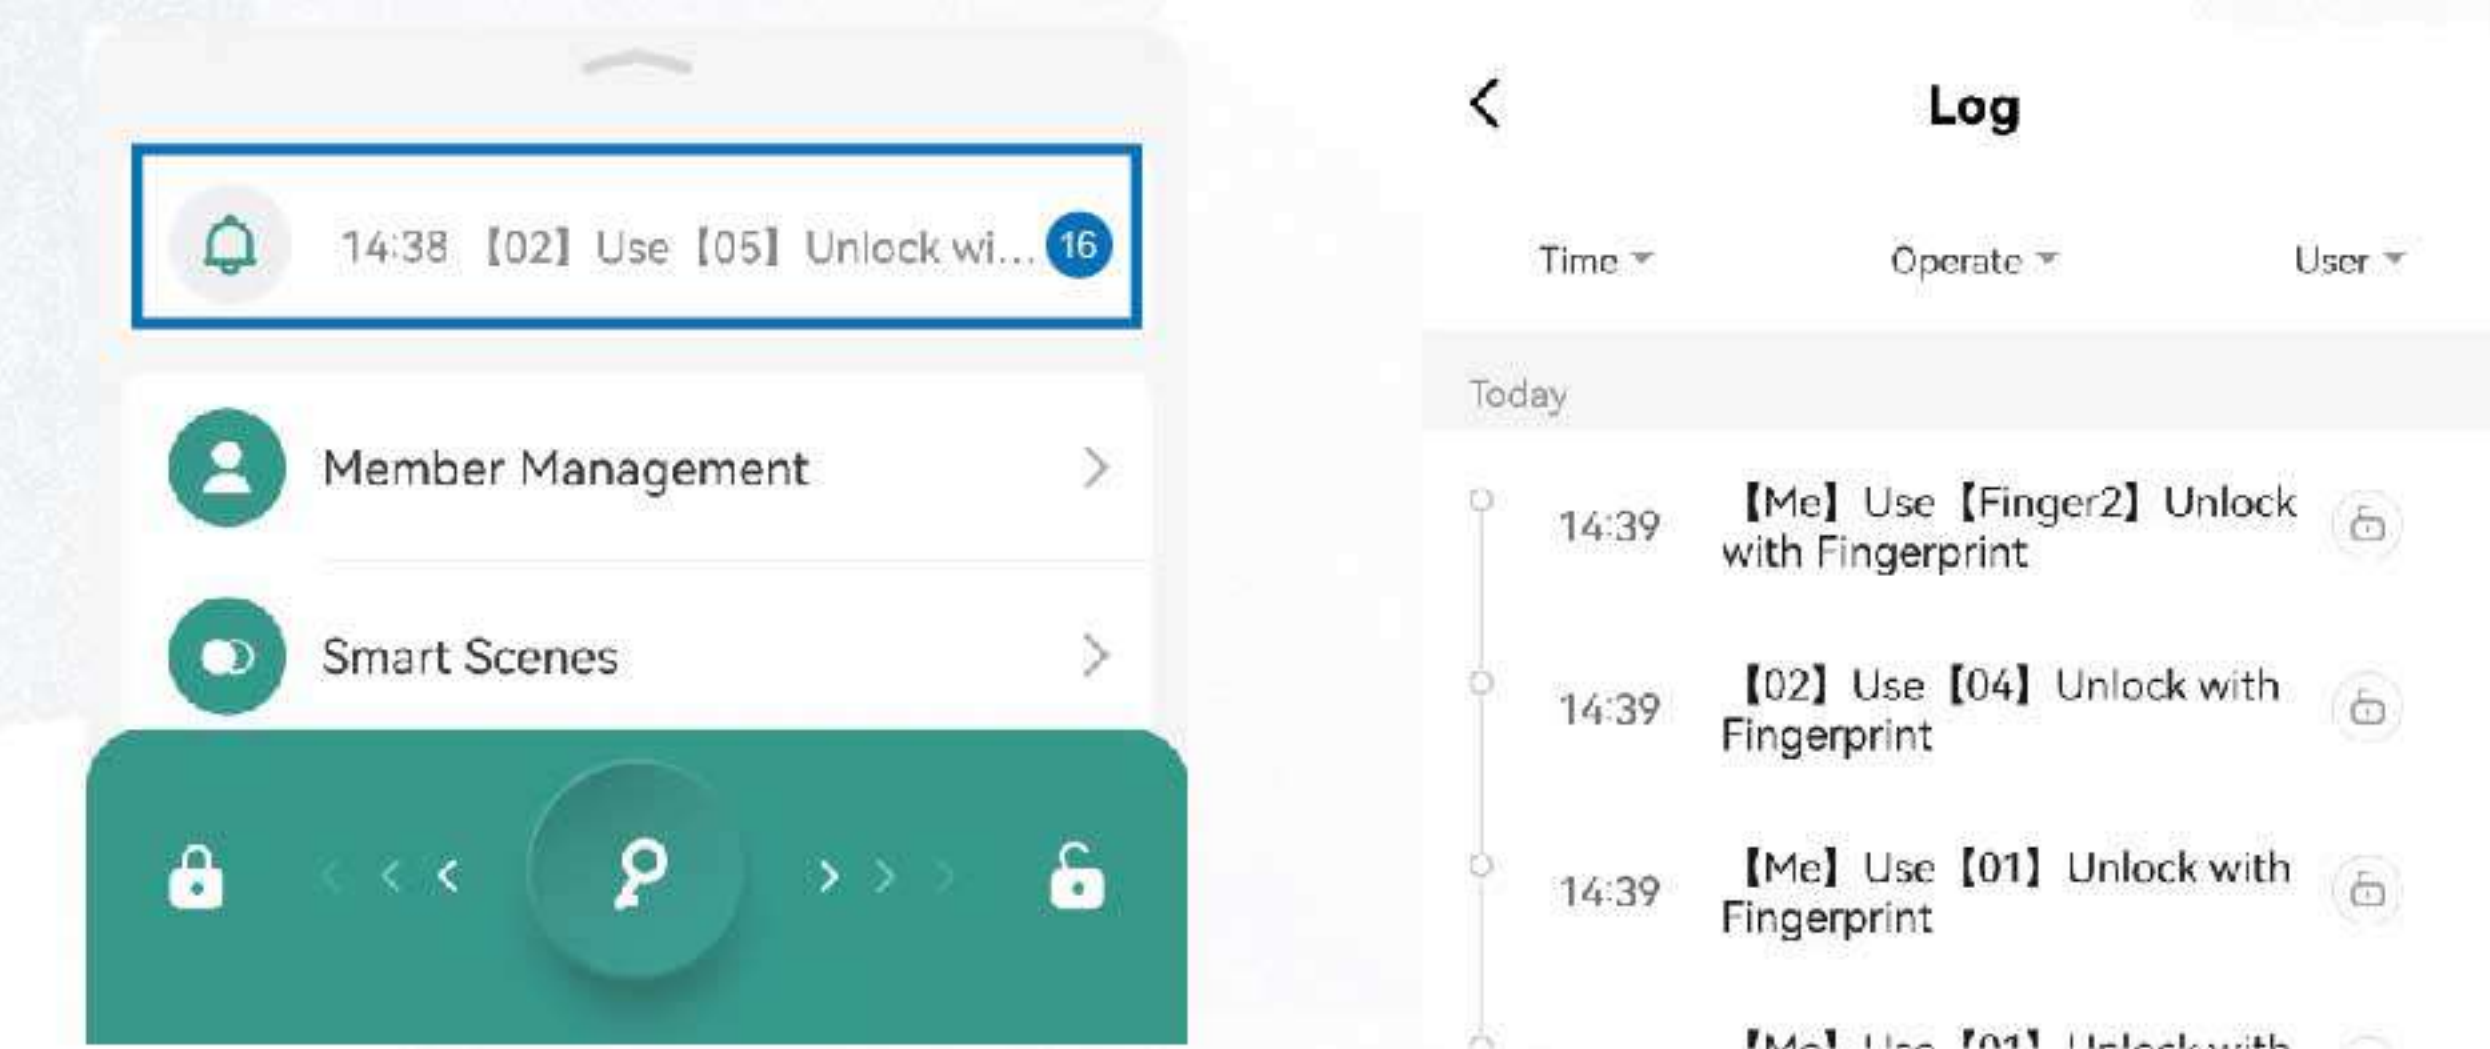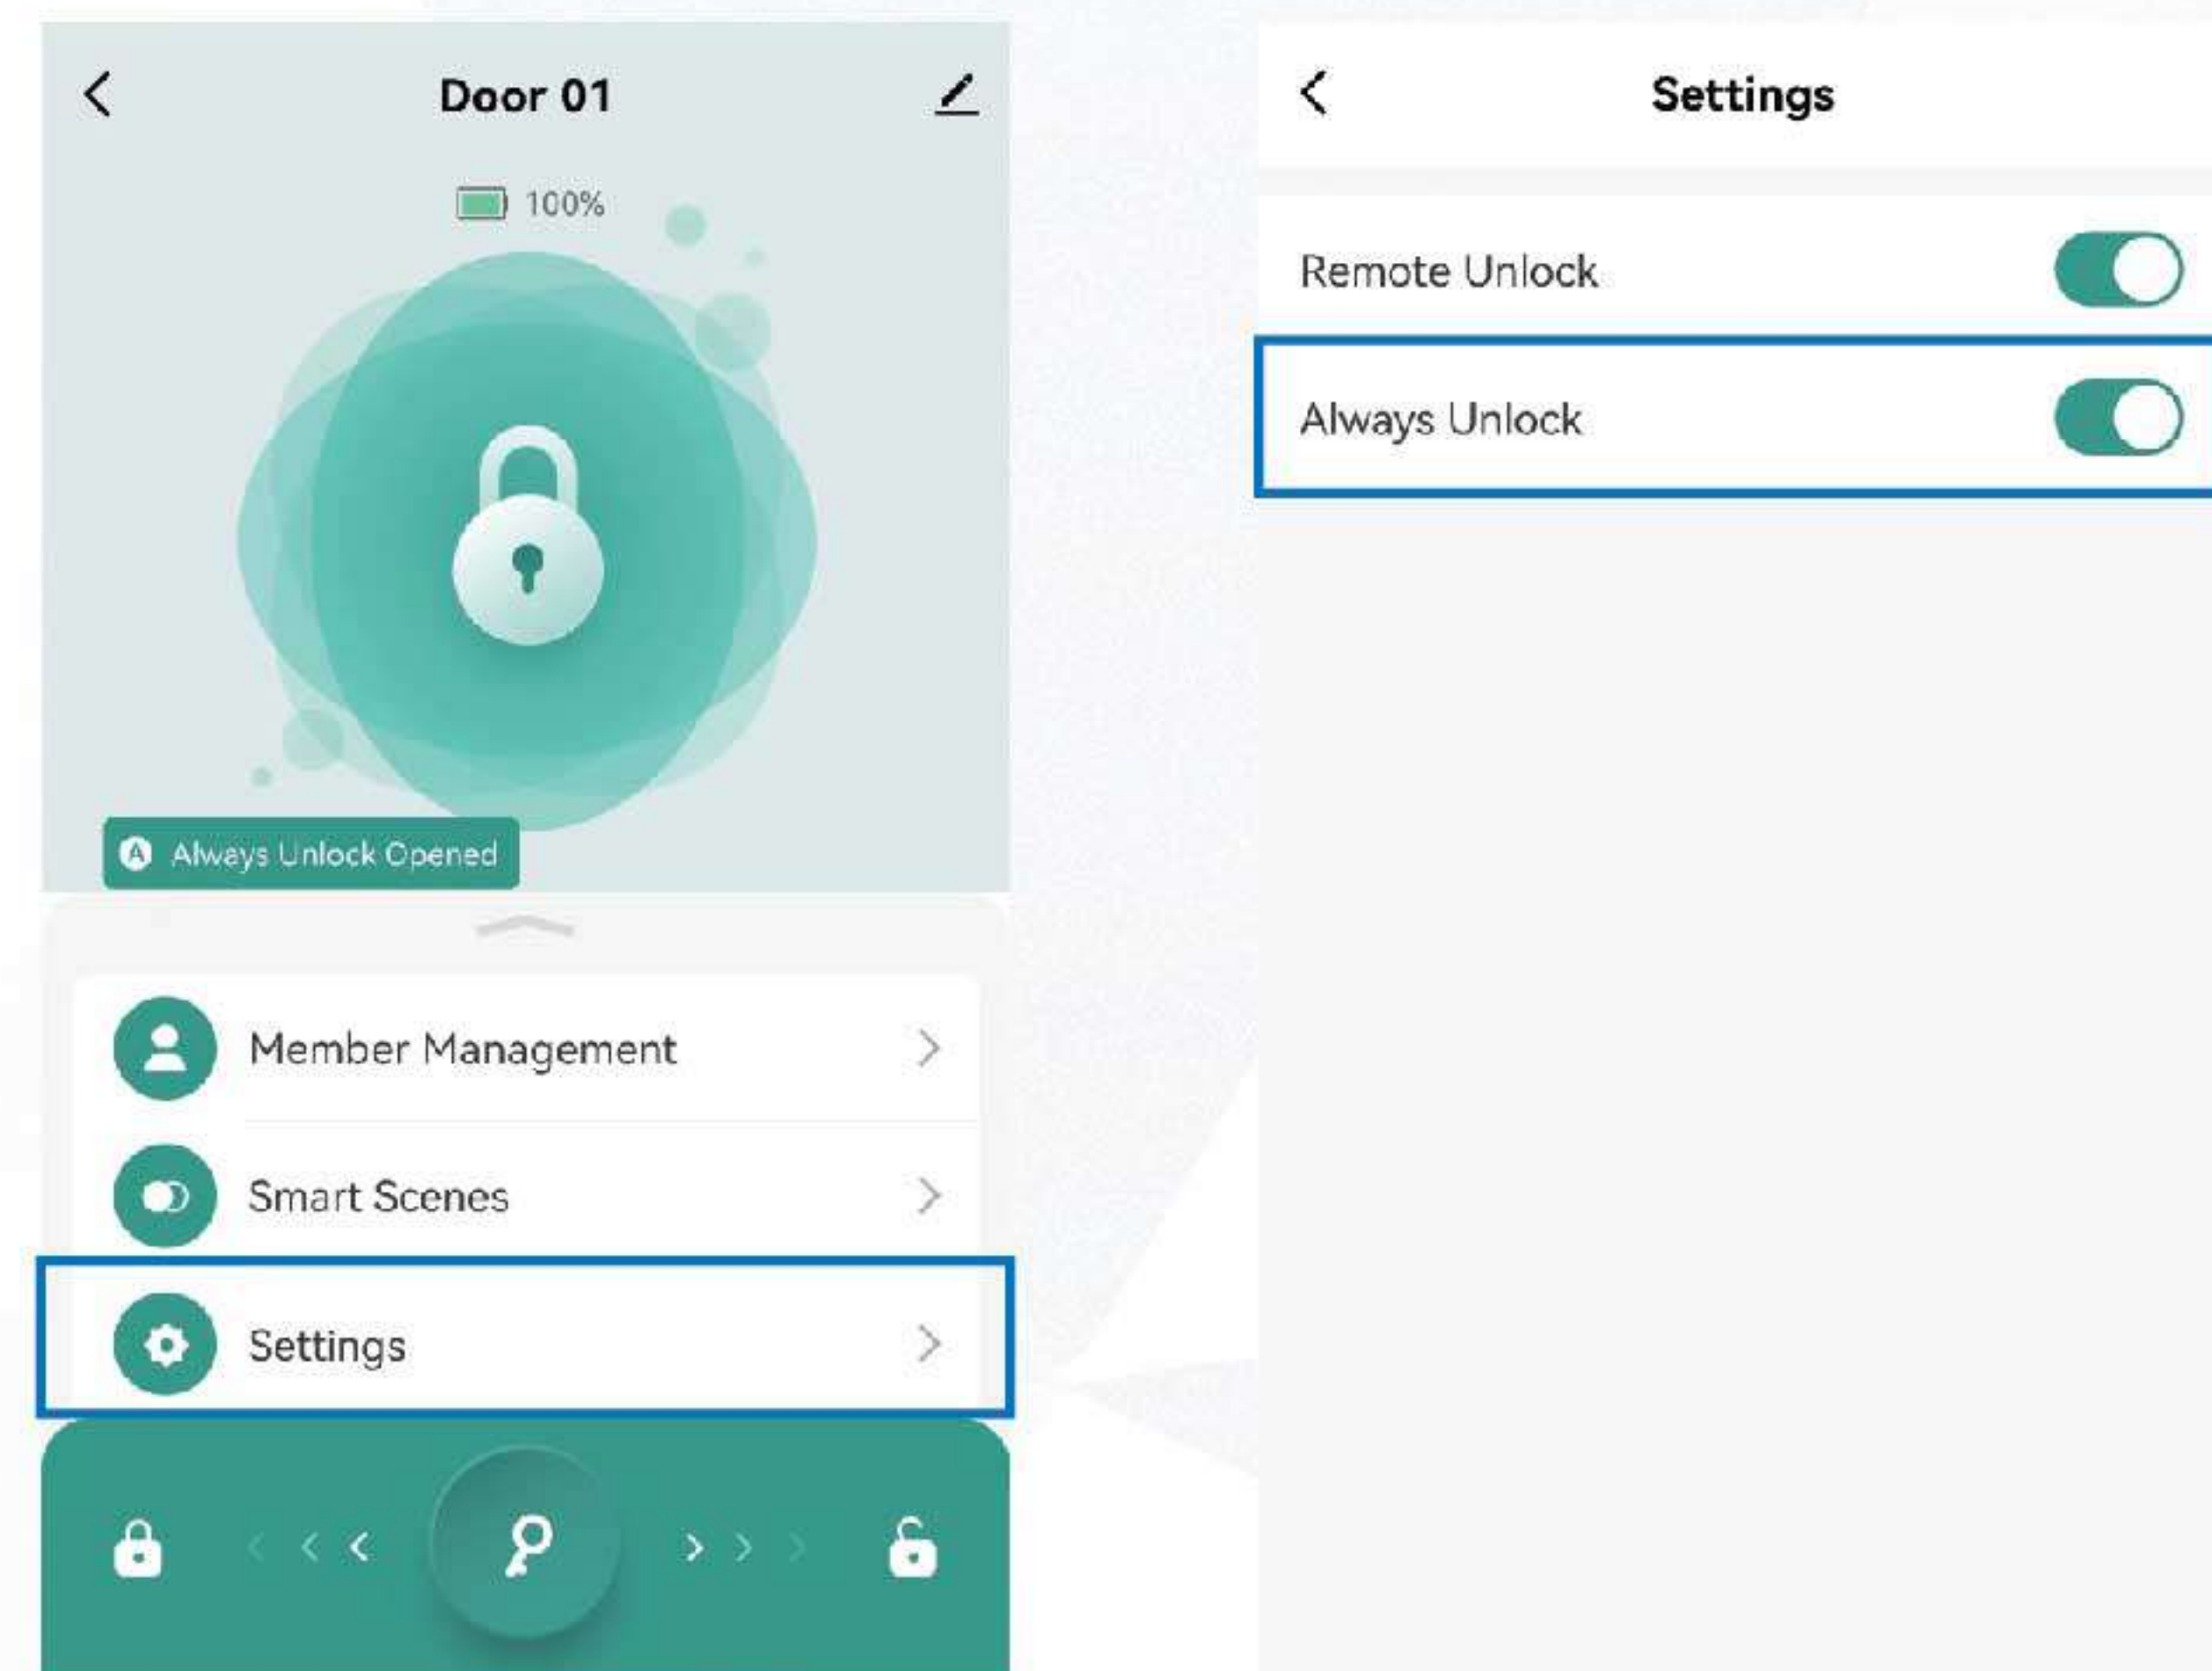

Smart Linkage Reminder
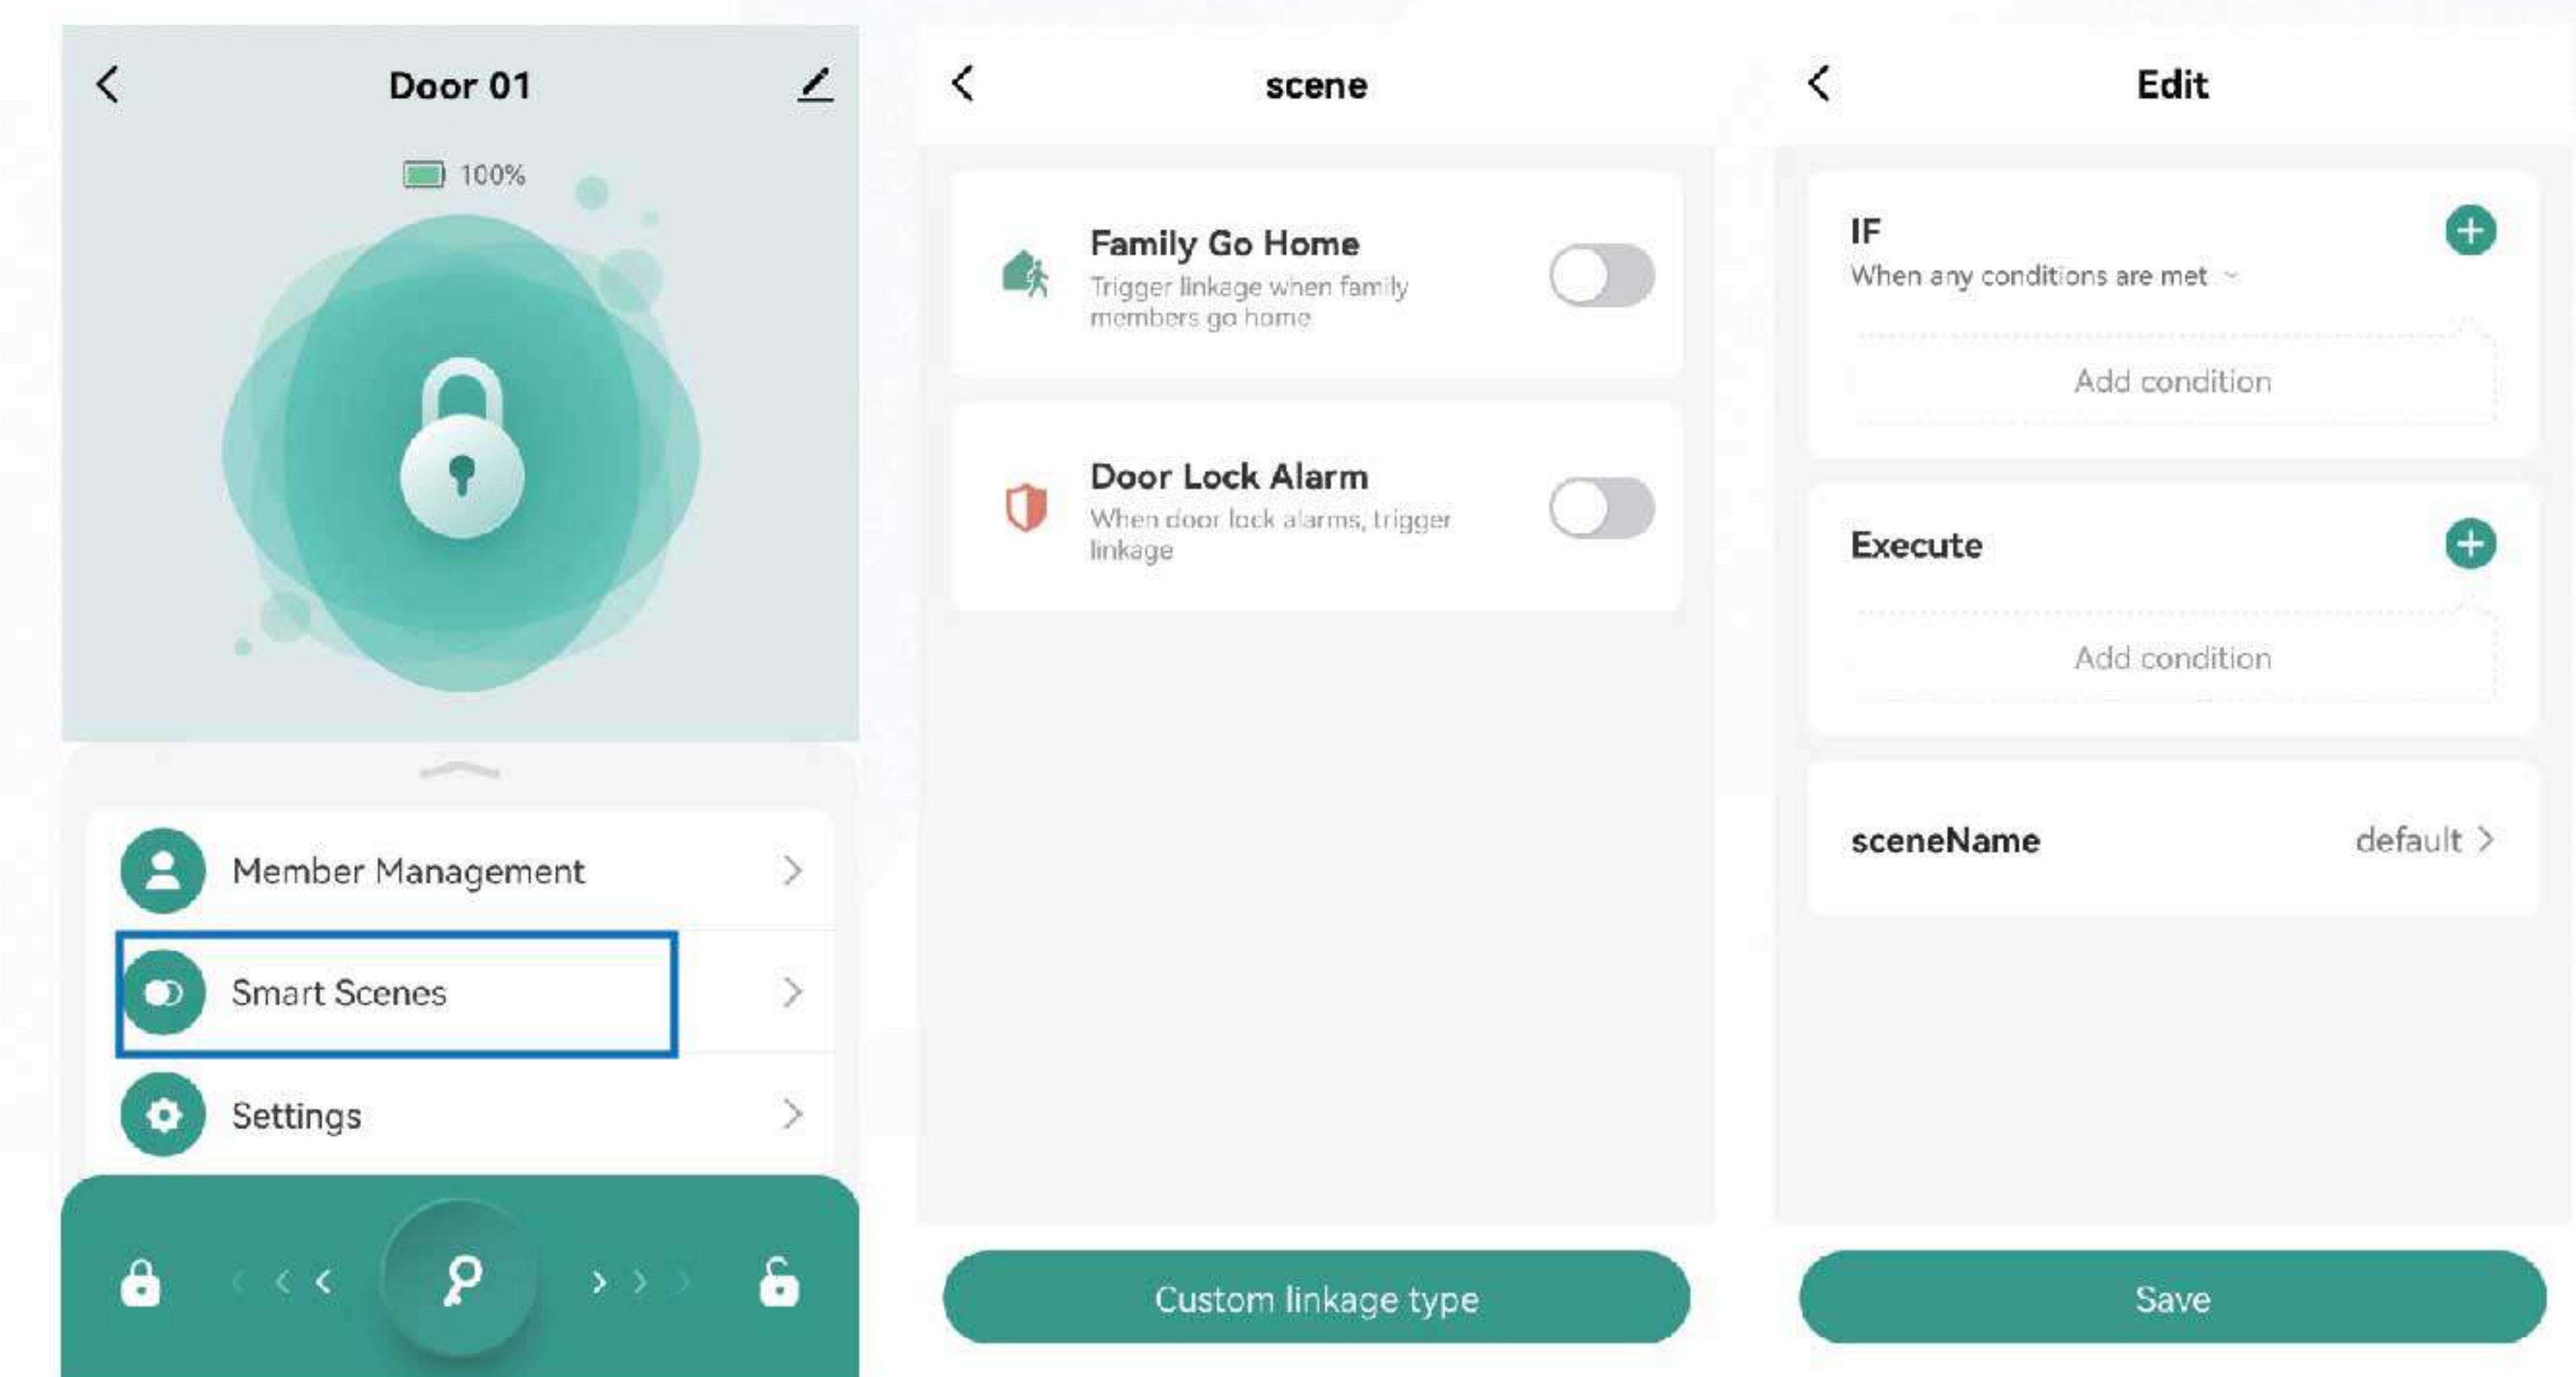
Normally Open Set / Cancel Normally

Normally Open Settings: Select the settings in the door lock interface and turn on the normally open mode.
(The door lock screen will display "Normally Open Mode is On")
Cancel Normally: Select the settings in the door lock screen to turn off the Normally mode.

Set Normally Open mode when not connected

Long press the fingerprint head does not release for about 6 seconds, during which the motor normally unlocks the lock once, and then unlocks again to enter the normally open mode.
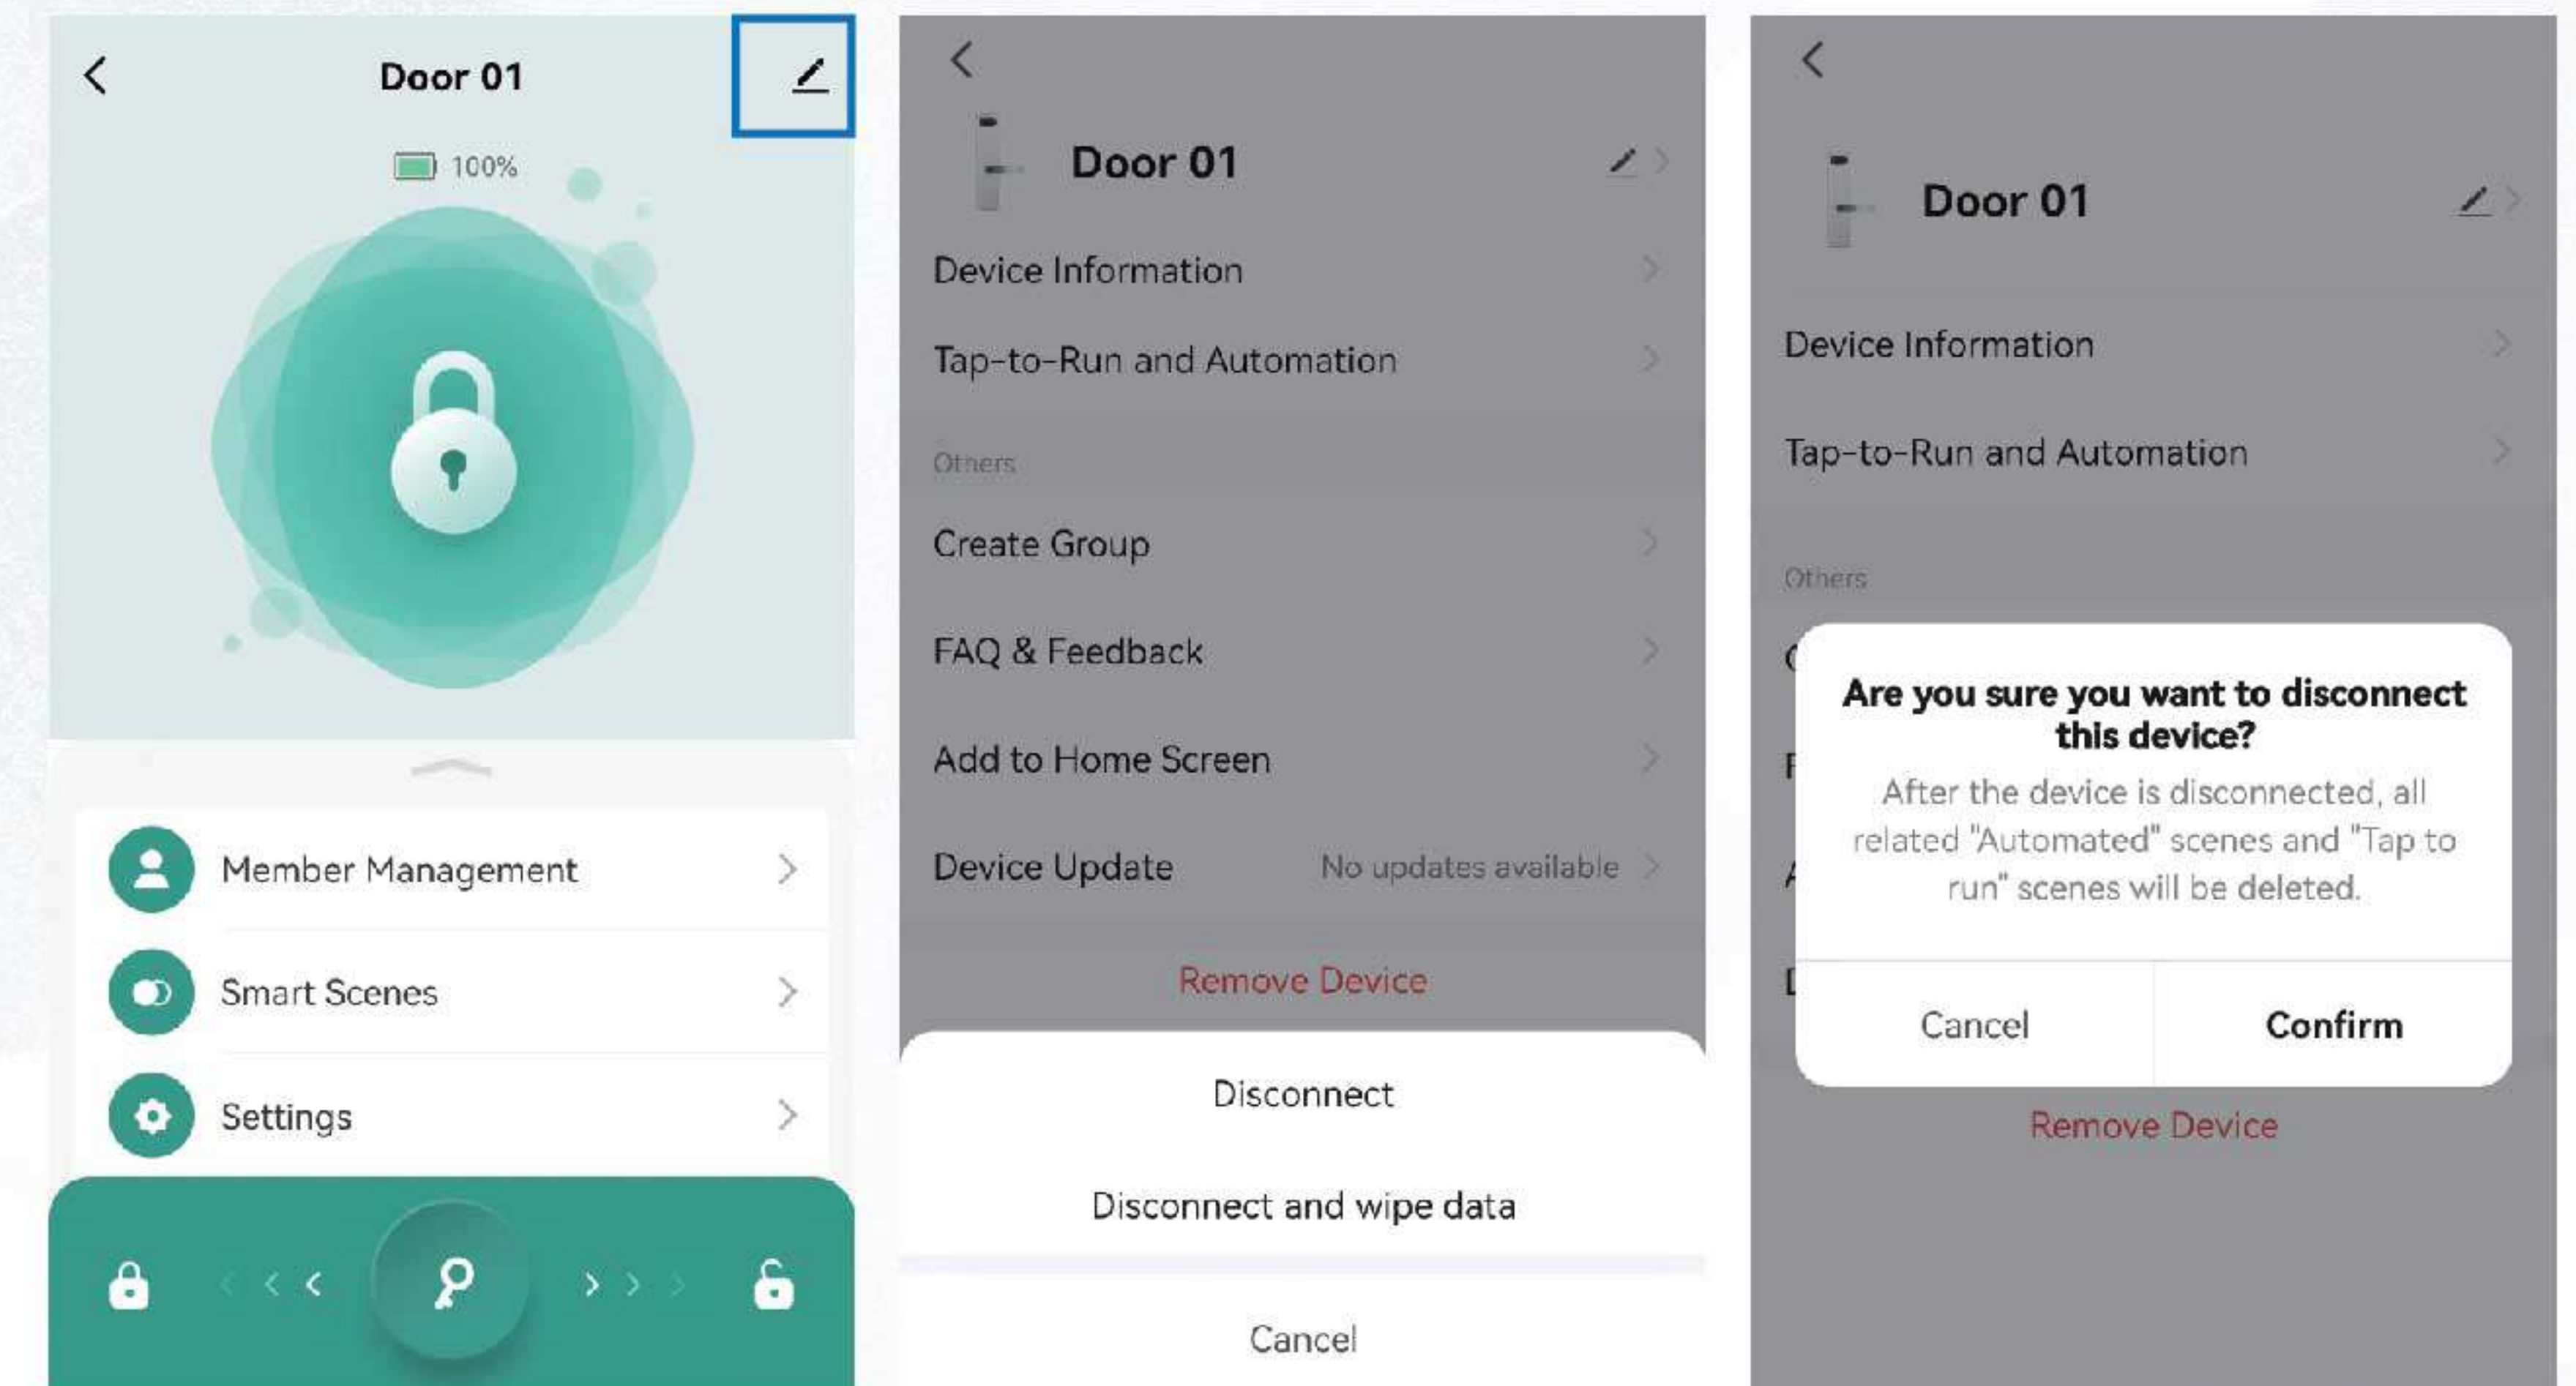
Cancel Normally On mode when not connected

Registered users to lay down the fingerprint, the buzzer sounds a long time, at this time the motor rotation unlocking, cancel the normally open mode.
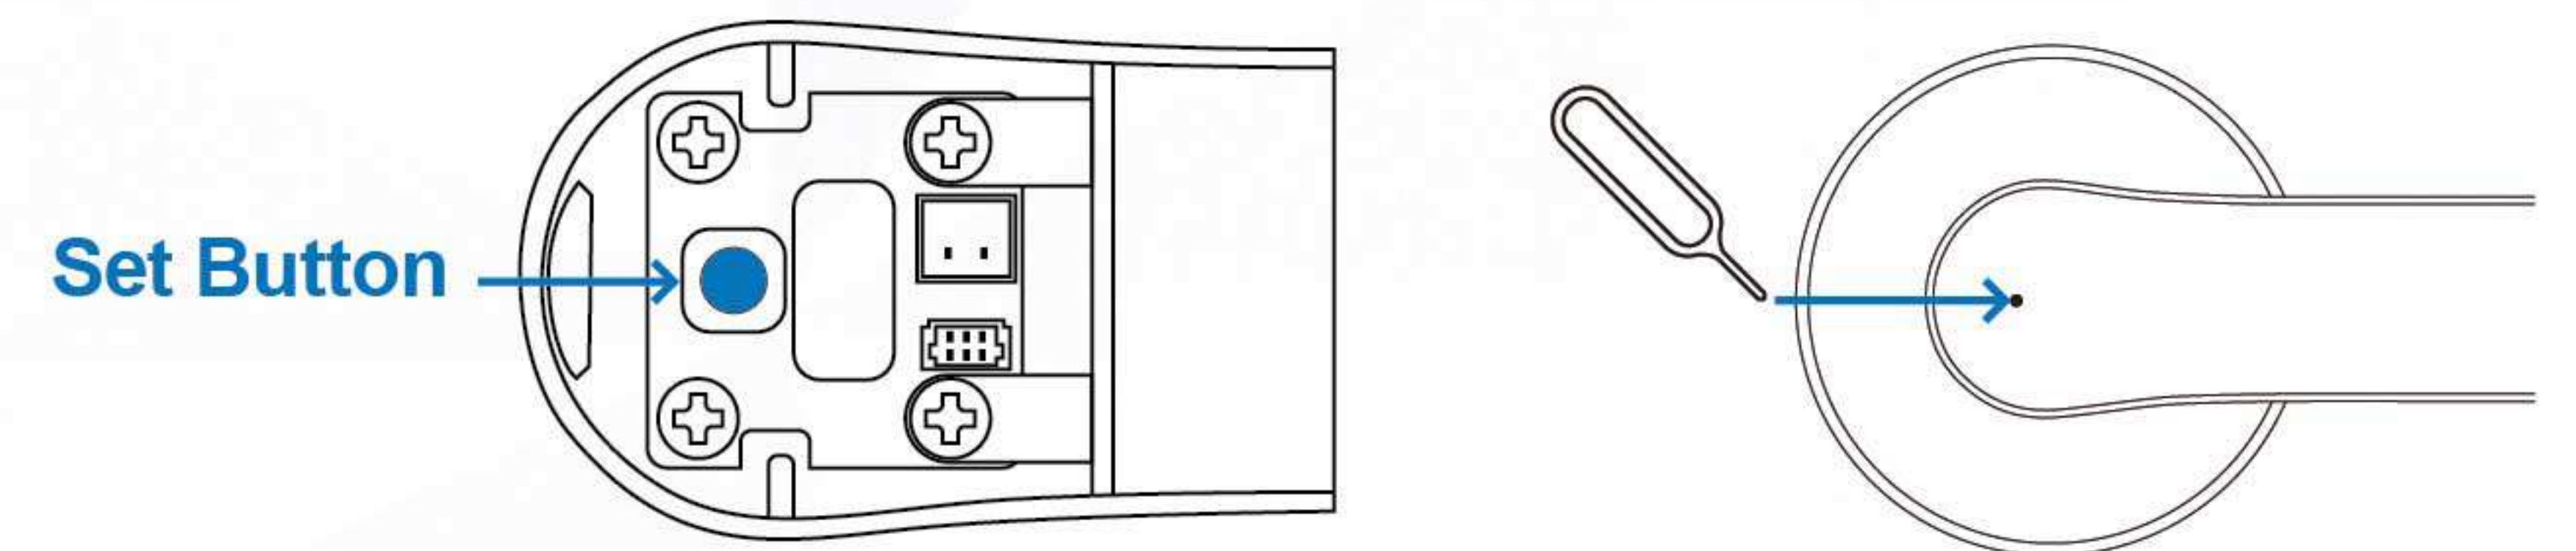
Restore factory settings and unbind

Unbind the app side
Click "Disconnect and wipe data" to unbind the data.

Delete user (factory reset)

Press and hold the setting button for 5 seconds until the blue indicator light is bright, the buzzer sounds 2 times, the indicator light and buzzer stop synchronously, indicating that the reset is successful.
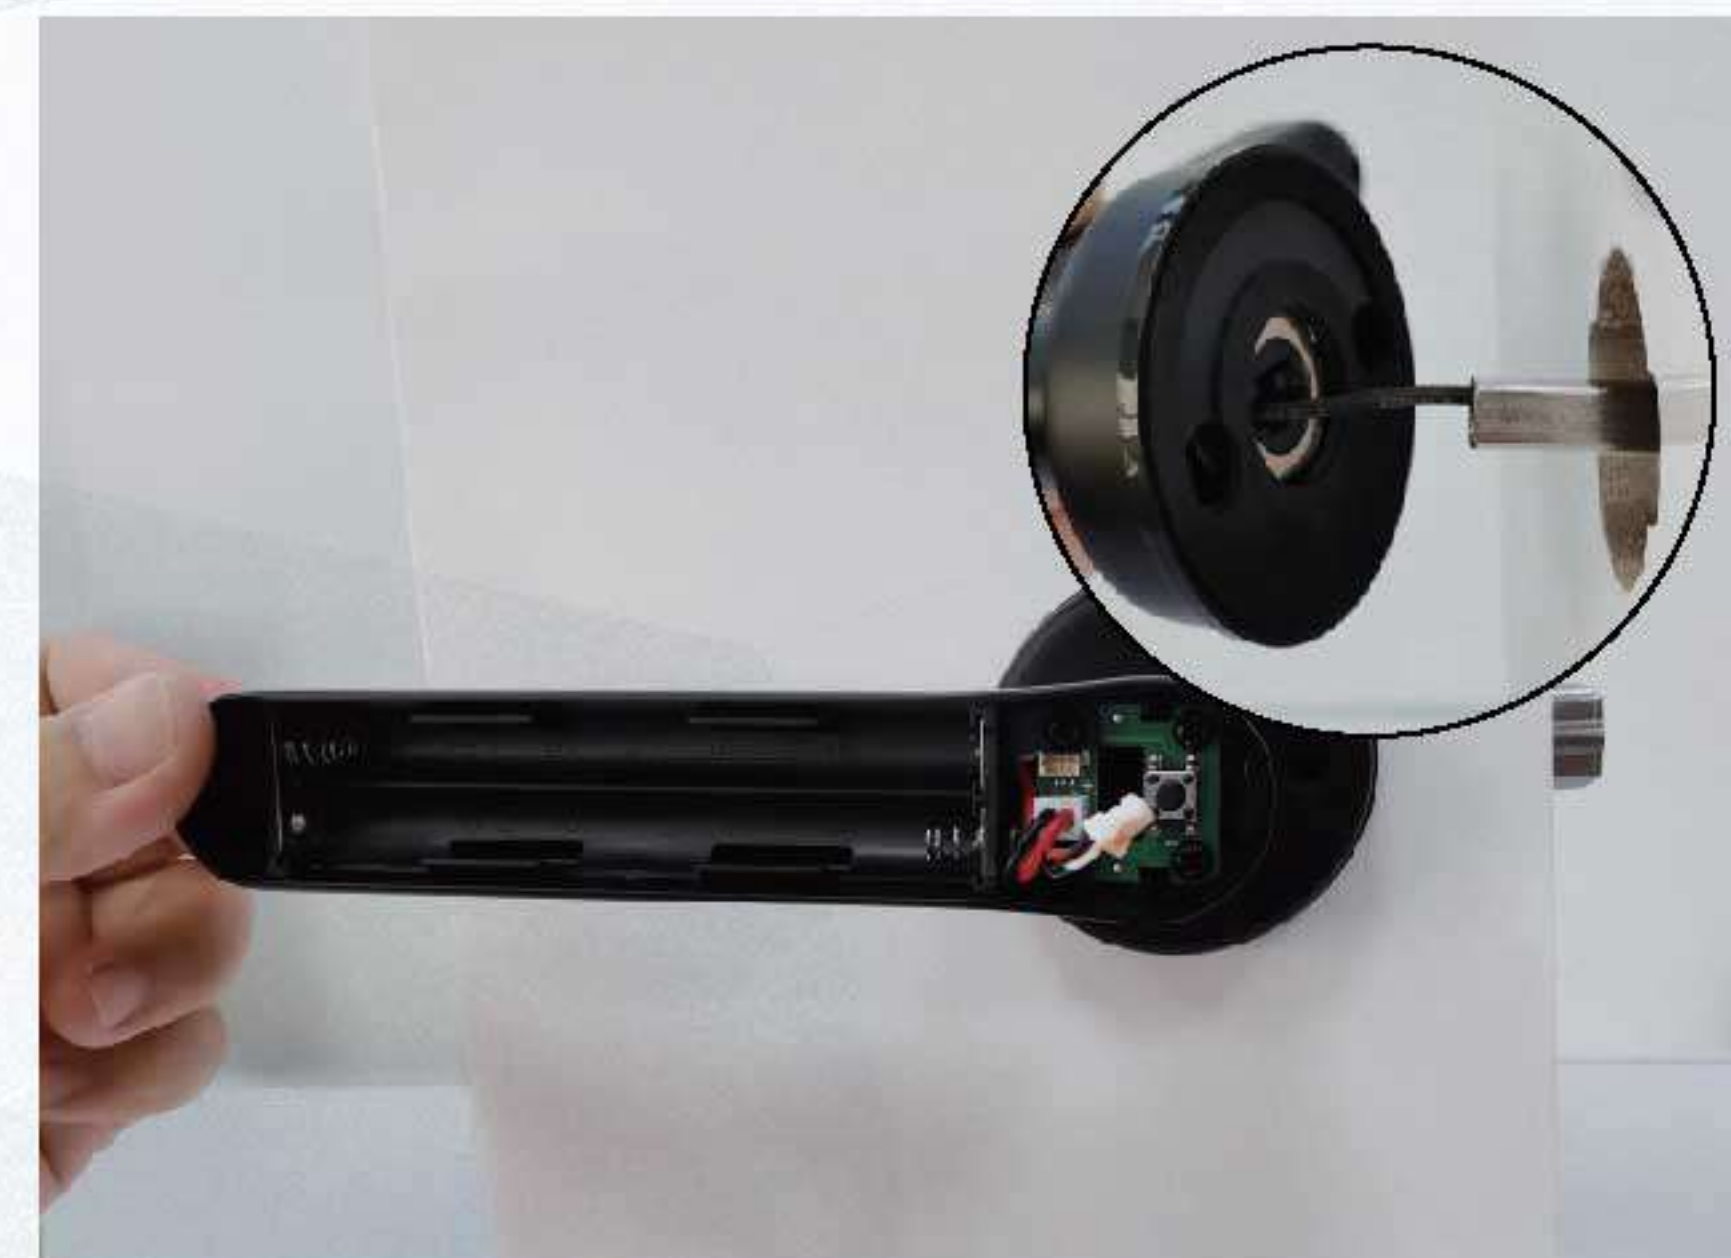

Set Button

Installation Instructions

Put the lock body into the corresponding slot and fix the upper and lower screws.

Secure the two nut posts to the front handle.

Put one end of the power cord through the center hole of the rear handle.

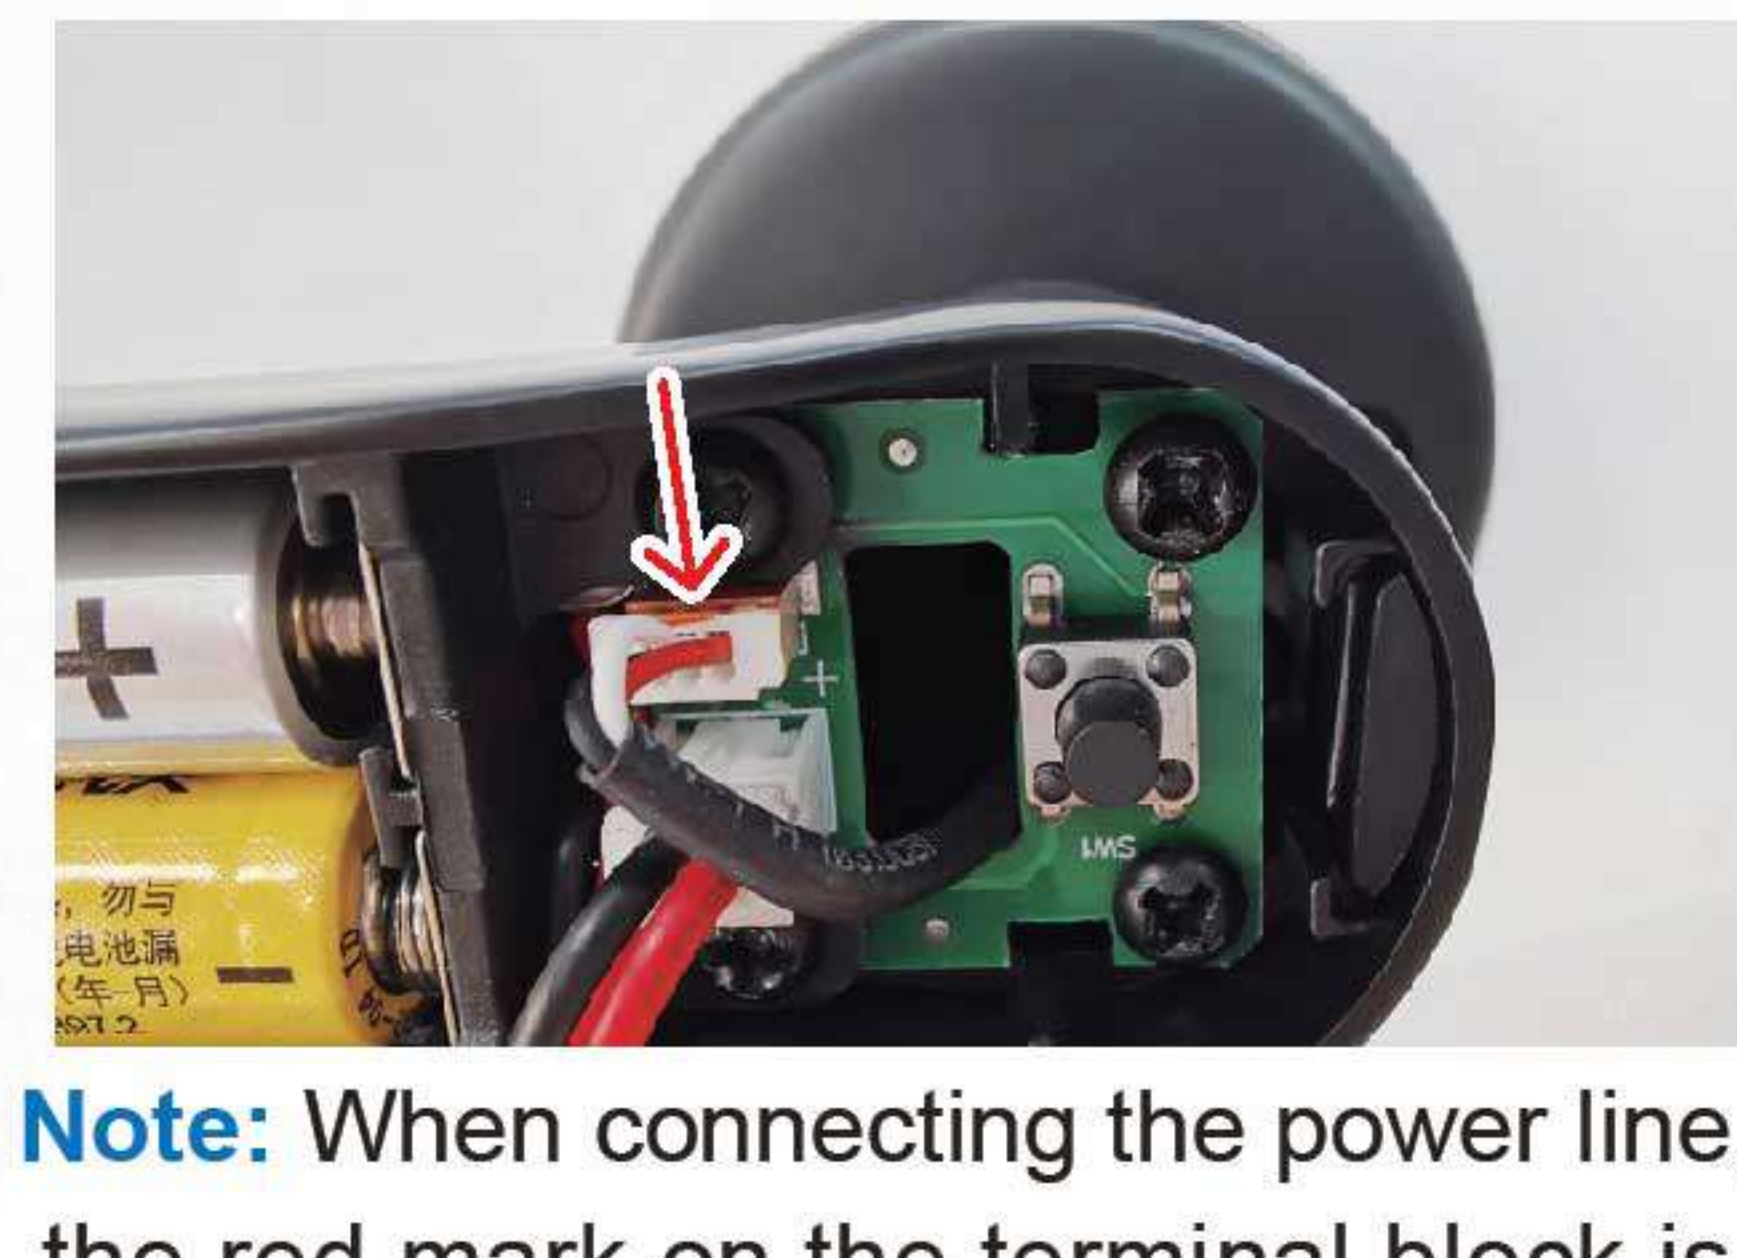Align the square steel bar, tighten it with long screws, and fix the rear handle.

Put the power cord on the front handle through the square steel bar.

Note: Square steel needs to be placed at the bottom.

Plug in the power cord and install the battery.

Note: When connecting the power line, the red mark on the terminal block is inserted in the same direction as the port red mark

The square steel passes through the square steel hole of the lock body, secure the handle.

Loosen the screws of the rear cover plate with a hexagon wrench and remove the rear cover plate.
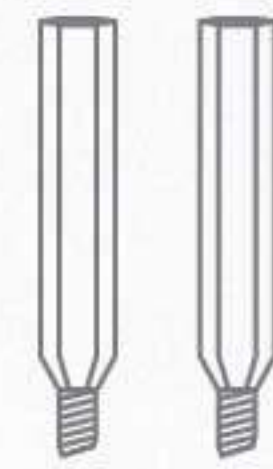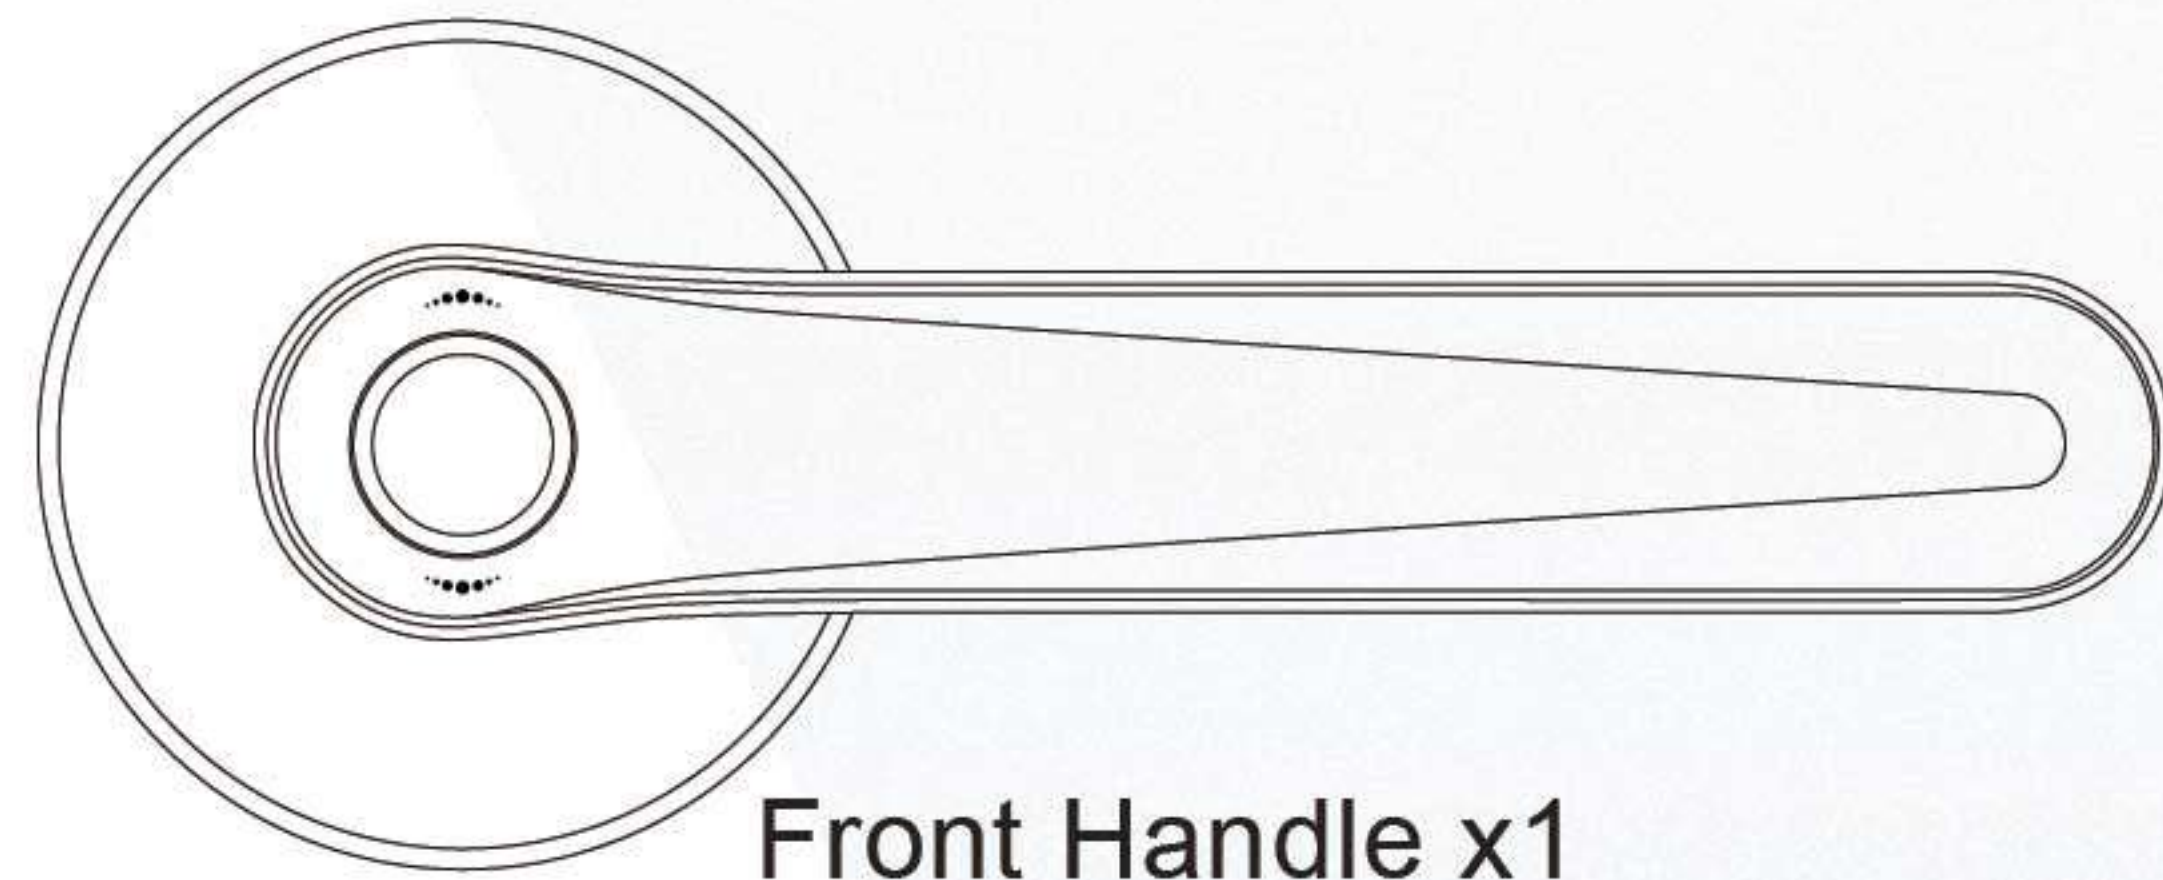
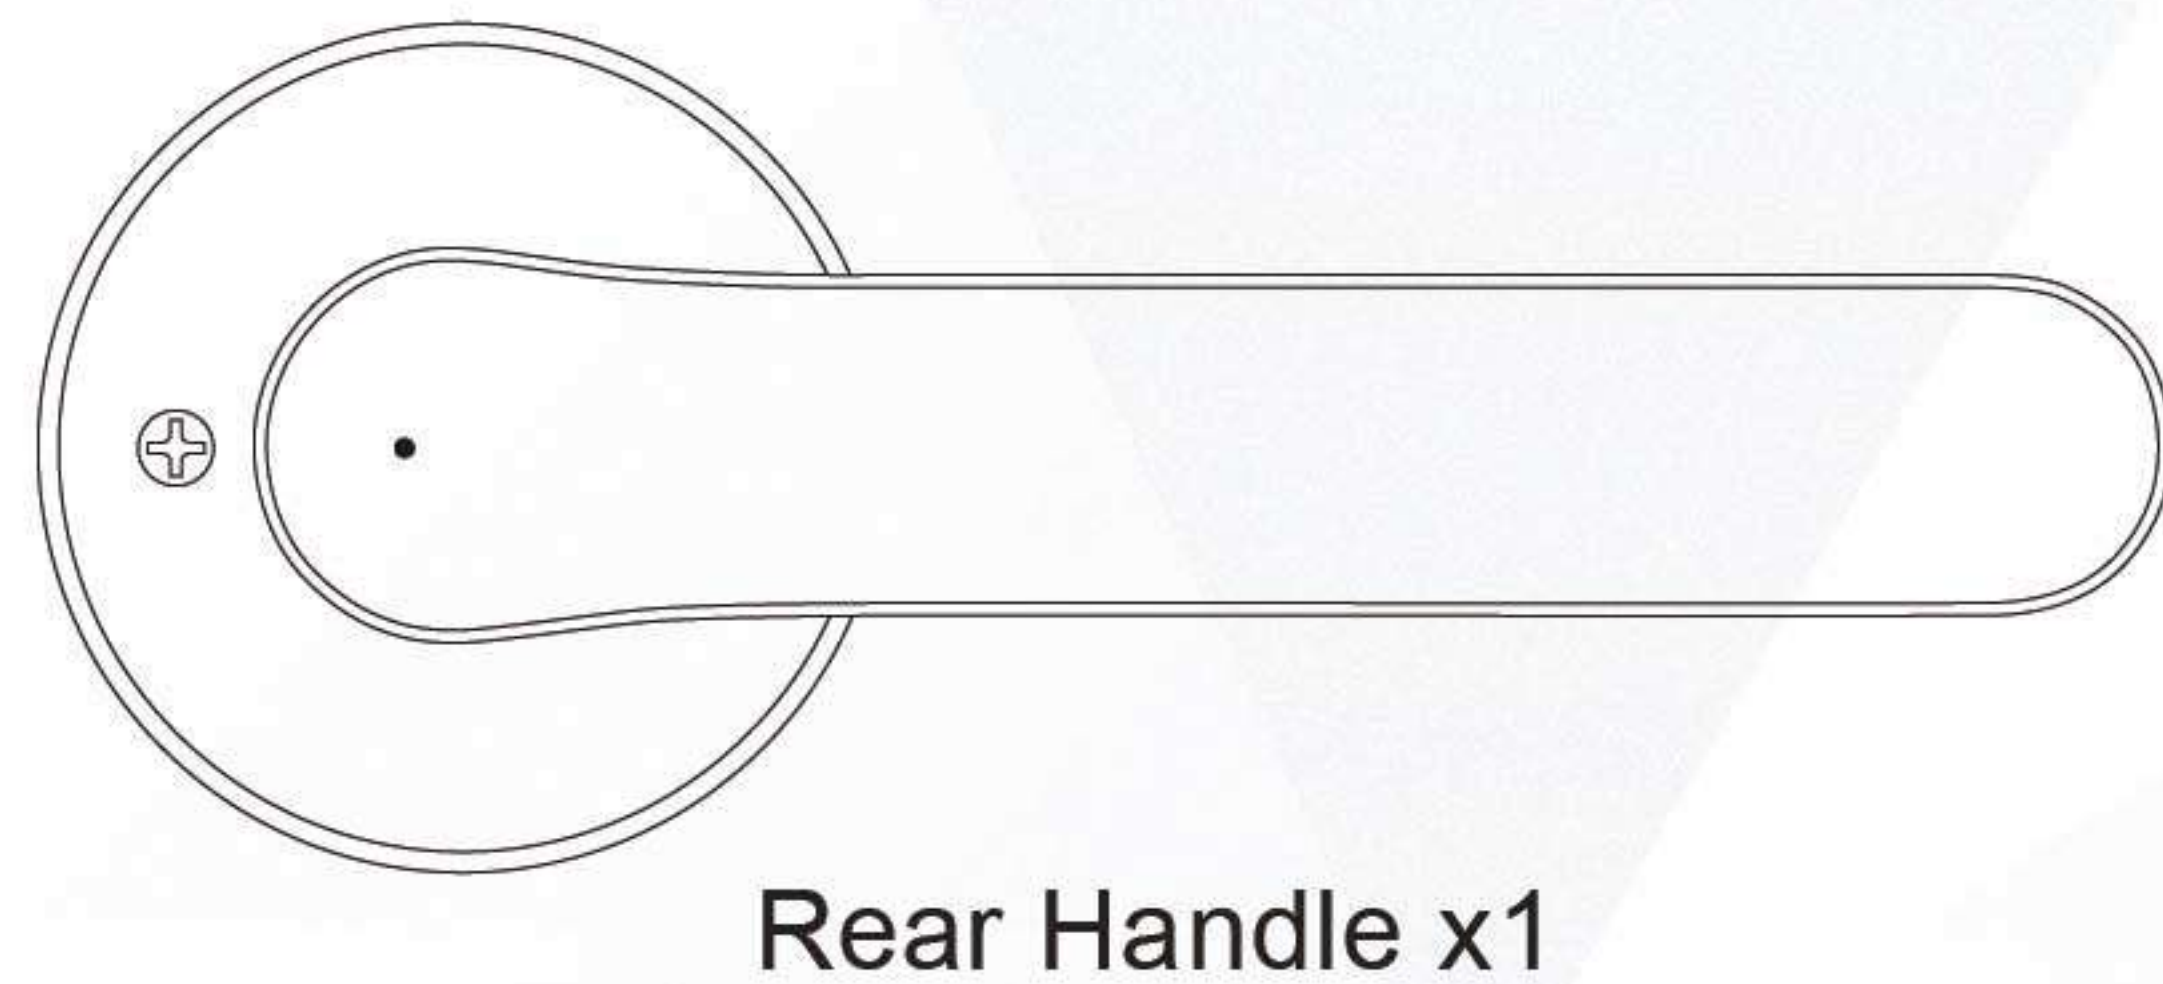Fasten the rear cover plate and fix the screws of the rear cover plate.

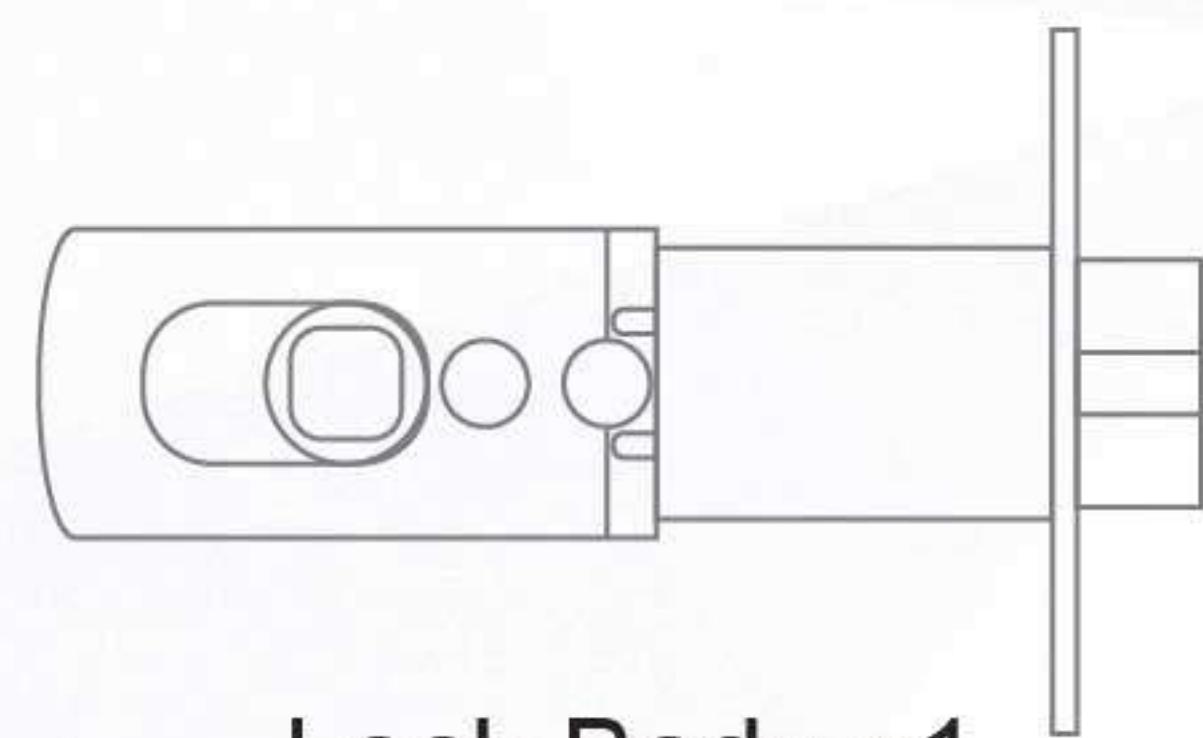After installation, check the door opening.

Foundation Accessories

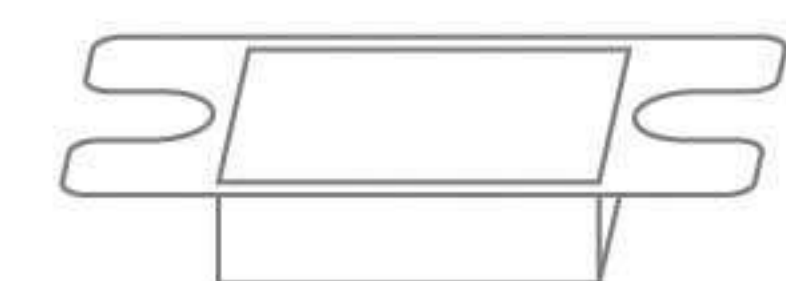After unpacking the product, check the following accessories.

Front Handle x1
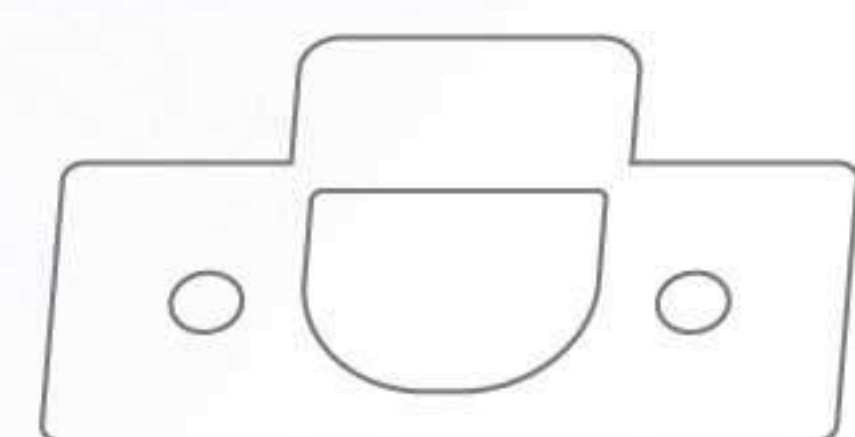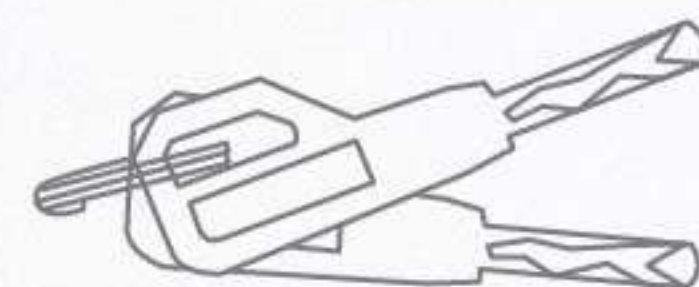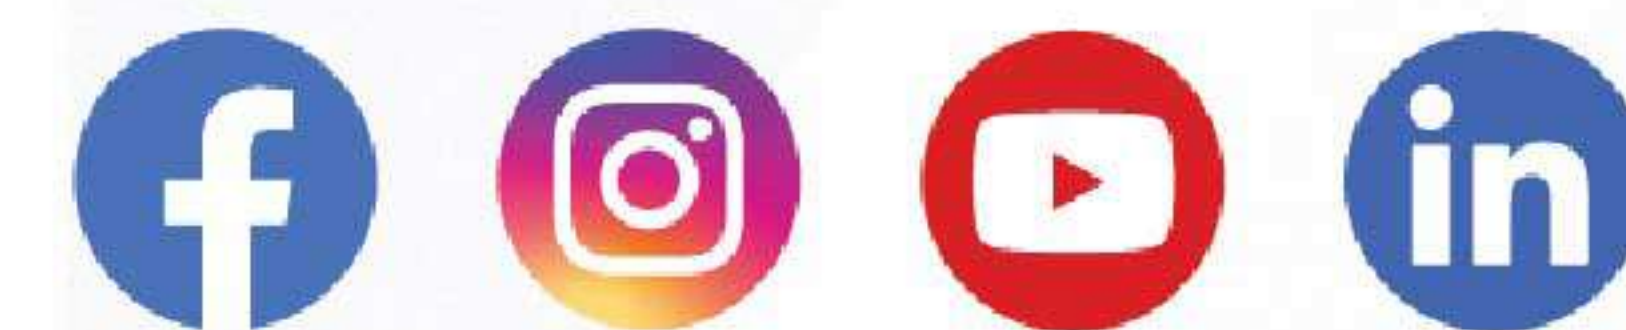
Stud X2

Explore the whole new world of
Smart Devices & Easy access to Smart World

Rear Handle x1

Long Screw X2

Google Play

App Store

Lock Body x1

Lock Screw X2

Key X2

Latch Piece x1

Hexagon Wrench X1

Pin X1

okashasmart.com

Latch Cover X1

Hollow Square Steel X1