

Introduction

Thank you for purchasing the GPS watch. This GPS watch is packed with personal Training features like speed, trip time, laps, etc. GPS can display your current location in an electronic map. Watch features include 12/24H Time format, Chronograph, World time, 5 daily Alarms, 6 Interval Timers, Run, Run Data and HRM modes. This watch can communicate with a PC to store and review your performance. This watch uses a rechargeable battery that can be charged through USB port of your PC. It also uses HRM belt with 2.4 GHz technology to monitor your heart rate for all your HR related information.

Caring for your GPS watch:

Clean your GPS watch and heart rate monitor with a dampened cloth preferably with mild detergent solution. Wipe dry using a dry cloth. Do not use chemical cleaners and solvents that may damage plastic components.

Do not store your GPS watch to prolonged exposure to extreme temperatures as this may result to permanent damage to your unit.

About GPS:

Global Positioning System (GPS) is a satellite- based navigation system made up of a network of 24 or more satellites. GPS works best in clear weather condition, anywhere in the world, 24 hours a day. Tall buildings may interfere with GPS accuracy. When 3 satellite signals are received, the watch will have 2D GPS fixed (Latitude and Longitude). When 4 or more satellite signals are received, the watch will have 3D GPS Fixed.

Water immersion:

This GPS watch is designed to be water resistant up to 3 ATM. It can resist water pressure up to 30 meters. After submersion to water, please make sure to wipe dry and air dry the unit before using or charging.

Caution: This unit is not intended to be used while swimming. Prolonged water submersion may cause electronic shorting in the unit which may cause minor skin burn or irritation.

Getting Started

Step 1) Know your watch:

Push button location:



Push button Function:

- S1** – Start / Lap / +
- S3** – View / OK
- S5** – Stop / Save / -
- S7** – Mode / Exit
- S9** – GPS
- S11** – Light

Note: Actual color of the watch and artwork may vary from style to style.

Step 2) Charging the Battery:

Charge the unit for about 4.5 hours before first use. The length of time for a fully charged battery will last depending on the actual usage. It is recommended to regularly re-charge your battery every 1-2 months even if it is not used to maintain good battery condition.

2.1) Plug your USB PC link cable to your PC

2.2) Align the charging clip with the contacts on the back of the watch.




4 Pins on the USB Clip



4 contacts at the back of the watch

2.3) Connect the charging clip securely to the watch.

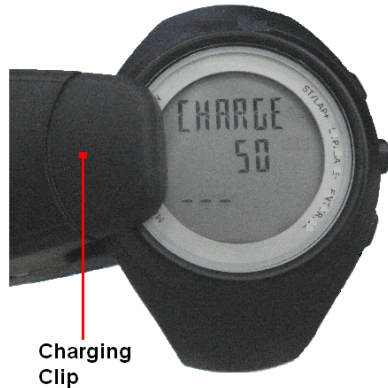

Charging Clip

Note: Please thoroughly dry the charging contacts and surrounding area to ensure proper electrical contact and prevent corrosion.


When the battery is low, it is time to charge the GPS watch. The possible screen when you charge your watch.

Once the battery is full, it will display CHARGE 100% FULL.



Battery low condition:

You cannot turn ON the GPS when the battery is low. The watch will display BATT LOW. The battery icon will blink. You need to recharge the battery in order to use the GPS again.

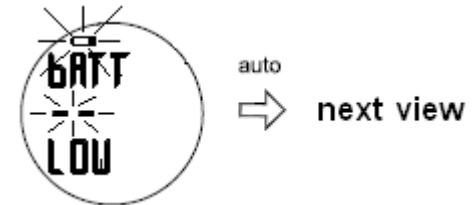

When the battery is almost low and you still perform your exercise, your data may not be saved if the battery becomes low. Please make sure the battery have enough battery power before doing your exercise in order not to lose your data.

When the battery level becomes very low, the watch will automatically turn OFF the display (blank-screen).

Step 3) Acquire Satellite signals:

To get the correct time of day and begin using your GPS watch, you have to acquire GPS signals. It may take few minutes to acquire the satellite signals.

- 3.1)** Go outside to an open area away from tall buildings and trees. Orient the GPS antenna towards the sky for best reception. The antenna is located at the 6 o'clock position of the watch.

Note: In order to accurately navigate the GPS, you need to have a good line of sight to the satellites.



- 3.2)** Stand still and do not begin moving while performing the following steps until the GPS signals are already received.



- 3.3) How to Turn-ON the GPS:** Press S9 to turn ON the GPS. The watch will start locating the satellites. After receiving the satellite signals, it will automatically go to RUN mode and the watch will display "GPS GO" while the "CHRONO" blinks.



- 3.4) How to turn OFF the GPS:** If you wish to turn OFF the GPS, press and hold S9 for about 3 seconds in any mode and the watch will momentarily display GPS OFF and then return to Time view.

Note: When GPS is ON and CHRONO is running or stop, User cannot turn OFF GPS.

GPS signals and its meaning:


GPS signal searching	
GPS signal received	
No GPS signal	

You will hear a beep sound when the watch has received a GPS signal or when the GPS signal has been lost. LOST GPS signal will also be displayed in the screen. If no Satellite signal is received within 15 minutes, the watch will auto return to Time mode.


Step 4) Pair your Heart Rate monitor:


The HRM belt is on standby and ready to send data to your watch. Wear the belt directly on your skin just below your breastplate. It should be snug enough to stay in place during your run.

- 4.1)** Push one tab on the strap through the slot in the HRM transmitter.
4.2) Wet both electrodes with a damp cloth on the back of the HRM belt. This will help create a strong electrical connection between your chest and the HRM transmitter.

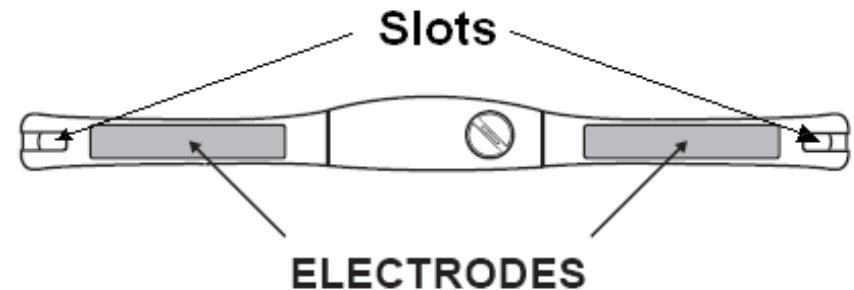

- 4.3)** Wrap around the chest belt around your rib cage just below the pectoral muscles and attach the other end of the strap to the HRM transmitter. The elastic strap should be adjusted so that it is snug enough so that it will not move during use but not so tight as to restrict breathing.

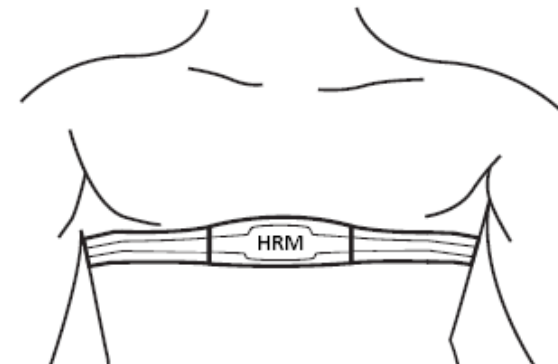

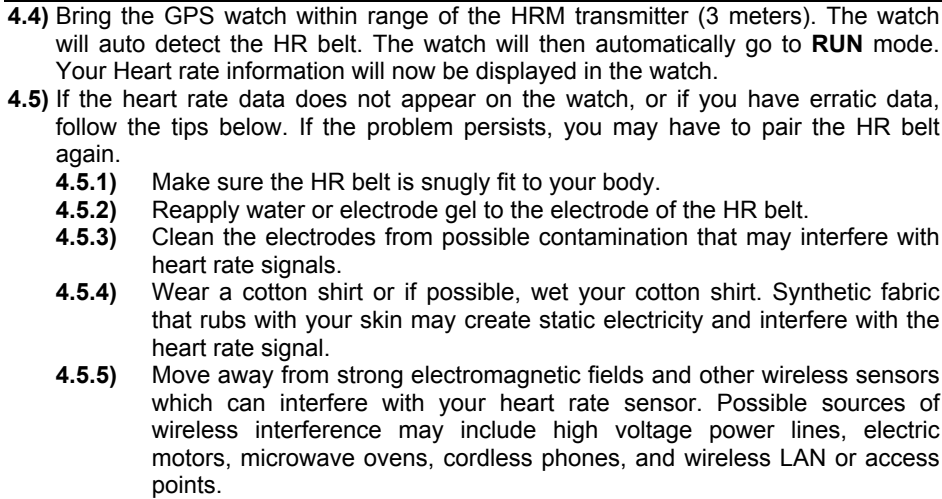

5.1) Using Run mode:

- 4.4.1)** Press S1 or S7 from Time mode to go to RUN mode.
 - 4.4.2)** The watch will automatically search for GPS signal. Once the signal is received, the watch will prompt “GPS GO, PACE and the CHRONO time blinks.
 - 4.4.3)** Press S1 to START or TAKE LAP. If auto lap function is set, the watch will take lap automatically based on auto lap setting. And there is a beep sound during taking of auto lap.
 - 4.4.4)** Press S5 to stop after completing your run.
 - 4.4.5)** Press & hold S5 again to save your run data.
- Note: When the chronograph is stopped or reset, the GPS will automatically turn OFF after 15 minutes and return to Time mode.

5.2) Using Chronograph mode:

RUN mode and **CHRONOGRAPH** mode has the same timer counter. When the chronograph is started or stopped in RUN mode, the same thing happens in Chronograph mode. They just differ in the views. This mode is dedicated to chronograph, lap time, exercise time, and distance travelled.

- 4.2.1)** Press S1 to START or TAKE LAP. If auto lap function is set, the watch will take lap automatically based on auto lap setting. There is also a beep sound during taking auto lap.
- 4.2.2)** Press S5 to stop after completing your run.
- 4.2.3)** Press & hold S5 again to save your run data.
- Note: When the chronograph is stopped or reset or no key operation, the GPS will automatically turn **OFF** after 15 minutes and return to time mode.

5.3) Using HRM mode:


RUN mode and **HRM** mode has the same timer counter. When the chronograph is started or stopped in RUN mode, the same thing happens in HRM mode. They just differ in the views. This mode is dedicated to HRM views

- 5.3.1)** Press S5 or S7 from Time to HRM mode.
- 5.3.2)** Press S1 to START or TAKE LAP. If auto lap function is set, the watch will take lap automatically based on auto lap setting. There is also a beep sound during taking auto lap.
- 5.3.3)** Press S5 to stop after completing your run.
- 5.3.4)** Press and hold S5 again to save your run data.
Note: When the chronograph is stopped or reset, the GPS will automatically turn off after 15 minutes and return to time mode.

The watch comes with PC software to make communication between your watch and PC easy and enjoyable. Please install the PC software to your PC using the installer provided. The watch is using a USB PC link cable to connect the watch to PC. Run the GPS PC software on your PC. Plug the USB cable with the watch clamped in the other end of the cable. PC software will then prompt you to download the data. Click the download button to begin downloading. The PC software will prompt to delete the data in the watch. User has the option to delete the data in the watch or not. The PC software installation and instruction guide can be found at the end of this manual. Please take time to read the guide.

General Operations

The watch has the following main modes: Time, Run, Chronograph, HRM, RUN Data, Timer Alarm and Set modes. Press S7 to scroll through these modes.

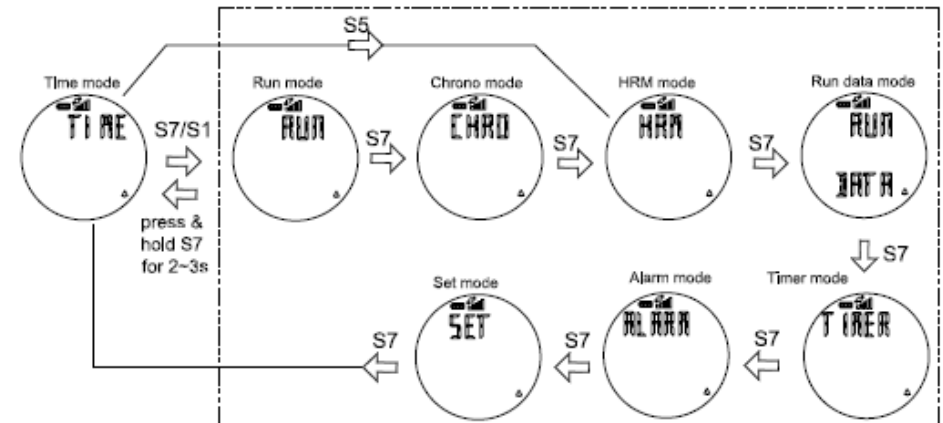

If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT.LOW**

EXERCISE MODES

The watch has the following major exercise modes: **RUN**, **CHRONOGRAPH** and **HRM** modes. After setting the watch and wearing your HRM belt (optional) the user can now start doing the various exercise modes.

RUN mode:

Press S1 or S7 from **TIME** mode to enter **RUN** mode.

Also note that if the GPS is already **ON** when you enter the RUN mode, the watch will prompt "GPS GO, PACE and the CHRONO time blinks.

The power level is displayed from 10% to 100%. In Memory display, the watch will display the remaining hours available in Track memory.

If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT. LOW**.

RUN mode Views: While CHRO is running, press & hold S3 will allow the User to change views (PACE, SPEED, CALORIE, CLOCK, CHRONO and DISTANCE).

(Pace views)

View 1 → CHRONO/ Pace / Pace
View 2 → CHRONO/ Pace / Speed
View 3 → CHRONO/ Pace / HRM (this view is hidden if HRM is OFF)
View 4 → CHRONO/ Pace / Calorie
View 5 → CHRONO/ Pace / Clock
View 6 → CHRONO/ Pace / CHRONO
View 7 → CHRONO/ Pace / Distance

(Speed views)

View 1 → CHRONO/ Speed / Pace
View 2 → CHRONO/ Speed / Speed
View 3 → CHRONO/ Speed / HRM (this view is hidden if HRM is OFF)
View 4 → CHRONO/ Speed / Calorie
View 5 → CHRONO/ Speed / Clock
View 6 → CHRONO/ Speed / CHRONO
View 7 → CHRONO/ Speed / Distance

(Calorie views)

View 1 → CHRONO/ Calorie / Pace
View 2 → CHRONO/ Calorie / Speed
View 3 → CHRONO/ Calorie / HRM (this view is hidden if HRM is OFF)
View 4 → CHRONO/ Calorie / Calorie
View 5 → CHRONO/ Calorie / Clock
View 6 → CHRONO/ Calorie / CHRONO
View 7 → CHRONO/ Calorie / Distance

(HRM views)

View 1 → CHRONO/ HRM / Pace
View 2 → CHRONO/ HRM / Speed
View 3 → CHRONO/ HRM / HRM (this view is hidden if HRM is OFF)
View 4 → CHRONO/ HRM / Calorie
View 5 → CHRONO/ HRM / Clock
View 6 → CHRONO/ HRM / CHRONO
View 7 → CHRONO/ HRM / Distance

(Clock views)

View 1 → CHRONO/ Clock / Pace
View 2 → CHRONO/ Clock / Speed
View 3 → CHRONO/ Clock / HRM (this view is hidden if HRM is OFF)
View 4 → CHRONO/ Clock / Calorie
View 5 → CHRONO/ Clock / Clock
View 6 → CHRONO/ Clock / CHRONO
View 7 → CHRONO/ Clock / Distance

(CHRONO views)

View 1 → CHRONO/ CHRONO / Pace
View 2 → CHRONO/ CHRONO / Speed
View 3 → CHRONO/ CHRONO / HRM (this view is hidden if HRM is OFF)
View 4 → CHRONO/ CHRONO / Calorie
View 5 → CHRONO/ CHRONO / Clock
View 6 → CHRONO/ CHRONO / CHRONO
View 7 → CHRONO/ CHRONO / Distance

(Distance views)

View 1 → CHRONO/ Distance / Pace
View 2 → CHRONO/ Distance / Speed
View 3 → CHRONO/ Distance / HRM (this view is hidden if HRM is OFF)
View 4 → CHRONO/ Distance / Calorie
View 5 → CHRONO/ Distance / Clock
View 6 → CHRONO/ Distance / CHRONO
View 7 → CHRONO/ Distance / Distance

Note: If there is no key operation within 3-4 minutes in this mode, the watch will auto exit to Time mode.

CHRONOGRAPH mode:

Press S7 from **RUN** mode to enter **CHRONOGRAPH** mode. The watch will display the following in succession:

→ **SEARCH GPS** → **BATTERY** level → **DATA TRACK MEMORY** → **view 1 of CHRONOGRAPH** mode.

Also note that if the GPS is already **ON** when you enter the RUN mode, the watch will prompt "GPS GO, PACE and the CHRONO time blinks.

The power level is displayed with an increment of 10%, from 10% to 100%. In Memory display, the watch will display the remaining hours available in Track memory.

If the power level of the battery is low, the GPS cannot be turned on. The watch will display BATT.LOW

VIEWS in CHRONOGRAPH mode:

View 1 → GPS GO/ CHRONO/ PACE

View 2 → LAP/ HRM / CHRONO (this view is hidden if HRM is OFF)

View 3 → LAP/ DISTANCE / CHRONO

View 4 → LAP 1/ CHRONO/ CHRONO

When the timer is stopped or reset in Chronograph mode, the GPS will automatically turn OFF after 15 minutes.

HRM mode:

Press S7 from **CHRONOGRAPH** mode to enter **HRM** mode. The watch will display the following in succession:

→ **SEARCH GPS** → **BATTERY** level → **DATA TRACK MEMORY** → **view 1 of HRM** mode.

Run mode and **HRM** mode has the same timer. When the timer is started or stopped in RUN mode, the same thing happens in **HRM** mode.

The power level is displayed with an increment of 10%, from 10% to 100%. In Memory display, the watch will display the remaining hours available in Track memory.

If the power level of the battery is low, the GPS cannot be turned on. The watch will display **BATT.LOW**

Different views in HRM mode:

Following are the various views that user can choose by pressing S3 in **HRM** mode. This mode is dedicated to HRM views.

View 1 → GPS GO/ HRM/ CHRONO

View 2 → CHRONO/ HRM/ Calorie

View 3 → CHRONO/ HRM/ In Zone

View 4 → CHRONO/ HRM/ Distance

View 5 → CHRONO/ HRM/ Clock

View 6 → CHRONO/ HRM/ Speed

View 7 → CHRONO/ HRM/ Pace

When the timer is stopped or reset in HRM mode, the GPS will automatically turn OFF after 15 minutes to save battery power.


RUN DATA mode

Press S7 from **HRM** mode to enter **RUN DATA** mode. The watch will display the Data list view. In this view you can see how many files are saved in RUN data. The watch will show the list of data files with newest on the top of the list.

1. Press S1/S5 to scroll thru the list.
2. Press S3 to enter the selected data file.
3. Press S1/S3 to view the details of the data file. Following are the details available:
 - Start Time / End Time / Distance
 - CHRONO / Distance / Calorie
 - CHRONO / Ave Pace / Max Pace
 - CHRONO / Ave Speed / Max Speed
 - CHRONO / Ave HR / In zone
 - Lap 1 / Lap time / Distance
 - Lap 2...etc....
4. Press S7 to exit

Deleting Data:

Press S7 from CHRONO mode to DATA mode. After the Data file appears, press S3 to enter "Start time/End time/ Distance" view. In any sub-views, press and hold S3 to enter the "VIEW/DEL/ DEL ALL" screen. Press S1 or S5 to select. If "VIEW" is selected, you can view the details of the data. If "del" is selected, 1 data will be deleted. If "Del All" is selected, all data files will be deleted.

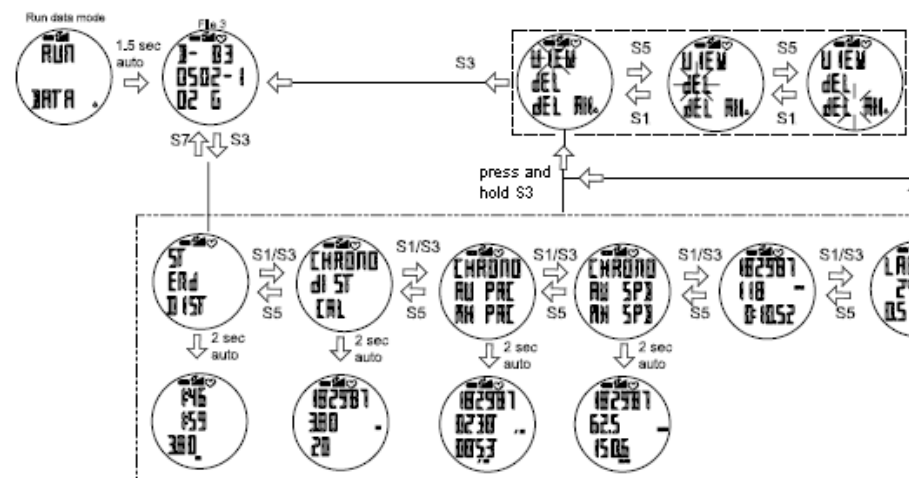

Note: If there is no key operation within 3-4 minutes, the watch will auto exit to Time mode.

Data numbering system/ Legend:

Following is the data numbering system.



Sample data number: **D-010502-101-G**

D – means Data

01 – Data number

05 - Month

02 - Day

1 - Data is referred to Time 1 or 2 for Time 2

01 - File number of the day

G - Data from GPS

Setting the User's information:

Press S7 from **ALARM mode** to go to **SET mode** and select USER by pressing S1 or S5 when the USER option is highlighted. The sequence of setting are as follows by pressing S3 button: Gender → Age → Weight → Height Press S1/S5 to change values. Press S3 to set next parameter. Press S7 to exit.

Setting HRM in SET mode:

- Press S1/S5 to select HRM and press S3 to confirm and it will appear "HRM ZN / ZONE 1". Press S1/S5 to select which zone you prefer. There are 3 zones available, HR zones 1 to 3.
- Press S3 to set the HR zone. User has an option to manually change it by pressing S1/S5.
- Press S3 to set the Low/High limit of the zone. You can still manually change the value by pressing S1/ S5.
- Press S3 to the Zone Alarm **ON** or **OFF**. Press S1 or S5 to change setting.
- Press S7 to exit.

TIMER mode

Setting the TIMER:

Press and hold S11 until the Timer "1" digit starts to blink. Press S1/S5 to select the interval timer "SEG 1 to 6". Press S3 to set the hour, minute & second. Press S1/S5 to increase or decrease the value. Press S7 to exit setting.

Note: If there is no key operation within 3-4 minutes in this mode, the watch will auto exit to Time mode.

ALARM mode

Setting the ALARM:

Press S7 from **TIMER** mode to enter **ALARM** mode. The watch will display the alarm view. Press and hold S11 until the Alarm "1" digit starts to blink. Press S1/S5 to select the Alarm 1 to 5. Press S3 to set the hour, minute, Time, Alarm and Chime.

For Chime, press S1/S5 to turn it ON or OFF. Also note when Chime is ON, the Key tone is automatically ON and the Chime icon appears in all modes. Likewise, if Chime is OFF the Key tone is automatically OFF.

Alarm setting in SET mode:

- Select **ALARM** then press S3
- Select **ALARM 1** to **ALARM 5** by pressing S1/S5 and then press S3 to enter.
- Set the **HOURL**. Press S1/S5 to change values. Press S3 to enter
- Set the **MINUTE**. Press S1/S5 to change values. Press S3 to enter
- Set the alarm time referred to **T1** or **T2**. Press S1/S5 to change. Press S3 to enter
- Set the alarm **ON** or **OFF**. Press S1/S5 to change. Press S3 to enter
- Set the Chime **ON** or **OFF**. Press S1/S5 to change. Press S3 to enter
- Press S7 to exit alarm setting

SET mode

Press S7 from **ALARM** mode to **SET** mode. 1.5 seconds later the watch will display the setting options: Press S5 the ff. Sequence are as follows; **AUTO LAP, TIME, UNIT, USER, HRM, HRM LINK, NIGHT, CONTRAST, CHIME, ALARM and TIMER**. Press S3 to enter selected option to set. Press S1/S5 to select then press S3 to enter. Press S7 to exit setting to Time mode.

Setting the Auto Lap:

The same setting procedure applies in setting the time in **Alarm setting mode**.

Note: Alert sub-mode, press S3 to enter ALERT function. When alert is set to **ON**, there will be a beep sound during taking auto lap. When it is set to **OFF**, there is no beep sound.

Setting the Time/ Alarm/ Timer/ User:

The same setting procedure applies in setting the time in **Alarm setting mode**.

Setting the UNIT:

Press S3 to enter. Press S1/S5 to select KM or Mi.

Setting the HRM:

Press S3 to enter. Press S1/S5 to select HRM zones. Then press S3 again to set Low and High limit of the zone. Press S1/S5 to manually change the value. Press S3 to confirm setting. Press S7 to exit setting.

Note: User has also an option to ON or OFF the zone Alarm.

HRM LINK: Press S3 to enter. The watch will auto link and will display the Heart rate. Press S7 to exit.

Setting the DISPLAY (LCD contrast):

Press S3 to enter. Press S1 or S5 to change the setting. Press S3 to confirm setting and exit.

Setting the Chime:

Press S3 to enter. Press S1/S5 to select ON or OFF.

Setting the NIGHT mode:

Press S3 to enter. Press S1/S5 to select the following options: Night ON, 10 sec and 20 sec.

10 SECONDS – Press S11 will turn ON the Light for 10 seconds.

20 SECONDS – Press S11 will turn ON the Light for 20 seconds.

NIGHT ON – Light will continuously ON when CHRONO is running from 6:00 pm to 7:00 am. But when CHRONO is stopped or reset from 6:00 pm to 7:00 am, press any key can turn ON the light for about 10 seconds.

Press S3 to accept the selected setting. Press S7 to exit.

Battery:

Watch is using a rechargeable Lithium Ion battery that will require approximately 4.5 hours charging time using the USB cable. While battery is charging, the watch cannot be used and all buttons are disabled. User needs to recharge the battery when the watch indicates a "low battery".

Note:

Battery Life (fully charge battery); 8 hrs min. (continues GPS with CHRONO ON, HRM ON) in day time within the time period from 7 am to 6 pm.

While approx. 7 hours (continues GPS with CHRONO ON, HRM ON and Light ON) within the time period from 6 pm to 7 am. This means, after 7 or 8 hours continues activity such as running, walking, etc., the battery power become low and the watch will display "LOW BATT".

GPS watch troubleshooting guide:

PROBLEM/ QUESTION	SOLUTION/ ANSWER
How to turn off the GPS	Press and hold S9 for about 5 seconds from any view to turn OFF the GPS.
I cannot get a GPS signal	Take your GPS watch outdoors and away from trees and tall buildings. Remain stationary and try acquiring GPS signal again. Be sure that the antenna is pointing towards the sky for better signal reception.
Can I reset the watch?	You can reset the watch by pressing S1, S5, S7, and S11 together. The date and time will be reset to default values. You can set it again manually or automatically thru GPS.
Will my data and personal settings be lost after watch reset?	Your data and personal settings are saved in the flash memory and will not be lost after watch reset.
The battery indicator does not seem to be accurate	Allow your GPS watch to fully discharge and then fully charge it without interruption. It is recommended to regularly re-charge your battery every 1-2 months even if it is not used to maintain good battery condition.
My heart rate data seems inaccurate.	<ul style="list-style-type: none"> - Make sure the HR belt is snugly fit to your body - Reapply water or electrode gel to the electrode of the HR belt - Clean the electrodes from possible contamination that may interfere with heart rate signals - Wear a cotton shirt or if possible, wet your cotton shirt. Synthetic fabrics that rubs with your skin may create static electricity and interfere with the heart rate signal - Move away from strong electromagnetic fields and other wireless sensors which can interfere with your heart rate sensor. Possible sources of wireless interference may include high voltage power lines, electric motors, microwave ovens, cordless phones, and wireless LAN or access points.

Key Function Matrix

		Keys											
Mode	Sub mode	S1		S3		S5		S7		S9		S11	
		Press	Hold	Press	Hold	Press	Hold	Press	Hold	Press	Hold	Press	Hold
Time		Run mode		view T1/T2	toggle T1/T2	HRM mode		Run mode	GPS off	GPS on	GPS off	EL	time setting mode
	Time setting	Increase	fast increase	next digit		decrease	fast decrease	Exit		GPS on	GPS off	EL	
Run		start/ lap		change views	change main view	stop	save & reset	Chrono mode	Time mode	GPS on	GPS off	EL	Run setting mode
	Run setting	increase	fast increase	next digit		decrease	fast decrease	Exit		GPS on	GPS off	EL	
Chrono		start/ lap		change views		stop	save & reset	HRM mode	Time mode	GPS on	GPS off	EL	
HRM		start/ lap		change views		stop	save & reset	Data mode	Time mode	GPS on	GPS off	EL	HR setting mode
	HR setting	increase	fast increase	next digit		decrease	fast decrease	Exit		GPS on	GPS off	EL	
Data		+ve select		change views	sub-menu	-ve select		Timer mode	Time mode	GPS on	GPS off	EL	
Timer		start		stop/ reset		select SG-1/2/3/4/5/6		Alarm mode	Time mode	GPS on	GPS off	EL	timer setting mode
	Timer setting	increase	fast increase	next digit		decrease	fast decrease	Exit		GPS on	GPS off	EL	
Alarm		ON/OFF		toggle alarm & chime view		select AL-1/2/3/4/5		Set mode	Time mode	GPS on	GPS off	EL	alarm setting mode
	Alarm setting	increase	fast increase	next digit		decrease	fast decrease	Exit		GPS on	GPS off	EL	
Set		Increase	fast increase	next digit		decrease	fast decrease	Exit	Time mode	GPS on	GPS off	EL	

36 CITY CODE TABLE

GMC differential	City Code	City	GMC differential	City Code	City
-11	PPG	PAGO PAGO	+2	CAI	CAIRO
-10	HNL	HONOLULU		ATH	ATHENS
-9	ANC	ANCHORAGE	+3	MOW	MOSCOW
-8	SFO	SAN FRANCISCO	+3.5	THR	TEHRAN
	LAX	LOS ANGELES	+4	DXB	DUBAI
-7	DEN	DENVER	+4.5	KBL	KABUL
	ELP	ELPASO	+5	KHI	KARACHI
-6	CHI	CHICAGO	+5.5	DEL	DELHI
	MSY	NEW ORLEANS	+6	DAC	DHAKA
-5	NYC	NEW YORK	+6.5	RGN	YANGON
	WAS	WASHINGTON	+7	BKK	BANGKOK
-4	CCS	CARACAS	+8	HKG	HONG KONG
-3	RIO	RIO DE JANIERO		PEK	BEIJING
	BSB	BRASILIA	+9	TYO	TOKYO
+0	LON	LONDON	+9.5	DRW	DARWIN
	CAS	CASABLANCA	+10	SYD	SYDNEY
+1	PAR	PARIS	+11	NOU	NOUMEA
	BER	BERLIN	+12	WLG	WELLINGTON

GPS “PC ONLY” software

Your GPS watch comes with PC software. This software is compatible with the following operating system:

- Windows 7
- Windows XP SP 1, 2, 3
- Windows Vista SP 1, 2
- Windows 2000 SP 4
- Windows 98

You can use the software to view and analyze your data.

A) Software installation:


- 1) Install the GPS PC software to your computer. The installer is bundled in the box with your GPS watch.
- 2) Follow the installation guide of the software. This is just a simple installation procedure. You will be prompt on what drive you want to install the software. Default location is Program files\GPS. You may change the location if you wish.
- 3) Click FINISH to complete the installation.
- 4) You may need to re-start your PC after installation.
- 5) GPS icon will be placed in your desktop after installation.

B) How to use the software:


- 1) Run the software by double clicking the icon on your desktop. The welcome screen will appear on your desktop.
- 2) Clip the USB cable to your watch. This is the same cable used to charge the battery of the GPS watch. Make sure the four pins of the clip have a good connection to the four electrical contacts at the back of the watch.
- 3) Connect the USB cable to the USB port of your PC. The first time you do this, the PC will automatically install the drivers for the device.
- 4) The Software will prompt you to download the data.




- 5) Click on the Download Data tab. Data will be automatically downloaded to the PC. If there is no proper contact between the USB clip and the watch, an error message will appear and the software will prompt you to check the cable. Repeat the download after checking the cable.

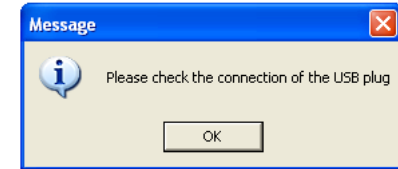

- 6) After downloading the data, the software will prompt you to delete all data from the GPS watch. Default option is NO. WARNING! If you select yes, all data in the watch will be deleted.

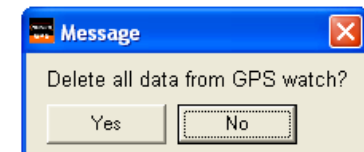

- 7) Click the ENTER tab to open Home page below

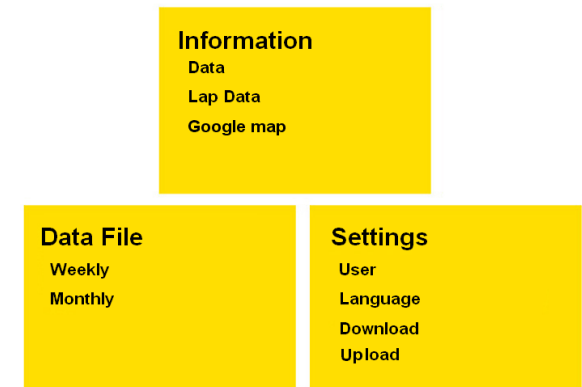

- 8) Click on any of the tabs to open up the desired window. A new window with the various tabs will appear. Click any of the tabs to view your activity.

