

# FT-78 Esplanade Two Tier Fountain

**Three people are recommended for the installation of this fountain!**



## Pump Kit Parts List

PK300 pump (1)  
#10 stopper (1)  
Approx. 25" length of ½" Black non-kink tubing (1)  
Approx. 13" length of ½" Black non-kink tubing (1)  
Wedges (4)  
Hose clamps (5) \*

\* Hose clamps may be used as flow restrictors

### FOUNTAIN INFORMATION:


**This fountain holds approximately 37 gallons of water.**

**This fountain uses a medium fountain cover.  
(FTNCOV-MED)**

**Compatible with Refill #10 Device and LED Kit  
(A different style stopper may be requested for the refill kit.)**

### TOOLS REQUIRED:

Bubble Level



### PUMP INFORMATION:

**OEMPF320 - 320 GPH Pump  
16 FT cord length**

## - W I N T E R   C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

## - G E N E R A L   F O U N T A I N   T I P S -

**Install fountains on a level surface.** You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

All of our cast stone is proudly



Made in USA

Check out YouTube for a "How to" video.

For more Campania product information visit [www.campaniainternational.com](http://www.campaniainternational.com)

# FT-78 Esplanade Two Tier Fountain

## Three people are recommended for the installation of this fountain!


Assemble your fountain on a level surface capable of holding a minimum of 950 pounds with an approximate 10 square foot footprint.




FT-78F/79C (432 lbs)  
46.5"W x 9.5"H




FT-78E/79B (59 lbs)  
11"W x 14.25"H

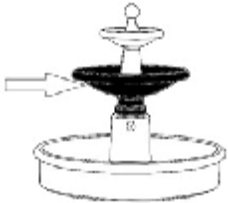

FT-78D/79A (101 lbs)  
28.5"W x 9"H

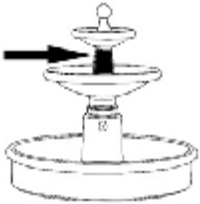


FT-78C (15 lbs)  
7"W x 9.75"H

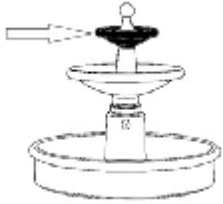

FT-77B/78B (20 lbs)  
15.25"W x 4"H



FT-77A/78A (5 lbs)  
5"W x 8.5"H

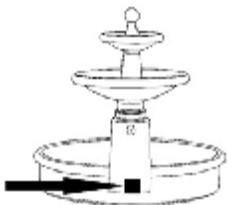

FT-78EE/79BB (3 lbs)  
5"L x 2"W x 4.5"H

1. Place the basin (FT-78F/79C) into position where the fountain will be installed, ensuring that it is level.
  - a. **Note: Check that all components are leveled as the fountain is assembled.**
2. Assemble the fountain plumbing
  - a. **Note: Use the small pump adapter that inserts into the pump.**
  - b. Using a hose clamp, attach the 25" length of black non-kink tubing to the pump outlet.
  - c. Place the stopper around the pump cord approximately 8" from the pump.
3. Feed the pump cord all the way through the hole and channel in the basin (FT-78F/79C).
4. **FIRMLY** and evenly press the stopper into the hole.
  - a. **Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.**
5. Position the large pedestal (FT-78E/79B) over the pump in the basin (FT-78F/79C).
6. Feed the non-kink tubing connected to the pump through the top of the large pedestal (FT-78E/79B).
7. Secure the loose end of the non-kink tubing to the pipe protruding from the bottom of the large bowl (FT-78D/79A).
8. Center the large bowl (FT-78D/79A) over the large pedestal (FT-78E/79B).
9. Connect the 1/2" non-kink end of the remaining 13" length of tubing to the pipe protruding from inside the large bowl (FT-78D/79A) with a hose clamp.
10. Position the small pedestal (FT-78C) over the center of the large bowl (FT-78D/79A).
11. Feed the tubing through the hole in the small pedestal (FT-78C).
12. Secure the loose end of the non-kink tubing to the pipe protruding from the bottom of the small bowl (FT-77B/78B) with a hose clamp.
13. Center the small bowl (FT-77B/79B) over the small pedestal (FT-78C).
14. Fit the finial (FT-77A/78A) into the small bowl (FT-77B/78B) by feeding the protruding copper pipe from the bowl into the hole in the bottom of the finial.
15. Place the pump cover door (FT-78EE/79BB) into the large pedestal (FT-78E/79B).
16. Fill the fountain with water.