

OWNER'S MANUAL

12 GALLON EXTRACTOR

Innovative, powerful, clever. "Simply the most innovative extractor ever designed." Is this quote possible? Yes, it's not only possible, it's true! No extractor design has ever incorporated so many advanced features and patented innovations in a single design. We urges you to compare the 12-Gallon side-by-side to any competitor. The conclusion is self evident.

We are designed, manufactured and assembled in the **U.S.A.**



Specifications

120 PSI

220 PSI

300 PSI

500 PSI

Table Of Contents

| | |
|---|-----|
| 12-Gallon Quick Start Guide | 3 |
| Grounding Instructions | 4 |
| Parts and Service | 4 |
| Name Plate | 4 |
| Unpacking the Machine | 4 |
| Caution / Warning symbols | 4-5 |
| Reducing risk of fire, electrical shock or Injury | 5 |
| Preparation | 5 |
| Operating Instructions | 5 |
| Maintenance Schedule | 6 |
| Filter Maintenance | 6 |
| Vacuum Stack filters | 6 |
| Pump filters & In-line Filter..... | 6 |
| Trouble shooting | 6 |
| Pump does not work properly | 6 |
| Extractor heater does not work properly | 6 |
| Vacuum motor does not work properly | 6 |
| Limited warranty policy | 7 |
| Return Material Authorization (RMA) Procedure | 7 |

12-GALLON QUICK START GUIDE



Quick Start Machine Preparation

1 Switches




Make sure all switches are in the OFF position.

2 Hoses & Straps



Assemble your vacuum & solution hose. Small loop goes over small hose velcro over hose. Large 5 straps, one every five.

3 Vacuum & Solution hose

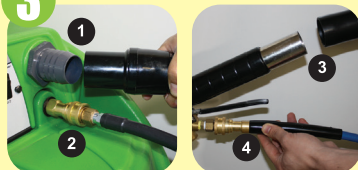

1. Connect your hose to vacuum
2. Solution hose
3. Push back locking sleeve, insert brass post, let locking sleeve cover spring back covering retaining balls
4. Push vacuum hose & cuff over 1.5" hose barb

4 Cleaning liquids



Pour liquid into front cavity. (For best results use 100° water) Do not use more chemical than directed. Over use of chemical clogs jets, brass and reducing heater performance.

5 Liquids detergent only



Use liquid detergents only. Powder clogs pumps + filters

6 Dump valve closed position



Stores into slot below dump valve.



Dump valve extender

1 Cord Extractor | 2 Cord Extractor Electrical Connection

Power Single Cord Machine



7



Plug into grounded outlets, No GFI outlet.

No Power Dual Cord Machine



GFI's

1st plug in one cord.
2nd Cord must be on a separate circuit. A light and sound pulse will activate when you plug into a 2nd circuit. If you do not hear a pulse tone move cord to other outlet until you obtain a 2nd pulse. Pump will not run unless 2nd circuit light is on, no GFI outlets.

8 HOT!

Many surfaces are hot, wear protective clothing



Wear eye protection



Wear gloves




Wear long sleeves



Wear long pants



HOT



HOT



HOT

CAUTION

Start Sequence 1,2,3,4,5

1 Turn pump on



9

2 Pump test, prime machine



Pull triggers until liquid sprays from spray jets. Pump and heater is now primed. With water or cleaning solution.

3 Prime 300 & 500 PSI



For 300 & 500 PSI units a prime valve is located on the front panel. A. turn up to prime. B. Spray for 30 seconds C. Turn valve down to run position

4 Heater Pre-Heat



Now that the pump is primed with water or cleaning solution. Turn heater on for 5-minutes to Pre-Heat.



Never run heater DRY or without liquid. Throughout the machine and hose system. Failure to do so, will damage the heater.

5 Vacuum motor



Turn on both vacuums motors.

Carpet Cleaning and wand use

14

After start sequence above

1. Start in the far corner and plan your exit.
2. Do a series of 4'x6' area spraying forward and extracting back. Overlap by 2" on each stroke.
3. After your 4'x6' area is done go over it again vacuuming only at a slow pace to remove any missed liquids to improve drying.

Upholstery

Reduce pressure to 100PSI



When doing upholstery it's important not to overwet, test on an unseen area and allow to dry prior to starting.

15



Disposal of Water & You're Finished

Disposing of dirty water

1. Unplug the extractor and back it over a toilet or bucket
2. Slowly pull the dump-valve up and dispose of the water to the sewer system.
3. Remember to close it when done.
4. Never dispose of liquids on to the soil, outdoor gutter or into the environment.

When You're finished

1. Take the vacuum hose off the wand and put it into the front tank and vacuum out the remaining cleaning chemicals to the recovery tank, dump the water into a bucket or toilet.
2. Run clean water (warm if possible) throughout the machine to remove cleaning chemicals from coating internal hoses/jets.
3. Unplug the equipment, wipe it down with clean cloth and soap and return it to a safe storage area.

12 Gallon Extractor

Dear Customer:

Congratulations on the purchase of your new 12 Gallon Extractor.

Like any other piece of machinery or technology, extractors require the proper maintenance and care to keep the product working over extended use. Neglecting your machine, abusing it or not operating it properly can void its warranty and prevent the machine from performing to the quality and standard you'd expect.

If you have any warranty concerns or questions, please review this manual thoroughly or do not hesitate to contact your distributor. If there are questions regarding maintenance, replacement or ordering parts please contact an authorized Service Center.


Before using your extractor, please read this manually thoroughly.

Grounding Instructions

This machine must be grounded. If it should malfunction or break-down, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local codes and ordinances. Do not remove ground pin; if missing, replace plug before use.

Improper installation of the equipment-grounding conductor can result in a risk of electric shock. Be sure to check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. If the plug will not fit in the outlet do not modify either the plug or the machine's cord, instead have a proper outlet installed by a qualified technician.

This machine is for use on a nominal 120-volt circuit and with a grounding plug similar to the one in Figure 1 below. If a proper outlet is not available, follow the illustrations of Figure 2 & 3 to install a temporary-grounding plug. This temporary work-around should be used only until a proper outlet (Figure 1) can be installed by a qualified electrician. When and if this type of adapter is employed, screw the adapter's extended tab into place with a metal screw. However, grounding adapters are not approved for use in Canada. Again, be sure to check the grounding pin for damages and replace if necessary. The Green, or Green-Yellow, wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to only the grounding pin.

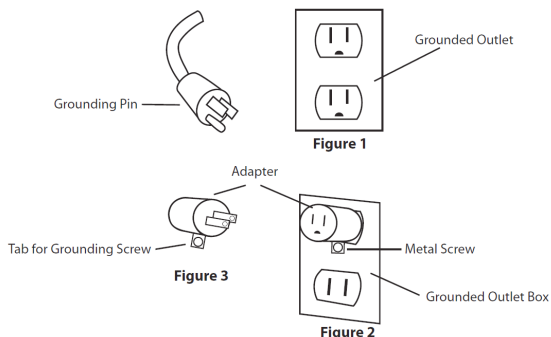

Parts and Service

Please contact service personnel or authorized Service Center using original replacement parts and accessories for repairs. When calling for support please have your Model and Serial Number available for faster assistance.

Name Plate

The Model and Serial Number are located on the lower half of the back of the machine near the power plugs and will be required for ordering replacement parts. You can use the space provided on the front of this manual to record both for future reference.

Unpacking the Machine

When your new machine is delivered, please carefully inspect both the shipping carton and the machine for damages. If damage is evident, save both the shipping carton and the machine for inspection by the shipping company. Contact the carrier immediately to file a freight claim if there is damage.

Caution / Warning Symbols

Always read this information carefully and take the necessary steps to protect personnel and property.

Caution warnings are used to warn of immediate hazards that cause severe personal injury or death.

Always wear eye protection, gloves and long sleeves and pants.

To reduce the risk of fire, electrical shock, or injury:

1. Read quick start guide and manual prior to use.
2. Unplug machine before service.
3. Use only manufacturer recommended attachments and replacement parts.
4. Never upgrade or repair this equipment without authorization from the manufacturer.
5. Do not unplug the unit by pulling on the cord.
6. Do not run over the cord with any wheeled product.
7. Do not pull or carry by the cord.
8. Do not use on wet surfaces.
9. Do not use if the cord is damaged.
10. Do not use in areas with flammable or combustible material are present.
11. Do not allow to freeze.
12. Do not store on its side with liquids in the recovery or solution tanks.
13. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
14. Keep hair, loose clothing, fingers, and all parts of the body away from all openings and moving parts.
15. Use extra care when using on stairs.
16. To reduce the risk of fire or electric shock, do not use this machine with a solid-state speed control device.

continued in page 5

17. The voltage and frequency indicated on the name plate must correspond to the wall receptacle supply voltage.
18. When cleaning and servicing the machine, local or national regulations may apply to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkaline, or other dangerous liquids.

Preparation

1. Remove furniture and other items from the area you are going to clean.
2. Vacuum carpet and upholstery, and remove debris.
3. Protect cabinets, walls and painted surfaces with drop cloths or plastic.
4. Inspect power cords for damage.

Operating Instructions

1. Fill the solution tank.
2. Attach female end of a solution hose to a wand or other tool and the male end to the Extractor's Quick Disconnect (QD).
3. Plug in power cords: Extractor Model: Using two separate circuits/breakers, plug in the grounded power cables as previously instructed using the appropriate grounding techniques. The green indicator to the right of the PSI gauge will illuminate and sound a tone when plugged into separate circuits/breakers.
 - i. Activate the switches using the following steps:
 - ii. When the hoses are attached, turn Pump-Out Switch.
 - iii. (500psi only)The Prime Valve and Pressure Regulator are located on the front right side of the solution tank and should be primed prior to use. To prime the pump turn the valve to the Prime position for 30 seconds, and then turn horizontally to the Run position.
 - iiii. Pull your wand's trigger to ensure water is running through the lines to avoid damage to the Pump and Heating unit (Extractor).
5. If the heater is to be used, prime the system first. Turn on the heater switch and allow it to heat up for 5 minutes
6. To clean, make two dry passes for every one wet pass while working away from the power cords. For optimal use or heavily soiled areas, repeat wash steps in the opposite direction.
7. To prevent motor or internal damage, use a foam control solution in the recovery tank. Remember to check for build-up in both the recovery and solution tanks!
8. Empty the Recovery Tank when the internal shut off disengages the vacuum. Attach the 45° drain elbow to the drain spout located in the back and lift the dump valve to empty the tank.
9. Squeeze the wand or tool's trigger for five seconds after turning the power switches off to relieve any existing line pressure.
10. When the machine is off: unplug the power cables, remove solution and vacuum hoses, and empty the recovery tank by attaching the 45° drain elbow.
11. To empty the solution tank, twist off the solution tank drain cap located on the back of the machine after use
 1. Before storing the machine, drain, rinse and dry both the tanks and vacuum hoses of any residual water or solution.
 2. Store standing upright in a dry, enclosed location.
 3. Leave the recovery tank lid open for better air circulation.
 4. If storing in freezing temperatures, take extra precautions to make sure the machine and solution systems are completely drained and dry.

12 Gallon Extractor

Maintenance Schedule

Latches are located in the back to open the tank for internal maintenance. To keep machine in good working condition, follow the below recommended daily and weekly maintenance procedures. Relief valves should be replaced annually.

| Maintenance item | Daily | Once a week |
|---|-------|-------------|
| Clean and inspect tanks. | X | |
| Clean and inspect hoses. | X | |
| Check and clean internal filters by twisting off, rinsing with clean water and replacing. | X | |
| Check power supply cable. | X | |
| Clean machine with all-purpose cleaner and cloth. | X | |
| Check spray nozzles. | X | |
| Flush solution system with | X | |
| Remove float and shut-off screen from tank and clean. Simply pull off. | | X |
| Inspect vacuum hoses for holes and loose cuffs. | | X |
| Inspect spray pattern for clogging. If clogged, remove spray tips and soak them in a recommended liquid neutralizer for up to six hours. To remove spray tip, twist spray tip body counter-clockwise. | | X |
| Lubricate wheels with water resistant oil. | | X |
| Inspect machine for water leaks and loose hardware. | | X |

Filter Maintenance

All Extractor models have four filters that need to be checked and cleaned after each week of use. Regular filter maintenance is a simple way to extend the life of your machines.

Vacuum Stack Filters:

Located inside of the black vacuum tank are two vacuum stacks. Each stack has one foam filter to help prevent waste material from getting into the vacuums and cause damage. To maintain these filters:

1. Remove the recovery tank lid.
2. Reach in and pull out the two black filters located in the top of the vacuum stacks.
3. Clean the filters under a faucet of any debris and check for damage. If the filters are not damaged, place them back in the stacks. If filters are damaged and falling apart, replace them.

Pump Filters

The filter is a half-circle shaped screen located on the inside bottom of the solution tank. To maintain filter:

1. Open solution tank lid.
2. Reach into solution tank and rotate the dome-shaped filter from its brass nipple by rotating it counter clockwise.
3. Check filter for any debris or damage to screen. Rinse filter of any debris or replace if damaged.
4. Place new or cleaned filter back onto brass nipple by rotating it clockwise.

(Additional inline filter inside the machine)

Inline Pump Filter (additional instructions)

1. Remove the screw that holds the solution tank and the base together from the front of the machine.
2. Locate the inline filter on the clear solution hose, from the solution tank to the pump. Take off the clear housing of the filter by turning it counter clockwise
3. Check filter for any debris or damage to screen. Rinse filter of any debris or replace if damaged.
4. Place new or cleaned filter back into housing and install housing back into base by rotating it.

Trouble Shooting

There is no power.

1. Plug power cord(s) in proper outlet(s).
2. If using two cords, make sure each is plugged into a separate circuit.
3. Check circuit breaker and reset if tripped. There should not be any additional items in use on the same circuit as the machine and the outlet must be a 20-amp circuit.

Pump does not work properly


1. Snap quick disconnects firmly together.
2. Check solution tank; may be empty.
3. Jets clogged, remove jet and flush clean.
4. Filters clogged, remove filters and rinse clean with water. One filter is in the bottom of the recovery tank and the secondary filter is located in the motor area. Be sure to unplug the machine and turn all switches to the off position prior to cleaning.
5. If brass check valve is stuck, replace valve.
6. Check pump wire. May need to reconnect wire.
7. Switch plate may need to be replaced.
8. If pump motor brushes are worn, replace pump.

Extractor heater does not work properly

1. Check circuit breaker in the building electrical panel.
2. Heating element may need to be replaced.
3. Plug is in a GFI and the GFI is in the off position (popped)


Vacuum motor does not work properly

1. Check that hose is tightly connected.
2. Close drain hose valve completely.
3. Secure the vacuum tank tightly.
4. If water is coming out of the vacuum motor, use a low foaming detergent.
5. Clean upholstery tool or floor wand jets.

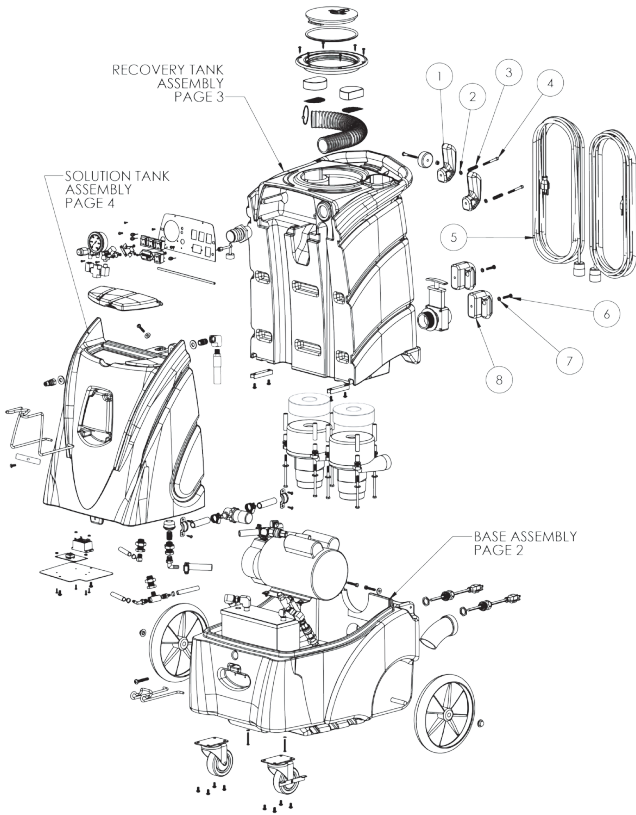


| | | |
|----|----------|---|
| 30 | 150-0013 | 3/4" Hose Clamp |
| 31 | 500-0031 | Inline Strainer for Extractor |
| 32 | 201-0021 | 1/2" Inlet Hose from Strainer to 500 psi Pump - 6" long |
| 33 | 300-0003 | 1/4" Inline Check Valve |
| 34 | 300-0009 | 1/4" Female Brass 90° Elbow |
| 35 | 200-0016 | 15" overall length 1/4"mpt x 1/4"ft - Pulse Hose |
| 36 | 351-0002 | Complete Heater Assembly For 12 Gallon Extractor |
| 37 | 200-0017 | 51" overall length 1/4"mpt x 1/4"mpt - Pulse Hose |
| 39 | 300-0026 | 1/4" Straight thru Female QD with 1/4" NPT female thread |
| 40 | 300-0027 | 1/4" Straight thru Male QD with 1/4" NPT female thread |
| 41 | 300-0031 | 1/4" x 1-1/2" Pipe Nipple |
| 42 | 300-0021 | 1/4" Brass Street Elbow |
| 43 | 300-0010 | 1/4" Brass Tee FNPT |
| 44 | 350-0010 | 1/4" 700psi Side Relief Valve |
| 45 | 300-0005 | 1/4" Hose Barb x 1/4" MNPT 90 Degree Brass |
| 46 | 150-0012 | Oetiker Clamp #140 |
| 47 | 201-0020 | 1/4" Red Hose from Extractor Heater to Solution Tank - 33-1/4" long |
| 48 | 200-0018 | 46" overall length 1/4"mpt x 1/4"mpt - Pulse Hose |
| 49 | 300-0027 | 1/4" Straight thru Male QD with 1/4" NPT female thread |
| 51 | 100-0046 | 1/4-20 x 1/2 PHP Machine Screw Plated |
| 52 | 100-0041 | 5/16 SAE Flat Washer Stainless Black zinc (MS15795-812) |
| 53 | 201-0021 | 1/2" Inlet Hose from Strainer to 500 psi Pump - 6" long |
| 54 | 150-0013 | 3/4" Hose Clamp |
| 55 | 300-0042 | 1/2" Barb x 3/8" MPT 90° Elbow |
| 56 | 200-0016 | 15" overall length 1/4"mpt x 1/4"ft - Pulse Hose |
| 57 | 650-0011 | Extractor Motor Spacer |
| 58 | 300-0021 | 1/4" Brass Street Elbow |
| 59 | 300-0032 | 1/4" Hex Nipple |
| 60 | 300-0036 | 3/8"NPT M x 1/4"NPT F Reducer Bushing |
| 61 | 300-0026 | 1/4" Straight thru Female QD with 1/4" NPT female thread |

| # | Part Number | Description |
|----|----------------|---|
| 1 | 700-EXT12CSG | 12 Gallon Extractor Cord Wrap Cleat Set - NSS GREEN |
| 2 | 100-0054 | 1/4" Washer for Extractor Cord Wrap |
| 3 | 100-0055 | Spring for Cord Wrap |
| 4 | 100-0060 | Screw for Upper Cord Wrap in Extractor |
| 5 | 400-0030 | Extension Cord for Extractor |
| 6 | 100-0049 | 1/4-20 x 1" Screw |
| 7 | 100-0054 | 1/4" Washer for Extractor Cord Wrap |
| 8 | 700-EXT12CSBLK | 12 Gallon Extractor Cord Wrap Cleat Set - NSS GREEN |
| 9 | 500-0022 | 500psi Pump |
| 10 | 100-0042 | 5/16 x 1-1/2 Bolt - Extractor Hinge |
| 11 | 100-0041 | 5/16 SAE Flat Washer Stainless Black zinc (MS15795-812) |
| 12 | 400-0027 | Strain Relief and Nut for Extractor |
| 13 | 400-0029 | Pigtail for Extractor |
| 14 | 800-0021 | Dump Elbow |
| 15 | 100-0033 | 1/2" Push on Cap Nut |
| 16 | 800-0022 | 10" Extractor Wheel |
| 17 | 600-0009 | Extractor Axle |
| 18 | 700-EXT12BBLK | 12 Gallon Extractor - BASE - Black |
| 19 | 100-0054 | 1/4" Washer for Extractor Cord Wrap |
| 20 | 100-0038 | 10-32 x 1-1/2 PHP Machine Screw Plated |
| 21 | 800-0024 | Caster with Brake for Extractor |
| 22 | 100-0046 | 1/4-20 x 1/2 PHP Machine Screw Plated |
| 23 | 800-0023 | Caster For Extractor |
| 24 | 600-0016 | Hose Hook - Lower |
| 25 | 100-0057 | 5/16-18 X 2" PHILLIPS PAN HD M/S PLATED |
| 26 | 350-0008 | Enclosure for Dual Rod Heater |
| 27 | 100-0034 | #12 x 1/2 PHP Sheet Metal Screw Black |
| 28 | 150-0009 | 3/8" Cushioned Clamp |
| 29 | 201-0019 | 1/2" Inlet Hose From Tank to Strainer - 50" long |

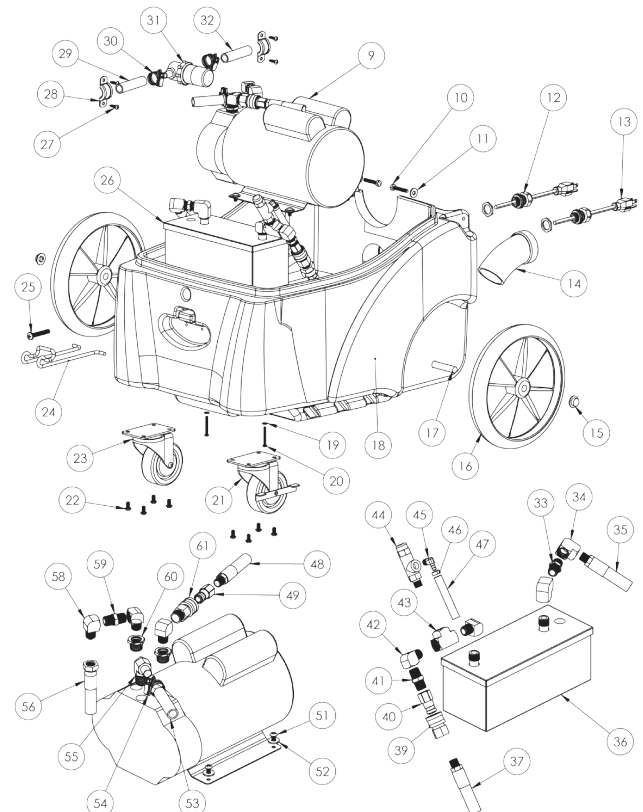


12 Gallon Extractor

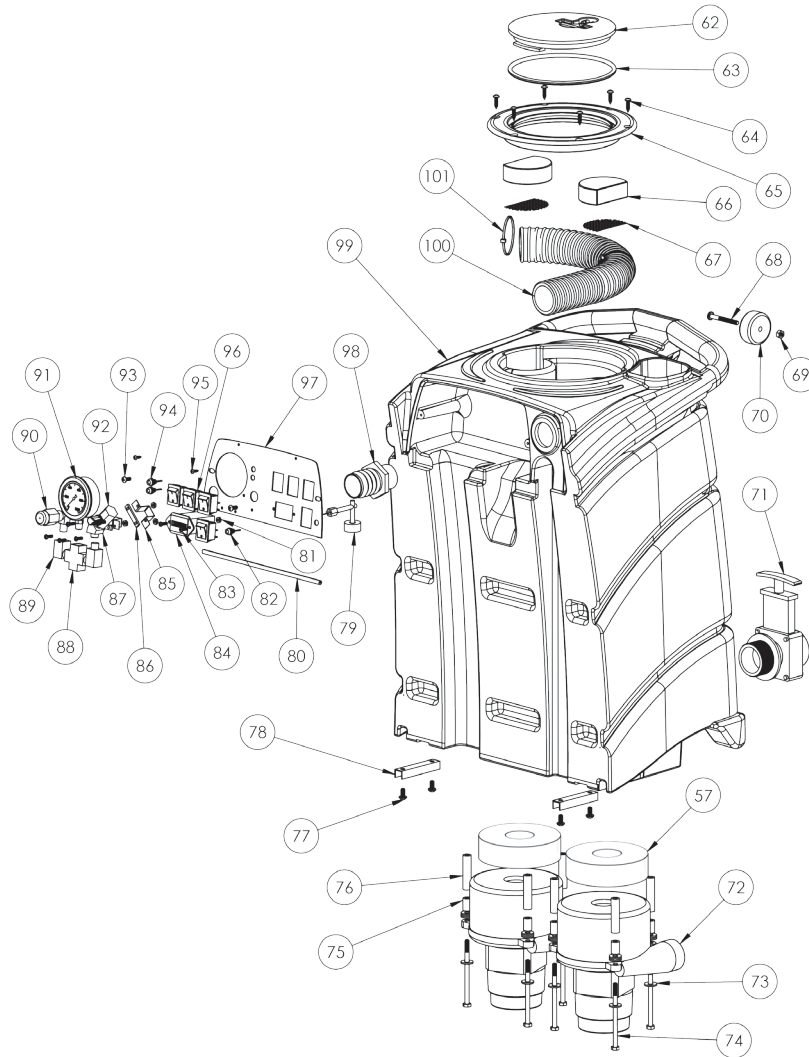

| | | |
|----|------------|--|
| 62 | 800-0017 | 6" Single Handle Twist Lock Deckplate-Black |
| 63 | 800-0017-O | O-Ring for Extractor Hatch Cover |
| 64 | 100-0034 | #12 x 1/2 PHP Sheet Metal Screw Black |
| 65 | 800-0017 | 6" Single Handle Twist Lock Deckplate-Black |
| 66 | 650-0010 | Extractor Intake Foam Filter |
| 67 | 600-0029 | Extractor Intake Screen |
| 68 | 100-0036 | 1/4-20 x 2-1/4 Pan Head Phil m/s Stainless Black Zinc |
| 69 | 100-0052 | 1/4-20 Hex Nut Stainless Black Zinc |
| 70 | 800-0025 | 2" Wheel for Extractor Handle |
| 71 | 800-0020 | 1-1/2" Dump Valve for Extractor |
| 72 | 500-0010 | 3-Stage Extractor Motor |
| 73 | 100-0047 | 1/4 SAE Flat Washer Stainless Black Zinc (MS15795-810) |
| 74 | 100-0035 | 1/4-20 x 4 Hex Head c/s GR5 Plated |
| 75 | 100-0050 | 3/4" Nylon Spacer |
| 76 | 100-0026 | Spacer for spotter motor bolt |
| 77 | 100-0046 | 1/4-20 x 1/2 PHP Machine Screw Plated |
| 78 | 600-0017 | Bracket for Extractor Tanks |
| 79 | 400-0026 | Tank Wall - Horizontally Mounted Float Switch |
| 80 | 800-0033 | Trim for Extractor Control Panel |
| 81 | 100-0051 | 6-32 Hex Nut Steel Zinc Plated |

| | | |
|-----|--------------|--|
| 82 | 400-0031 | LED Indicator, Red, 110V |
| 83 | 100-0043 | 6-32 x 1/2 PHP Machine Screw Plated |
| 84 | 500-0025 | A/C - SH-713 Generator Hour Meter |
| 85 | 600-0019 | Gauge Cluster Bracket |
| 86 | 600-0031 | Spacer for Gauge Cluster |
| 87 | 300-0029 | 1/4" Street 45° |
| 88 | 300-0025 | 1/4" Female Cross Brass |
| 89 | 300-0021 | 1/4" Brass Street Elbow |
| 90 | 500-0017 | 600PSI Regulator |
| 91 | 500-0015 | 1000psi Gauge for Extractor |
| 92 | 300-0024 | 1/4" M x 1/4" F Mini Ball Valve |
| 93 | 100-0039 | 10-32 x 1/2 PHP Machine Screw Stainless Black Zinc |
| 94 | 400-0032 | LED Indicator, Green, 220V |
| 95 | 100-0045 | #6 x 1/2 PHP Sheet Metal Screw Plated |
| 96 | 400-0021 | Splash Proof Rocker Switch |
| 97 | 600-0012 | Extractor Control Panel 3 Switch with Gauge |
| 98 | 800-0027 | 1.5" Vacuum Hose Barb |
| 99 | 700-EXT12RTG | 12 Gallon Extractor Recovery Tank - Black |
| 100 | 201-0012 | Diffusing Hose for Extractor Recovery Tank |
| 101 | 400-0007 | 7" Zip Tie |

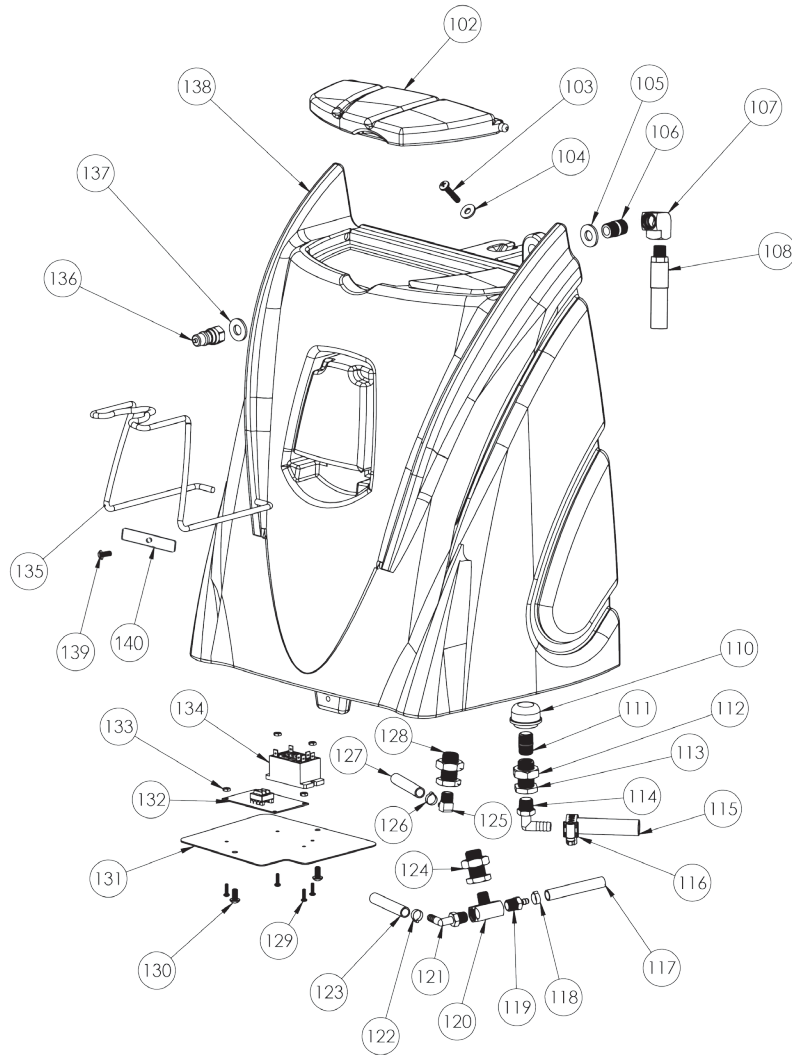

| | | |
|-----|---------------|---|
| 102 | 700-EXT12LBLK | 12 Gallon Extractor - Lid - Black |
| 103 | 100-0016 | 1/4-20x1-1/4 Phillips Pan HD Soc M/S Plated |
| 104 | 100-0041 | 5/16 SAE Flat Washer Stainless Black zinc (MS15795-812) |
| 105 | 100-0048 | 1/2 SAE Flat Washer Stainless Black Zinc |
| 106 | 300-0031 | 1/4" x 1-1/2" Pipe Nipple |
| 107 | 300-0009 | 1/4" Female Brass 90 Degree Elbow |
| 108 | 200-0017 | 51" overall length 1/4"mpt x 1/4"mpt - Pulse Hose |
| 110 | 800-0106 | 1/4" Acorn Strainer |
| 111 | 300-0022 | 1/4" Close Nipple |
| 112 | 300-0028 | 1/4" Bulkhead Fitting |
| 113 | 300-0028 | 1/4" Bulkhead Fitting |
| 114 | 300-0034 | 1/2" Barb x 1/4" MNPT 90° |
| 115 | 201-0019 | 1/2" Inlet Hose From Tank to Strainer - 50" long |
| 116 | 150-0013 | 3/4" Hose Clamp |
| 117 | 201-0020 | 1/4" Clear Braided Hose from Bypass Regulator to Solution Tank - 32" long |
| 118 | 150-0012 | Oetiker Clamp #140 |
| 119 | 300-0018 | 1/4" Barb x 1/4" MNPT Straight Brass |
| 120 | 300-0037 | 1/4" Branch Tee |
| 121 | 300-0005 | 1/4" Hose Barb x 1/4" MNPT 90 Degree Brass |

| | | |
|-----|-----------------|---|
| 122 | 150-0012 | Oetiker Clamp #140 |
| 123 | 201-0022 | 1/4" Clear Braided Hose from Bypass Regulator to Solution Tank - 32" long |
| 124 | 300-0028 | 1/4" Bulkhead Fitting |
| 125 | 300-0005 | 1/4" Hose Barb x 1/4" MNPT 90 Degree Brass |
| 126 | 150-0012 | Oetiker Clamp #140 |
| 127 | 201-0023 | 1/4" Clear Braided Hose from Priming Valve to Solution Tank - 31" long |
| 128 | 300-0028 | 1/4" Bulkhead Fitting |
| 129 | 100-0043 | 6-32 x 1/2 PHP Machine Screw Plated |
| 130 | 100-0046 | 1/4-20 x 1/2 PHP Machine Screw Plated |
| 131 | 600-0028 | Extractor Electrical Compartment Cover |
| 132 | 400-0033 | Dual Circuit Indicator |
| 133 | 100-0051 | 6-32 Hex Nut Steel Zinc Plated |
| 134 | 400-0025 | Extractor Motor Relay |
| 135 | 600-0015 | Hose Hook Upper |
| 136 | 300-0021 | 1/4" Female Quick Disconnect |
| 137 | 100-0048 | 1/2 SAE Flat Washer Stainless Black Zinc |
| 138 | 700-EXT12STGNSS | 12 Gallon Extractor - Solution Tank - NSS GREEN |
| 139 | 100-0046 | 1/4-20 x 1/2 PHP Machine Screw Plated |
| 140 | 600-0027 | Keeper plate for Retractable Hook |

ELECTRICAL WIRING DIAGRAM

