

Wireless Color Forecast Station





SET UP GUIDE

MODEL: 308-1425Bv3

Table of Contents


POWERUP & TROUBLE SHOO	OTING	WEATHER STATION		APPENDIX	
Power Up	03	Setting Menu	04	Care & Maintenance	09
Atomic Time	03	Adjustable Backlight	05	Specifications	10
Outdoor Sensor Search	09	24-Hour Pressure Graph	05	Stay in Touch	11
Low Battery Indicator	09	Animated Forecast Icons	05	We're Here to Help	11
		Forecast Trend Arrows	06	Warranty Info	11
		Moon Phase	06	California Residents	11
		Customizable Alerts	06	FCC Statement	12
		Activate/Deactivate Alerts	07	Double Warranty Info	12
		Min/Max Records	07		
		Heat Index/Dew Point	08		
		Temp./Humidity Trend	08		
		Arrows			
		Time Alarm	08		

Power Up

- 1. Insert 2-AA batteries into your Outdoor Sensor.
- 2. Insert the 5.0V Power Adapter into a working outlet. Then insert the Power Jack end into the back of the Forecast Station.
 - Optional: Insert 3 "AAA" batteries for backup.
- **3.** Once the sensor is reading to your station, place it outside in a shaded location to protect it from the sun's heat.

Watch our sensor mounting video: bit.ly/th_sensor_mounting



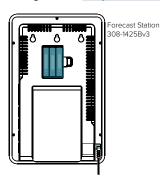

Atomic Time

- Your station will automatically search for the Atomic Time Signal at UTC 7:00, 8:00, 9:00, 10:00, and 11:00.
- Press the TIME SET button to manually start or stop a search for the WWVB Atomic Time Signal.
- The Tower Icon will flash while searching, and remain solid on screen when the WWVB Signal is received.
- For information about WWVB Atomic Time visit: bit.ly/atomic_time

Settings Menu

- Hold the TIME SET button until the display changes to enter the Settings Menu.
- Press and release either ARROW button to adjust, and the TIME SET button to confirm.
- 3. Press the SNOOZE/LIGHT button at any time to exit.

Settings Menu Order:

- WWVB ON/OFF
- Time Zone
- DST ON/OFF
- 12/24 Hour
- Hour
- Minutes
- Year
- Month
- Date
- Fahrenheit/Celsius

Time Zones

AST = Atlantic

EST = Eastern

CST = Central

MST = Mountain

PST = Pacific

AKT = Alaska

HAT = Hawaii

WWVB OFF: When WWVB OFF is selected, you will move directly to 12/24 Hour setting.

Weekday: Will set automatically when your Year, Month, and Date are set.

Adjustable Backlight

Press and release the **SNOOZE/LIGHT** button to adjust the backlight intensity: **High - Low - Off**


24-hour Pressure History Graph

- The bar graph indicates your pressure history trend over the past 24-hours.
- The far right "Oh" is current pressure.
- Read the graph from left to right to view past to current pressure.
- When the bars are rising, weather should improve.
- When the bars are falling, weather may worsen.

TENDENCY TENDENCY -24h-18h-12h -9h -6h -3h 8h PRESSURE HISTORY

Animated Forecast Icons

- The forecast icons use the station's internal barometer to predict conditions to come within the next 12 hours. For more info, watch our video here: bit.ly/forecast_vid.
- The Snow Icon will show when temperatures are below 32°F (0°C) and rain or T-storms are predicted.

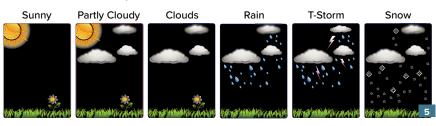

Forecast Trend Arrows

The Forecast Trend Arrows indicate the change in pressure over the past 3 hours.



Moon Phase

The moon phase is based on the Lunar Calendar and the year, month, and date settings.

















New Moon

Waxing Crescent

First Quarter

Waxing Gibbous

Full Moon

Waning Gibbous

Last Quarter

Waning Crescent

Customizable Alerts

Setting Custom Alerts

- **1.** Hold the **ALERTS** button until the display changes to the Alert Settings.
- Press and release either ARROW button to adjust alert value. Press the ALERTS button to confirm your selection.
- Your programmed alerts are active when The word HIGH or LOW with a bell icon are shown.



Alerts Setting Order

Outdoor High Temperature • Outdoor Low Temperature Indoor High Temperature • Indoor Low Temperature

Activating/Deactivating Alerts

Press and release the **ALERTS** button to view each alert. Press and release the **UP ARROW** button to arm the alert. Press and release the **DOWN ARROW** button to disarm the alert



Alert Sounds

- When alert value is reached, station will beep 5 times each minute, until out of alert range. Press any button to stop the alert sound.
- The Alert Icon will remain flashing until out of the alert range.

MIN/MAX Records

The Forecast Station provides the daily minimum and maximum temperatures each day starting at midnight (12:00 AM). The Forecast station automatically resets the min/max temperatures at midnight (12:00 AM).

View Minimum Records

Press and release the **DOWN ARROW** button to view minimum temperature records.

Reset Minimum Records

Hold the **DOWN ARROW** button to reset minimum temperature records.

View Maximum Records

Press and release the **UP ARROW** button to view maximum temperature records.

Reset Maximum Records

Hold the **UP ARROW** button to reset maximum temperature records.

Heat Index and Dew Point

Press and release the **HEAT/DEW** button to view Outdoor Heat Index and Dew Point Temperature.

Temperature & Humidity Trend Arrows

The Trend Arrows indicate the change in Temperature (2°F / 1°C) or Humidity (3% RH) over the past 3 hours.



Time Alarm

Set Alarm Time

- **1.** Hold the **ALARM** button until the display changes to the Alarm Settings.
- Press and release either ARROW button to adjust the alarm time. Press and release the ALARM button to confirm and move to the next item or exit.

Activate/Deactivate Alarm

- 1. Press and release the **ALARM** button to show alarm time.
- With alarm time showing, press and release the ALARM button to activate or deactivate the alarm.
- 3. When alarm is active the Alarm Icon 🔩 will show.

Snooze

When the alarm sounds press and release the **SNOOZE/LIGHT** button to silence the alarm for 10 minutes. The Snooze Icon **Zz** will flash when active. Press any button except SNOOZE/LIGHT to silence the alarm for 24 hours. The alarm will continue for two minutes then shuts off completely if not silenced.

Search for Outdoor Sensor

If you are seeing dashes for your outdoor readings, please try the following steps:

- 2. If after 3 minutes the sensor still isn't connected, bring the sensor inside next to the display and remove power from both the sensor and station.
- **3.** Press any button on the station 20 times and leave the parts sit for a few moments with the power off.
- 4. Install a new set of alkaline batteries into the sensor, then into your station.
- 5. If your outdoor data is still not appearing after these steps, please contact our support staff. For additional help visit: <u>bit.ly/basic_restart</u>.

Low Battery Indicator

- Low Battery Icon \(\bar{\cup} \) by Outdoor Temperature, replace batteries in the Outdoor Sensor.
- ullet Low Battery Icon ullet by Indoor Temperature, replace batteries in the Forecast Station.

Care & Maintenance

Battery Replacement Instructions

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- · Do not mix Alkaline, Lithium, Standard, or Rechargeable battteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- · Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

Specifications


Forecast Station (308-1425Bv3)

- Temperature Range: 32°F to 122°F (0°C to 50°C)
- Humidity Range: 10% 99% RH
- Power Requirements: 5-volt power adapter (included) AC6: GPU280500150WAOO

Optional: 3 "AAA" LR3 Batteries (not included)


The plug on the power adapter is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Dimensions: 6.16" L x 0.92" W x 9.6" H (15.64 cm L x 2.35 cm W x 24.51 cm H)

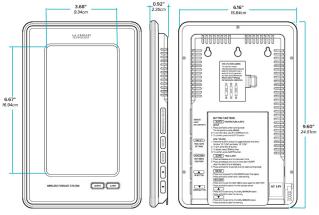

Outdoor Sensor (TX141TH-Bv4)

- Temperature Range: -40°F to 140°F (-40°C to 60°C)
- Humidity Range: 10% 99% RH
- Transmission Range: Over 330 feet (100 meters) in open air RF 433MHz
- · Update Interval: About every 51 seconds
- Power: 2-AA, LR6 batteries (not included)
- . Battery Life: Over 24 months
- Dimensions: 1.58" L x 0.83" W x 5.08" H (3.99cm L x 2.1cm W x 12.99 H cm)

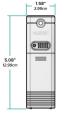



Stay in Touch!

Ask questions, watch setup videos, and provide feedback on our social media outlets. Follow La Crosse Technology on YouTube, Twitter, Facebook and Instaram.









We're Here to Help

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

Phone: 1608 782 1610

Online: bit.ly/contact_techsupport Self Help: bit.ly/308-1425bv3_support

Our knowledgable customer support team is available:

Mon-Fri 8am-6pm CST

Scan for **Product Page**



Warranty & Patent Info

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship. La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support

Patents: www.lacrossetechnology.com/patents

California Residents



CA WARNING: This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

LA CROSSE®

DOUBLE YOUR WARRANTY

Scan the QR Code or visit: bit.ly/308-1425bv3_register to register your product and double the standard 1-year warranty for free by opting to recieve occasional product emails.



Scan Here