

BREEZE PRO SENSOR




Model: LTV-WSDTH04So

DC: 012121

REPLACEMENT SENSOR - STATION CONNECTION

For users setting this up as a replacement sensor, follow these steps to get it synced with your display:

- 1. Press and release the SENSOR button on your station until you see the WIND section light up. Hold the MINUS (-) button to delete the original sensor. The Reception Icon I will begin to animate, indicating it is searching for a new sensor connection.
- 2. Install 3 new AA alkaline batteries into the Breeze Pro sensor (as shown below).
- 3. Keep the sensor near the display and allow 5 minutes for the sensor readings to appear.

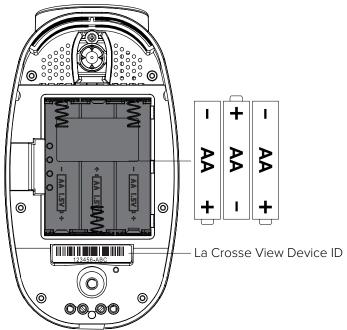

ADD TO THE LA CROSSE VIEW APP


- 1. Open your La Crosse View app, select the Devices tab from the main menu, and then press the ADD DEVICE or PLUS (+) button near the bottom of the page.
- 3. Give the device a Name and Location, and then press Save. Provided you have the station connected to the Internet, you should begin to see your sensor data in the app within the next few minutes.

For help with adding and removing devices within the La Crosse View app, please view our video here: bit.ly/add_devices

MOUNTING

For Accurate Measurements

- -Ensure the sensor is mounted level with the Solar Panel facing the sun. This will optimize battery life and transmit correct wind direction readings. This sensor is designed for use in the Southern Hemisphere.
- -Ideally, the Breeze Pro Sensor should be mounted on the tallest object in your area. Avoid positioning the sensor in line, or below eaves, rooflines, trees, or other objects that may obstruct wind readings.
- -Make sure all screws on the Mounting Bracket, Wind Cups, Wind Vane and Battery Compartment are securely fastened.
- The sensor should be mounted with the wind cups on top.

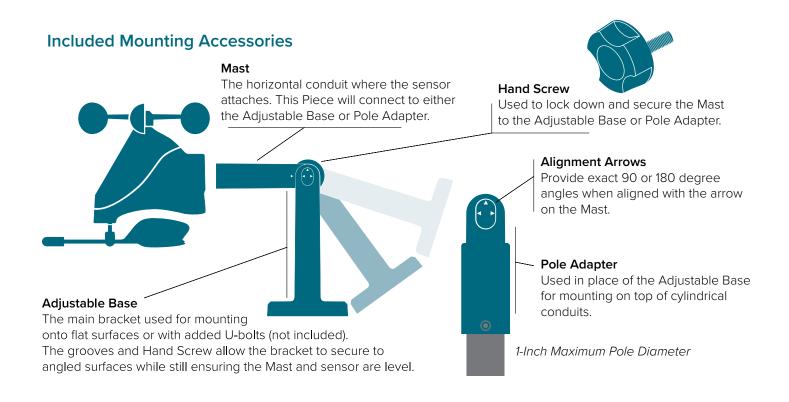


For additional sensor information, visit: www.lacrossetechnology.com/support

The illustrations above are not to scale and are for informative purposes only.

Basic Installation Options

Fence posts, poles, decks, and even mailboxes are all common mounting options due to their convenience. Many users prefer these types of locations as the data they provide is accurate from their ground level perspective. However, because wind in these spots is often affected by obstructions, the readings may differ compared to local reporting stations.

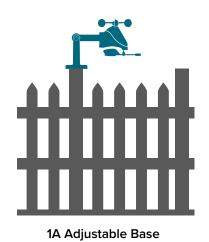


Basic Assembly

- 1A. Mount the Adjustable Base onto a flat surface using the provided four long screws.
- 1B. Secure the Pole Adapter to a cylindrical conduit using the provided two small screws.
- 2. Insert the Mast into the Breeze Pro Sensor and tighten the provided screws on the sides.
- 3. Use the Hand Screw to attach the Mast to either the Adjustable Base or Pole Adapter. Ensure the sensor is level, facing south, and securely fastened at all mounting points.



Advanced Installation Options

Some advanced installation options include tripods, wall mounts, eave cross mounts, chimney mounts, and many others. Any of these can be combined with U-bolts for attachment onto a tall cylindrical conduit using our Adjustable Base. Please note that these advanced options will require additional equipment and possibly professional help for best results.

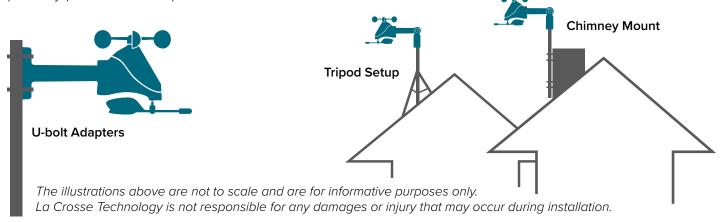

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- ullet Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

SPECIFICATIONS

• Wind Speed Range: 0 to 178 kMh (0 to 111 mph)

• Degrees of Wind Direction: 360° with 16 Cardinal Directions

• Outdoor Temp. Range: -40°C to 60°C (-40°F to 140°F)

• Outdoor Humidity Range: 10 to 99%RH

• Transmission Range: 121.92 Meters (400 Feet)

Power Requirements: 3-AA Alkaline batteries (not included)

• Update Interval: Every 31 Seconds

· Sensor Dimensions:

• With Bracket: 15.77cm L x 31.19cm W x 25.07cm H (6.21" L x 12.28" W x 9.87" H)

• Without Bracket: 15.77cm L x 20.96cm W x 16.94cm H (6.21" L x 8.25" W x 6.67" H)

• Type 17 Sensor

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/support

CARE + MAINTENANCE

- · Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

