

WIRELESS 915 MHz WEATHER STATION WS-9257U-IT


Instruction Manual

INTRODUCTION

Congratulations on purchasing this weather station with wireless 915 MHz transmission of outdoor temperature/humidity, indoor temperature/humidity and air pressure history. Clock function with quartz accuracy including calendar display and time alarm. This station provides weather forecast, sunrise/sunset time as well as the moon phase. This innovative product is ideal for use in the home or office.


FEATURES:

The weather station:

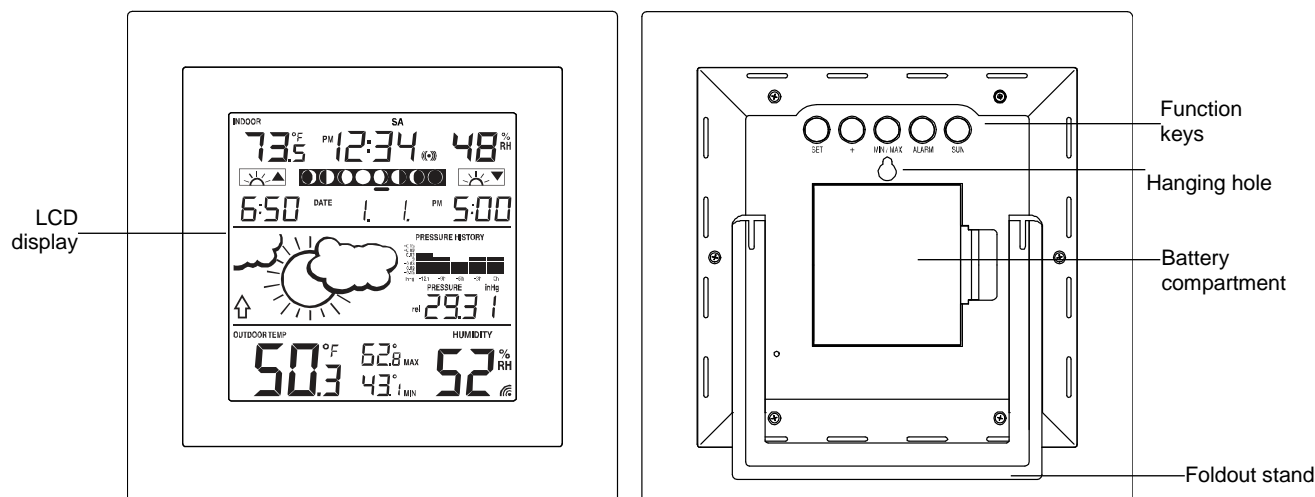

- 12-hour time display (seconds displayed by pressing the **SUN** key)
- Weekday, date and month display (year only in setting mode)
- Daylight saving time (DST) function selectable
- Daily alarm function
- Weather forecast with weather tendency indicator
- Temperature display in degree Fahrenheit (°F)
- Indoor temperature display with MIN/MAX recordings
- Outdoor temperature display with MIN/MAX recordings, time and date
- All MIN/MAX recordings can be reset
- Indoor and outdoor humidity display in RH%
- Display of relative and absolute air pressure display
- Relative air pressure inHg with adjustable reference value
- Relative air pressure history for the past 12 hours
- Display of sunrise time, sunset time and sun duration time in 93 USA cities and 6 Canadian cities
- Display 8 moon phase icons with indicator throughout the year
- LCD contrast setting
- Low battery indicators
- Table standing/wall mounting

The outdoor thermohygro transmitter



Remote transmission of outdoor thermohygro to Weather Station by 915 MHz


Water resistant casing

Wall mounting case

Mount in a sheltered place. Avoid direct rain and sunshine.

Mount under an eave or deck rail to provide shade.

INSTALL AND REPLACE BATTERIES IN THE THERMOHYGRO TRANSMITTER



The outdoor thermohygro transmitter uses 2 x AAA, IEC LR3, 1.5V batteries. To install and replace the batteries, please follow the steps below:

Remove the cover.


Insert batteries, observing the correct polarity (see marking).

Replace the battery cover on the unit.

Do Not Mix Old and New Batteries

Do Not Mix Alkaline, Standard, or Rechargeable Batteries

INSTALL AND REPLACE BATTERIES IN THE WEATHER STATION

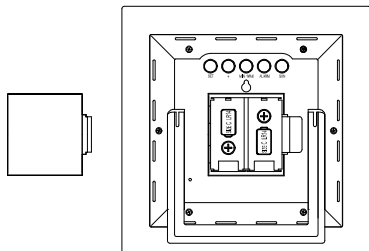

The weather station uses 2 x C, IEC LR14, 1.5V batteries. To install and replace the batteries, please follow the steps below:

Remove the cover at the back of the weather station.

Insert batteries, observing the correct polarity (see marking).

Replace the compartment cover.

Do Not Mix Old and New Batteries

Do Not Mix Alkaline, Standard, or Rechargeable Batteries

Note: Always wait for 2 minutes after removing the batteries before reinserting, otherwise start up and transmission problems may occur. When changing batteries in any of the units, it is required to reset all units by following the set up procedures and leaving batteries out for 15 minutes..

SET UP

Note: This temperature station receives only one outdoor transmitter.

1. First, insert the batteries in the transmitter (see “**Install and replace batteries in the thermohygro transmitter**” above). Place 5-10 feet from the display for initial set up.
2. Within 30 seconds of powering up the transmitter, insert batteries in the weather station (see “**Install and replace batteries in the weather station**” above). Once the batteries are in place, all segments of the LCD will light up briefly and a short signal tone will sound. Then the indoor temperature and humidity, and the time will display 12:00. If this information is not displayed on the LCD after 60 seconds, remove the batteries and wait for at least 2 minutes before reinserting them.
3. After inserting the batteries, the weather station will start receiving data signal from the transmitter. The outdoor temperature and humidity will display on the weather station. If this does not happen after 80 seconds, remove the batteries from both units and reset from step 1.
4. In order to ensure successful 915 MHz transmission, the distance between the weather station and the transmitter should be within 330 feet / 100 meters (see notes on “**Positioning**” and “**915 MHz Reception**”).

BATTERY CHANGE



Replace the batteries in all units regularly to ensure optimum accuracy of these units (Battery life **See Specifications below**).


- **Do Not Mix Old and New Batteries**
- **Do Not Mix Alkaline, Standard, or Rechargeable Batteries**

Please participate in the preservation of the environment. Return used batteries to an authorized depot.

FUNCTION KEYS

Weather station:

The weather station has five easy to use function keys:

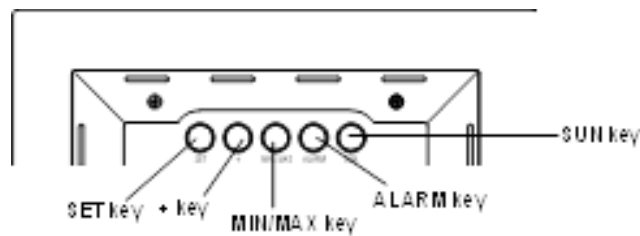

SET key

- Press and hold for 5 seconds to enter manual setting modes: LCD contrast, DST ON/OFF, manual time setting and calendar
- To stop the alarm sound
- To exit alarm setting mode and country/city setting mode
- To toggle between relative and absolute air pressure display

+ key

- To increase/change values in setting modes
- To stop the alarm sound

MIN/MAX key

- To switch among the display of MIN/MAX outdoor temperatures and MIN/MAX indoor temperatures
- To decrease/change values in setting modes
- Press and hold the key for 2 seconds to reset **ALL** indoor/outdoor minimum/maximum temperature recordings to current readings
- To stop the alarm sound

ALARM key


- To activate/deactivate the alarm and display alarm time
- Press and hold for 2 seconds to enter the alarm setting mode
- To stop the alarm sound
- To exit manual setting mode and country/city setting mode

SUN key

- To switch among the display of date (normal mode), seconds, sun duration and city location.
- Press and hold for 2 seconds to enter country/state/city setting mode
- To stop the alarm sound
- To exit manual setting mode and alarm setting mode

LCD SCREEN

The LCD screen splits into three main sections displaying the information for indoor and outdoor data, time, moon phase, calendar, sunrise/sunset time, weather forecast, air pressure history and value.

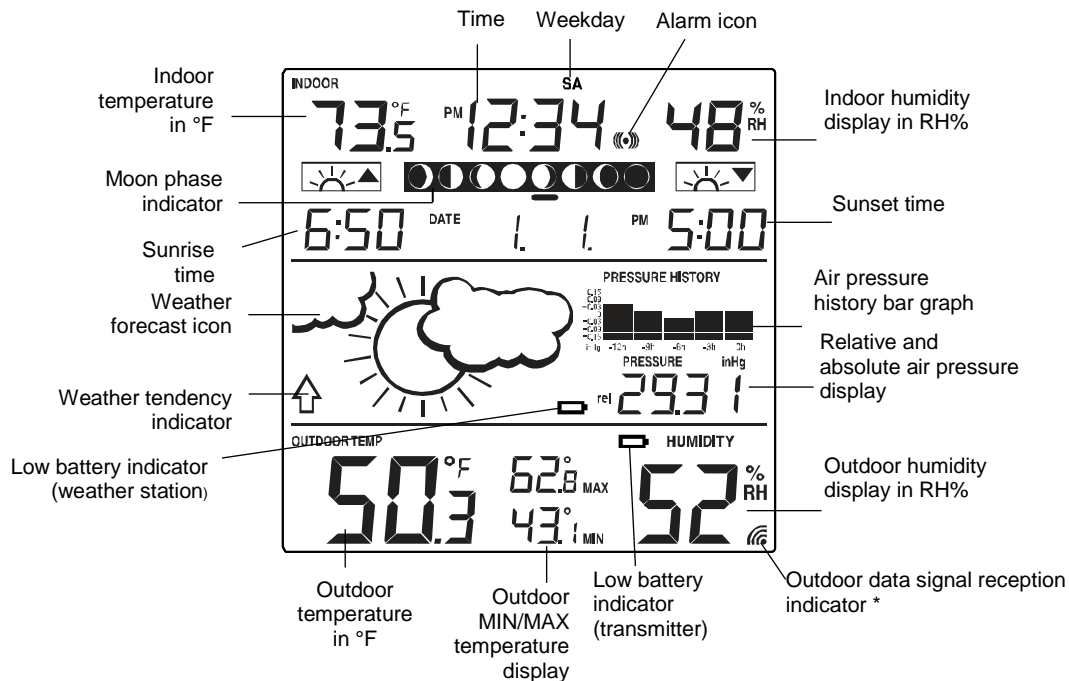

*When the signal from the thermohygro transmitter is received by the weather station, the Outdoor reception icon will be switched on. (If not successful, the icon will not show in LCD) Therefore, the user can easily see whether the last reception was successful (icon on) or not (icon off). The flashing of the icon shows that a reception is being attempted.


MANUAL SETTINGS

The following settings are changed when pressing the **SET** key:

- LCD contrast setting
- Daylight Saving Time (DST) ON/OFF
- Manual time setting
- Calendar setting
- Relative air pressure setting

Press and hold the **SET** key for about 2 seconds to advance to the setting mode:


LCD CONTRAST SETTING

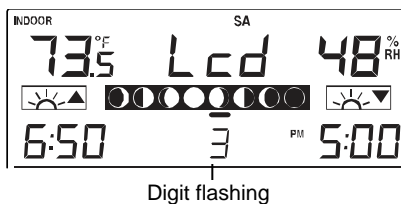

The LCD contrast can be set within eight levels, from LCD 0 to LCD 7 (Default is LCD 3):

1. The digit will flash.
2. Press the **+** or **MIN/MAX** key to select the level of contrast desired.
3. Press the **SET** key to confirm and enter the "Daylight Saving Time setting" or exit the setting mode by pressing the **ALARM** key or **SUN** key.


DAYLIGHT SAVING TIME SETTING

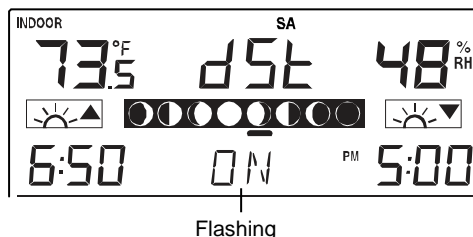

The daylight saving time (DST) function can be set ON/OFF. This setting will affect the sunrise/sunset times only. Default setting is "ON":

1. "ON" will flash on the LCD with "dSt" displayed.
2. Use the **+** or **MIN/MAX** key to turn the daylight saving time function ON or OFF.
3. Confirm with the **SET** key and enter the "**Manual Time setting**" or exit the setting mode by pressing the **ALARM** key or **SUN** key.


MANUAL TIME SETTING

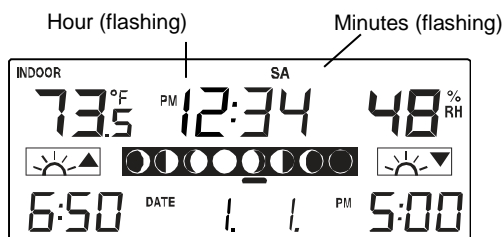

To set the clock:

1. The hour digit will flash.
2. Use the **+** key to increase or **MIN/MAX** key to decrease the value. Keep holding the key allows the value to advance faster.
3. Confirm with the **SET** key and enter minute setting.
4. The minute will flash. Use the **+** key to increase or **MIN/MAX** key to decrease the value. Keep holding the key allows the value to advance faster.
5. Confirm with the **SET** key and enter the "**Calendar Setting**" or exit the setting mode by pressing the **ALARM** key or **SUN** key.

CALENDAR SETTING

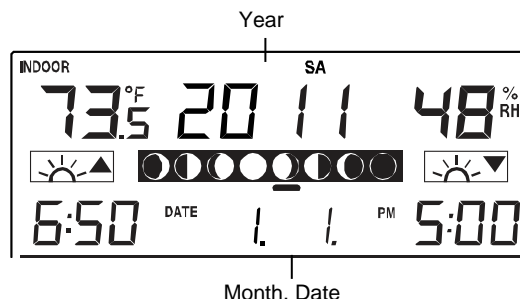


1. The year digits will flash. Use the **+** key to increase or **MIN/MAX** key to decrease the value. The range runs from 2011 to 2025 (default is 2011). Keep holding the key allows the value to advance faster.
2. Press the **SET** key to confirm and enter the month setting mode.
3. The month digit will flash. Use the **+** key to increase or **MIN/MAX** key to decrease the value. Press the **SET** key to enter date setting. Keep holding the key allows the value to advance faster.
4. The date digit will be flashing. Use the **+** key to increase or **MIN/MAX** key to decrease the value. Keep holding the key allows the value to advance faster.
5. Confirm with the **SET** key and enter the "**Relative Air Pressure Value Setting**", or exit the setting mode by pressing the **ALARM** key or **SUN** key.

Note:

Weekday is automatically set and displayed accordingly above the time in short form (from Monday to Sunday): **MO / TU / WE / TH / FR / SA / SU**.

RELATIVE AIR PRESSURE VALUE SETTING


The default relative air pressure value is 29.91 inHg. This can be manually set to another value within the range of 28.30 – 30.80 inHg for a better reference.

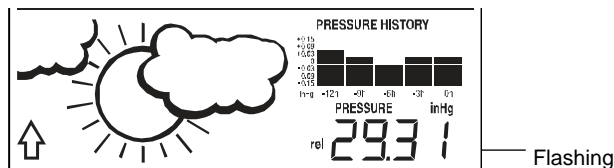

1. The current relative air pressure value will flash.
2. Use the **+** key to increment and **MIN/MAX** key to decrement the value. Keep holding the key allows the value to advance faster.
3. Confirm with the **SET** key and go back to normal mode, or exit the setting mode by pressing the **ALARM** key or **SUN** key.

LOCATION SETTING FOR SUNRISE/SUNSET TIME




The weather station will automatically update the sunrise, sunset and sun duration time at 00:00, based on the city location, the date, time and DST settings.

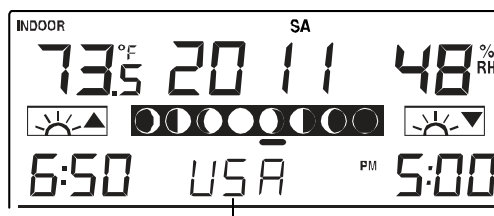

1. Press and hold the **SUN** key for 2 seconds to enter the **Location setting mode**.
2. The short form of country name will flash. Use the **+** key or **MIN/MAX** key to select the country.


Note:

- See the country / states / city list at the beginning of this handbook: 2 countries / 99 cities selectable.
- Every country/city is displayed in short code (default country is USA). The states abbreviations are in brackets () for USA.

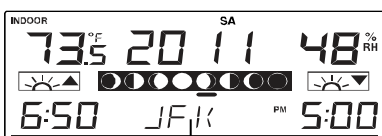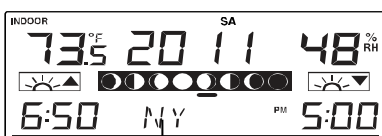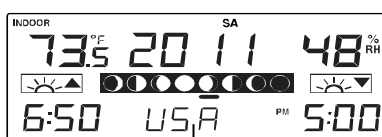


To select a US state and city:


1. Once "USA" is selected, press the **SUN** key to enter the state setting.
2. The state code (2 letters abbr.) will flash. Press the **+** or **MIN/MAX** key to select the state.
3. After the state is selected, press the **SUN** key to enter the city setting.
4. The three letters city abbr. will flash. Use the **+** key or **MIN/MAX** key to select the city.
5. Confirm with the **SUN** key. The city's sunrise, sun duration and sunset time will be displayed in a few seconds.

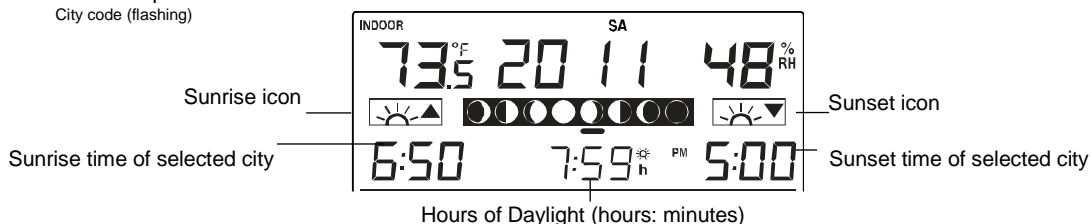

- Press the **SUN** key twice to go back to normal date display.
- User can exit the setting mode by pressing the **SET** key or **ALARM** key without saving the changes.

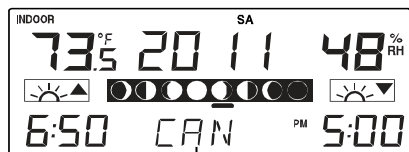


Country code (flashing)

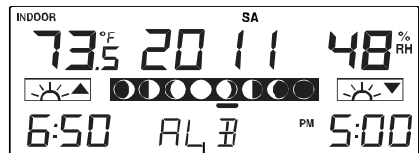

City code (flashing)

To select a Canadian city:

- Once “CAN” is selected, press the **SUN** key to enter the city setting.
- The city code (3 letters abbr.) will flash. Press the **+** or **MIN/MAX** key to select the city.
- Confirm with the **SUN** key. The city’s sunrise, sun duration and sunset time will be displayed in a few seconds.

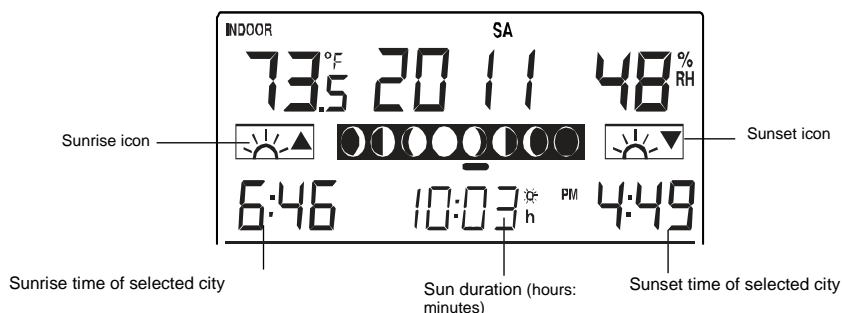

- Press the **SUN** key twice to go back to normal date display.
- User can exit the setting mode by pressing the **SET** key or **ALARM** key without saving the changes.

ALARM SETTING



To set the daily alarm:

- Press and hold **ALARM** key for 2 seconds until the alarm time shown.
- The hour digit will flash. Press the **+** key or **MIN/MAX** key to adjust the hour.
- Press **ALARM** key once and minute digit will flash. Press **+** key or **MIN/MAX** key to set the minute.
- Press **ALARM** key once to confirm the setting, or exit the setting mode by pressing the **SET** key or **SUN** key.

NOTE: The maximum alarm ring duration is 2 minutes.

ACTIVATE/DEACTIVATE ALARM:

Press and release the **ALARM** key to activate or deactivate the alarm. The alarm icon (((•))) will show on the LCD if the alarm is activate.

TO EXIT SETTING MODE

To exit the setting mode, wait for automatic timeout to return to normal time display.

DISPLAY OF SUN DURATION TIME

- In normal date mode, press the **SUN** key twice to display the sun duration time (total number of hours of sunlight on the day).
- Press the **SUN** key again will display the selected city. (See “**LOCATION SETTING FOR SUNRISE/SUNSET TIME**”)
- Press the **SUN** key again to go back to normal date display.

THE MOON PHASE ICONS

The weather station displays 8 different moon phase icons. The current moon phase is indicated with a bar segment according to the set calendar.


Waxing Crescent First Quarter Waxing Gibbous Full Moon Waning Gibbous Last Quarter Waning Crescent New Moon



A bar segment indicates the current moon phase

WEATHER FORECASTING ICONS

Weather icons will display in any of the following combinations:

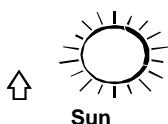

Sun



Sun with cloud



Cloud with rain

For every sudden or significant change in the air pressure, the weather icons will update accordingly to represent the change in weather. If the icons do not change, then it means either the air pressure has not changed or the change has been too slow for the Weather station to register. However, if the icon displayed is a sun or raining cloud, there will be no change of icon if the weather gets any better (with sunny icon) or worse (with rainy icon) since the icons are already at their extremes. The icons displayed forecasts the weather in terms of getting better or worse and not necessarily sunny or rainy as each icon indicates. For example, if the current weather is cloudy and the rainy icon is displayed, it does not mean that the product is faulty because it is not raining. It simply means that the air pressure has dropped and the weather is expected to get worse but not necessarily rainy.

Note: After set up, readings for weather forecasts should be disregarded for the next 24-48 hours. This will allow sufficient time for the Weather station to collect air pressure data at a constant altitude and therefore result in a more accurate forecast. Common to weather forecasting, absolute accuracy cannot be guaranteed. The weather forecasting feature is estimated to have an accuracy level of about 75% due to the varying areas the Weather station has been designed for use. In areas that experience sudden changes in weather (for example from sunny to rain), the Weather station will be more accurate compared to use in areas where the weather is stagnant most of the time (for example mostly sunny).

If the Weather station is moved to another location significantly higher or lower than its initial standing point (for example from the ground floor to the upper floors of a house), discard the weather forecast for the next 24-48 hours. By doing this, the Weather Station will not mistake the new location as being a possible change in air-pressure when really it is due to the slight change of altitude.

WEATHER TENDENCY INDICATOR


Working together with the weather icons is the weather tendency indicator (located on the left of the weather icons). When the arrow points upwards, it means that the air pressure is increasing and the weather is expected to improve, but when arrow points downwards, the air pressure is dropping and the weather is expected to become worse.

Considering this, one can see how the weather has changed and is expected to change. For example, if the indicator is pointing downwards together with cloud and sun icons, then the last noticeable change in the weather was when it was sunny (the sun icon only). Therefore, the next change in the weather will be cloud with rain icons since the indicator is pointing downwards.

Note: Once the weather tendency indicator has registered a change in air pressure, it will remain permanently visualized on the LCD.

AIR PRESSURE HISTORY (ELECTRONIC BAROMETER WITH BAROMETRIC PRESSURE TREND)

The bottom right section of the LCD shows the air pressure, history bar graph.

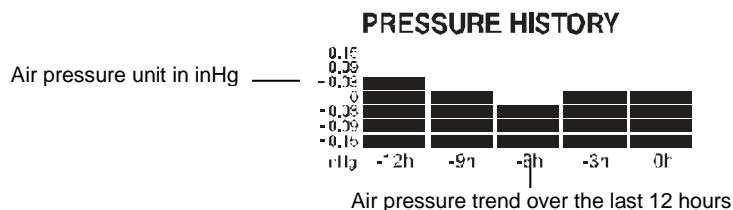

The bar graph indicates the air pressure, history trend over the past 12 hours in 7 steps (+0.15, +0.09, +0.03, 0, -0.03, -0.09, and -0.15 inHg) at the points 0, -3, -6, -9 and -12 hours. The “0h” represents the current full hour, air pressure recording. The left column shows the unit in “inHg” (0, ±0.03, ±0.09, ±0.15). The “0” in the middle of this scale is equal to the current pressure and each change (±0.03, ±0.09, ±0.15) represents how high or low, in “inHg” scale, the past pressure is compared to the current pressure.

If the bars are rising it means that the weather is getting better due to the increase of air pressure. If the bars go down, it means the air pressure has dropped and the weather is expected to get worse from the present time “0h”.


Note: For accurate barometric pressure trends, the weather station should operate at the same altitude for recordings (i.e. it should not be moved from the ground to the second floor of the house). When the unit is moved to a new location, discard readings for the next 12 hours.

The air pressure displays numerically in relative or absolute values.

- Press and release the SET button to switch from relative (rel) to absolute (abs).


DISPLAY OF INDOOR TEMPERATURE/HUMIDITY DATA

The indoor temperature and humidity are measured automatically and displayed on the first section of the LCD.

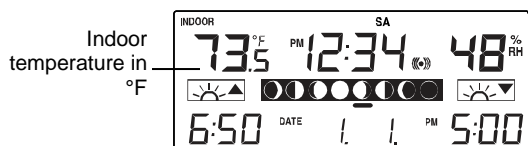

DISPLAY OF OUTDOOR TEMPERATURE/HUMIDITY DATA


The last section of the LCD section shows the outdoor temperature and humidity and a reception symbol.

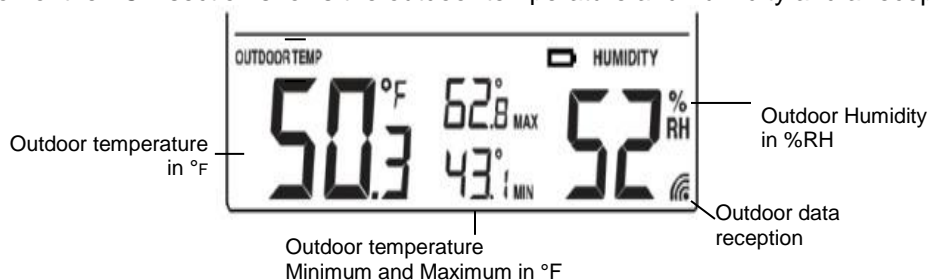

VIEW INDOOR/OUTDOOR MAXIMUM AND MINIMUM RECORDS

Press the **MIN/MAX** key several times to view the MIN/MAX indoor temperature, and MIN/MAX outdoor temperature sequentially.

Date and time of recordings for outdoor temperature will show in MIN/MAX mode.

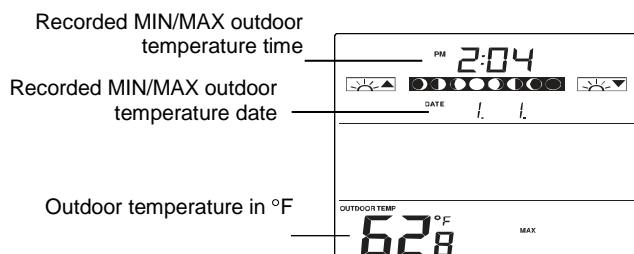

RESET THE MAXIMUM/MINIMUM RECORDS

To reset the MIN/MAX records, press and hold the **MIN/MAX** key for 2 seconds. This will reset **ALL** minimum and maximum temperature records to current readings.

LOW BATTERY INDICATORS

Low battery indicator will show on the LCD when the batteries of weather station or transmitter require changing. The low battery icon near the pressure reading indicates the batteries in the display need to be changed. The low battery icon near the outdoor humidity indicates the batteries in the outdoor transmitter are low.

THERMOHYGRO TRANSMITTER

The reception distance of the thermohygro transmitter may be affected by the temperature. At cold temperatures, the transmitting distance may be decreased. Please bear this in mind when placing the transmitter.

915 MHz RECEPTION


The weather station should receive the temperature data within 80 seconds after set-up. If the temperature data is not received 80 seconds after set up (the outdoor temperature shows “- - -”), please check the following points:

1. The distance of the weather station or transmitter should be at least 5 to 6.5 feet (2 –3 meters) away from any interfering sources such as computer monitors or TV sets.
2. Avoid positioning the weather station onto or in the immediate proximity of metal window frames.
3. Using other electrical products such as headphones or speakers operating on the same signal frequency (915 MHz) may prevent correct signal transmission and reception.
4. Neighbors using electrical devices operating on the 915 MHz signal frequency can also cause interference.


Note:

When the 915 MHz signal is received correctly, do not re-open the battery cover of either the transmitter or weather station, as the batteries may spring free from the contacts and force a false reset. Should this happen accidentally then reset all units (see **Set up** above) otherwise transmission problems may occur. The transmission range is about 330 feet / 100 meters from the transmitter to the weather station (in open space). However, this depends on the surrounding environment and interference levels. If no reception is possible despite the observation of these factors, all system units have to be reset (see **Set up**).

POSITIONING THE WEATHER STATION:

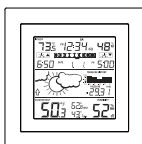

The weather station comes complete with a foldout stand that gives the option of table standing or wall mounting.

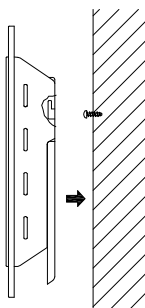


To wall mount:

1. Fix a screw into the desired wall, leaving the head extended out by about 0.2” (5mm).
2. Using the weather station hanging hole, carefully hang it onto the screw.

Note:

Always ensures that the unit locks onto the screw head before releasing.



POSITIONING THE THERMOHYGRO TRANSMITTER:

The thermohygro transmitter can be placed on any flat surface or wall mounts using the bracket that doubles as a stand or wall mount base.

Place the sensor outside protected from direct sun and standing rain or snow. Under and eave or deck rail on the north side work well.

**To wall mount:**

1. Secure the bracket onto a desired wall using the screws and plastic anchors.
2. Clip the transmitter onto the bracket.

Note: Before permanently fixing the transmitter wall base, place all units in the desired locations to check that the outdoor temperature reading is receivable. In event that the signal is not received, relocate the units or move them slightly as this may help the signal reception.

CARE AND MAINTENANCE:

- **Do Not Mix Old and New Batteries.**
- **Do Not Mix Alkaline, Standard, or Rechargeable Batteries**
- Extreme temperatures, vibration and shock should be avoided as these may cause damage to the unit and give inaccurate forecasts and readings.
- When cleaning the display and casings, use a soft damp cloth only. Do not use solvents or scouring agents as they may mark the LCD and casings.
- Do not submerge the unit in water.
- Immediately remove all low powered batteries to avoid leakage and damage. Replace only with new batteries of the recommended type.
- Do not make any repair attempts to the unit. Return them to their original point of purchase for repair by a qualified engineer. Opening and tampering with the unit may invalidate their guarantee.
- Do not expose the units to extreme and sudden temperature changes, this may lead to rapid changes in forecasts and readings and thereby reduce their accuracy.

SPECIFICATIONS**Indoor temperature**

Range: 14.1°F to +139.8°F (“OF.L” displayed if outside this range)
Resolution: 0.2°F
Accuracy: +/- 2°F typically (between +32 and +122°F)
+/- 5°F typically (less than +32°F or higher than +122°F)

Indoor humidity

Range: 20%RH to 95%RH
(Display “-” if temperature is OL.F; display “19%” if < 20% and “96%” if > 95%)

Resolution: 1%

Accuracy: +/- 5%RH typically (between 35 – 80%RH)
+/- 7%RH typically (less than 35%RH or higher than 80%RH)

Outdoor temperature

Range: -39.8°F to +139.8°F (“OF.L” displayed if outside this range)
Resolution: 0.2°F
Accuracy: +/- 2°F typically (between +32 and +122°F)
+/- 5°F typically (less than +32°F or higher than +122°F)

Outdoor humidity

Range: 1%RH to 99%RH
(Display “-” if outside temperature is OF.L; display 1% if < 1% and 99% if > 99%)

Resolution: 1%

Accuracy: +/- 3%RH typically (between 20 – 80%RH)
+/- 5%RH typically (less than 20%RH or higher than 80%RH)

Air pressure

Absolute pressure range: 8.86 – 32.48 inHg

Resolution: 0.01 inHg

Accuracy: +/- 0.15 inHg typically (between 26.58 – 32.48 inHg at +50 - +86°F)
+/- 0.24 inHg typically (between 26.58 – 32.48 inHg at +32 - +50°F, +86 - +122°F)

Data checking intervals:

Indoor checking interval : every 16 seconds

Outdoor reception : every 4 seconds

Air pressure checking interval : every 1 minute

Transmission range : up to 330 feet / 100 meters (open space)

Power consumption (Alkaline batteries recommended):

Weather station : 2 x C, IEC LR14, 1.5V

Battery life cycle : Approx. 24 months

Temperature transmitter : 2 x AAA, IEC, LR3, 1.5V

Battery life cycle : Approx. 12 months

Dimensions (L x W x H)

Weather station: 7.4" x 1.32" x 7.4" / 188 x 33.7 x 188 mm

Temperature transmitter: 1.41" x 0.62" x 4.03" / 36 x 16 x 102.6 mm

List of Countries / STATES / City Codes

-SEE BELOW

| |
|---------------------------------------|
| USA = UNITED STATES OF AMERICA |
| ALABAMA (AL) |
| MONTGOMERY = MGM |
| MOBILE = MOB |
| ARKANSAS (AR) |
| LITTLE ROCK = LIT |
| ARIZONA (AZ) |
| PHOENIX = PHX |
| CALIFORNIA (CA) |
| FRESNO = FAT |
| LOS ANGELES = LAX |
| REDDING = ROD |
| SAN DIEGO = SAN |
| SAN FRANCISCO = SFO |
| COLORADO (CO) |
| DENVER = DEN |
| DURANGO = DRO |
| GRAND JUNCTION = GJT |
| PUEBLO = PUB |
| DISTRIC OF COLUMBIA (DC) |
| WASHINGTON = DCA |
| FLORIDA (FL) |
| JACKSONVILLE = JAX |
| MIAMI = MIA |
| ORLANDO = ORL |
| TALLAHASSEE = TLH |
| TAMPA = TPA |
| GEORGIA (GA) |
| ATLANTA = ATL |
| HAWAII (HI) |
| HONOLULU = HNL |
| IOWA (IA) |
| DES MOINES = DSM |
| DAVENPORT = DVN |
| IDAHO (ID) |
| BOISE = BOI |
| ILLINOIS (IL) |
| CHICAGO = ORD |
| SPRINGFIELD = SPI |
| INDIANA (IN) |
| EVANSVILLE = EVV |
| INDIANAPOLIS = IND |
| KANSAS (KS) |
| DODGE CITY = DDC |
| WICHITA = K32 |
| TOPEKA = TOP |
| KENTUCKY (KY) |
| LEXINGTON = LEX |
| LOUISIANA (LA) |
| NEW ORLEANS = NEW |
| SHREVEPORT = SHV |
| MASSACHUSETTS (MA) |
| BOSTON = BOS |
| MAINE (ME) |
| AUGUSTA = AUG |
| CARIBOU = CAR |
| MICHIGAN (MI) |
| DETROIT = DET |

| |
|----------------------------------|
| ROGERS CITY = PZQ |
| MINNESOTA (MN) |
| DULUTH = DLH |
| INTERNATIONAL FALLS = INF |
| MISSOURI (MO) |
| JEFFERSON CITY = JEF |
| MISSISSIPI (MS) |
| JACKSON = JAN |
| MONTANA (MT) |
| BILLINGS= BIL |
| HELENA = HLN |
| NORTH CAROLINA (NC) |
| CHARLOTTE = CLT |
| RALEIGH = RDU |
| NORTH DAKOTO (ND) |
| BISMARCH = BIS |
| FARGO = FAR |
| NEBRASKA (NE) |
| LINCOLN = LNK |
| SIDNEY = SNY |
| NEW HAMPSHIRE (NH) |
| CONCORD = CON |
| NEW JERSEY (NJ) |
| TRENTON = TTN |
| NEW MEXIXO (NM) |
| ALBUQUERQUE = ABQ |
| NEVADA (NV) |
| LAS VEGAS = LAS |
| RENO = RNO |
| NEW YORK (NY) |
| BUFFALO = BUF |
| NEW YORK CITY = JFK |
| SYRACUSE = SYR |
| OHIO (OH) |
| CLEVELAND = CLE |
| COLUMBUS = CMH |
| OKLAHOMA (OK) |
| OKLAHOMA CITY = OKC |
| TULSA = TUL |
| OREGON (OR) |
| MEDFORD = MFR |
| PORTLAND = PDX |
| PENNSYLVANIA (PA) |
| HARRISBURG = CXY |
| PITTSBURGH = PIT |
| SCRANTON = SCR |
| SOUTH CAROLINA (SC) |
| CHARLSTON = CHS |
| COLUMBIA = CUB |
| SOUTH DAKOTA (SD) |
| SIOUX FALLS = FSD |
| RAPID CITY = RAP |
| TENNESSEE (TN) |
| NASHVILLE = BNA |
| KNOXVILLE = DKX |
| MEMPHIS = MEM |
| TEXAS (TX) |
| AMARILLO = AMA |
| AUSTIN = AUS |

| |
|---------------------------------|
| BROWNSVILLE = BRO |
| DALLAS / FT. WORTH = DFW |
| EL PASO = ELP |
| HOUSTON = HOU |
| ODESSA = ODO |
| SAN ANTONIO = SAT |
| UTAH (UT) |
| SALT LAKE CITY = SLC |
| VIRGINIA (VA) |
| LYNCHBURG = LYH |
| NORFOLK = ORF |
| VERMONT (VT) |
| BURLINGTON = BTB |
| WASHINGTON (WA) |
| SEATTLE = SEA |
| SPOKANE = SFF |
| WISCONSIN (WI) |
| GREEN BAY = GRB |
| LA CROSSE = LSE |
| WEST VIRGINIA (WV) |
| CHARLESTON = CRW |
| WYOMING (WY) |
| CASPER = CPR |

| |
|------------------------|
| CA = CANADA |
| CALGARY = ALB |
| OTTAWA = OTT |
| QUEBEC = QUE |
| TORONTO = TOR |
| VANCOUVER = VAN |
| WINNEPEG = WIN |

WARRANTY INFORMATION

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd.

Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need of repair, you will be charged for the repairs or examination.

The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.

This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology
2817 Losey Blvd. S.
La Crosse, WI 54601
Customer support : www.lacrossetechnology.com/support
www.lacrossetechnology.com/9257

Contact Support: 1-608-782-1610

Product Registration: www.lacrossetechnology.com/support/register.php

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

All trademarks and patents are acknowledged.

FCC DISCLAIMER

RF Exposure mobile:

The internal / external antennas used for this mobile transmitter must provide a separation distance of at least 20 cm (8 inches) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

Statement according to FCC part 15.19:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Statement according to FCC part 15.21:

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

Statement according to FCC part 15.105:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.