


**0F3SR14TT26000D
FDU-S080**

**WET SLIPPER CLUTCH FOR
DUCATI MTS / MONSTER / DIAVEL 1200**

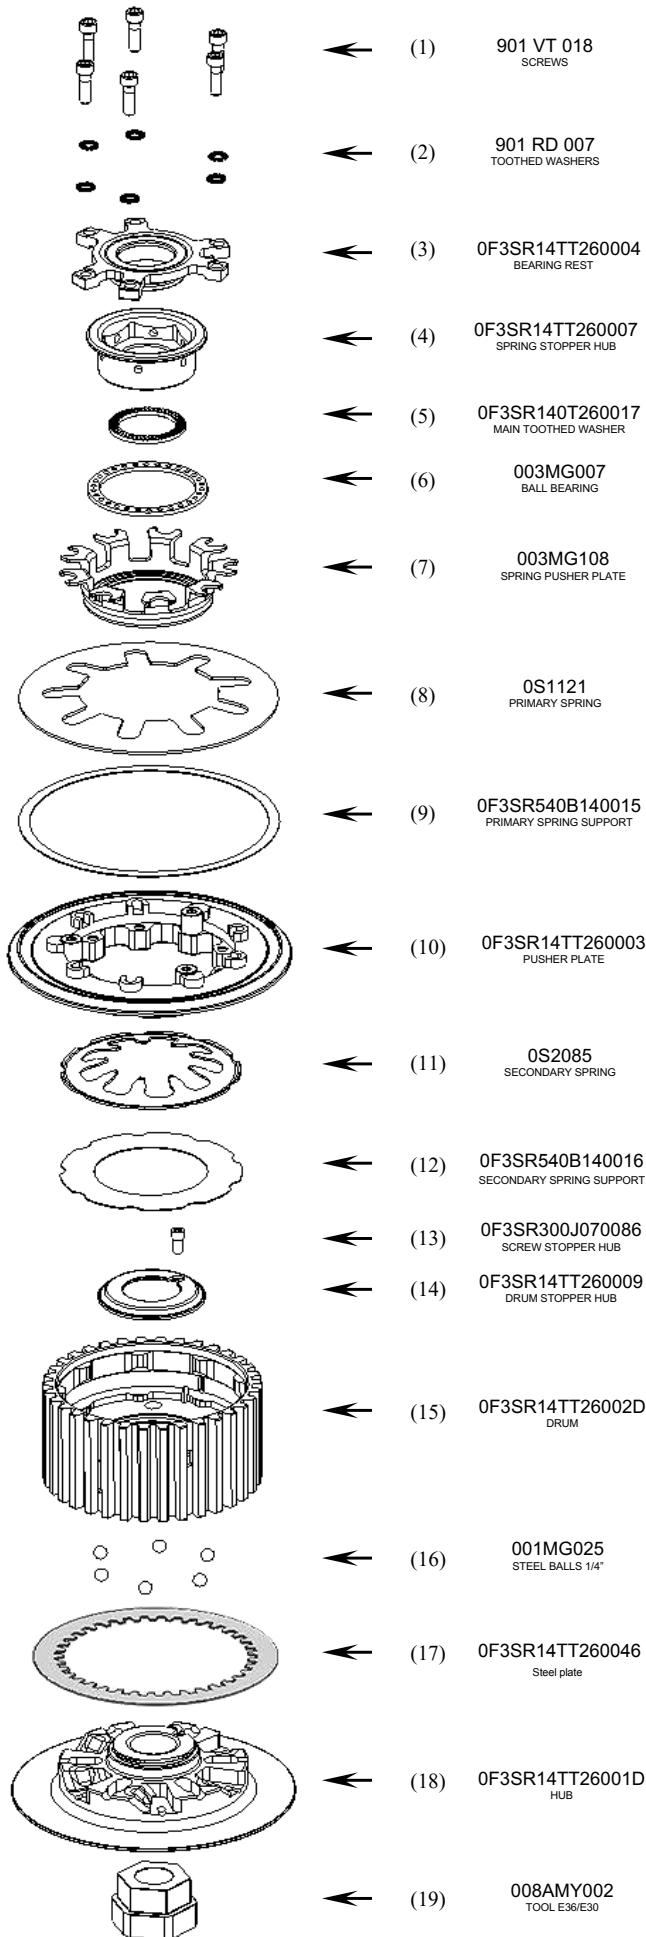

- (1) 901 VT 018
SCREWS
- (2) 901 RD 007
TOOTHED WASHERS
- (3) 0F3SR14TT260004
BEARING REST
- (4) 0F3SR14TT260007
SPRING STOPPER HUB
- (5) 0F3SR140T260017
MAIN TOOTHED WASHER
- (6) 003MG007
BALL BEARING
- (7) 003MG108
SPRING PUSHER PLATE
- (8) 0S1121
PRIMARY SPRING
- (9) 0F3SR540B140015
PRIMARY SPRING SUPPORT
- (10) 0F3SR14TT260003
PUSHER PLATE
- (11) 0S2085
SECONDARY SPRING
- (12) 0F3SR540B140016
SECONDARY SPRING SUPPORT
- (13) 0F3SR300J070086
SCREW STOPPER HUB
- (14) 0F3SR14TT260009
DRUM STOPPER HUB
- (15) 0F3SR14TT26002D
DRUM
- (16) 001MG025
STEEL BALLS 1/4"
- (17) 0F3SR14TT260046
Steel plate
- (18) 0F3SR14TT26001D
HUB
- (19) 008AMY002
TOOL E36/E30

MOUNTING INSTRUCTIONS

The Drum/Hub group is supplied pre-assembled. In case of need, as to check the ramps wear, please see hereinafter the specific procedure to disassemble the Drum/Hub group.

Place the Drum/Hub group on the drive shaft. Eventually, in order to simplify the operation, it is possible to fix the drum (15) onto the hub (18), in an at-rest position, with a M6x1 screw.

Replace the original clutch plates, keeping the in the original sequence **except for the last steel disc 34 TEETH, which must be replaced with a steel disc equal to all other 36 TEETH.** At the end of the operation the total height of the stack must be **50.8mm + 0.3 to 0.3 mm.**

WARNING: if in the original plates kit there are two rings (one of them is conical), placed in between sinterized plates keep them apart and do NOT use them in the STM clutch.

Remove the M6x1 screw, if you used it for the last operation.

Check that the drum stopper lock screw (13) do not stick out from the surface of the drum stopper (14), where the spring pusher plate (7) will be placed.

Verify that the secondary spring support (12) is correctly placed in its seat in the drum (15). Place the secondary spring (11) in the drum (15) with a small amount of grease.

Check that the primary spring support (9) is correctly placed in its seat in the pusher plate (10). Place the pusher plate (10) in its seats on the drum (15).

Place the Evoluzione primary spring (8) on the pusher plate (10).

Pre-assemble the spring stopper group: keep the spring pusher plate (7) with the groove for the bearing facing up as shown in the drawing, place the ball bearings (6) and then place the spring stopper hub (4).

Insert the spring stopper group into the pressure plate (10) so that the 9 wings of the spring pusher plate (7) overlap the 9 tips of the spring (8).

Insert the notched washer(5) with the convex part facing up and in the spring stopper hub (4).

Tighten the spring stopper hub (4) onto the drive shaft, using the tool (19), provided with the clutch and lock it with a dynamometric wrench to the torque suggested by the manufacturer. To lock the pressure plate (10) we suggest to use the specific tool (UTL-0030) (not included).

Pre-assemble the bearing rest group: mount the clutch pushrod piece and the bearing of the original clutch into the bearing rest (3).

Place the entire bearing rest into the specific holes in the pressure plate (10) taking care of placing it correctly in these holes and fix it with the six screws (1) and with the notched washers (2).

Once the mounting operations are completed, operate the clutch lever more than once to check that pressure plate correctly activate the clutch opening and closing, then mount the clutch guard.

DRUM/HUB UN-INSTALL PROCEDURE

ATTENTION: DO NOT perform this operation before removing the clutch from the bike. Remove the drum stopper lock screw (13), rotate the drum stopper hub (14) clockwise by 60° and then remove it. The drum (15), the hub (18) and the steel balls (16) can now be disassembled.

TO RE-ASSEMBLE THE GROUP: place the 6 steel balls (16) at the bottom of the grooves of the hub (18) using a small amount of grease, then position the drum (15) onto the hub (18) in an at-rest position. Position the drum stopper hub (14) on the hub (18), aligning its three wings with the three housings on the hub (18), then rotate it until the holes of the two parts are aligned, and finally replace completely the screw (13). **Check that the drum stopper hub (14) is correctly locked on the hub (18) and that the drum stopper lock screw (13) do not stick out from the surface where the spring stopper hub (4) will be placed.**

GENERAL SAFETY REGULATIONS

- IN THIS SHEET ARE REPORTED THE DIRECTIONS TO PERFORM CORRECTLY THE CLUTCH ASSEMBLY OPERATIONS.
- STM RESERVES THE RIGHT, WITHOUT NOTICE, TO INTRODUCE ANY TECHNICAL CHANGE WHENEVER DEEMED IT TO BE NECESSARY TO IMPROVE FUNCTION AND QUALITY OF THE PRODUCTS.
- ASSEMBLY OPERATIONS MUST BE PERFORMED BY A SKILLED TECHNICIAN AND MUST BE SCRUPULOUSLY OBSERVED.
- BEFORE MOUNTING THE CLUTCH MAKE A COMPLETE INSPECTION OF THE MOTORBIKE COMPONENTS, IN ORDER TO VERIFY THE POSSIBLE PRESENCE OF FAULTS OR ANOMALIES ON THE VEHICLE.
- MAKE SURE THAT THERE ARE NO MISSING/DAMAGED PARTS IN THE CLUTCH KIT.
- SOME PARTS OF THE CLUTCH AND ITS COMPONENTS CAN HAVE SHARP SURFACE: HANDLE WITH CARE.
- SOME COMPONENTS OF THE CLUTCH, BECAUSE OF THEIR SMALL DIMENSIONS CAN BE SWALLOWED: KEEP AWAY FROM CHILDREN.

STM ITALY
Via A. Olivetti 15 - 10020 - Riva presso Chieri (TO)
www.stmitaly.com - contact@stmitaly.com

