



Dream Chair

Product #- B4A.161/162

Age Range- 5 years to adult

Weight Limit- 250lbs (113g)

Contents:

Dream chair
with 2 carabiners



ADULT SUPERVISION RECOMMENDED- SEVERE INJURY OR DEATH MAY RESULT-Always exercise extreme caution when using the Dream Chair

ADULT INSTALLATION REQUIRED –This product should be unpacked and assembled by an adult, including site and tree selection as well as the secure and proper installation.

WARNING: Un-Healthy Tree Hazard –Do not attach or use a tree that is not healthy, diseased or damaged. It may fail causing serious injury or death.

BE SAFE! - ALWAYS FOLLOW THESE RULES

- The Dream Swing is intended for use by ages 5 years up to 250lbs with adult supervision.
 - If attaching to a structure, use carabiners- 2 included
 - If attaching to tree, we recommend using 2 of our B4A.109 6ft tree hangers or B4A.110 12ft tree hangers.
 - Adjust the height and orientation of the chair with the hanging ropes.
- Every time you use the Dream swing, make sure everything is installed correctly and check for wear before using.
- If worn or damaged parts are found, contact b4Adventure for replacement parts - Do not substitute with other, non-b4 Adventure parts or failure resulting in injury could result.
- Never use the chair when it is if there is rain or lightning in the area.
 - Choose a clear area for the swing with a sturdy anchor point, a healthy tree 38" (97cm) in circumference or 12".
 - The minimum clearance between the ground surface and the underside of any suspended unit shall be 13" (350mm)

Support Structures

Be certain that the overhead structure can support at least 500 pounds (227kg). If attaching to a tree limb, make sure the tree is alive and healthy. Recommended diameter of tree limb is 10". Before anyone uses the dreamcatcher, a stress/weight test should be performed.

How to test:

- Check all your connections.
- Have two adults, whose combined weight is approx. 500 LBS (227kg) to pull down together on the dreamcatcher (CAUTION: make sure they are in a safe position in case the branch or structure should come down). Gradually, have them apply all their combined weight, and during that process checking for any breaking or cracking. Once this test is completed you are ready to have your first rider swing.

This product should be tested using 500LBS (227kg).



Product #- B4A.161/162

Age Range- 5 years to adult

Weight Limit- 250lbs (113g)

MAINTENANCE OF YOUR SWING

At the beginning of each play season:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.
- Check all metal parts for rust. If found, sand and repaint using a non-lead based paint meeting the requirements of 16CFR 1303. Lubricate all metallic moving parts per manufacturer's instructions
- Check all moving parts including disks, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check the rope and disks for deterioration, cracking or fraying. If found, DO NOT USE and dispose of immediately.

• X.3.1.1 Loose-Fill Materials:

X.3.1.1 Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9- inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9- inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain a least a 9- inch depth.

Twice a month during play season:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.

• X.3.1.1 Loose-Fill Materials:

X.3.1.1 Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9- inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9- inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain a least a 9- inch depth.

Once a month during play season:

- Check all moving parts including disks, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- At the end of each play season or when the temperature drops below 32 Degrees Fahrenheit take in your Dream Chair and store indoors in cool dry location.

8-10-18

2




Product #- B4A.161/162


Age Range- 5 years to adult

Weight Limit- 250lbs (113g)

- Place the equipment on level ground, not less than 6 ft (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- For dics swing (one point attachment), the use zone shall have a horizontal distance $\geq L+72"$ (1829mm) in all directions from the pivot point of the swing, where L equals the vertical distance between the pivot point and the top of the swing seat.

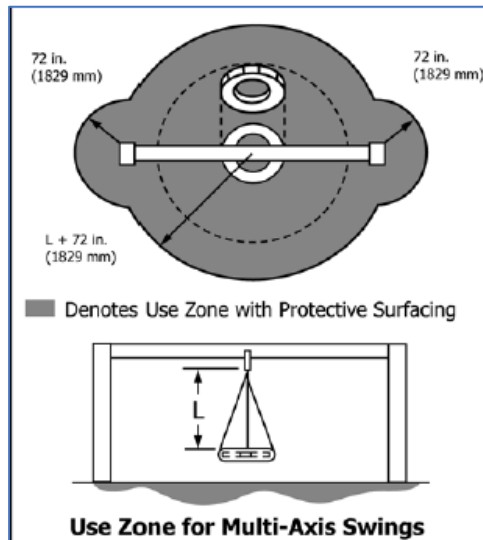

- For To-Fro swing (two point attachment), the use zone to the front and to the rear of swing shall be a minimum distance of 2X on the line extending 90° both front and rear from the longitudinal direction of the suspending beam, where X equals the vertical distance from the top of the protective surfacing to the pivot point of the swing.

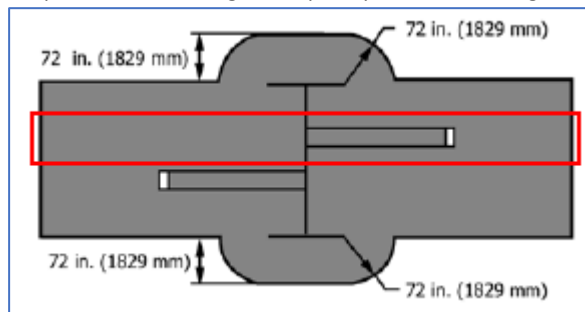

Observing the following statements and warnings reduces the likelihood of serious or fatal injury.

- To prevent serious injury, children must not use the equipment until properly installed.
- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user.
- Disassemble and dispose of the Chair per city regulations.
- Do not walk close to, in front of, behind, or between moving items. Do not swing empty seats
- Do not twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the strap




Product #- B4A.161/162


Age Range- 5 years to adult

Weight Limit- 250lbs (113g)

- Do not to use the equipment in a manner other than intended. The minimum distance between the suspension points of a swing measured along the crossbeam shall be calculated as follows $A = 0,04h + B$ (ie; $A = .04 \times$ the height of the swing (H) + the width of the swing(B))
- A is the distance between the suspension points along the crossbeam;
- B is the distance between the junction points of the swing element and the means of suspension;
- H is the distance from the ground to the lower side of the crossbeam)

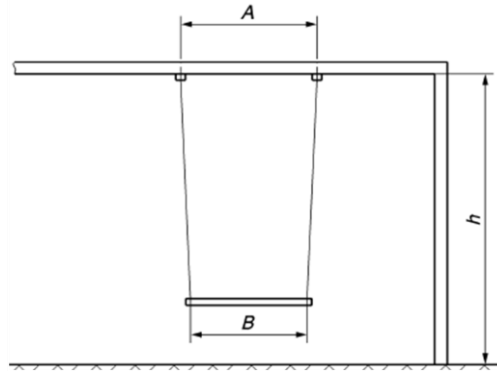

- Minimum clearances between adjacent swing elements shall be over 450mm (18") and between swing elements and adjacent structures shall be over 300mm (12") when measured at a height of 28in.(710mm) above the seating surface.

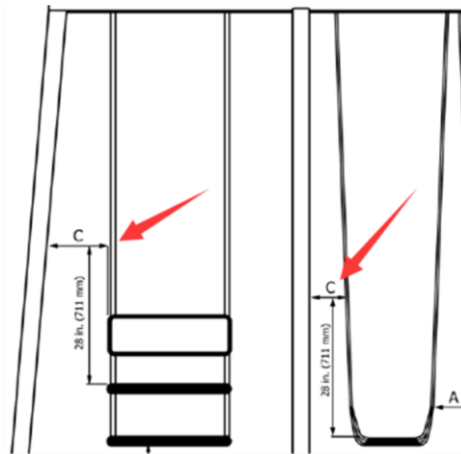

- The use zone to the front and to the rear of swings shall be a minimum distance of 2X on a line extending 90° both front and rear from the longitudinal direction of the suspending beam, where X equals the vertical distance from the top of the protective surfacing to the pivot point of the swing. The total horizontal distance from the front to the rear of the use zone shall be $\geq 4X$ (Greater than 4 times the distance from the ground to the attachment at the top) front and back
- Teach children to sit in the center of the swing with their full weight on the seat. At NO time should the child stand in the seat.
- Do not get off equipment while it is in motion.
- Max fall height should be no more than 3ft from the ground.
- Do not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.



Product #- B4A.161/162

Age Range- 5 years to adult

Weight Limit- 250lbs (113g)

- Remove their bike or other sports helmet before playing on the playground equipment.
- Do not wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- Dress children with well fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.

PRODUCT DISCLAIMER & NOTICE

Any person purchasing, installing or using equipment from B4Adventure must:

- Obtain proper training and instruction regarding its proper use and safety precautions to always practice.
 - Ensure proper & adequate supervision and instruction (this include the continuous use of appropriate safety procedures & equipment) for themselves and others using the equipment;
 - Check that all equipment is properly maintained, in good working order and inspected for damage or wear prior to each use, and;
 - You assume all risks and accept full responsibility for any injury (including death) or damages that may occur from its use.
-
- Warranty: one year on all parts and workmanship. Normal wear from use not covered.

All the information provided by b4Adventure either printed, electronic or other, is not to be considered professional instruction or advice. Users of this equipment are encouraged to seek professional instruction regarding specific questions about usage, location and installation for future reference.

Owners shall be responsible for maintaining the legibility of the warning labels.

Product conforms to ASTM F1148, consumer safety performance specification for Home Playground Equipment



Product #- B4A.161/162

Age Range- 5 years to adult

Weight Limit- 250lbs (113g)