



AGE: 3+
MAX WEIGHT: 300 lb (136 kg)
Adventure Sky Swing

CONTENTS:

- (4) Foam covered metal ring sections
- (1) Fabric swing cover (size varies by model)
- (2) Adjustable hanging rope
- (2) Delta Clips



Warranty: one year on all parts and workmanship

BE SAFE! ALWAYS FOLLOW THESE RULES

- Adult supervision is required at all times.
- This product should be unpacked and assembled by an adult, including site and tree selection.
- Adult installation is required. Children should not use product until properly installed.
- Instruct children not to walk close to, in front of, behind, or between moving swings.
- Instruct children not to twist the chains/ropes and not to loop them over the swing beam since this may reduce the strength of the rope/chain.
- Instruct children not to jump from swings in motion
- Instruct children not to push empty swings, the seat may hit them and cause injury.
- Instruct children to sit in the center of chairs with their full weight on the seats.
- Wear close fitting clothing, NO scarves or other loose clothing.
- If worn or damaged parts are found, contact b4Adventure for replacement parts - Do not substitute with other, non-b4Adventure parts or failure resulting in injury could result.

! WARNING! ADULT ASSEMBLY REQUIRED-
This product should be unpacked and assembled by an adult, including site and tree selection, as well as the secure and proper installation

! WARNING! ADULT SUPERVISION REQUIRED! SERIOUS INJURY OR DEATH MAY RESULT -
Always exercise extreme caution when using the Adventure Sky Swing. Keep bystanders at least 10 ft (3 m) away from the course to avoid collisions

! WARNING! UNHEALTHY TREE HAZARD - Do not attach to or use a tree that is diseased, unhealthy, or damaged. It may fail, causing serious injury or death

**FAILURE TO FOLLOW THESE INSTRUCTIONS
COULD RESULT IN SERIOUS INJURY!**



SWING ASSEMBLY:

- Start by sliding the foam/metal bars into the 4 sleeves sewn into the outer portion of the swing to create a circular shape.
- NOTE: all 4 bars should be facing the same direction so that the male/female connectors match up.



- Your swing should contain 2 ropes, each with 2 connecting rings at the bottom of each end. Lay the rope out with each end adjacent to each other at the connection points of the metal frame.
- Slide the plastic rings over the female ends of the metal bars.
- Make sure the ropes are not twisted, they should create an upside down V shape when the swing is fully assembled.



- Connect all the male and female ends together to create a complete circle.
- NOTE: You may need to push the foam away from the connection point to make room for assembly
- You should hear a “click” sound once the bars are secured.
- **BE SURE TO CHECK ALL CONNECTION POINTS TO ENSURE THEY ARE FULLY LOCKED AND SECURED BEFORE USING THE SWING!**





CHOOSING THE SITE:

- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user. Due to the variety of swing sets and places that this product can be suspended, we must urge caution when attaching the swing to your structure.
 - Protective surfacing under swings is recommended. “To and Fro” swings should have a fall zone extending a minimum of 6 ft (2 m) from the outer edge of the support structure on each side. The “fall zone” in front and back of the swing should extend out a minimum distance of twice the height of the swing as measured from the ground to the top of the swing support structure. Swings should have a minimum of 8 in (20 cm) between them. (ASTM F-1148-18) The bottom of a swing should not be less than 8 in (20 cm) above the protective surfacing material.
- SURFACES:** Maximum fall height is 84 in (213 cm), playground surface material should be 8.9 in (23 cm). See “Outdoor Home Playground Safety Handbook” from the U.S. Consumer Product Safety Commission.
- SUPPORT STRUCTURES:** Be certain that the overhead structure can support at least 500 lb (227 kg). If attaching to a tree limb, make sure the tree is alive and healthy. Recommended diameter of tree limb is 10 in (25 cm) Before anyone uses the swing, a stress/weight test should be performed (see step 3).


ATTACHING THE SKY SWING:

- Use the carabiners included with your product to attach the rope to your structure. *Other suitable hardware (ie. chain, links or fasteners) may be needed (not included).*
 - Attach the swing to your structure at 6-24 in(15-60 cm) off the ground.
 - 2 Point attachment will swing in a lateral motion perpendicular to the support structure.
 - 1 Point attachment will swing in a circular motion in any direction.
- ADJUSTING HEIGHT:** Your swing has adjustable S-hooks that allow you to adjust the hanging height of the swing. Recommended swing height is 12-18 in (30-45 cm) above the ground depending on the height of the rider.

MANDATORY LOAD STRESS TEST:

- First check all connections
- Have 2 Adults, whose combined weight is apx. 300 lb (136 kg), pull down together on the swing.

CAUTION: make sure they are in a safe position in case the branch or structure should come down. Gradually have them apply all their combined weight. During this process, check for breaking or cracking.

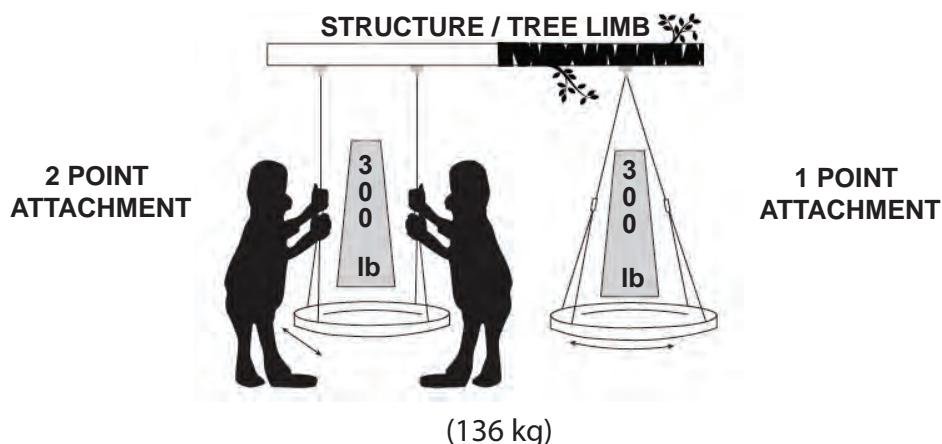



MAINTENANCE OF YOUR ADVENTURE SKY SWING

Take down your swing when not in use for long periods of time, this will help prevent UV damage and weathering of materials and unsupervised usage.

At the beginning of each play season:

- Tighten all hardware - check all connections for any hint of looseness, damage, deterioration, excess wear, rope fraying, breaks or sharp edges and replace as necessary.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Use only b4Adventure replacement parts

Once a month during play season:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Tighten all hardware - check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts: including all grips for wear, rust, or other deterioration. Replace as needed.
- Perform the Load Stress test.
- If using a step ladder or other platform, inspect it every month for looseness, stability & wear.

Twice a month during play season:

- Tighten all hardware - Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

At the end of each play season or when the temperature drops below 32° F (0° C):

- Inspect all parts for wear/damage. Replace as needed before next season of use.
- Take down your entire swing setup and store indoors.

- **X.3.1.1 Loose-Fill Materials:** Maintain a minimum depth of 9 in (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 ft high (2.5 m); and 9 in (23 cm) of sand or pea gravel for equipment up to 5 ft (1.5 m) high. NOTE: An initial fill level of 12 in (30 cm) will compress to about a 9 in (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain a least a 9 in (23 cm) depth.

PLEASE DO NOT RETURN YOUR PRODUCT TO THE STORE!

WE ARE HERE TO HELP YOU!

IF YOU HAVE ANY QUESTIONS ABOUT YOUR PRODUCT

PLEASE CONTACT US:

1-844-834-4334 • INFO@B4ADVENTURE.COM



PRODUCT DISCLAIMER & NOTICE

The installation and use of the Adventure Sky Swing is potentially hazardous. Any person purchasing, installing or using equipment from the b4Adventure must:

See section 4 of the United States Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook . Visit www.cpsc.gov/PageFiles/122149/325.pdf.

Observing the following statements and warnings reduces the likelihood of serious or fatal injury:

- Maximum user weight should not exceed 300 lb (136 kg)
- Instruct children not to walk close to, in front of, behind, or between moving items,
- Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- Instruct children to avoid swinging empty seats.
- Teach children to sit in the center of the swings with their full weight on the seat.
- Instruct children not to use the equipment in a manner other than intended.
- Do not allow children to wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Instruct children to remove their bike or others sports helmet before playing on the playground equipment.
- Instruct children to dress with well-fitting and full foot enclosing footwear. Example of inappropriate footwear are clogs, flip flops and sandals.
- Do not use when equipment is wet.
- Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).
- Obtain training and instruction regarding proper use and safety precautions to always practice.
- Ensure proper & adequate supervision and instruction (this include the continuous use of appropriate safety procedures & equipment) for themselves and others using the equipment;
- Check that all equipment is properly maintained, in good working order and inspected for damage or wear prior to each use.
- You assume all risks and accept full responsibility for any injury (including death) or damages that may occur from its use.

All the information provided by b4Adventure either printed, electronic or other, is not to be considered professional instruction or advice. Users of this equipment are encouraged to seek professional instruction regarding specific questions about usage, location, installation or other aspects of hanging swings.

Please save these instructions for future reference.

Owners shall be responsible for maintaining the legibility of the warning labels.

Disposal instructions: Recycle your Adventure Sky Swing according to Local, State or Federal Laws.

PRODUCT CONFORMS TO ASTM F1148, CONSUMER SAFETY PERFORMANCE SPECIFICATION FOR HOME PLAYGROUND EQUIPMENT