



PRIMO
First Steps
BottomLoading
Water
Dispenser



First Steps Bottom-Loading Water Dispenser

#601272 B290

FEATURES



CONVENIENCE SWITCHES – On/off switches for heating, cooling and night light are located on the back of the dispenser.

EMPTY BOTTLE LIGHT - Blinks orange when the bottle is empty and needs to be replaced.

COLD WATER ICON - Touch the snowflake to unlock, then touch dispense control to dispense cold water. For non-stop dispensing, touch and hold snowflake icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop. Snowflake illuminates blue when water is cooling. Snowflake turns off when water is fully chilled.

DISPENSE CONTROL - Touch to dispense cold, hot, or warm water once cold, hot or warm control is unlocked. Release to stop dispensing.

WARM WATER ICON - Touch bottle icon to unlock, then touch dispense control to dispense warm water. For non-stop dispensing, touch and hold bottle icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing and touch again to stop. Light illuminates yellow when water is heading and flashes yellow when the warm water sanitization cycle is in process. Light turns off when water is fully heated and when the sanitization cycle has been completed.

HEATING ICON – Touch and continuously hold wavy lines to unlock and touch dispense control to dispense hot water. Release dispense control to stop dispensing. Wavy lines illuminate red when water is heating. Light turns off when water is fully heated. (NOTE: As a child safety feature, holding both the touch dispense control and the heating icon is **required at all times** when dispensing hot water).

SANITIZATION ICON – Flashes yellow during the sanitization cycle of the warm water reservoir. The cycle runs automatically every 12 hours.

PROBE ASSEMBLY - Probe pumps water from the bottle into the hot, warm and cold reservoirs.


PROBE HANGER – Rest probe assembly on the hanger (located inside the cabinet door) to keep it clean while replacing bottles.

DRIP TRAY – Removable and dishwasher-safe.

WATER BOTTLE - Sold separately. Uses 3- or 5-gallon bottles. Visit PrimoWater.com to find Primo® water at the store nearest you.

WHAT YOU'LL NEED TO HAVE HANDY

- 1. Primo® Water Dispenser
- 2. Drip tray (included)
- 3. 3- or 5-gallon bottle of Primo® water (sold separately)

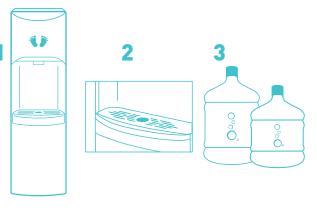

QUICK START GUIDE

- 1. Place the dispenser on a level floor surface in the desired location in your home. Product is intended for indoor use only. [Note: Do NOT plug power cord into
 - wall outlet until instructed.]
- **2.** Position dispenser so the back is at least 4 inches from wall and there are at least 4 inches of clearance on both sides.



3. Slide drip tray into place.



4. Clean probe with a damp cloth and dish soap. (Visit **PrimoWater.com** for detailed cleaning instructions.) Place probe assembly on hanger inside door to keep it clean.



5. Grab a bottle of Primo® water (sold separately) and fully remove the cap. Insert probe assembly into

bottle. Press firmly to secure assembly over bottle opening. For 3-gallon bottles, squeeze the tabs on the top of the probe assembly to separate the probe cap from the collar and press the collar securely over the bottle opening.



6. Slide bottle inside the cabinet and close cabinet door. [Note: Water will not pump from bottle unless door is fully closed.]



7. Plug dispenser into a ground fault circuit interrupting (GFCI) outlet. You will hear the dispenser begin to pump water to fill the internal hot and cold reservoirs.



8. Turn on desired functions by flipping the switches on the back of the dispenser to the ON position.



Blue - night light Green - chills water Red - heats water

9. Once the dispenser has stopped filling the internal reservoirs, dispense and dispose at least 1 quart (approximately 2 pint glasses) of water from the cold, warm, and hot controls. Warm water will be ready in xxx minutes once the initial selfsanitization is complete.



10. Your water will be ready to dispense fully chilled in approximately 1 hour, piping-hot in approximately 12 minutes, or warm in approximately 6 minutes.









11. Register your dispenser on our customer support page at **PrimoWater.com** to activate your warranty, which runs for 1 year from date of purchase.

Primo® 5-Gallon Bottled Water or Self-Service Refill Water (sold separately)



Available at numerous locations. Find the store nearest you at **PrimoWater.com**.

11/27/18 4:14 PM 18-PRMO-2350 FirstSteps BotLoad Manual 000000 V2.indd 2-3

First Steps Bottom-Loading Water Dispenser

OPERATING INSTRUCTIONS

DISPENSING COLD WATER

- 1. Water will take approximately 1 hour after initial set up to become completely chilled. Cooling light will turn off once the water has been fully chilled.
- 2. Touch the cold water icon to unlock, then touch dispense control to dispense cold water.
- 3. For non-stop dispensing, touch and hold icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop.

DISPENSING WARM WATER

- 1. Touch the baby bottle icon to unlock, then touch dispense control to dispense warm water.
- 2. For non-stop dispensing, touch and hold icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop.

NOTE: The CDC advises that powered baby formula is not sterile. As a precautionary measure we recommend dispensing enough hot water to coat the formula prior to mixing. For additional questions about formula preparation please consult a pediatrician.

DISPENSING HOT WATER

- 1. Water will take approximately 12 minutes after initial set up to reach its hottest temperature. Heating light will turn off once the water has been fully heated.
- 2. Touch and CONTINUOUSLY HOLD the hot water icon to unlock. then touch dispensing control to dispense hot water. Release to stop dispensing.

CAUTION: This unit dispenses water at temperatures that can cause severe burns. Avoid direct contact with hot water. Keep children and pets away from the unit while dispensing. Never allow children to dispense hot water without proper and direct supervision. Disable the heating feature by switching the heating convenience switch on the back of the unit to the off position or unplug the unit. Product is intended for water dispensing only. Do not use with other liquids.

CHILD LOCK OUT FUNCTION

Touch and hold the hot and cold icons for three seconds to lock the touch controls. All icons will flash three times, indicating unit is locked and no water can be dispensed. If controls are touched, the icons will flash three times. To unlock, press and hold the hot

and cold icons for three seconds. All icons will flash three times indicating unit is unlocked and the dispenser will resume normal

REPLACING THE BOTTLE

When your bottle is empty, the empty bottle light will flash. To prevent freeze-up or over-heating, the dispenser will not heat or cool water when the bottle light is flashing. Replace the bottle as soon as possible to re-enable cooling and heating.

- 1. Open dispenser cabinet door and slide empty bottle out of
- 2. Remove probe assembly from the empty bottle and place it on the probe hanger.
- 3. Set empty bottle aside.
- 4. Remove the entire plastic cap from the new bottle.
- 5. Place probe into the new bottle and slide the collar down until it clicks into place. Press on the top of the probe until the tube touches the bottom of the bottle. For 3 gallon bottles, squeeze the tabs on the top of the probe assembly to separate the probe cap from the collar and press the collar securely over the bottle opening.
- 6. Slide the bottle into the cabinet and close the door.

CLEANING & MAINTENANCE

For best taste, performance, and hygiene, clean your cabinet, controls, bottle probe and spouts regularly. Use a clean, soft cloth and food grade sanitizer or bleach.

To ensure quality, a sanitization cycle of the warm water reservoir will automatically run every 12 hours. During the cycle water in the warm reservoir is boiled. The sanitization and baby bottle icons will flash yellow until the cycle is complete and the water returns to body temperature. The cycle takes approximately XXX minutes. To manually run a cycle, press the baby bottle icon 3 times consecutively. Empty and clean drip tray as needed. Clean the cold reservoir regularly.

Visit **PrimoWater.com** for detailed cleaning instructions.

LIMITED WARRANTY

Primo Water Corporation, ("Vendor") warrants to the original purchaser of this dispenser, and to no other person, that if this dispenser is assembled and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, all parts in such dispenser shall be free from defects in material and workmanship. Vendor may require reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should retain your sales slip or invoice. The Limited Warranty shall be limited to repair or replacement of parts which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor's Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and if Vendor approves claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to original purchaser, freight or postage prepaid. For units purchased outside of the continental US (limited to Hawaii, Alaska, and Puerto Rico), dispensers determined to be defective by the Vendor should be returned or exchanged at the original point of purchase within the

misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the dispenser, as set out in the User's Manual. In addition, the Limited Warranty does not cover damage to the finish after purchase, including without limitation scratches, dents, discoloration or rust

The Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from sellers other than authorized retailers or distributors. AFTER THE PERIOD OF THE ONE (1) YEAR EXPRESS WARRANTY, VENDOR DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FURTHER, VENDOR SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor assumes no responsibility for any defects caused by third parties. This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusions and limitations may

For warranty information, additional assistance, or instructional videos for maintaining or operating your dispenser, visit our customer support page at PrimoWater.com.

Primo Water Corporation, 101 N. Cherry St. Suite 501, Winston-Salem, NC 27101

© 2018 Primo Water Corporation

© 2018 Primo Water Corporation

Primo Water Corporation, 101 M. Cherry St. Suite 501, Winston-Salem, MC 27101

our customer support page at PrimoWater.com.

For warranty information, additional assistance, or instructional videos for maintaining or operating your dispenser, visit

damages, or limitations on how long a warranty lasts, so the above exclusions and limitations may Some jurisalictions do not allow exclusion or limitation of special, incidental or consequential ebecilic regar Ligure; a purchaser may have other rights depending upon where he of she lives. responsibility for any defects caused by third parties. This Limited Warranty gives the purchaser INDIKECT, PUNTINE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor assumes no AVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL МЕКСНАИТАВІГІТУ AND FITNESS FOR A PARTICULAR PURPOSE. FURTHER, VENDOR SHALL AFTER THE PERIOD OF THE ONE (1) YEAR EXPRESS WARRANTY, VENDOR DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF ducts that are purchased from sellers other than authorized retailers or distributors The Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties

arrer purchase, including wilhout umitation scratches, dents, discoloration of rust. set out in the User's Manual. In addition, the Limited Warranty does not cover damage to the finish you or any trird party, or taiture to perform normal and routine maintenance on the dispenser, as The Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by

aciective by the venaor should be returned or exchanged at the original point of purchase within the replacement parts to original purchaser, freight or postage prepaid. For units purchased outside of the continental US (limited to Hawaii, Alaska, and Puerto Rico), dispensers determined to be of the continental US (limited to Hawaii, Alaska, and Puerto Rico), dispensers determined to be returned part, and if Vendor approves claim, Vendor will replace such defective part wilfout chai If you return defective parts, transportation charges must be prepaid by you. Vendor will return rizted below. If vendor confirms, after examination, a defect covered by this Limited warranty in any determine in its reasonable discretion upon examination to be defective. Before returning any arris, you should contact Vendor's Customer Service Department using the contact information in the contact in the contact of the contact in the contac you should retain your sales slip or invoice. The Limited Warranty shall be limited to repair or replacement of parts which prove defective under normal use and service and which Vendor shall reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, in such dispenser shall be free from defects in material and workmanship. Vendor may require in such dispenser shall be free from defects in material and workmanship. Vendor may require Primo Water Corporation, ("Vendor") warrants to the original purchaser of this dispenser, and to no other person, that if this dispenser is assembled and operated in accordance with the printed

LIMITED WARRAUTY

Visit PrimoWater.com for detailed cleaning instructions.

the cold reservoir regularly.

times consecutively. Empty and clean drip tray as needed. Clean SPANIE COME minutes. To manually run a cycle, press the baby bottle icon 3 erarns to body temperature. The cycle takes approximately XXX rugsp yellow until the cycle is complete and the water Noir is boiled. The sanitization and baby bottle every 12 hours. During the cycle water in T cycle of the warm water reservoir

e a clean, soft cloth an your cabinet,

se the door.

se the collar securely robe assembly to separate tle. For 3 gallon bottles, p of the probe until the 2. Place prob nd slide the collar down until

- **4.** Kemove the entire pla om the new bottle.
 - 3. Set empty bottle aside.
 - the probe hanger.
- 2. Remove probe assembly from the empty bottle and place it on
 - 1. Open dispenser cabinet door and slide empty bottle out of

soon as possible to re-enable cooling and heating. cool water when the bottle light is flashing. Replace the bottle as prevent freeze-up or over-heating, the dispenser will not heat or When your bottle is empty, the empty bottle light will flash. To

REPLACING THE BOTTLE

indicating unit is unlocked and the dispenser will resume normal and cold icons for three seconds. All icons will flash three times press and hold the hot the icons will flash three times ors are touched, is locked and no water can be the touch controls. All icons Touch and hold the hot and

CHILD LOCK OUT FU

unit. Product is intended for water di

by switching the nearing convenience urateu to alsbeuse uor waret wirt

fuisuədsip dois oi then touch dispe 2. Touch and COM

the water has been fully b reach its hottest temperature. H J. Water will take approximately 12 minut

DISPENSING HOT WATER

we recommend dispensing enough hot water to coat the formula prior to mixing. For additional NOTE: The CDC advises that powered baby formula is not sterile. As a precautionary measure,

start dispensing, touch again to stop.

seconds. Dispense control will flash. Touch dispense control to 2. For non-stop dispensing, touch and hold icon for three

control to dispense warm water.

J. Touch the baby bottle icon to unlock, then touch dispense

DISPENSING WARM WATER

start dispensing, touch again to stop.

seconds. Dispense control will flash. Touch dispense control to 3. For non-stop dispensing, touch and hold icon for three

control to dispense cold water.

2. Touch the cold water icAon to unlock, then touch dispense

water has been fully chilled. become completely chilled. Cooling light will turn off once the 1. Water will take approximately 1 hour after initial set up to

DISPENSING COLD WATER

OPERATING INSTRUCTIONS

First Steps Bottom-Loading Water Dispenser

18-PRMO-2350 FirstSteps BotLoad Manual 000000 V2.indd 4-5 11/27/18 4:14 PM

WHAT YOU'LL NEED TO HAVE HANDY

- 1. Primo® Water Dispenser
- 2. Drip tray (included)
- 3. 11.3 or 18.9-liter bottle of Prima® water (sold separately)

QUICK START GUIDE

indoor use only. [Note: Do desired location in your home. Product is intended for 1. Place the dispenser on a level floor surface in the

wall outlet until instructed.] NOT plug power cord into

4 inches of clearance on both sides. 4 inches from wall and there are at least 2. Position dispenser so the back is at least

3. Slide drip tray into place.

inside door to Place probe for detailed dish soap. 🕌 **4.** Clean probe with a

bottle. Press firmly t fully remove the cap 5. Grab a bottle of Pri

over the bottle opening. and press the collar securely the probe cap from the collar probe assembly to separate the tabs on the top of the For 3-gallon bottles, squeeze assembly over bottle

fully closed.] not pump from bottle unless door is close cabinet door. [Note: Water will 6. Slide bottle inside the cabinet and

First Steps Bottom-Loading Water Dispenser

FEATURES

cooling and night light are located on the back of the dispenser. CONVENIENCE SWITCHES - On/off switches for heating,

empty and needs to be replaced. EMPTY BOTTLE LIGHT - Blinks orange when the bottle is

fully chilled. when water is cooling. Snowflake turns off when water is dispensing, touch again to stop. Snowflake illuminates blue Dispense control will flash. Touch dispense control to start dispensing, touch and hold snowflake icon for three seconds. touch dispense control to dispense cold water. For non-stop COLD WATER ICON - Touch the snowflake to unlock, then

Release to stop dispensing. warm water once cold, hot or warm control is unlocked. DISPENSE CONTROL - Touch to dispense cold, hot, or

tization cycle The naut theid ellow when the . Light illuminates ch dispense control tle icon for three non-stop die then touch dispens warm water. For con to unlock, WARM WATER ICON - To

att fimes when dispensing hot water). nooi gnitead the heating icon ng. Light turns off when As a child safety feature, səni) (veW .gn hot water. sənil yvew

automatically every 12 hours. sanitization cycle of the warm water reservoir. The cycle runs ANITIZATION ICON - Flashes yellow during the

into the hot, warm and cold reservoirs. **PROBE ASSEMBLY** – Probe pumps water from the bottle

replacing bottles. (located inside the cabinet door) to keep it clean while • PROBE HANGER - Rest probe assembly on the hanger

• DRIP TRAY - Removable and dishwasher-safe.

store nearest you. bottles. Visit $\operatorname{\textbf{PrimoWater.com}}$ to find $\operatorname{Primo}^{\text{@}}$ water at the WATER BOTTLE – Sold separately. Uses 3- or 5-gallon





at PrimoWater.com to activate your warranty, which

approximately 6 minutes. not in approximately

-ilak leit

ʻpjoo əl

yximately

pue əsu

gnilliì bəq

yater will be

ni bəllidə ylluð

NO NO NO

11. Register your dispenser on our customer support page

runs for I year from date of purchase.

Green – chills wat Blue - night light

dispenser to the ON position.

the switches on the back of the

8. Turn on desired functions by flipping

internal hot and cold reservoirs.

dispenser begin to pump water to fill the

7. Plug dispenser into a ground fault circuit

interrupting (GFCI) outlet. You will hear the



Find the store nearest you at PrimoWater.com. Available at numerous locations.





