




SMART MINI STEPPER WITH EXERCISE BANDS NO. 012 SMART USER MANUAL



IMPORTANT! Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US:** support@sunnyhealthfitness.com or 1- 877 - 90SUNNY (877-907-8669).

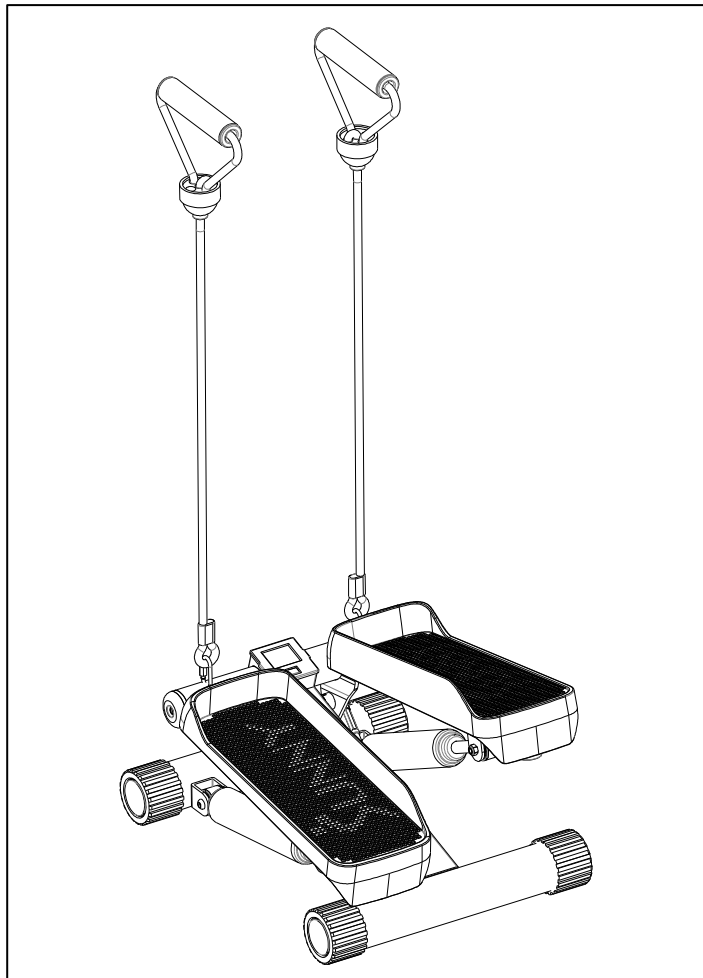


WWW.SUNNYHEALTHFITNESS.COM

IMPORTANT SAFETY INFORMATION

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical condition that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 feet (60 cm) of free space all around it.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 220 lbs (100kgs).
10. The equipment is not suitable for therapeutic use.
11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving are required.
12. Your product is intended for use in cool and dry conditions. You should avoid storage in extremely cold, hot or damp areas as this may lead to corrosion and other related problems.
13. This equipment is designed for indoor and home use only; it is not intended for commercial use.

EXPLODED DIAGRAM

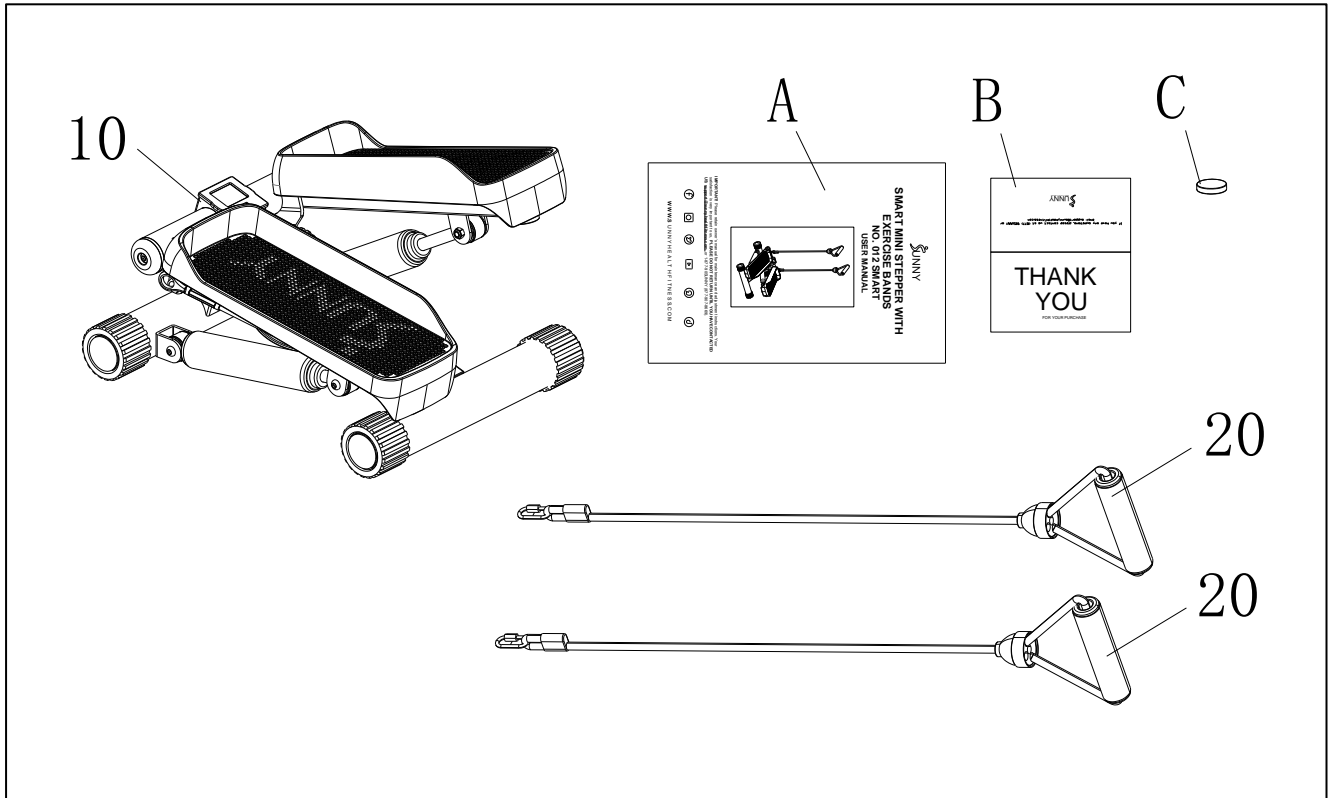

No.	Description	Spec.	Qty.	No.	Description	Spec.	Qty.
10	Main Frame		1	B	Thank You Card		1
20	Exercise Band		2	C	Battery	CR2032	1
A	Manual		1				

Ordering Replacement Parts (U.S. and Canadian Customers only)


Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the “EXPLODED DIAGRAM” (page 9) and “PARTS LIST” (page 10)

Please contact us at support@sunnyhealthfitness.com or 1- 877 - 90SUNNY (877-907-8669).

ASSEMBLY INSTRUCTIONS


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

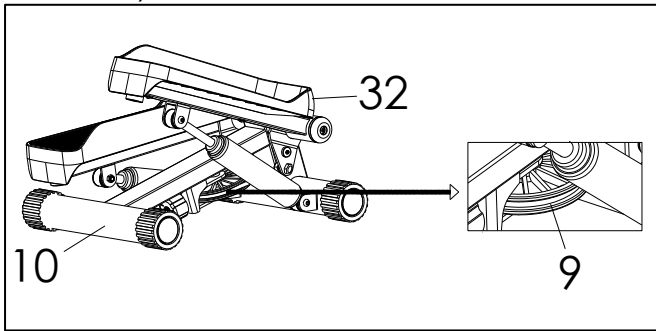

STEP 1


Remove the **Main Frame (No. 10)** from the box.

Lift the **Right Pedal (No. 32)** up with your hand and ensure that **Cable (No. 22)** is inserted into the slot of the **Pulley (No. 9)** as shown in the picture.

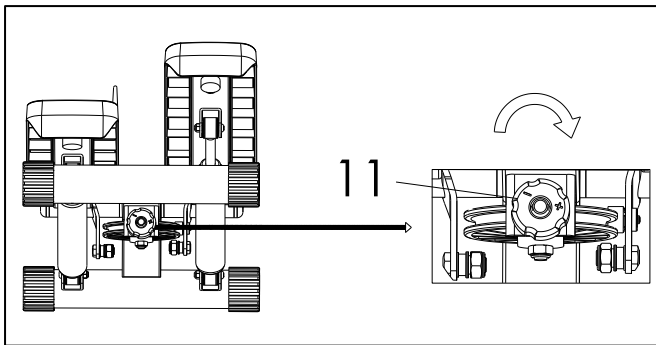

STEP 2

Turn the **Adjustment Knob (No. 11)** clockwise " + " all the way right until it reached its end point.

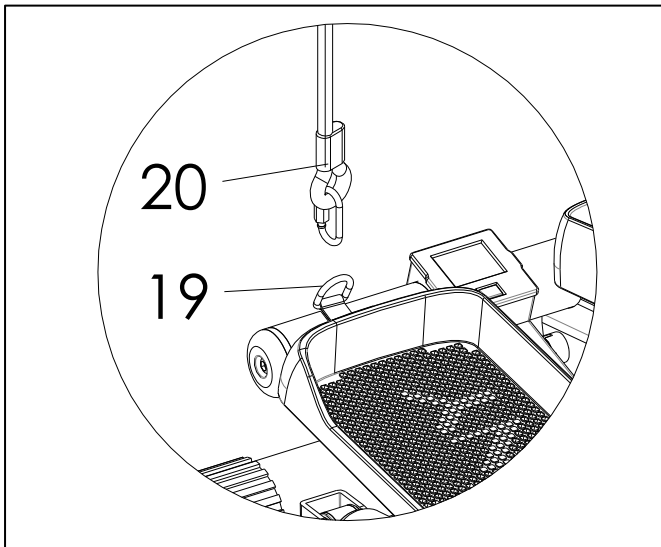


STEP 3

Connect 2 **Exercise Bands (No. 20)** to the **Exercise Band Buckles (No. 19)** at the front of the left and right pedals as shown in the picture.

The assembly is complete!

MAINTENANCE & ADJUSTMENT GUIDE

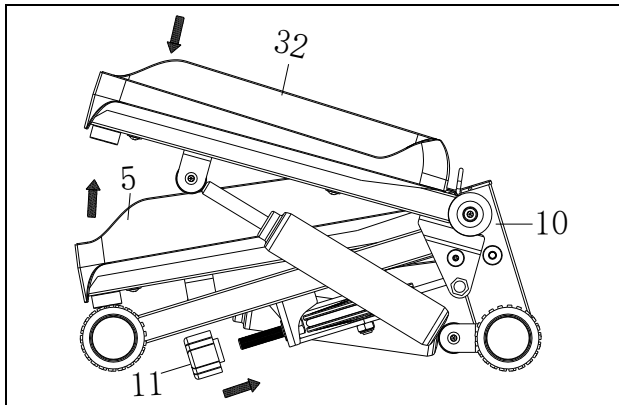

ADJUSTING THE STEPPING HEIGHT

Turn the **Adjustment Knob (No. 11)** clockwise to increase the stepping height.

Turn the **Adjustment Knob (No. 11)** counter-clockwise to decrease the stepping height.

CLEANING

The stepper can be cleaned with a soft, clean, and damp cloth. Do not use abrasives or solvents on plastic parts. Please wipe your perspiration off the stepper after each use. Be careful not get excessive moisture on the computer display panel as this might cause electrical hazards or electronics failure.

Please keep the stepper, especially the computer, out of direct sunlight to prevent screen damage.


Please inspect all assembly bolts and pedals on the stepper for proper tightness every week.

STORAGE

Store the stepper in a clean and dry environment, away from children.

EXERCISE BAND INSTRUCTIONS


1. Unscrew the hook nut located on the band until the hook is open as shown in the picture below.
2. Attach the band hook onto the pedal hook and screw the hook nut closed until the pedal hook is secured with the hook nut.
3. Assembly is done.



Adjusting the Rope Length	
To Lengthen Rope	To Shorten Rope
<p>Push one side of the rope down and then pull the bottom of the rope downward as shown in the picture below. Repeat this process until the rope is at the desired length. NOTE: This adjustment decreases the tension on the bands.</p>	<p>Push the rope upward from the bottom and then pull one side of the top rope up as shown in the picture below. Repeat this process until the rope is at the desired length. NOTE: This adjustment increases the tension on the bands.</p>
<p>NOTE: When lengthening the rope; only one side of the rope can be pushed down. If the side that you are trying to push down does not move; try the other side of the rope.</p>	

MAINTENANCE & CARE INSTRUCTIONS

1. If the stepper screeches during exercise, please discontinue use and do the following: loosen the screw located on the U-Shaped iron then loosen the cable as shown in the picture below. Next, lubricate both the U-Shaped iron and cable to improve the sliding condition. Re-tighten and secure the screw and cable.
2. For safety and efficiency, please be sure to inspect and lubricate the U-Shaped iron and cable regularly.
3. Always use dry cloth when cleaning the stepper, never clean the stepper using a wet or damp cloth.
4. Store the stepper in a dry area free of moisture, do not store or leave outdoors.
5. During exercise the hydraulic cylinders may produce noise if they become too hot, it is perfectly normal for this to occur.
6. To avoid injury to your hands, please refrain from touching the hydraulic cylinders during or immediately after use.

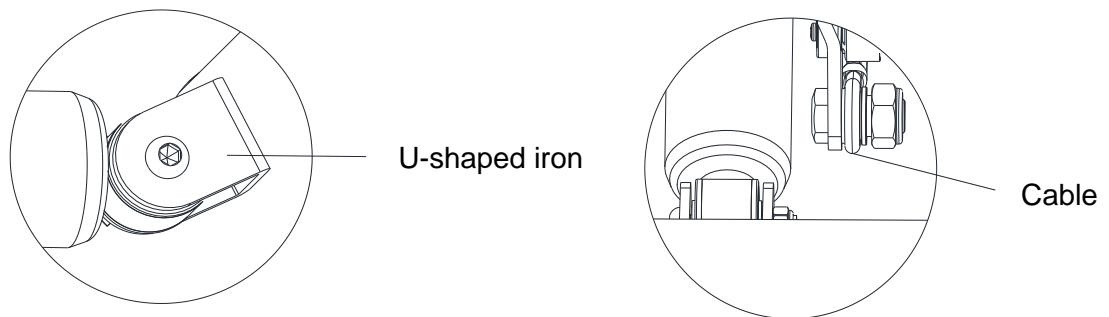

OPERATING INSTRUCTIONS


1. During the use of the equipment, please make sure to follow all instructions carefully as any improper techniques of usage and/or assembly may result in injury and/or damage to the equipment.
2. The suggested exercise regimen for optimal results is 10-15 minutes per day, at least three times a week.
3. Before beginning exercise, always inspect the equipment to ensure that all moving parts as well as hardware are secured correctly and are in proper condition.

NOTES:

If you are having a hard time balancing on the stepper, please hold onto something for support.


Do not use the stepper for more than 15 minutes as the hydraulic cylinders may overheat and become damaged. Allow at least 30 minutes rest in between sessions.

CHANGING THE BATTERY

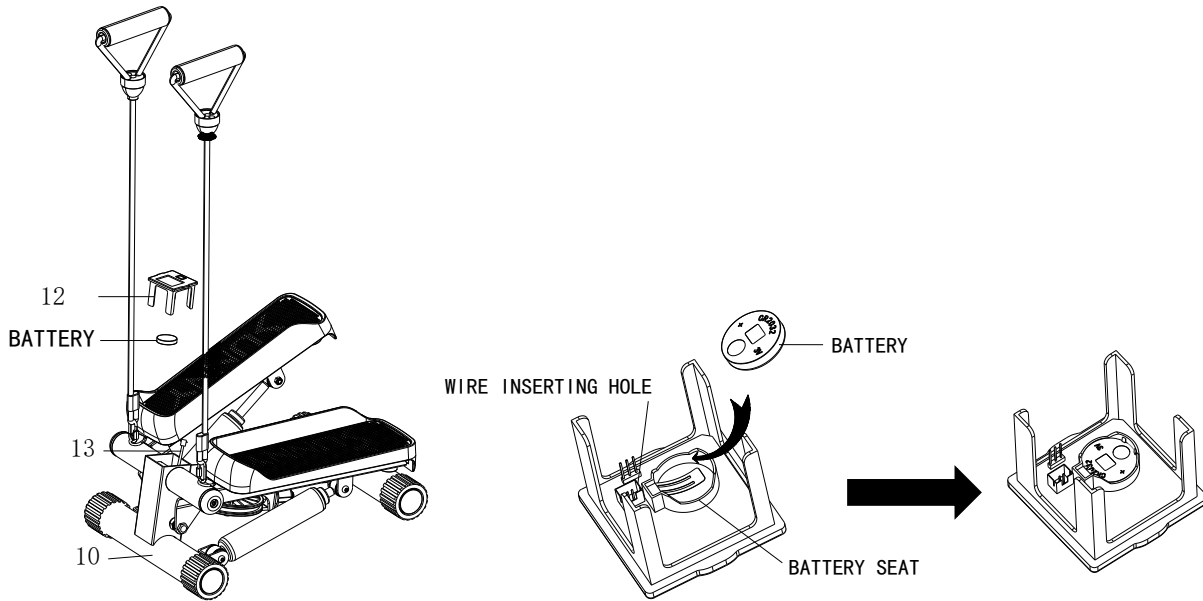

1. Remove **Meter (No. 12)** from **Main Frame (No. 10)** and disconnect the link wire of **Sensor (No. 13)** from the **Meter (No. 12)**.
2. Remove the battery from the backside of **Meter (No. 12)**.
3. Please insert the battery diagonally into the backside of **Meter (No. 12)**. Please ensure the positive (+) side is facing upward, and make sure the battery is under the obstruction as shown in above diagram.
Note: If the battery is not installed properly, the **Meter (No. 12)** can't be turned on.
4. Insert the link wire of **Sensor (No. 13)** into the wire inserting hole on the back of **Meter (No. 12)**.
5. Insert the **Meter (No. 12)** into **Main Frame (No. 1)**.

EXERCISE METER

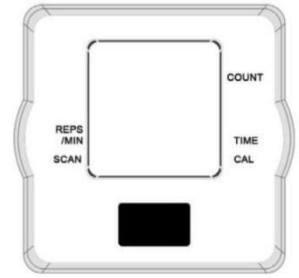

KEY FUNCTIONS:

MODE: Press the **MODE** button to select a function.
(Time, Reps/Min, Count, Calorie and Scan)

OPERATION PROCEDURES:

AUTO ON/OFF:

If the steps of the machine are put into motion or the **MODE** button is pressed, the meter will activate and will remain active during use. If it goes without signal for approximately 4 minutes, the meter will turn off automatically.

RESET:

The meter can be reset by pressing and holding the **MODE** button for three seconds. Removing the batteries will also reset the meter and return all function settings back to zero.

MODE:

To select the **LOCK MODE** setting, press the **MODE** key when the pointer is on the function you wish to lock. Once locked, only the selected function will be displayed.

FUNCTIONS:

TIME: Counts the total time of an exercise from start to finish.

CALORIES: Counts the number of total calories burned during an exercise from start to finish.

COUNT: Automatically accumulates the count of steps taken during sessions. Meter counts 1 step after you step once with each foot.

REPS/MIN: Automatically displays the count of steps per minute.

SCAN: Press the **MODE** button until the indicator arrow points to **SCAN**. The indicator arrow will continue to flash indicating that **SCAN** mode is active. **SCAN** mode will automatically scan through each function in sequence.

NOTE:

1. If you have an inaccurate reading on the meter, please replace the battery immediately. (See instructions below)
2. Please use one CR2032 battery.
3. The meter is auto-powered. It turns on when exercise begins, and it turns off when no movement is made between 4 to 5 minutes.
4. All functions will automatically stop calculating when "**STOP**" appears in the upper left corner of the meter. This occurs when there is no signal for a period of 4 seconds. Once the exercise begins again, the meter will automatically start recalculating.

APP CONNECTION:

Connect Smart Equipment to SunnyFit App:

1. Scan to download SunnyFit from the app store:



2. Ensure that the Bluetooth function is turned on from your mobile device.
3. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
4. Begin any workout activity that matches your smart equipment, then follow the onscreen prompts to search for and connect to your smart equipment.
5. When connected, your stats and records will be displayed at the end of your course/session, and recorded in your account profile!


Troubleshooting:

- If you are having trouble connecting your smart equipment, visit www.sunnyfit.com/guide or scan the QR code below:



- If you require additional support, please contact support@sunnyfit.com

EXPLODED DIAGRAM

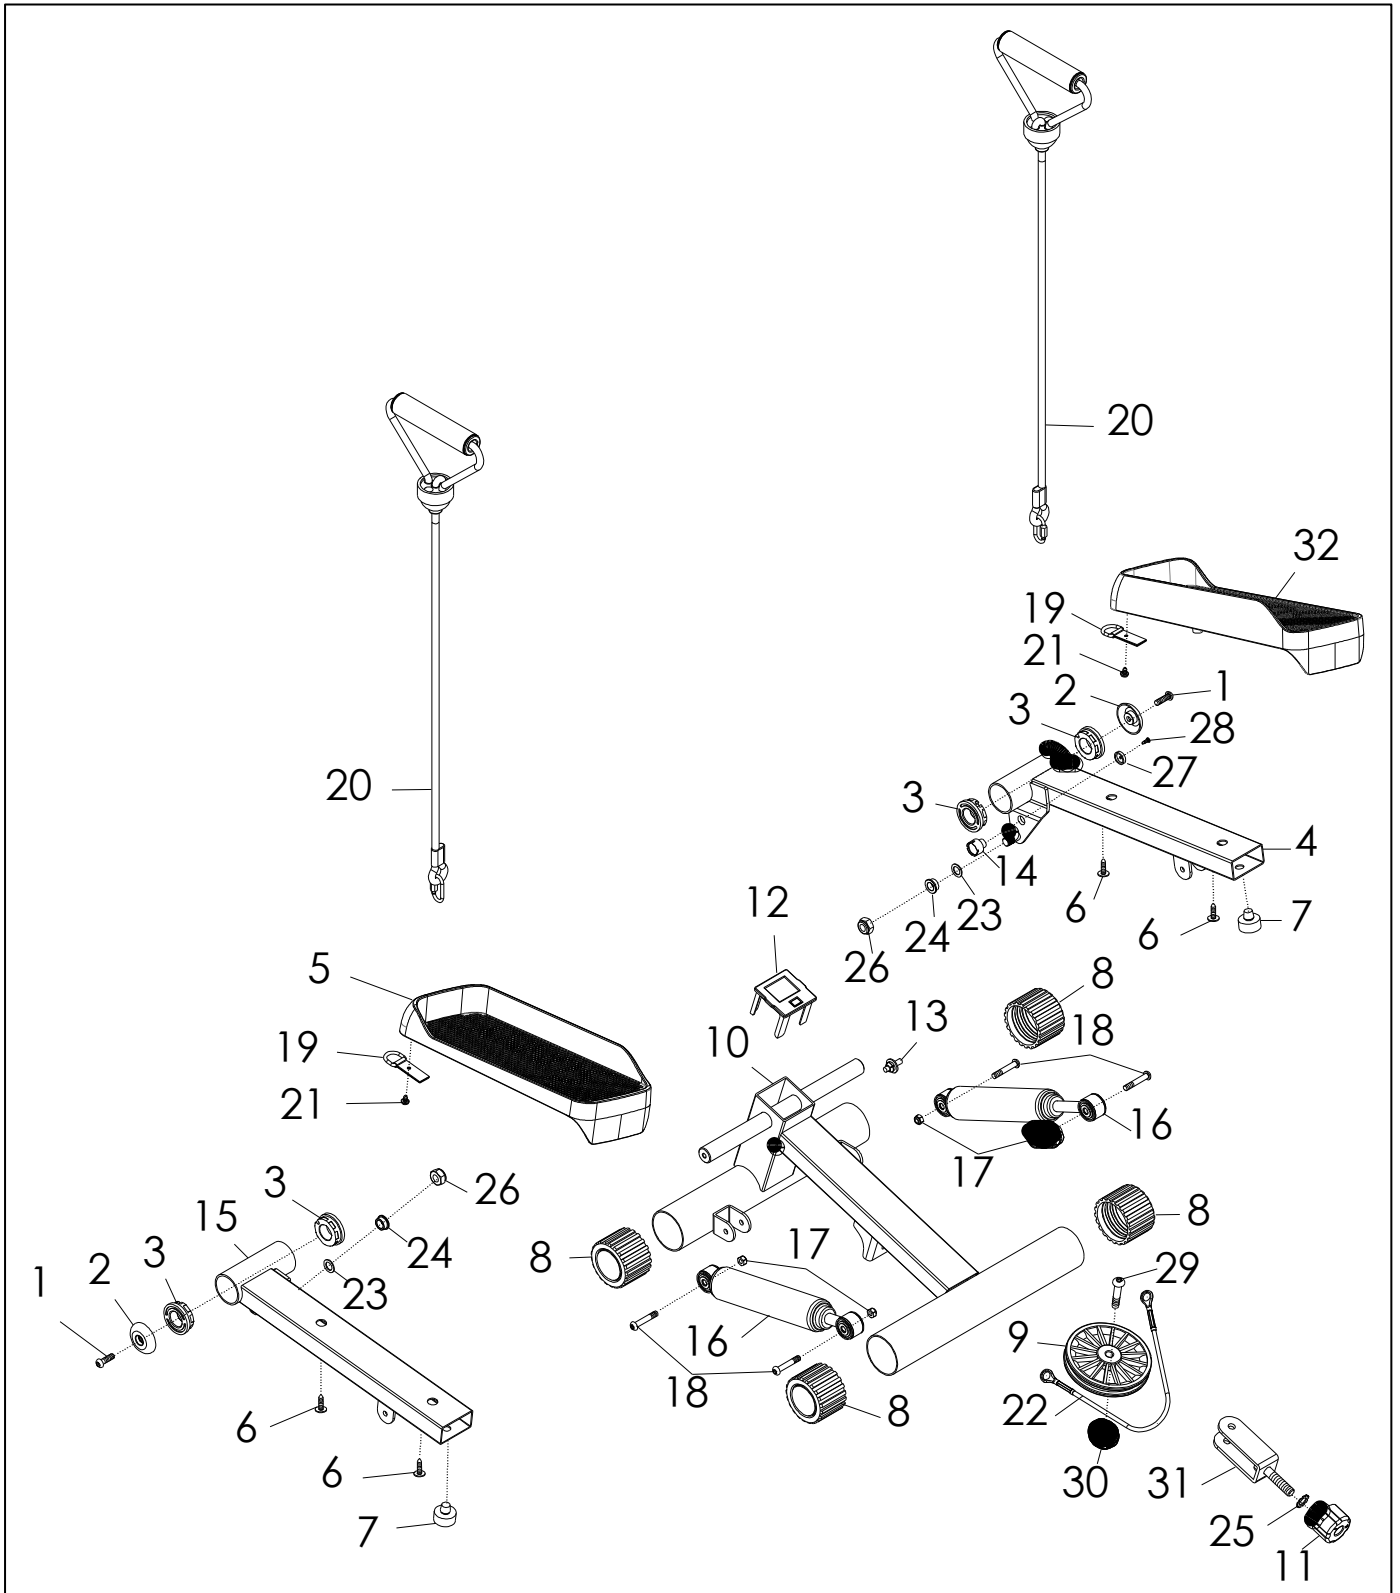

PARTS LIST

No.	Description	Spec.	Qty.	No.	Description	Spec.	Qty.
1	Screw	M6	2	17	Nut	M6	4
2	Bearing Cap	Φ38*6.2*7.5	2	18	Bolt	M6*34	4
3	Bearing Sleeve	Φ38*Φ19.1*12	4	19	Exercise Band Buckle		2
4	Right Pedal Tube		1	20	Exercise Band	Φ8*640	2
5	Left Pedal	320*120*82.5	1	21	Screw	M5	2
6	Screw	M5	4	22	Cable	Φ6*335	1
7	Stopper	Φ25*22	2	23	Plastic Gasket	Φ16*Φ10.2*1	2
8	Cap	Φ50	4	24	Power Metallurgy	Φ17*Φ10.1*6.5	2
9	Pulley	Φ100*Φ8.2*20	1	25	Lock Washer	Φ19*Φ10.9*1.0	1
10	Main Frame		1	26	Locknut	M10	2
11	Adjustment Knob	M10	1	27	Magnet Cover	Φ15*3.5	1
12	Meter	DSC03605BL	1	28	Screw	ST3*8	1
13	Sensor		1	29	Screw	M8*40	1
14	Magnet		1	30	Locknut	M8	1
15	Left Pedal Tube		1	31	Pulley Block		1
16	Hydraulic Cylinder	Φ38 (L220-L350)	2	32	Right Pedal	320*120*82.5	1

CONNECT
With us

DOWNLOAD


Track your fitness progress & join
FREE workout courses!


Download  **SUNNYFIT** today!





FOLLOW


Find us on social media @sunnyhealthfitness


 @sunnyhealthfitness

 @sunnyhealthandfitness

 @sunnyhealthfit

 /sunnyhealthfitness

 /sunnyhealthfitness

 /sunnyhealthandfitness

www.sunnyhealthfitness.com