




SMART PRO INDOOR CYCLING EXERCISE BIKE SF-B901 SMART USER MANUAL



IMPORTANT! Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US:** support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

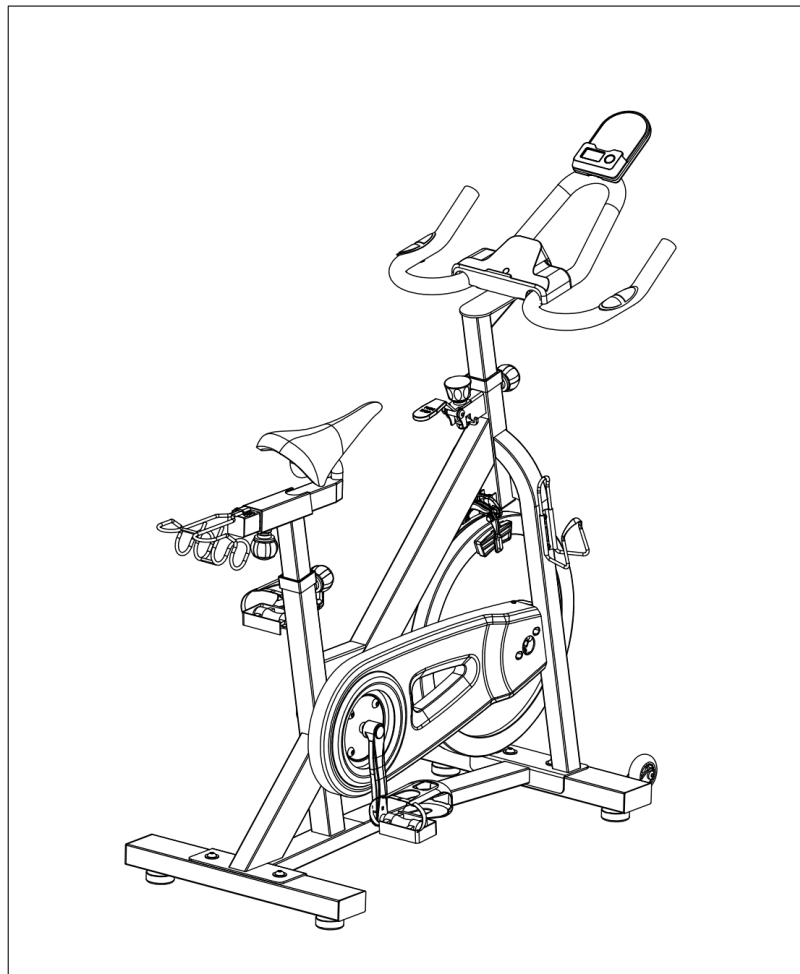

WWW.SUNNYHEALTHFITNESS.COM


IMPORTANT SAFETY INFORMATION

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk, or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 feet (60 cm) of free space all around it.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 275 lbs (125 kgs).
10. The equipment is not suitable for therapeutic use.
11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving is required.
12. Your product is intended for use in cool, dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
13. This equipment is designed for indoor and home use only. It is not intended for commercial use!

PRE-ASSEMBLY CHECK LIST


Before you start to assemble, please make sure all parts are included.

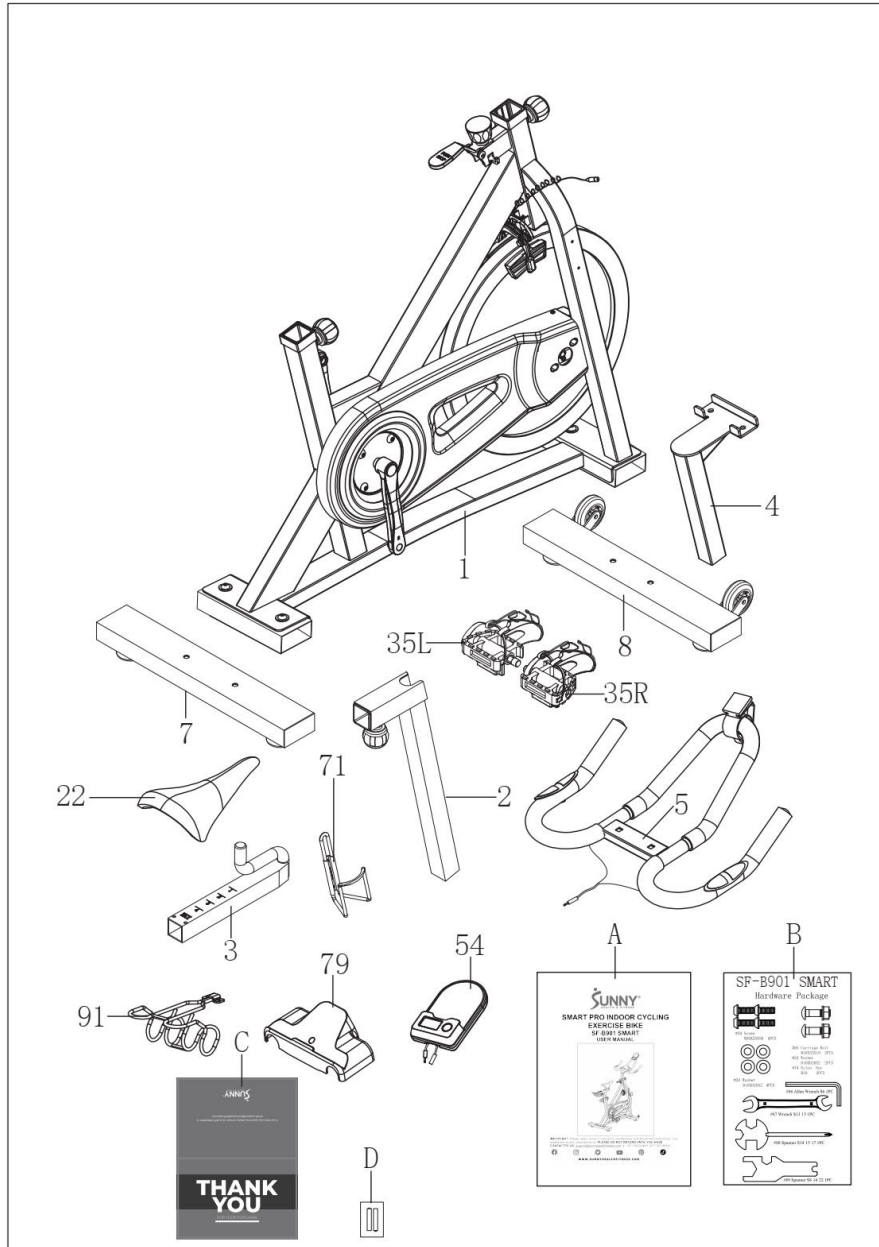

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Seat Post		1
3	Seat Slider		1
4	Handlebar Post		1
5	Handlebar		1
7	Rear Stabilizer		1
8	Front Stabilizer		1
22	Seat	KX006	1
35L/R	Pedal	YH-102X	1 pr.

No.	Description	Spec.	Qty.
54	Meter	BJHT-087	1
71	Bottle Holder		1
79	Handlebar Cover	222X104X75	1
91	Dumbbell Rack		1
A	Manual		1
B	Hardware Package		1
C	Thank You Card		1
D	Battery	AAA	2

HARDWARE PACKAGE

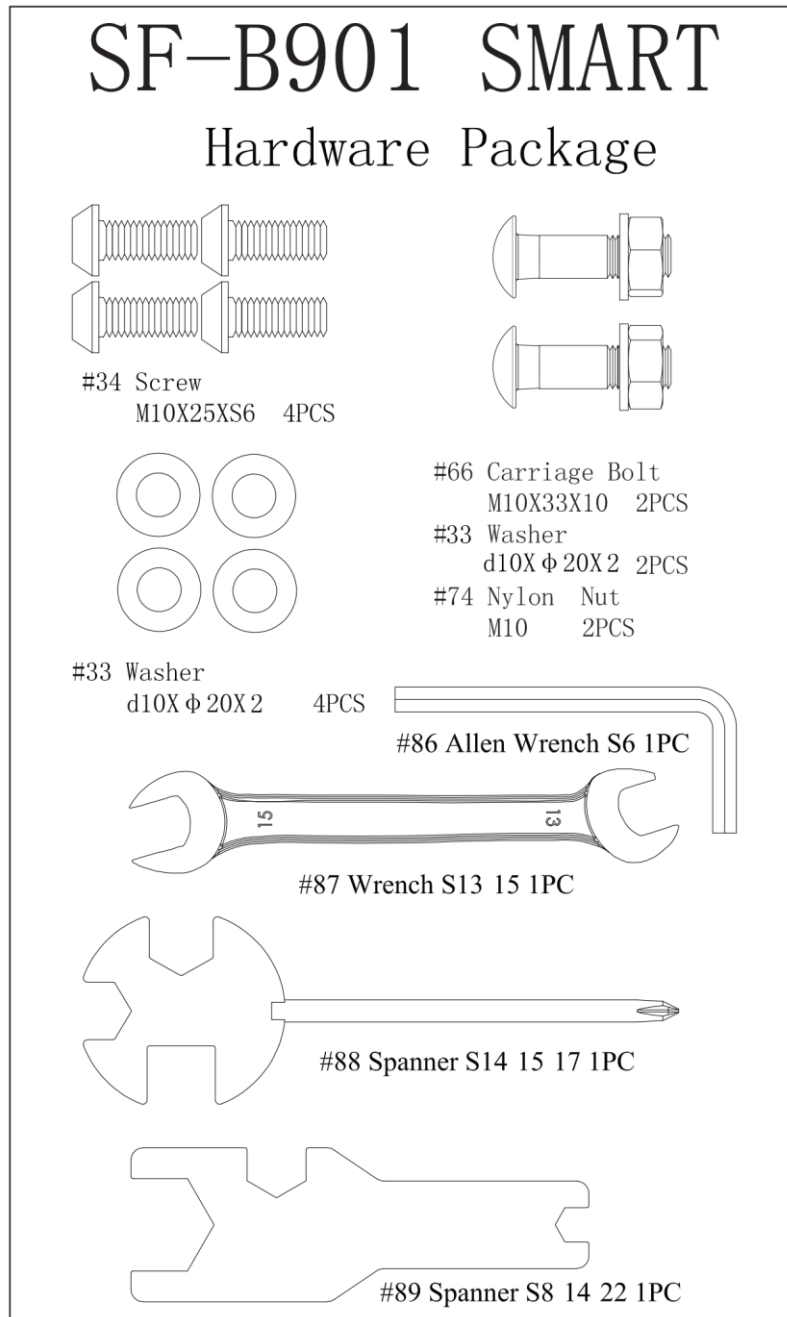

Ordering Replacement Parts (U.S. and Canadian Customers only)


Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the "EXPLODED DIAGRAM" (pages 14-15) and "PARTS LIST" (pages 16-17)

Please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

ASSEMBLY INSTRUCTIONS


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

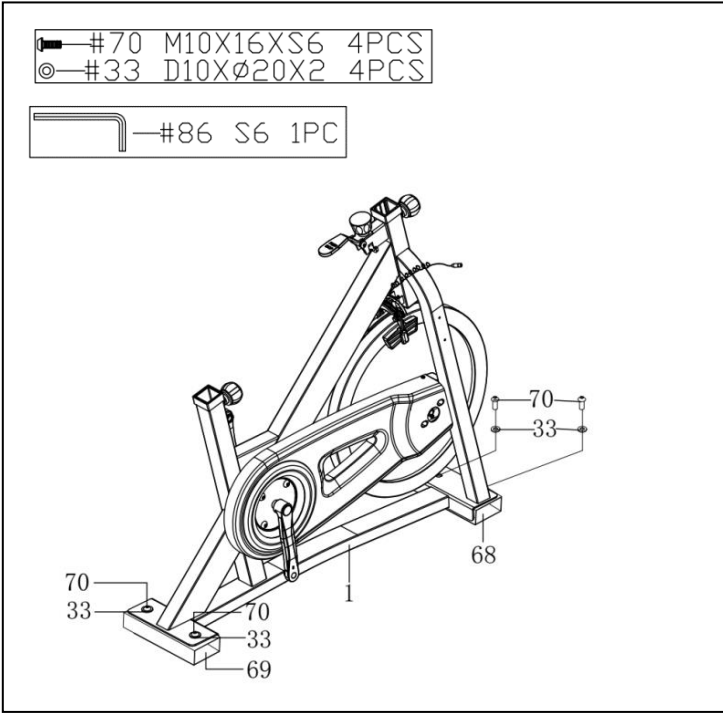

STEP 1:

Remove 4 **Screws (No. 70)** and 4 **Washers (No. 33)** from **Front & Rear Shipping Tubes (No. 68 & No. 69)** using **Allen Wrench (No. 86)**.


NOTE: You may save these parts: **Screws (No. 70)**, **Washers (No. 33)**, **Front & Rear Shipping Tubes (No. 68 & No. 69)** for future packaging and transportation of bike.

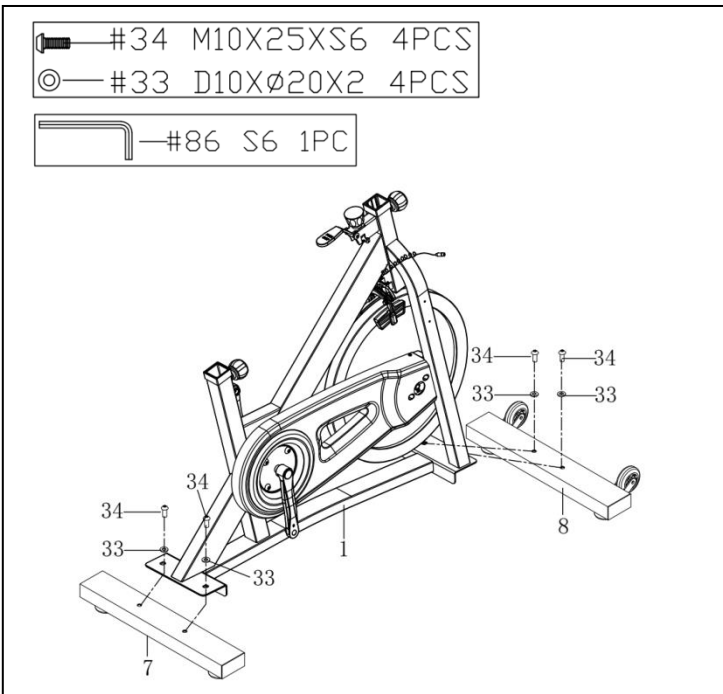

STEP 2:

Attach the **Front & Rear Stabilizers (No. 8 & No. 7)** to the **Main Frame (No. 1)** using 4 **Screws (No. 34)** and 4 **Washers (No. 33)**. Tighten and secure with **Allen Wrench (No. 86)**.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

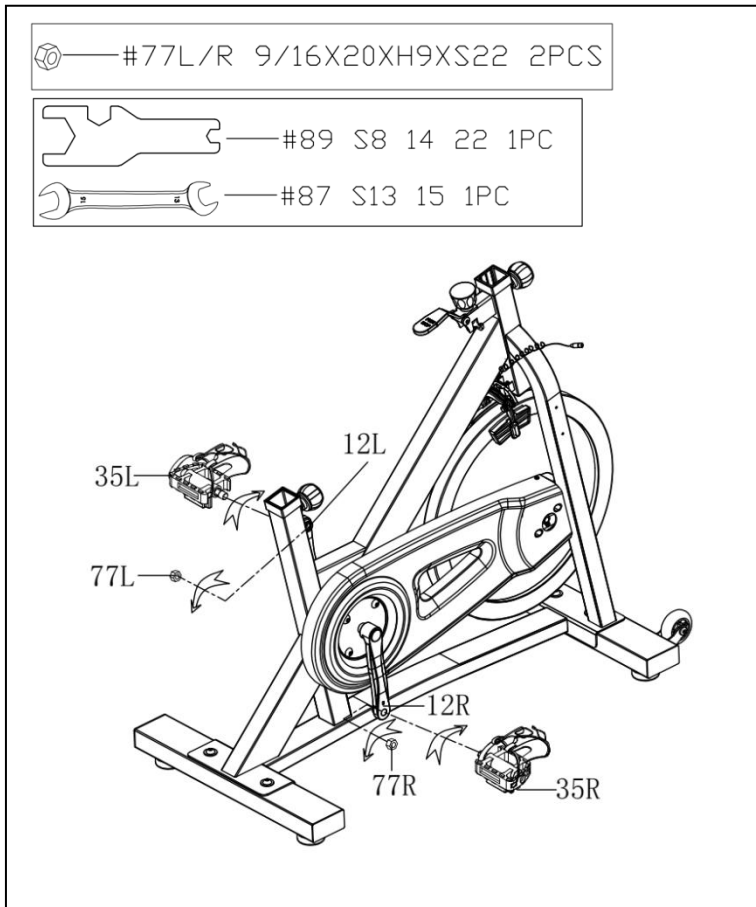

STEP 3:


IMPORTANT! Read instructions carefully, failure to do so may cause permanent damage to your bike.

Remove the **Nylon Nuts (No. 77L/R)** located on the **Pedals (No. 35L/R)** with **Wrench (No. 87)** and **Spanner (No. 89)**. The **Right Nylon Nut (No. 77R)** is **WHITE** on the inside. The **Left Nylon Nut (No. 77L)** is **BLUE** on the inside. **Left Pedal (No. 35L)** is marked "L" on it, **Right Pedal (No. 35R)** is marked "R" on it.

Align the **Left Pedal (No. 35L)** with the **Left Crank (No. 12L)** at 90°. Turn the pedal bolt on the **Left Pedal (No. 35L)** COUNTER-CLOCKWISE as tightly as you can with your hand. Then, use **Wrench (No. 87)** to tighten and secure. Turn the **Left Nylon Nut (No. 77L)** CLOCKWISE as tightly as you can with your hand. Use **Wrench (No. 87)** to hold the pedal bolt on the **Left Pedal (No. 35L)** and use **Spanner (No. 89)** to turn the **Left Nylon Nut (No. 77L)** CLOCKWISE at the same time, until it is tightened onto the **Left Crank (No. 12L)**.

Align the **Right Pedal (No. 35R)** with the **Right Crank (No. 12R)** at 90°. Turn the pedal bolt on **Right Pedal (No. 35R)** CLOCKWISE as tightly as you can with your hand. Then, use **Wrench (No. 87)** to tighten and secure. Turn the **Right Nylon Nut (No. 77R)** COUNTER-CLOCKWISE as tightly as you can with your hand. Use **Wrench (No. 87)** to hold the pedal bolt on the **Right Pedal (No. 35R)** and use **Spanner (No. 89)** to turn **Right Nylon Nut (No. 77R)** COUNTER-CLOCKWISE at the same time, until it is tightened onto the **Right Crank (No. 12R)**.


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

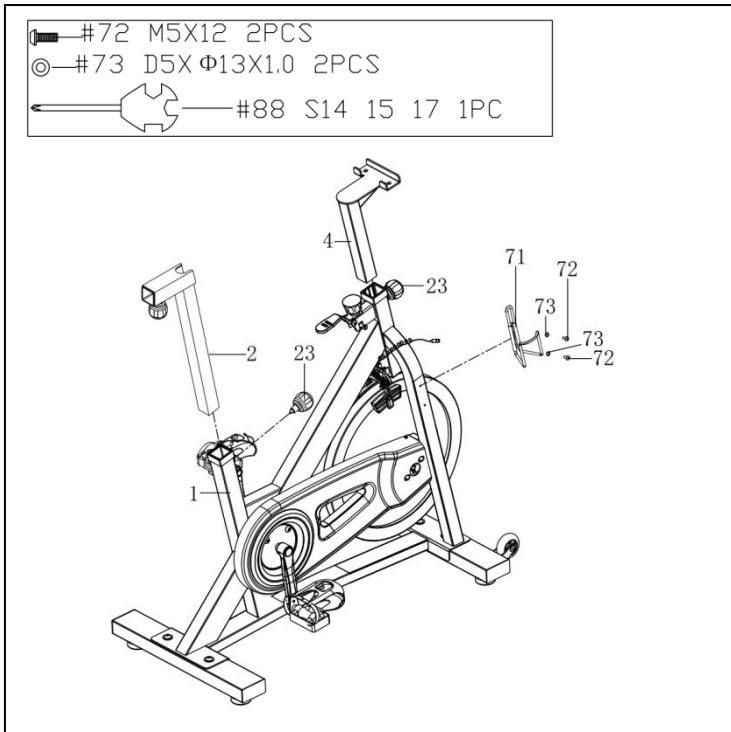

STEP 4:

Loosen and remove 2 **Adjustment Knobs (No. 23)**. Insert the **Seat Post (No. 2)** and **Handlebar Post (No. 4)** into the sleeves located on the **Main Frame (No. 1)**. Adjust the **Seat Post (No. 2)** and **Handlebar Post (No. 4)** to the desired positions. Re-insert and tighten the 2 **Adjustment Knobs (No. 23)** to secure the **Seat Post (No. 2)** and **Handlebar Post (No. 4)** in place.

Remove 2 **Screws (No. 72)** and 2 **Flat Washers (No. 73)** from **Main Frame (No. 1)**. Then attach the **Bottle Holder (No. 71)** to **Main Frame (No. 1)** using the 2 **Screws (No. 72)** and 2 **Flat Washers (No. 73)** that were just removed. Tighten and secure with **Spanner (No. 88)**.

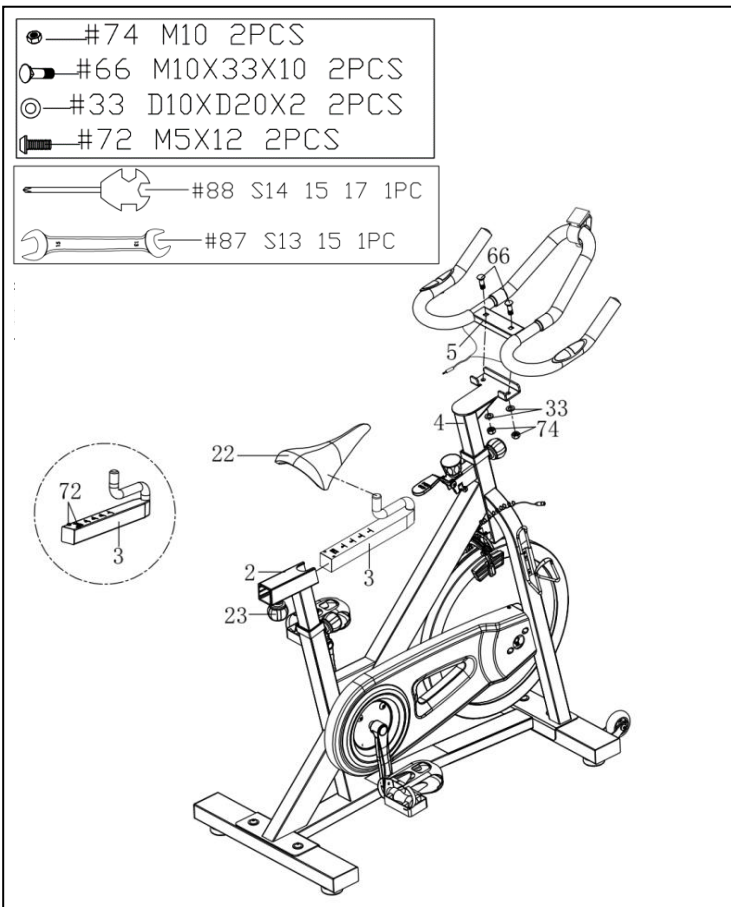

STEP 5

NOTE: In order to properly tighten the seat, it is important to tighten the nut on each side with **Wrench (No. 87)**.


Remove 2 **Screws (No. 72)** from the **Seat Slider (No. 3)** with **Spanner (No. 88)**, then loosen and remove the **Adjustment Knob (No. 23)**. Next, insert the **Seat Slider (No. 3)** into the **Seat Post (No. 2)** and adjust it to the desired position. Re-insert and tighten **Adjustment Knob (No. 23)** to secure the **Seat Slider (No. 3)** in place.

NOTE: Please save the 2 **Screws (No. 72)** for **STEP 6**.

Attach the **Seat (No. 22)** to the **Seat Slider (No. 3)**. Tighten and secure with **Wrench (No. 87)**.

Attach the **Handlebar (No. 5)** to the **Handlebar Post (No. 4)** using 2 **Carriage Bolts (No. 66)**, 2 **Washers (No. 33)** and 2 **Nylon Nuts (No. 74)**. Tighten and secure with **Spanner (No. 88)**.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

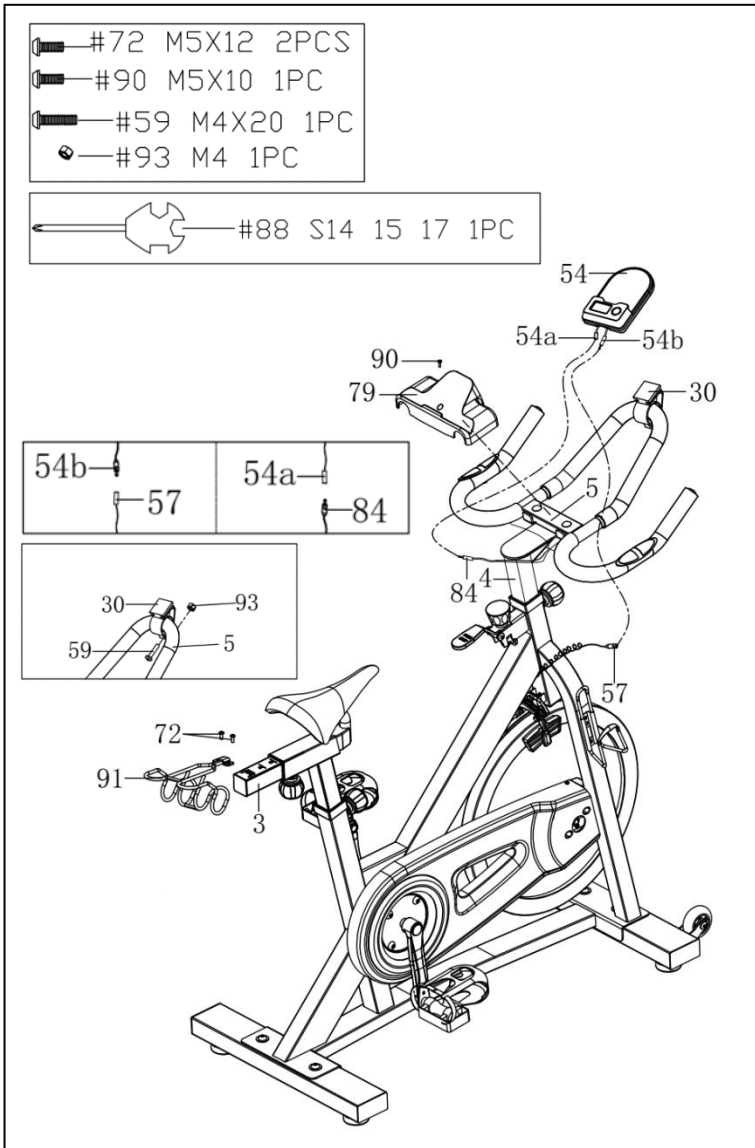

STEP 6:

Remove 1 **Screw (No. 90)** from **Handlebar (No. 5)**. Then attach **Handlebar Cover (No. 79)** to **Handlebar (No. 5)** using the 1 **Screw (No. 90)** that was just removed. Tighten and secure with **Spanner (No. 88)**.





Connect **Pulse Wire (No. 84)** with **Meter Wire A (No. 54a)** and connect **Sensor Wire (No. 57)** with **Meter Wire B (No. 54b)**. Then insert the **Meter (No. 54)** to the **Meter Bracket (No. 30)**.




NOTE: You could adjust the angle for **Meter (No. 54)**. For adjusting, loosen the **Screw (No. 59)** with **Spanner (No. 88)**. Once adjusted, re-tighten the **Screw (No. 59)** with **Spanner (No. 88)**.

Attach the **Dumbbell Rack (No. 91)** to the **Seat Slider (No. 3)** with 2 **Screws (No. 72)** that were just removed on **STEP 5**. Tighten and secure with **Spanner (No. 88)**.

The assembly is complete!

ADJUSTMENT GUIDE

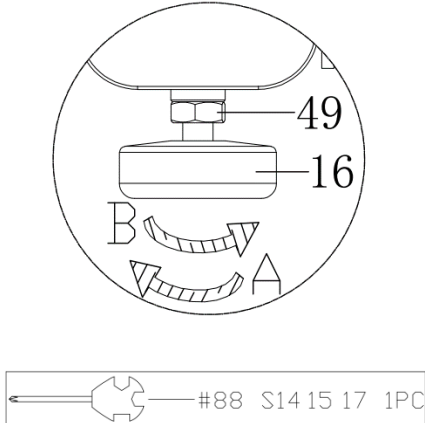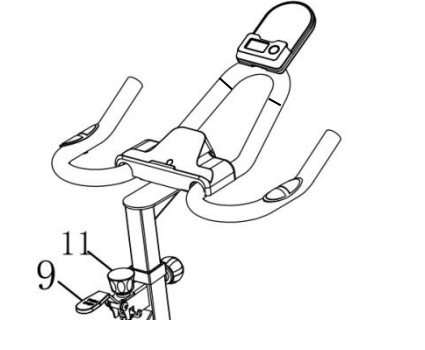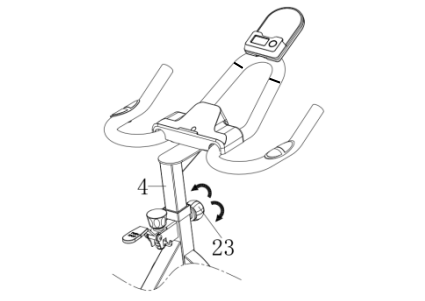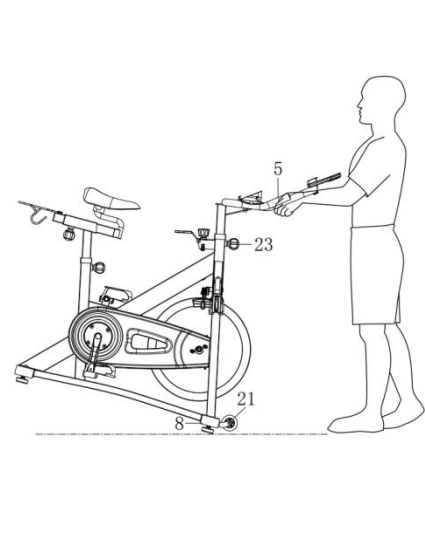	<p>ADJUSTING THE BALANCE:</p> <p>In order to achieve a smooth and comfortable ride during use, you must ensure the stability of the bike. If you notice that the bike is unbalanced, you can adjust the foot pads located beneath the front and rear stabilizers. To do so, use the Spanner (No. 88) to loosen the Hex Nut (No. 49) by turning it <u>CLOCKWISE</u> (direction A). With the Hex Nut (No. 49) loosened, rotate the Foot Pad (No. 16) until it sits level with the surface that the bike is on. When you have finished adjusting the Foot Pad (No. 16), re-tighten the Hex Nut (No. 49) by turning it <u>COUNTER-CLOCKWISE</u> (direction B) using Spanner (No. 88). If required, repeat this process to adjust the remaining Foot Pads (No. 16).</p>
	<p>RESISTANCE AND BRAKING:</p> <p>You may adjust the tension level of the bike by rotating the Tension Knob (No. 11). To increase the level of resistance, rotate the Tension Knob (No. 11) <u>CLOCKWISE</u>. To decrease the level of resistance, rotate the Tension Knob (No. 11) <u>COUNTER-CLOCKWISE</u>.</p> <p>During exercise, you may stop the bike immediately by pushing down on the Brake Lever (No. 9). This is the emergency brake.</p>
	<p>ADJUSTING THE HANDLEBAR:</p> <p>It is important that the handlebar and seat are both set to the correct height of your body. To adjust the handlebar height, loosen and pull the Adjustment Knob (No. 23) outward, then slide the Handlebar Post (No. 4) up or down to the desired height. Once adjusted, re-insert and tighten the Adjustment Knob (No. 23) to secure the Handlebar Post (No. 4) in place.</p>
	<p>TRANSPORTING THE BIKE:</p> <p>To move the bike, first ensure that the Handlebar (No. 5) is properly secured. If the Handlebar (No. 5) is loose, tighten the Adjustment Knob (No. 23) to secure it. Next, stand at the front of the bike so that you're directly in front of the Handlebar (No. 5). Firmly grasp and hold each side of the Handlebar (No. 5), place one foot on the Front Stabilizer (No. 8) and tilt the bike towards you until the Transportation Wheels (No. 21) on the Front Stabilizer (No. 8) touch the ground. With the Transportation Wheels (No. 21) on the ground, you can transport the bike to the desired location with ease.</p> <p>NOTE: When moving the bike, always use caution as unexpected impact, such as dropping the bike, may cause injury and affect the bike's performance.</p>

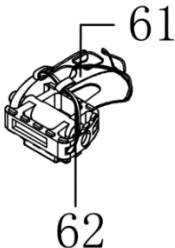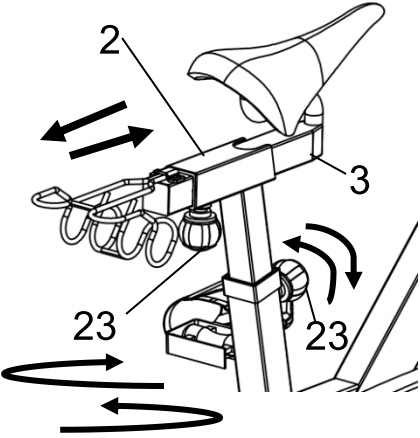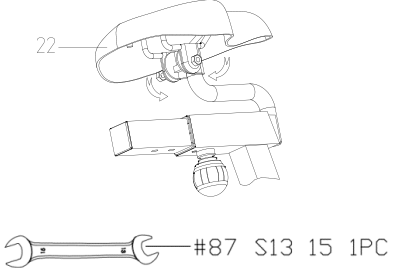
	<p>PEDAL STRAP ADJUSTMENT</p> <p>Your feet should be secured in the toe clips during exercise. Place your feet as far forward into the toeclips as you can. With your feet in place, turn the crank to bring one foot to within arm's reach, grasp the Pedal Belt (No. 62) and pull it upward to tighten the Toeclip Cage (No. 61). Next, insert the Pedal Belt (No. 62) back into the hoop of the toeclip. Repeat this process to secure your other foot.</p>
	<p>ADJUSTING THE SEAT</p> <p>The seat of this bike is fully adjustable as it moves <i>Up, Down, Fore (forward), Aft (backward)</i>.</p> <p>To adjust the height of the Seat Post (No. 2), loosen and pull the [seat post] Adjustment Knob (No. 23) outward, then raise or lower the seat to the desired height. Once adjusted, re-insert and tighten the [seat post] Adjustment Knob (No. 23) to secure the Seat Post (No. 2) in place.</p> <p>To adjust the seat back and forth, loosen and pull [seat slider] Adjustment Knob (No. 23) outward, then slide the Seat Slider (No. 3) to the desired position. Once positioned, re-insert and tighten the [seat slider] Adjustment Knob (No. 23) to secure the Seat Slider (No. 3) tube in place.</p>
 <p>#87 S13 15 1PC</p>	<p>TIGHTENING THE SEAT</p> <p>Please adjust the Hexagon Nuts by using the Wrench (No. 87) if the Seat (No. 22) is loose.</p>
<p>DISMOUNTING</p> <p>For your safety, it is recommended that you never attempt to dismount or remove your feet from the pedals until both the flywheel and pedals/cranks have come to a complete stop. Failure to follow this recommendation may lead to loss of control and/or serious injury.</p> <p>Here are a few examples of how to safely dismount the bike:</p> <ol style="list-style-type: none"> 1. Reduce the pedal speed until the pedals/cranks come to a complete stop. 2. Increase the resistance until the pedals/cranks come to a complete stop. 3. Push and hold the tension control knob down until the pedals/cranks come to a complete stop. 	

MAINTENANCE INSTRUCTIONS

This is general information for daily, weekly, and monthly maintenance to be performed on your bike.

<p>DAILY MAINTENANCE</p> <p>After each exercise session, wipe down all the equipment: seat, frame, and handlebars. Pay special attention to the seat post, handlebar post and belt/chain guard. Sweat is very corrosive and may cause problems that require parts replacement later.</p> <ol style="list-style-type: none"> 1. Get on the bike and engage the drive train. 2. Pay attention to any vibrations felt through the pedals. If you feel any vibrations, you may need to tighten the pedals, bottom bracket, or adjust the drive belt/chain tension. 3. Use a wrench to tighten the pedals until they are secure. 	<p>MONTHLY MAINTENANCE</p> <ol style="list-style-type: none"> 1. Check all hardware is secure, such as: bottle holder, flywheel nuts, belt/chain guard bolts, brake caliper lock nuts and brake caliper tension rod nuts. 2. Inspect the brake tension rod for signs of wear such as missing threads. Clean and lubricate the brake tension rod. 3. Clean and lubricate the seat post, handlebar post and seat slider. Remove any buildup of foreign material.
<p>WEEKLY MAINTENANCE</p> <ol style="list-style-type: none"> 1. Inspect moving parts and tighten the hardware. 2. Inspect pull pin frame fittings, making sure the fittings are snug. Loose frame fittings may strip out threads over time and cause extensive damage. 3. Clean and lubricate pop pin assemblies. Pull on the pin and spray a small amount of lubricant onto the shaft. 4. Tighten the seat hardware, making sure the seat is level and centered. 5. Brush and treat the resistance pads. Remove any foreign material that may have collected on the pads. Spray the pads with silicone lubricant. This helps to reduce noise from friction between the pads and the flywheel. 6. Visually inspect the bottom bracket, toe clips and toe straps. If any of them are loose or disconnected, attach and tighten. 	<p>LEATHER BRAKE PAD CARE (If Applicable)</p> <ol style="list-style-type: none"> 1. Perform this maintenance when the brake pad is first installed and for the life of the brake pad. Following these simple guidelines can increase the life of your brake pads. 2. Some brake pad assemblies are pre-lubricated. Squeeze the brake pad. If lubricant is released, then the pad has been pre-lubricated. 3. If the brake pad is dry, then coat the brake pad with 3-n-1 oil. Brush the leather with a clean, wire bristle brush, and then apply the oil. The oil should be allowed to soak into the pad. Repeat 4-5 times until the pad is saturated, but not dripping with oil. When the pad is saturated, it will no longer absorb oil. 4. Inspect the brake pad weekly and lubricate if needed. The pad should not have a glazed appearance. If the pad appears glazed, then brush it with wire brush and apply lubricant as needed. If any of the sponge padding is showing through the leather pad, the brake pad should be replaced.

BATTERY INSTALLATION & REPLACEMENT

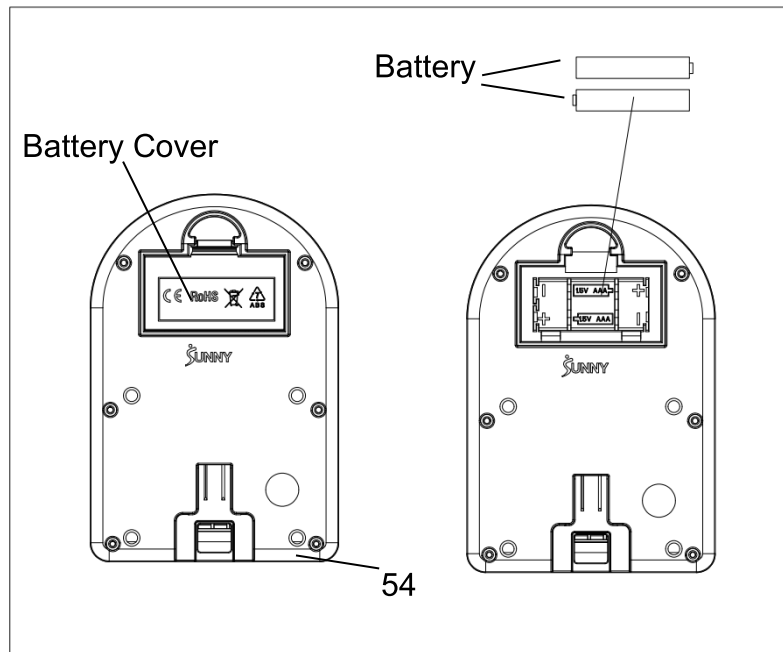

BATTERY INSTALLATION

1. Take out 2 AAA batteries from the computer box.
2. Press the buckle of battery cover on the **Meter (No. 54)**, then remove battery cover.
3. Install 2 AAA batteries into the battery case on the back of the **Meter (No. 54)**. Pay attention to the battery + and – poles before installing.
4. Press the buckle of battery cover, then put the battery cover back to the back of the **Meter (No. 54)**.

The installation is complete!

BATTERY REPLACEMENT

1. Press the buckle of battery cover on the back of the **Meter (No. 54)**, then remove battery cover.
2. Remove the 2 old AAA batteries in the battery case and install 2 new AAA batteries into the battery case on the back of the **Meter (No. 54)**. Pay attention to the battery + and – poles before installing.
3. Press the buckle of battery cover, then put the battery cover back to the back of the **Meter (No. 54)**.

The replacement is complete!

BATTERY DISPOSAL

Dispose the batteries according to the local laws and regulations of your region. Some batteries may be recycled. When disposing or recycling, do not mix battery types.

EXERCISE METER


FUNCTION BUTTONS

MODE:

1. Pressing the MODE key to select and lock on a function.
2. Press and hold the MODE key for 3 seconds to reset all the values to zero, except ODO (TOTAL DISTANCE).

SLEEP MODE:

1. The system turns on when the MODE key is pressed or senses a signal input from the sensor.
2. The system turns off automatically when the sensor has no signal input or no key is pressed for approximately 4 minutes.

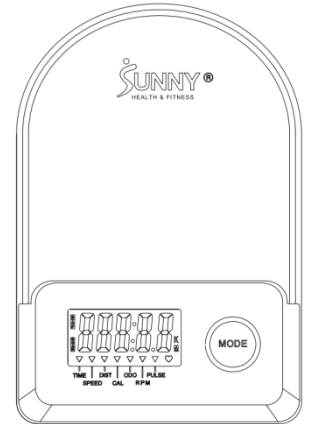

FUNCTIONS:

1. SCAN: Display changes according to the next diagram every 6 seconds in the following sequence: TIME- SPEED- DIST (DISTANCE) - CAL (CALORIES) - ODO (TOTAL DISTANCE) - RPM (CADENCE) - PULSE.
2. SPEED: The current speed from starting exercise.
3. DIST (DISTANCE): The current distance from starting exercise.
4. TIME: The time elapsed from starting exercise.
5. ODO (TOTAL DISTANCE): The total distance which from first inserting batteries.
6. CAL (CALORIES): The calories burned from starting exercise.
7. RPM (CADENCE): The frequency per minute from starting exercise.
8. PULSE: The current heart rate from starting exercise.

NOTE:


1. If the meter display is abnormal, please re-install the batteries and try again.
2. Battery Spec: 1.5V UM-4 or AAA (2PCS).
3. The batteries must be removed from the appliance before it is disposed of safely.

SPECIFICATION	
SCAN	6S
TIME	0:00~99:59 (M:S)
SPD (SPEED)	0.0~999.9 Miles/Hour
DIST (DISTANCE)	0.00~999.9 Miles
ODO (TOTAL DISTANCE)	0.0~999.9 Miles
CAL (CALORIES)	0.0~999.9 Kcal
RPM (CADENCE)	0~299
PULSE	40~240 BPM (Beats per Minute)
BATTERY	SIZE-AAA *2
OPERATING TEMPERATURE	0~40°C (32°F-104°F)
STORAGE TEMPERATURE	-10~60°C (14°F-140°F)


APP CONNECTION:

1. Scan the QR code below to download the SunnyFit app onto your mobile device.




2. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
3. Ensure that the Bluetooth  function is turned on from your mobile device.
4. To connect the equipment to the SunnyFit app:
 - a. From the "Workout" tab, press on the "Search" button to search for your equipment.
 - b. Once your equipment appears on the list, tap the "Select" button to confirm.
 - c. **NOTE:** If your equipment does not appear on the "Searching for Equipment" list, check the EXERCISE METER on your equipment to ensure that it is not in sleep mode and your phone's Bluetooth function is on, then tap "Retry" to search again.
 - d. Once your equipment shows up on the "Workout" tab as "Currently Selected", your equipment is now ready to display, track, and record your equipment's workout stats on the app!
5. If you are unable to replicate these steps, or have any other issues with the SunnyFit app, please contact SunnyFit support at support@sunnyfit.com, or use the in-app "Contact Us" form to request support ("Me" tab -> "Contact Us").

EXPLODED DIAGRAM 1

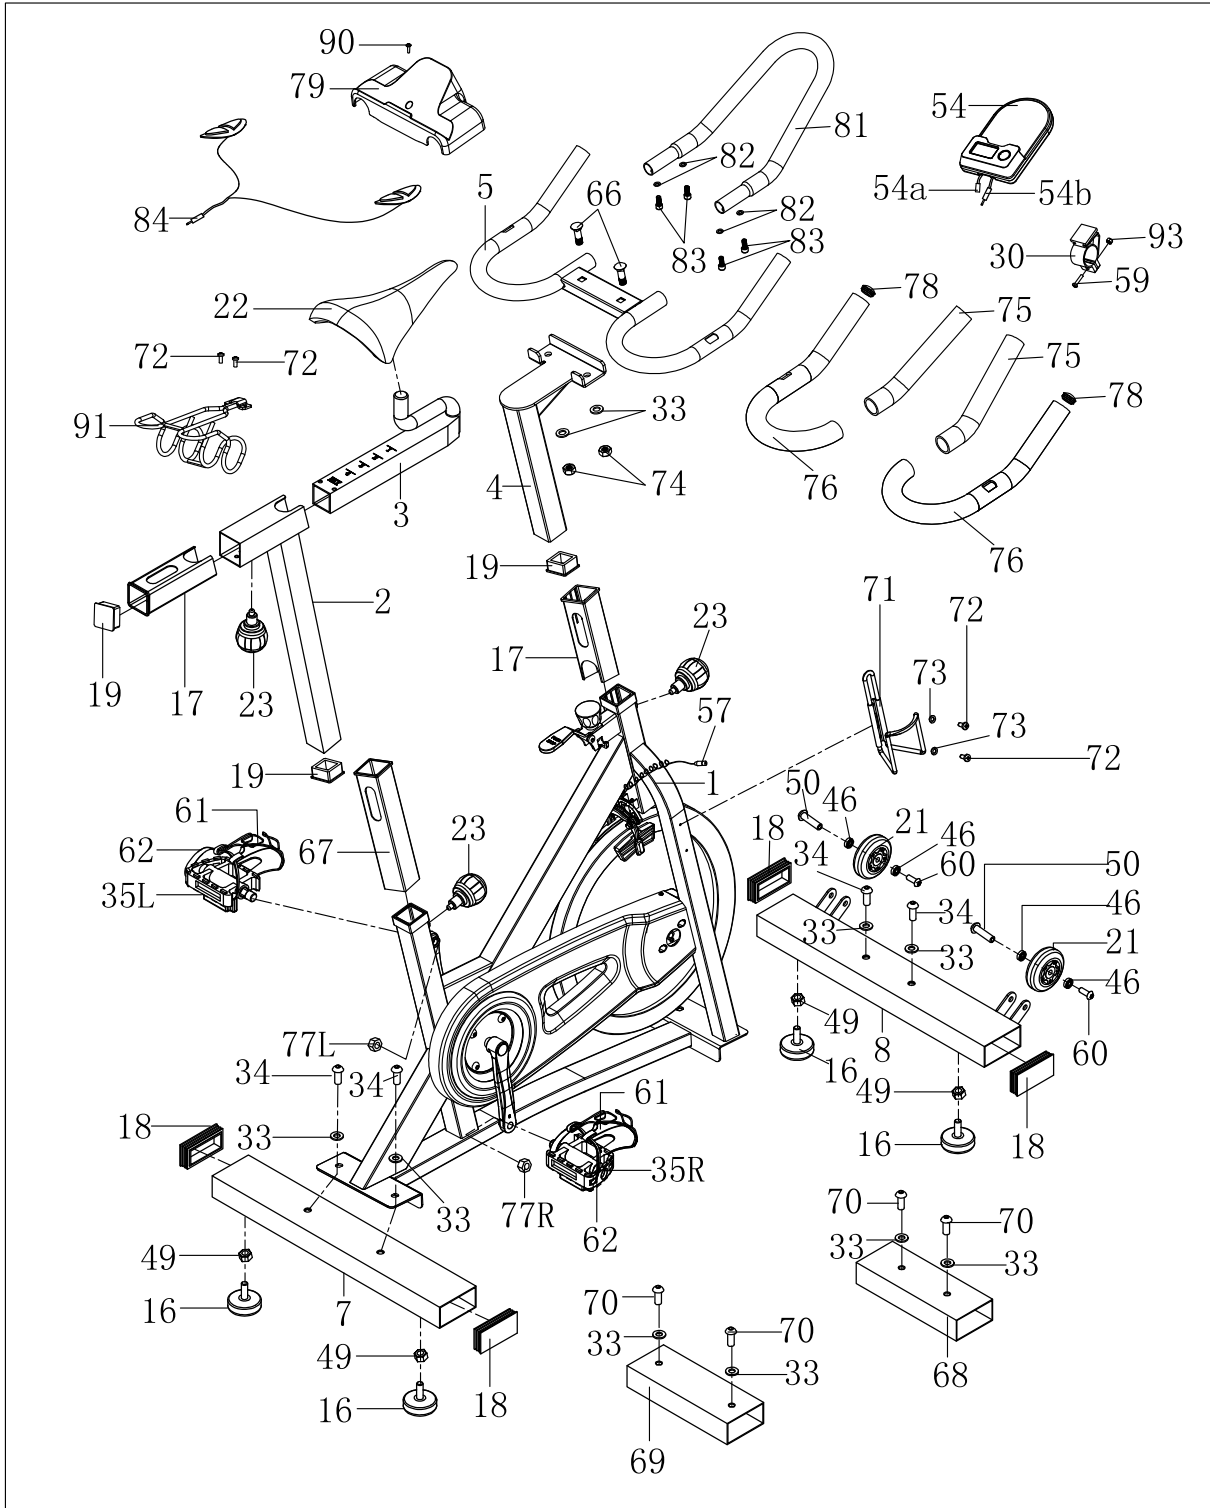

EXPLODED DIAGRAM 2

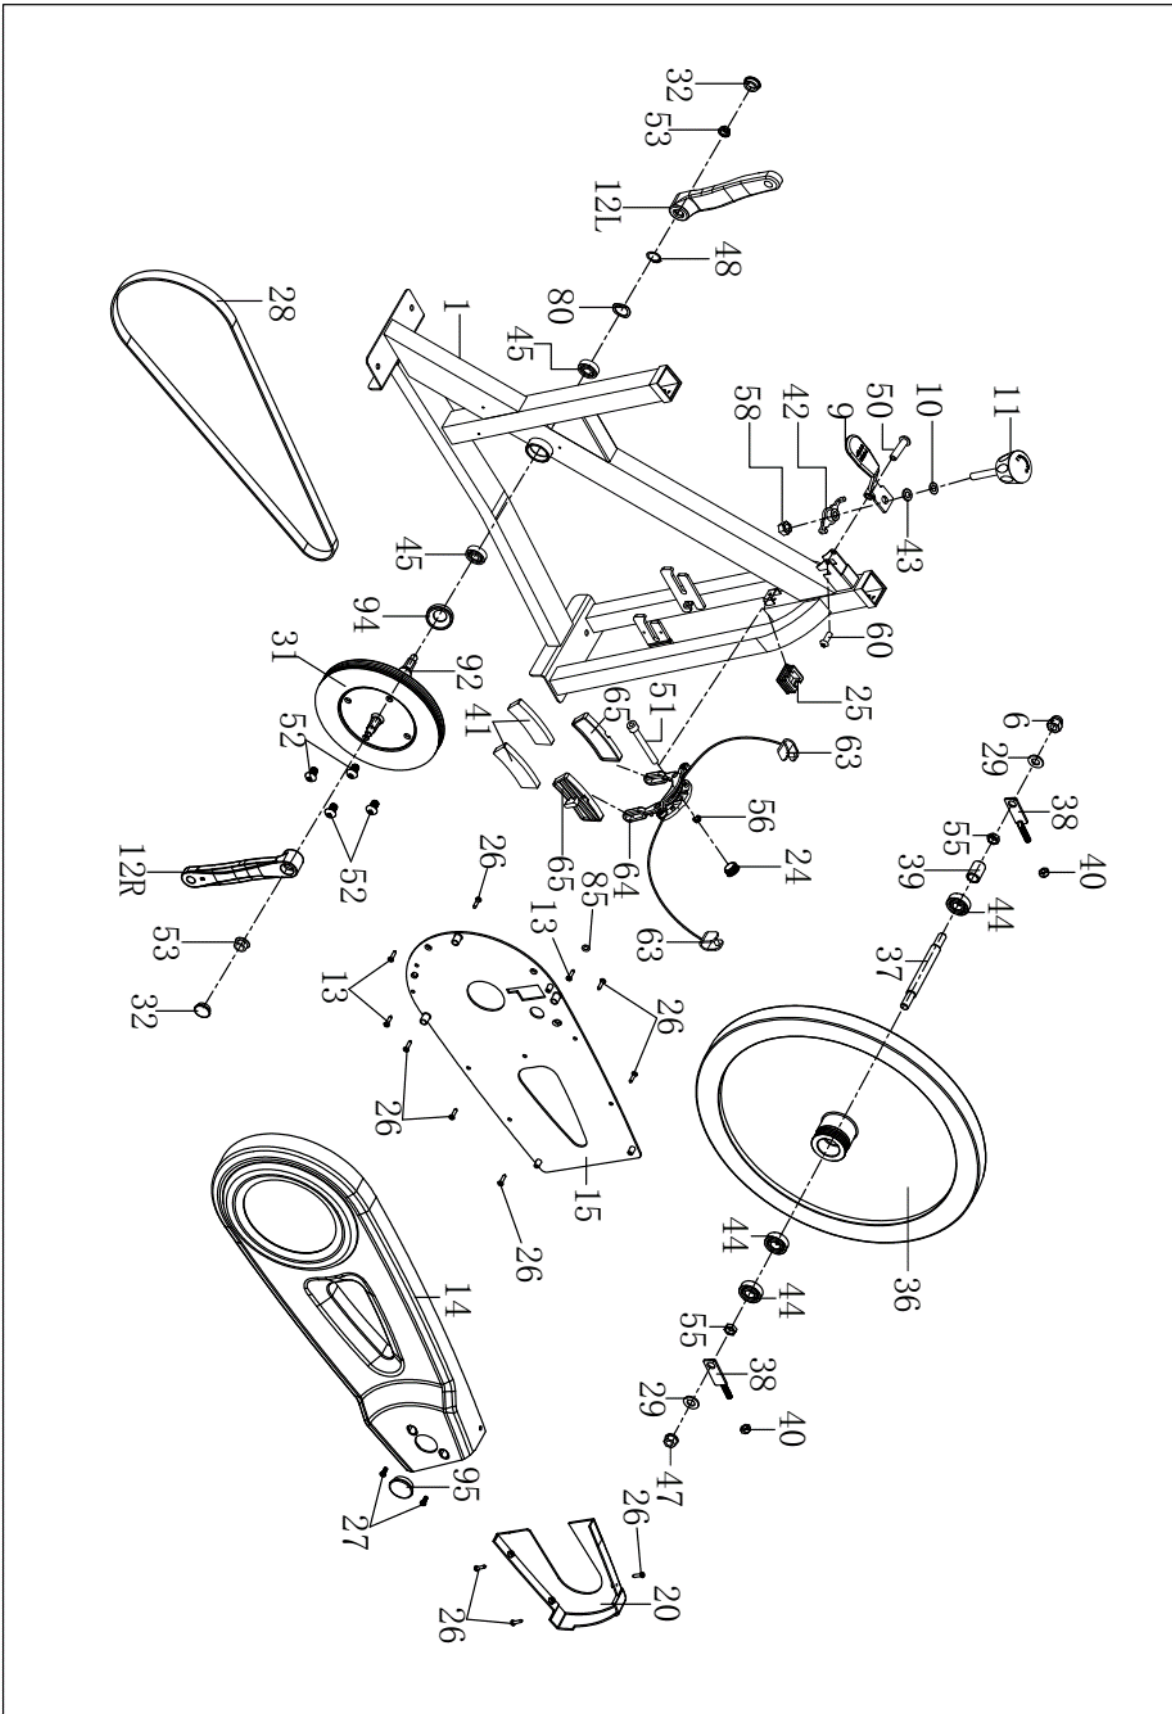

PARTS LIST

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Seat Post		1
3	Seat Slider		1
4	Handlebar Post		1
5	Handlebar		1
6	Cap Nut	M12	1
7	Rear Stabilizer		1
8	Front Stabilizer		1
9	Brake Lever	4X30X152.6	1
10	Washer	D10XΦ25X2	1
11	Tension Knob	M10X60	1
12L/R	Crank	170 "L" "R"9/16	1 pr.
13	Screw	M5X23	3
14	Outer Belt Cover		1
15	Inner Belt Cover		1
16	Foot Pad	Φ52X19	4
17	Bushing	L154	2
18	Square Cap	80X40X1.5	4
19	Square Cap	38X38X1.5	3
20	Front Cover		1
21	Transportation Wheel	Φ72X24	2
22	Seat	KX006	1
23	Adjustment Knob	M16X1.5X18	3
24	Round Cap	Φ20	1
25	Square Cap	45X45X1.5	1
26	Screw	ST4.2X18	9
27	Screw	M5X12	2
28	Belt	520 K5	1
29	Washer	Φ12.5X2XΦ24	2
30	Meter Bracket	20X30X70	1
31	Belt Pulley	Φ204XH20	1
32	Crank Cover	Φ25	2
33	Washer	D10XΦ20X2	10
34	Screw	M10X25XS6	4
35L/R	Pedal	YH-102X	1 pr.
36	Flywheel	Φ460X30	1

No.	Description	Spec.	Qty.
37	Flywheel Spindle	Φ15XM12X1XL162	1
38	Adjustable Belt Bolt	3X20X82	2
39	Sleeve	Φ20XΦ15.1X28	1
40	Nylon Nut	M8	2
41	Wool Felt	10X90X29	2
42	Clamp Brake Holder		1
43	Washer	Φ11XΦ25X4	1
44	Bearing	6202Z	3
45	Bearing	6004-2RS	2
46	Bearing	608ZZ	4
47	Flange Nut	M12X1	1
48	Axle Washer	D20	1
49	Hex Nut	M10XH7XS17	4
50	Screw	Φ7.8X30	3
51	Screw	M6X38XS5	1
52	Screw	M10X16	4
53	Hex Flange Nut	M10X1.25	2
54	Meter	BJHT-087	1
54a	Meter Wire A		1
54b	Meter Wire B		1
55	Hex Thin Nut	M12X1	2
56	Hex Flange Nut	M6XH7XS10	1
57	Sensor Wire	L700	1
58	Nylon Nut	M10XH9XS17	1
59	Screw	M4X20	1
60	Screw	M6X12XS5	3
61	Toeclip Cage		2
62	Pedal Belt		2
63	Brake Cable	L170	2
64	Clamp Brake Assembly	30X82X99	1
65	Brake Pad	10X30X77	2
66	Carriage Bolt	M10X33X10	2
67	Sleeve	L210	1
68	Front Shipping Tube	40X80X220	1
69	Rear Shipping Tube	40X80X220	1
70	Screw	M10X16XS6	4

No.	Description	Spec.	Qty.
71	Bottle Holder		1
72	Screw	M5X12	4
73	Flat Washer	D5XΦ13X1.0	2
74	Nylon Nut	M10	2
75	Foam Grip A	Φ24XΦ30X210	2
76	Foam Grip B	Φ24XΦ30X460	2
77L/R	Nylon Nut	9/16X20XH9XS22	1 pr.
78	End Cap	Φ25X1.5	2
79	Handlebar Cover	222X104X75	1
80	Wave Washer	D20XΦ26.5X0.6	1
81	Middle Handlebar	Φ25X714	1
82	Flat Washer	Φ6XΦ12X1.2	4
83	Screw	M6X12	4

No.	Description	Spec.	Qty.
84	Pulse Wire	L500	1
85	Plastic Washer	Φ30XΦ10.1X3	1
86	Allen Wrench	S6	1
87	Wrench	S13 15	1
88	Spanner	S14 15 17	1
89	Spanner	S8 14 22	1
90	Screw	M5X10	1
91	Dumbbell Rack		1
92	Bottom Bracket Axle	Φ20x184	1
93	Hex Nut	M4	1
94	Spacer	Φ40X9.5	1
95	Cap	Φ41.5X15	1

Version: 1.0

CONNECT
with us

DOWNLOAD

Track your fitness progress & join
FREE workout courses!

Download  **SUNNYFIT** today!



FOLLOW

Find us on social media @sunnyhealthfitness

 @sunnyhealthfitness

 @sunnyhealthandfitness

 @sunnyhealthfit

 /sunnyhealthfitness

 /sunnyhealthfitness

 /sunnyhealthandfitness

www.sunnyhealthfitness.com