




# ELITE INTERACTIVE SERIES EXERCISE ELLIPTICAL SF-E320048 USER MANUAL



**IMPORTANT!** Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US:** [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

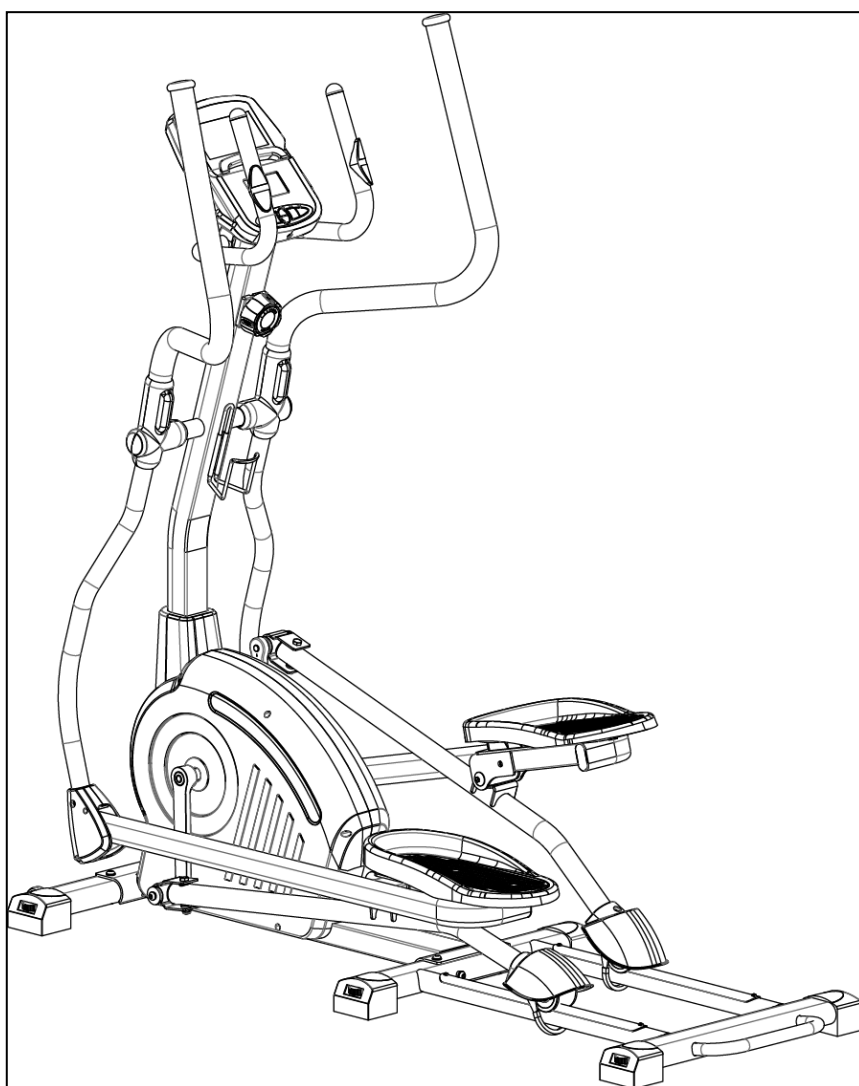

WWW.SUNNYHEALTHFITNESS.COM


# **IMPORTANT SAFETY INFORMATION**

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure, or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 feet (60 CM) of free space all around it.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 275 pounds (125 KG).
10. The equipment is not suitable for therapeutic use.
11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving are required.
12. Your product is intended for use in cool, dry conditions. You should avoid storage in extreme cold, hot, or damp areas as this may lead to corrosion and other related problems.
13. This equipment is designed for indoor and home use only; it is not intended for commercial use.

# PRE-ASSEMBLY CHECK LIST


Before you start to assemble, please make sure all parts are included

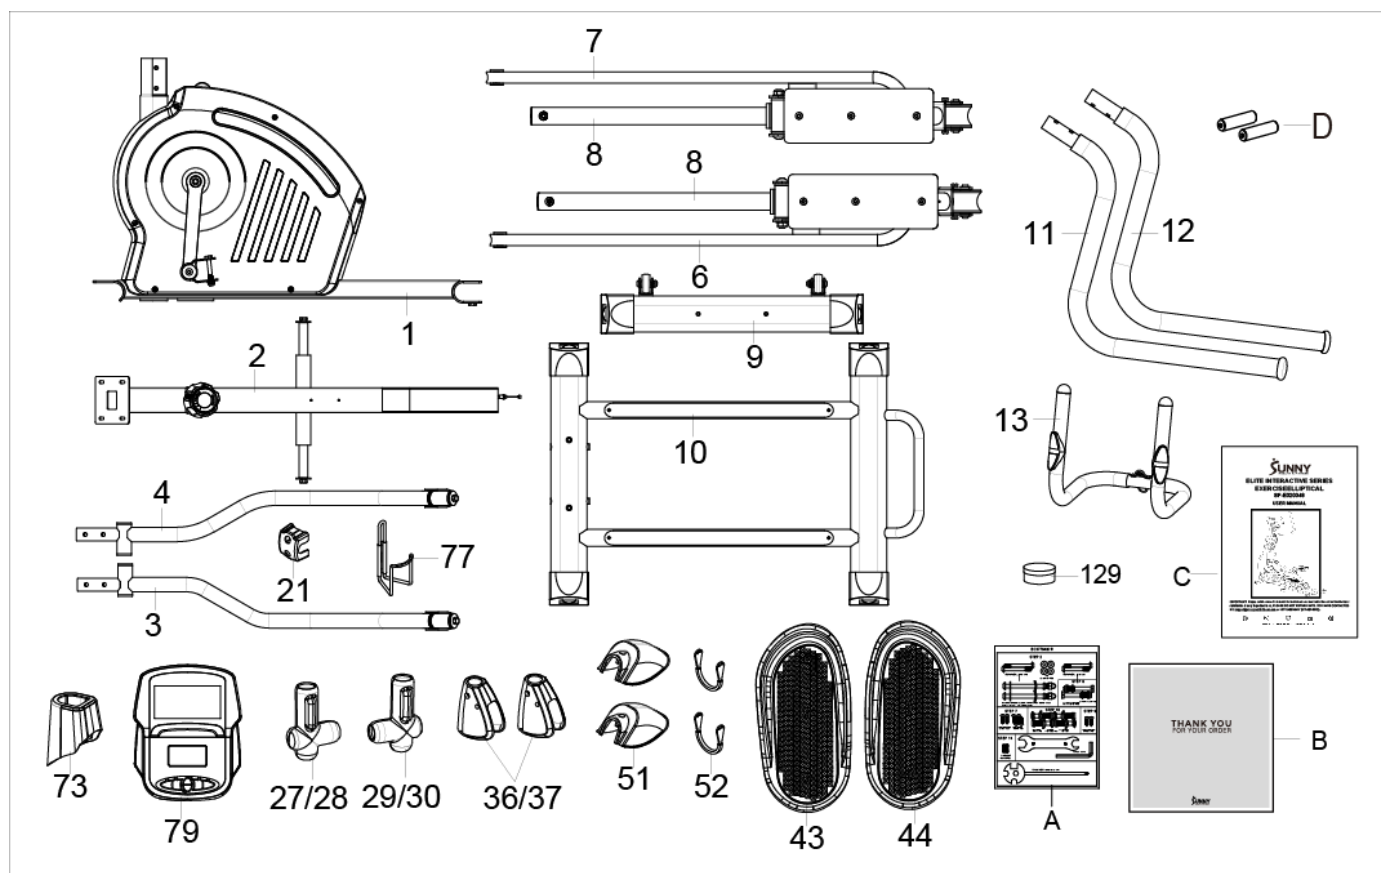

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Front Post		1
3	Left Swing Tube		1
4	Right Swing Tube		1
6/8	Left Foot Tube/ Foot Tube Connect Patch		1SETS
51	Roller Cover		2
9	Front Stabilizer		1
10	Rear Main Frame		1
11	Left Handlebar		1
12	Right Handlebar		1
13	Middle Handlebar		1
21	Clamp Cover		1
27/28	Left Handlebar Cover-A/B		1SETS
D	AA battery		2

No.	Description	Spec.	Qty.
29/30	Right Handlebar Cover-A/B		1SETS
36/37	Left/Right Foot Bar Cover		1SETS
43	Left Pedal		1
44	Right Pedal		1
7/8	Right Foot Tube/ Foot Tube Connect Patch		1SETS
52	Stopper		2
73	Decorative Cover		1
77	Bottle Holder		1
79	Computer		1
129	PTFE Lubricant		1
A	Hardware Package		1
B	Thank You Card		1
C	Manual		1

# HARDWARE PACKAGE

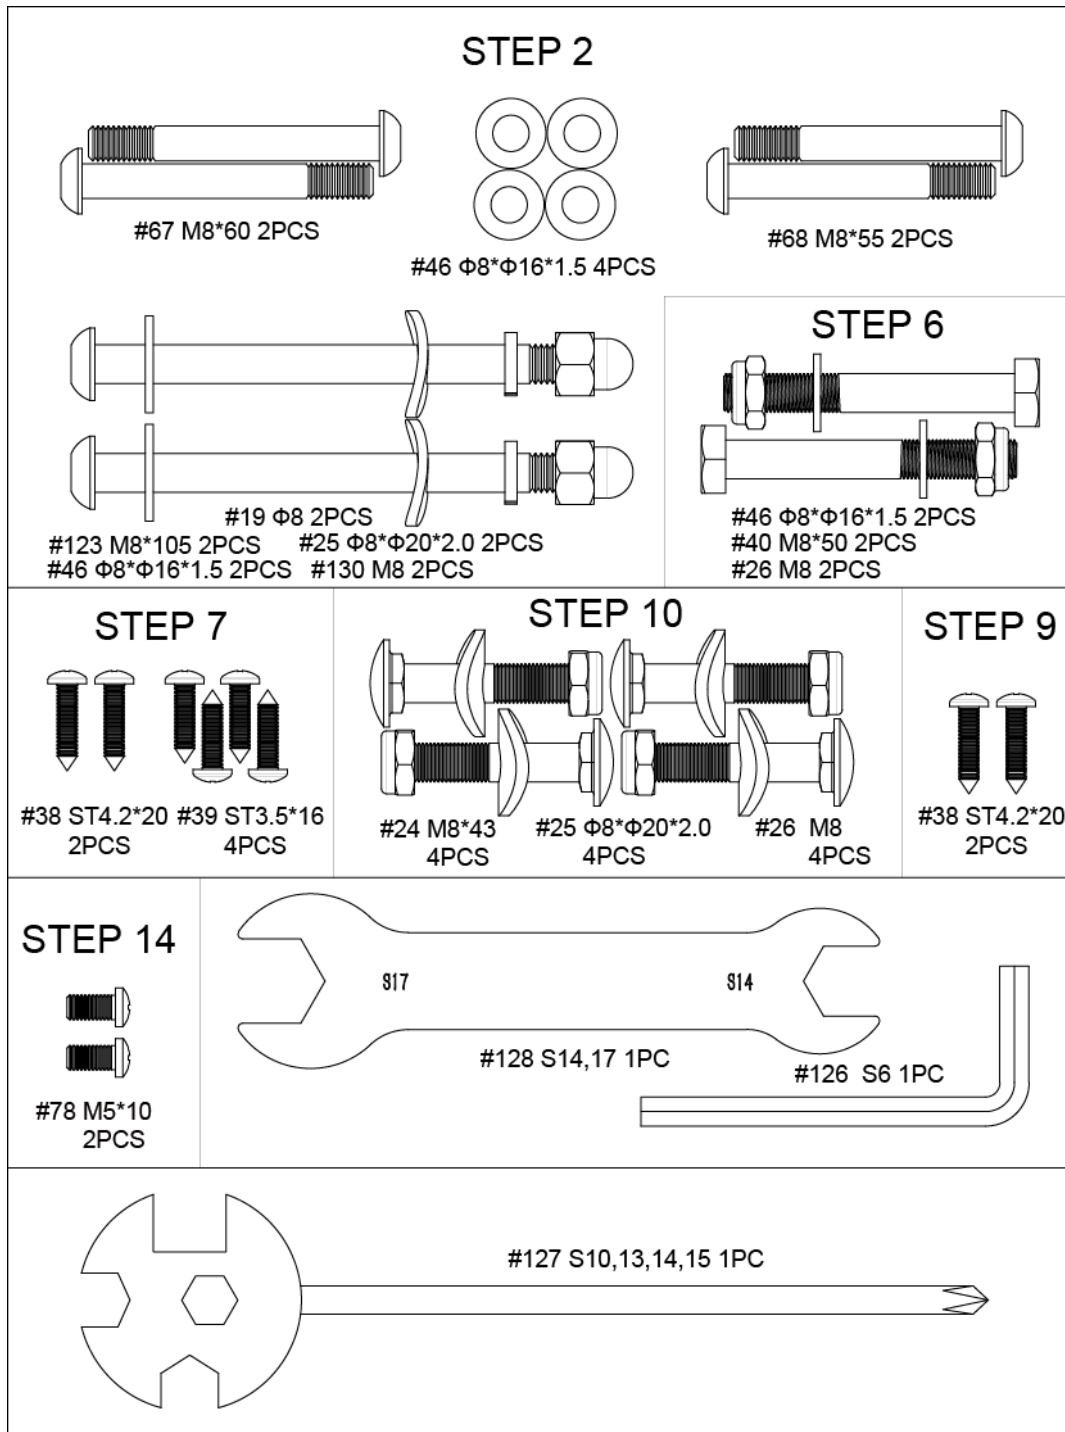

## Ordering Replacement Parts (U.S. and Canadian Customers only)

Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the “EXPLODED DIAGRAM” and “PARTS LIST” (found near the front of the manual)

Please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).


# ASSEMBLY INSTRUCTIONS

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

## STEP 1:

Unscrew 2 **Bolts (No. 67)** from **Main Frame (No. 1)** with **Allen Wrench (No. 126)**. Remove 2 **Plastic Washers (No. 124)** and 1 **Shipping Tube (No. 125)** from **Main Frame (No. 1)**.


You may save these parts 2 **Bolts (No. 67)**, **Plastic Washers (No. 124)**, **Shipping Tube (No. 125)** in case you would like to repackage and transport this equipment in the future.

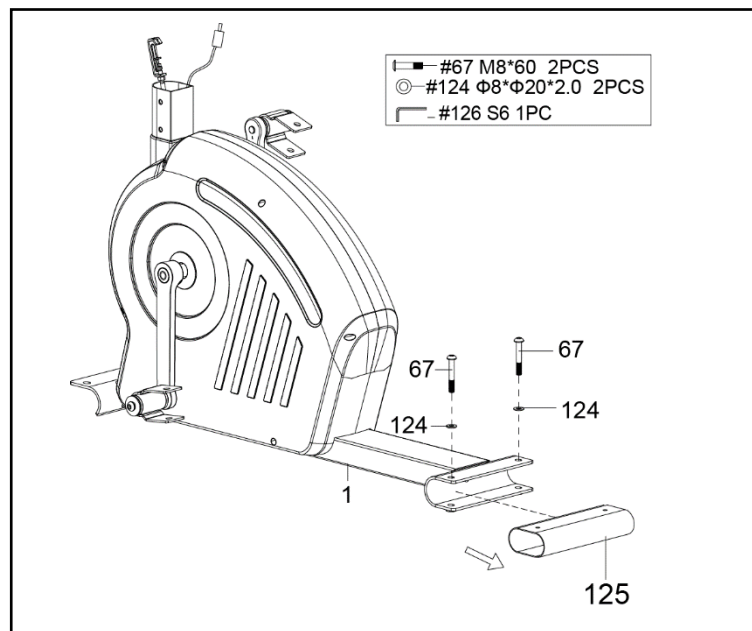


## STEP 2:

Attach the **Front Stabilizer (No. 9)** to the **Main Frame (No. 1)** with 2 **Bolts (No. 68)** and 2 **Washers (No. 46)**. Tighten and secure with **Allen Wrench (No. 126)**.

Attach the **Rear Main Frame (No. 10)** to the **Main Frame (No. 1)** with 2 **Bolts (No. 67)**, 2 **Bolts (No. 123)**, 2 **Spring Washers (No. 19)**, 2 **Big Arc Washers (No. 25)**, 2 **Nuts (No. 130)**, and 4 **Washers (No. 46)**. Tighten and secure with **Allen Wrench (No. 126)** and **Spanner (No. 127)**.

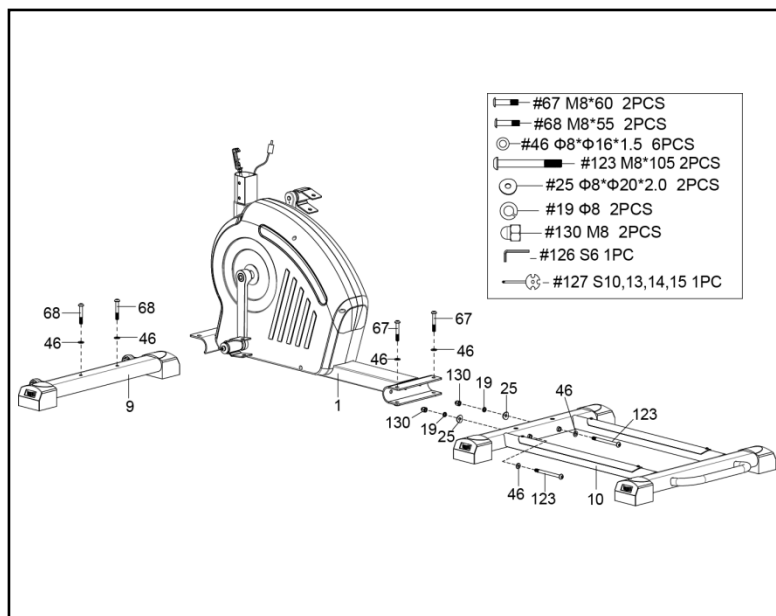

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

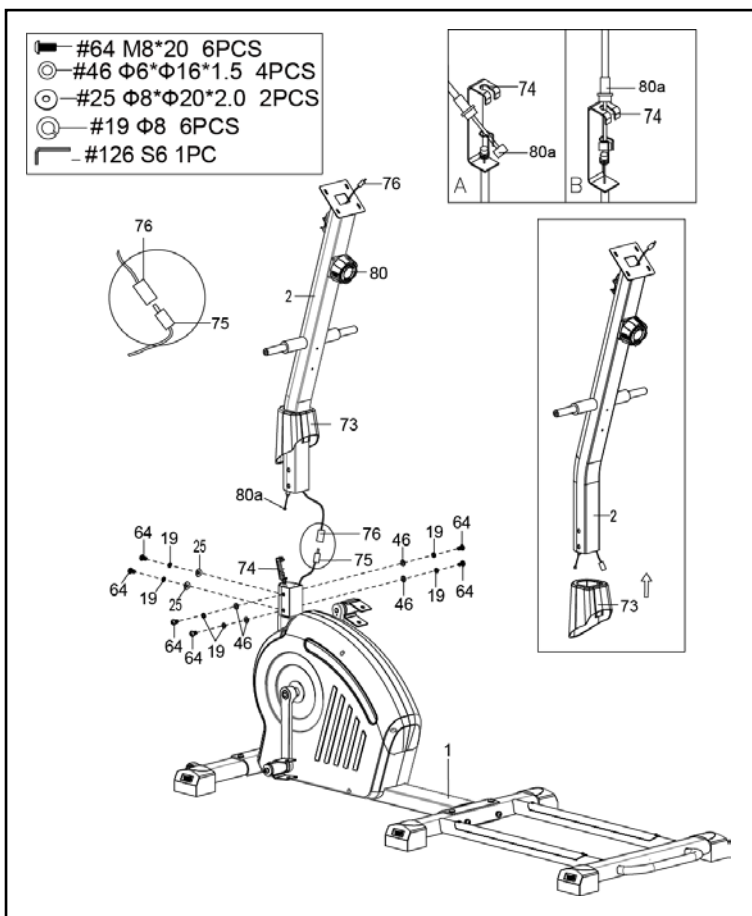

### STEP 3:

Remove 6 **Bolts (No. 64)**, 4 **Washers (No. 46)**, 2 **Big Arc Washers (No. 25)** and 6 **Spring Washers (No. 19)** from the **Main Frame (No. 1)** with **Allen Wrench (No. 126)**.

Attach the **Decorative Cover (No. 73)** into the **Front Post (No. 2)**

**CAUTION:** Please make sure the **Tension Control Knob (No. 80)** is at the lowest resistance level (level 1, all the way to the left) before you connect any wires together.

Attach the **Tension Control Wire (No. 80a)** into the metal bracket of **Tension Wire (No. 74)** as shown in drawing A. Then, pull **Tension Control Wire (No. 80a)** upward and insert it into the slot of metal bracket of **Tension Wire (No. 74)** as shown in drawing B. Make sure the metal fitting on **Tension Control Wire (No. 80a)** is secured in the metal bracket.


Connect the **Extension Sensor Wire (No. 76)** with **Sensor Wire (No. 75)**. Insert the connecting wires into **Front Post (No. 2)**.

Attach the **Front Post (No. 2)** to the **Main Frame (No. 1)** with 6 **Bolts (No. 64)**, 4 **Washers (No. 46)**, 2 **Big Arc Washers (No. 25)** and 6 **Spring Washers (No. 19)** that were removed. Tighten and secure with **Allen Wrench (No. 126)**.

Lower the **Decorative Cover (No. 73)** to fit in the **Main Frame (No. 1)**.

**NOTE:** Be careful not to pinch any wires when attaching **Front Post (No. 2)** to **Main Frame (No. 1)**.


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

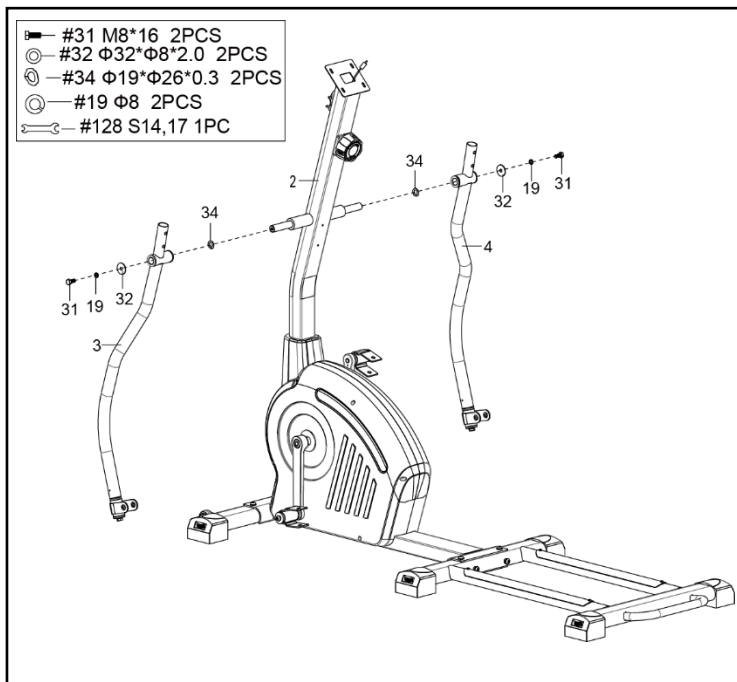

#### STEP 4:

Remove 2 Bolts (No. 31), 2 Spring Washers (No. 19), 2 Big Washers (No. 32), and 2 Wave Washers (No. 34) from the Front Post (No. 2) with Spanner (No. 128).

Attach the Left & Right Swing Tube (No. 3 & No. 4) onto the Front Post (No. 2) with 2 Bolts (No. 31), 2 Spring Washers (No. 19), 2 Big Washers (No. 32), and 2 Wave Washers (No. 34) that were removed. Tighten and secure with Spanner (No. 128).

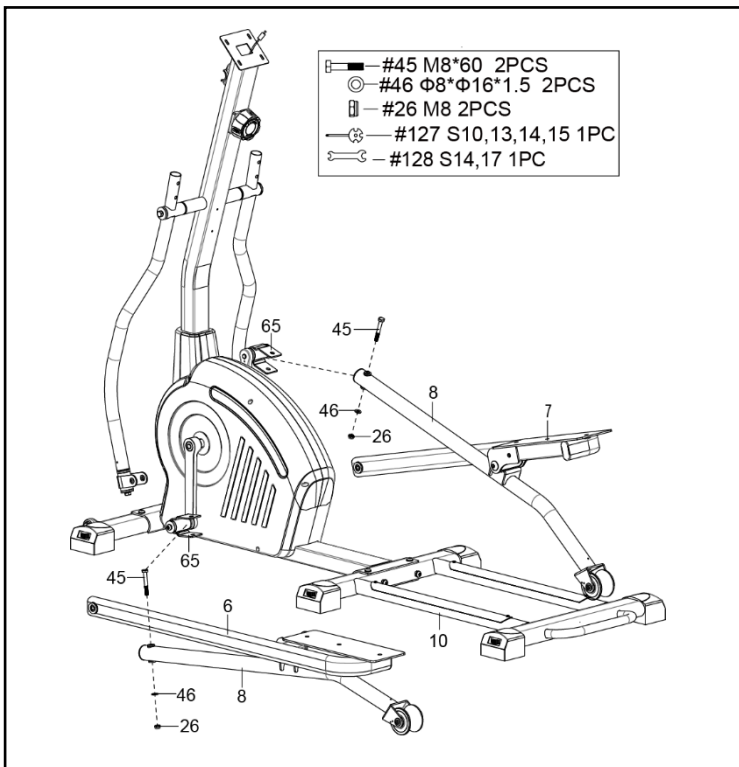


#### STEP 5:

Remove 2 Bolts (No. 45), 2 Washers (No. 46), and 2 Nuts (No. 26) from the 2 U Brackets (No. 65).

Attach the 2 Foot Tube Connect Patches (No. 8) onto the 2 U Brackets (No. 65) with 2 Bolts (No. 45), 2 Washers (No. 46), and 2 Nuts (No. 26) that were removed. Tighten and secure with Spanners (No. 127 & No. 128).




We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

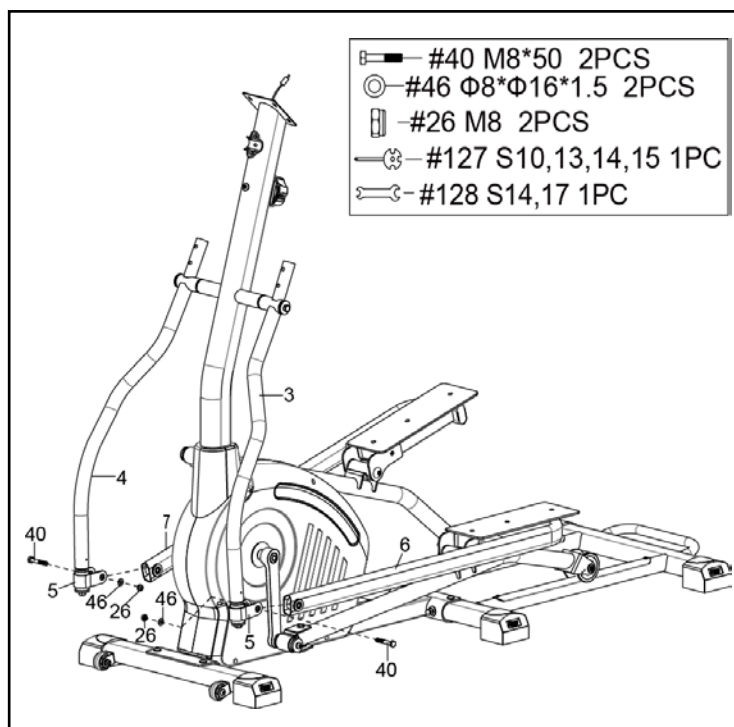

#### STEP 6:

Attach the **Left Foot Bar (No. 6)** to the **Left Swing Tube (No. 3)** with 1 **Bolt (No. 40)**, 1 **Washer (No. 46)** and 1 **Nut (No. 26)**. Tighten and secure with **Spanners (No. 127 & No. 128)**.

Attach the **Right Foot Bar (No. 7)** to the **Right Swing Tube (No. 4)** with 1 **Bolt (No. 40)**, 1 **Washer (No. 46)** and 1 **Nut (No. 26)**. Tighten and secure with **Spanners (No. 127 & No. 128)**.

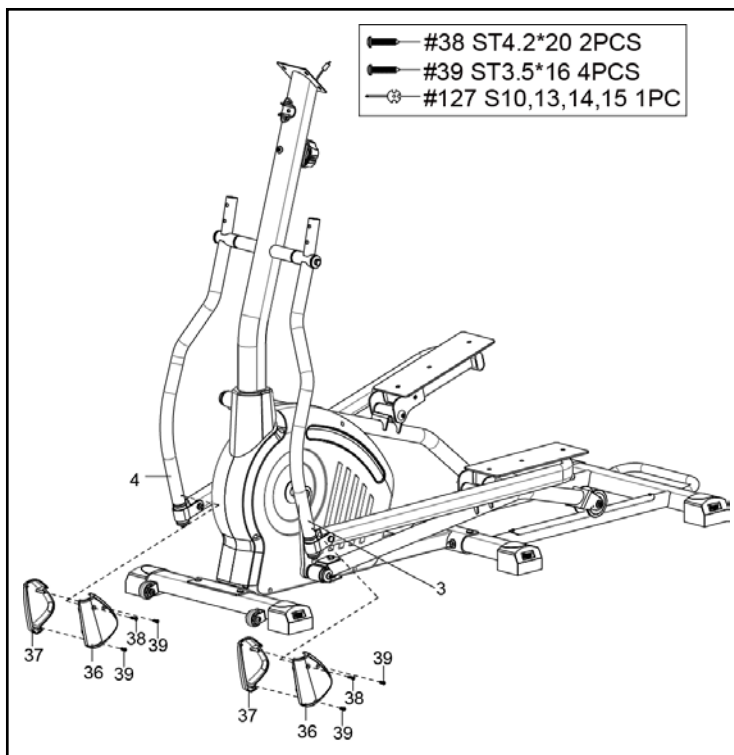

#### STEP 7:

Attach the **Left Foot Bar Covers (No. 36)** and **Right Foot Bar Covers (No. 37)** to the **Left Swing Tube (No. 3)** and **Right Swing Tube (No. 4)** with 2 **Screws (No. 38)** and 4 **Screws (No. 39)**, Tighten and secure with **Spanner (No. 127)**.




We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

## STEP 8:

Remove 8 **Screws (No. 53)** from the ends of 2 **Foot Tube Connect Patches (No. 8)** with **Spanner (No. 127)**.

Hoop 2 **Stoppers (No. 52)** under and around the rods of the **Rear Main Frame (No. 10)**. Then re-attach 2 **Stoppers (No. 52)** to the 2 **Tube Connect Patches (No. 8)** with 8 **Screws (No. 53)** that were removed. Tighten and secure with **Spanner (No. 127)**.

**Note:** Make sure that **Tube Connect Patch (No. 8)** can slide on the **Rear Main Frame (No. 10)** smoothly and securely.

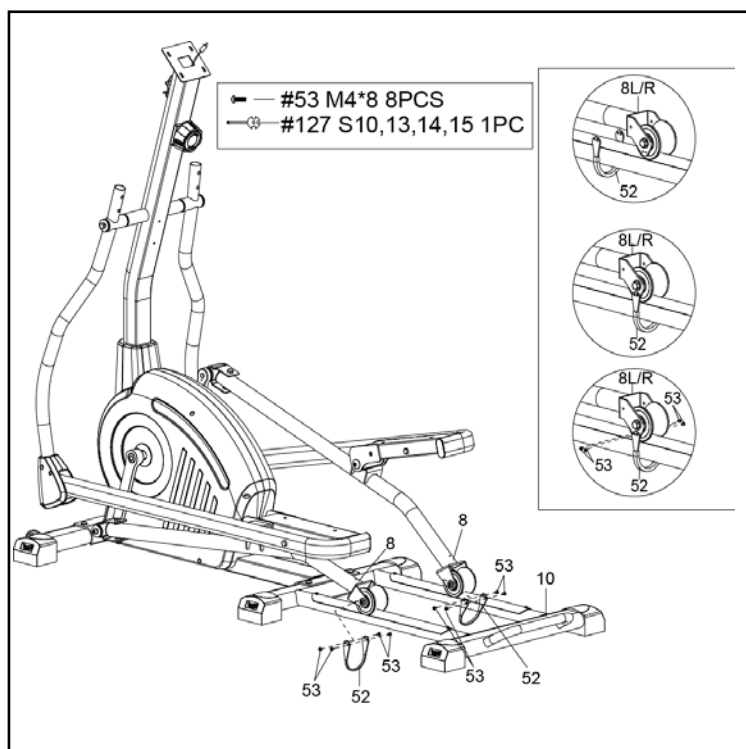


## STEP 9:


Attach 2 **Roller Covers (No. 51)** to 2 **Foot Tube Connect Patches (No. 8)** using 2 **Screws (No. 38)**. Tighten and secure with **Spanner (No. 127)**.

Remove 6 **Bolts (No. 131)** from the **Left & Right Foot Bars (No. 6 & 7)** with **Allen Wrench (No. 126)**.

Attach the **Left & Right Pedals (No. 43 & No. 44)** onto the **Left & Right Foot Bars (No. 6 & 7)** with 6 **Bolts (No. 131)** that were removed. Tighten and secure with **Allen Wrench (No. 126)**.

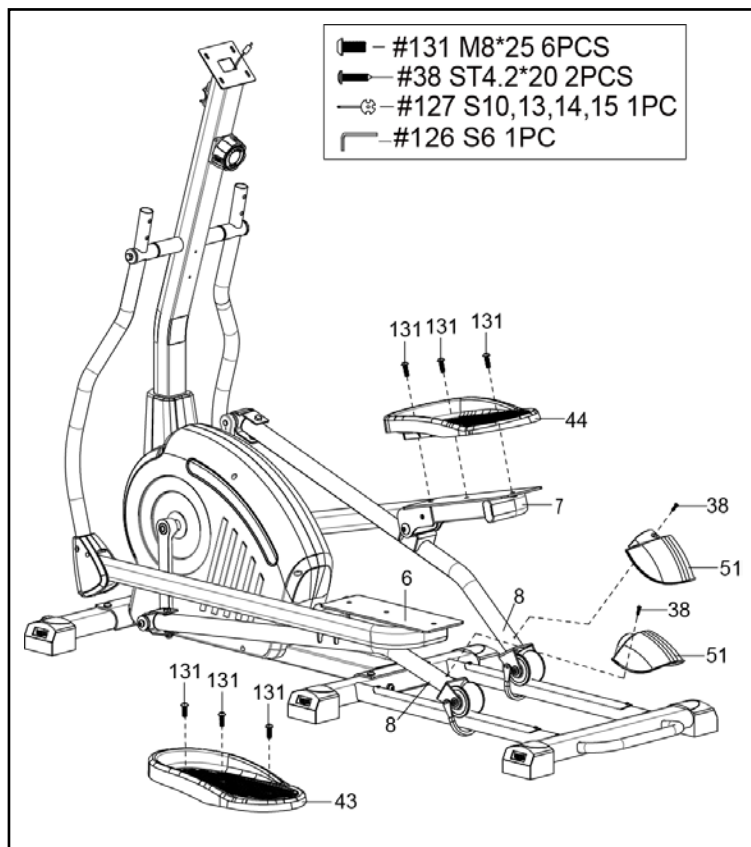


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

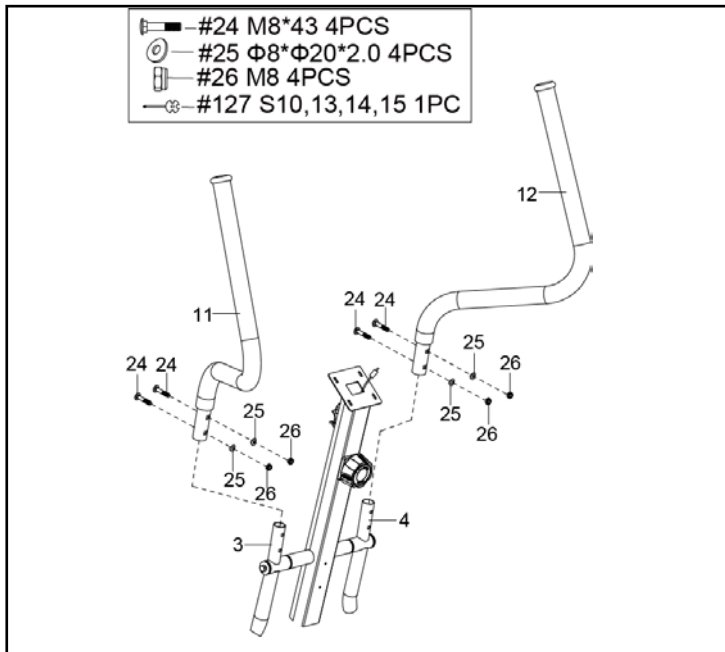

#### STEP 10:

Attach the **Left Handlebar (No. 11)** onto the **Left Swing Tube (No. 3)** with 2 **Bolts (No. 24)**, 2 **Big Arc Washers (No. 25)**, and 2 **Nuts (No. 26)**. Tighten and secure with **Spanner (No. 127)**.


Attach the **Right Handlebar (No. 12)** onto the **Right Swing Tube (No. 4)** with 2 **Bolts (No. 24)**, 2 **Big Arc Washers (No. 25)**, and 2 **Nuts (No. 26)**. Tighten and secure with **Spanner (No. 127)**.

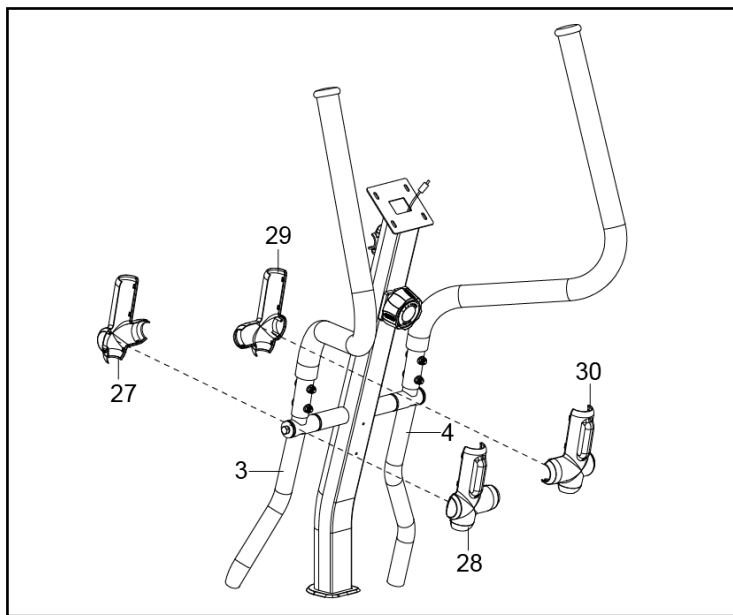

#### STEP 11:

Attach the **Left Handlebar Cover-A (No. 27)** and **Left Handlebar Cover-B (No. 28)** to the **Left Swing Tube (No. 3)** by hand.

Attach the **Right Handlebar Cover-A (No. 29)** and **Right Handlebar Cover-B (No. 30)** to the **Right Swing Tube (No. 4)** by hand.

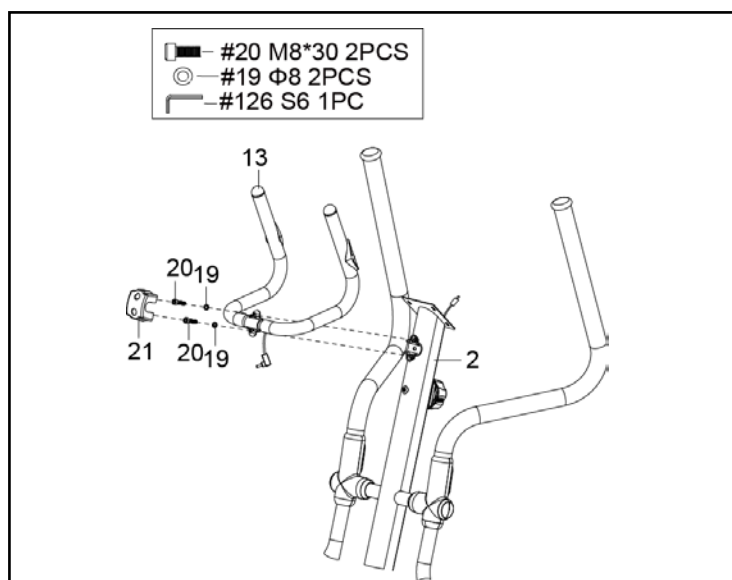

#### STEP 12:

Remove 2 **Bolts (No. 20)** and 2 **Spring Washers (No. 19)** from the **Front Post (No. 2)** with **Allen Wrench (No. 126)**.

Attach the **Middle Handlebar (No. 13)** to the **Front Post (No. 2)** with 2 **Bolts (No. 20)** and 2 **Spring Washers (No. 19)**. Tighten and secure with **Allen Wrench (No. 126)**.

Attach **Clamp Cover (No. 21)** to the **Middle Handlebar (No. 13)** by hand.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).


### STEP 13:

Remove 4 **Screws (No. 78)** from the back of the **Computer (No. 79)** with the **Spanner (No. 127)**.

Connect the **Extension Sensor Wire (No. 76)** with **Computer Wire (No. 79a)**. Then insert them into the **Front Post (No. 2)**.

Insert the **Hand Pulse Sensor Wire (No. 16a)** into the Pulse Input jack on the back of **Computer (No. 79)**.

Attach **Computer (No. 79)** to the top end of the **Front Post (No. 2)** with 4 **Screws (No. 78)** that were removed. Tighten and secure with **Spanner (No. 127)**.

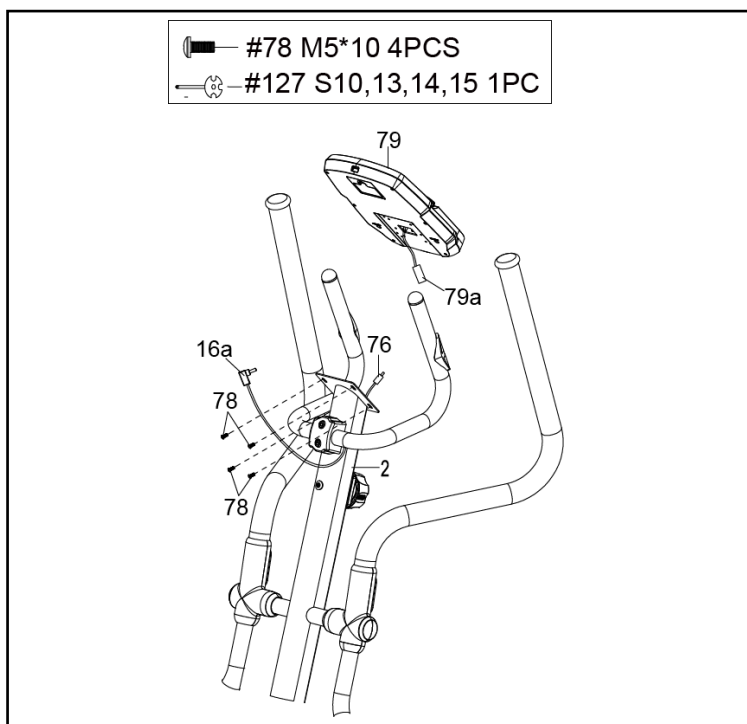


### STEP 14:


Attach **Bottle Holder (No. 77)** to the **Front Post (No. 2)** with 2 **Screws (No. 78)**. Tighten and secure with **Spanner (No. 127)**.

**Note:** Please lubricate the Aluminum Rod with the **PTFE Lubricant (No. 129)** if you feel friction when exercising.

*The assembly is complete!*

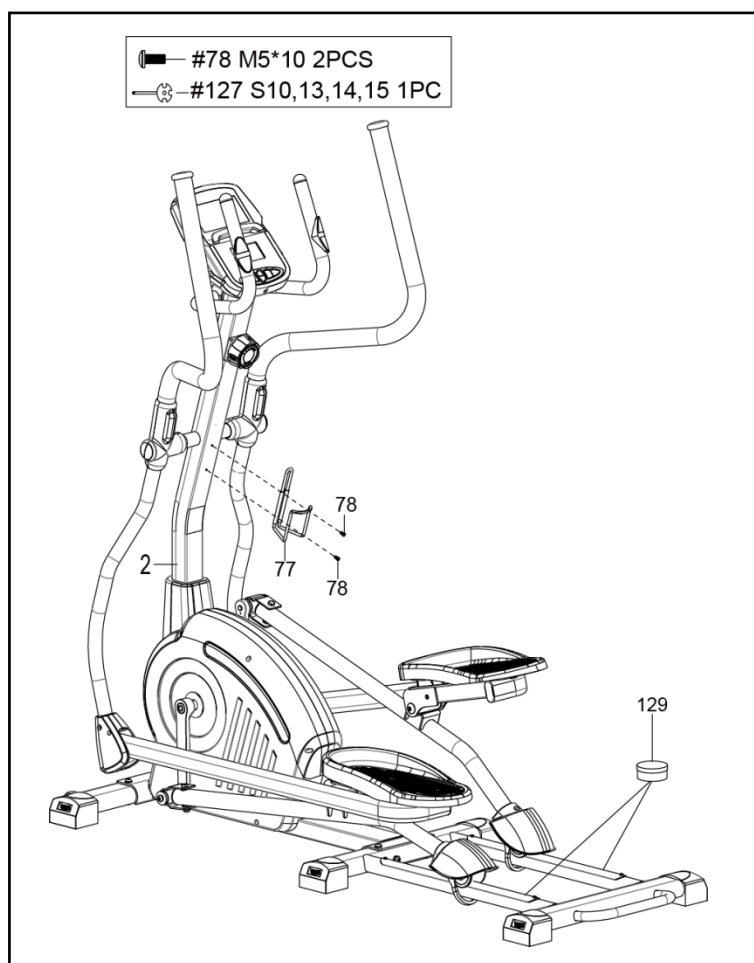


# ADJUSTMENTS GUIDE

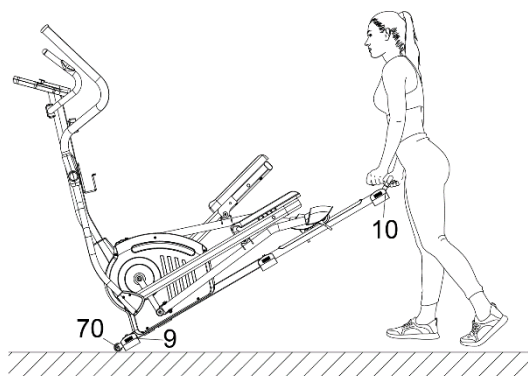


## MOVING THE ELLIPTICAL BIKE

Hold the **Rear Main Frame (No. 10)** and pull upward to lift the rear of the elliptical off the floor until the **Transportation Wheels (No. 70)** on the **Front Stabilizer (No. 9)** touch the ground. Now you can move the elliptical with ease.

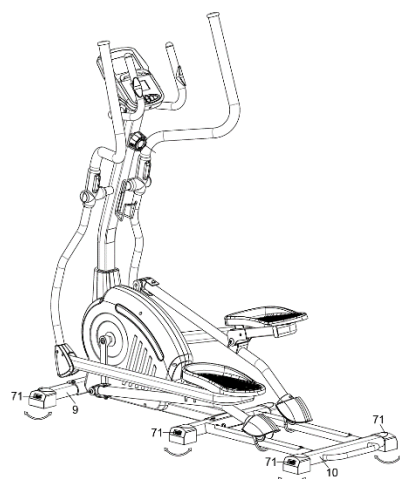

## ADJUSTING THE BALANCE

In order to achieve a smooth and comfortable ride, you must ensure that the elliptical is stabled and secured. If you notice that the elliptical is unbalanced during use, you should adjust the **Adjustable End Caps (No. 71)** located on the **Front Stabilizer (No. 9)** and **Rear Main Frame (No. 10)** until the elliptical becomes levelled with the floor surface.

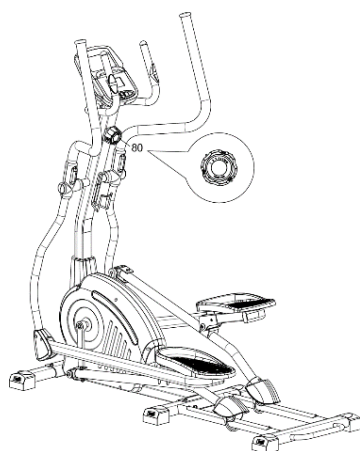

## ADJUSTING THE TENSION

Adjust the tension by rotating the **Tension Control Knob (No. 80)** *clockwise* to increase the level of resistance. Rotate the **Tension Control Knob (No. 80)** *counter-clockwise* to decrease the level of resistance.

Tension levels are set at Level 1 being the lowest and Level 12 being the highest.


## CLEANING

The elliptical can be cleaned with a soft, clean, damp cloth. Do not use abrasives or solvents on plastic parts. Please wipe your perspiration off the elliptical after each use. Be careful not to get excessive moisture on the computer display panel as this might cause electrical hazard or electronics to fail. Please keep the elliptical, especially the computer, out of direct sunlight to prevent screen damage. Please inspect all assembly bolts and pedals on the elliptical for proper tightness every week.

## STORAGE

Store the elliptical in a clean and dry environment, away from children.

# **BATTERY INSTALLATION & REPLACEMENT**

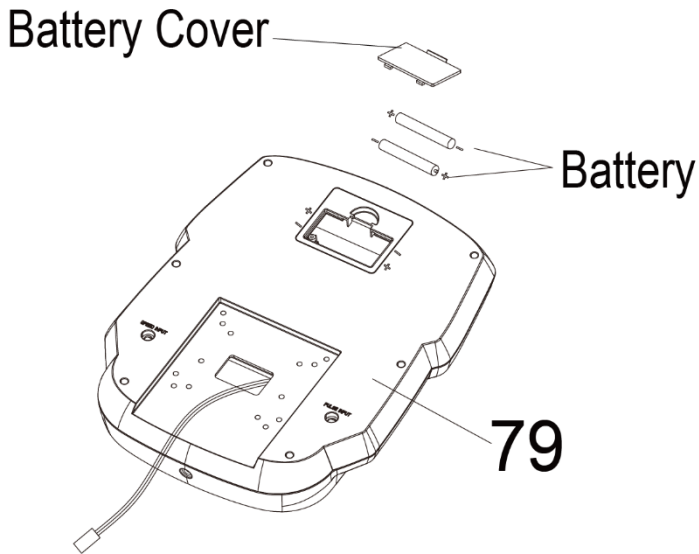

## **BATTERY INSTALLATION**

1. Take out 2 AA batteries from computer box.
2. Press the buckle of battery cover on the **Computer (No. 79)**, then remove battery cover.
3. Install 2 AA batteries into the battery case on the back of the **Computer (No. 79)**. Pay attention to the battery + and – poles before installing.
4. Press the buckle of battery cover, then put the battery cover back to the back of the **Computer (No. 79)**.

*The installation is complete!*

## **BATTERY REPLACEMENT**

1. Press the buckle of battery cover on the back of the **Computer (No. 79)**, then remove battery cover.
2. Remove the 2 old AA batteries in the battery case and install 2 new AA batteries into the battery case on the back of the **Computer (No. 79)**. Pay attention to the battery + and – poles before installing.
3. Press the buckle of battery cover, then put the battery cover back to the back of the **Computer (No. 79)**.

*The replacement is complete!*

## **BATTERY DISPOSAL**

**NOTE:** Always change both batteries at the same time. Do not mix battery types and do not mix old and new batteries. Dispose batteries according to your state and regional guidelines.

# **EXERCISE COMPUTER**



## **FUNCTION BUTTONS**

### **MODE**

1. Press the button to select hour, minute, year, month and date for setting.
2. Press the button to select TIME, DISTANCE, CALORIES and PULSE to preset.
3. Press the button for selection function display on main LCD, or enter after setting.
4. Press the button to confirm setting value of gender, age, height and weight.
5. Press the button and hold for 2 seconds to reset all value to zero.

(When the user replace batteries, all the values will reset to ZERO automatically.)

### **SET**

1. To set up the hour, minute, year, month and date.
2. To set up the target value of Time, Distance, Calories and Pulse. You can hold the button to increase the value fast. (The computer has to be in stop condition.)
3. To set up the personal data of gender, age, height and weight for Body fat test.

### **RESET**

Press the button to reset function value when setting.

(When the user replace batteries, all the values will reset to ZERO automatically.)

### **BODY FAT**

Press this button to enter Body Fat measure function, then press MODE key to enter the setting mode of your personal data of Gender, Age, Height and Weight. After finished setting, press it again to measure your Body fat ration (FAT%) and BMI.

### **RECOVERY**

To act the heart rate recovery function after pulse signal in. Press any button to return to the main display.

## **FUNCTIONS**

### **SCAN**

Automatically scan through each mode in sequence every 6 seconds. The display loop is RPM Speed – Time – Distance – Calorie - Pulse on the main screen.

### **TIME**

Accumulates total time from 00:00 up to 99:59. The user may preset target time by pressing SET & MODE button. Each increase is 1 minute

### **RPM**

Displays the Rotation per Minute (RPM). The RPM and SPEED will switch to another display in every 6 seconds after exercise starts.

### **SPEED**

Displays current training speed. Maximum speed is 99.9 km/h or mile/h.

### **DISTANCE**

Accumulates total distance from 0.00 up to 99.99 km or mile. The user may preset target distance data by pressing SET & MODE button. Each increase setting is 0.5 km or mile.

### **CALORIES**



Accumulates calories consumption during training from 0 to max. 999 calories. The user may also preset the target calorie before training by press SET & MODE button. Each setting increase is 10 cal.

**Note : This data is a rough guide for comparison of different exercise sessions which can not be used in medical treatment.**

## **PULSE**

The monitor will display the user's heart rate in beats per minute during training. You may set the target heart rate by press the SET & MODE button.

## **CALENDAR**

The monitor will display date, month, and year when the monitor is in sleep mode.

## **CLOCK**

The monitor will display current clock time when the monitor is in sleep mode.

## **TEMPERATURE**

Displays current room temperature from 10°C to 60°C when the monitor is in sleep mode.

## **OPERATION ORDER:**

1. **Power on** – Installs 2 pieces of 1.5V UM-3 or AA batteries. The monitor start to segment test with a long beep sound. (Whenever batteries are removed, all the functions values will be reset to zero or default value.)
2. **Set current data** – Press the SET and MODE buttons to set up current clock time, year, month, and date. After the first setting till batteries be replaced next time, those preset data will be updated automatically.
3. **Select and preset target value** – Get access to the setting function of Time, Distance, Calories and Target Pulse. When you are in each setting mode. For instance the Time setting, when the time value is glitter, you can press the SET button to adjust the value. Press the MODE button for confirmation and skip to next setting. The setting of Distance & Calories is the same as Time setting.
4. After entering speed signal, each function of SPEED-RPMTIME-DISTANCE-CALORIES-PULSE will skip to display in every 6 seconds.
5. You can also press the MODE button to select single function display on the main screen except RPM & SPEED. The RPM & SPEED function will switch display in 6 seconds.
6. If you have preset any function target before, the function starts to count down from the target when the training starts. Once the target is achieved, the monitor will beep and the function will count up from zero automatically if the training is still going.
7. **Pulse measurement** – After you hold on two handgrip sensors in a few seconds, the monitor will show up your current heart rate in beats per minute. To ensure the heart rate readout precisely, please do not hold one hand only. You may preset target pulse before training starts. Once your current heart rate is achieved to the target, the value of pulse will beep to remind you.



**8. Recovery** – When the PULSE is working, you can press “RECOVERY” button to start the recovery test function. The monitor will count down from 0:60 second to 0:00 and the heart beat symbol will be glitter till counting down to “0:00”. During 60 seconds counting period, please keep heart rate sensor is attached. Then the screen will display “F1 to F6” to show your recovery status. F1 is the best, and the F6 is the worst. You may keep exercising to improve your heart rate recovery status, and check it by using Recovery function.

**9. Body Fat -**

- a) Press BODY FAT key to enter body fat measurement.
- b) Press MODE and SET buttons to input your personal data. Each personal data available setting area is described as the following:
- c) AGE: 10 ~ 99 years      HEIGHT: 100 ~ 250 cm (or 3'03" ~ 8'02")  
WEIGHT: 10 ~ 200 kg (or 22 ~ 440 lb)
- d) After all personal data have been input, you can press BODY FAT button and hold on grip conductors to start the body fat testing.
- e) It takes few seconds to test the body fat. If you did not hold on the conductor during the testing procedure, the LCD will show the error sign Err after 10 seconds period.
- f) After the testing is finished, you will see fat advice in percentage and BMI figure (body mass Index) display on the main LCD in sequence by scan mode.
- g) BODY FAT % : Calculate from your personal data to show the value from 5%~50%.
- h) BMI : Calculate from your personal data to show the value from 1.0~99.99.
- i) Press any key to return to the main display.


**Note**

- 1. Stop training for 4 minutes, the screen will show up room temperature, clock, and calendar display automatically.
- 2. If the computer displays abnormally, please re-install the battery and try again.
- 3. Battery Spec: 1.5V UM-3 or AA (2PCS).


## APP CONNECTION:

1. Scan the QR code below to download the SunnyFit app onto your mobile device.




2. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
3. Ensure that the Bluetooth  function is turned on from your mobile device.
4. To connect the equipment to the SunnyFit app:
  - a. From the “Workout” tab, press on the “Search” button to search for your equipment.
  - b. Once your equipment appears on the list, tap the “Select” button to confirm.
  - c. Note: If your equipment does not appear on the "Searching for Equipment" list, check the EXERCISE COMPUTER on your equipment to ensure that it is not in sleep mode and your phone's Bluetooth function is on, then tap "Retry" to search again.
  - d. Once your equipment shows up on the “Workout” tab as “Currently Selected”, your equipment is now ready to display, track, and record your equipment's workout stats on the app!
5. If you are unable to replicate these steps, or have any other issues with the SunnyFit app, please contact SunnyFit support at [support@sunnyfit.com](mailto:support@sunnyfit.com), or use the in-app “Contact Us” form to request support (“Me” tab -> “Contact Us”).

# EXPLODED DIAGRAM 1

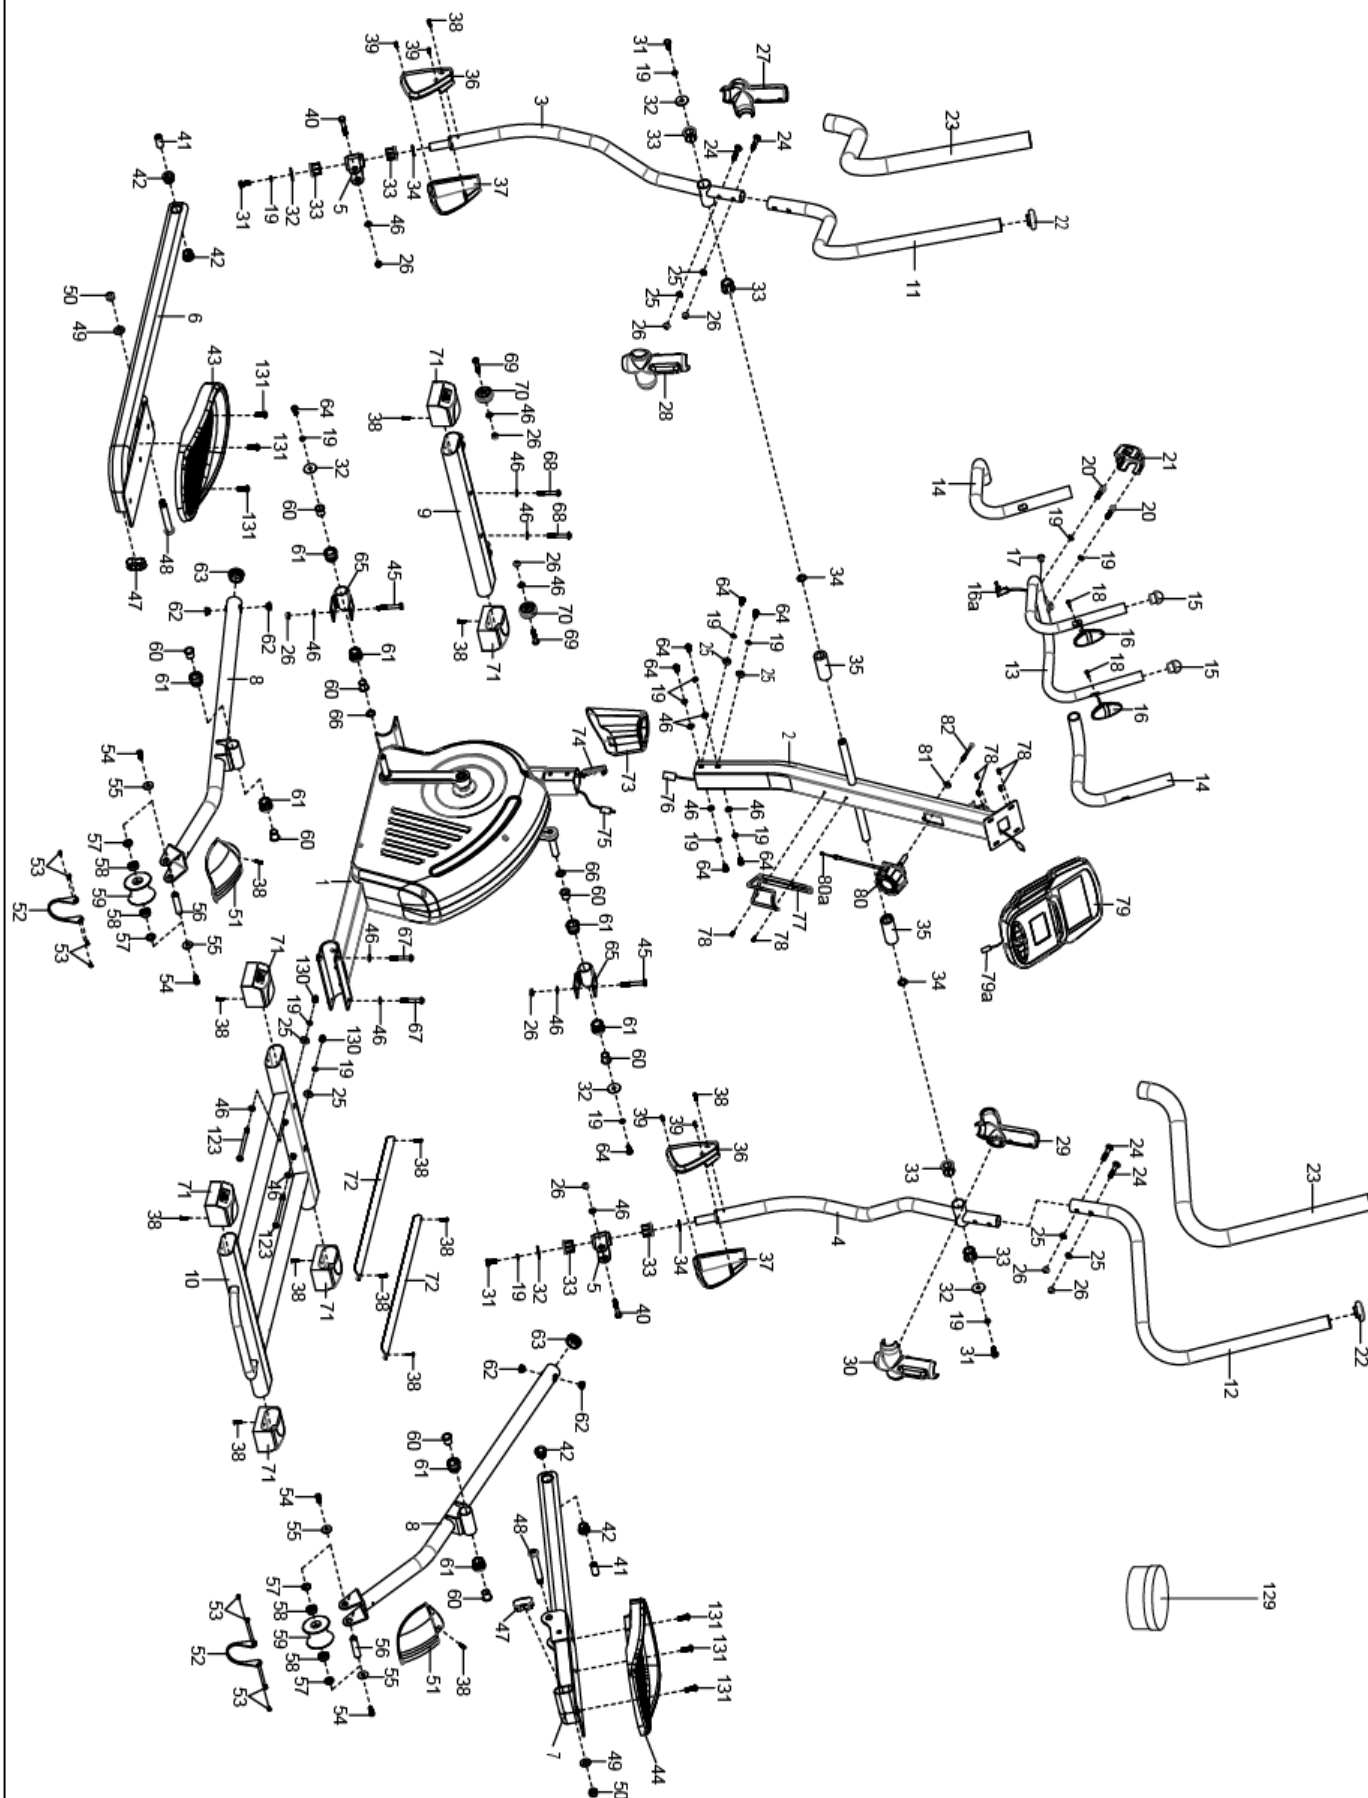

# EXPLODED DIAGRAM 2

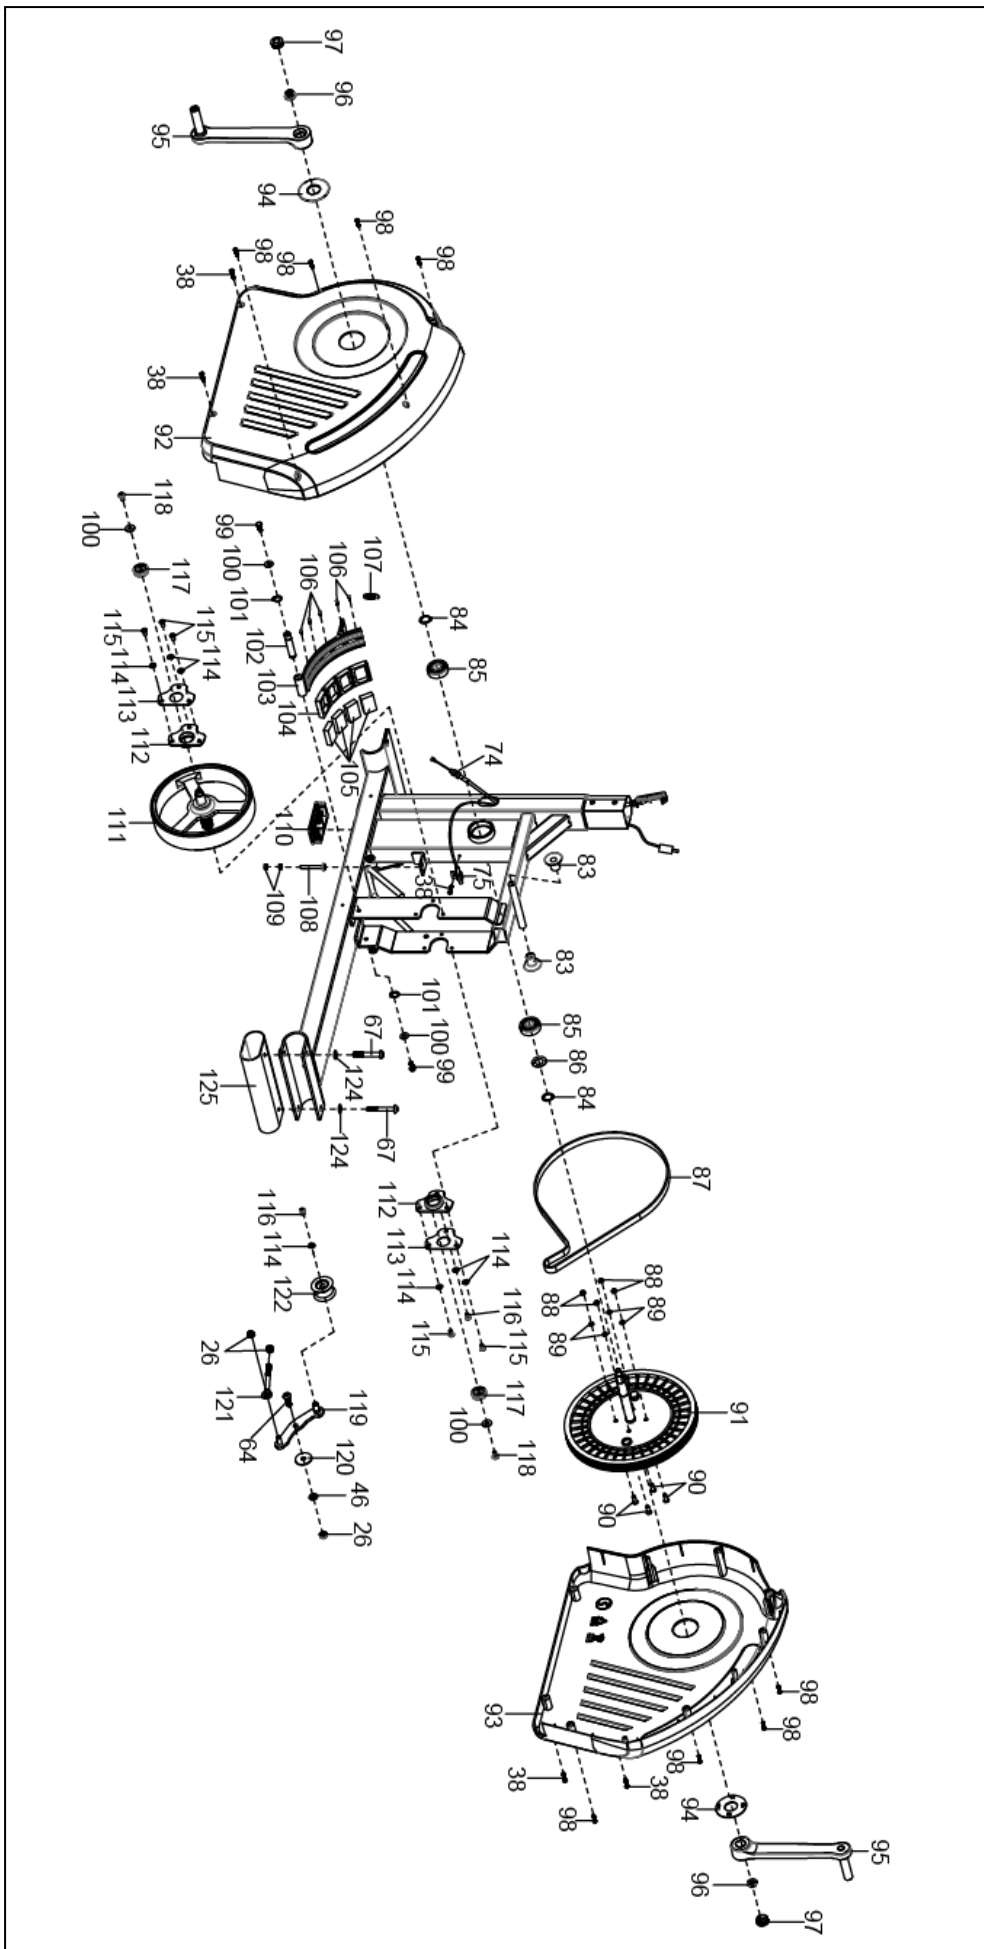

# PARTS LIST

No.	Description	Spec.	Qty
1	Main Frame		1
2	Front Post		1
3	Left Swing Tube		1
4	Right Swing Tube		1
5	Rotating Sleeve Tube		2
6	Left Foot Bar		1
7	Right Foot Bar		1
8	Foot Tube Connect Patch		2
9	Front Stabilizer		1
10	Rear Main Frame		1
11	Left Handlebar		1
12	Right Handlebar		1
13	Middle Handlebar		1
14	Foam Grip	Φ24*Φ30*500	2
15	End Cap for Handlebar		2
16	Hand Pulse Sensor	L=850mm	2
16a	Hand Pulse Sensor Wire		1
17	Plug	Φ12.1	1
18	Screw	ST4.2*20	2
19	Spring Washer	Φ8	16
20	Bolt	M8*30	2
21	Clamp Cover		1
22	Cap	Φ32	2
23	Foam Grip	Φ31*Φ41*920	2
24	Bolt	M8*43	4
25	Big Arc Washer	Φ8*Φ20*2.0	8
26	Nut	M8	13
27	Left Handlebar Cover-A		1
28	Left Handlebar Cover-B		1
29	Right Handlebar Cover-A		1
30	Right Handlebar Cover-B		1
31	Bolt	M8*16	4

No.	Description	Spec.	Qty
32	Big Washer	Φ32*Φ8*2.0	6
33	Shaft Sleeve	Φ32*3.5*24*Φ19	8
34	Wave Washer	Φ19*Φ26*0.3	4
35	Bushing	Φ31.8*Φ19.2*75	2
36	Left Foot Bar Cover		2
37	Right Foot Bar Cover		2
38	Screw	ST4.2*20	19
39	Screw	ST3.5*16	4
40	Bolt	M8*50	2
41	Connecting Shaft	Φ16*32	2
42	Shaft Sleeve		4
43	Left Pedal		1
44	Right Pedal		1
45	Bolt	M8*60	2
46	Washer	Φ8*Φ16*1.5	17
47	Cap		2
48	Bolt	Φ16*88	2
49	Washer	φ24*φ12.5*2	2
50	Nut	M12	2
51	Roller Cover		2
52	Stopper		2
53	Screw	M4*8	8
54	Bolt	M8*20	4
55	Washer	Φ8*Φ20*2.0	4
56	Roller Connecting Shaft	Φ15*61.5	2
57	Roller Spacing	Φ22*2	4
58	Bearing	6202	4
59	Pulley	Φ70*Φ29*50	2
60	Shaft Sleeve	Φ23.5*20	8
61	Plastic Bushing	Φ32*21	8
62	Connecting Rod Small Bushing	Φ18*Φ8*10	4
63	Cap	Φ38	2

No.	Description	Spec.	Qty
64	Bolt	M8*20	9
65	U Bracket		2
66	Wave Spring Washer	Φ16*Φ21*0.3	2
67	Bolt	M8*60	4
68	Bolt	M8*55	2
69	Bolt	M8*40	2
70	Transportation Wheel	Φ42*22*Φ8.2	2
71	Adjustable End Cap		6
72	Aluminum Bar	490*31.6*2.3	2
73	Decorative Cover		1
74	Tension Wire	L=1000mm	1
75	Sensor Wire	L=750mm	1
76	Extension Sensor Wire	L=1100mm	1
77	Bottle Holder		1
78	Screw	M5*10	6
79	Computer		1
79a	Computer Wire		1
80	Tension Control Knob	L=680MM	1
80a	Tension Control Wire		1
81	Big Arc Washer	Φ5*Φ18*1.0	1
82	Bolt	M5*55	1
83	Cover Limit Column		2
84	C-clip	Φ20*1	2
85	Bearing	6004ZZ	2
86	Wave Washer	Φ20*Φ24*0.3	1
87	Belt	PJ400	1
88	Nut	M6 S10	4
89	Spring Washer	Φ6	4
90	Bolt	M6*15	4
91	Belt Pulley	Φ260	1
92	Left Belt Cover		1
93	Right Belt Cover		1
94	Crank Cover		2
95	Crank		2
96	Nut	M12*1.25	2

No.	Description	Spec.	Qty
97	Crank Cap		2
98	Screw	ST4.2*25	8
99	Bolt	M6*15 L15 S10	2
100	Washer	Φ6*Φ16*1.2	4
101	Shaft Snap Ring	Φ12*1.0	2
102	Magnetic Plate Axle		1
103	Magnetic Bracket		1
104	Magnet Seat		1
105	Magnet	40*25*10	4
106	Screw	ST2.9*9	5
107	Spring	Φ15*50*Φ1.5	1
108	Bolt	M6*45	1
109	Nut	M6	2
110	End Cap		1
111	Flywheel	Φ240	1
112	Bearing Seat		2
113	Bearing End Cover		2
114	Washer	Φ6*Φ12*1.0	7
115	Bolt	M6*12	5
116	Bolt	M6*10	2
117	Bearing	6001	2
118	Bolt	M6*12	2
119	Idler Wheel Shaft		1
120	PC Pad		1
121	Bolt	M8*85	1
122	Idler Wheel		1
123	Bolt	M8*105	2
124	Plastic Washer	Φ8*Φ20*2.0	2
125	Shipping Tube		1
126	Allen Wrench	S6	1
127	Spanner	S10,13,14,15	1
128	Spanner	S14,17	1
129	PTFE Lubricant		1
130	Nut	M8	2
131	Bolt	M8*25	6

## CONNECT WITH US

FOR FITNESS  
ARTICLES, VIDEOS  
& WORKOUTS



@SUNNYHEALTHANDFITNESS



@SUNNYHEALTHFITNESS



@SUNNYHEALTHFIT



/SUNNYHEALTHFITNESS



/SUNNYHEALTHANDFITNESS

[WWW.SUNNYHEALTHFITNESS.COM](http://WWW.SUNNYHEALTHFITNESS.COM)