


# SMART MAGNETIC ELLIPTICAL SF-E905 SMART USER MANUAL



**IMPORTANT!** Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US**: support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).



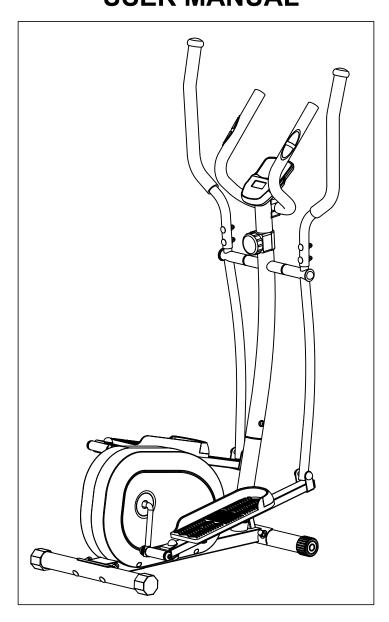










# IMPORTANT SAFETY INFORMATION

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

- 1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk, or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
- 2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
- Keep children and pets away from the equipment. The equipment is designed for adult use only.
- 4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 feet (60 cm) of free space all around it.
- 5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
- 6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
- 7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
- 8. Do not place fingers or objects into the moving parts of the equipment.
- 9. The maximum weight capacity of this unit is 220 lbs (100 kgs).
- 10. The equipment is not suitable for therapeutic use.
- 11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving is required.
- 12. Your product is intended for use in cool, dry conditions. You should avoid storing in extreme cold, hot, or damp areas as this may lead to corrosion and other related problems.
- 13. This equipment is designed for indoor and home use only. It is not intended for commercial use!

# PRE-ASSEMBLY CHECK LIST


Before you start to assemble, please make sure all parts are included.

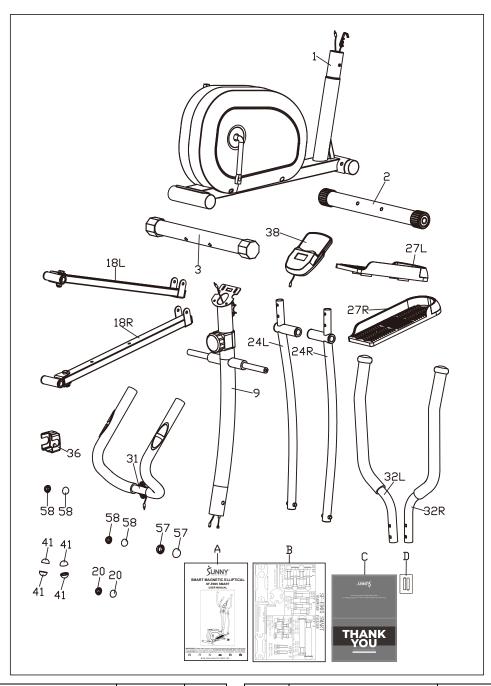

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Front Stabilizer		1
3	Rear Stabilizer		1
9	Handlebar Post		1
18L	Left Pedal Support Tube		1
18R	Right Pedal Support Tube		1
20	Nut Cap	S13	2
24L	Left Swing Bar		1
24R	Right Swing Bar		1
27L	Left Pedal		1
27R	Right Pedal		1
31	Armrest		1

No.	Description	Spec.	Qty.
32L	Left Handlebar		1
32R	Right Handlebar		1
36	Decorative Cover		1
38	Meter	BJHT060	1
41	Nut Cap	S17	4
57	Nut Cap	S19	2
58	Nut Cap	S14	4
Α	Manual		1
В	Hardware Package		1
С	Thank You Card		1
D	Battery	AAA	2

# **HARDWARE PACKAGE**

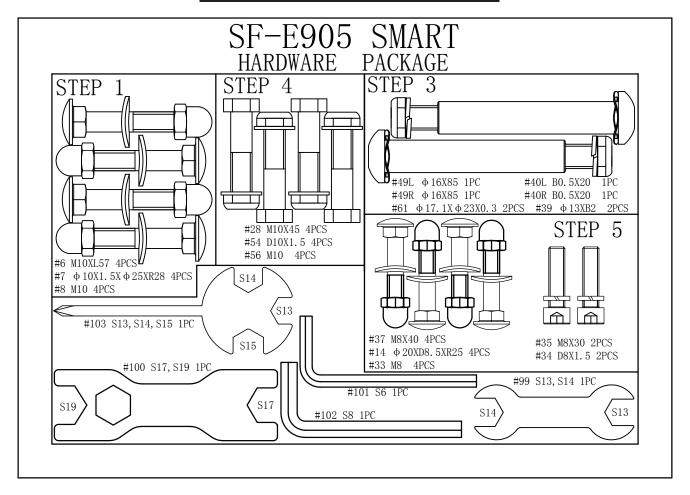

#### Ordering Replacement Parts (U.S. and Canadian Customers only)


Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the "EXPLODED DIAGRAM" (page 13) and "PARTS LIST" (pages 14~15)

Please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

## **ASSEMBLY INSTRUCTIONS**

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at <a href="mailto:support@sunnyhealthfitness.com">support@sunnyhealthfitness.com</a> or 1-877-90SUNNY (877-907-8669).

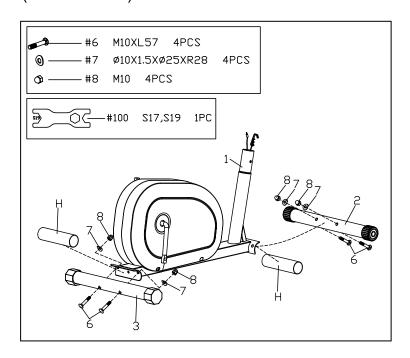


#### STEP 1:

Remove 2 Plastic Tubes (No. H) from the Main Frame (No. 1).

Attach the Front Stabilizer (No. 2) and Rear Stabilizer (No. 3) onto the Main Frame (No. 1), with 4 Carriage Bolts (No. 6), 4 Arc Washers (No. 7) and 4 Domed Nuts (No. 8). Tighten and secure with Spanner (No. 100).

**NOTE:** Ensure all bolts and washers are in place and partially threaded in before completely tightening them.

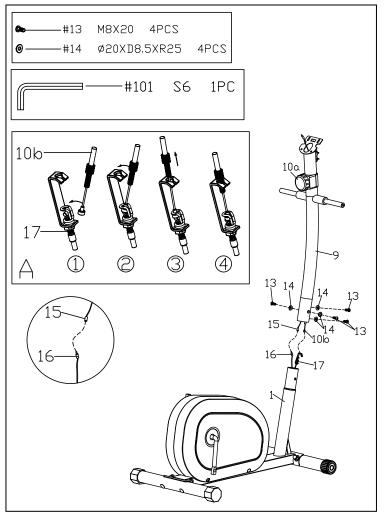

#### STEP 2:


Connect the Lower Sensor Wire (No. 16) with the Upper Sensor Wire (No. 15), and then connect Tension Hook (No. 17) with Tension Cable (No. 10b) as shown in Diagram A.

NOTE: Make sure the Tension Controller (No. 10a) is at the lowest level before you connect the Tension Cable (No. 10b). This ensures the wires are at their longest point. We recommend the assistance of a second person to help hold the Handlebar Post (No. 9). This will make attaching the Tension Hook (No. 17) to the Tension Cable (No. 10b) easier.

Remove 4 Allen Bolts (No. 13) and 4 Arc Washers (No. 14) from the Main Frame (No. 1) with Allen Wrench (No. 101). Insert the Handlebar Post (No. 9) into the post of the Main Frame (No. 1) secure with the 4 Allen Bolts (No. 13) and 4 Arc Washers (No. 14) that were just removed. Tighten and secure with Allen Wrench (No. 101).

**NOTE:** Ensure that all bolts and washers are in place and partially threaded in before completely tightening them.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at <a href="mailto:support@sunnyhealthfitness.com">support@sunnyhealthfitness.com</a> or 1-877-90SUNNY (877-907-8669).

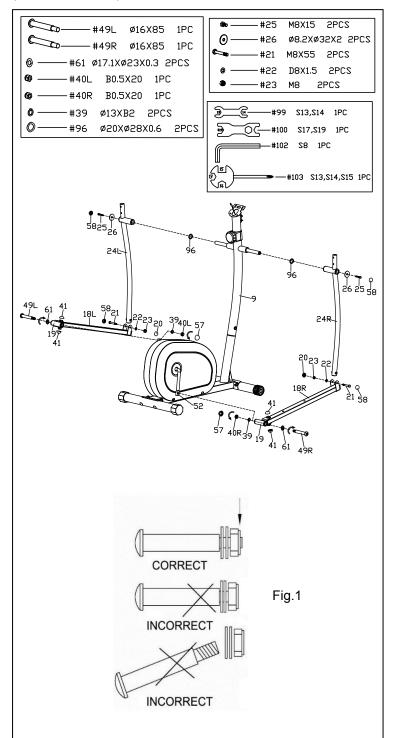

#### STEP 3:

Remove 2 Wave Washers (No. 96), 2 Hex Bolts (No. 25) and 2 Flat Washers (No. 26) from the long axle of the Handlebar Post (No. 9) with Spanner (No. 103).

Attach 2 Wave Washers (No. 96) to the two sides of the long axle on the Handlebar Post (No. 9). Then attach the Left & Right Swing Bars (No. 24L & No. 24R) to the two sides of the long axle on the Handlebar Post (No. 9) with 2 Hex Bolts (No. 25) and 2 Flat Washers (No. 26) that were just removed. Tighten and secure with Spanner (No. 103).

**NOTE:** Please do not fully tighten at this time.

Attach the Connecting Joint (No. 19) on the Left Pedal Support Tube (No. 18L) to the left side of Crank Arm (No. 52) with 1 Left Hinge Bolt (No. 49L), 1 Wave Washer (No. 61). Turn the Left Hinge Bolt (No. 49L) <u>counter-clockwise</u> as tightly as you can with your hand. Secure by tightening 1 Spring Washer (No. 39) and 1 BLACK color Left Nylon Nut (No. 40L) <u>clockwise</u>. Then use Allen Wrench (No. 102) and Spanner (No. 100) to tighten securely.

Attach the Connecting Joint (No. 19) on the Right Pedal Support Tube (No. 18R) to the right side of Crank Arm (No. 52) with 1 Right Hinge Bolt (No. 49R), 1 Wave Washer (No. 61). Turn the Right Hinge Bolt (No. 49R) <u>clockwise</u> as tightly as you can with your hand. Secure by tightening 1 Spring Washer (No. 39) and 1 WHITE color Right Nylon Nut (No. 40R) <u>counter-clockwise</u>. Then use Allen Wrench (No. 102) and Spanner (No. 100) to tighten securely.


**NOTE**: Please do not fully tighten at this time. Please attach the **Left & Right Hinge Bolts (No. 49L & No. 49R)** correctly as shown in Fig.1.

Remove 2 Hex Bolts (No. 21), 2 Flat Washers (No. 22) and 2 Nylon Nuts (No. 23) from Left & Right Pedal Support Tubes (No. 18L & No. 18R) using Spanner (No. 103) and Spanner (No. 99). Then attach the Left & Right Swing Bars (No. 24L & No. 24R) to the Left & Right Pedal Support Tubes (No. 18L & No. 18R) with 2 Hex Bolts (No. 21), 2 Flat Washers (No. 22) and 2 Nylon Nuts (No. 23) that were just removed. Tighten and secure with Spanner (No. 103) and Spanner (No. 99).

NOTE: If fail to screw in Hex Bolts (No. 21), please move the Crank Arm (No. 52) to a different angle and retry it.

Tighten 2 Hex Bolts (No. 25) and Left & Right Nylon Nuts (No. 40L & No. 40R) tightly now. Then cover with the 12 Nut Caps (No. 20 & No. 58 & No. 57 & No. 41).


We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at <a href="mailto:support@sunnyhealthfitness.com">support@sunnyhealthfitness.com</a> or 1-877-90SUNNY (877-907-8669).

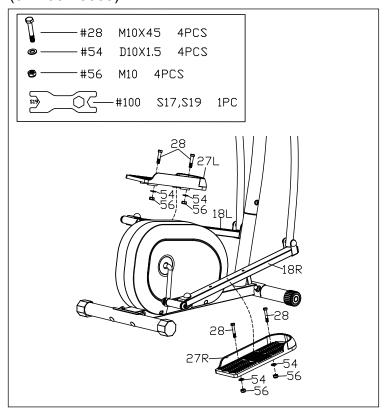

#### STEP 4:

Secure the Left & Right Pedals (No. 27L & No. 27R) to the Left & Right Pedal Support Tubes (No. 18L & No. 18R) respectively using 4 Hex Bolts (No. 28), 4 Flat Washers (No. 54) and 4 Nylon Nuts (No. 56). Tighten and secure with Spanner (No. 100).

**NOTE:** Both pedals are labeled L and R; L for LEFT and R for RIGHT.

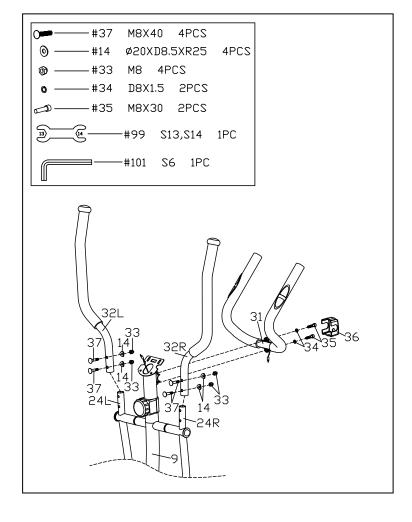


#### STEP 5:

Attach Armrest (No. 31) to the Handlebar Post (No. 9). Secure with 2 Spring Washers (No. 34) and 2 Hex Bolts (No. 35) using Allen Wrench (No. 101). Finally attach the Decorative Cover (No. 36) onto the Armrest (No. 31).

Attach the Left & Right Handlebars (No. 32L & No. 32R) onto the Left & Right Swing Bars (No. 24L & No. 24R) with 4 Carriage Bolts (No. 37), 4 Arc Washers (No. 14) and 4 Domed Nuts (No. 33). Tighten and secure with Spanner (No. 99).

NOTE: If the Left & Right Handlebars (No. 32L & No. 32R) rubs against the Armrest (No. 31) during the workout, please recheck if the Left & Right Handlebars (No. 32L & No. 32R) is assembled to Left & Right Swing Bars (No. 24L & No. 24R) according to the label marked with L or R.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at <a href="mailto:support@sunnyhealthfitness.com">support@sunnyhealthfitness.com</a> or 1-877-90SUNNY (877-907-8669).

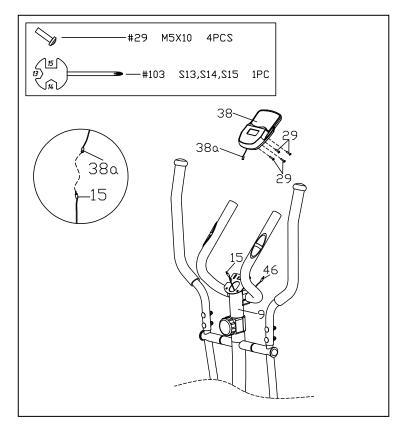

#### STEP 6:

Remove 4 Phillips Screws (No. 29) from the Meter (No. 38) with Spanner (No. 103).

Plug the **Pulse Sensor Wire (No. 46)** to the jack on the back of the **Meter (No. 38)**. Then connect the **Upper Sensor Wire (No. 15)** to the **Meter Wire (No. 38a)**.


Attach the Meter (No. 38) to the bracket of the Handlebar Post (No. 9) using 4 Phillips Screws (No. 29) that were just removed. Tighten and secure with Spanner (No. 103).

**NOTE:** To avoid damaging the wires, please push them into the **Handlebar Post (No. 9)** before securing the **Meter (No. 38)** onto the bracket.


THE ASSEMBLY IS COMPLETE!

## **TROUBLESHOOTING**


1. If you find there is no difference between tension level 1 to level 8, please check the connection of the tension cable. Please see Diagram A under STEP 2.

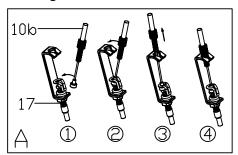

- 2. If the meter does not show numbers correctly, please check the batteries. If the meter does not count the speed and time, please check the connections of **Upper Sensor Wire (No. 15)** to the **Meter Wire (No. 38a)**, and **Upper Sensor Wire (No. 15)** to **Lower Sensor Wire (No. 16)**.
- 3. If you have difficulty in putting Left & Right Hinge Bolts (No. 49L & No. 49R) into the Crank Arm (No. 52), or putting Hex Bolts (No. 21) into Left & Right Pedal Support Tubes (No. 18L & No. 18R), please try moving the Crank Arm (No. 52) to a different angle. \*Keep in mind the Left Hinge Bolt (No. 49L) has reversed threading and must be installed by turning counter-clockwise.
- 4. If you hear any noise when using the machine, please check if **Left & Right Hinge Bolts (No. 49L & No. 49R)**, **Hex Bolts (No. 21)**, **Hex Bolts (No. 25)** and **Connecting Joints (No. 19)** are loose. You may remove these parts and add some lubricant oil to eliminate all noise possibilities. Remember to tighten all the parts securely.
- 5. If it is very hard to pedal on the higher tension levels, or you hear rubbing noises, please remove the Left & Right Belt Covers (No. 105L & No. 105R), and adjust the Hex Bolt (No. 77) seen in the following diagram. You will need to loosen the 2 Hex Nuts (No. 78) and lower the position of the Hex Bolt (No. 77) by turning <u>counter-clockwise</u>. This will keep the Magnetic Board (No. 84) from making contact with the magnetic flywheel. Before re-installing the Left & Right Belt Covers (No. 105L & No. 105R), test the tension level 8 to ensure the magnets do not touch the flywheel.

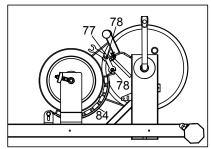


6. If you still hear noises after you did STEP 4 and STEP 5, please remove the **Left & Right Belt Covers (No. 105L & No. 105R)**. Loosen the **Hex Thin Nut (No. 87)** for the **Flywheel (No. 94)** about a half of a rotation. See the following diagram below.

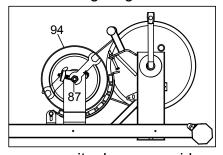

7. If the machine is wobbly when you use it, please consider adding an exercise mat under it.


# **ADJUSTMENT GUIDE**

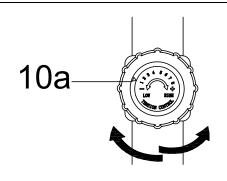

#### **ADJUSTING THE TENSION**


Adjust the tension by rotating the **Tension Controller (No. 10a)** <u>clockwise</u> to increase the level of resistance. Rotate the **Tension Controller (No. 10a)** <u>counter-clockwise</u> to decrease the level of resistance.

Tension levels are set at Level 1 being the lowest and Level 8 being the highest.

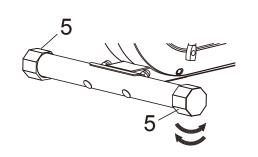

#### **ADJUSTING THE LEVEL**


If at any point the bike does not feel level, you can adjust the **Leveler Caps (No. 5)**.

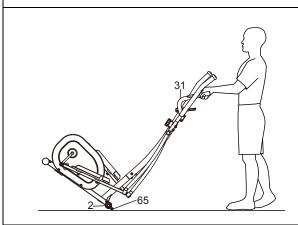

#### **HOW TO MOVE THE ELLIPTICAL**

There are **Transportation Wheels (No. 65)** located on the **Front Stabilizer (No. 2)**. Hold the **Armrest (No. 31)** and push down the front of the elliptical until the **Transportation Wheels (No. 65)** touch the ground. Now you can move the elliptical.

# **BATTERY INSTALLATION & REPLACEMENT**

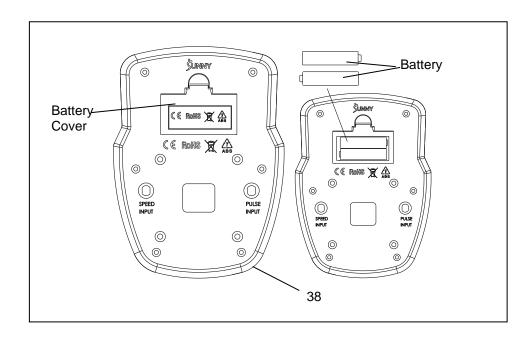

#### BATTERY INSTALLATION

- 1. Take out 2 AAA batteries from meter box.
- 2. Press the buckle of battery cover on the **Meter (No. 38)**, then remove battery cover.
- 3. Install 2 AAA batteries into the battery case on the back of the **Meter (No. 38)**. Pay attention to the battery + and poles before installing.
- 4. Press the buckle of battery cover, then put the battery cover back to the back of the **Meter (No. 38)**.

The installation is complete!

#### **BATTERY REPLACEMENT**


- 1. Press the buckle of battery cover on the back of the **Meter (No. 38)**, then remove battery cover.
- 2. Remove the 2 old AAA batteries in the battery case and install 2 new AAA batteries into the battery case on the back of the **Meter (No. 38)**. Pay attention to the battery + and poles before installing.
- 3. Press the buckle of battery cover, then put the battery cover back to the back of the **Meter (No. 38)**.

The replacement is complete!

#### **BATTERY DISPOSAL**

Dispose the batteries according to the laws and regulations of your local region. Some batteries may be recycled. When disposing or recycling, do not mix battery types.

# **EXERCISE METER**

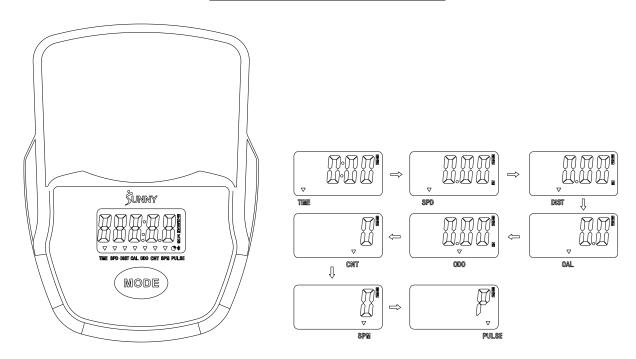

#### **■MODE KEY FUNCTION**

- This key lets you select and lock on to a particular function you want.
   SCAN→TIME→SPD (SPEED)→DIST (DISTANCE)→CAL (CALORIES)→ODO (TOTAL DISTANCE)→CNT (COUNT)→SPM →PULSE
- Press and hold for 3 seconds to reset all the values, except ODO (TOTAL DISTANCE), to zero when Bluetooth is not connected.
- Press and hold for 6 seconds to disconnect from both the SunnyFit APP and the heart rate monitor; then, the meter will enter sleep mode.

#### **■SLEEP MODE**

- The meter will shut off automatically and disconnect the heart rate monitor if there is no activity or no keys are pressed for approximately 4 minutes.
- The meter will turn back on when the MODE key is pressed, or there is activity.


#### **■FUNCTION**

- SCAN: Meter will rotate through all functions every 6 seconds.
- TIME: Counts the total time from start to finish.
- SPD (SPEED): Displays the current speed.
- DIST (DISTANCE): Counts the distance of an exercise from start to finish.
- CAL (CALORIES): Counts total calories burned during exercise from start to finish.
- ODO (TOTAL DIŚTANCE): Counts the total distance from when batteries were installed. If the batteries are replaced, the value resets to zero.
- CNT (COUNT): Displays the turns from start to finish.
- SPM: The average number of turns per minute of the wheel to measure the speed of the pedal.
- PULSE: The current pulse rate.

#### BLUETOOTH

- 1. The Bluetooth icon will flash when the meter is on or wakes from sleep mode. If no Bluetooth connection is established within 3 minutes, the Bluetooth icon will turn off.
- The Bluetooth icon will stay on when it is connected.

#### WIRELESS HEART RATE



- 2. After exercise resumes, the wireless heart rate icon will flash. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
- 3. When the meter wakes from sleep mode, the wireless heart rate icon will flash. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
- 4. The wireless heart rate icon will flash when the MODE key is pressed during exercise. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
- 5. The wireless heart rate icon will stay on when the heart rate monitor is connected.

**NOTE:** The heart rate monitor is not included. Wireless heart rate function works with SunnyFit Heart Rate Monitor HR200.

#### **■**SPECIFICATIONS

	SCAN	6S
FUNCTION	TIME	00:00-999:59 (M:S)
	SPD (SPEED)	0.00~99.99 MPH
	DIST (DISTANCE)	0.00~9999.9 MILE
	ODO (TOTAL DISTANCE)	0.00~9999.9 MILE
	CAL (CALORIES)	0.0~9999.9 CAL
	CNT	0~99999
	SPM	0~399
	PULSE	40~240 BPM
BATTERY		SIZE-AAA, 2PCS
	TEMPERATURE	0~40°C (32°F-104°F)
STORAGE TE	-10~60°C (14°F-140°F)	

#### APP CONNECTION:

Connect Smart Equipment to SunnyFit App:

1. Scan to download SunnyFit from the app store:



- 2. Ensure that the Bluetooth function is turned on from your mobile device.
- 3. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
- 4. Begin any workout activity that matches your smart equipment, then follow the onscreen prompts to search for and connect to your smart equipment.
- 5. When connected, your stats and records will be displayed at the end of your course/session and recorded in your account profile!


#### Troubleshooting:

 If you are having trouble connecting your smart equipment, visit <u>www.sunnyfit.com/guide</u> or scan the QR code below:




If you require additional support, please contact <u>support@sunnyfit.com</u>.

# **EXPLODED DIAGRAM 1**

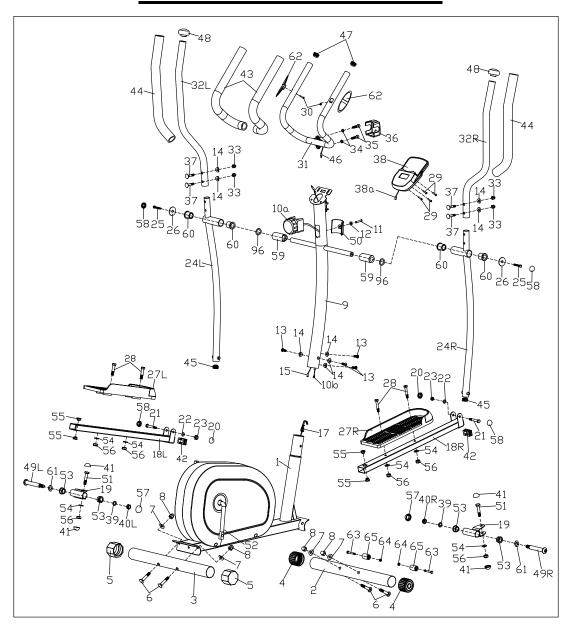

# **EXPLODED DIAGRAM 2**

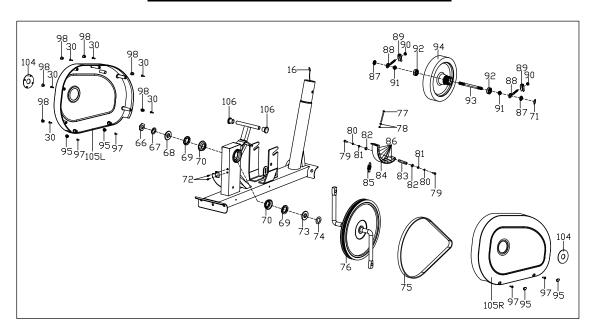

# **PARTS LIST**

No.	Description	Spec.	Qty.
1	Main Frame	•	1
2	Front Stabilizer		1
3	Rear Stabilizer		1
4	End Cap	Ф50Х1.5	2
5	Leveler Cap	Ф50Х1.5	2
6	Carriage Bolt	M10XL57	4
7	Arc Washer	Ф10X1.5XФ25XR28	4
8	Domed Nut	M10	4
9	Handlebar Post		1
10a	Tension Controller	8-level	1
10b	Tension Cable	L590	1
11	Phillips Screw	M5X45	1
12	Flat Washer	D5	1
13	Allen Bolt	M8X20	4
14	Arc Washer	Ф20XD8.5XR25	8
15	Upper Sensor Wire	900mm	1
16	Lower Sensor Wire	1200mm	1
17	Tension Hook	1300mm	1
18L	Left Pedal Support Tube		1
18R	Right Pedal Support Tube		1
19	Connecting Joint		2
20	Nut Cap	S13	2
21	Hex Bolt	M8X55	2
22	Flat Washer	D8X1.5	2
23	Nylon Nut	M8	2
24L	Left Swing Bar		1
24R	Right Swing Bar		1
25	Hex Bolt	M8X15	2
26	Flat Washer	Ф8.2ХФ32Х2	2
27L	Left Pedal		1
27R	Right Pedal		1
28	Hex Bolt	M10X45	4
29	Phillips Screw	M5X10	4
30	Phillips Screw	ST4.2X18	8
31	Armrest		1
32L	Left Handlebar		1
32R	Right Handlebar		1
33	Domed Nut	M8	4
34	Spring Washer	D8X1.5	2
35	Hex Bolt	M8X30	2
36	Decorative Cover		1
37	Carriage Bolt	M8X40	4
38	Meter	BJHT060	1
38a	Meter Wire	150mm	1
39	Spring Washer	Ф13ХВ2	2
40L	Left Nylon Nut	B0.5X20	1
40R	Right Nylon Nut	B0.5X20	1
41	Nut Cap	S17	4
42	Square End Cap	40X25X1.5	2
		Ф23ХФ32Х480	2
43	Foam Grip	Ψ23ΛΨ32Λ <del>4</del> 00	_

No.	Description	Spec.	Qty.
45	Round End Cap	Ф28Х1.5	2
46	Pulse Sensor Wire	600mm	2
47	Spherical Cap	Ф25Х1.5	2
48	Mushroom Cap	Ф28.6Х1.5	2
49L	Left Hinge Bolt	Ф16Х85	1
49R	Right Hinge Bolt	Ф16Х85	1
50	Tension Controller		1
	Cover		'
51	Hex Bolt	M10X50	2
52	Crank Arm	L140XW228	1
53	Axle Bushing 1	Ф24Х16ХФ16.1	4
54	Flat Washer	D10X1.5	6
55	Alloy Bushing	Ф14Х12.5ХФ10.1	4
56	Nylon Nut	M10	6
57	Nut Cap	S19	2
58	Nut Cap	S14	4
59	Spacer	Ф32Х59	2
60	Axle Bushing 2	Ф32Х2.5	4
61	Wave Washer	Ф17.1ХФ23Х0.3	2
62	Pulse Sensor		2
63	Hex Bolt	M6XL45	2
64	Nylon Nut	M6	2
65	Transportation Wheel	Ф23Х32ХФ6	2
66	Nut	4.5X32X32	1
67	Washer	Ф22.6ХФ28Х2.5	1
68	Locking Nut-L	Ф45ХН3.5ХФ33.5	1
69	Open Face Bearing	Ф45.8X8.8	2
70	Bearing Housing	δ2.5X76X76	2
71	Plastic Nut	S17	1
72	Phillips Screw	ST3X10	2
73	Locking Nut-R	Ф45ХН3.5ХФ33.5	1
74	Big Washer	Ф25.2ХФ38Х1	1
75	Belt	380PJ6	1
76	Belt Pulley	Ф260Х20	1
77	Hex Bolt	M5XL60	1
78	Hex Nut	M5	2
79	Hex Bolt	M6XL15	2
80	Spring Washer	D6	2
81	Flat Washer	D6	2
82	Axle Stop Ring	D12	2
83	Magnetic Board Axle	Ф12X50	1
84	Magnetic Board		1
85	Spring	61ХФ15ХФ1.6	1
86	Square Magnet	40X25X10	8
87	Hex Thin Nut	M10X1	2
88	Adjusting Belt Bolt	M6X50	2
89	Adjusting U Washer	3X30X20	2
90	Hex Nut	M6	2
91	Nut	M10X1.0	2
92	Bearing	6000z	2
93	Flywheel Axle	Ф10XM10X1XL118	1
94	Flywheel	Ф200Х38	1

No.	Description	Spec.	Qty.
95	Belt Cover Plug		4
96	Wave Washer	Ф20ХФ28Х0.6	2
97	Phillips Screw	ST5X20	4
98	Round Plug		6
99	Spanner	S13,S14	1
100	Spanner	S17,S19	1
101	Allen Wrench	S6	1

No.	Description	Spec.	Qty.
102	Allen Wrench	S8	1
103	Spanner	S13,S14,S15	1
104	Crank Cover		2
105L	Left Belt Cover		1
105R	Right Belt Cover		1
106	Plug	Ф13Х1.5	2

Version: 1.1

# CONNECT with us

# DOWNLOAD

Track your fitness progress & join **FREE** workout courses!

Download SUNNYFIT today!







# FOLLOW

#### Find us on social media @sunnyhealthfitness

- (O) @sunnyhealthfitness
- @sunnyhealthandfitness
- **y** @sunnyhealthfit
- /sunnyhealthfitness
- /sunnyhealthfitness
- p /sunnyhealthandfitness