




# RUNNING TREADMILL WITH HANDRAILS

## SF-T722062

### USER MANUAL

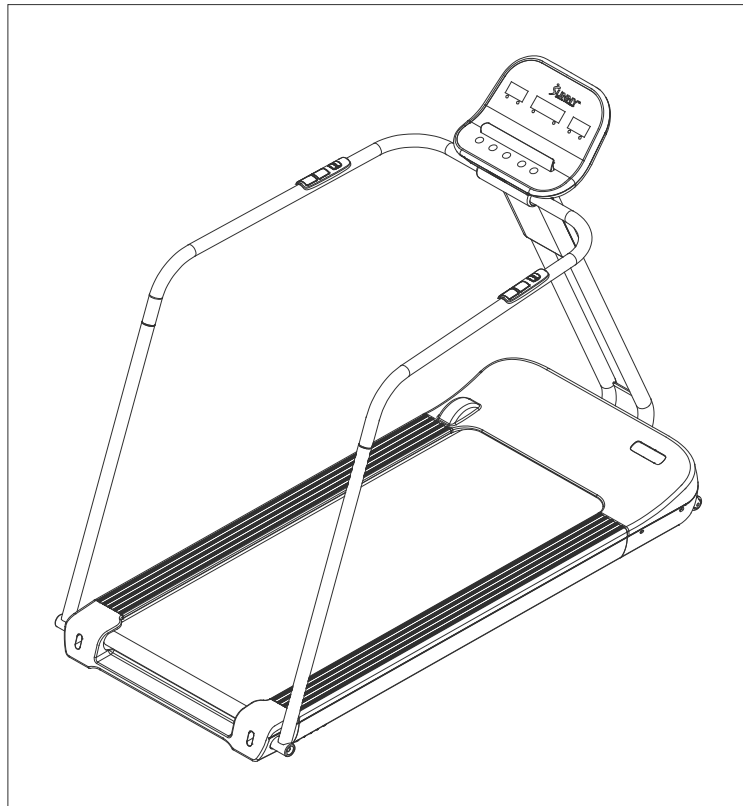

**IMPORTANT!** Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US:** [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1- 877-90SUNNY (877-907-8669).



[WWW.SUNNYHEALTHFITNESS.COM](http://WWW.SUNNYHEALTHFITNESS.COM)

# **IMPORTANT SAFETY INSTRUCTION**

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this treadmill.

**DANGER**— To reduce the risk of electrical shock:

1. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. The treadmill should never be left unattended when plugged in. Unplug the treadmill from outlet when not in use and before putting on or taking off parts.
2. Use this treadmill only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this treadmill if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return this treadmill to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never operate the treadmill with the air openings blocked. Keep the air openings free of lint, hair, and alike items.
6. Never drop anything on the product or insert any object into the product. Any of these actions might damage the product.
7. Not for outdoor use.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. To disconnect, turn the treadmill off, then remove the plug from the outlet.
10. Connect this treadmill to a properly grounded outlet only. See grounding instructions.
11. This treadmill is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this treadmill.

## **CAUTION:**

To avoid injury, use extreme caution when stepping onto or off of a moving belt. Read instruction manual before using.

*SAVE THESE INSTRUCTIONS*

# **IMPORTANT SAFETY INFORMATION**

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure, or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 8 feet (240CM) of free space behind it and 2 feet (60CM) on each side. Do not place the treadmill on any surface that blocks air openings. To protect the floor or carpet from damage, place a mat under the treadmill.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 245 lbs (110kgs).
10. The equipment is not suitable for therapeutic use.
11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving are required.
12. Your product is intended for use in cool and dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
13. This equipment is designed for indoor and home use only; it is not intended for commercial use!

# IMPORTANT OPERATING INSTRUCTION

1. Insert the power plug directly into the socket.
2. Read the manual before operating the treadmill.
3. Changes in speed do not occur immediately. Set your desired speed using the adjustment keys on the main console. The speed will increase gradually.
4. While on the treadmill, move with caution as distractions may cause you to lose balance and stray from walking in the center of the running belt which may result in serious injury.
5. This treadmill starts at a very low speed. To begin use, hold onto the handrails and stand on the side rails while it starts up, then step onto the running belt once it's in motion.
6. Always hold the handrail when making changing settings.
7. A safety key is provided for emergency use. The treadmill will function only if the safety key is inserted into the computer console. In case of emergency, remove the safety key to immediately stop the running belt and shut off the treadmill. The display screen will reset once the safety key is reinserted.
8. The console control keys are precisely set and require very little finger pressure to use. To avoid damaging these keys, do not use excessive pressure when operating these controls.
9. This equipment is designed for adult use only! Children should not be allowed to use or play near this equipment. When present, children should be supervised at all times by an adult.
10. Women who are pregnant or nursing should consult a physician before attempting to begin any exercise program.
11. Always stay hydrated during and after exercise.




## **IMPORTANT NOTE:**

This treadmill does come pre-lubricated, but it is recommended to lubricate your treadmill before the first use. **Please see *Page 12* for instructions on how to properly apply lubricant.**

# PRE-ASSEMBLY CHECK LIST


Before you start to assemble, please make sure all parts are included.

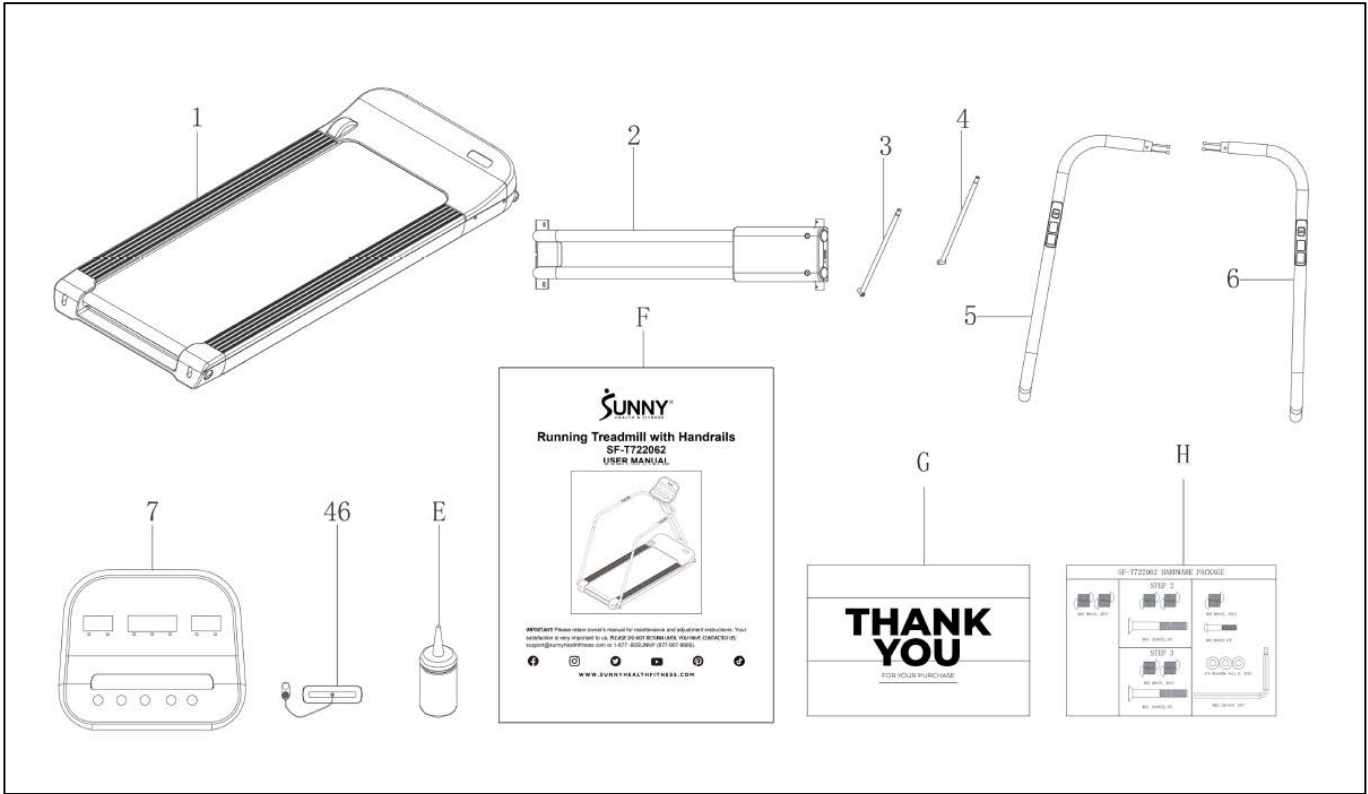

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Upright Tube		1
3	Left Handrail Connecting Tube		1
4	Right Handrail Connecting Tube		1
5	Left Handrail Tube		1
6	Right Handrail Tube		1

No.	Description	Spec.	Qty.
7	Computer Stand		1
46	Safety Lock		1
E	Silicone Oil		1
F	Manual		1
G	Thank You Card		1
H	Hardware Package		1

# HARDWARE PACKAGE

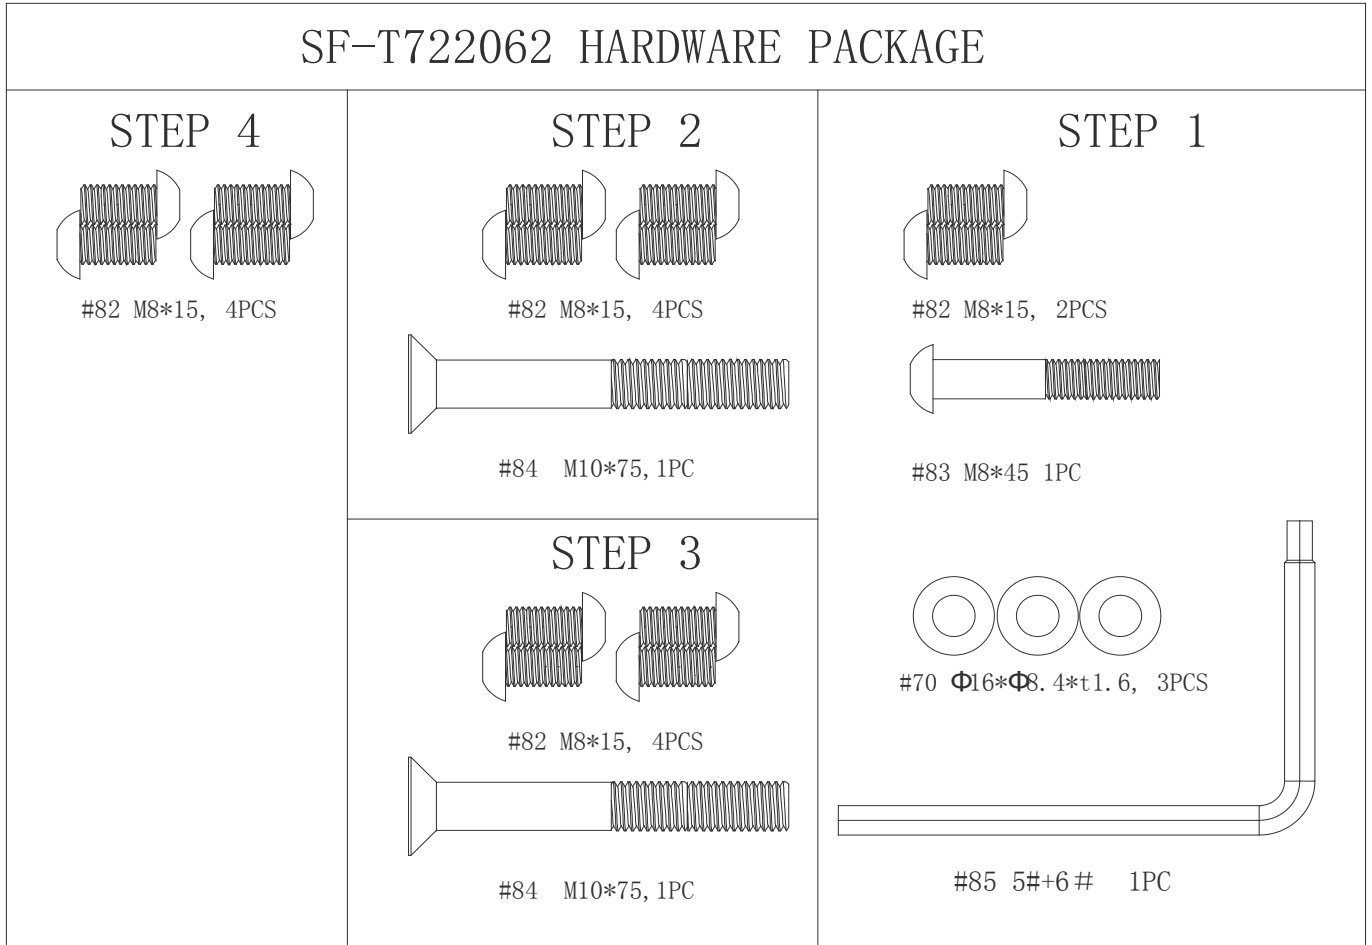

## Ordering Replacement Parts (U.S. and Canadian Customers only)


Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the “EXPLODED DIAGRAM” (page 20) and “PARTS LIST” (pages 21-22).

Please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

# ASSEMBLY INSTRUCTIONS

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90 SUNNY (877-907-8669).

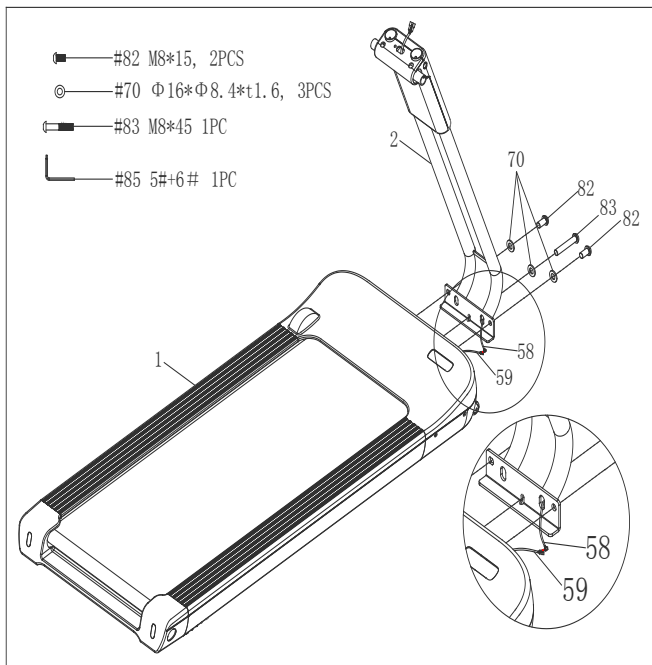


## STEP 1:

Put the **Upright Tube (No. 2)** near the front of the **Main Frame (No. 1)**, connect the **Communication Lower Wire (No. 59)** of the **Main Frame (No. 1)** and the **Communication Middle Wire (No. 58)** of the **Upright Tube (No. 2)**, and put the **Communication Lower Wire (No. 59)** and **Communication Middle Wire (No. 58)** into the iron pipe hole of the **Main Frame (No. 1)**, and then set the **Upright Tube (No. 2)** inside the **Main Frame (No. 1)** (the hole should be aligned with the hole).

Use the **Hexagon Wrench (No. 85)** to pre-locked the **Upright Tube (No. 2)** into the **Main Frame (No. 1)** by using 2 **Bolts (No. 82)**, 1 **Bolt (No. 83)** and 3 **Flat Washers (No. 70)** into the **Main Frame (No. 1)**. After 2 **Bolts (No. 82)** and **Bolt (No. 83)** are pre-locked, use the 5# of **Hexagon Wrench (No. 85)** to lock 2 **Bolts (No. 82)** and **Bolt (No. 83)**.

**NOTE:** When connecting the **Communication Lower Wire (No. 59)** and **Communication Middle Wire (No. 58)**, do not pull the **Main Frame (No. 1)**, **Upright Tube (No. 2)**, **Communication Middle Wire (No. 58)** and **Communication Lower Wire (No. 59)**.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90 SUNNY (877-907-8669).

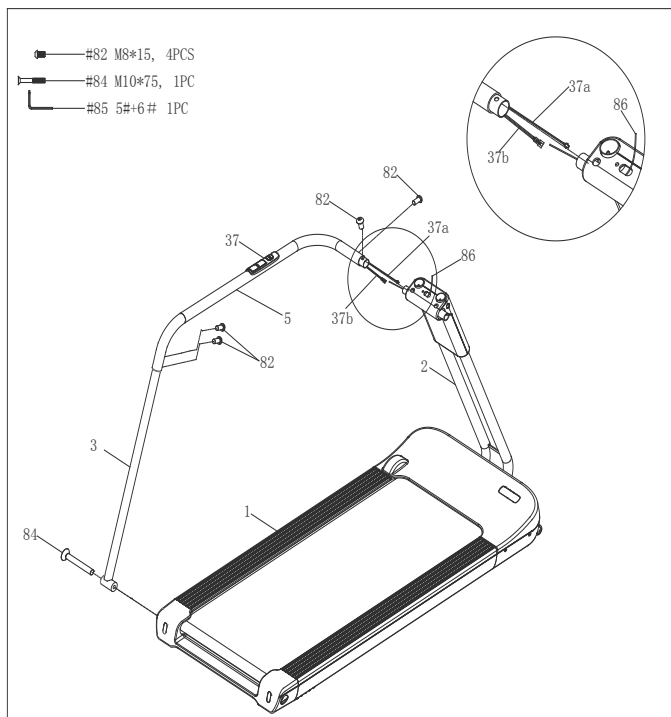

## STEP 2:

Insert the **Left Handrail Connecting Tube (No. 3)** into the **Left Handrail Tube (No. 5)**, and pre-locked the **Left Handrail Connecting Tube (No. 3)** into the **Left Handrail Tube (No. 5)** through 2 **Bolts (No. 82)**, do not tighten 2 **Bolts (No. 82)**.


Insert the **Hand Pulse Connecting Wire 1 (No. 37a)** and **Start/Stop Connecting Wire (No. 37b)** into the plastic hole of **Upright Tube (No. 2)** through the **Mini Wire (No. 86)**. Meanwhile, insert the **Left Handrail Connecting Tube (No. 3)** and **Left Handrail Tube (No. 5)** into **Upright Tube (No. 2)** and **Main Frame (No. 1)** until the hole is aligned.

Using 1 **Bolt (No. 84)** to pre-locked the **Left Handrail Connecting Tube (No. 3)** to the **Main Frame (No. 1)** with the **Hexagon Wrench (No. 85)**. Using 2 **Bolt (No. 82)** to pre-locked the **Left Handrail Tube (No. 5)** to the **Upright Tube (No. 2)** with the **Hexagon Wrench (No. 85)**. Secure the **Bolt (No. 84)** and **Bolt (No. 82)** with **Hexagon Wrench (No. 85)**, and then remove the **Mini Wire (No. 86)**.

**NOTE:** Use **Mini Wire (No. 86)** to insert **Hand Pulse Connecting Wire 1 (No. 37a)** and **Start/Stop Connecting Wire (No. 37b)** into the plastic hole of the **Upright Tube (No. 2)**. Do not pull **Hand Pulse Connecting Wire 1 (No. 37a)** and **Start/Stop Connecting Wire (No. 37b)** with great force.



We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90 SUNNY (877-907-8669).

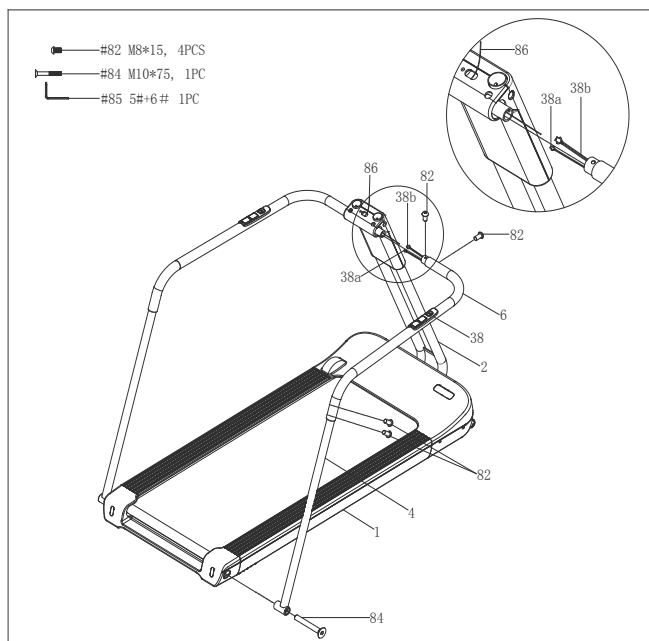

### STEP 3:


Insert the **Right Handrail Connecting Tube (No. 4)** into the **Right Handrail Tube (No. 6)**, and pre-locked the **Right Handrail Connecting Tube (No. 4)** into the **Right Handrail Tube (No. 6)** through 2 **Bolts (No. 82)**.

Insert the **Hand Pulse Connecting Wire 2 (No. 38a)** and **Speed+/- Connecting Wire (No. 38b)** into the plastic hole of **Upright Tube (No. 2)** Through **Mini Wire (No. 86)**. Meanwhile, insert the **Right Handrail Connecting Tube (No. 4)** and **Right Handrail Tube (No. 6)** into **Upright Tube (No. 2)** and **Main Frame (No. 1)** until the hole is aligned.

Using the **Bolt (No. 84)** to pre-locked the **Right Handrail Connecting Tube (No. 4)** to the **Main Frame (No. 1)** with the **Hexagon Wrench (No. 85)**. Using the **Bolt (No. 82)** to pre-locked the **Right Handrail Tube (No. 6)** to the **Upright Tube (No. 2)** with the **Hexagon Wrench (No. 85)**. Secure the **Bolt (No. 84)** and the **Bolt (No. 82)** with the **Hexagon Wrench (No. 85)** and then remove the **Mini Wire (No. 86)**.

**NOTE:** Use **Mini Wire (No. 86)** to insert **Hand Pulse Connecting Wire 2 (No. 38a)** and **Speed+/- Connecting Wire (No. 38b)** into the plastic hole of the **Upright Tube (No. 2)**. Do not pull **Hand Pulse Connecting Wire 2 (No. 38a)** and **Speed+/- Connecting Wire (No. 38b)** with great force.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90 SUNNY (877 -907-8669).

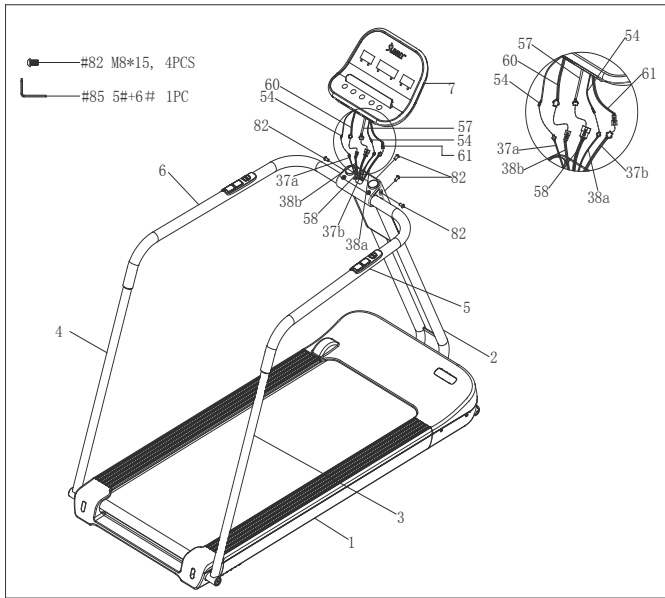


#### STEP 4:

Connecting the 2 **Hand Pulse Wires (No. 54)** with **Hand Pulse Connecting Wire 1 (No. 37a)** and **Hand Pulse Connecting Wire 2 (No. 38a)**, **Communication Upper Wire (No. 57)** with **Communication Middle Wire (No. 58)**, **Speed Wire (No. 60)** with **Speed+/- Connecting Wire (No. 38b)**, **Start/Pause Wire (No. 61)** with **Start/Stop Connecting Wire (No. 37b)**, and then put those connecting wires into the plastic hole of **Upright Tube (No. 2)**.

Attach the **Computer Stand (No. 7)** into the **Upright Tube (No. 2)**. Pre-locked the **Computer Stand (No. 7)** on **Upright Tube (No. 2)** with 4 **Bolts (No. 82)**, then secure 4 **Bolts (No. 82)** tightly with the **Hexagon Wrench (No. 85)**.


**NOTE:** When connecting wires, do not pull with great force, and do not press those connecting wires during assembly.

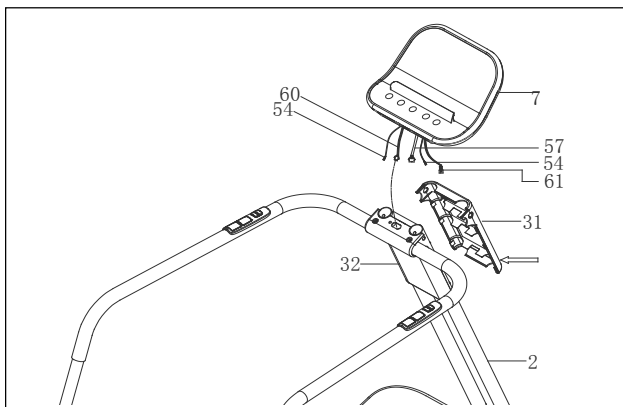

#### NOTE:

You can easily pull off **Front Guard Cover of Upright Tube (No. 31)** from the **Upright Tube (No. 2)** for better access to wires during assembly. Once all wires are connected and **Computer Stand (No. 7)** is assembled, snap **Front Guard Cover of Upright Tube (No. 31)** back in place.

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90 SUNNY (877-907-8669).

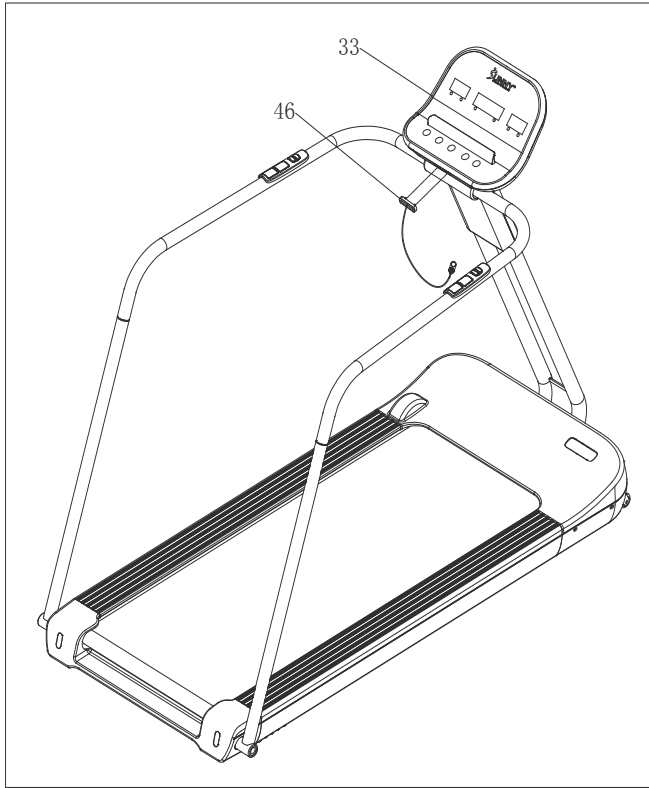

**STEP 5:**

Insert the **Safety Lock (No. 46)** into the **Computer Top Cover (No. 33)**.

*The assembly is complete!*

**NOTE:** Before plug in the power, it is necessary to confirm all the installation is completed according to the above steps.

Please refer to the following instructions carefully for the operation of this treadmill product.

# MAINTENANCE & CARE

General cleaning will help prolong the life and performance of your treadmill. Keep the treadmill clean and maintained by dusting the components on a regular basis. Clean the two exposed sides of the **Running Belt (No. 14)** will prevent dust from accumulating underneath. Keep your running shoes clean so the dirt from the shoes does not damage the **Running Board (No. 13)** and **Running Belt (No. 14)**.

Clean the surface of the **Running Belt (No. 14)** using a clean damp cloth. Keep liquids away from electrical parts and **Running Belt (No. 14)**.

To better maintain the treadmill and prolong its life it is suggested that the machine be powered off for 10 minutes every 2 hours and fully powered off whenever not in use.

## **CENTERING THE RUNNING BELT:**

Place the treadmill on level ground and set it at 2.1MPH to check if the **Running Belt (No. 14)** drifts.

If the **Running Belt (No. 14)** moves to the right, turn the adjusting bolt on the right side 1/2 clockwise, or turn the left adjustment bolt 1/2 counter-clockwise. If the **Running Belt (No. 14)** does not move, repeat this step until it centers. Refer to Figure A.

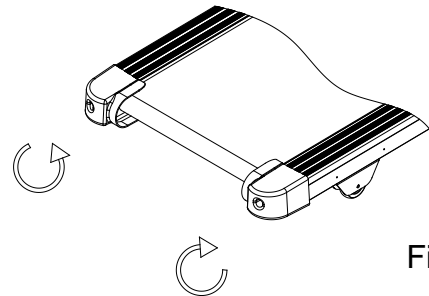


Figure A

If the **Running Belt (No. 14)** moves to the left, turn the adjusting bolt on the left side 1/2 clockwise, or turn the right adjustment bolt 1/2 counter-clockwise. If the **Running Belt (No. 14)** does not move, repeat this step until it centers. Refer to Figure B.

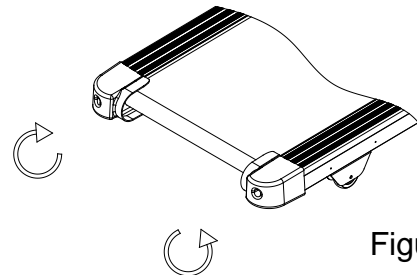


Figure B

# LUBRICATING THE TREADMILL

## **IMPORTANT NOTE:**

This treadmill does come pre-lubricated, but it is recommended to lubricate your treadmill before the first use.


## **RUNNING BELT & TREADMILL LUBRICANT:**

Lubricating the **Running Board (No. 13)** and **Running Belt (No. 14)** is essential as the friction affects the lifespan and operations of the treadmill. Inspect the **Running Board (No. 13)** regularly. If you find any wear on the **Running Board (No. 13)**, please contact us at: [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com).

**WARNING:** Always unplug the treadmill from the electrical outlet before cleaning, lubricating, or repairing the unit.

## **HOW TO LUBRICATE:**


1. To apply lubricant, lift one side of the **Running Belt (No. 14)** and apply oil to the middle of the **Running Board (No. 13)**. Next, start the treadmill and place it at the lowest speed setting and allow the oil to spread over the **Running Board (No. 13)**.
2. The moving parts should turn freely and quietly. Abnormal moving parts will affect the safety of the equipment. Inspect and tighten bolts regularly.
3. To better maintain the treadmill and prolong its lifespan, it is suggested that maintenance to be done on a regular basis.
4. **DO NOT LOOSEN OR MAKE ANY ADJUSTMENTS TO THE RUNNING BELT WHILE APPLYING LUBRICANT.** A loose **Running Belt (No. 14)** will result in the runner sliding off during use, while too tight of a **Running Belt (No. 14)** will negatively affect the motor's performance and also create more friction between the roller and **Running Belt (No. 14)**. The most suitable tightness for the **Running Belt (No. 14)** is pulled out 50-75mm from the **Running Board (No. 13)**.

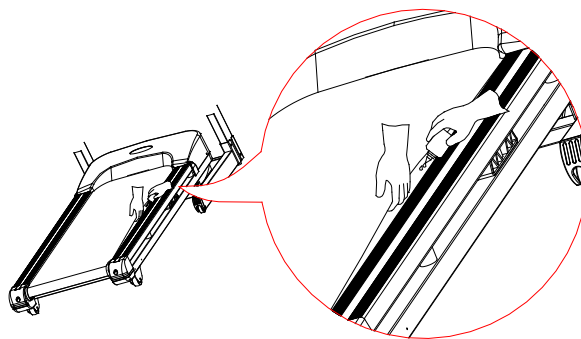

## **The following time table is recommended:**

Light user (less than 3 hours/ week)	every one year
Medium user (3-5 hours/ week)	every six months
Heavy user (more than 5 hours/ week)	every three months

# HOW TO MOVE THE TREADMILL

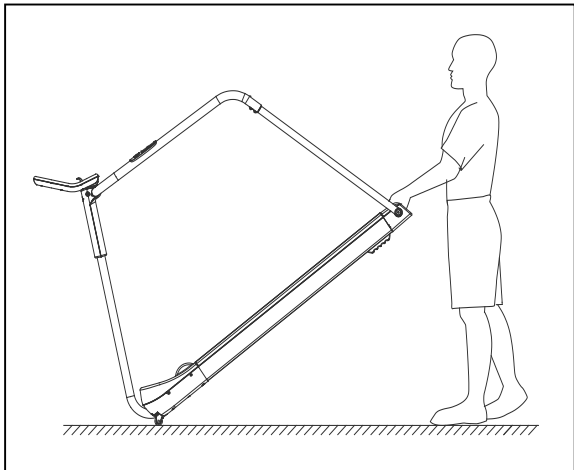

1. After stopping the running, stand at the rear end of the treadmill and hold the iron tube at the rear of the main frame with both hands, as shown in the figure on the left side, to lift the tail end of the treadmill.

2. Push the treadmill forward to your position.


**NOTE:** Before moving the treadmill, make sure that the power cord of the treadmill is plugged out, otherwise it may damage the plug and socket. To avoid scratching the wood floor, do not move on the wooden floor.

# IMPORTANT ELECTRICAL INFORMATION

**WARNING:** This treadmill requires a power source of **10 amps (100-120V)** in order to properly operate. For your safety, as well as the safety of others, please verify that the power source is correct before powering the treadmill. Any power source above or below this level could cause significant damage to the equipment and/or user.

## **GROUNDING METHODS:**

This product must be grounded. Should the treadmill malfunction or breakdown, grounding provides a path of the least resistance for electrical current to reduce the risk of electric shock. This product is equipped with a plug that has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

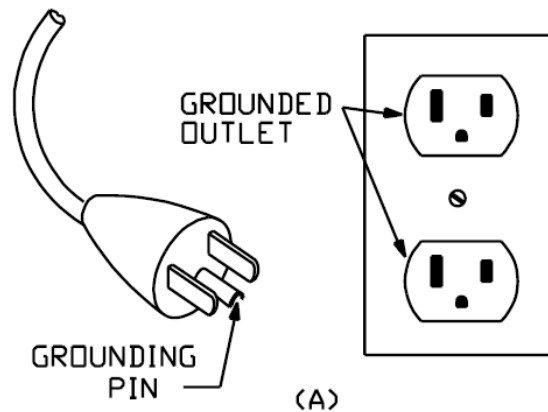


## **CAUTION:**

Improper connection of the equipment can result in risk of electric shock. Check with a qualified electrician or serviceman if you are unsure whether the product has been properly grounded. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. Ensure that the product is connected to an outlet which contains the same configuration as the plug. Do not use an adaptor for this product.

## **WARNING!**

1. **NEVER** use a ground fault circuit interrupt (GFCI) outlet with this treadmill. Route the power cord away from all moving parts of the treadmill, including the air pressure cylinder and transportation wheels.
2. **NEVER** operate the treadmill using a generator or UPS power supply.
3. **NEVER** remove any cover on this treadmill without first disconnecting the power cord.
4. **NEVER** expose the treadmill to rain or moisture. This treadmill is not designed for outdoor use or use in any high humidity environment.

# THE DISPLAY CONSOLE

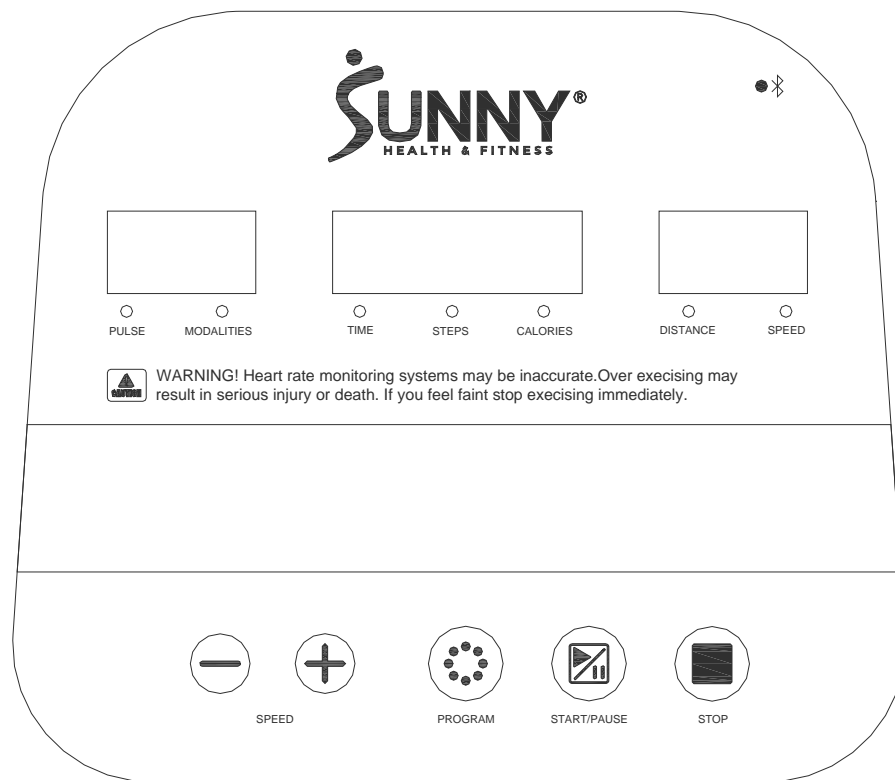

## I. BUTTON INSTRUCTIONS

1. **Function button:** SPEED+/-, PROGRAM, START/PAUSE, STOP

2. **Function button instructions:**

**A. SPEED:** "SPEED+" and "SPEED-" are speed plus or minus keys used to adjust the speed or set parameters.

**B. PROGRAM:** "PROGRAM" is the program key. When the treadmill is in standby state, press this key to select Time rewind mode/distance rewind mode/calorie rewind mode/fixed program.

**C. START/ PAUSE:** "START/PAUSE" is the start/pause key. Press this key to start the treadmill when it is stopped. Press this key to pause the treadmill when it is running. All data will be saved.

**D. STOP:** "STOP" is the stop key. Press this key to stop the treadmill when it is running. Press this key when the treadmill is paused to return to standby.



## II. THE SAFETY KEY FUNCTION:

When the motor is running, pull off the safety lock and the motor stops, and the treadmill is forbidden to start.

## III. PULSE MEASUREMENT FUNCTION:

When the treadmill is powered on, hold the steel plate of the left and right handrails with both hands. In order to obtain accurate heartbeat value, please stand on the treadmill and measure when stopping, and hold the hand for at least 30 seconds. The display range is 50-200 BPM. Heart rate displayed is for reference only and cannot be used as medical data.

## IV. DISPLAY RANGE OF EACH VALUE:

	Initial	Set initial value	Set range	Display range
TIME (MIN:SEC)	0:00	Time counter mode 15:00 Program 10:00	5:00-99:00	0:00-99:59
SPEED	0.0	N/A	N/A	0.5-8.5MP/H
INCLINE	0.0	N/A	N/A	N/A
DISTANCE	0.00	1.0	0.5-99.9	0.00—99.9
CALORIES	0	50	10-9999	0—9999
STEPS	0	--	--	0-99999

## V. FIXED PROGRAMS (P1-P6):

Press the “PROGRAMS” to choose P1-P6 in standby mode, then press the “Speed+/-” to settle the sport time, press the “Start” to start the sport.

Time period		Set time/16=The running time of each segment															
Program segment		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
P01	Speed	1.2	1.9	2.5	3.1	3.7	1.9	2.5	3.1	3.7	2.5	3.1	3.7	3.1	2.5	1.9	1.2
P02	Speed	1.9	1.9	3.1	3.1	1.9	1.9	3.1	3.1	1.9	1.9	3.1	3.1	1.9	1.9	3.1	1.9
P03	Speed	1.9	3.7	1.9	3.7	1.9	3.7	1.9	3.7	1.9	3.7	1.9	3.7	1.9	3.7	1.9	1.9
P04	Speed	1.2	3.7	4.3	4.3	6.8	6.8	6.8	5.6	5.6	5.6	5.6	3.7	3.7	3.7	2.5	1.2
P05	Speed	2.5	3.1	4.3	5	5.6	6.2	6.5	5	5	5.6	5.6	5.6	5.6	3.7	2.5	1.9
P06	Speed	1.9	3.7	3.7	3.7	5	5	5	5	6.2	6.2	6.2	6.8	6.8	5	3.1	1.9

## VI. To close the display:

In standby mode, if there is no operation for 10 minutes, the display and Bluetooth power will be turned off.

## VII. Power off:

The treadmill can be turned off at any time by turning off the power switch without damaging it.


## VIII: Meaning of error message code:

PROBLEM AND CODE	POSSIBLE CAUSE	SUGGESTED ACTION
E1 Communication failure (lower control did not receive electronic watch signal)	A. Electronic watch and lower control communication line contact is bad	Reconnect the communications cable and check whether the port is properly inserted or replace the communications cable
E13 Communication failure (electronic watch has not received the down control signal)	B. Poor electronic watch	Replace electronic watch
	C. Poor down control	Change down control
E2 Explosion-proof punch or motor damage	A. IGBT breakdown and short circuit	Change down control
	B. Abnormal motor, burnt smell, etc.	Change motor.
E3 No speed signal	A. The speed sensor is not inserted or properly inserted	Check and reconnect
	B. Poor down control	Change down control
E5 Overcurrent	A. The running belt has too much friction	Lubricating oil addition
	B. The motor is damaged and smells bad	Change motor.
	C. Down control damage	Change down control
E6 Motor disconnected	A. The motor cable is not plugged into the corresponding terminal of the lower control	Reconnect the motor

## APP CONNECTION:

1. Scan the QR code below to download the SunnyFit app onto your mobile device.




2. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
3. Ensure that the Bluetooth  function is turned on from your mobile device.
4. To connect the equipment to the SunnyFit app:
  - a. From the “Workout” tab, press on the “Search” button to search for your equipment.
  - b. Once your equipment appears on the list, tap the “Select” button to confirm.
  - c. Note: If your equipment does not appear on the "Searching for Equipment" list, check the EXERCISE COMPUTER on your equipment to ensure that it is not in sleep mode and your phone's Bluetooth function is on, then tap "Retry" to search again.
  - d. Once your equipment shows up on the “Workout” tab as “Currently Selected”, your equipment is now ready to display, track, and record your equipment’s workout stats on the app!
5. If you are unable to replicate these steps, or have any other issues with the SunnyFit app, please contact SunnyFit support at [support@sunnyfit.com](mailto:support@sunnyfit.com), or use the in-app “Contact Us” form to request support (“Me” tab -> “Contact Us”).

# TROUBLESHOOTING

TROUBLE	CAUSE	SOLUTION
The electric run will not start	<ol style="list-style-type: none"> <li>1. Not plugged in or switched on</li> <li>2. Electric treadmill overcurrent protector is disconnected</li> <li>3. Indoor overcurrent protector is disconnected</li> <li>4. The safety switch is removed</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug in the power socket or turn on the power switch</li> <li>2. Replace the power supply insurance (or press the overcurrent protection switch at the front end of the platform)</li> <li>3. Reset the overcurrent protector</li> <li>4. Place the safety switch in the correct position</li> </ol>
The running belt slipped	The running belt is not tight	Adjust the tightness of the running belt (see maintenance instructions)
Multi-wedge belt slip	The multi-wedge band is not tight	Adjust the tightness of the multi-wedge tape (see maintenance instructions)
The belt is not in the center of the treadmill	The balance of the drum is not adjusted properly	Adjust the running belt to the middle position (see maintenance instructions)
There is abnormal sound in electric running during exercise	<ol style="list-style-type: none"> <li>1. The rotating shaft needs lubricating oil</li> <li>2. The machine screws are loose</li> </ol>	<ol style="list-style-type: none"> <li>1. Grease the axis of rotation</li> <li>2. Fastening related screws</li> </ol>

**NOTE:** If you are unable to resolve an issue using the troubleshooting guide above, please contact Customer Service at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com)

# EXPLODED DIAGRAM

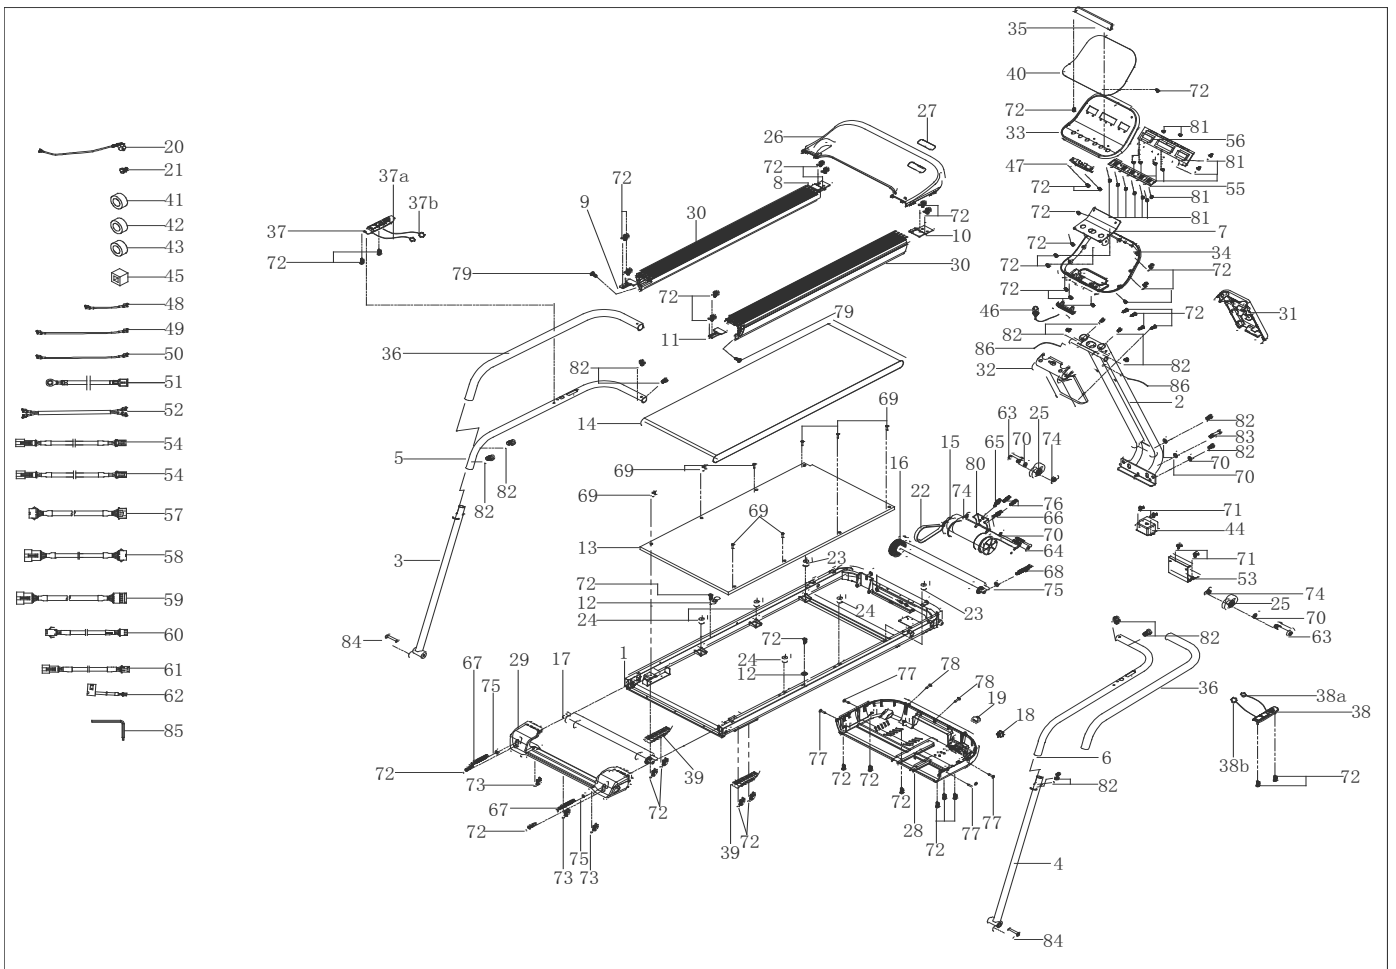

# PARTS LIST

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Upright Tube		1
3	Left Handrail Connecting Tube		1
4	Right Handrail Connecting Tube		1
5	Left Handrail Tube		1
6	Right Handrail Tube		1
7	Computer Stand		1
8	Left Bar Front Fixed Plate	45.5*35*t2.0	1
9	Left Bar Rear Fixed Plate	40.5*27*t2.0	1
10	Right Bar Front Fixed Plate	45.5*35*t2.0	1
11	Right Bar Rear Fixed Plate	40.5*27*t2.0	1
12	Bowl Washer	Φ27*3.6*t1.5	2
13	Running Board	1153*586*t18	1
14	Running Belt	480*2565*t1.6	1
15	DC Motor	1.25HP/5100RPM /90V	1
16	Front Roller	Φ89*Φ42*602.5	1
17	Rear Roller	Φ42	1
18	Power Switch	16A/250V	1
19	Overload Protector	12AMP 125/250VAC	1
20	Power Wire		1
21	Power Cable Buckle	7P-2	1

No.	Description	Spec.	Qty.
22	Multi-hook Belt	165-J7Elastic belt	1
23	Bumper	Φ25*t23.5*M6 , 65degree	2
24	Bumper	Φ25*t23.5*M6 , 35degree	4
25	Handling Wheel	Φ8.1*Φ37*21.5	2
26	Motor Top Cover	694.6*313.7*103.8	1
27	Plastic Drop Mark	100*30	1
28	Motor Lower Cover	691.7*317.8*100.5	1
29	Rear Guard Angle	691.7*101.1*120.2	1
30	Plastic Edge	1103*101*100.4	2
31	Front Guard Cover of Upright Tube	309.2*178*60	1
32	Rear Guard Cover of Upright Tube	309.2*178*64.5	1
33	Computer Top Cover	362.8*310*59.9	1
34	Computer Lower Cover	362.8*310*64.7	1
35	IPad Stand		1
36	Side Handle Foam Grip	Φ31*Φ41*1128	2
37	Hand Pulse with Start/Pause	wire length 850MM	1
37a	Hand Pulse Connecting Wire 1		1
37b	Start/Stop Connecting Wire		1
38	Hand Pulse with Speed	wire length 850MM	1
38a	Hand Pulse Connecting Wire 2		1
38b	Speed+/- Connecting Wire		1

39	Back Brace	141.1*25.9*25	2
40	Screen Ornament Decal	335.1*289.3*0.4	1
41	Magnetic Ring	Φ31*Φ19*t13	1
42	Magnetic Ring	Φ36*Φ23*t15	1
43	Magnetic Ring	Φ30*Φ20*t10	1
44	Filter	YB35D5-16A-Q	1
45	EMC Magnetic snap	31*30*27	1
46	Safety Lock		1
47	Safety Lock Seat	wire length 400MM	1
48	Single Branch Line	100MM	1
49	Single Branch Line	300MM	1
50	Single Branch Line	300MM	1
51	Ground Lead Wire	600MM	1
52	Double Branch Line	800MM	1
53	Controller	120Vac, 1.25CHP	1
54	Hand Pulse Wire	350mm	2
55	Keyboard		1
56	Computer Module		1
57	Communication Upper Wire	350MM	1
58	Communication Middle Wire	1300MM	1
59	Communication Lower Wire	550MM	1
60	Speed Wire	150MM	1
61	Start/Pause Wire	150MM	1
62	Bluetooth Indicator	100MM	1

63	Bolt	M8*40	2
64	Bolt	M8*95	1
65	Bolt	M8*35	1
66	Bolt	M8*20	1
67	Bolt	M6*50	2
68	Bolt	M6*50	1
69	Screw	M6*25	8
70	Flat Washer	Φ16*Φ8.4*t1.6	6
71	Screw	M4*10	4
72	Screw	ST4.2*15	44
73	Screw	ST4.2*10	3
74	Lock Nut	M8	3
75	Flat Washer	Φ6.4*Φ12*t1.6	3
76	Bolt	M8*25	2
77	Screw	ST4.2*15	4
78	Screw	ST4.2*25	2
79	Screw	ST4.2*15	2
80	Motor Base	126*75*t3.5	1
81	Screw	ST2.5*8	15
82	Bolt	M8*15	14
83	Bolt	M8*45	1
84	Bolt	M10*75	2
85	Hexagon Wrench	5# & 6#	1
86	Mini Wire	Φ1.3mm	2

Version 1.1

**CONNECT**  
with us

## DOWNLOAD

Track your fitness progress & join  
**FREE** workout courses!

Download  **SUNNYFIT** today!



---

## FOLLOW

Find us on social media @sunnyhealthfitness

 @sunnyhealthfitness

 @sunnyhealthandfitness

 @sunnyhealthfit

 /sunnyhealthfitness

 /sunnyhealthfitness

 /sunnyhealthandfitness

[www.sunnyhealthfitness.com](http://www.sunnyhealthfitness.com)