




# SMART SLIM TREADMILL WITH ARM EXERCISER SF-T723007 USER MANUAL



**IMPORTANT!** Please retain owner's manual for maintenance and adjustment instructions. Your satisfaction is very important to us, **PLEASE DO NOT RETURN UNTIL YOU HAVE CONTACTED US:** [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1- 877 - 90SUNNY (877-907-8669).

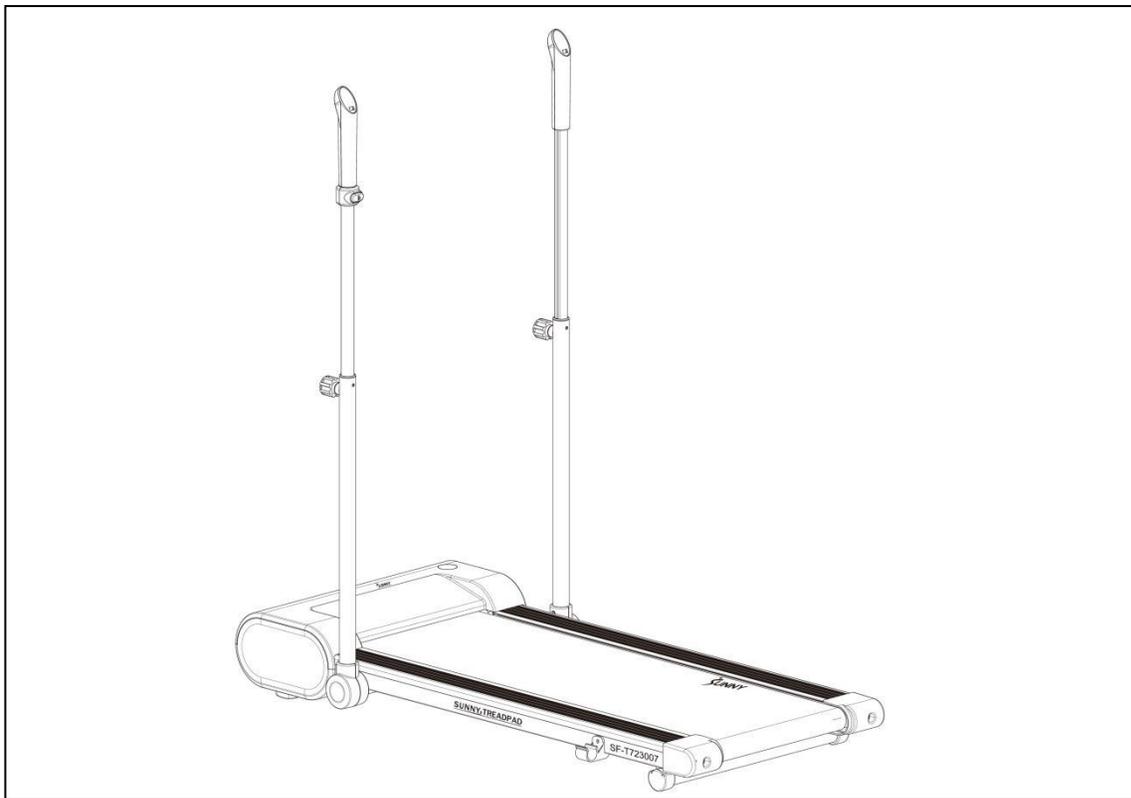

WWW.SUNNYHEALTHFITNESS.COM

# **IMPORTANT SAFETY INSTRUCTION**

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using (this appliance).

**DANGER** – To reduce the risk of electric shock:

Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Do not carry this appliance by supply cord or use cord as a handle.
6. Keep the cord away from heated surfaces.
7. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
8. Never drop or insert any object into any opening.
9. Do not use outdoors. Household use only.
10. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
11. To disconnect, turn all controls to the off position, then remove plug from outlet.
12. CAUTION: Risk of Injury to Persons – To Avoid Injury, use extreme caution when stepping onto or off of a moving belt. Read Instruction Manual Before Using.
13. Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
14. REMOVE CONTROL BOX (OR KEY, OR SAFETY PIN, AS APPLICABLE) WHEN NOT IN USE, AND STORE OUT OF REACH OF CHILDREN.
15. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

**SAVE THESE INSTRUCTIONS**

# **IMPORTANT SAFETY INFORMATION**

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 240cm (8 feet) of free space behind it and 60cm (2 feet) on each side. Do not place the treadmill on any surface that blocks air openings. To protect the floor or carpet from damage, place a mat under the treadmill.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The maximum weight capacity of this unit is 245 lbs (110 kgs).
10. The equipment is not suitable for therapeutic use.
11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving is required.
12. Your product is intended for use in cool, dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
13. This equipment is designed for indoor and home use only. It is not intended for commercial use!

# **IMPORTANT OPERATING INSTRUCTIONS**

1. Insert the power plug directly into the socket.
2. Read the manual before operating the equipment.
3. Changes in speed do not occur immediately. Set your desired speed using the adjustment keys on the remote control. The speed will increase gradually.
4. While on the treadmill, move with caution as distractions may cause you to lose balance and stray from walking in the center of the belt. This may result in serious injury.
5. This unit starts at a very low speed. To begin use, stand on the side rails while it starts up, then step onto the belt once it's in motion.
6. A safety key is provided for emergency use. The treadmill will function only if the safety key is inserted into the console. In case of emergency, remove the safety key to immediately stop the belt and shut off the treadmill. The display screen will reset once the safety key is reinserted.
7. This equipment is designed for adult use only! Children should not be allowed to use or play near this equipment. When present, children should always be supervised by an adult.
8. Women who are pregnant or nursing should consult a physician before attempting to begin any exercise program.
9. Always stay hydrated during and after exercise.
10. The treadmill will automatically stop after about 15 seconds if user is not standing on it.



## **IMPORTANT NOTE:**

The belt must be lubricated before the first use! Please see *Page 7* for instructions on how to properly apply lubricant.

# CARTON CONTENTS



A



E04



E15



C22



B



E



B03



B04



C



D

No.	Description	Specification	Qty.
A	Treadmill		1
E04	Remote Control		1
E15	Power Wire		1
C22	Safety Key		1
B	Lubricant	20ml/bottle	1
B03	Allen Wrench		1
B04	Screwdriver		1
C	User Manual		1
D	THANK YOU Card		1
E	Battery	3V	1

## Ordering Replacement Parts (U.S. and Canadian Customers only)


Please provide the following information in order for us to accurately identify the part(s) needed:

- ✓ The model number (found on cover of manual)
- ✓ The product name (found on cover of manual)
- ✓ The part number found on the “EXPLODED DIAGRAM” and “PARTS LIST” (found near the end of the manual)


Please contact us at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com) or 1-877-90SUNNY (877-907-8669).

# USER INSTRUCTIONS


**STEP 1:**

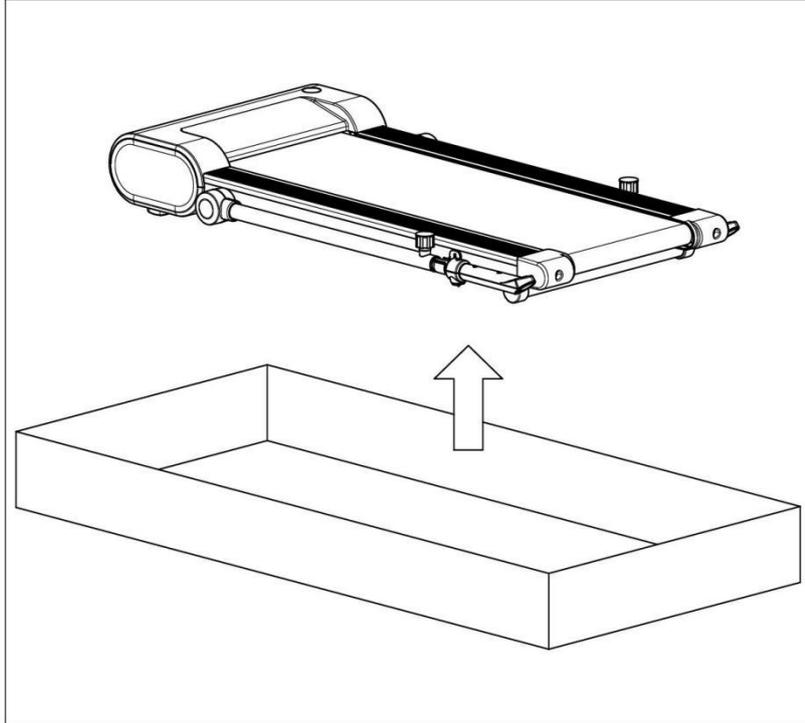

**STEP 2:**

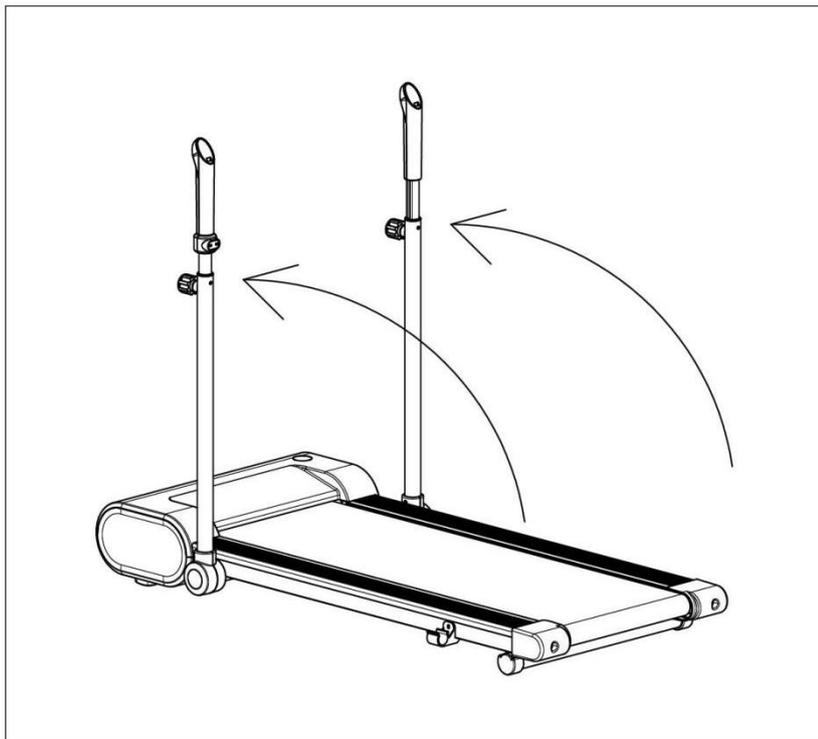


**STEP 3:**

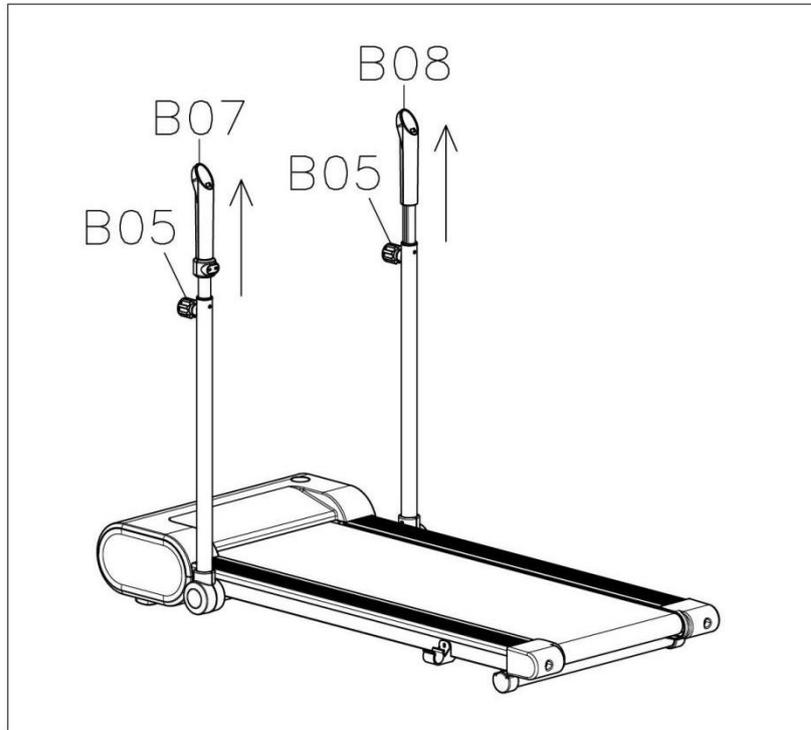

If you want to adjust the length of the **Left Handrail (No. B07)**, rotate the **Adjustment Knob (No. B05)** until it is loose. Use one hand to pull the **Adjustment Knob (No. B05)** outward and adjust the length of the **Left Handrail (No. B07)** with your other hand. Once desired length is found, release the **Adjustment Knob (No. B05)** so it clicks on the handrail. Tighten the **Adjustment Knob (No. B05)**. Adjust the **Right Handrail (No. B08)** in the same way.

**STEP 4:**

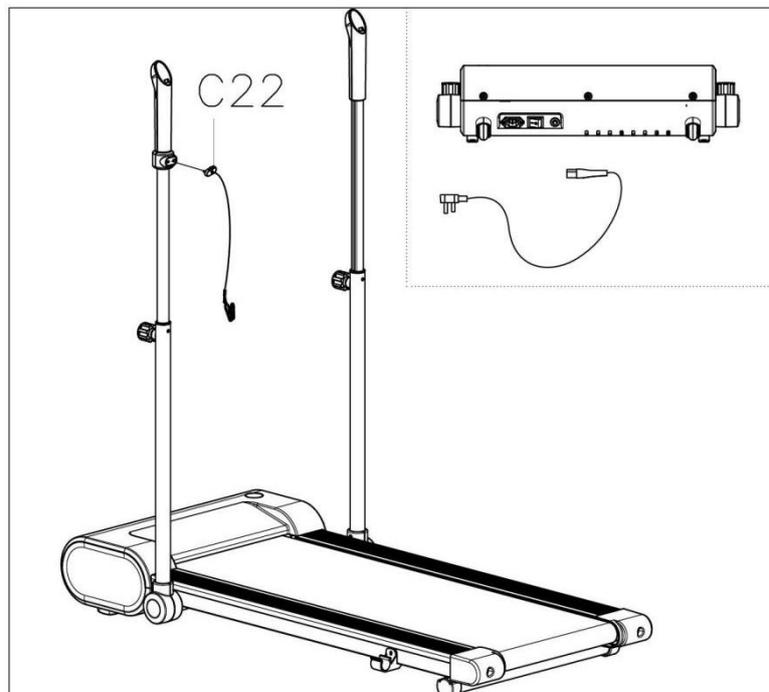

# LUBRICATING THE TREADMILL

## IMPORTANT NOTE:

You will need to lubricate your treadmill before the first use.


## RUNNING BELT & TREADMILL LUBRICANT:

Lubricating the **Running Board (No. E12)** and **Running Belt (No. C07)** is essential as the friction between the two affects the life span and function of the treadmill. Therefore, it is suggested that the **Running Board (No. E12)** and **Running Belt (No. C07)** be inspected regularly. Should you find any wear on the **Running Board (No. E12)**, please contact us at: [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com).

**WARNING:** Always unplug the treadmill from the electrical outlet before cleaning, lubricating or repairing the unit.

## HOW TO LUBRICATE:

1. To apply lubricant, lift one side of the **Running Belt (No. C07)** and apply oil to the middle of the **Running Board (No. E12)**. Next, start the treadmill and place it at the lowest speed setting and allow the oil to spread over the **Running Board (No. E12)**. Repeat this process for the other side.
2. The moving parts should turn freely and quietly. Abnormality of moving parts will affect the safety of the equipment. Inspect and tighten bolts regularly.
3. To better maintain the treadmill and prolong its lifespan, it is suggested that maintenance be done on a regular basis.
4. DO NOT LOOSEN OR MAKE ANY ADJUSTMENTS TO THE RUNNING BELT WHILE APPLYING LUBRICANT. A loose **Running Belt (No. C07)** will result in the runner sliding off during use, while too tight of a **Running Belt (No. C07)** will negatively affect the motor's performance and create more friction between the roller and **Running Belt (No. C07)**. The most suitable tightness for the **Running Belt (No. C07)** is when it is pulled out **50-75mm** from the **Running Board (No. E12)**.

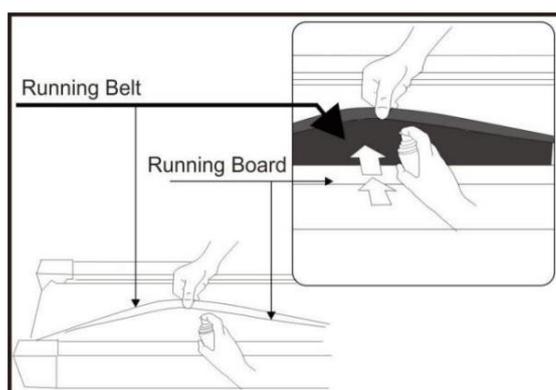

**The following timetable is recommended:**

- |  |                           |
|--|---------------------------|
| Light user (less than 3 hours/ week) - | <i>every six months</i>   |
| Medium user (3-5 hours/ week) -        | <i>every three months</i> |
| Heavy user (more than 5 hours/ week) - | <i>every two months</i>   |

# MAINTENANCE & CARE

General cleaning will help prolong the life and performance of your treadmill. Keep the unit clean and maintained by dusting the components on a regular basis. Clean both sides of the running belt to prevent dust from accumulating underneath the belt. Keep your running shoes clean so that dirt from your shoes does not wear out the **Running Board (No. E12)** and **Running Belt (No. C07)**. Clean the surface of the **Running Belt (No. C07)** with a clean damp cloth.


To better maintain the treadmill and prolong its life, it is suggested that the treadmill be powered off for 10 minutes every 2 hours and fully powered off whenever not in use.

## **CENTERING THE RUNNING BELT:**

Place the treadmill on level ground and set it at 2mph to check if the **Running Belt (No. C07)** drifts from the center.


1. If the **Running Belt (No. C07)** moves to the right, turn the right adjusting bolt  $\frac{1}{4}$  turn *clockwise*, then turn the left adjustment bolt  $\frac{1}{4}$  turn *counter-clockwise*. If the **Running Belt (No. C07)** does not move, repeat this step until it centers. Refer to Figure A.

A

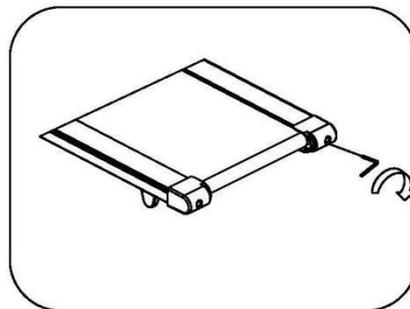


2. If the **Running Belt (No. C07)** moves to the left, turn the left adjusting bolt  $\frac{1}{4}$  turn *clockwise*, then turn the right adjustment bolt  $\frac{1}{4}$  turn *counter-clockwise*. If the **Running Belt (No. C07)** does not move, repeat this step until it centers. Refer to Figure B.

B

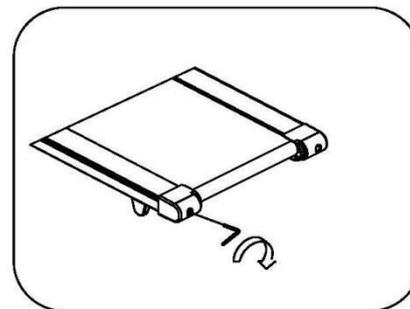


3. Over time, the **Running Belt (No. C07)** will loosen. To tighten the **Running Belt (No. C07)**, turn the left & right adjusting bolts one full turn *clockwise*, check the tension of the **Running Belt (No. C07)**. Continue this process until **Running Belt (No. C07)** is at the correct tension. Make sure to adjust both sides equally to ensure correct belt alignment. Refer to Figure C.



C

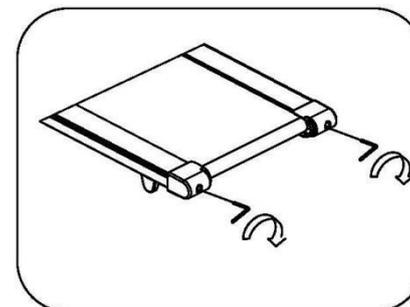

# HOW TO MOVE THE TREADMILL

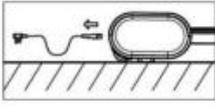

Please remove the power cord from the treadmill before moving.

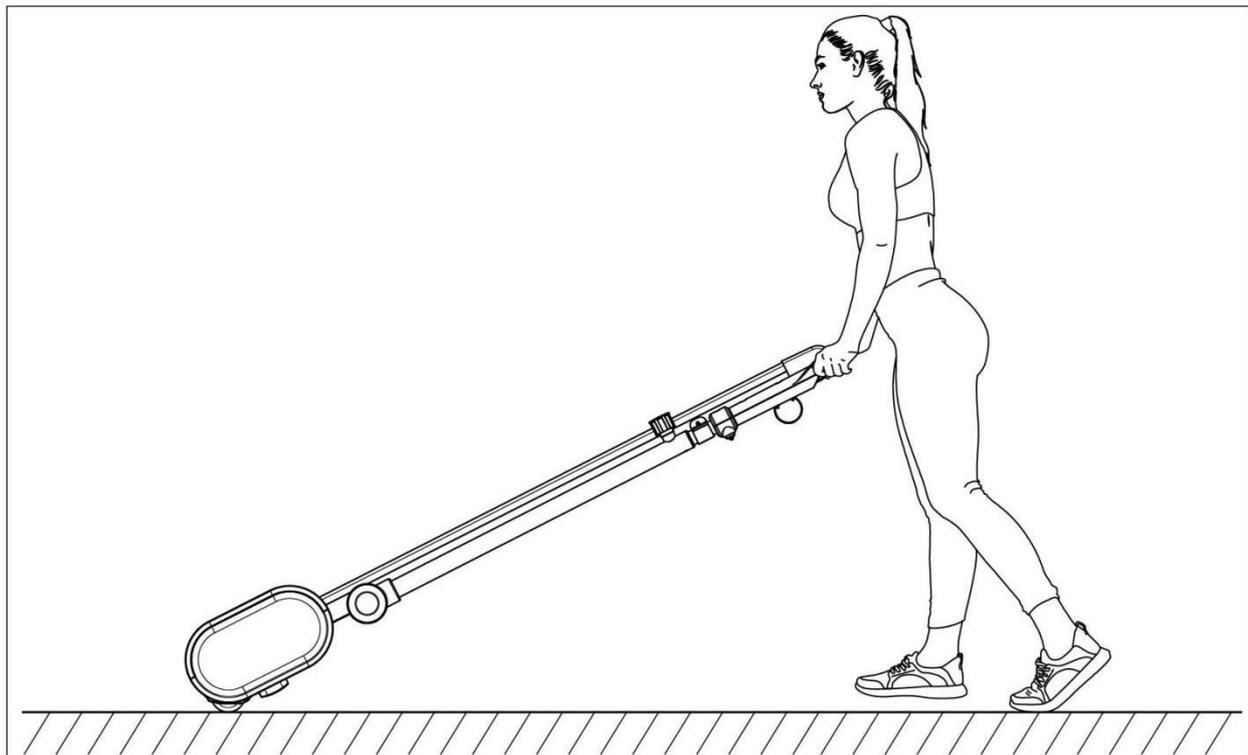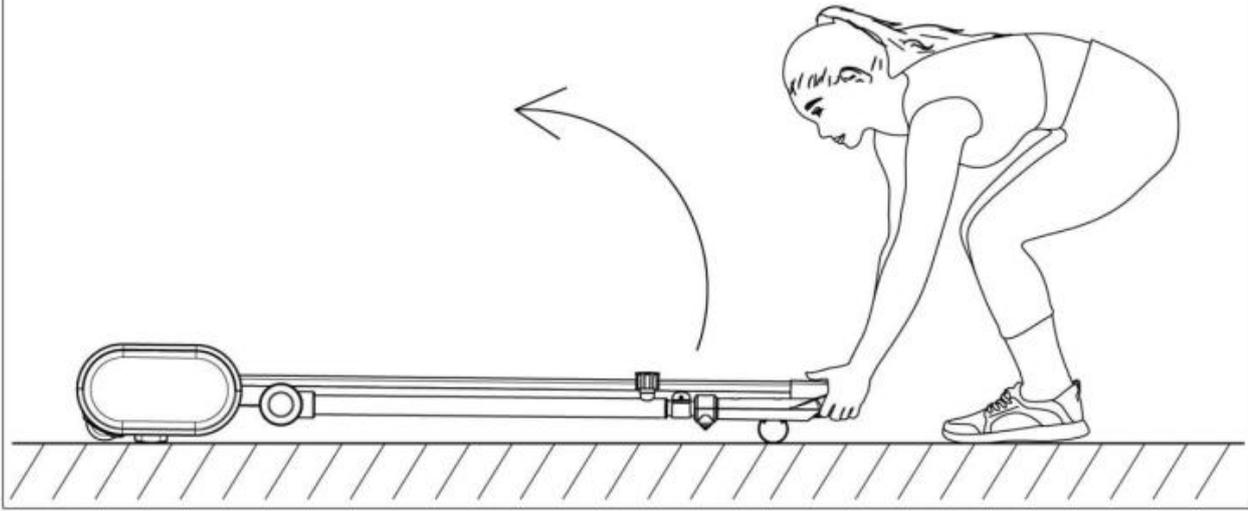

# **IMPORTANT ELECTRICAL INFORMATION**

**WARNING:** This treadmill requires a power source of **8 amps (100-120V)** in order to properly operate. For your safety, as well as the safety of others, verify that the power source is correct before plugging in the equipment. Any power source above or below this level could cause significant damage to the equipment and/or user.

## **GROUNDING METHODS:**

This product must be grounded. Grounding provides the least resistance for electrical current and will reduce the risk of electric shock. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Ensure that the product is connected to an outlet which contains the same configuration as the plug. Do not use an adaptor for this product.

This product is for use on a nominal 100-120V circuit and has a grounding plug that looks like the plug illustrated in sketch A. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.


## **DANGER:**

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a certified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by an electrician.


## **WARNING!**

1. NEVER use a ground fault circuit interrupt (GFCI) wall outlet with this treadmill. Route the power cord away from any moving part of the treadmill including the elevation mechanism and transportation wheels.
2. NEVER operate the treadmill using a generator or UPS power supply.
3. NEVER remove any cover without first disconnecting AC power.
4. NEVER expose the treadmill to rain or moisture. This treadmill is not designed for use outdoors, near pools, or in any other high humidity environment.

## **GROUNDING METHOD**

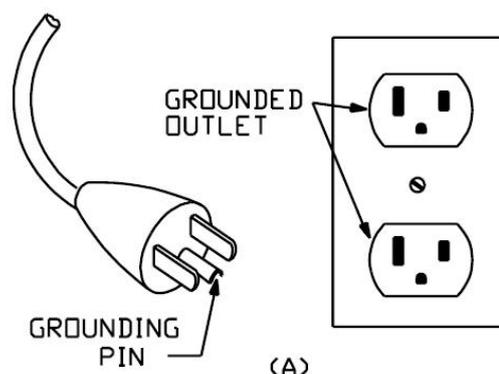

# **BATTERY INSTALLATION & REPLACEMENT**

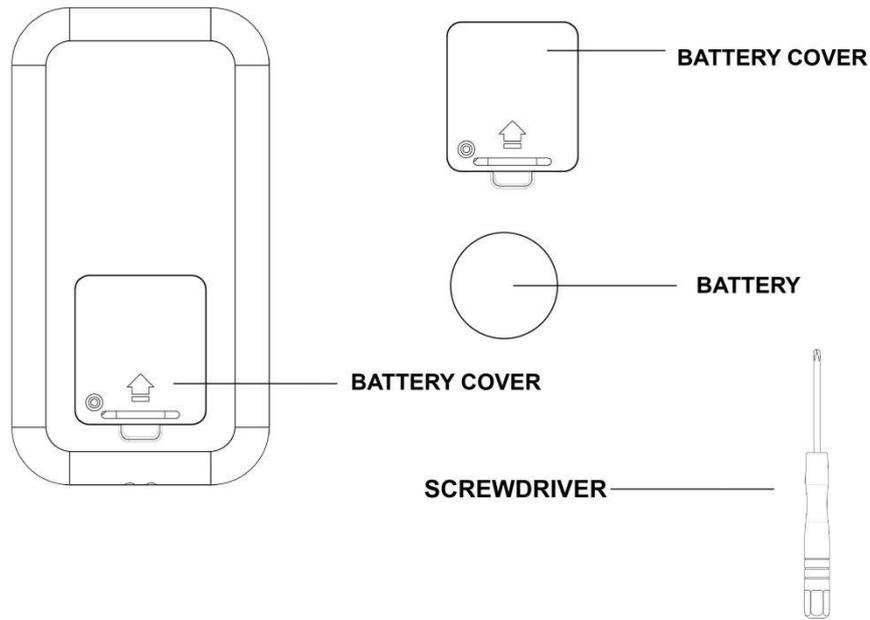

## **BATTERY INSTALLATION:**

1. Use a **Screwdriver (No. B04)** to loosen and remove the screw from the battery cover.
2. Take out the 1pc CR2032 battery that is included inside the remote control box.
3. Install the battery into the battery holder with the positive end facing up.
4. Put the battery cover back on to the battery holder and lock the screw into the battery cover.

## **BATTERY REPLACEMENT:**

1. Use a **Screwdriver (No. B04)** to loosen and remove the screw from the battery cover.
2. Remove the old battery and install the new battery into the battery holder with the positive pole facing up.
3. Put the battery cover back on to the battery holder and lock the screw into the battery cover.

Dispose of the old battery according to your regional guidelines.

**Model: CR2301**


**Product Name: REMOTE CONTROL CR2301**

### **FCC& IC Radiation Exposure Statement:**

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## THE DISPLAY CONSOLE

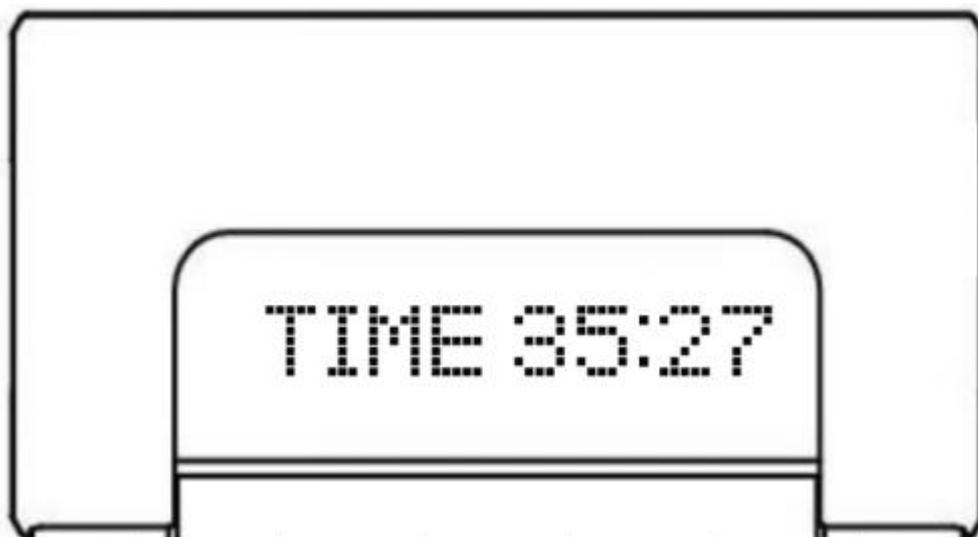

TIME 3:35    SPD 3.0    MILE 0.88    KCAL 20.8    STEP 00035

### **WINDOW DISPLAY:**

Displays calories, time, steps, distance, and speed value in turn every 5 seconds.

**CALORIES:** Displays the number of calories burned from 0.0 to 9999 KCAL. When the count reaches 9999 KCAL, it will reset and start back from 0.

**TIME:** Displays the time elapsed (00:00-99:59 MINS). If the time reaches 99:59, the treadmill will stop smoothly and display “End” then automatically reset to 0:00 after 5 seconds.

**STEPS:** Displays the number of steps from 0 to 99999. When the count reaches 99999, it will reset and start back from 0.

**DISTANCE:** Displays the distance traveled (0.00-99.99). When the distance reaches 99.99 MILE, it will reset to 0.00 and begin counting again from 0.00.

**SPEED:** The speed range is **0.5-3.7 MPH**; 0.5MPH is the default running speed.


### **\*NOTE:**

**The maximum speed on this treadmill is 3.7 MPH (Miles per hour).**

**When no person walks on the machine, distance, calories and steps will not count.**

PROGRAMS	Initial	Default Value	Set Range	Display Range
TIME (MIN: SECOND)	0	-	-	00:00—99:59
SPEED(MPH)	0.0	0.5	0.5-3.7	0.5—3.7
DISTANCE(MILES)	0	-	-	0.00--99.99
STEP	0	-	-	0-99999
CALORIE(KCAL)	0	-	-	0.0--9999


## REMOTE CONTROL FUNCTIONS:

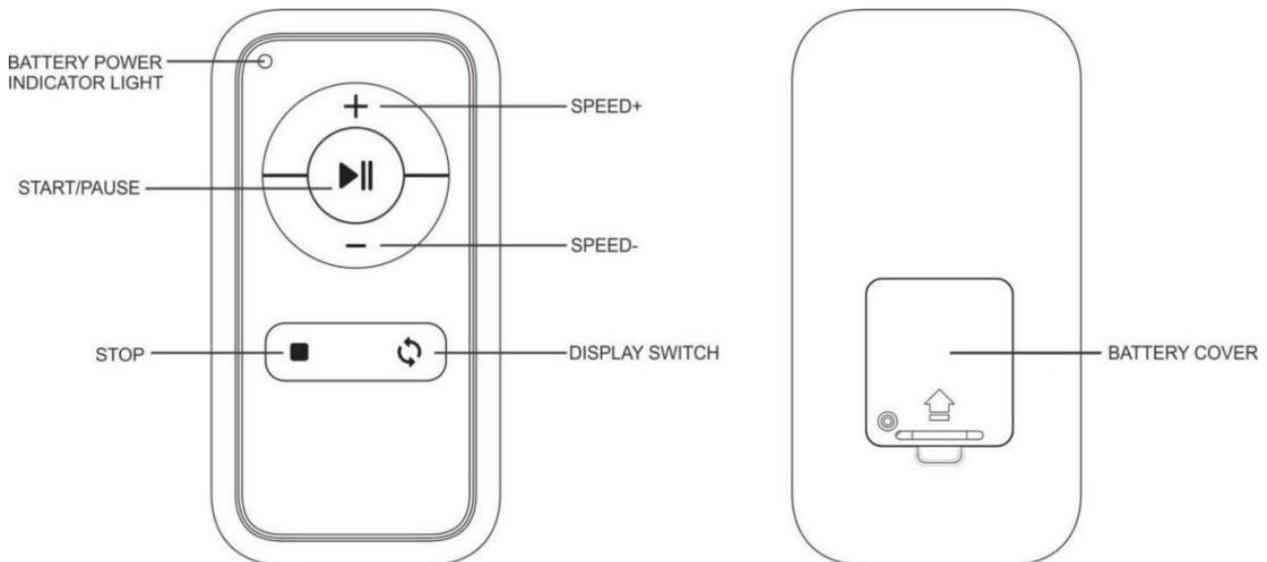

**Note:** If the treadmill does not respond to the remote control, you will need to resync the treadmill and remote control. To sync the remote control with the treadmill, hold the start/pause button on the remote control and turn on the treadmill. Now keep pressing the start/pause button for five seconds, until you will hear a “beep” sound, which means the remote control has resynced with the treadmill.

1. **START/PAUSE:** Press the START button, so that treadmill begins running. 0.5 MPH (Miles per hour) is the default start speed. During exercise, you also can press this button to pause the machine.
2. **SPEED +/-:** Press the +/- buttons to increase or decrease the speed in increments of 0.1 MPH (Miles per hour). Pressing and holding either of these buttons for a duration of over ½ a second will increase or decrease the speed continually.
3. **STOP:** When in use, press the STOP button to terminate your workout session completely. All data will be deleted and reset to the initial setting.
4. **DISPLAY SWITCH:** When in use, you can press this button to switch the display between Time, Distance, Calories, Steps and Speed value.
5. **BATTERY POWER INDICATOR LIGHT:** When you press any button on the remote, the light will blink three times if the battery is low. Please proceed to change the battery. If it does not blink, then the battery is not low.

## HANDRAIL CONTROL FUNCTIONS:

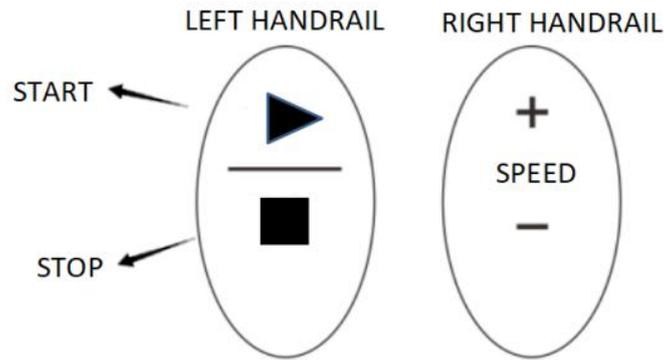

- 1. START:** Press the START button to start the treadmill. 0.5 MPH is the default start speed. During the exercise, you can also press this button to pause the treadmill.
- 2. STOP:** When in use, press the STOP button to terminate your workout session. All data will be deleted and reset to the initial setting.
- 3. SPEED +/-:** Press the +/- buttons to increase or decrease the speed in increments of 0.1 MPH (Miles per hour). Pressing and holding either of these buttons for a duration of over ½ a second will increase or decrease the speed continually.

## LUBRICATION REMINDER:

Your treadmill needs lubrication maintenance every 188 miles. The system will release a beeping sound every 10 seconds and display an "OIL" icon on your display to remind you when it's time. Please read the LUBRICATING THE TREADMILL instructions on *Page 7* to learn the proper steps to lubricate your treadmill. Apply the lubricant to the middle of the running deck on both sides. After application, press and hold the STOP button for 3 seconds to clear the reminder.

## POWER SAVE FUNCTION:

When the treadmill has been idle for 10 minutes, it will enter Power Saving Mode. While the treadmill is in this mode, the window display of the console will be turned off. To turn it back on, press any button on the remote control.

**Note:** The machine will stop automatically if no one walks on it for more than 15 seconds.

## POWER ON:

Flick the power switch to this symbol to turn on the treadmill.

## POWER OFF:

Flick the power switch to this symbol to turn the treadmill off at any time. This includes during exercise.

## SAFETY LOCK FUNCTION:

To stop the treadmill immediately, you can remove the **Safety Key (No. C22)** from the **Safety Key Top Cover (No. C20)** while the treadmill is running. Once the treadmill reaches a full stop, the window display on the console will show "EMER STOP" and the speaker will beep 3 times. To start the treadmill again, insert the pin end of the **Safety Key (No. C22)** into the **Safety Key Top Cover (No. C20)** and press the START button.

# EXERCISE INSTRUCTIONS

## GETTING STARTED:

Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly.

Be aware of your body's signals. Incorrect or excessive exercise can damage your health.

Stop exercising immediately if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea.

Get to know your treadmill. Before attempting to use the treadmill take some time to stand alongside and familiarize yourself with the controls.

1. Before beginning exercise, stand on the side rails.
2. Next, attach the clip end of the **Safety Key (No. C22)** to your clothes and insert the pin end of the key to the console.
3. Press the START button to start the machine.
4. The machine will start at the system default setting speed of **0.5 MPH**. When you feel comfortable, you may slowly increase the speed.
5. When you are finished with your exercise, press the STOP button or you can remove the pin end of the **Safety Key (No. C22)** to stop the machine.

## APP CONNECTION:

1. Scan the QR code below to download the SunnyFit app onto your mobile device.



2. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
3. Ensure that the Bluetooth  function is turned on from your mobile device.
4. To connect the equipment to the SunnyFit app:
  - a. From the "Workout" tab, press on the "Search" button to search for your equipment.
  - b. Once your equipment appears on the list, tap the "Select" button to confirm.
  - c. Note: If your equipment does not appear on the "Searching for Equipment" list, check the CONSOLE on your equipment to ensure that it is not in sleep mode and your phone's Bluetooth function is on, then tap "Retry" to search again.
  - d. Once your equipment shows up on the "Workout" tab as "Currently Selected", your equipment is now ready to display, track, and record your equipment's workout stats on the app!
5. If you are unable to replicate these steps, or have any other issues with the SunnyFit app, please contact SunnyFit support at [support@sunnyfit.com](mailto:support@sunnyfit.com), or use the in-app "Contact Us" form to request support ("Me" tab -> "Contact Us").


# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SUGGESTED ACTION
Treadmill will not start	Not plugged in.	Plug cord into outlet.
	Safety Key not inserted.	Insert Safety Key.
Running belt not centered	Running belt tension is not correct on the left or right sides of the running board.	Tighten the adjustment bolts on the left and right side of the rear roller.
Console not working	Wires from the console and bottom control board are not properly connected.	Check wire connections from the console to the control board.
	Transformer is damaged.	If the transformer is damaged, contact customer service.
0001 ERROR: Message failure	Wires from the console and bottom control board are not properly connected.	Check wire connections from the console to the control board. If the wire has been punctured or damaged, you will need to replace it. If the problem is not rectified, you may need to replace the control board.
0002 ERROR: Burst clash protection	Incoming voltage is lower than 50% of the required voltage.	Check that the incoming power supply is the correct voltage.
0005 ERROR: Current overload protection (Self Protecting System)	The incoming voltage is too low or too high. The control board is damaged.	Restart the treadmill. Check the incoming voltage to ensure it is correct. Check the control board, replace if damaged.
	A moving part of the treadmill is stuck and therefore the motor is unable to rotate properly.	Inspect moving parts of the treadmill to ensure that they are operating correctly. Check the motor, listen for any strange noises and check for a burning smell. Replace the motor if necessary.

0006 ERROR: Motor abnormality	The motor wire is not connected, or the motor is damaged.	Check motor wires to see if the motor is connected. If the wire has been punctured or damaged, you will need to replace it. If the problem is not rectified, you may need to replace the motor.
0008 ERROR: Control board abnormality	The control board is not connected.	Check the upper and middle wires to see if the control board is connected. If the wire has been punctured or damaged, you will need to replace it. If the problem is not rectified, you may need to replace the control board.
0009 ERROR: Inversion error	The treadmill sets upright or not placed horizontally.	Adjust the treadmill and place it horizontally. If the wires of the control board do not connect well, replace to a new control board.
0010 ERROR: Motor abnormality	The motor is damaged, or a moving part of the treadmill is stuck and therefore the motor is unable to rotate properly.	Inspect moving parts of the treadmill to ensure that they are operating correctly. Replace the motor if necessary.

**NOTE: If you are unable to resolve an issue using the troubleshooting guide above, please contact Customer Service at [support@sunnyhealthfitness.com](mailto:support@sunnyhealthfitness.com).**

# EXPLODED DIAGRAM

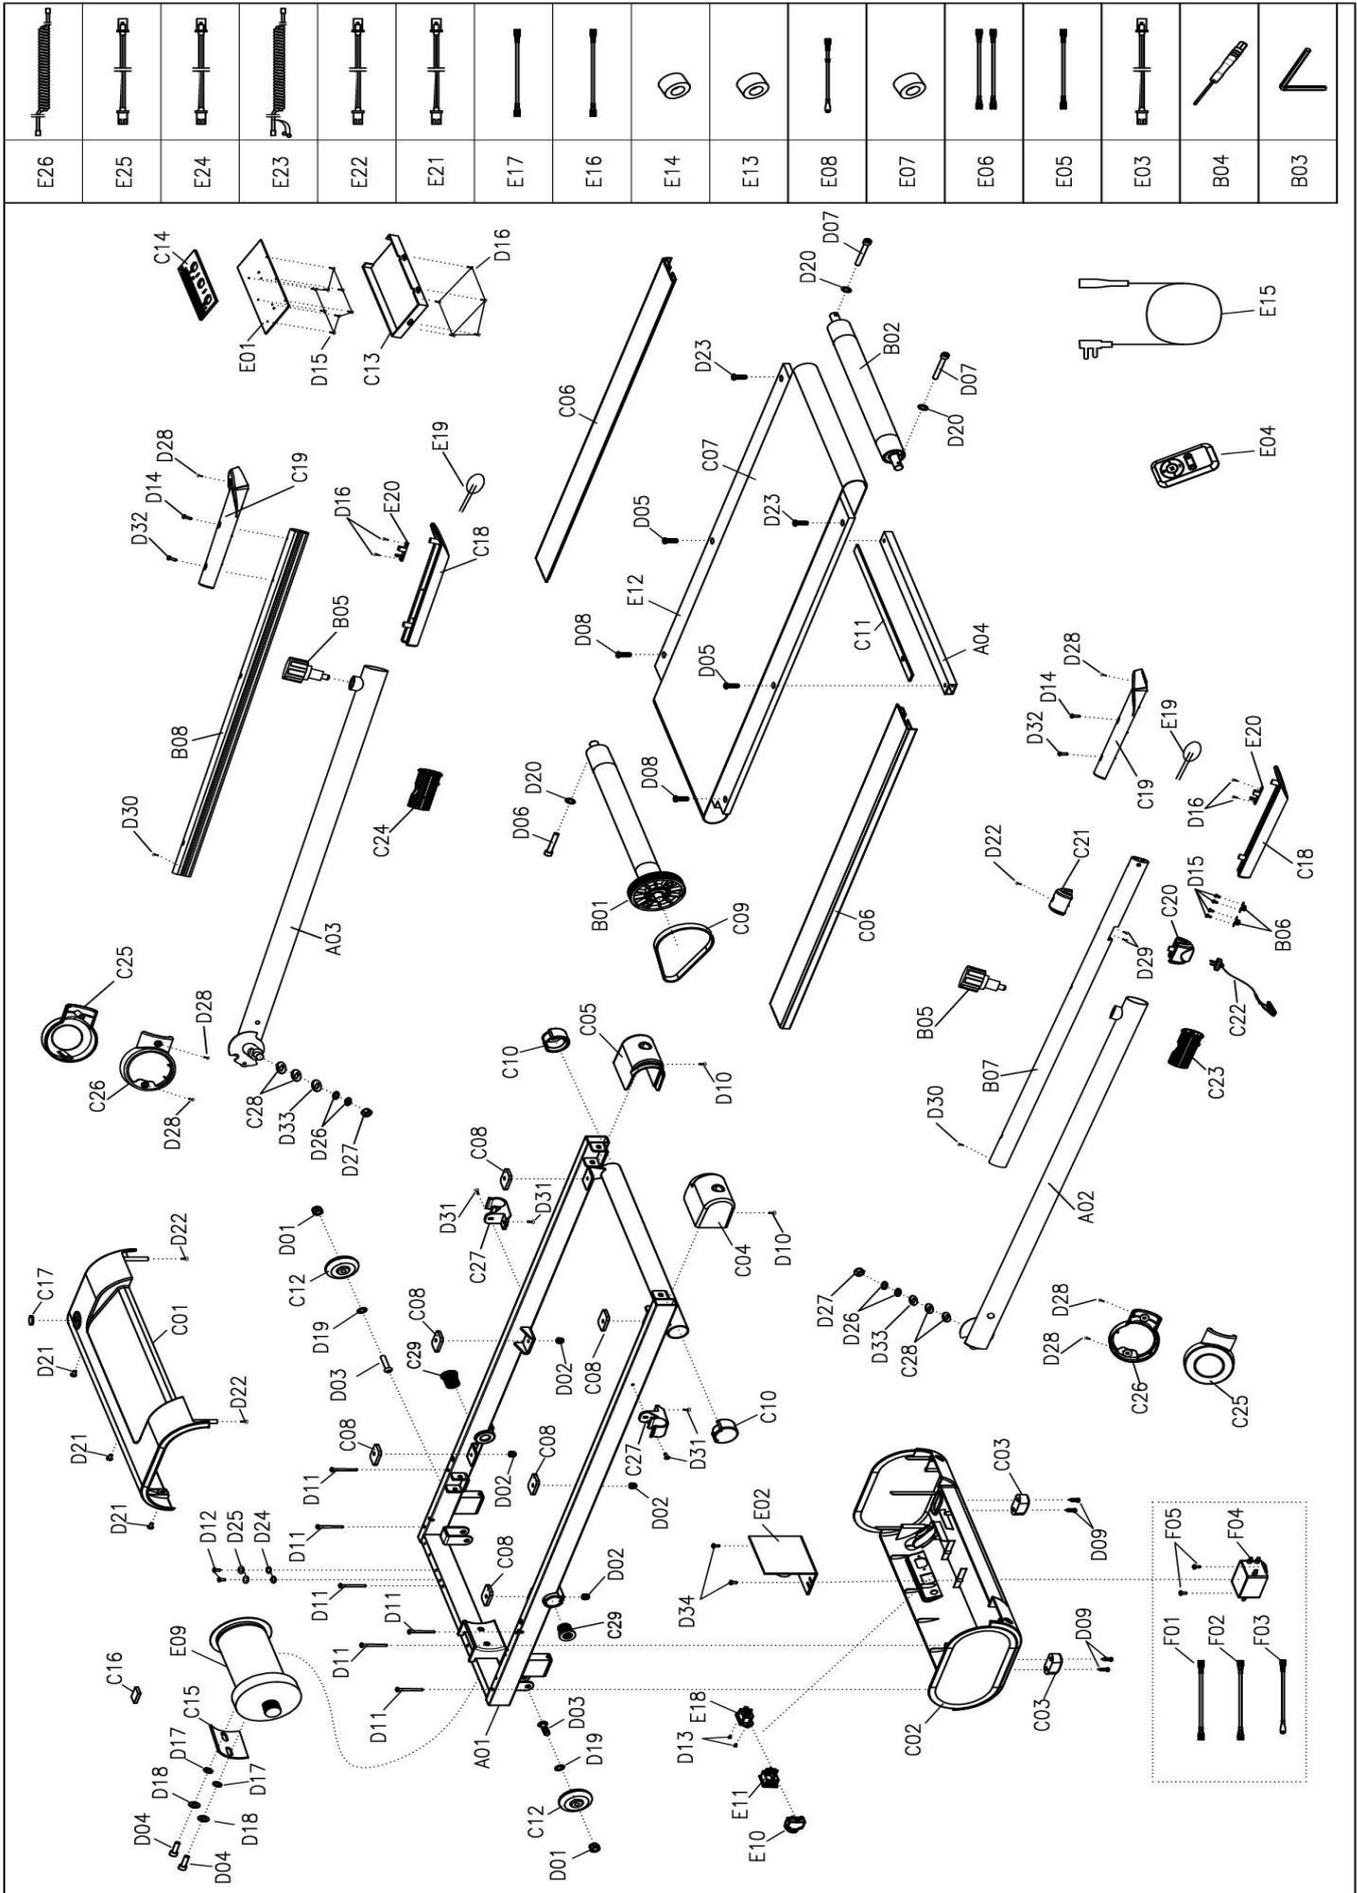

# PARTS LIST

No.	Description	Spec.	Qty.	No.	Description	Spec.	Qty.
A01	Main Frame		1	C28	Plastic Gasket		4
A02	Left Handrail Frame		1	C29	Bushing		2
A03	Right Handrail Frame		1	D01	Nut	M8	2
A04	Running Board Strengthen Tube		1	D02	Nut	M6	4
B01	Front Roller		1	D03	Bolt	M8*40	2
B02	Rear Roller		1	D04	Bolt	M8*15	2
B03	Allen Wrench	5mm	1	D05	Bolt	M6*46	2
B04	Screwdriver		1	D06	Bolt	M6*45	1
B05	Adjustment Knob		2	D07	Bolt	M6*55	2
B06	Safety Key Plate		2	D08	Bolt	M6*28	2
B07	Left Handrail		1	D09	Bolt	M5*16	4
B08	Right Handrail		1	D10	Bolt	M5*12	2
C01	Motor Top Cover		1	D11	Screw	ST4.2*50	6
C02	Motor Bottom Cover		1	D12	Bolt	M5*12	2
C03	Foot Pad		2	D13	Countersunk Head Screw	ST2.9*8	2
C04	Left End Cap		1	D14	Bolt	M4*12	2
C05	Right End Cap		1	D15	Screw	ST2.5*6	12
C06	Side Rail		2	D16	Screw	ST2.9*6	9
C07	Running Belt		1	D17	Spring Washer	Φ8	2
C08	Rubber Cushion		6	D18	Flat Washer	Φ8	2
C09	Motor Belt		1	D19	Locked Washer	Φ8	2
C10	C Shape Foot Pad		2	D20	Locked Washer	Φ6	3
C11	Rubber Strip		1	D21	Pan Head Tapping Screw	ST4.2*12 Head with washer	3
C12	Adjustable Wheel		2	D22	Screw	ST4.2*20	3
C13	Console Board Cover		1	D23	Bolt	M6*28	2
C14	Optical Grating		1	D24	Locked Washer	Φ5	2
C15	EVA Pad	80*64*3	1	D25	Spring Washer	Φ5	2
C16	EVA Pad	40*30*3	1	D26	Washer	Φ10	4
C17	EVA Pad	Φ 20*2.5	1	D27	Bolt	M10*1.0	2
C18	Handrail Top Cover		2	D28	Screw	ST4.2*12	6
C19	Handrail Bottom Cover		2	D29	Screw	ST4.2*8	2
C20	Safety Key Top Cover		1	D30	Screw	ST2.9*4	2
C21	Safety Key Bottom Cover		1	D31	Screw	ST4.2*12 Head with washer	4
C22	Safety Key		1	D32	Screw	ST4.2*12	2
C23	Handrail Left Cover		1	D33	D-shaped Washer	Φ10	2
C24	Handrail Right Cover		1	D34	Pan Head Tapping Screw	ST4.2*12	2
C25	Handrail Outer Cover		2	E01	Console		1
C26	Handrail Inner Cover		2	E02	Control Board		1
C27	Support Fastener		2	E03	Console Communication Wire		1

No.	Description	Spec.	Qty.
E04	Remote Control		1
E05	AC Single Line	Blue 200	1
E06	AC Single Line	Brown 200	2
E07	Magnetic Ring 1		1
E08	Grounding Wire	Green and Yellow	1
E09	DC Motor		1
E10	Overload Protector		1
E11	Square Switch		1
E12	Running Board		1
E13	Magnetic Ring		1
E14	Magnetic Core		1
E15	Power Wire		1
E16	AC Single Line	Brown 350	1
E17	AC Single Line	Blue 350	1

No.	Description	Spec.	Qty.
E18	Power Socket		1
E19	Button		2
E20	Button Switch Board		2
E21	Left Handrail Top Wire		1
E22	Left Handrail Middle Wire		1
E23	Left Handrail Bottom Wire		1
E24	Right Handrail Top Wire		1
E25	Right Handrail Middle Wire		1
E26	Right Handrail Bottom Wire		1
F01	AC Single Line	Brown 350	1
F02	AC Single Line	Blue 350	1
F03	Ground Wire	350	1
F04	Filter		1
F05	Pan Head Tapping Screw	ST4.2*12	2

Version 1.0

**CONNECT**  
with us

## DOWNLOAD

Track your fitness progress & join  
**FREE** workout courses!

Download  **SUNNYFIT** today!



---

## FOLLOW

Find us on social media @sunnyhealthfitness

 @sunnyhealthfitness

 @sunnyhealthandfitness

 @sunnyhealthfit

 /sunnyhealthfitness

 /sunnyhealthfitness

 /sunnyhealthandfitness

[www.sunnyhealthfitness.com](http://www.sunnyhealthfitness.com)