### 

## VL35/45/60 ProS



V1.5

Please email us at: official@icecofreezer.com

## Catalogue


<b>1</b> Tips For Opening The Door 1
2 Supply Details 2
3 Operation 4
4 Cleaning And Maintenance 8
5 Error Codes & Solutions 10
6 Warranty & Return Policy 12
7 Troubleshooting (Q & A) 13
8 Safety Instructions 17
9 FCC Warning 22

### **1** Tips For Opening The Door


1. To open the lid from the right side, keep fingers together and grip the right latch.




3. To open the lid from the left side, repeat the above steps.

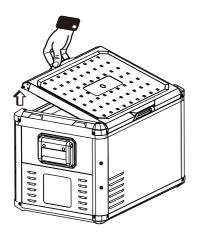

2. Push the latch inwards and lift up the lid.

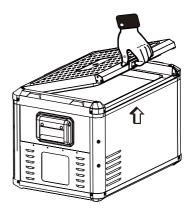

4. Grip the latch on both sides and push them inwards to disassemble the lid.

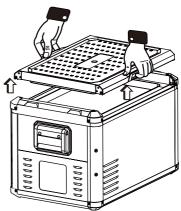


## **2** Supply Details




**Refrigerator x1** 




Wire Basket x1

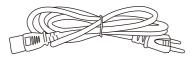


5.9 Feet 110V AC Wall Outlet Cable X1

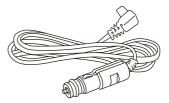

11.5 Feet 12/24V DC Cigarette Lighter Plug Cable x1

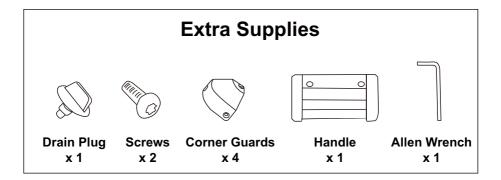


MODEL	VL35 ProS	VL45 ProS	VL60 ProS	
Dimensions HxWxD	28x15.9x15.7 (inch)	28.1x15.9x18.1 (inch)	30.2 x18.5x18.1 (inch)	
	713x405x401 (mm)	712.6x406.1x461 (mm)	767.6x470.1x461 (mm)	
Net	48.5 lbs	52.0 lbs	55.8 lbs	
Weight	22 kg	23.6 kg	25.3 kg	
Storage	37 quarts	47.5 quarts	63.4 quarts	
Volume	35 liters	45 liters	60 liters	
Voltage	DC 12/24V & AC 110-120V			
Refrigerant	R513A			
Temperature Range	-18°C to +10°C (0°F to 50°F)			

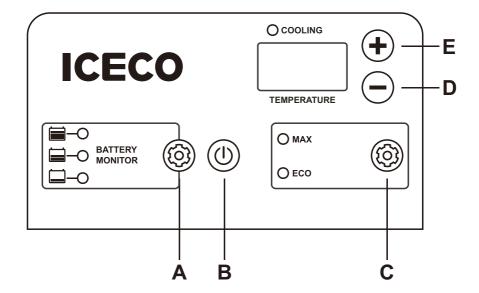


- **A** Battery Protection Settings
- **B** Power ON/OFF Button
- **C** Compressor Speed (MAX/ECO Mode)
- **D** Temp DOWN Button
- **E** Temp UP Button

#### 3.1 MAX & ECO Mode

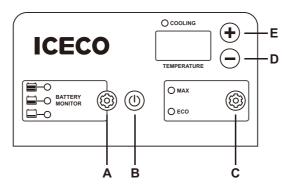


After the fridge turned on(Press & Hold B/Power Button), you can press the MODE Button C to switch between MAX or ECO mode for the fridge.

#### 3.2 Switch Between °C and °F

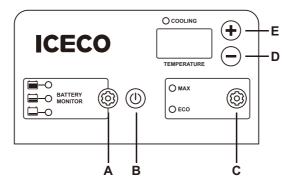

After the fridge turned on(Press & Hold B/Power Button), press and hold Button C and Button D for 3 seconds to switch between the temperature values of Celsius & Fahrenheit.

#### 3.3 Setting Temperature

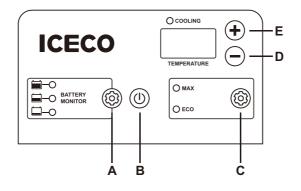


After the fridge turned on, the fridge's CURRENT interior temperature reading will appear on the display, as a solid non-flashing number. To change the fridge's set temperature:

Press Temperature Up (Button E) to increase the temperature.

Press Temperature Down (Button D) to decrease the temperature.

The SET temperature will appear as a FLASHING number and after the temperature is SET, the display will return to show the fridge's CURRENT interior temperature.


#### **3.4 Triple Battery Protection Operation**

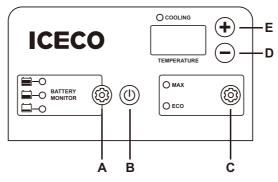

After the fridge turned on, press Battery Protection Button A to adjust the fridge's low battery protection level pre-sets.

**A** NOTICE: Details of Battery Protection Mode could be found in Page 15.

#### 3.5 USB Connector

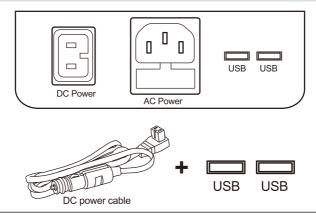

**NOTICE: USB connector only takes effect when charging in DC power cord.** 

### **4** Cleaning And Maintenance

#### 4.1 Cleaning

- Always unplug the fridge before cleaning the fridge.
- You can clean the interior and exterior of the fridge by using warm water, mixed with a gentle non-abrasive detergent.
- You may use a soft sponge, or micro fiber cloth.
- When not in use, it's better to leave the lids open to reduce odors.
- If odors occur, please clean the fridge thoroughly, or use baking soda in a bowl to absorb odors.

#### 4.2 Danger Behavior

- **A** Use pointed objects to scrape, or defrost ice.
- **A** Use abrasive detergents to clean.
- **A** Use heavy duty sponges (due to scratching).
- Clean the fridge with running water or pressure washer.
- Clean the fridge without power input covers secured.

## Error Codes & Solutions

Code	Description
E1	The DC voltage is below the protection settings and the battery protection mode is activated.
E2	The cooling fan is over-loaded with more than 1A of current.
E3	Motor start error The motor of compressor is blocked or the pressure difference in the refrigeration system is too high.
E4	Minimum motor speed error The compressor is over-loaded, and the motor cannot maintain its minimum speed of 1850 rpms.
E5	Thermal cut-out of electronic unit Thermal cut-out error. If the refrigeration system overloads, or the ambient temperature is too high, the thermal sensor is overheated.
LL	NTC failure (open circuit)
HH	NTC failure (short circuit)

### Solutions

- If this error code appears when the fridge is operating on 12V DC, please try to lower the battery protection setting and see if the error is resolved. The battery protection mode may be triggered prematurely on certain vehicles due to small wiring imperfections, contributing to a measured DC voltage drop at compressor start-up. Lowering the battery protection setting may resolve this issue.
- Please also care about the reading of your battery voltage to make sure it is not depleted/discharged.
- If possible, please connect the AC power to try if the refrigerator appears error code.
- Please contact us directly if the error persists.

### **6** Warranty & Return Policy

- 30 days refund guarantee upon receiving.
- 5 years warranty on the compressor.
- **1 year** warranty for other parts or accessories.

For returns or exchanges, please call us, or fill out the following return and exchange registration form in the package as a proof of return. All materials must be returned in the original condition and packaging. Thank you for your cooperation.

If the product is received damaged or defective during transportation, you will need to contact our customer service within 2 business days. Make sure to provide relevant photos or videos, your order ID number, and your name. A customer service agent will help assist into solving the issue at a timely manner (Return, Exchange, or Discount Compensation). A free return label will be provided if needed.

### 7 Troubleshooting (Q & A)

#### 1. Heat resistance & water resistance

#### Heat resistance

ICECO refrigerators are engineered to operate at an ambient temperature of up to 55 °C(131 °F).

#### Weather Proof

ICECO refrigerators can operate under light rain conditions. Please keep the vents above clear of water, and please add some clearances to the bottom of the fridge if the ground is wet.

We DO NOT recommend exposing the fridge to moderate or heavy rain.

As with all electrical appliances, over-exposure to moisture may shorten the fridge's life.

# 2. Why did it change back to the original temperature after setting the temperature?

The Solid/Non-Flashing number on the display is the CURRENT interior temperature. The Flashing number is your SET temperature after adjustment. The compressor will shut off when the SET temperature is reached.

## 3. What should I do if the refrigerator is upside down when it is delivered?

Please leave your refrigerator upright for **24 hours** to allow the compressor lubricant to resettle before powering on the fridge. Otherwise it may contribute to certain operation abnormalities.

## 4. What is the function of triple battery protection? How do they work?

The triple battery protection is designed to prevent over-discharge and battery depletion. When the measured DC voltage is below the set value, the compressor is shut off to prevent battery depletion.

VOLTAGE		12V		24V	
PROTECTION POSITION		CUT OFF (V)	CUT IN (V)	CUT OFF (V)	CUT IN (V)
LOW	1 Bar	9.6	10.9	21.3	22.7
MED	2 Bars ===	10.4	11.7	22.8	24.2
HIGH	3 Bars ≣≣≣	11.1	12.4	24.3	25.7

For example, when you switch to a LOW MODE, the battery voltage is under 9.6 volts, the refrigerator will automatically cut the power OFF;

The refrigerator will start again till the battery voltage reached back to 10.9 volts.

## 5. What is the power draw in max/ fast cooling mode?

Model	Electrical Power	Model	Electrical Power
GO20	50W	JP Series	60W
VL 35 ProS	45W	VL45 ProS	45W
VL60 ProS	47W	VL75 ProD	57W
VL90 ProD	61W	VL Series	85W

This data is only suitable for laboratory testing, and the actual power is subject to actual conditions.

#### 6. Why is there a temperature difference (between the actual temperature of the refrigerator and the set temperature)?

Because of the sinking nature of cold air, the different temperatures may exist in different locations in the refrigerator (the temperature of the bottom will be the lowest). The panel only shows the average temperature of the refrigerator.

## 7. What kind of cable do I need to use in the car and at home?

The DC cable is provided. You can power it from your vehicle's cigarette lighter plug using the DC cable. You can also power it at home, but you need to use with AC cable as precondition.

## 8. What is the specification of the fuse of the refrigerator?

The supply line is protected by a 15A fuse located in the refrigerator.

### SAFETY INSTRUCTIONS

Please read the user manual and safety instructions carefully before using the appliance.

By ignoring the safety instructions, the manufacturer cannot be held responsible for the damage.

The use of accessories that are not recommended by manufacturer can cause injuries and will invalidate any warranty that you may have.

The appliance shall not be exposed to moderate/heavy rain.

Place the refrigerator on a dry, secure surface, with adaquate ventilation.

- Do not leave the refrigerator unattended in uncovered, outdoor areas exposed to the elements.
- Do not use this appliance near direct heatsources, such as an open flame or radiator.
- Do not place open containers of liquid inside the fridge.
- Please don't put hot/warm food into the fridge directly without letting it cooling off. Place/arrange the content of your fridge securely when using the refrigerator inside a moving vehicle.

To maximize energy savings, please make sure the lid is closed and secure, and only open the fridge when you need to.

The power cable must only be replaced by qualified technical personnel and by an assistant body authorized by the manufacturer.

Before carrying out any maintenance operations on the refrigerator, disconnect all power sources from the fridge.

This appliance is suitable for camping use.

#### WARNING!

- Please keep the fridge in a well ventilated area.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical devices inside the food storage compartments of the appliance, unless approved/recommended by the manufacturer.
- Do not store explosive items, such as aerosol cans with a flammable propellant in this appliance.
- Risk of fire and electrical shock.
- Do not let hot items touch the plastic parts of the appliance.
- Do not put flammable products or items in, near or on the appliance.

- Do not touch the compressor or the condenser when the fridge is operating. They may be very hot.
- When setting up the appliance, ensure the supply cord is not trapped or damaged.

## Further information is provided on the technical data label inside the product.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. Children should be supervised to ensure that they do not play with the appliance.

3. This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

5. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

6. **DANGER**: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- \* Take off the doors.
- \* Leave the shelves in place so that childrenmay not easily climb inside.

## 9 FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Cooler Than A Cooler