

STEALTH POWER"

RUNNING BOARDS

INSTALLATION GUIDE





Your Complete Satisfaction is Our Number One Goal at Rolling Big Power, your satisfaction is why we're in business. If for any reason your experience with our product was anything less than satisfactory, please reach out to us. We'd love to have the opportunity to provide the product experience and service you deserve.

> For Installation Instruction videos visit our YouTube page at: https://www.youtube.com/user/rollingbigpowertv



STOP. DO NOT RETURN TO THE STORE. WE CAN HELP. QUESTIONS OR PROBLEMS, OUR TEAM OF PROFESSIONALS ARE HERE TO HELP.



CALL TOLL FREE 1-877-519-9090, MON-FRI: 8:00AM - 5:00PM PST

APPLICATIONS:

2019 RAM 1500 CREW CAB

TOOLS REQUIRED

- 5 MM ALLEN WRENCH
- 13 MM SOCKET AND WRENCH
- 10 MM COMBINATION WRENCH
- ELECTRIC DRILL
- 10 MM NUT DRIVER TIP
- RAZOR BLADE
- RTV SILICONE
- 50/50 MIX OF ISOPROPYL ALCOHOL AND WATER
- 1" WIDE MASKING TAPE
- MEASURING TAPE
- TORQUE WRENCH



WWW.ROLLINGBIGPOWER.COM





CONTENTS

•	ENGLISH	
	Product Technical Specifications	04
	Product Packing List	05
	Installation	07
	Warranty Information	14

1-877-519-9090 | 3



PRODUCT TECHNICAL SPECIFICATIONS

Rated Voltage: 12V

Load Rating: 600 lbs per side

Gross Weight: 55 lbs


Horizontal Extension: 7.44

(Horizontal distance between the edge of power board and the vehicle door when the

board extends)
Step Height: 14.6

(Vertical height difference between the edge of power board and the vehicle door while

board extending.)

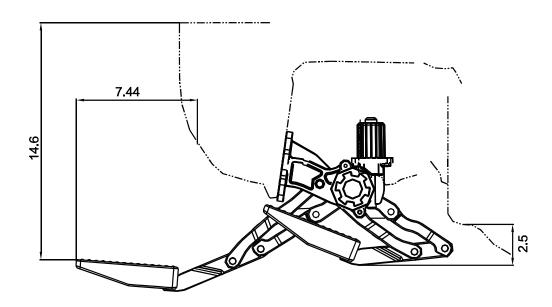


WARNING: Keep a minimum of 10″ safe distance while the Stealth Power™ Running Board is operating to avoid any personal injury or damage to the running boards. Stealth Power™ Running Boards are not designed to provide vehicle body protection. Components can be damaged by hard impact or contact with foreign objects.

4 | WWW.ROLLINGBIGPOWER.COM






Please verify that all listed components were included in your package. If not, please call our team at 877-519-9090 for assistance.

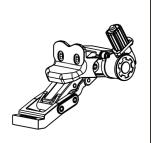

Left Front Motor Linkage 20×1 Left Rear Motor Linkage 20×1

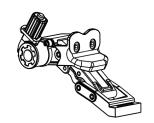


Right Front Motor Linkage 20×1 Right Rear Motor Linkage 20×1



M8 Hex Nut x 14



Hexagon Flange Bolt ×8

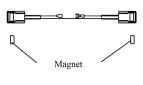

Wired Magnetic Induction Module ×2 Magnet ×4




Socket Cap Screw ×8



20A Fuse×2



LED Lamp Module×4

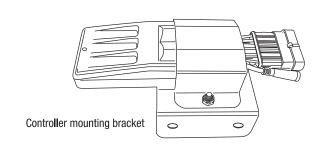


1-877-519-9090

6/12/2019 3:16:30 PM






PRODUCT PACKING LIST

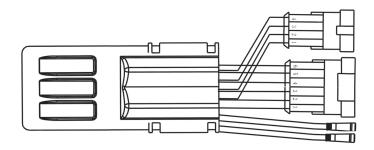

Notice: As shown in the picture, there is a four-conductor plug, a six-conductor plug, a black two-conductor plug, and a red two-conductor plug.

Controller Assembly

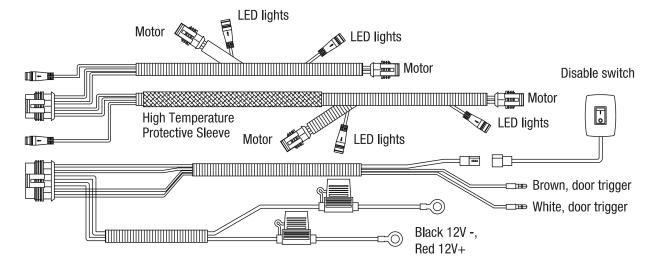







Step 1

Step 1: Disconnect the battery. Begin with the negative battery terminal, followed by the positive terminal.

Step 2: On the Driver side, inspect the motor and controller mounting threaded studs. If the studs have a heavy paint buildup from the factory, clean the threads with a screw thread cutting die.

Step 3: Install the rear Driver side motor using three M8 hex nuts to fasten the motor to the truck. The hardware should be hand tightened only until snug. This will allow the motor assembly to move and align easier when installing the running board.

Step 4: Install the front Driver side motor using three M8 hex nuts to fasten the motor to the truck. The hardware should be hand tightened only until snug. This will allow the motor assembly to move and align easier when installing the running board.



Step 2



Step 3



Step 4

(





Step 5: . Install the Driver side running board.







Step 5B



Step 5A



Step 5B

- 5a. Begin by propping up the running board on the front and rear motor assembly bases.
- 5b. Next align the sliding T-Nut blocks on the running board with the slots on the front and rear motor base.
- 5c. Once the T-Nuts are aligned, rotate the running board so that the T-Nuts drop int to the slots on the base of the arms.
- 5d. Secure the running board to the arms using the M6x25 socket head cap screws. Using a torque wrench, tighten to 9 ft-lbs.


Step 6: Now that the running board is installed, go back and tighten the hardware on the Driver side front and rear motor assemblies. Using a torque wrench, tighten the mounting hardware to 18 ft-lbs.

Step 7: Repeat Steps 2-6 to install the motor linkage assemblies and running board on the Passenger side.







Step 8: Locate the threaded stud cluster near the center of the cab on the Driver side of the truck. Install the controller bracket using two M8 Hex nuts. Using a torque wrench, tighten to 18 ft-lbs.

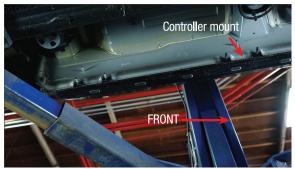

Step 8

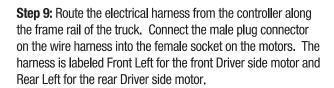

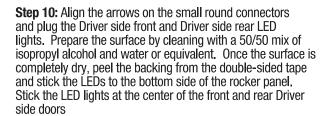

Step 11: Route the motor and LED wire harness from the controller to the Passenger side frame rail of the vehicle. When routing the harness keep clear from any moving parts and avoid direct contact with the exhaust system.

Step 12: Connect the male plug connector on the wire harness into the female socket on the motors. The harness is labeled Front Right for the front Passenger side motor and Rear Right for the rear Passenger side motor.



Step 9





Step 10





1-877-519-9090







Step 13: Align the arrows on the small round connectors and plug the Passenger side front and Passenger side rear LED lights. Prepare the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Once the surface is completely dry, peel the backing from the double-sided tape and stick the LEDs to the bottom side of the rocker panel. Stick the LED lights at the center of the front and rear Passenger side doors.

Step 14: On the Driver side, remove the front kick panel, front door sill trim, b-pillar trim panel and pull the front driver side carpet back. Locate the plastic grommet on the driver side floorboard and drill a 7/16" hole as shown.

Step 15: Feed the door trigger signal wires (white and brown) and the disable switch wires (two black wires) into the cab. Seal around the wires using RTV silicone adhesive to prevent water intrusion.

Step 16: Route the Driver side door trigger wire (brown) towards the Driver side b-pillar. Route the Passenger side door trigger wire (white) under the center console and over to the Passenger side b-pillar. Route the black disable switch wires to the center console.

Step 17: The door trigger sensor harness will need a ground connection to the vehicle. Locate the hex head screw near the seatbelt assembly and install the ground under the plastic housing as shown.

Step 18: Connect the snap-in bullet connector to the brown wire on the Driver side b-pillar.






Step 13





Step 14

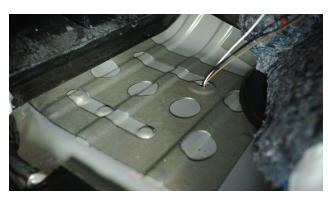

Step 15



Step 17

10 WWW.ROLLINGBIGPOWER.COM



STEALTH POWER

INSTALLATION INSTRUCTIONS

Step 19: Apply a vertically oriented strip of masking tape on the front Driver side door using the deepest part of the latch as a reference point. Make a mark 2.5" above the center line of the latch. Prepare the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Once the surface is completely dry, peel the backing from the double-sided tape and stick the magnet on the door. Align the bottom of the magnet with the 2.5" mark on the tape as shown.

Step 20: Apply a vertically oriented strip of masking tape on the door jamb using the outer edge of the front Driver side door striker as a reference point. Make a mark 2.5" above the center line of the striker. Lift the bulb door seal to route the sensor wire underneath it. Prepare the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Once the surface is completely dry, peel the backing from the double-sided tape and stick the sensor on the door jamb. Align the bottom of the sensor with the 2.5" mark on the tape as shown.


Step 21: Apply a vertically oriented strip of masking tape on the door jamb using the inner edge of the rear door detent as a reference point. Make a mark 4.0" below the center line of the door detent. Lift the bulb door seal to route the sensor wire underneath it. Prepare the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Once the surface is completely dry, peel the backing from the double-sided tape and stick the sensor on the door jamb. Align the top of the sensor with the 4.0" mark on the tape as shown.




Step 21A



Step 19

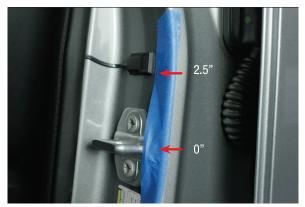

Step 20

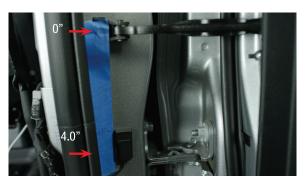

Step 21B

1-877-519-9090 | 11





Step 22: Apply a horizontally oriented strip of masking tape on the rear driver side door jamb using the door detent as a reference point. Make a mark 0.5" from the edge marked as 0". Prepare the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Lift the bulb door seal to route the sensor wire underneath it. Once the surface is completely dry, peel the backing from the double-sided tape and stick the rear door sensor to the door jamb. Align the top left corner of the sensor with the 0.5" mark as shown.

Step 23: Repeat steps 17-22 to install the Passenger side door trigger sensors and magnets. The Passenger side door trigger harness is connected to the white wire that was routed under the carpet to the Passenger side b-pillar in Step 16.

Step 24: Locate the black wires for the disable switch and feed them to the passenger side of the center console.

Step 25: Prepare the surface by cleaning with a 50/50 mix of isopropyl alcohol and water or equivalent. Once the surface is completely dry, peel the backing from the double-sided tape and stick the disable switch on the lower dash panel. Plug the disable switch connector into the black wire harness and tuck the extra wire behind the lower dash panel.



Step 22



Disable switch



Step 24



Step 25

STEALTH POWER

INSTALLATION INSTRUCTIONS

Step 26: Remove the 20 Amp fuses from the main positive and negative 12V power leads on the main harness.

Step 27: Route the power wires over the wheel well and into the engine compartment. Connect the ring terminals to the battery positive and negative terminals

Step 28: Install the 20 Amp fuses back into the main negative and positive power lead fuse holders.

Step 29: Connect the battery terminals. Begin with the positive terminal followed by the negative terminal.

Step 30: Open and close all four doors to test the operation of your new Stealth Power Running Boards. Please note that there is a 4 second delay for the running boards to retract after the doors are closed.

Step 31: Open the Driver side door and keep the door open. Flip the disable switch to the "O" or Off position. This will signal the running boards to retract to the stowed position and it will disable any further operation until the switch is flipped to the "I" or On position.

Thank you for choosing RBP! We hope you enjoy your new Stealth Power Running Boards. We would love to hear about your experience and see your vehicle decked out with our products. To share simply tag us using #Rollingbigpower, #RBP or #RBPStealthPower or DM us on Facebook and Instagram and visit us on YouTube!





Step 26



Step 27



FOLLOW US



©rollingbigpower



1-877-519-9090 13





RBP STEALTH POWER WARRANTY

Rolling Big Power believes in true customer satisfaction. We strive to provide you, our customer, with a delightful experience with our products. In the event that your experience is not delightful - please contact us and allow one of our professional customer service agents take care of you. Our primary goal is for you to become a customer for life - we're willing to earn it.

Rolling Big Power warrants that any RBP product purchased from an RBP Authorized Resellers will be free from any defects in manufacturing, materials and workmanship for five years from original date of purchase, for the original purchaser for the product installed on the purchaser's original vehicle. Please validate your warranty by REGISTERING YOUR RBP PRODUCT.

NOTE: If you purchased an RBP product from an unauthorized reseller, the unauthorized reseller your warranty may or may not be honored. It is strongly recommended that you purchase RBP products from an RBP Authorized Resellers. To view dealers currently authorized to sell Rolling Big Power products, visit our website to see a complete list.

During the 5-year warranty period, RBP provides free replacement for any manufacturer's defects. RBP reserves the right to replace any individual component of the system, or the entire system at its sole discretion. RBP provides a limited lifetime warranty against rust on the running board assemblies for the original purchaser. Proof of purchase is required when submitting a request for warranty replacement. Within the limit of law, the interpretation of warranty policy solely belongs to RBP.





RBP STEALTH POWER WARRANTY

Exclusions to the RBP Stealth Power Warranty:

- · Any product improperly installed, altered, lack of or improper maintenance or improper use of our products.
- No proof of purchase or RBP warranty registration as noted above
- Purchased from an unauthorized reseller
- Failure due to misuse, abuse, neglect or impact/collision
- · Any cosmetic scratches or discoloration or any other cosmetic condition that does not affect mechanical operations
- · Failure caused by force majeure
- Improper maintenance or care
- · Any and all costs of removal, installation, freight, incidental or consequential damages are excluded from this warranty.









(

FOLLOW US







WWW.ROLLINGBIGPOWER.COM 1-877-519-9090

STRAIGHT DOIN' IT®