


# LSH Series Standard Type Linear Guide

#### **Product Introduction**

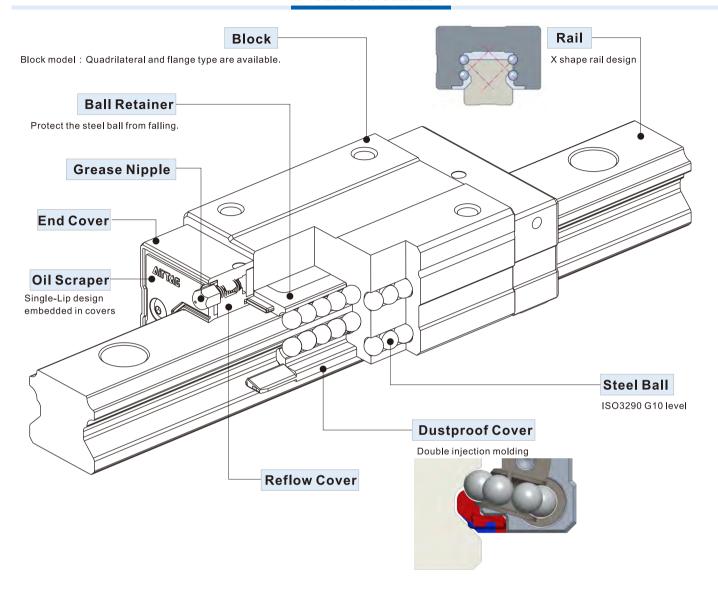

### **Product Features**

# 1. With self-adjustment ability

X-shaped (45°-45°) of curved groove on cross section design makes it self-aligning. Even small misalignment exists on the mounting surface, this design can help absorb it and maintain high precision, smooth and stable linear motion.

# ${\bf 2.\ High\ rigidity,\ equal\ load\ on\ four\ direction\ design}$

The 45-degree contact angle design of the four rows of steel balls and the raceway allow the steel balls to achieve the ideal two-point contact, and can withstand the action and reaction force from the radial and lateral direction. Meanwhile, pre-load can be applied to increase extra rigidity if necessary.

#### 3. Interchangeable

Because of the strict control on manufacturing process, the dimensional accuracy is stable and within the set tolerance. Besides the ball retainer design can prevent steel balls from falling out. Therefore when assembling, blocks are interchangeable within the same spec and still maintain consistency of pre-load and accuracy.







# LSH 15 H N 1X220 S20 A H-AM6-B-T

		①Model Code			L	SH:Stand	lard Ty	pe Lir	ear Guide		
		②Rail Width		15:15	mm 20:	20mm	25:23	3mm	30:28mm	35:34m	ım
		③Block Style		Н		Flange ty	γpe, Μα	ountin	pe, Mounting fr g from bottom om top or bottoi	•	
					N: S	tandard	L: L	ong [w	/o 15 series]		
		<b>⑤Number of Block</b>	1: (	One	2: Two [N	lote: Amo	ount of	block	on a single set (	of linear	guid
		<b>®Length of Rail</b>	220:220mm[Defined by customer]								
		⑦ Position of first mounting hole			It is recomm	ended to	be gre	ater tl	nter of first mou nan minimum m is 20mm]		е
		®Preload					B: Ligh	t Prelo	oad C: Med	ium Prelo	oad
		<pre></pre>			N : Norr	mal	H:Hi	gh	P : Precisio	n	
				M4	M4 Nipple	9		M	M6 Nipple	00	1
				AM6	M4 to M6	I type 🦪	2	0 A0	1 M6 to PT1/8	I type	4
		Mipple/adapter	15	AIVIO	1014 10 1010	-		5 AM	8 M6 to M8		1
Standard margin pitch is 20m	m,	type	10			L type		0 L0		Ltype	
Customer can define a non-stan				LM6	M4 to M6	- 4	) J	<sup>5</sup> LM	8 M6 to M8		W
margin pitch.				LIVIO	1014 10 1010	4	<b>'</b>	SM	6 M6 Nipple	4	1
		①Packing type	Ppe  Blank: the block and rail are assembled B: block and rail are put separately								
		② Rail type				nk: Top-m			ottom-mount		

# **Butt-jointed Order Information**

# LSH15 H N 1X3920T3900T3920 A H-AM6-B-T

Note: Number of joints cannot be more than 2 times(three rails at most). For LSH15/20/25, maximum length of jointed rail is 11800mm. For LSH30/35, it's 11880. Customization is needed for joint times more than standard.


	①Model Code			LSI	H:Standard	Тур	e Line	ar Guide	
	②Rail Width	15	:15mr	n 20:20	mm 25:	23n	ım	30:28mm	35:34mm
	③Block Style		H: \$		ange type, N	1oui	nting f	e, Mounting from bottom n top or bottor	
				N: Sta	ndard L:	Lon	g [ W/	O15 series ]	
	⑤Number of Block	1:	One	2: Two [No	te: Amount o	fblo	ck on a	a single set of I	inear guide
	<b>©Length of first Rail</b>		;	3920:3920r	mm	.[De	fined	by the custon	er]
	<b>⊘Butt-jointed mark</b>	(	Butt-j	ointed end r	T: Rail But nargin:1/2P			nark standard hole	distance]
į L	® Length of secont Rail		;	3900:3900r	nm	.[De	fined	by the custon	ner]
		Blank: two rails joint T: Rail Butt-jointed mark (Butt-jointed end margin: 1/2P) [P is the standard hole dista							
į	<b>@Length of third Rail</b>	В	lank: t	wo rails joi	nt 3920:39	20n	۱m	[Defined by	customer]
ii	①Preload	A: 5	Standa	ard clearan	ce B:Li	ght I	Preloa	d C: Med	ium Preloa
Butt-jointed end margin:1/2P ,	12 Accuracy				N : Normal		H:	High	
Position of the first and last hole is defined by customer.			M4	M4 Nipple	-		M6	M6 Nipple	44
			A A 4 C	NAA 4 - NAC	I type	20	A01	M6 to PT1/8	I type
	® Nipple/adapter		AIVIO	M4 to M6	7	25	AM8	M6 to M8	7
	- (3) Nippie/adapter		15			30	L01	M6 to PT1/8	L type 📗
	type	15			L type		LUI	1010 101 1170	
	~	15	LM6	M4 to M6	L type	35	LM8	M6 to M8	V
	~	15	LM6	M4 to M6	L type				-
	~	15	LM6	Blank:	7	35	LM8 SM6 ail are	M6 to M8 M6 Nipple	-





## 1. Block Order Information

# LSH 15 BK-H N-H-D-AM6

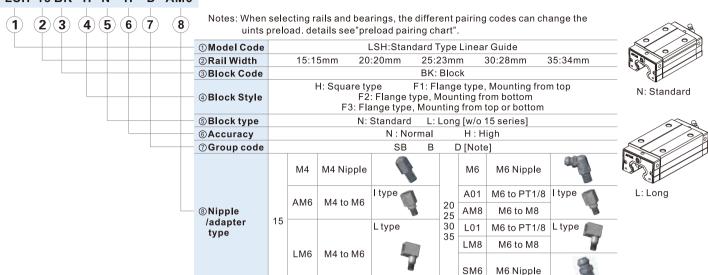

# 2. Rail(4m) Order Information

# LSH 15 RL X 4000-H - D - T



Note: •Standard length of LSH rail is four meters.

•For LSH15/20/25, both margin pitch of rail are 20mm.

• For LSH30/35, one side of margin pitch is 20mm, the other side is 60mm.

•When selecting rails and bearings, the different pairing codes can change the uints preload. details see "preload pairing chart".

# 3. Rail Order Information

# LSH 15 RL X 220-S20 -H- D- T



Customer can define a non-standard margin pitch.

Standard margin pitch is 20mm, Note: When selecting rails and bearings, the different pairing codes can change the uints preload. details see "preload pairing chart".

# 4. Rail/Block preload pairing chart


When customer orders rail/block, please choose the pairing code of rail/block in accordance with the needed preload of linear guide(combined). Details please refer to the "preload pairing chart".

Preload pairing chart									
Droloada	rodo	Rail pairing code							
Preload o	grade	D							
Block	SB	Medium preload							
pairing	В	Light preload							
code	D	Standard clearance							






# **Accessory Order Code**

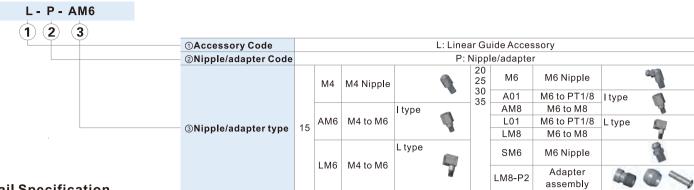

# **Rail Specification**

The edge pitch of first mounting hole (S) and last mounting hole (E) should not be greater than 1/2P. Overlong edge may induce unstable installation and affect the accuracy.

n: Numbers of mounting holes

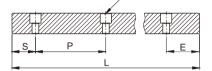

 $L=(n-1)\times P+S+E$ 

P: Distance between bolt holes(mm)

L: Total length of rail(mm)


- S: Edge of first mounting hole(mm)

Model	LSH15	LSH20	LSH25	LSH30	LSH35
Pitch(P)	60	60	60	80	80
Standard Edge Pitch(S)	20	20	20	20	20
Min. Edge Pitch(S/E min)	5	6	7	8	8
Max. Edge Pitch(S/E max)	55	54	53	72	72
Maximum length of rail for standard edge	4000	4000	4000	3960	3960
Maximum length(Lmax)	4000	4000	4000	4000	4000

#### Note

- Joint rail must be chosen if length of rail exceeds the maximum.
- When deciding edge pitch, it should be within the range of above table. There would be risk of broken hole if pitch is out of range.
- Maximum length of rail for standard' means the maximum length of rail can be chosen when both sides of edge pitches are standard.

# **Specifications and Dimensions**

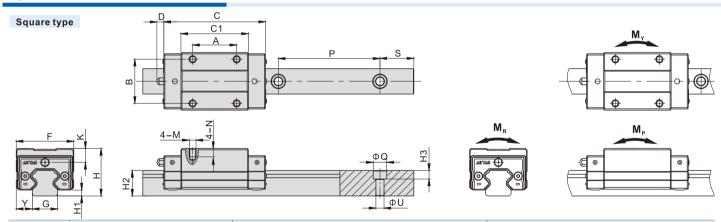

Model\Item	Ext	ernal D	imens	ion ( m	<b>m</b> )			Block	Dimen	nsion ( mm )			Rail Dimension ( mm )						
Modelillein	Н	H1	F	Υ	С	C1	Α	В	K	D	M	N	G	H2	Р	S	ΦQ	ΦU	H3
LSH15HN	28	3.5	34	9.5	60	40	26	26	8.3	6	M4X0.7	5	15	15	60	20	8	4.8	5.3
LSH20HN	30	4.3	44	12	76.5	52	36	32	6.5	12.5	M5X0.8	6	20	17.5	60	20	9.5	5.8	8.5
LSH20HL	30	4.3	44	12	90.5	66	50	32	6.5	12.5	M5X0.8	6	20	17.5	60	20	9.5	5.8	8.5
LSH25HN	40	6.5	48	12.5	83.5	58.5	35	35	10.9	12.5	M6X1.0	8	23	22	60	20	11.2	7	9
LSH25HL	40	6.5	48	12.5	105	80	50	35	10.9	12.5	M6X1.0	8	23	22	60	20	11.2	7	9
LSH30HN	45	6.5	60	16	95.5	70.5	40	40	11	13	M8X1.25	10	28	26	80	20	14.2	9	12
LSH30HL	45	6.5	60	16	118	93	60	40	11	13	M8X1.25	10	28	26	80	20	14.2	9	12
LSH35HN	55	7	70	18	109	80	50	50	16.2	12.5	M8X1.25	12	34	29	80	20	14.2	9	12
LSH35HL	55	7	70	18	134.5	105.5	72	50	16.2	12.5	M8X1.25	12	34	29	80	20	14.2	9	12


Model\Item	Mounting	Dynamic Load Rating(kN)	Static Load Rating(kN)	Static Ra	ated Momer	nt (kN.m)	We	ight
Modelliteili	Screw	С	$C_{\scriptscriptstyle{0}}$	M <sub>R</sub>	M <sub>P</sub>	M <sub>Y</sub>	Block(kg)	Rail(kg/m)
LSH15HN	M4	11.3	17.9	0.12	0.12	0.12	0.2	1.43
LSH20HN	M5	18.6	28.6	0.27	0.25	0.25	0.33	2.23
LSH20HL	M5	22.2	37.6	0.35	0.34	0.34	0.41	2.23
LSH25HN	M6	26.9	39.4	0.44	0.38	0.38	0.53	3.32
LSH25HL	M6	32.9	53.0	0.58	0.57	0.57	0.7	3.32
LSH30HN	M8	37.4	55.0	0.66	0.67	0.67	0.91	4.5
LSH30HL	M8	45.7	73.1	0.88	0.91	0.91	1.17	4.5
LSH35HN	M8	50.8	72.3	1.05	0.92	0.92	1.26	6.37
LSH35HL	M8	61.9	96.1	1.52	1.45	1.45	1.68	6.37




# **Standard Type Linear Guide**



# LSH Series

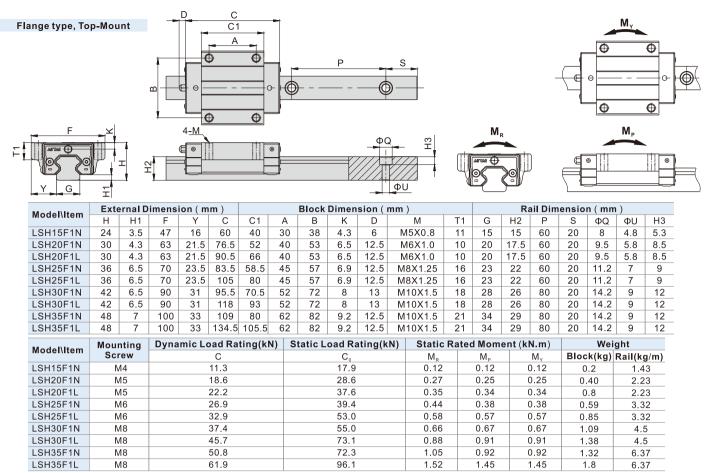

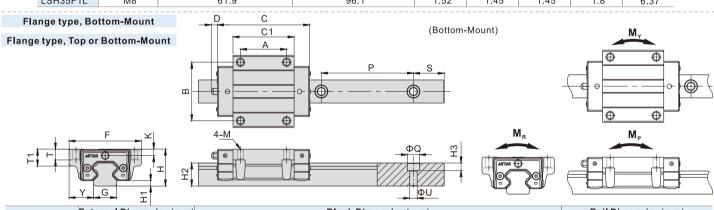


Model\Item	Model\Item External Dimension(mr					Block Dimension(mm)								Rail Dimension(mm)							
Model/Itelli	Н	H1	F	Υ	С	C1	Α	В	K	D	M(Bottom-Mount)	M(Top or Bottom-Mount)	Т	T1	G	H2	Р	S	ΦQ	ΦU	Н3
LSH15F2(F3)N	24	3.5	47	16	60	40	30	38	4.3	6	Φ4.5	M5X0.8	7	11	15	15	60	20	8	4.8	5.3
LSH20F2(F3)N	30	4.3	63	21.5	76.5	52	40	53	6.5	12.5	Ф5.7	M6X1.0	9.5	10	20	17.5	60	20	9.5	5.8	8.5
LSH20F2(F3)L	30	4.3	63	21.5	90.5	66	40	53	6.5	12.5	Ф5.7	M6X1.0	9.5	10	20	17.5	60	20	9.5	5.8	8.5
LSH25F2(F3)N	36	6.5	70	23.5	83.5	58.5	45	57	6.9	12.5	Φ6.8	M8X1.25	10	16	23	22	60	20	11.2	7	9
LSH25F2(F3)L	36	6.5	70	23.5	105	80	45	57	6.9	12.5	Ф6.8	M8X1.25	10	16	23	22	60	20	11.2	7	9
LSH30F2(F3)N	42	6.5	90	31	95.5	70.5	52	72	8	13	Φ9	M10X1.5	10	18	28	26	80	20	14.2	9	12
LSH30F2(F3)L	42	6.5	90	31	118	93	52	72	8	13	Ф9	M10X1.5	10	18	28	26	80	20	14.2	9	12
LSH35F2(F3)N	48	7	100	33	109	80	62	82	9.2	12.5	Ф9	M10X1.5	13	21	34	29	80	20	14.2	9	12
LSH35F2(F3)L	48	7	100	33	134.5	105.	62	82	9.2	12.5	Ф9	M10X1.5	13	21	34	29	80	20	14.2	9	12

Model\Item	Mounting	Dynamic Load Rating(kN)	Static Load Rating(kN)	Static Ra	ated Momer	nt (kN.m)	Wei	ight
Model/Item	Screw	С	C <sub>o</sub>	M <sub>R</sub>	M <sub>P</sub>	M <sub>Y</sub>	Block(kg)	Rail(kg/m)
LSH15F2(F3)N	M4	11.3	17.9	0.12	0.12	0.12	0.2	1.43
LSH20F2(F3)N	M5	18.6	28.6	0.27	0.25	0.25	0.40	2.23
LSH20F2(F3)L	M5	22.2	37.6	0.35	0.34	0.34	0.8	2.23
LSH25F2(F3)N	M6	26.9	39.4	0.44	0.38	0.38	0.59	3.32
LSH25F2(F3)L	M6	32.9	53.0	0.58	0.57	0.57	0.85	3.32
LSH30F2(F3)N	M8	37.4	55.0	0.66	0.67	0.67	1.09	4.5
LSH30F2(F3)L	M8	45.7	73.1	0.88	0.91	0.91	1.38	4.5
LSH35F2(F3)N	M8	50.8	72.3	1.05	0.92	0.92	1.32	6.37
LSH35F2(F3)L	M8	61.9	96.1	1.52	1.45	1.45	1.8	6.37




# Dimension of bottom-mount type rail

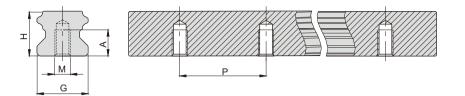

Model\ltem	G	Н	М	Α	Р
LSH15T	15	15	M5X0.8	8	60
LSH20T	20	17.5	M6X1.0	10	60
LSH25T	23	22	M6X1.0	12	60
LSH30T	28	26	M8X1.25	15	80
LSH35T	34	29	M8X1.25	17	80

# **Accuracy**

LSH standard type linear guide comes with 3 accuracy levels.

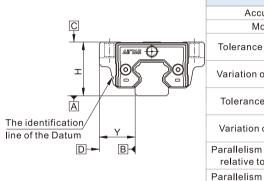

Accura	cy Sta	ndards	(mm)					
Accuracy	N : 1	Normal	H:	High	P:Pr	ecision		
Model	15/20	25/30/35	15/20	25/30/35	15/20	25/30/35		
Tolerance of height H	±	±0.1	±0.03 ±0.04		±0.015	±0.02		
Variation of height ΔH	0.02	0.025	0.01	0.015	0.006	0.007		
Tolerance of width Y	±	±0.1	±0.03	±0.04	±0.015	±0.02		
Variation of width $\Delta Y$	0.02	0.03	0.01	0.015	0.006	0.007		
Parallelism of C-surface relative to A-surface	Parallelism of raceway (Refer to Table 1)							
Parallelism of D-surface relative to B-surface	Parallelism of raceway (Refer to Table 1)							
	Accuracy Model  Tolerance of height H  Variation of height ΔH  Tolerance of width Y  Variation of width ΔY  Parallelism of C-surface relative to A-surface  Parallelism of D-surface	Accuracy N:1  Model 15/20  Tolerance of height H 2  Variation of height ΔH 0.02  Tolerance of width Y 2  Variation of width ΔY 0.02  Parallelism of C-surface relative to A-surface  Parallelism of D-surface parallelism of D-surface	Model $15/20$ $25/30/35$ Tolerance of height H $\pm 0.1$ Variation of height ΔH $0.02$ $0.025$ Tolerance of width Y $\pm 0.1$ Variation of width ΔY $0.02$ $0.03$ Parallelism of C-surface relative to A-surface       Parallelism         Parallelism of D-surface       Parallelism	Accuracy       N:Normal       H:         Model $15/20$ 25/30/35 $15/20$ Tolerance of height H $\pm 0.1$ $\pm 0.03$ Variation of height ΔH $0.02$ $0.025$ $0.01$ Tolerance of width Y $\pm 0.1$ $\pm 0.03$ Variation of width ΔY $0.02$ $0.03$ $0.01$ Parallelism of C-surface relative to A-surface       Parallelism of race         Parallelism of D-surface       Parallelism of race	Accuracy       N : Normal       H: High         Model $15/20/25/30/35$ $15/20/25/30/35$ Tolerance of height H $\pm 0.1$ $\pm 0.03/25/20$ Variation of height ΔH $0.02/25/25/25/25/25/25$ $0.01/25/25/25/25/25/25/25/25/25/25/25/25/25/$	Accuracy         N : Normal         H: High         P: Properties           Model         15/20 25/30/35         15/20 25/30/35         15/20           Tolerance of height H         ±0.1         ±0.03         ±0.04         ±0.015           Variation of height ΔH         0.02         0.025         0.01         0.015         0.006           Tolerance of width Y         ±0.1         ±0.03         ±0.04         ±0.015           Variation of width ΔY         0.02         0.03         0.01         0.015         0.006           Parallelism of C-surface relative to A-surface         Parallelism of raceway (Refer to Tallelism of raceway)         Parallelism of raceway (Refer to Tallelism of raceway)		

Table 1 : Parallelism of the raceway


Accuracy	Parallelism of th raceway(µm						
Rail Length(mm)	N	Н	Р				
100 under	12	7	3				
100~200	14	9	4				
200~300	15	10	5				
300~500	17	12	6				
500~700	20	13	7				
700~900	22	15	8				
900~1100	24	16	9				
1100~1500	26	18	11				
1500~1900	28	20	13				
1900~2500	31	22	15				
2500~3100	33	25	18				
3100~3600	36	27	20				
3600~4000	37	28	21				

# **Preload Level**

#### 1. Preload interference

The LSH standard type Linear Guide has three preload categories: A ,B and C.

Choosing suitable preload level will enhance rigidity, precision and torsion resistant performace of the linear guide.

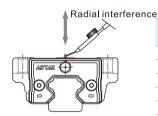

=										
Model	Radial interference(μm)									
wodei	Standard clearance(A)	Light Preload(B)	Medium Preload(C)							
LSH15	<del>-</del> 4~+2	-12~-4	-22~-14							
LSH20	-5~+2	-13~-5	-23~-15							
LSH25	<b>-</b> 6~+2	-14~-6	-24~-16							
LSH30	<b>-</b> 7∼+2	-16~-7	-26~-17							
LSH35	-8~+2	-18~-8	-28~-18							

# 2. Common Application

Refer to following table for suitable application of different preload grade:

Preload grade	Requirement	Common Application
Standard clearance(A)	One axial movement, small vibration and impact, accuracy requirement is low	Conveyor Machine, Semiconductor Equipment, Stage Equipment, Press Machine, Welding Machine and other light movement equipments
Light Preload(B)	Equipment that requires light-load and high-precision.	Z-axis movement for industrial use, NC lathe, EDM, Precision XY platform, Vertical machine center, measurement instrument, material feeder or industrial robot
Medium Preload(C)	Equipment that requires high rigidity, large vibration and shock.	Machining centers, NC lathes, grinders, vertical or horizontal milling machines, boring machines, tool guides, heavy cutting machines.






#### Installation Illustration

#### 1. Allowable tolerance of mounting surface

LSH series is an arc-shape, two-point contact design of linear guide. Its self-centering feature allows some tolerance on mounting surface without affecting the smoothness of linear motion. The allowable tolerance is indicated in following table:

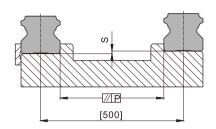


Allowable tolerance of parallelism P(µm)			Allowable tolerance of top and bottom S (µm)			
Model	Standard clearance(A)	Light Preload(B)	Medium Preload(C)	Standard clearance(A)	Light Preload(B)	Medium Preload(C)
LSH15	25	18	13	130	85	35
LSH20	25	20	18	130	85	50
LSH25	30	22	20	130	85	70
LSH30	40	30	27	170	110	90
LSH35	50	35	30	210	150	120

Note: The value in the table is the allowable value when the distance between the two linear guides is 500mm, and the allowable value is proportional to the distance between the two linear guides.

#### 2. Height and Chamfer of Reference Edge

In order to ensure accurate installation of LSH Linear Guide, the contact space should not exceed the given figures in following table.

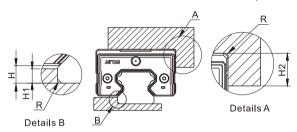

				Unit : mm
Model	Н	H1	H2	R(Max)
LSH15	3.5	3	4	0.5
LSH20	4.3	3.5	5	0.5
LSH25	6.5	5	5	1
LSH30	6.5	5	5	1
LSH35	7	6	6	1


#### 3. Screw Tighten Torque

When installing linear guide, whether the screws are well tighten and surface is well contacted will affect accuracy significantly. Please refer to following table for tightening force to ensure a perfect installation.

Model	Screw	Tighten Torque(N.cm)			
woder	size	Iron	Casting	Aluminum alloy	
LSH15	M4	412	274	206	
LSH20	M5	882	588	441	
LSH25	M6	1370	921	686	
LSH30	M8	3040	2010	1470	
LSH35	M8	3040	2010	1470	

# 4. Datum plane


- Datum plane for installation must be ground or finely milled to ensure accuracy.
- Both sides of Rail can be used as the datum plane.
- For multi-blocks on a rail, identification line on blocks should be put on the same side to ensure moving accuracy.

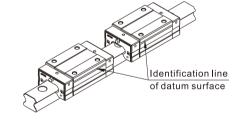


#### Rail Butt-jointed

• When jointing rails, it must follow group marks on rail to ensure the accuracy of linear guide. These marks are located on the top surface at joint side. Please put the same group marks together.

Butt-jointed mark

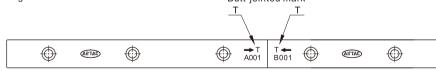

- ullet Be aware serial number of group mark when assemble. A001 and B001 are in a group, so as to A002 and B002 and so on.
- Be aware the installation direction while assembly, the serial numbers are not upside down and arrows point to each other.

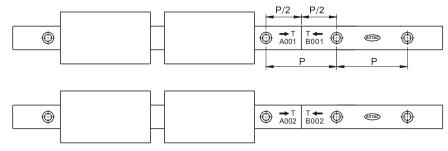





#### Lubrication method


When a linear guide is well lubricated, it can reduce wear and increase lifespan significantly. Lubrication has the following benefits:

- Reduces friction of the rollers and raceway to minimize wear.
- The grease film between contact surface can prevent roller fatigue.
- Prevent rust.

#### 1. Lubrication Grease

Use the correct grade of lubrication. While lubricating, a grease gun can be used to pump grease into slider through the grease nipple on it. The suitable condition for lube is when working speed is under 60 m/min and not in cooling process.

#### Nipple type

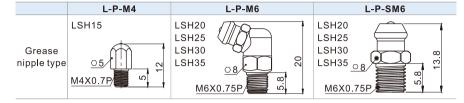

#### •Grease amount

LSH series linear guide is well lubricated with 'Shell Alvania grease S2' in factory. Customers are recommended to use identical or the same grade of lubricant. After lubrication, block needs to be moved back and forth at least three times for the length of three blocks and repeat at least twice. Check if the surface of rail is well covered by grease film.

Model	Grease amount for the first lubrication(cm³)		Replenishment amount(cm³)	
Model	Standard type	Long type	Standard type	Long type
LSH15	0.9	-	0.3	-
LSH20	1.8	2.7	0.6	0.9
LSH25	3.6	4.5	1.1	1.4
LSH30	5.4	7.2	1.7	2.2
LSH35	8.1	10	2.5	3

#### Lubrication frequency


Although the linear guides are well lubricated at the factory and retains grease well, frequent lubrication is still necessary to avoid undesirable wear. Recommended lubrication period is every 100km of movement or every 3~6 months. (Refer to table on the top for suggested amount)

#### 2. Lubricating oil

Recommended oil viscosity for lubrication use is about 30 to 150 cst.

Lubrication oil is suitable for all kinds of load and impact application, but not for high temperature use due to its tendency of vaporization.

# Adaptor

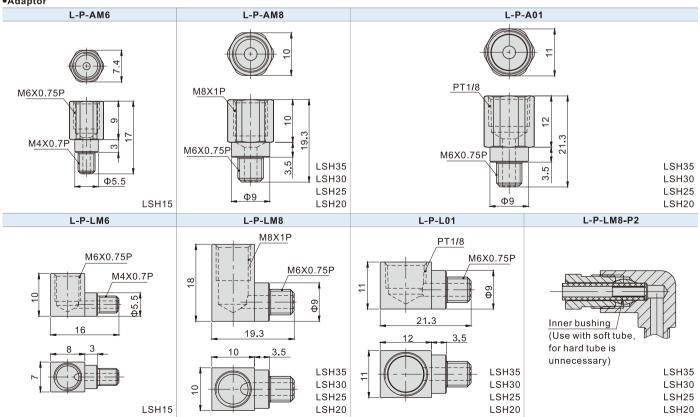

Note: After installation, the top surface of adaptor may be higher than block. Be careful about the interference while moving.





#### Lubrication method


#### Oil supply rate

Loss of lubrication oil is faster than lubrication grease. Pay attention to sufficiency of oil while using.

Model	Oil amount for the first lubrication(cm <sup>3</sup> )	Feeding Speed(cm <sup>3</sup> /hr)
LSH15	0.6	0.2
LSH20	0.6	0.2
LSH25	0.9	0.3
LSH30	0.9	0.3
LSH35	0.9	0.3

## 3. Grease nipple/adaptor installation

- Grease nipple or adaptor can be installed in the two sides of block for manual or automatic lubrication based on customer's requirement.
- •There are a secondary set of lubricating ports on the side of the block. When using, it is not recommended to use the side with datum line unless necessary.
- •Lateral nipple installation is not recommended for flange type blocks. (The grease / oil nipple may interfere with block)
- •If lateral lubrication is needed for above spec, please contact us for customization.

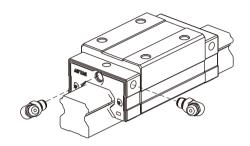


# **Bolt hole plug**

## 1. Plug type

In order to prevent metal swarf or external objects from entering blocks and affecting precision and lifespan, customers must put plugs into holes during installation. Every rail is equipped with default plugs.


Model	Bolt	Diameter(D)(mm)	Thickness(H)(mm)
LSH15	M4	8.15	1.1
LSH20	M5	9.65	2.5
LSH25	M6	11.4	2.5
LSH30	M8	14.4	3.5
LSH35	M8	14.4	3.5

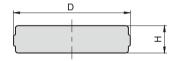

# 2. Plug installation Steps



Place the plug in counterbore.

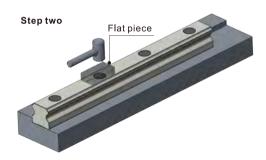

Place the flat piece on mounting hole, hit the piece vertically with a plastic hammer and fix the plug into counterbore.

#### Note:

- Please make sure the plugs do not protrude the rail surface.
- •After installation, please clean the surface before use.




# Precautions on use

#### 1. Block disassembly

With ball retainers and a dustproof cover, normally the balls are prevented from falling out when block is removed from rail.

However, if obliquely insert rail into blocks or quickly assembled or disassembled, there is a risk for balls of falling out.


Please carefully assemble the linear guide or use plastic rails to assist.

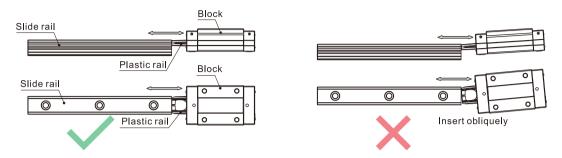

#### 2. Plastic rail installation

A plastic rail is equipped for individual block set. Please do not remove plastic rail whenever it is not necessary.

If plastic rail falls out and needs to be reinstalled, press the dustproof covers with fingers and install slowly to prevent balls from falling out due to misalignment of plastic rail.

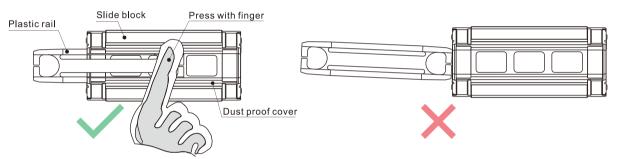

Press the dust-proof covers and insert plastic rail in alignment.

Without pressing dust-proof covers or insert plastic rail obliquely.

#### 3. Caution

- Parts may slide out if linear guide is put unevenly. Please be careful.
- Hitting or dropping linear guide could have huge effect on accuracy and lifespan even though appearance may remain intact. Please be careful.
- Do not dissemble linear guide as external objects may enter blocks and cause accuracy problem.

#### 4. Lubrication

- Linear guide have been treated with anti-rust oil during production. Before use, wipe the rail and treat it with lubrication.
- Do not mix lubricating oil (grease) with different properties.
- After lubrication, move block back and forth for the length of three blocks long and repeat at least 2 times to ensure there is a grease file on rail.

# 5. Use

- The operating environment temperature should not exceed 80°C, and the maximum temperature should not exceed 100°C.
- Do not separate blocks from rail whenever it is not necessary. If you need to separate them, please use plastic rails to prevent steel balls from falling out.

# 6. Storage

When storing blocks, rails or linear guide set, please be sure that anti-rust oil is well applied and product is well sealed as well as placed horizontally.
 Avoid humidity and high temperatures environment.