

SM Actuators

Specification & Installation instructions



| SM000S |
|--------|
| |

Mounts easy on round
 & square shaft (with option -8).
 SM020S
 SM060S

External clutch for manual adjustments.

SM080S

Maintenance free.

Position indicator.

• Fail safe by *Enerdrive System*¹ (on model 60 & 80).

 Auxiliary switches (on model 20 & 80). SM220S SM260S

SM100S


SM120S SM160S

SM200S

1

| Technical Data | SM000S | SM020S | SM060S | SM080S | SM100S | SM200S | SM120S | SM160S | SM220S | SM260S |
|--------------------------|---|-------------|--------------|-----------|--|----------|---------|--------------------|---------------------------|--------------------|
| Auxiliary switches | No | Yes (2) | No | Yes (2) | No | No | Yes (2) | No | Yes (2) | No |
| Fail safe - Enerdrive | N | No | | Yes | | No | | Yes | No | Yes |
| Power consumption | 8 VA 20 | | 20 VA Pe | eak, 8 VA | 8 VA | | | 20 VA Peak 8 VA | 8 VA | 20 VA Peal 8 VA |
| Power supply | 22 | to 26 VAC o | r 28 to 32 V | DC | 110 to 220 to 130 VAC 250 VAC 50/60Hz 50/60Hz 220 to 220 t | | | | 220 to 250 VAC 50/60Hz | |
| Approvals | LISTED | | | | Class 2 | | | | | |
| Ingress protection | IP22 equivalent to Nema type 2, IP54 equivalent to Nema type 3R if water tight inlet bushings (not supplied NEP617) are installed IP22 equivalent to Nema type 2 | | | | | | | pe 2 | | |
| Torque | 70 in.lb. [8 Nm] at rated voltage | | | | | | | | | |
| Running time through 90° | 90 - 110 sec (Fail-safe20-30 sec) | | | | | | | | | |
| Electrical connection | 18 AWG [0.8 mm²] minimum | | | | | | | | | |
| Inlet bushing | 2 inlet bushings: 13/16" [20.6mm] | | | | | | | | | |
| Control signal | 2 to 10 VDC or 4 to 20 mA (factory set 2 to 10 VDC) | | | | | | | | | |
| Angle of rotation | 0 to 90 degrees, mechanically adjustable (factory set with 90° stroke) | | | | | | | | | |
| Direction of rotation | Reversible, Clockwise (CW) or Counterclockwise (CCW) (factory set with CW direction) | | | | | | | | | |
| Ambient temperature | -22°F à +122°F [-30° C à +50° C] | | | | | | | | | |
| Storage temperature | -22°F to +122°F [-30° C to +50° C] | | | | | | | | | |
| Relative Humidity | 5 to 95 % non condensing. | | | | | | | | | |
| Weight | 3 lbs. [1.4 kg] | | | | | | | | | |
| | Warning | : Do not | press t | he clutc | h when a | actuator | is powe | ered | | |

Dimensions

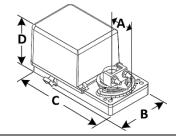

| | Dimension | Inches | Metric (mm) | | |
|---|--|--------|-------------|--|--|
| | Α | 1.50 | 38.1 | | |
| | В | 3.64 | 92.5 | | |
| | С | 6.60 | 167.5 | | |
| | model 000, 060, 100 & 200 | 3.02 | 76.8 | | |
| D | model 020, 080, 120, 160, 220 & 260 | 3.81 | 96.8 | | |

Caution

We strongly recommend that all neptronic® products be wired to a separate transformer and that transformer shall service only neptronic® products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.


When multiple actuators are wired on a single transformer, polarity must be observed. Long wiring runs create voltage drop which may affect the actuator performance.



SMS-200205 C US


¹ Enerdrive System U.S.A. Patent #5,278,454

Mechanical installation

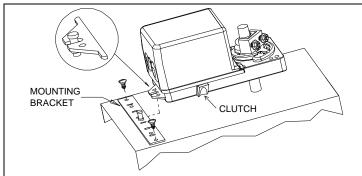


- 1. Manually close the damper blades and positioned the actuator at 0° or 90°.
- 2. Slide the actuator onto the shaft.
- 3. Tighten the nuts on the "U" bolt to the shaft with a 8mm wrench to a torque of 60 in.lb. [6,7 Nm].
- 4. Slide the mounting bracket under the actuator. Ensure free movement of the slot at the base of the actuator. The bracket pin must be placed in the mid distance of the slot.
- 5. Fix the bracket to the ductwork with #8 self-tapping screws.

Wiring Diagrams

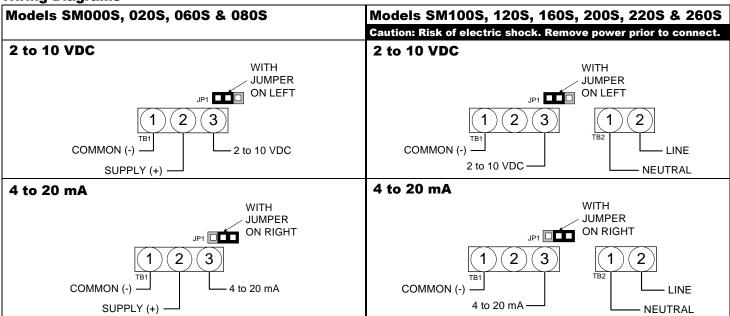

PC Board

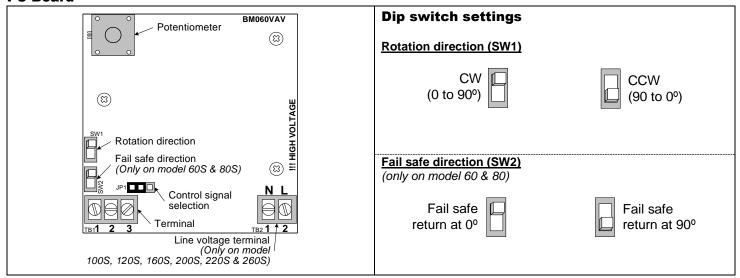

Stroke adjustment

To adjust the stroke, move the adjustment screws at the desired position.