





CORDLESS MAGNETIC ROMAN SHADE

Check Components

MAGNETIC ROMAN SHADE Components	Shade Width Up to 36 in	Shade Width Up to 48 in
Bracket 	x 2	x 3
Screws 	x 4	x 6
Handle 	x 1	x 1

Prepare necessary tools

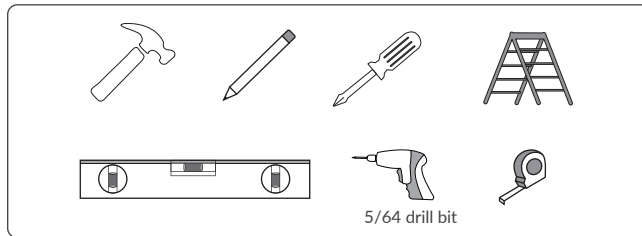

Warning


Ensure the brackets are installed level.
Ensuring the shade is level is important for the shade to lower and rise properly.

STEP 1: DETERMINE INSIDE/CEILING, FLUSH, WALL OR OUTSIDE MOUNT

a. Inside/Ceiling or Flush Mount

(A minimum **1 in. depth** is required or **1 3/4 in. depth** for flush mounts.)


- 1) Position bracket approximately 2 to 4 inches from the ends of the headrail.
- 2) Mark the pre-drilled holes for the bracket using a pencil. If you have more than 2 brackets, position it equally.
- 3) Use the screws and anchors to install bracket holes.

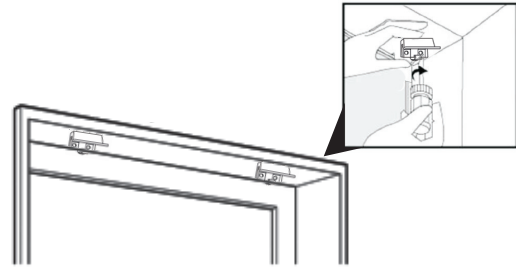

b. Wall or Outside Mount


(A minimum **1 1/8 inch** flat wall space is necessary)

- 1) Position brackets approximately 2 to 4 inches from the ends of the headrail. If you have more than 2 brackets, position it equally.
- 2) Mark the pre-drilled holes for the bracket using a pencil.
- 3) Use the screws and anchors to install the bracket holes.

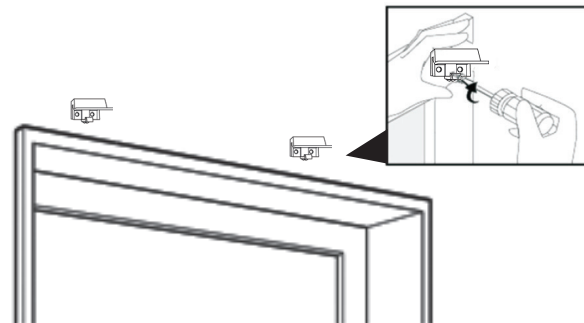

STEP 2: MOUNT THE SHADE IN BRACKET

- 1) Loosen the bracket locks by loosening the screws at the bottom of the brackets.
- 2) Insert the front groove of the head rail inside the lip of each bracket. Approach the brackets at a downward incline and lift up as the bracket is inserted.
- 3) Position the bracket locks so they grip the bottom edge of the head rail.
- 4) Lock the bracket locks by tightening the screws at the bottom of the brackets.
- 5) Check to ensure each bracket is properly secured

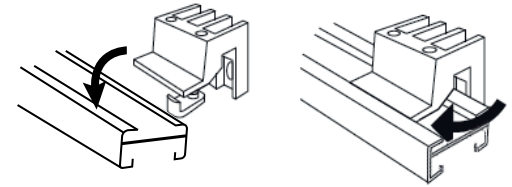


STEP 3: ATTACH THE HANDLE

Attach the handle to the holder by sliding it in from sideways.

Note: The handle glides on to the bottom fold, not the bottom of the shade.

The handle is designed to minimize contact with the shade fabric.

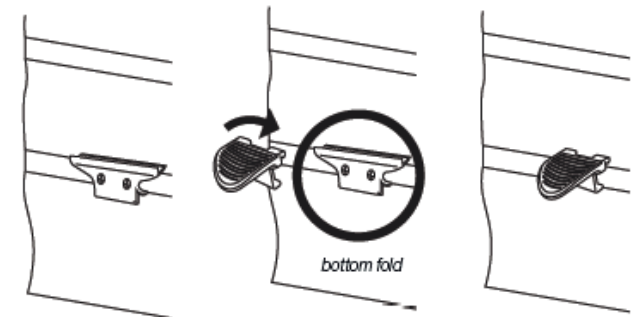

STEP 4: HOW TO OPERATE


In addition to the bottom fold, each shade has three levels of magnetic strips you can use to raise or lower the shade.

To raise the shade: lift the bottom fold up to the magnetic strip right above it.

Lifting and lowering the shade must be done sequentially. Lift & Attach at each level, using each level of the magnetic strips.

Always raise and lower the shade slowly to assure that the fabric gathers neatly.

To lower the shade: grip the handle and gently pull straight down.

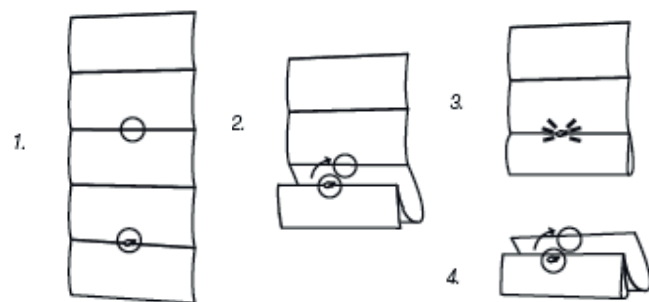

CLEANING & CARE

The head rail can be wiped clean with a damp sponge.

To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush attachment.

For 100% polyester fabric, you may spot clean with warm soapy water using mild detergent and a clean sponge. Air dry, and then steam or iron.

Ironing: for 100% polyester fabric, if necessary, steam or gently iron on a low heat setting to remove stubborn wrinkles. 100% polyester fabric releases wrinkles easily. Steam or iron on Polyester / Synthetic Fabric setting (Low), but be aware that Polyester will melt if the iron is too hot

Chicology Ready-Made Blinds Warranty Limited One Year Warranty from the Date of Purchase

What is Covered:

All of our shades are warranted against manufacturer defects in materials or workmanship provided that you are the original purchaser of the product, and the product was installed according to our instructions.

What is Not Covered:

- Normal wear and tear.
- Consumer damages caused by accidents, alternations, abuse of the product, exposure to salt air, misuse, or damages from pets or insects.
- Damages resulting from removal and reinstallation in the same or any other window or application, or failure to follow instructions, such as measurement, installation, cleaning, and maintenance.
- Any products that, with the passage of time, has yellowing or cracking of plastic parts.
- Wrong measurements are not covered by the warranty and are not refundable.

To Report Shipping Damages:

If damage occurred during shipping, please email and call us immediately and report within **14 calendar days** or else you may be denied for your damaged product.

To Obligations to the consumer:

The obligations of Chicology are limited to the repair or replacements of parts or products found to be defective. Chicology will determine if the product is defective or not and may replace the product. If the product is found to have manufacture defects, we will repair or replace the product. Colors do vary from lot to lot, and may not match original product exactly. Discontinued items will be replaced with the most current product of the same price.

Your Rights under State law:

This limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Defective Product:

If you believe your shade has a manufacturing defect, please email and call us.

Need Further Assistance?

We stand by our products and we're here to help. Call or email us, and expect a reply within 1 business day.

Visit our website for how-to videos and FAQs.

Website : www.chicology.com/help
Email: support@chicology.com
Phone: **1 (866) 999-6188**
Hours: **Mon-Fri 8AM to 5PM (PST)**



Chicology Home Chicology Home
 Chicology Home Chicology Home