

Vinci®

EXPRESS 2 COLD BREW MAKER™



INSTRUCTIONS

www.vincihousewares.com | 888.735.3621 | support@vincihousewares.com

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE INSTRUCTIONAL MANUAL

When using electrical appliances, basic safety precautions should be followed, including:

- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner.
- For maintenance other than cleaning, please contact Vinci Housewares directly at 1-888-735-3621 from 8AM-5PM PT Monday-Friday or by email at support@vincihousewares.com.
- Never use abrasive cleaning agents to clean your Express 2 Cold Brew Maker.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- Vinci Housewares shall not accept liability for damages caused by improper use of the appliance.

TABLE OF CONTENTS

Important Safeguards.....	1
Table of Contents	2
Introduction	3
Important Information Before First Use.....	4
Getting to Know your Express 2 Cold Brew Maker	5
Control Lid Interface	6
How to use your Express 2 Cold Brew Maker	7
Care and Cleaning.....	10
Troubleshooting	12
Warranty	14



EXPRESS 2 COLD BREW MAKER

Welcome to the Vinci Housewares family!

We're thrilled to introduce you to our revolutionary Vinci Express 2 Cold Brew Maker. Forget waiting around for 18-24 hours - with our proprietary Circle Flow Brewing Technology, you can enjoy fully extracted cold brew coffee in just 10 minutes.

Our patented Circle Flow Brewing Technology works by allowing a continuous flow of brewing water that gently, yet thoroughly, extracts the best flavors from ground coffee. This ultra-fast brewing process is 100 times quicker than traditional methods, but don't worry - it doesn't compromise on taste. You'll still get all the exceptional flavor attributes of slower, conventional cold brew methods.


The best part? The Vinci Express 2 Cold Brew Maker gives you full control over the strength of your cold brew. Whether you prefer ready-to-drink or bold concentrate, the choice is yours at the simple press of a button.

For more information on our range of products, and to sign up for our newsletter packed with news, recipes, and offers, visit www.vincihousewares.com.

www.vincihousewares.com | 888.735.3621 | support@vincihousewares.com


IMPORTANT INFORMATION BEFORE FIRST USE:

- Before first use, and after subsequent uses wash all parts with warm soapy water, EXCEPT for the Control Lid which should never be submerged in water (see Control Lid Cleaning instructions on page 10).
- Read and remove all warning labels, stickers, and packaging materials.
- Carefully read all the instructions.

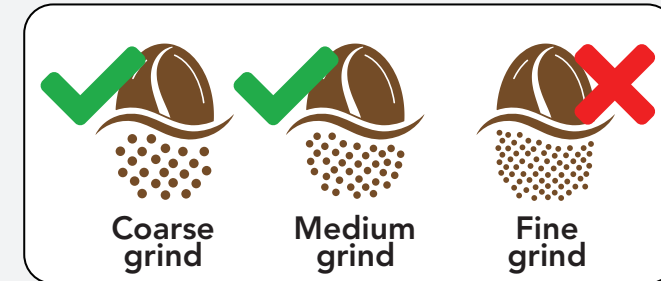

NEVER Use Fine Grind or Instant Coffee

Fine grind or Instant coffee will clog the filter, damage the pump, and void warranty

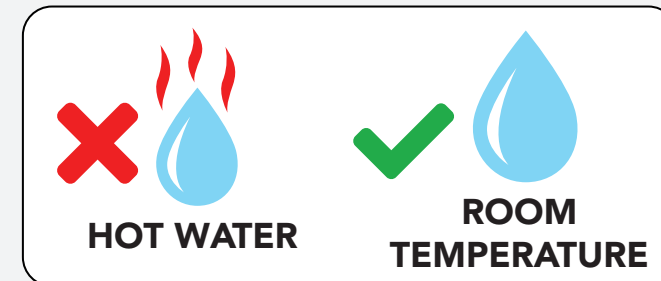


NEVER Use Hot Water

Using hot water will void warranty

GETTING TO KNOW YOUR EXPRESS 2 COLD BREW MAKER

Before using your Express 2 Cold Brew Maker for the first time, familiarize yourself with the various parts of the machine and how it functions.

Before first use, and after subsequent uses, wash all parts with warm soapy water, EXCEPT for the Control Lid which should never be submerged in water (see Control Lid Cleaning instructions on page 10). Carefully read all the instructions.

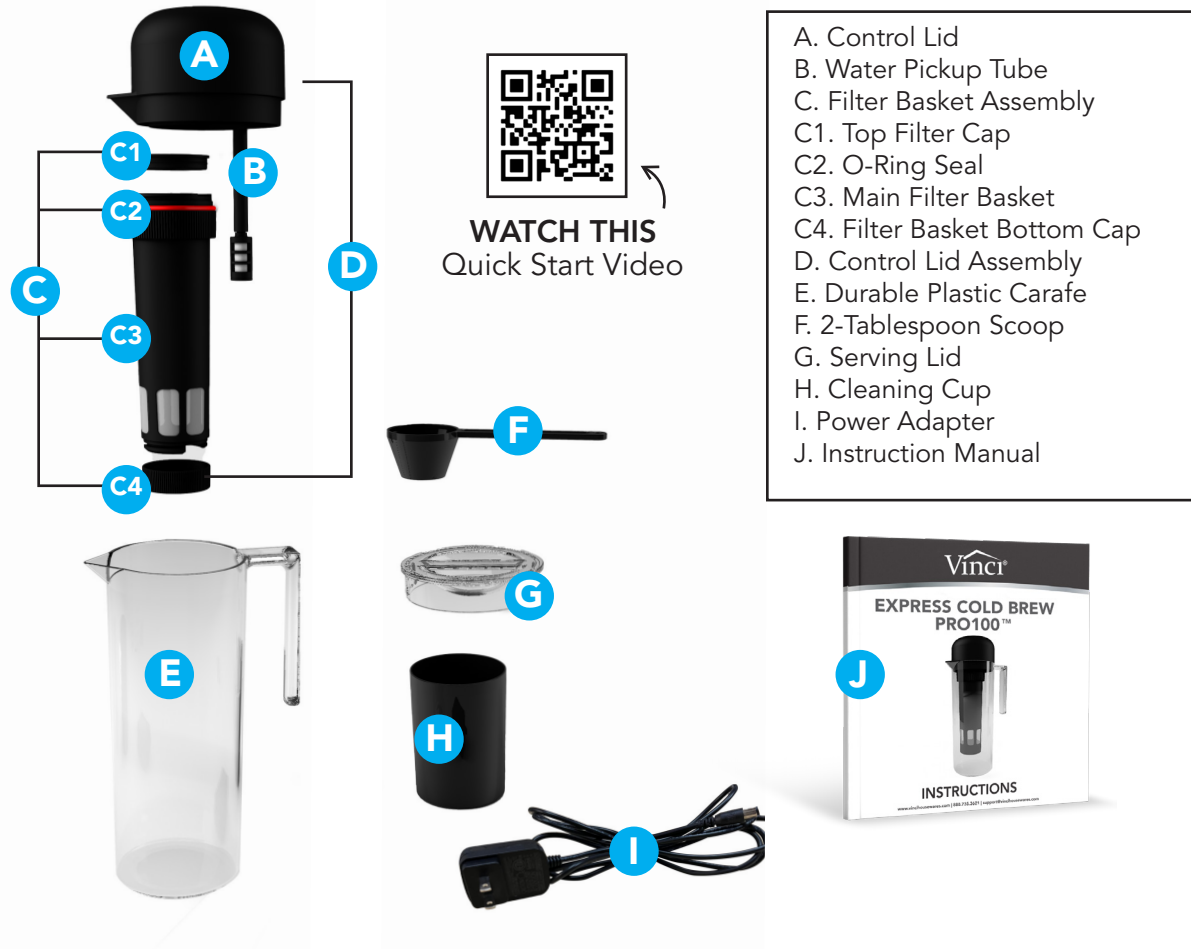

CONTROL LID



1. Power On/Off

To turn on your Express 2 Cold Brew Maker, press the power button. It glows blue in standby mode and turns red when powered on.

2. Vinci Brew Button

After selecting your desired Brew Strength function, start the process by pressing the Brew button. Here's what the button's illumination indicates:

White: The Express 2 Cold Brew Maker is in standby mode.

Blue: The brewing process is underway.

Not illuminated: The device is off or there's no power.

BREW STRENGTHS

3. Light - 10-Minute Brew Cycle:

For a light ready-to-drink brew-

4. Medium - 15 Minute Brew Cycle

For a stronger brew, great over ice.

5. Bold - 25 Minute Brew Cycle

For a robust brew that can be diluted while maintaining flavor.


6. Clean

IMPORTANT: Ensure the longevity and optimal performance of your machine by using the 'Clean' setting after each brew. This practice maintains both the freshness of your coffee and the performance of your device.

HOW TO USE YOUR EXPRESS 2 COLD BREW MAKER


IMPORTANT: Make sure that all surfaces are clean of any unwanted minerals or coffee grounds before using. This will ensure that the brewer will provide the best cup of cold-brewed coffee.

1 GETTING STARTED

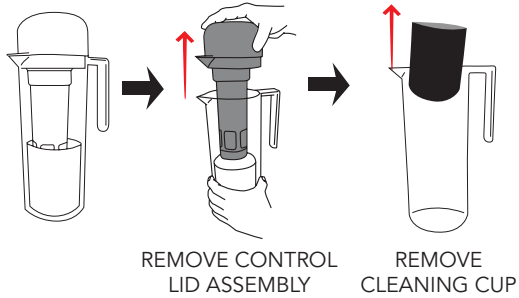


Lift the Control Lid Assembly(D) from the Carafe(E) and remove the Cleaning Cup(H).

2 FILL CARAFE WITH WATER

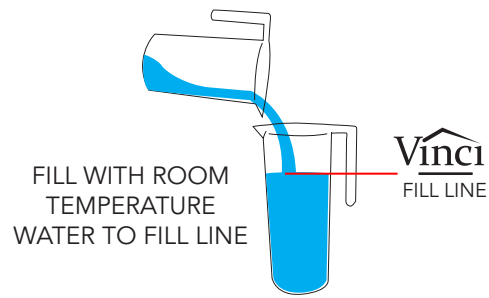


Fill the Carafe(E) with fresh, clean ROOM TEMPERATURE water. Filtered water is best (or recommended). Never fill past the Fill Line.

3 REMOVE FILTER BASKET

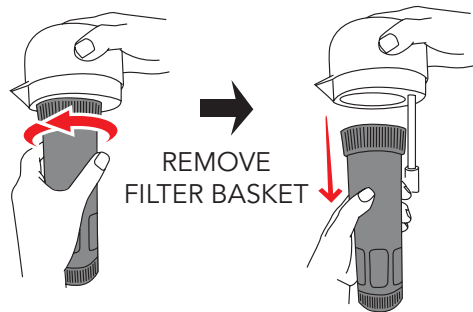


Remove the Filter Basket(C) from the Control Lid(A) by rotating it counter clockwise.

4 REMOVE TOP CAP

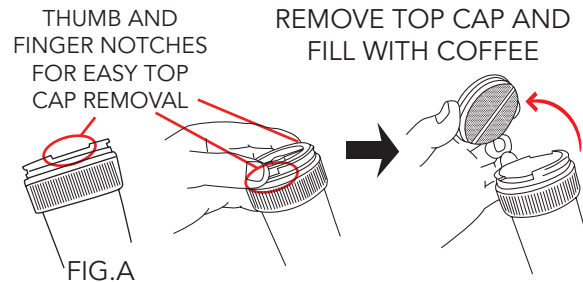


Remove the Top Filter Cap(C1) by placing your fingers at the noted notches shown on image FIG. A and lift Top Filter Cap(C1) away from Filter Basket(C3).

5 FILL COFFEE/ RE-INSERT TOP CAP

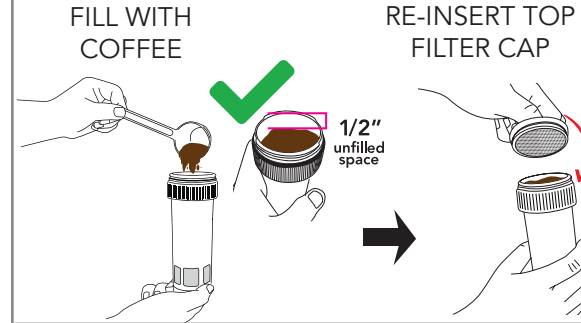


Fill the Filter Basket(C3) with approximately 9 Scoops **Medium to Coarse grind coffee** then re-insert the Top Filter Cap(C1). **IMPORTANT:** Do not Pack or tamp coffee in the filter.

6 RE-INSERT FILTER BASKET/ PLACE LID ASSEMBLY

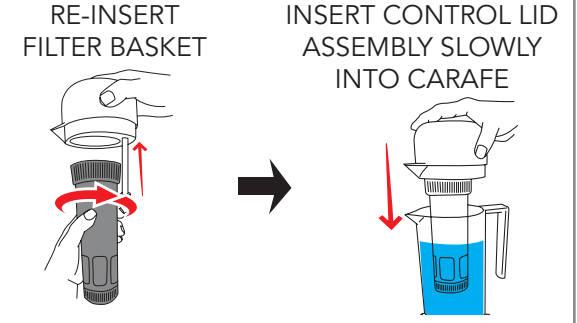


Re-attach the Filter Basket Assembly(C) to the Control Lid(A) by turning it clockwise. Slowly place the Control Lid Assembly(D) into the Carafe (E), but make sure the Filter Basket(C3) is fully submerged in the water.

7 POWER ON

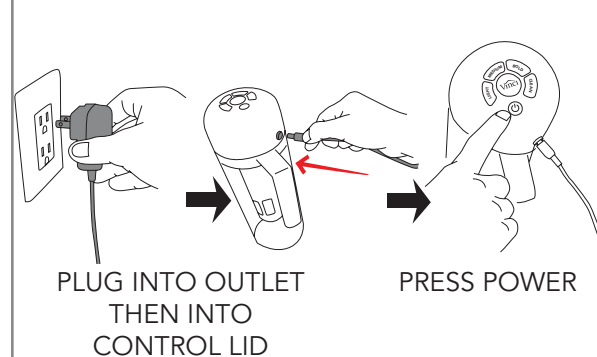


Plug the Power Adapter(I) into an electrical outlet first, then the Control Lid(A). After plugging in the Power Adapter(I), press the power button.

8 BREW SELECT

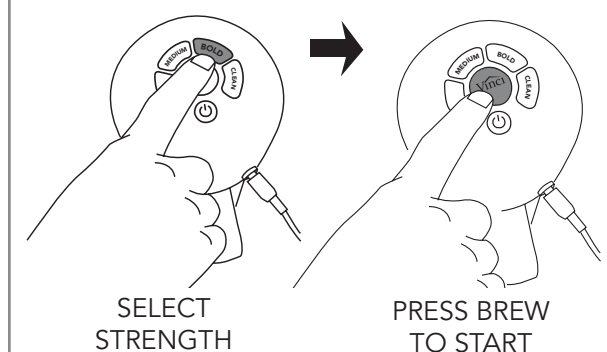


Select your desired brew strength. (Refer to page 6) Press the Brew button to start the brew cycle. The Brew button will illuminate blue while running.

9 BREWING PROCESS

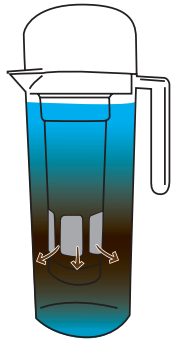

Once the cycle is complete, the Brew button will illuminate white and you'll hear three short beeps, signaling that your brew is ready!

10 PURGE

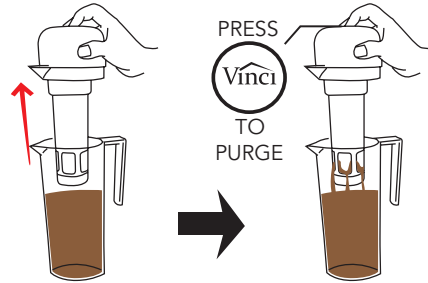


Upon completion of the brew cycle, partially lift the Control Lid Assembly(D) and press the Brew button, the pump will run and purge the remaining cold brew from the Filter Basket. After about 20 seconds, press the Brew button again to stop the pump.

CARE AND CLEANING

IMPORTANT: After every use, wash all parts to ensure that the unit will be working like new.

IMPORTANT

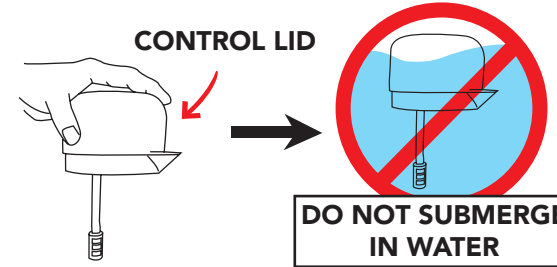


IMPORTANT: Never submerge the Control Lid(A) in water. Doing so will damage the unit and void the warranty.

1 REMOVE LID FROM CUP




Remove the Control Lid Assembly(D) from the Cleaning Cup(H).

11 CONTROL LID TO CUP

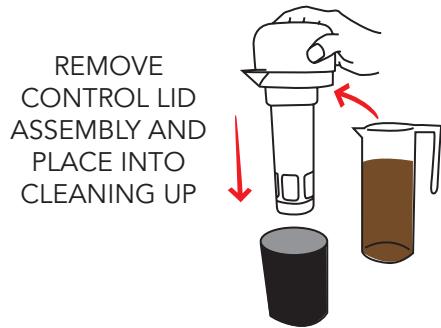


Place Control Lid Assembly(D) into the Cleaning Cup(H). For detailed cleaning instructions, refer to the 'Care and Cleaning' section on page 10.

12 SERVING LID

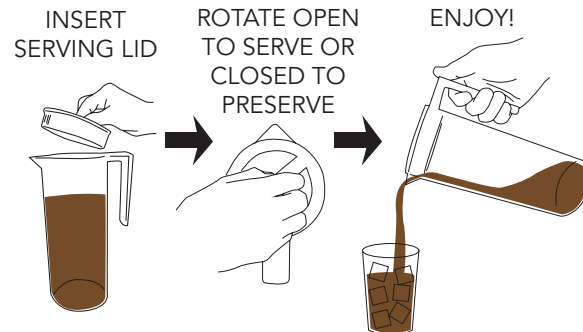


Place the Serving Lid(G) on the Carafe(E). You are now ready to serve your cold brew or store it in the refrigerator for up to 10 days.

2 REMOVE FILTER BASKET

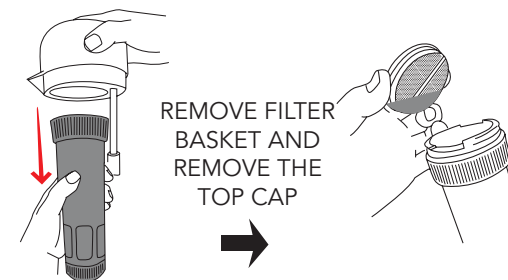


Remove the Filter Basket Assembly(C) from the Control Lid(A) by rotating it counterclockwise and then remove the Top Filter Cap(C1) from the Filter Basket(C3).

3 DISCARD COFFEE

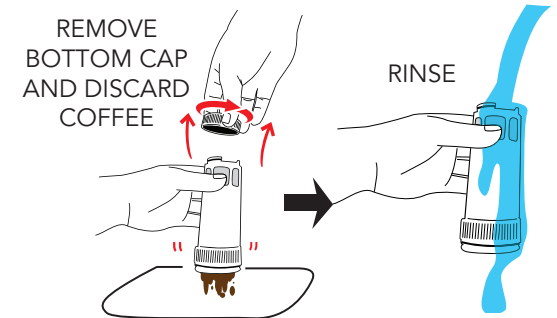


Over a trash or compost bin, invert the Filter Basket(C3), remove the Bottom Filter Cap(C4), and dispose of the used coffee. After disposing of used grounds rinse all parts.

4 FILL CUP WITH WATER

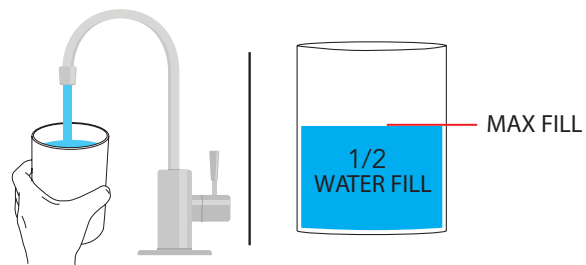


Fill the Cleaning Cup(H) about 1/2 full with clean fresh water.

5 RINSE WATER TUBE FILTER

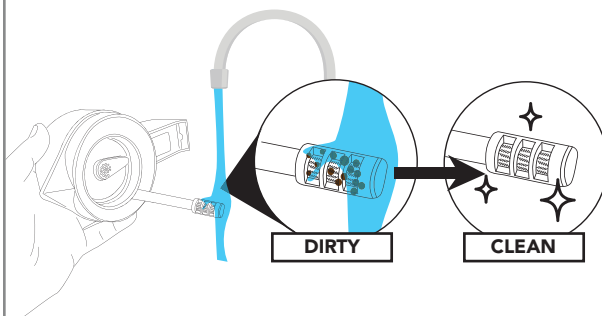


Inspect the bottom of the Water Pickup Tube(B) for any coffee grounds. If found, carefully rinse only the bottom of the tube, ensuring no water reaches the Control Lid(A).

6 CLEAN

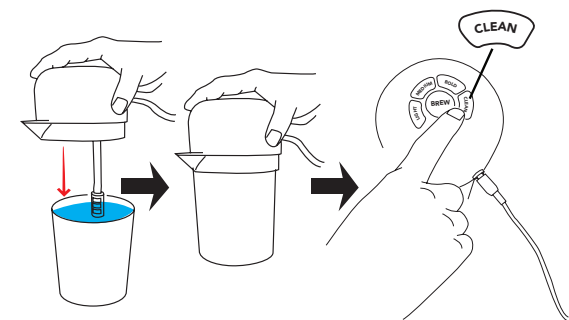

Place the Control Lid (A) into the Cleaning Cup(H) and Press the Clean button to start the cleaning process.

7 PURGE AND DISCARD WATER

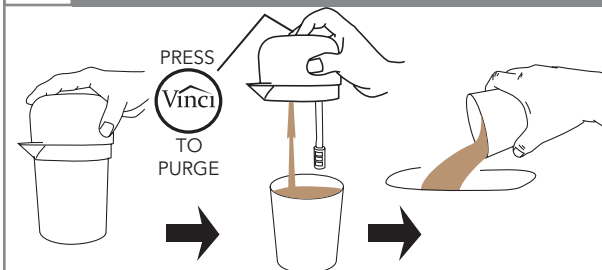

Once the cleaning cycle finishes, lift the Control Lid(A) until the Water Pickup Tube(B) is clear of the water in the Cleaning Cup(H). Press the Clean button again to flush any remaining water through the pump system. Empty the dirty water and rinse the Cleaning Cup(H).

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The beverage is weak in flavor	<ol style="list-style-type: none"> 1. The selected brew-strength was too low. 2. Not enough coffee was added to the Filter Basket. 3. The coffee grind is too fine. 4. Cold water was used. 	<ol style="list-style-type: none"> 1. Select a higher brew-strength 2. Add additional coffee to the Filter Basket without overfilling it. 3. Always use a medium to coarse grind coffee. 4. Always use room temperature water.
The beverage is strong in flavor	<ol style="list-style-type: none"> 1. The selected brew-strength was too high. 2. Too much coffee was added to the Filter Basket. 	<ol style="list-style-type: none"> 1. Select a lower brew-strength 2. Add less coffee to the Filter Basket. 3. Add water or other liquid to the completed brew to dilute the beverage to achieve your desired strength and flavor.
Excessive grounds or sediment in the beverage	<ol style="list-style-type: none"> 1. Grounds were present on the outside of the filter basket. 2. Too fine of a coffee grind was used. 	<ol style="list-style-type: none"> 1. Verify the exterior and the sealing surfaces of the Filter Basket are free from any debris before brewing. 2. Use a coarser grind coffee.
<p>The Brew button is not illuminated</p> <p>The unit will not run</p>	<ol style="list-style-type: none"> 1. The Control Lid is OFF 2. The Power Adapter is not properly connected to the Control Lid. 3. The Power Adapter is not properly connected to an electrical outlet. 4. The electrical outlet has no power. 	<ol style="list-style-type: none"> 1. Press the Power Button to turn the unit on. 2. Verify the Power Adapter is fully inserted into the Control Lid. 3. Verify the Power Adapter is fully inserted into the power outlet. 4. Try a different power outlet. 5. The unit may require factory service – Contact Vinci Housewares support

PROBLEM

POSSIBLE CAUSE

SOLUTION

The unit is running but no water is circulating	<ol style="list-style-type: none"> 1. The water level in the Carafe is too low. 2. The Water Pickup Tube is not installed. 3. The Water Pickup Tube is damaged or clogged. 4. The Filter Basket is overpacked with coffee. 5. The coffee grind is too fine. 	<ol style="list-style-type: none"> 1. Make sure the water level in the Carafe is at the Fill Line. 2. Verify the Water Pickup Tube is properly installed to the bottom of the Control Lid. 3. Verify the Water Pickup Tube is not clogged or damaged. 4. Do not overfill or compress the coffee in the Filter Basket. 5. Always use medium to coarse grind coffee. 6. The unit may require factory service – Contact Vinci Housewares support
Water is overflowing from the Carafe when brewing	<ol style="list-style-type: none"> 1. The water level in the Carafe was above the Fill Line 2. The Filter Basket is overpacked with coffee. 3. The Coffee Grind is too fine. 	<ol style="list-style-type: none"> 1. Do not exceed the maximum Fill Line when adding water to the Carafe. 2. Do not overfill or compress the coffee in the Filter Basket. 3. Always use medium to coarse grind coffee.
Water is leaking from the top of the Filter Basket when brewing	<ol style="list-style-type: none"> 1. The area around the O-Ring Seal of the Filter Basket has some debris. 2. The Filter Basket is loose. 3. The Filter Basket is overpacked with coffee. 4. The coffee grind is too fine. 5. The Filter Basket O-Ring Seal is damaged or missing. 	<ol style="list-style-type: none"> 1. Verify the exterior and the sealing surfaces of the Filter Basket are free from any debris before brewing . 2. Verify the Filter Basket is inserted properly to the Control Lid and that it is turned fully clockwise. 3. Do not overfill or compress the coffee in the Filter Basket. 4. Always use a medium to coarse grind coffee. 5. Contact Vinci Housewares support to order a replacement O-Ring.

If you think there may be an issue with your product, please contact customer support at 888-735-3621 or email support@vincihousewares.com

www.vincihousewares.com | 888.735.3621 | support@vincihousewares.com

WARRANTY

LIMITED ONE-YEAR WARRANTY

ARM Enterprises, Inc. warrants that your appliance will be free of defects in materials or workmanship under normal home use for one year from the date of delivery. It is recommended that you register your appliance on vincihousewares.com/product-registration so that your purchase information will be stored in our system. ARM Enterprises, Inc. will, at its option, repair or replace a defective appliance without charge upon its receipt of proof of the date of purchase. If a replacement appliance is necessary to service this warranty, the replacement appliance may be new or reconditioned. Replacement appliances and parts are warranted for the remaining portion of the original warranty period. This warranty only applies to appliances operated in the United States and Canada. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and, in the case of Canada, from province to province.

WHAT IS NOT COVERED BY THE LIMITED WARRANTY?

THIS WARRANTY DOES NOT COVER CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND DOES NOT COVER INCIDENTAL COSTS AND EXPENSES RESULTING FROM ANY BREACH OF THIS WARRANTY, EVEN IF FORESEEABLE. Some states or provinces do not allow the exclusion or limitations of incidental or consequential damages, so the above limitation or exclusion may not apply to you depending on the state or province of purchase. Vinci Housewares product warranty covers manufacturing defects under normal use and maintenance. Our liability is limited to the original purchase price of the unit. Incidental or consequential damages or issues due to improper use, installation, or maintenance are not covered.

OTHER LIMITATIONS

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER EXPRESS WARRANTY, WHETHER WRITTEN OR ORAL. IN ADDITION, ARM ENTERPRISES, INC. HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO YOUR APPLIANCE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Some states or provinces do not allow disclaimers of such implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you depending on the state or the province of purchase.

HOW DO YOU OBTAIN WARRANTY SERVICE?

ARM Enterprises, Inc. appliances are high-quality and, with proper care, are intended to provide years of satisfying performance. However, should the need arise for warranty servicing, simply call Vinci Housewares **Customer Service at our toll free phone number 1-888-735-3621**. Please do not return your appliance for servicing without first speaking to ARM Enterprises, Inc. Customer Service to obtain a Return Authorization (RMA) number. ARM Enterprises, Inc. appliances returned without a Return Authorization number will be returned to the sender without servicing.



www.vincihousewares.com | 888.735.3621 | support@vincihousewares.com

Patent Info: www.vincihousewares.com/patents

F/N-v33_BL