

Quick-touch, five-mode scorekeeping watch



ScoreBand PRO Watch
Model #: SBPRO-BSM/BLX/WSM/WLX
www.ScoreBand.net

Press and hold any button for one second to awaken your new ScoreBand PRO.

GET FAMILIAR: Buttons/Display



1. ACTION BUTTON #1
 - In **Time** mode press and hold to set Hour.
 - In **Golf** mode press to go to next hole.
 - In **Tennis** and **AllScore** modes, press when Player 1 scores a point.
 - In **Stopwatch** mode press to stop & start timing.
2. ACTION BUTTON #2
 - In **Time** mode press and hold to set Minute.
 - In **Golf** mode press to enter stroke.
 - In **Tennis** and **AllScore** modes press when Player 2 scores a point.
 - In **Stopwatch** mode press to log laps.
3. MODE BUTTON
 - Press to change modes (Time > Golf > Tennis > AllScore > Stopwatch >).

NOTE: Modes do not reset when switched.

4. DATABAR BUTTON
 - Press to view three data points unique to each mode.
 - Press and hold to reset.
5. BACKLIGHT BUTTON
 - Press to illuminate display.
6. RESET BUTTON
 - Press and hold to reset.

TIP: Review only the modes that you will be using. To hide an undesired scoring mode, press and hold the Light button for 7 seconds while in undesired mode. To unhide mode(s), press and hold the Light button for 7 seconds while in Time mode.

TIME MODE

To switch between 12-Hour and 24-Hour mode press and hold Action button #1 and #2 for 4 seconds.

To set Hour: press and hold Action button #1 until hour digit blinks and then:

- Press Action button #1 to increase hour, or Action button #2 to decrease hour.
- Hour digits are set after 4 seconds of final button press.

To set Minute: press and hold Action button #2 until minute digit blinks and then:

- Press Action button #1 to increase minute, or Action button #2 to decrease minute.
- Minute digits are set after 4 seconds of final button press.

DATABAR (Press to display: Time Separator > Date > Seconds >)

To set Date: press and hold Databar button until Month digit(s) blink and then:



- Press Action button #1 to increase month, or Action button #2 to decrease month. When month is set and still blinking, press Databar button to set day.
- When day digit(s) are blinking, press Action button #1 to increase day or Action button #2 to decrease day.
- Date will set after 4 seconds of final button press, or by pressing the Databar button again.

GOLF MODE

To enter stroke: press Action button #2.

To advance to next hole: press Action button #1.

To correct score: press and hold Action button #2 until digit blinks and then press again to subtract one stroke.

To review prior holes during round, press Action button #1 & #2 simultaneously and then press Action button #1 to cycle through completed holes. Press Action button #1 & #2 simultaneously to return to current scoring.

After final stroke is entered, press Action button #1 to view round summary. Press again for hole-by-hole review.

DATABAR (Press to display: Total Score > Elapsed Time > Current Time >)

GOLF MODE TIP 1: To track two statistics (putts per round, fairways hit, etc.) use AllScore mode. Score is not reset when mode is switched.

GOLF MODE TIP 2: Enter first stroke when stepping up to the first tee box since Elapsed Timing starts when first stroke is entered. When round is completed Databar displays elapsed time and time of day that each hole was finished.



TENNIS MODE (5-Set Memory)

Choose server of first game - Player 1 (P1) or Player 2 (P2) - by pressing Action button #1 or Action button #2. Server is indicated by box around P1 or P2 icon.



To enter a point, press Action button #1 for Player 1 or Action button #2 for Player 2.

To correct a point, press and hold Action button #1 or Action button #2 (for player with incorrect score) until point is subtracted and blinking and then press button again to confirm correction.

If set score reaches 6:6, option to play a Tie Break will appear ("y": "n").

- Choose "y" to decide Set winner by playing Tie Break scoring system (first player to 7 and must win by two points).
- Choose "n" to play regulation games until one player wins by two games.



To review Match scores at any time, press Action button #1 and #2 simultaneously. "RVW" will appear to indicate Review mode. While in Review mode, press Action button #1 to review set scores. Press Action buttons #1 and #2 simultaneously again to return to scoring mode. After best of 5 sets, display automatically enters review mode. Press Action button #1 to review set scores.

DATABAR (Press to display: Set Score > Elapsed Time > Current Time >)

Elapsed time starts when server is chosen.

To pause / resume timer, press and hold the Databar button for 2 seconds (timer icon will blink). In Review mode, Databar displays the elapsed time and time of day when each set was completed.

ALLSCORE MODE (7-Game Memory)

To enter a point, press Action button #1 for Player 1 or Action button #2 for Player 2.



To correct a point, press and hold Action button #1 or Action button #2 (for player with incorrect score) until digit blinks and then press again to subtract one point.

When a game is won, press and hold Reset button for 2 seconds. After best of 7 games, display will automatically enter review mode.

To review series scores at any time, press Action button #1 and #2 simultaneously. "RVW" will appear to indicate Review mode. While in Review mode, press Action button #1 to review game scores. Press Action buttons #1 and #2 simultaneously again to return to scoring mode.

To fully reset, press and hold Reset button for 4 seconds.

DATABAR (Press to display: Game Scores > Elapsed Time > Current Time >)

Elapsed time starts when first point is entered. In Review mode, Databar displays the elapsed time and time of day when each game was completed.

ALLSCORE MODE TIP: Use AllScore mode with other modes to keep statistics/counts.

STOPWATCH MODE (10-Lap Memory)

To start timing, press Action button #1. To pause/stop timing, press Action button #1.



To log a lap while timing, press Action button #2.

When timing is complete, view Lap Review by pressing Action button #2. Then press Action button #1 to review lap times (maximum lap time is 59 minutes, 59.99 seconds).

DATABAR (Press to display: Seconds > Laps > Current Time >)

BATTERY


Type: 3 volt lithium button cell CR 2016

Life: 1 year with normal usage.

Replace: To preserve water-resistance integrity and warranty, it is strongly recommended to have a professional replace the battery.

Hibernate: To conserve battery life, put display to sleep while in Time mode by pressing the Light, Reset, and Databar buttons simultaneously for 4 seconds. To awaken from sleep, press any button for 1 second.

Low Battery: The "Low Battery" indicator will appear when there is less than one month of battery life remaining.


When you see this: , change the battery soon or you risk losing scores in the middle of your activity.

WATER RESISTANCE

ScoreBand PRO is 3 ATM water-resistant (splash/rain resistant; not suitable for showering, bathing, swimming, or other water-oriented activities).

WARRANTY

ScoreBand PRO is covered by a limited one-year warranty. Go online to register your device for warranty and to view full details at: www.scoreband.net/products/scoreband-pro

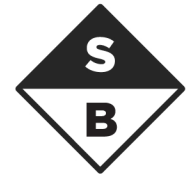

COUNT ON IT.

ONESUED

PO Box 20171
Charleston, SC 29413
www.scoreband.net
Phone: 888.722.0444
Email: support@scoreband.net

PLAY WELL!