

Digital Video Recorder Quick Start Guide

Thank you so very much for choosing ANNKE, and your data safety and satisfaction are our top priority. Our products are supported by the world's first video monitoring manufacturers, and they have adopted military level of protection. Due to data and privacy protection, the user should call us to retrieve the forgotten password thus a human verification is essentially carried out during the process.

About this Manual

This Manual is applicable to Digital Video Recorder (DVR).

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website .

Please use this user manual under the guidance of professionals.

Legal Disclaimer

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. OUR COMPANY SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, OUR COMPANY WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. OUR COMPANY SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

CE This product and -if applicable -the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.

 2012/19/EU(WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info

 2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss. The precaution measure is divided into [Warnings] and [Cautions].

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

	
Warnings: Follow these safeguards to prevent serious injury or death.	Cautions: Follow these precautions to prevent potential injury or material damage.



Warnings

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100 to 240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

Preventive and Cautionary Tips

- Before connecting and operating your device, please be advised of the following tips:
- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only. Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

Table of Contents

Chapter 1 Description of Panels	1
1.1 Front Panel	1
1.2 Rear Panel	1
Chapter 2 Installation and Connections	2
2.1 Hard Disk Installation	2
2.2 DVR Installation	4
2.3 HDD Storage Calculation Chart	5
Chapter 3 Menu Operation	6
3.1 Menu Structure	6
3.2 Activating Your Device	6
3.3 Setting unlock pattern	7
3.4 Using the Setup Wizard	8
3.5 Login and Logout	10
3.6 Network Settings	11
3.7 Camera Management Setting	13
3.8 Adding IP Cameras	13
3.9 Live View	15
3.10 Recording Settings	16
3.11 Playback	18
3.12 Backup	19
3.13 Alarm Settings	20
3.14 Setting Email	23
Chapter 4 Remote Control	25
4.1 Accessing by mobile	25
4.2 Accessing by IE	27
4.3 Accessing by client	29
Chapter 5 Software Download and FAQ	32
5.1 Software Download	32
5.2 FAQ	32

Chapter 1 Description of Panels

1.1 Front Panel




Description of Front Panel

No	Icon	Description
1	POWER	Turns red when DVR is powered up
2	STATUS	Turns red when data is being read from or written to HDD
3	TX/RX	Flickers blue when network connection is functioning properly
4	USB Port	USB port for mouse

1.2 Rear Panel

The rear panel are various according to different models. Please refer to the actual product. The following figure is for reference only.

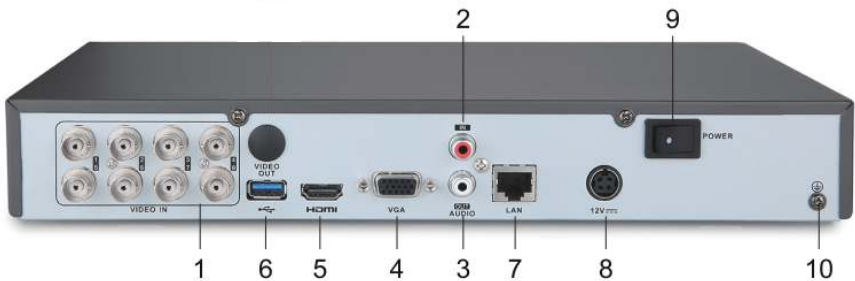

Description of Rear Panel

	Item	Description
1	VIDEO IN	BNC interface for TVI and analog video input.
2	AUDIO IN	RCA connector
3	AUDIO OUT	RCA connector
4	VGA	VGA video output connector.
5	HDMI	HDMI video output connector.
6	USB Port	USB port for mouse or U disk.
7	Network Interface	Connector for network
8	Power Supply	12VDC power supply.
9	Power Switch	Switch for turning on/off the device.
10	GND	Ground

Chapter 2 Installation and Connections



Wall Sticker



Power Adapter



USB Mouse



Network Cable



CD



User's Manual



HDD Power Cable
HDD Data Cable



Remote Control



HDMI Cable

2.1 Hard Disk Installation

After the hard disk is installed, the DVR can perform functions such as recording and playback. Without the HDD, you can only preview the current live monitoring video.

Note: Before installing a hard disk drive (HDD), please make sure the power is disconnected from the DVR. A factory recommended HDD should be used for this installation..

Tools Required: Screwdriver.

As the installation steps of HDD are similar among different models.

Steps:

1.Remove the cover from the DVR by unfastening the screws on the back and side.



2.Find out the power cable and data cable of the hard disk from the DVR accessories box, and prepare a hard disk and the hard disk screw. See in the picture on the left hand side, three-colour power cable is on the left and the blue data cable is on the right.



3.Connect one end of the power cable to the motherboard of DVR.



4.Connect one end of the data cable to the motherboard of DVR



5.Connect the data cable and the power cable to the HDD.



6.Place the HDD on the bottom of the device and then fasten the screws on the bottom to fix the HDD.




7.Re-install the cover of the DVR and fasten screws.

2.2 DVR Installation

Steps:

- 1.Connect the camera's BNC Female port and DC Female port to the video cable's BNC Male port and DC Male port; connect the video cable's BNC Male port to the DVR's BNC Female port; connect the video cable's DC Female port to the power splitter cable's DC Male port; connect the power splitter cable's DC Female port to the power Male port
- 2.Connect the monitor's VGA cable or HDMI cable to the DVR's VGA port or HDMI port.
- 3.Connect the DVR's RJ-45 port to the router's LAN by network cable .
- 4.Connect the mouse's USB Male port to the DVR's USB Female port.
- 5.Connect the DVR's power adapter.

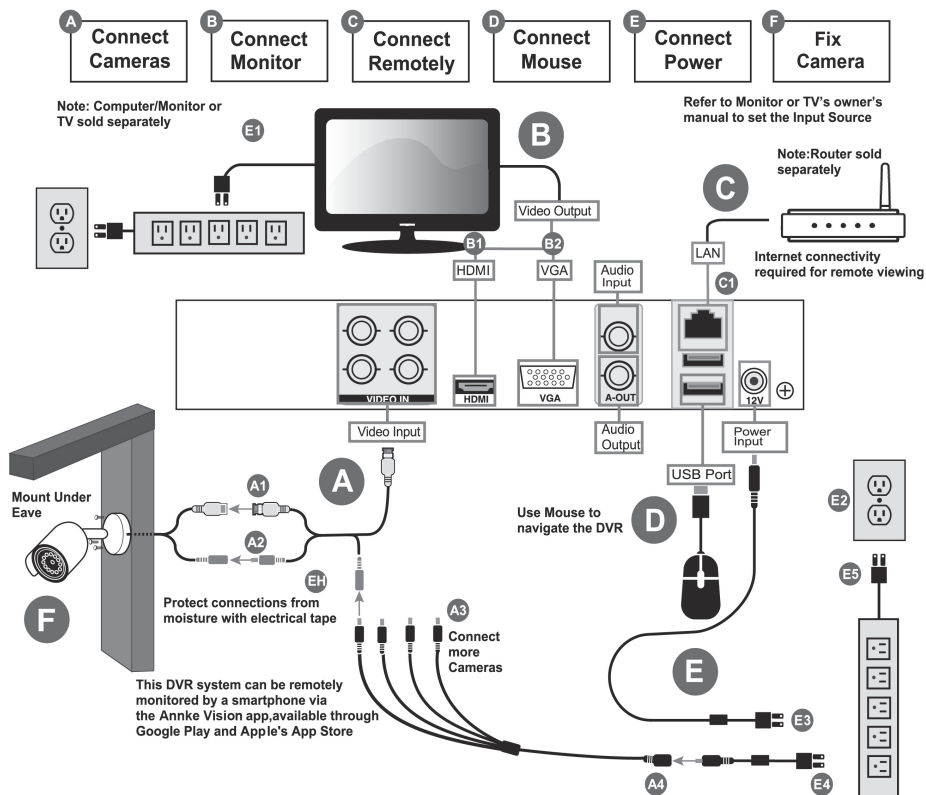

2.3 HDD Storage Calculation Chart

The following chart shows an estimation of storage space used based on recording at one channel for an hour at a fixed bit rate.


Bit Rate	Storage Used
96K	42M
128K	56M
160K	70M
192K	84M
224K	98M
256K	112M
320K	140M
384K	168M
448K	196M
512K	225M
640K	281M
768K	337M
896K	393M
1024K	450M
1280K	562M
1536K	675M
1792K	787M
2048K	900M
4096K	1.8G
8192K	3.6G
16384K	7.2G

Please Note that supplied values for storage space used are just for reference. Storage space used is estimated by formulas and may have some deviation from actual value.

Chapter 3 Menu Operation

3.1 Menu Structure

The interface may be different between different models and different software versions.

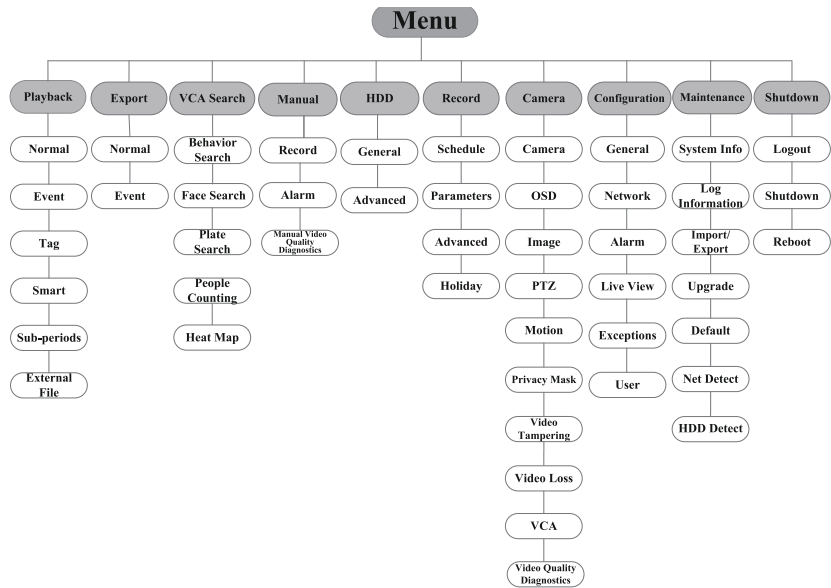

3.2 Activating Your Device

For the first-time access, you need to activate the device by setting an admin password. No operation is allowed before activation. You can also activate the device via Web Browser, SADP or client software.

Steps:

- 1.Input the same password in the text field of **Create New Password, Confirm New Password and IP Camera Activation Password**. (You can set the IP camera activation password by yourself, but it is advisable to set the same one as the DVR's.)

Note: Please set a memorable password for easy use and keep well.

Activation

User Name	admin
Create New P...	
Confirm New P...	
IP Camera Acti...	
Security Quest...	☒

✔ Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.

OK Cancel



Strong Password recommended– We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your privacy.

2. Click OK to save the password and then enter the Security Question Configuration interface.

The dialog box is titled "Security Question Configuration". It contains three sets of questions and answers. Each set has a question number, a dropdown menu for the question, and a text input field for the answer. The questions are: 1. Your father's name., 2. Your mother's name., and 3. Your senior class teacher's name. Below the answer fields, there is a note: "These answers are very important information to get your password back, please take a photo and save it." At the bottom right, there are "OK" and "Cancel" buttons.

3. Select three security questions and enter your answers. It is advisable to take a picture of these questions and answers, so that you may need them to reset the password. Click "OK" and you will be prompted to activate the device.


The dialog box is titled "Attention" and has a blue header. It contains an information icon (i) and the text "Configuration succeeded." Below the text is an "OK" button.

4. A prompt box will pop up, reminding you to export the GUID file for password resetting. This is another way to retrieve the password. Click "Yes" if you need backup. It is advisable to use a USB flash drive for the backup.


The dialog box is titled "Attention" and has a blue header. It contains a question mark icon (?) and the text "The device is activated. Properly keep your password. Export the GUID file for password resetting?" Below the text are "Yes" and "No" buttons.

3.3 Setting unlock pattern

After activating your device, you can set unlock pattern instead of typing the password. Draw the unlock pattern twice to confirm.

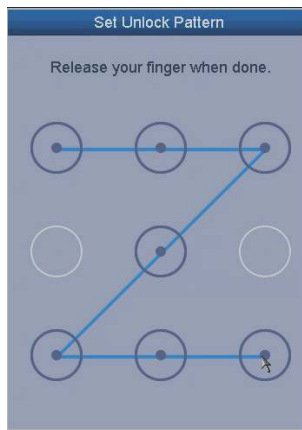


Then you can choose system language you need .

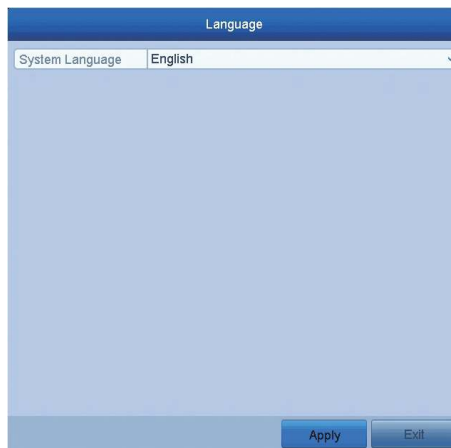

3.4 Using the Setup Wizard

After setting the language, you will come to the setup wizard interface.

The Setup Wizard can walk you through some important settings of the device.

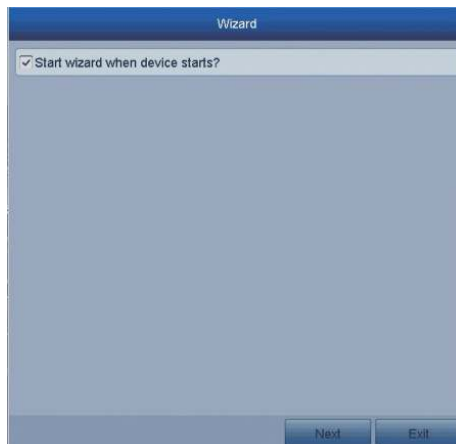

1.Click Next to continue the setup wizard and enter the signal input configuration interface.

Wizard	
Time Zone	(GMT+08:00) Beijing, Urumqi, Singapore
Date Format	MM-DD-YYYY
System Date	07-20-2018
System Time	08:57:55

Previous

Next

Exit

2.Configure the IP Address. If you want to monitor remotely, you need to connect your DVR to the Internet first, and the IP address and DNS server must be correctly obtained.

Wizard	
NIC Type	10M/100M Self-adaptive
Enable DHCP	☒
IPv4 Address	192 .168 .1 .64
IPv4 Subnet Mask	255 .255 .255 .0
IPv4 Default Gateway	. . .
Enable DNS DHCP	☒
Preferred DNS Serv...	
Alternate DNS Server	

Previous

Next

Exit

3.Set the P2P function. You need to manually enter a verification code first, which consists of 6 to 12 digits or letters, and then **confirm** it (ABCDEF is not allowed). You can scan the QR code (for Android&iPhone) to download the APP, then follow the APP prompt to scan the SN's QR code step by step. The device can be successfully added only if the P2P's status is online. You can also go to **Main Menu - Configuration- Network Settings - Platform Settings** to scan and add the device.

Wizard

Enable ☒

Access Type **Annke Vision**

Enable Stream En... ☐

Verification Code **Confirm**

Status **Offline**

Please scan the QR code to download the Annke Vision app, finish the installation step by step and then scan the SN code via app to add the device.

Android iPhone SN

Previous Next Exit

4.Set the HDD. The newly installed hard disk needs formatting before it could be used. Choose the target HDD and click "int" to format it, then the status will show "Normal".

Wizard

L...	Capacity	Status	Property	Type	Free Space
1	1863.02GB	Normal	R/W	Local	1427.00GB

Init

Previous Next Exit

5.Follow the guide of the Wizard to configure other settings.

Note: Picture is for reference only, please consult with the real products.

3.5 Login and Logout

User Login

You have to log in to the device before operating the menu and other functions. You can use the patterns to unlock or select the **User Name** in the drop-down list and input **Password**, then click **OK** to log in.

Login

User Name **admin**

Password

OK Cancel

Note: If you enter the wrong password 7 times in the Login dialog box,, the current user account will be locked for 60 seconds.


User Logout

After logging out, the monitor turns to the live view mode and if you want to perform any operations, you need to enter user name and password log in again.

Click **Menu > Shutdown** to enter into the Shutdown menu, and then click **Logout**, as shown in the figure below. After you have logged out the system, menu operation on the screen is invalid. It is required to input a user name and password to unlock the system.



Note: If you don't want to input password every time, you can disable the password. Go to **Menu > Configuration > General> Enable Password** and choose disable, as shown in the figure below.

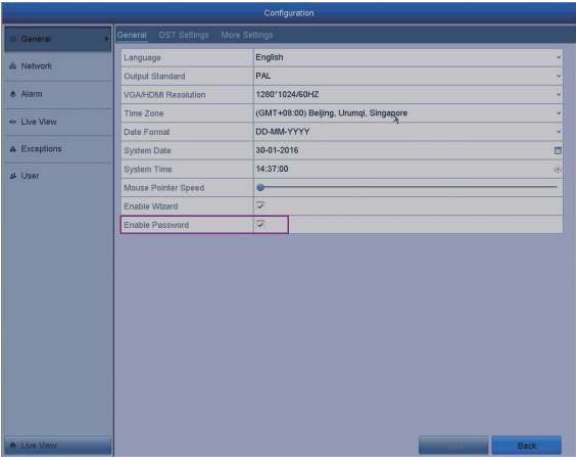

3.6 Network Settings

Network settings must be properly configured before you operate DVR over network. Make sure that the DVR has connected to the router by using the network cable and your network at home is in good condition. You can go to **Menu > Configuration > Network** to enter into the interface of Network Settings, as shown in the figure below.

The screenshot shows the 'Configuration' window with the 'General' tab selected. The left sidebar contains links for General, Network, Alarm, Live View, Exceptions, and User. The main content area is titled 'General' and contains the following settings:

NIC Type	10M/100M Self-adaptive	
Enable DHCP	☒	
IPv4 Address...	10 .0 .0 .21	IPv6 Address...
IPv4 Subn...	255 .255 .255 .0	IPv6 Address...
IPv4 Defa...	10 .0 .0 .1	IPv6 Defa...
MAC Address	4c:bd:8f:ae:43:14	
MTU(Bytes)	1500	
Enable DNS DHCP	☒	
Preferred DNS Server	10.0.0.1	
Alternate DNS Server		

At the bottom of the window, there are 'Apply' and 'Back' buttons.

1. Select the **General** tab.

2. In the **General Settings** interface, you can configure the following settings: NIC Type, IPv4 Address, IPv4 Gateway, MTU and DNS Server.

If the DHCP server is available, you can check the checkbox of **DHCP** to automatically obtain an IP address and other network settings from that server.

3. After having configured the general settings, click the **Apply** button to save the settings.

4. Click "**Platform Access**", make sure that the status of P2P shows "**Online**", which means your network status is in good condition, then you can watch the video normally on your mobile phone and PC, as shown in the figure below.

The screenshot shows the 'Configuration' window with the 'Platform Access' tab selected. The left sidebar is the same as the previous screenshot. The main content area is titled 'Platform Access' and contains the following settings:

Enable	☒
Access Type	Annke Vision
Enable Stream Encryption	☐
Verification Code	QWERTY
Status	Online

Below the settings, there is a text instruction: "Please scan the QR code to download the Annke Vision app, finish the installation step by step and then scan the SN code via app to add the device." This is followed by three QR codes labeled 'Android', 'iPhone', and 'SN'.

Below the QR codes, there is a text instruction: "After the device is added to the mobile app, the 'unbind' button will be highlighted in blue. If you need to unbind the device from the app, please click the 'unbind' button." Below this text is a blue 'unbind' button.

At the bottom of the window, there are 'Apply' and 'Back' buttons.

Notes:

1. The device can only be added by one app account. If you want to view the device on multiple mobile phones, you can log in with the same account or share the device with other accounts.
2. After the device is added to the mobile app, the "unbind" button will be highlighted in blue. If you want to unbind the device from your app account, please click the "unbind" button. You can also delete the device from app.
3. If the status shows offline, please follow the path "Configuration-Network-General" to ensure the network data is correctly acquired and the DNS field is filled right.

3.7 Camera Management Setting

Enter **Main Menu >Camera** to configure the camera management, you can set the image, PTZ, motion, video loss and so on. For example, you can click **OSD** to change the name of your camera, as shown in the figure below.




3.8 Adding IP Cameras

DVR supports 4 IPCs up to 6MP resolution for channel expansion .


Note: IPC needs to support either ANNKE private protocol (like I61DQ, I61DR, I61DS, Nova S, Nova Orion) or Onvif protocol. IPC and DVR must be in the same network.

Steps:

1. Select the **Add IP Camera** option from the right-click menu in live view mode .



or click **Menu> Camera> Camera** to enter the IP camera management interface.

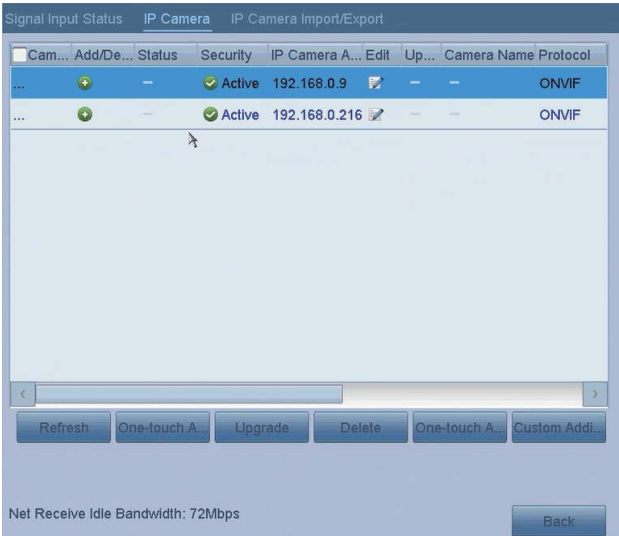


- The online cameras with same network segment will be detected and displayed in the camera list.
- Click the **Custom Adding** button enters into the following interface, select the IPC you want to add, choose the correct Protocol and input the correct Management username and password of the IPC, click "Add" to save the setting.


Note: Different device models have different passwords. If you enter a wrong password, the image will not display even if you click "Add".

For IP cameras that support ANNKE private protocol, like I61DQ, I61DR, I61DE, their password is the activated password. For Nova S and Nova Orion, their password is the verification code, which is the 6-digit capitalized letter on the device's body sticker.

For IP cameras that support Onvif, you need to find the correct password and enter it.

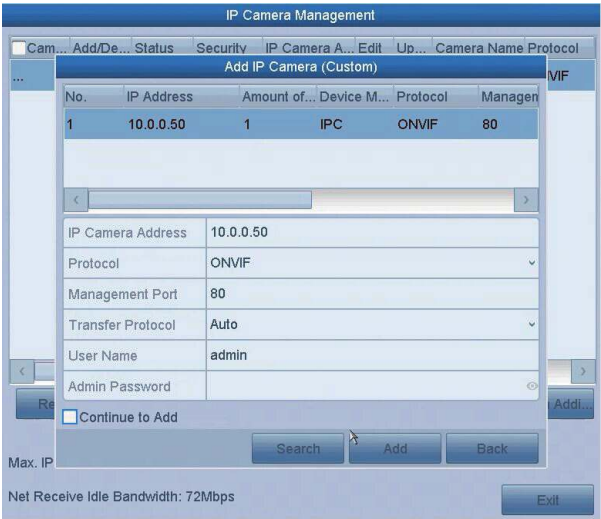

- For the successfully added IP cameras, the status shows "  " and means you can play the live video.

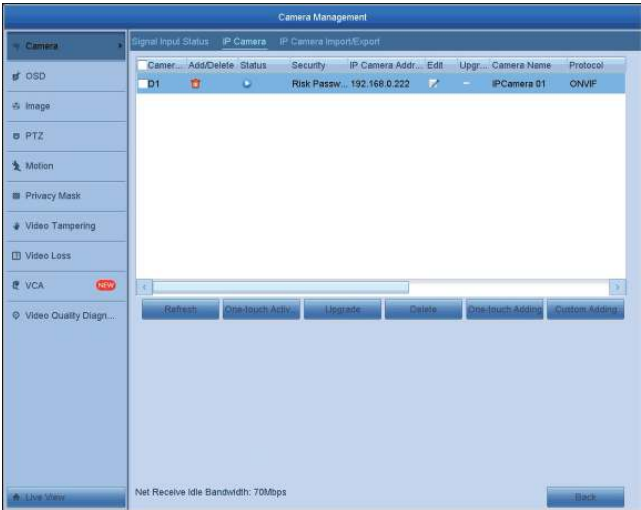

Explanation of the icons

Icon	Explanation	Icon	Explanation
	Edit basic parameters of the camera		Add the detected IP camera.
	The camera is disconnected; you can click the icon to get the exception information of camera.		Delete the IP camera
	Play the live video of the connected camera.		Advanced settings of the camera.
	Upgrade the connected IP camera.	Security	Show the security status of the camera to be active/inactive or the password strength (strong/medium/weak/risk)

3.9 Live View

Some icons are provided on screen in Live View mode to indicate different camera status.

In the live view mode, there are icons at the right top of the screen for each channel, showing the status of the record and alarm in the channel, so that you can find problems as soon as possible.

Explanation of the live view icons

Icon	Explanation
	Indicating that there is an alarm or are alarms. Alarm includes video loss, tampering, motion detection or sensor alarm, etc.
	Recording (manual record, continuous record, motion detection or alarm triggered record)
	Alarm & Recording
	Event/Exception (event and exception information, appears at the lower-left corner of the screen.)

You can change DVR's output resolution to 1080p or 4K for better experience if your monitor support . In DVR, goes to the **Main Menu>Configuration>General> General>VGA/HDMI** Resolution, change the output resolution from default 1024*768HZ to 1920*1080HZ or other choice you want.

Note: Please make sure your monitor support 1080P or higher resolution, otherwise the picture on your monitor will not be displayed properly.




3.10 Recording Settings

DVR can set the continuous recording or motion detection video by one-click, and also set the recording schedule to record. Make sure that the disk has already been installed before you start. If not, please install a disk and initialize it. Make sure the status of HDD shows "Normal".


3.10.1 Set recording by one-click

On the live view window, right click the window and move the cursor to the Start Recording option, and select **Continuous Record or Motion Detection Record** on your demand.

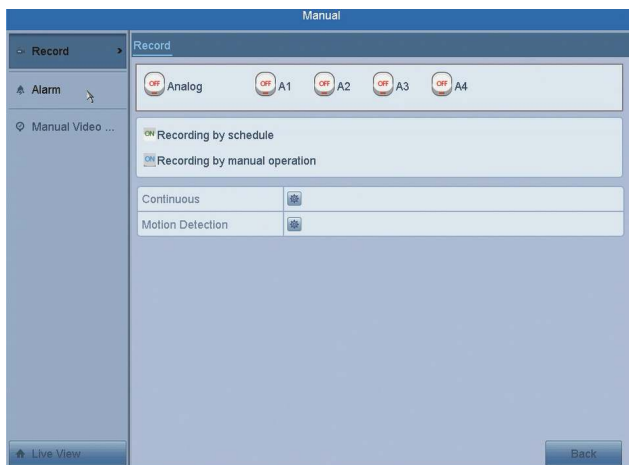

3.10.2 Set the recording schedule to record

Set the record schedule, and then the camera will automatically start/stop recording according to the configured schedule. You can go to **Menu> Record> Schedule** enter into the interface of Record Schedule.

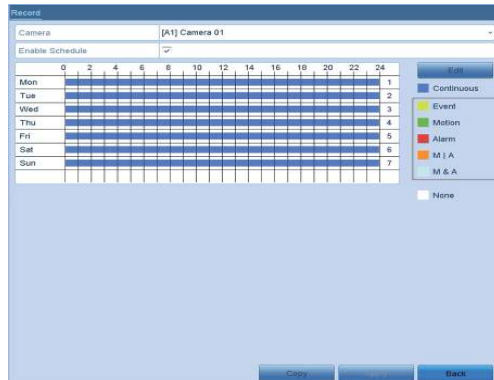

Different recording types are marked in different color icons.

[Continuous]: scheduled recording.

[Event]: recording triggered by all event triggered alarm.

[Motion]: recording triggered by motion detection.

[Alarm]: recording triggered by alarm.

[M/A]: recording triggered by either motion detection or alarm.

[M&A]: recording triggered by motion detection and alarm.

1. Choose the camera you want to configure in the Camera drop-down list.

2. Check the checkbox of **Enable Schedule**.

3. Configure the record schedule.

Draw the schedule


(1) Click on the color icon to select a record type in the event list on the right-side of the interface.

(2) Click and drag the mouse on the schedule.

(3) Click on the other area except for the schedule table to finish and exit the drawing.

You can repeat step 1-3 to set schedule for other channels. If the settings can also be used to other channels, click **Copy**, and then choose the channel to which you want to copy.

4. Click **Apply** in the Record Schedule interface to save the settings.

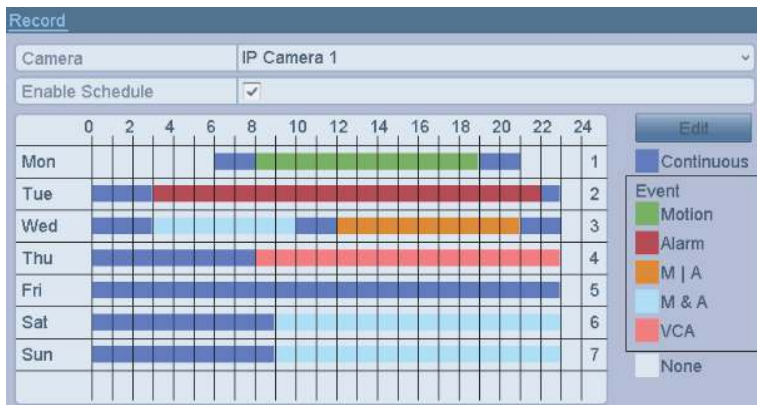

Note: Up to 8 periods can be configured for each day. And the time periods cannot be overlapped with each other; To enable Event, Motion, Alarm, M | A (motion or alarm) and M & A (motion and alarm) triggered recording, you must configure the motion detection settings, alarm input settings or VCA settings as well; The VCA settings are only available to the smart IP cameras.

3.11 Playback

The recorded video files on the hard disk can be played back in the following modes: instant playback, all-day playback for the specified channel, and playback by normal/event/smart/ tag/sub-periods/external file search.

Playing Back by Normal Search

Steps:

1.Enter playback interface.

Click Menu>Playback or select Playback from the right-click menu


2.Check the checkbox of channel(s) in the channel list and then double-click to select a date on the calendar.

Note: If there are record files for that camera in that day, in the calendar, the icon for that day is highlighted in blue displayed as . Otherwise it is displayed as .

3.You can use the toolbar in the bottom part of Playback interface to control playing progress.

4.Select the channel(s) you want to play back by checking the checkbox(s), or execute simultaneous playback of multiple channels.

Note: Please reduce synchronized playback channels appropriately when need fluent playback.

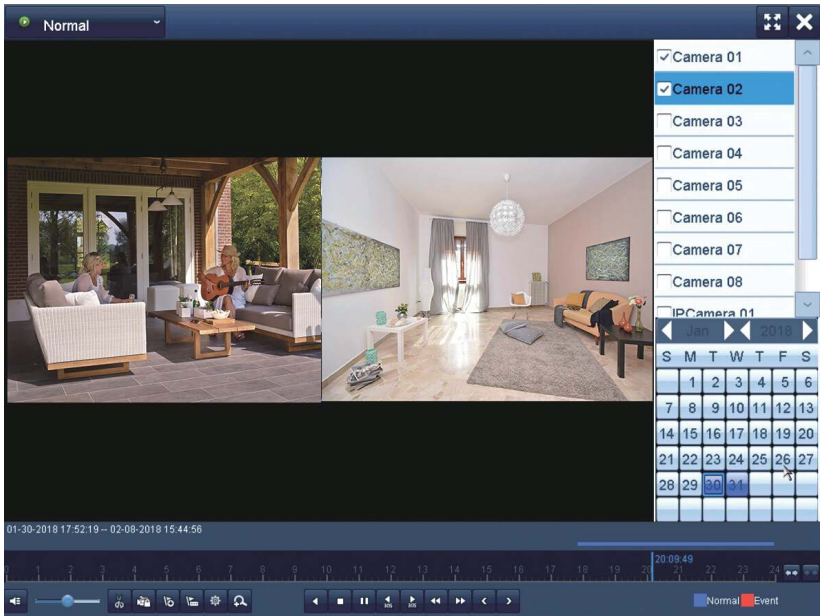


Detailed Explanation of Playback Toolbar

Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward
	30s reverse		Add default tag		Add customized tag
	Tag management		Speed down		Pause reverse play/ Reverse play/ Single-frame reverse play
	Pause play/ Play/ Single-frame play		Scaling up/down the time line		Speed up
	Previous day		Next day		Full Screen
	Exit		Stop		Digital Zoom
	Save the clips		Process bar		Video type


Note: The **14-01-2015 22:15:23 -- 03-03-2015 09:49:37** indicates the start time and end time of the record files. The icon “ ” represents normal recording (manual or schedule); “ ” represents event recording (motion, alarm, motion | alarm, motion & alarm). Playback progress bar: use the mouse to click any point of the progress bar to locate special frames.

3.12 Backup

Please insert the backup device(s) into the device before you start. You can go to **Menu>Export>Normal** enter into the interface of Export and select the cameras to search. You can set search condition and click Search button to enter the search result interface, as shown in the figure below.

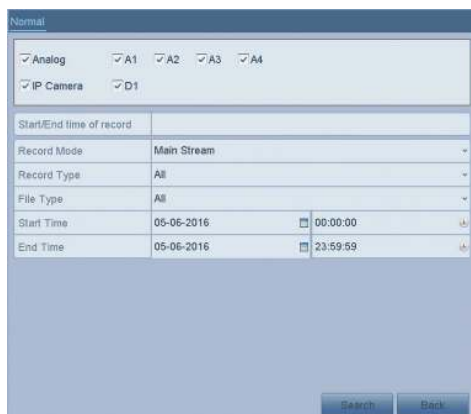

- 1.Set search condition and click **Search** button to enter the search result interface.
The matched video files are displayed in **Chart** or **List** display mode.
- 2.Select video files from the **Chart** or **List** interface to export.
- 3.Export the video files.

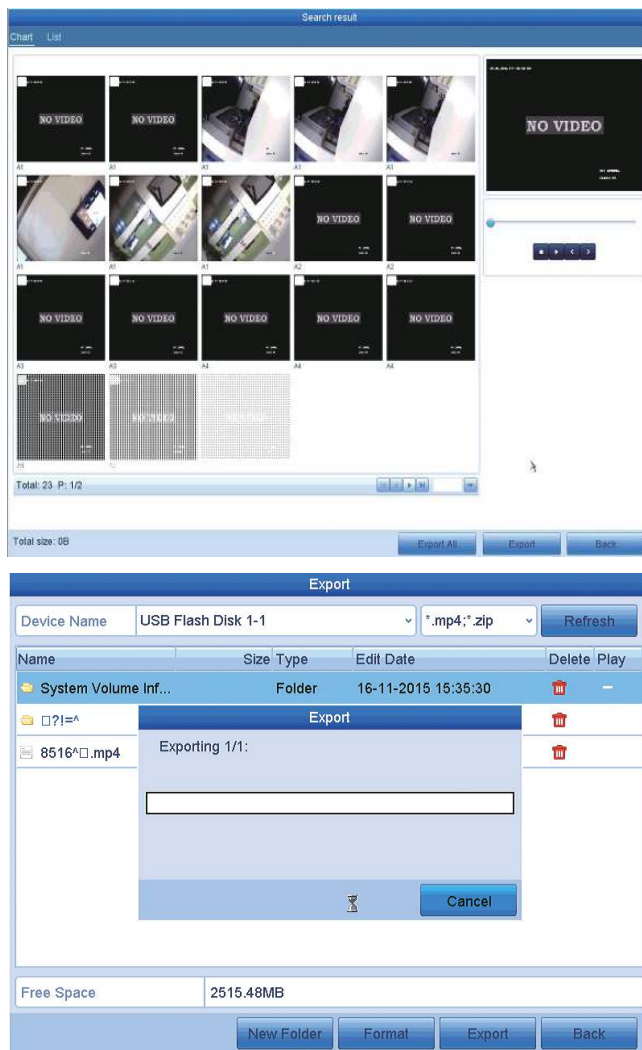


3.13 Alarm Settings

Steps:

1. You can go to **Menu > Camera > Motion Detection** enter into the interface of Camera Management and choose a camera you want to set up motion detection.
2. Set detection area and sensitivity. Check ☒ checkbox to enable motion detection, use the mouse to draw detection area(s) and drag the sensitivity bar to set sensitivity. And then click  to set alarm response actions.


Note: You can choose "False Alarm Filter" if your camera support PIR and the device.

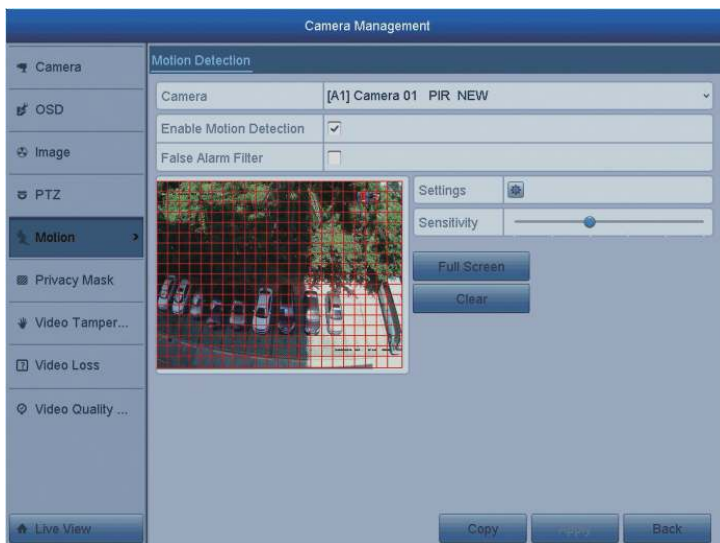

3. Click **Trigger Channel** tab and select one or more channels which will start to record or become full-screen monitoring when motion alarm is triggered. The default setting is just only the setting channel.




4. Set arming schedule of the channel. Select **Arming Schedule** tab to set the channel's arming schedule. The default setting is full day.

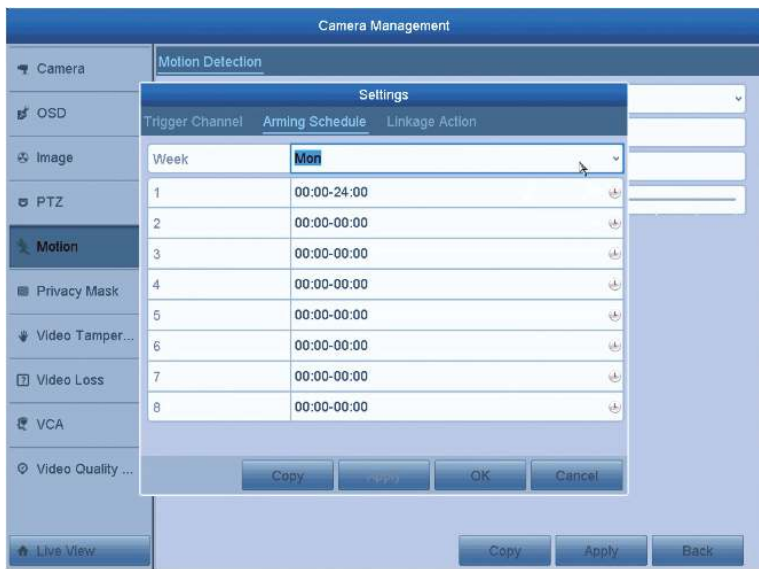

5. Click **Linkage Action** tab to set up alarm response actions of motion alarm.. The default setting is none.



6. If you want to set motion detection for another channel, repeat the above steps or just copy the above settings to it.

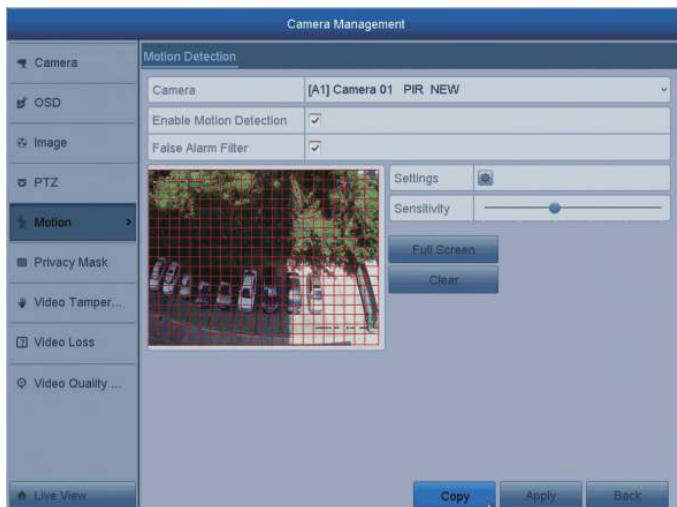

3.14 Setting Email

Before configuring the Email settings, the NVR must be connected to a local area network (LAN) that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notification.

Steps:

You can go to **Menu > Configuration > Network > General** enter into the interface of Network Settings.

1.Set the IPv4 Address, IPv4 Subnet Mask, IPv4 Gateway and the Preferred DNS Server in the Network Settings menu, as shown in below.Click **Apply** to save the settings.


NIC Type	10M/100M Self-adaptive		
Enable DHCP	☒		
IPv4 Address...	192 . 168 . 0 . 228	IPv6 Address...	fe80::bead:28ff:fea7:3a52/64
IPv4 Subn...	255 . 255 . 255 . 0	IPv6 Address...	
IPv4 Defa...	192 . 168 . 0 . 1	IPv6 Defa...	
MAC Address	bc:ad:28:a7:3a:52		
MTU(Bytes)	1500		
Preferred DNS Server	114.114.114.114		
Alternate DNS Server	8.8.8.8		

2.Select the Email tab to enter the Email Settings interface.

General		Platform Access		PPPOE		DDNS		NTP		Email		NAT		More Settings	
Enable Server A...		☒		SMTP Mode		General		SMTP Server		Gmail					
User Name		yaojj321@gmail.com		SMTP Port		587									
Password		annke2018		Enable SSL/TLS		☒									
Sender		123													
Sender's Address		yaojj321@gmail.com													
Select Receivers		Receiver 1													
Receiver		345													
Receiver's Address		yaojj321@gmail.com													
Enable Attached Picture		☒													
Interval		2s													

3.Configure the following Email settings and click **Apply** button to save the settings.

- [Enable Server Authentication]** (optional): Check the checkbox to enable the server authentication feature.
- [User Name]:** The user account of sender's Email for SMTP server authentication.
- [Password]:** The password of sender's Email for SMTP server authentication.
- [SMTP Server]:** The SMTP Server IP address or host name (e.g.,smtp.gmail.com).
- [SMTP Port No.]:** The SMTP port. The port used for gmail is 587, and it can be 25,465 or other port for different smtp server.
- [Enable SSL](optional):** Click the checkbox to enable SSL if required by the SMTP server(Login your Gmail mailbox, click and enable "SSL" and enter <https://myaccount.google.com/security?pli=1#connectedapps>, and then turn **"Allow less secure apps"** on, as shown in the figure below).

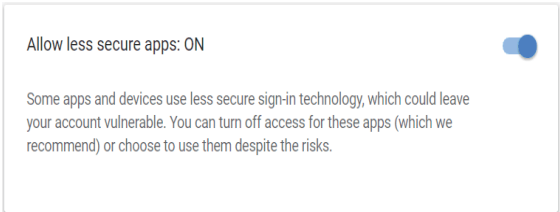

- [Sender]:** The name of sender.
- [Sender's Address]:** The Email address of sender.
- [Select Receivers]:** Select the receiver. Up to 3 receivers can be configured.
- [Receiver]:** The name of user to be notified.
- [Receiver's Address]:** The Email address of user to be notified.
- [Enable Attached Pictures]:** Check the checkbox of Enable Attached Picture if you want to send email with attached alarm images. The interval is the time of two adjacent alarm images. You can also set SMTP port and enable SSL here.
- [Interval]:** The interval refers to the time between two actions of sending attached pictures.
- [E-mail Test]:** Sends a test message to verify that the SMTP server can be reached.


Chapter 4 Remote Control

4.1Accessing by mobile




Before you start to remote control, please make sure that the status of P2P shows "Online", which means your network status is in good condition, then you can watch the video normally on your mobile phone and PC.

1.Open up your "Annke Vision" APP from Google Play or Apple Store , click "**Register**" to sign up for an account by your mobile phone number or email address, please click "Login" after you registered successfully.





Note: Please select the correct country / region when you register an account, it cannot be changed once selected.

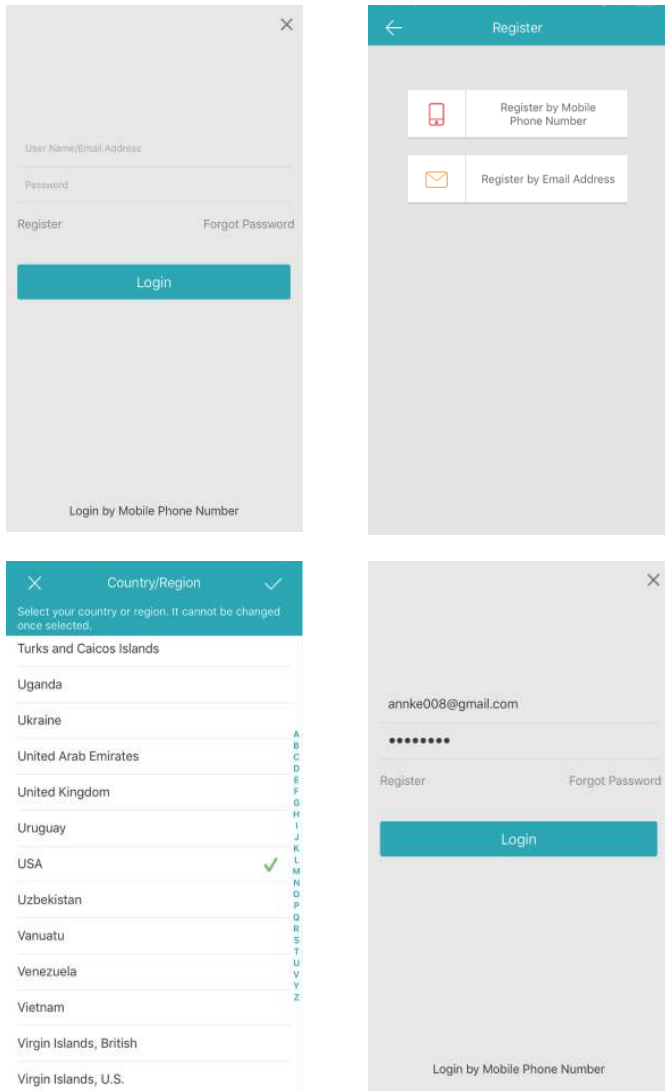

2. Select “” or click the icon “” in the upper right corner to add a device. You can follow the path "Menu-Configuration-Network-Platform Access" to scan the SN's QR code, then you will get the device information. Click "Add" to add the device, then click "Finish" or return to complete the adding.

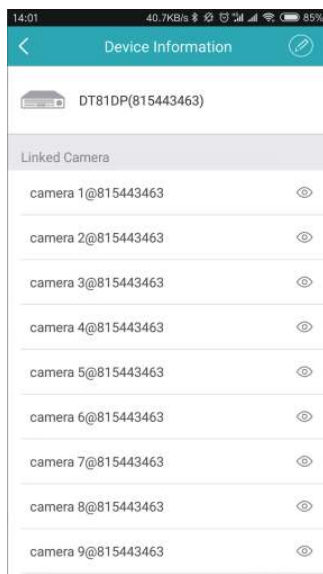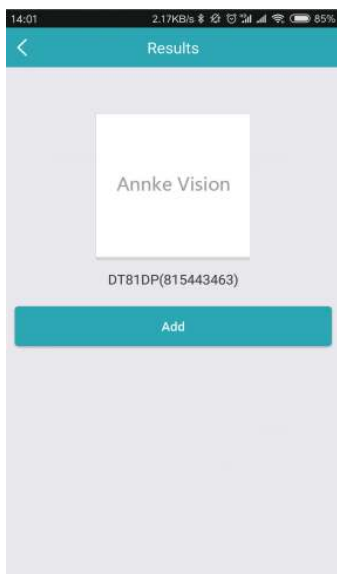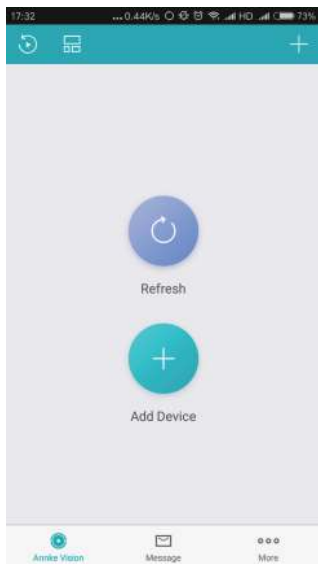

3. Select the device to get real-time preview, click the icon “” in the upper right corner to enter into the interface of function, you can playback, change settings and other functions. click “More” to check more information.

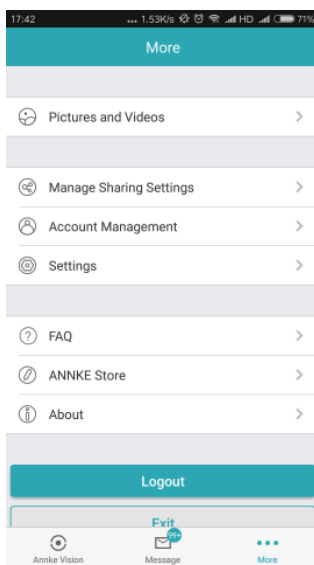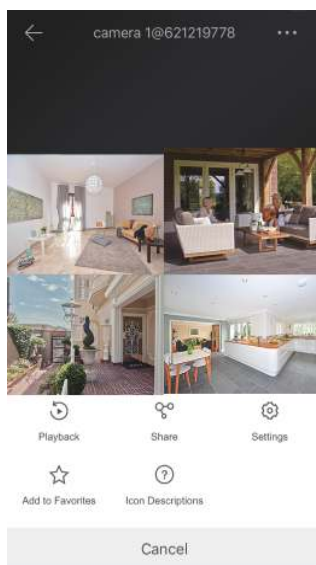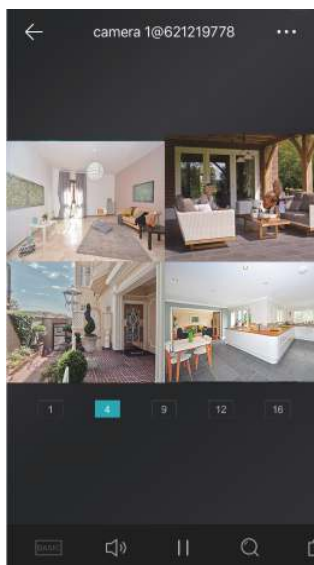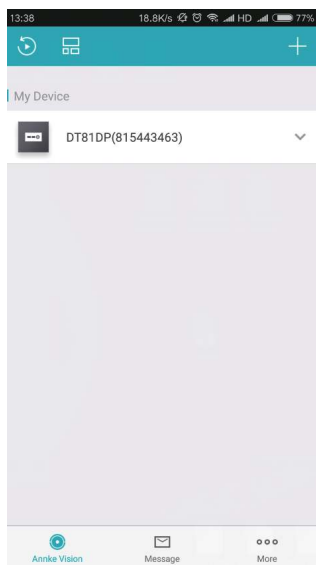

NOTE: For your security, an SN can only be added by one account. But an account can be used on multiple mobile phones.


4.2 Accessing by IE

When you are at home or the device only works within LAN, you can login on IE browser through device's IP address. You can find the IP address of the device by SADP or just go to DVR's **Main Menu > Configuration > Network > General**. You can find the SADP software in the CD or download from our website:


www.annke.com/SADPTool.exe

Steps:

1. Run the SADP software to search online devices, then double click IP address to web browser.Or just input it into web browser if you know the IP address.

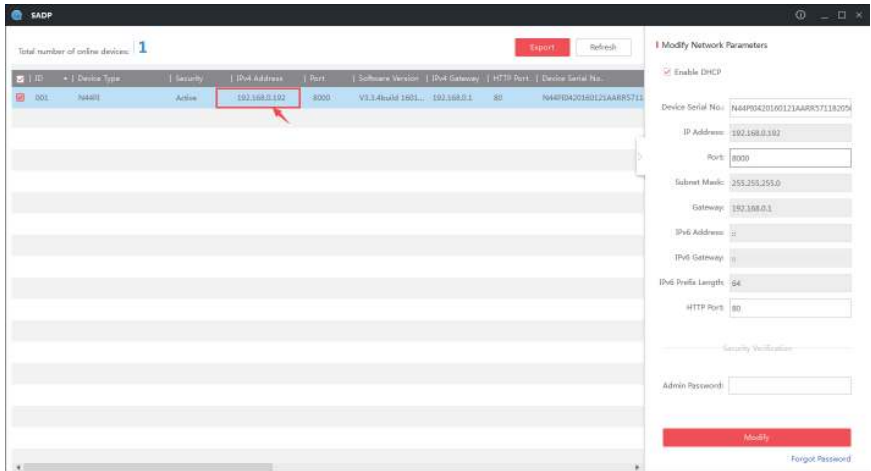


2. Enter the user name "admin" and password in the login interface, and click the **Login** button.

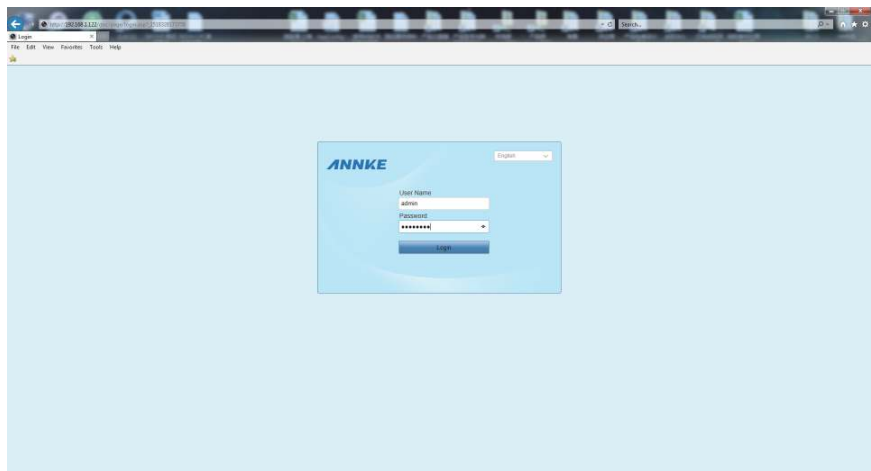

3. Download and Install the plug-in for watching live video and managing the camera. Close the browser when installing the plug-in.

- Download and Install the plug-in for watching live video and managing the camera. Close the browser when installing the plug-in.

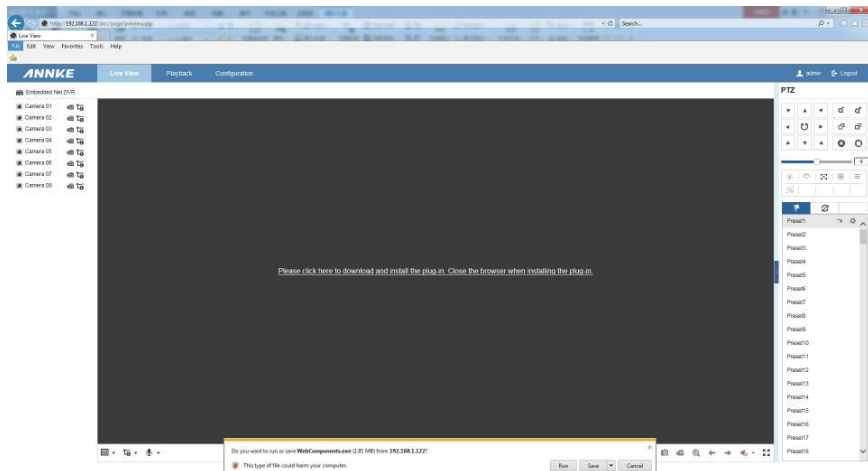


- Reopen IE and login, then choose the channel you want to watch the live video.



4.3 Accessing by client

You can view the live video and manage the camera with the client software **Guarding Expert**. Please find the software from the CD , or download it from our official website www.annke.com/GuardingExpert.exe, Please follow the installation prompts to install the software.

The control panel and live view interface of **Guarding Expert** are shown below.

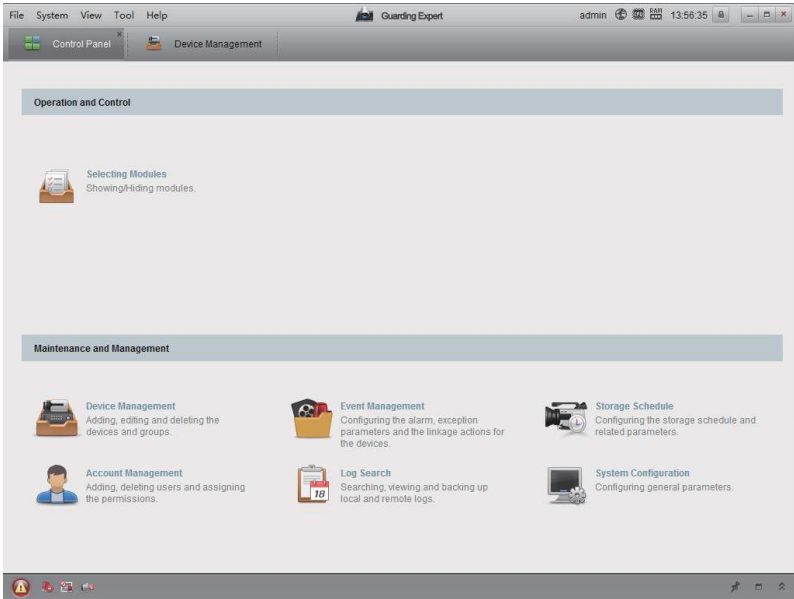

Steps:


1. Activate device

If your device have been activated you can go to Step 2 directly.

Go to Control Panel-Device Management, on the bottom of the screen in the Online Devices section the screen will display all devices on the network. The **"Security"** will display whether the DVR/NVR is active or not. If the NVR is **"Inactive"** highlight the NVR and press the Activate button to display the **"Activation"** window, then enter a new password into the **"Password"** field, retype the password into the **"Confirm Password"** field, press the **OK** button, and then it will be activated.


2. Add device

Choose **"Device type"> "Device"**, click **"Add to Client"**, it will shown **"Add"** window, you need to input Nickname, user name, password (the password is same as your activated password), then click add to add the device to client, as shown in the figure below.

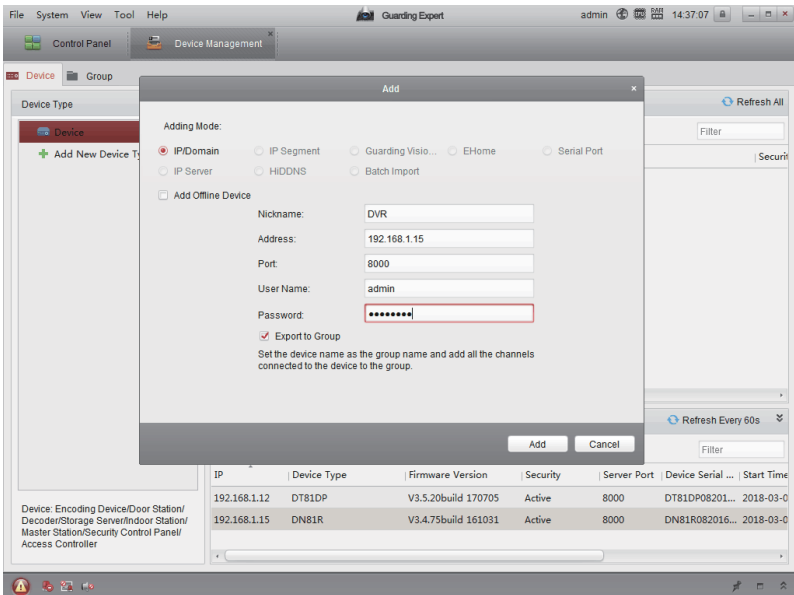


3.Remote View

If you want to access the device remotely by CMS, please click "Add New Device Type" in the device management interface, then check "Guarding Vision Device" and click "OK".

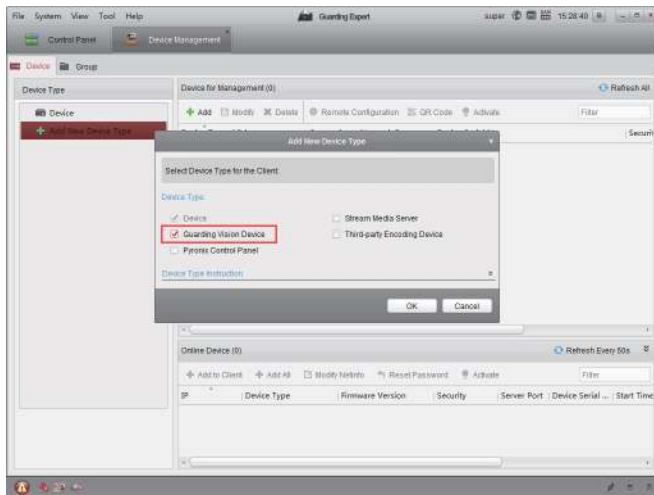


Click "Login" to login your cloud account and see live view.

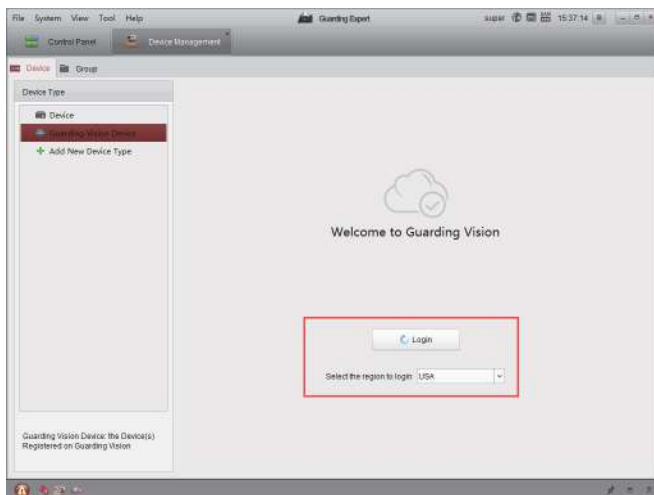

4. Live view

Go to **Control Panel—Main View**, you can choose view screen,64 channel in one screen maximum, and if you have added IPC, you can get a live view in the screen, as shown in the figure below.

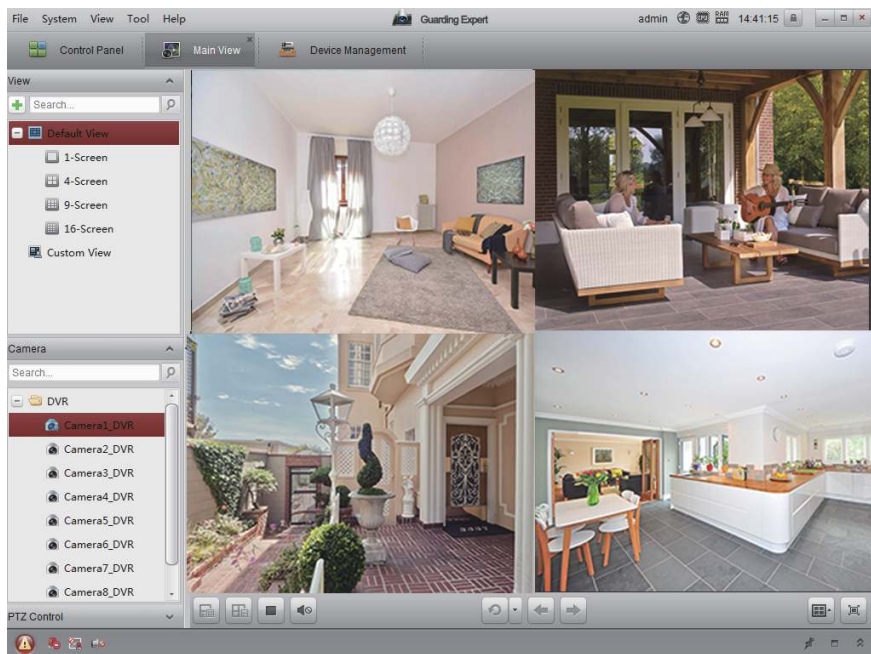

For more information, please press **F1** to get user manual.

Chapter 5 Software Download and FAQ

5.1 Software Download

You can download the software and manual via Internet.

1. Visit www.annke.com
2. Search DT81DP.
3. Click the "Downloads" to choose and get what you want in the list.

5.2 FAQ

1. What should I do if I forgot the DVR's password?

- (1) If you forgot your password, please click "Forgot Password" in the lower left corner of the login interface;



- (2) You can use the three preset security questions or use the GUID files to set a new password and reactivate the device.

Password Reset Type

☐ Verify by GUID
☒ Verify by Security Question

OK
Cancel

Verify by Security Question

Question 1 1. Your father's name.
 Answer 1

Question 2 2. Your mother's name.
 Answer 2

Question 3 3. Your senior class teacher's na...
 Answer 3

OK
Cancel

(3) If you forget the answers for the questions and don't have GUID files, please use SADP to export the configuration files to reset the password.

a. Download SADP from the CD or the website below: www.annke.com/SADPTool.exe

and install it on your computer. Make sure your computer and your device are in the same network.

b. Open SADP and check the target device, click "Forgot Password" to enter the Reset Password interface.

The screenshot shows the SADP tool interface. On the left, there's a table with columns: ID, Device Type, Status, IP Address, Port, Software Version, HTTP Port, and Device Serial No. The first device is selected, and a red arrow points to the 'Forgot Password' button at the bottom right. On the right, there's a 'Modify Network Parameters' panel with various settings like IP Address, Port, Subnet Mask, Gateway, etc.

c. Click "Export" to download the key request file, and set the file path in the pop-up window.

Reset Password

Mode: Export/Import Secret Key Mode

Step 1: Click Export to download the key request file (XML file) or take a photo of the QR code. Send the XML file or QR code photo to our technical engineers.

Export
QR code

Step 2: Input the key or import the key file received from the technical engineer to reset the password for the device.

☒ Input Key
☐ Import File

New Password:


Confirm Password:

☐ Reset Network Cameras' Passwords

Confirm
Cancel


Click "Select Folder" to save the device's key request file on your PC. The exported key request file is a XML file which is named in the form of "Device Serial No.-System Time".

Note: If your exporting fails, please right-click on SADP and run it as an administrator;

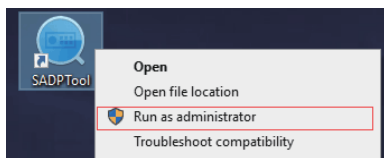

d. As the file has a valid period, please send an email to support@annke.com immediately after exporting the file, and let us know that you have forgotten the password. Our technical engineer will send you a key file back. Please don't restart the DVR after the file is exported, otherwise the file will immediately become invalid.

e. Select "Import File" as the resetting method. Click the file icon to select the received key file (XML file) and click "Open". Input a new password twice, and the system will evaluate the password strength automatically. We highly recommend you to use a strong password to ensure your data security. Lastly, click "Confirm" to finish your resetting.

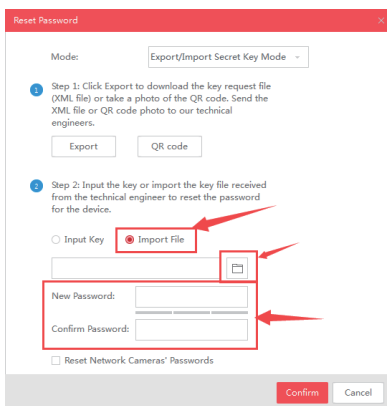

2.What should I do when Mobile phone can not watch the video online ?

Please go to the "Main Menu" > "Configuration" > "Network" > "Platform Access" to check the status of your network. If the DVR's P2P status is displayed "Online", you can add the device to "Annke Vision" APP to view it remotely. If you can not view it, please check the following steps:

- (1). Please log in to the router to check if its protection level is set high, and check if P2P is disabled. If so, please enable it.
- (2)Please check the DVR's P2P status is offline or not, if it is offline:
 - a. Please confirm if your router has enabled the P2P; check your router's firewall status.
 - b. Please confirm whether the network cable is correctly connected to the router, or replace the network cable.
 - c. If DHCP is enabled on the router, check whether DHCP is enabled on the DVR and whether the IP address of the same network segment as the router is obtained. If the router is set to a static IP address, fix the IP address of the DVR manually and pay attention to the DNS Address can not be empty
- (3). If it is not the problem of DVR offline, please check your mobile phone network is Normal or not.

3.What should I do if it prompts the device has already been added at my first adding? Or what should I do if I forget the APP's account and password?

For security reasons, a device can only be added by one account. If it prompts that the device has already been added at your first adding, or if you forget the app's ID and password, you can follow the path "Configuration-Network -Platform Access" and find the Unbind button. If the device has already been added, the button will be highlighted. Click to unbind from the account and then you can re-add the device or re-register an account to add the device again.

4. What should I do when DVR shows no picture in single or multiple camera channels?

Please make sure DVR, power supplies, cables, cameras and any part or parts is damaged or not may result in DVR shows no picture.

Please use the replacement method to check which part is the cause of the problem:

- (1). Please check all parts of the connection, whether it is loose or poor contact caused by no picture;
- (2). Please replace the camera to see if the picture can be displayed;
- (3). Please replace the cable to see if the picture can be displayed;
- (4). Please replace the power to see if the picture can be displayed;
- (5). Please replace the DVR channel to see if the picture can be displayed

5. What should I do if the interface of the DVR monitor can not be operated?

The default resolution of the DVR output to the monitor is 1024 * 768, and it can also be adjusted to 1920 * 1080 resolution. If the resolution of the monitor is too low or is not a standard monitor, the interface may not be displayed properly.

- (1). Adjust the display screen ratio to see if it is normal after adjustment, and check the maximum resolution of the monitor;
- (2). If the monitor supports adjusting the margins, you can move the picture down until you can control the main menu, then you can enter the **"Main menu" > "Configuration" > "General" > "VGA/HDMI Resolution"** change to the appropriate resolution and save the setting;
- (3). Connect the DVR and your computer to the same router, download and follow the IP search tool to login to the device by IP address and go to **"Configuration">"System settings" > "Menu Output" > "VGA / HDMI Resolution"** to change to the appropriate resolution and save the setting.

For more FAQs, there are two ways:

1. Mobile Devices: Annke Vision app—More—FAQ, click "ANNKE", find the DVR category and select "DT81DP" to view the details.
2. Laptops or Desktops: Go to <http://www.annke.com/kb/>, find the DVR category on the left column and select "DT81DP" to view the details.




support@annke.com

Kuranleitung des difitalen Videorecorder

Vorstellung von der Oberfläche

Die Rückseite ist unterschiedlich, je nachdem welches Modell Sie haben. Bitte achten Sie auf das tatsächlichen Produkt. Das folgende Bild ist nur für Referenz gültig.

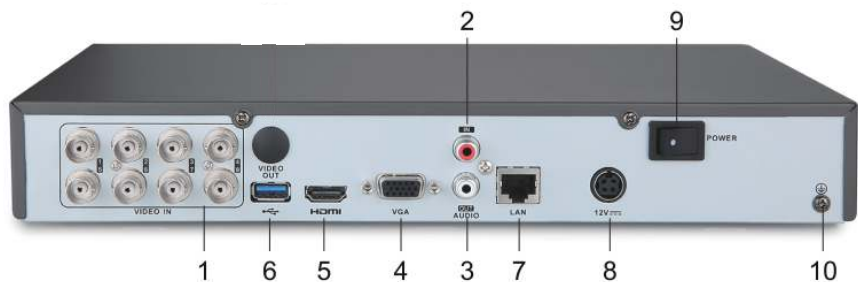

DT81DP

Beschreibung von Rückseite:

Nr.	Artikel	Beschreibung
1	VIDEO Eingang	BNC für TVI und Analog-Video Eingang.
2	AUDIO Eingang	RCA Stecker
3	AUDIO Ausgang	RCA Stecker
4	VGA	DB15 Stecker für VGA-Ausgang. Lokales Video und Menü anzeigen.
5	HDMI	HDMI Stecker für Video-Ausgang.
6	USB Anschluss	USB für externe Geräte.
7	Netzwerk-Anschluss	Stecker für Netzwerk
8	Netzteil	12V DC Netzteil.
9	Power Switch	Schalter zum Ein- / Ausschalten des Geräts.
10	GND	Boden

Zugriff per Handy

Bevor Sie die Fernbedienung benutzen, stellen Sie bitte sicher, dass der P2P-Status **"Online"** anzeigt. Das bedeutet, dass Sie guten Netzwerkempfang haben und Sie das Video normal auf Ihrem Handy und PC abspielen können.

1.Öffnen Sie die App **"ANNKE Vision"** aus Google Play oder dem Apple Store und klicken Sie auf **"Registrieren"**, um ein Konto mit Ihrer Handy-Nummer oder Ihrer E-Mail-Adresse einzurichten. Klicken Sie bitte auf "Anmelden", nachdem Sie die Registrierung erfolgreich abgeschlossen haben.

Hinweis: Bitte wählen Sie das richtige Land / Region aus, wenn Sie ein Konto registrieren, da dies nicht später nicht mehr geändert werden kann.

×

User Name/Email Address

Password

Register

Forgot Password

Login

Login by Mobile Phone Number

←

Register

Register by Mobile Phone Number

Register by Email Address

×

Country/Region

✓

Select your country or region. It cannot be changed once selected.

Turks and Caicos Islands

Uganda

Ukraine

United Arab Emirates

United Kingdom

Uruguay

USA

Uzbekistan

Vanuatu

Venezuela

Vietnam

Virgin Islands, British

Virgin Islands, U.S.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

Q

R

S

T

U

V

Y

Z

×

annke008@gmail.com

••••••••

Register




Forgot Password

Login





Login by Mobile Phone Number

- 38 -

2. Wählen Sie "  " oder klicken Sie auf das Symbol "  " in der oberen rechten Ecke, um ein Gerät hinzuzufügen. Sie können auch den QR-Code an der Unterseite des Geräts scannen, um es hinzuzufügen, oder auf die Schnittstelle "Menü" → "Konfiguration" → "Netzwerk" gehen, um den QR-Code zu erhalten.

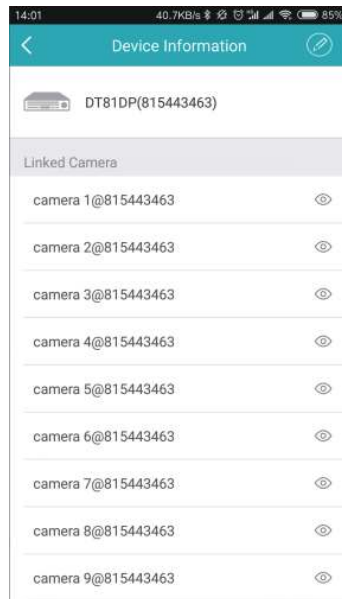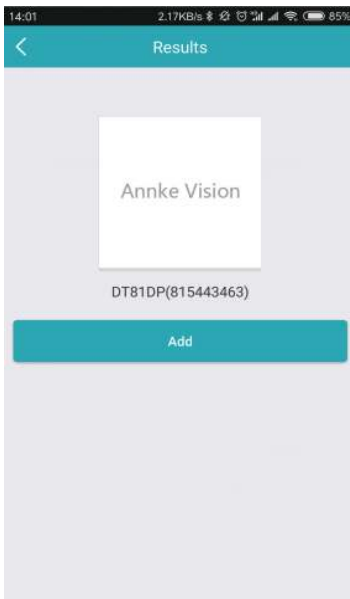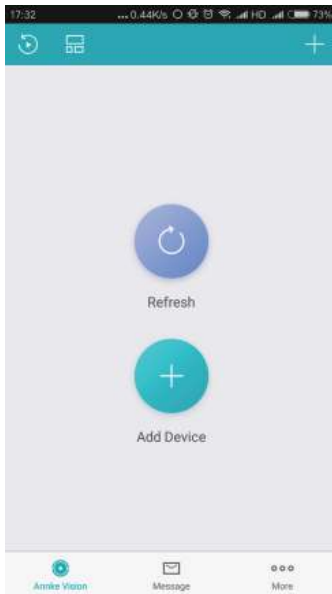

3. Wählen Sie das Gerät aus, um eine Echtzeit-Vorschau zu erhalten. Klicken Sie auf das Symbol "⋮" in der oberen rechten Ecke, um in die Schnittstelle für die Funktionen zu gelangen. Sie können die Wiedergabe starten, Einstellungen und andere Funktionen ändern. Klicken Sie auf "Mehr", um weitere Informationen zu erhalten.

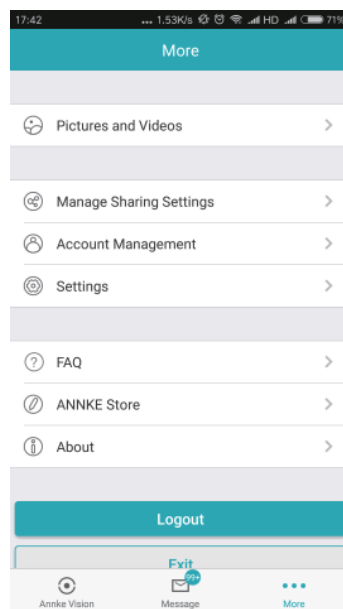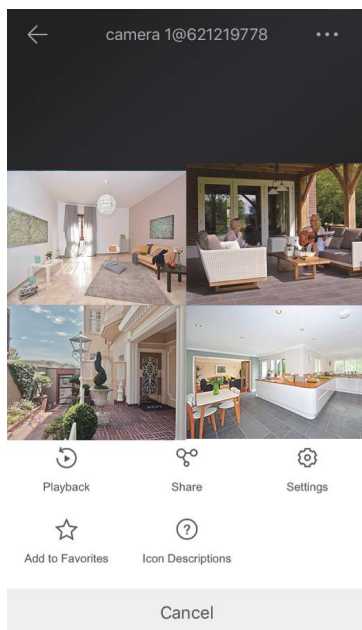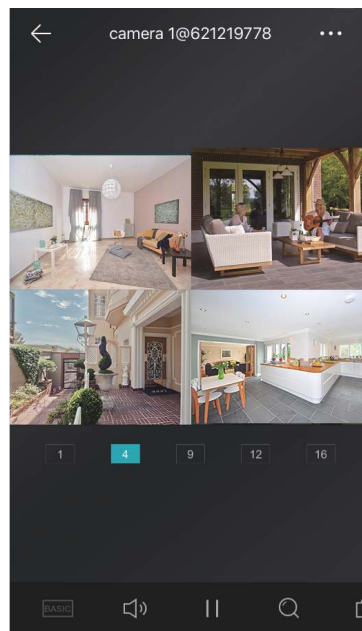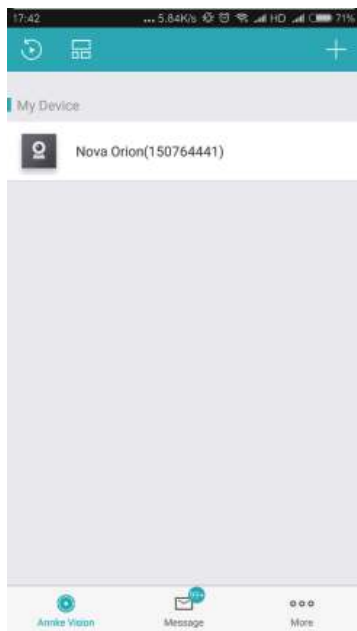

HINWEIS: Zu Ihrer Sicherheit kann eine SN nur mit einem Konto hinzugefügt werden. Ein Konto kann jedoch auf mehreren Mobiltelefonen verwendet werden.

Für weitere fragen, gibt es zwei möglichkeiten:

1.mobile geräte: annke vision app mehr faq, klicken sie auf "annke", findet der dvr - kategorie und wählen sie "DT81DP" um die details.

2.laptops und desktops: gehen sie zu <http://www.annke.com/kb/>, finden die dvr - kategorie in der linken spalte und wählen sie "DT81DP" um die details.



support@annke.com

Manufacturer: Shenzhen Kean Digital co., Ltd.
Address: Rujun Building, Floor 4, No.105, the Center Road,
Bantian Street, Longgang Zone, Shenzhen, China
Tech Support: support@annke.com

HDMI™ **CE** **FC** 
HIGH-DEFINITION MULTIMEDIA INTERFACE
MADE IN CHINA