

D_Core

DC-010A

User's Manual

Thank you for purchasing D_Core.

This product has a variety of massage functions, which can be used to relieve fatigue and improve body function.

We hope to always be a good partner in your daily health management.

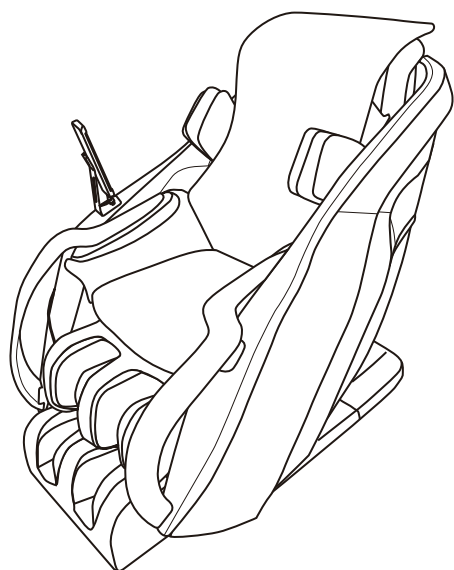


Table of Contents



■ Safety Precautions.....	1
■ Part Names and Functions..	8
■ Before Use.....	10
■ Adjustment of the Massage Chair.	15
■ Method of Operation.....	17
■ Auto Programs.....	18
■ Manual Programs.....	20
■ Troubleshooting	22
■ Safety Check	23
■ FAQ.....	24
■ Care and Storage	25
■ After Sales Service	26
■ Specification	27
■ Dealer	Back cover

- ©Please read this manual before using this machine in order to use it correctly.
- ©Please store this manual in a convenient place for users to find, in case of need.
- ©This machine is only for domestic use. If it is used for non-domestic purposes (such as commercial use), please consult the store or dealer where you purchased it.





Safety Precautions

Please read the safety precautions carefully before using this machine in order to use it correctly. To ensure that you use the machine correctly and safely, so as to avoid causing personal injury or property damage to you and others, please read this article after fully understanding the following contents (illustrations, marks) and make sure that you strictly abide by them. In addition, please refer to pages 8-9 for the names of each part.

Types of illustrations








 Warning	The risk of death or serious injury may arise from wrong operation.
 Caution	Mis operation may cause injury or property loss.

Types and Contents of Marks

	 Indicates prohibited behavior. (The left icon indicates no disassembly)
	 Indicates the directive of the mandatory behavior. (The left icon shows pulling the power plug out of the socket)



After reading, please store this manual in a convenient place for users to find, in case of need.

Cautions in Places of Use

 Caution	<ul style="list-style-type: none"> Do not use in places with heavy moisture such as bathrooms or saunas. → Otherwise, it may lead to electric shock or malfunction.
 Enforcement	<ul style="list-style-type: none"> Place this machine on flat ground for use. → Otherwise, it may cause the massage chair to topple and cause an accident.
 Circuit grounding	<ul style="list-style-type: none"> This machine must be grounded. If it breaks down or is damaged, the risk of electric shock can be reduced. This machine is provided with a grounding wire within the power cord, which can be grounded by plugging in the power plug. The power plug must be inserted into a socket that is properly installed and grounded in accordance with local laws and regulations. If you have any questions about whether the machine is grounded correctly, you can ask a professional to check. The grounding plug of this product is shown in the right figure. If it doesn't match the socket in your home, you need to connect an adapter sold on the market. <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">  <p>Grounded socket</p> <p>Ground pin</p> <p>Ground pin</p> </div> <div style="text-align: center;">  <p>Grounded socket</p> <p>Ground pin</p> <p>Ground pin</p> </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="text-align: center;">  <p>Grounded socket</p> </div> <div style="text-align: center;">  <p>Grounded socket</p> </div> </div>

Cautions Before Use

 **Warning**

<p> Caution</p>	<ul style="list-style-type: none"> ● The following persons must not use this machine. <ul style="list-style-type: none"> ◎Persons forbidden to receive a massage by doctors, such as those suffering from thrombosis (embolism), severe aneurysm, acute venous aneurysm, various skin inflammations and skin infections (including inflammation of subcutaneous tissue). ● Do not use a power supply other than AC 120V. <ul style="list-style-type: none"> → Otherwise, it may lead to fire or electric shock. ● Do not use transformers. <ul style="list-style-type: none"> → Otherwise, it may lead to malfunction or electric shock. ● Do not use this machine when the power cord or plug is damaged or the socket is loose. <ul style="list-style-type: none"> → Otherwise, it may lead to electric shock, short circuit and fire.
<p> Enforcement</p>	<ul style="list-style-type: none"> ● The following persons should consult a doctor before using. <ul style="list-style-type: none"> ◎Cardiac patients ◎Persons with perceptual impairment caused by severe peripheral vessels circulation disorders such as diabetes ◎Persons suffering from osteoporosis, cervical fracture, acute pain ◎Persons with trauma in a treatment area ◎Persons with a body temperature above 38°C (high fever period) for example: severe period of acute inflammatory symptoms (tiredness, chills, unstable blood pressure, etc.). When the body is weak. ◎Persons in the beginning of early pregnancy or shortly after delivery ◎Persons who are using implantable medical devices susceptible to electromagnetic interference such as cardiac pacemakers ◎Persons with an abnormal spine or curved spine ◎Persons who want to use it on areas that have been treated by a doctor or where the ailment is now being treated ◎Malignant Tumor Patients◎Persons requiring quiet recuperation ◎ Patients with acute diseases including visceral diseases (gastritis, enteritis and hepatitis) ◎Persons undergoing medical treatment, especially those who feel abnormal ◎Persons with joint deformations caused by rheumatism, gout, etc. ◎Persons with symptoms of dizziness, unstable standing, tinnitus ◎Persons with inflammatory reaction due to contusion, muscle strain, etc. ◎Persons with tenosynovitis or may have tenosynovitis ◎Persons considered to have temperature loss disease ● Before massage, it is necessary to confirm whether there is cracking or damage in the fabric at the massage site. Please check other parts to make sure the fabric is not damaged. If any damage is found on the fabrics, regardless of the size of the damaged area, please unplug the power and contact the dealer whom you purchased it from. Please do not remove the fabric from the massage area or use it when the fabric is damaged, otherwise there will be serious safety hazards. <ul style="list-style-type: none"> → If the machine is used when the fabric is damaged, it may cause injury or electric shock. ● Elderly or fragile people should consult a doctor before using it, even if there is no specific disease. ● Consult a doctor or specialist if it is ineffective after use. ● Do not let children and pets use or play with this machine.

Cautions Before Use

Cautions Before Use

Caution



Prohibited

- Do not use this machine in a way not described in this manual. In addition, do not use this machine with other equipment or cover with an electric blanket.
 - Otherwise, it may have a bad influence on the body or cause injury.
- Do not move the massage chair in a manned state.
 - Otherwise, the massage chair toppling may result in an accident or injury.
- Do not sit on the chair's when it is reclined.
 - Otherwise, it may cause excessive pressure on the leg components, causing malfunction. In addition, the massage chair toppling may result in an accident or injury.
- Do not use other items or accessories other than those that were included with the machine.



Enforcement

- Before plugging the power plug into the socket, make sure that the main power switch is in the "OFF" state.
 - Otherwise, it may lead to malfunction or electric shock.
- Please fully insert the power plug and connector.
 - Otherwise, it may lead to electric shock, short circuit and fire.
- Before use, please follow this manual, turn on all switches in turn, and verify the normal operation of the machine.
- At the beginning, please start with a mild massage program.
 - Excessive massage stimulation at the beginning may cause injury. Especially for people who are old or fragile, please pay attention when you massage.
- For the sake of safety, please confirm the position of the massage mechanism. If the device is not in the storage position, please switch on the main power switch and sit down slowly after confirming that it has been stored. Please refer to page 7 for the storage position.
- Do not squat, stand or sit on legrest.
 - The massage chair toppling may result in an accident, injury or malfunction.
- If the machine has not been used for a long time, please re-read this manual to confirm that the machine can be operated normally before use.

Cautions Before Use



Warning



Prohibited

- Do not wrap the power cord around the massage chair or step on the body and leg components. In addition, do not damage, process, over-bend, stretch or twist the power cord.
→ Otherwise, it may lead to wire damage, fire or electric shock.
- Do not sprinkle water or other liquids on the massage chair.
→ Otherwise, it may lead to electric shock, short circuit and fire.
- Do not sit in the massage chair with water on your body, or operate with wet hands.
→ Otherwise, it may lead to electric shock or malfunction.
- Do not allow the massage chair to be used by children, people who are unable to express their will or the disabled. In addition, do not allow children or pets to play on or around the massage chair (behind the back of the chair, below the leg components, etc.), or squat and sit on the massage chair.
→ Otherwise, it may lead to an accident or injury.
- Do not use the massage chair with more than 1 person in it, including when holding a child (baby, etc.).
→ Otherwise, it may lead to an accident or injury.
- When the fabric is damaged, please stop using it and remove the power plug from the socket.
→ Otherwise, it may lead to an accident, injury, or electric shock. For repairs, please contact the dealer.
- Do not touch the LED part directly when the light is on or just after it is off.
→ Otherwise, it may lead to electric shock or malfunction.



Enforcement

- Make sure no one (especially children) or pets are around before starting massage, when standing up, or when lowering the back of the chair. In addition, please be careful not to let the body or items clamp behind the back of the chair or under the legrest.
→ Otherwise, it may lead to an accident or injury.
- If your body or items are clamped, please press the back adjustment button to return the back of the chair to a safe position.
- Do not cover or touch the LED part with flammable articles such as cloth, paper, plastic, etc.
- Do not insert metal items (ex. hairpin, pin) into the gaps of the machine (especially the LED part and the power cord).
→ Otherwise, it may lead to electric shock, short circuit or fire.

Safety Precautions

Cautions When Using

Caution



Prohibited


- Do not use the massage chair directly with bare skin.
- Do not use the massage chair for purposes other than massage and for sitting.
 - Otherwise, it may lead to an accident or injury.
- Do not put your hands in the movable parts such as the upper and lower parts of the massage wheel in the back of the chair. In addition, do not wear hard objects such as belts when using.
 - Otherwise, it may lead to injury or malfunction.
- Do not use on head, chest, abdomen, joints (elbows, knees, etc.).
 - Otherwise, it may cause physical discomfort or injury.
- Do not run the massage chair unattended.
 - Otherwise, it may lead to an accident or injury.
- The legrest can only be used on the legs.
 - Otherwise, it may lead to injury.
- When massaging the legs, if legs are removed, do not force the legs back into the legrest when a massage is in progress.
 - If forced into, it may lead to malfunction.
- The armrests can only be used on the forearms and wrists.
 - Otherwise, it may lead to injury.
- When massaging the forearms, if arms are removed, do not force the arm back into the armrests when a massage is in progress.
 - If forced into, it may lead to malfunction.
- Do not look directly into the LED component.
 - Otherwise, it may lead to injury.




Enforcement


- In case of an emergency or abnormal operation of the massage chair, please press the [EMERGENCY STOP] button of the remote control to stop the massage.
- If you feel severe pain or physical abnormality during use, please stop using immediately and consult your doctor.
- If you feel that massage is too strong, please reduce the stimulation according to this manual. If the stimulation is too strong after adjustment, please stop using it and contact the dealer (recorded at the bottom of the cover).
 - If you feel that the massage is too strong but continue to use, it may lead to injury.
- Avoid falling asleep during massage.
 - Otherwise, it may lead to injury.
- Total massage time should not exceed 60 minutes per day. Massages should be taken in intervals of 90 minutes or less, with significant breaks between sessions. Do not massage any one area continuously for more than 5 minutes at a time.
 - Prolonged and continuous use may cause excessive stimulation, resulting in adverse effects or injury.
- Make sure there are no people (especially children) and pets around before use.
 - Otherwise, it may lead to an accident or injury.
- Do not remove the back cushion during massage.




Cautions When Using

 **Caution**

 Unplug the power plug	<ul style="list-style-type: none"> ● When power failure or possible power failure occurs, please stop using it immediately, turn off the power switch and unplug the power plug from the socket. → Otherwise, the restoration of the power supply may lead to an accident or injury. ● During thunderstorms, please stop using it immediately, turn off the power switch, and unplug the power plug from the socket. ● When the massage chair does not work or is acting abnormally, in order to prevent accidents, please stop using immediately, turn off the power switch, unplug the power plug from the socket, and contact the dealer for repair. → Otherwise, it may lead to electric shock, leakage or short circuit, thus causing fire.
---	---

Cautions After Use and When Not in Use



 **Caution**

 Prohibited	<ul style="list-style-type: none"> ● Do not use the power cord on equipment other than this machine. ● After using this machine, the back of the chair must be completely upright. ● Do not place items on the massage chair. ● Do not replace the LED.
 Enforcement	<ul style="list-style-type: none"> ● After use, please turn off the power switch and pull the plug out of the socket. → Otherwise, it may lead to an accident or injury caused by children or pets playing with it. ● After use, please clean and place it in a dry place.
 Unplug the power plug	<ul style="list-style-type: none"> ● When unplugging the power plug from the socket, do not pull the power cord directly. Instead, hold the power plug and pull it out. → Otherwise, it may lead to electric shock or short circuit, thus causing fire. ● Always unplug the power plug from the socket before cleaning and maintenance, and do not unplug the power plug with wet hands. ● Always unplug the power plug from the socket when not in use. → Dust or moisture may lead to aging of wire insulation, resulting in electric shock, leakage or fire.


Safety Precautions

Other Cautions

Warning

 Prohibited	<ul style="list-style-type: none">● Do not stand on the massage chair. Do not put excess pressure on the massage chair, such as sitting anywhere other than the seat. → The massage chair toppling may result in an accident, injury or malfunction.
 No dismantling	<ul style="list-style-type: none">● If the massage chair breaks down, please contact the store or dealer (recorded at the bottom of the cover). Do not repair it by yourself.● When the power cord is damaged, please entrust the dealer (recorded at the bottom of the cover) to replace it, so as to avoid the occurrence of danger.● Do not modify the massage chair. → Otherwise, it may cause fire, electric shock or injury.

Caution


 Enforcement	<ul style="list-style-type: none">● If the massage chair is transferred or lent to others, please be sure to give this manual together with the massage chair to the other party.
--	---

Caution

- When discarding this product and accessories, please consult the nearest municipal office for the correct the method to dispose of it.


Part Names and Functions

※The illustration is a schematic. Different models will have different shapes.

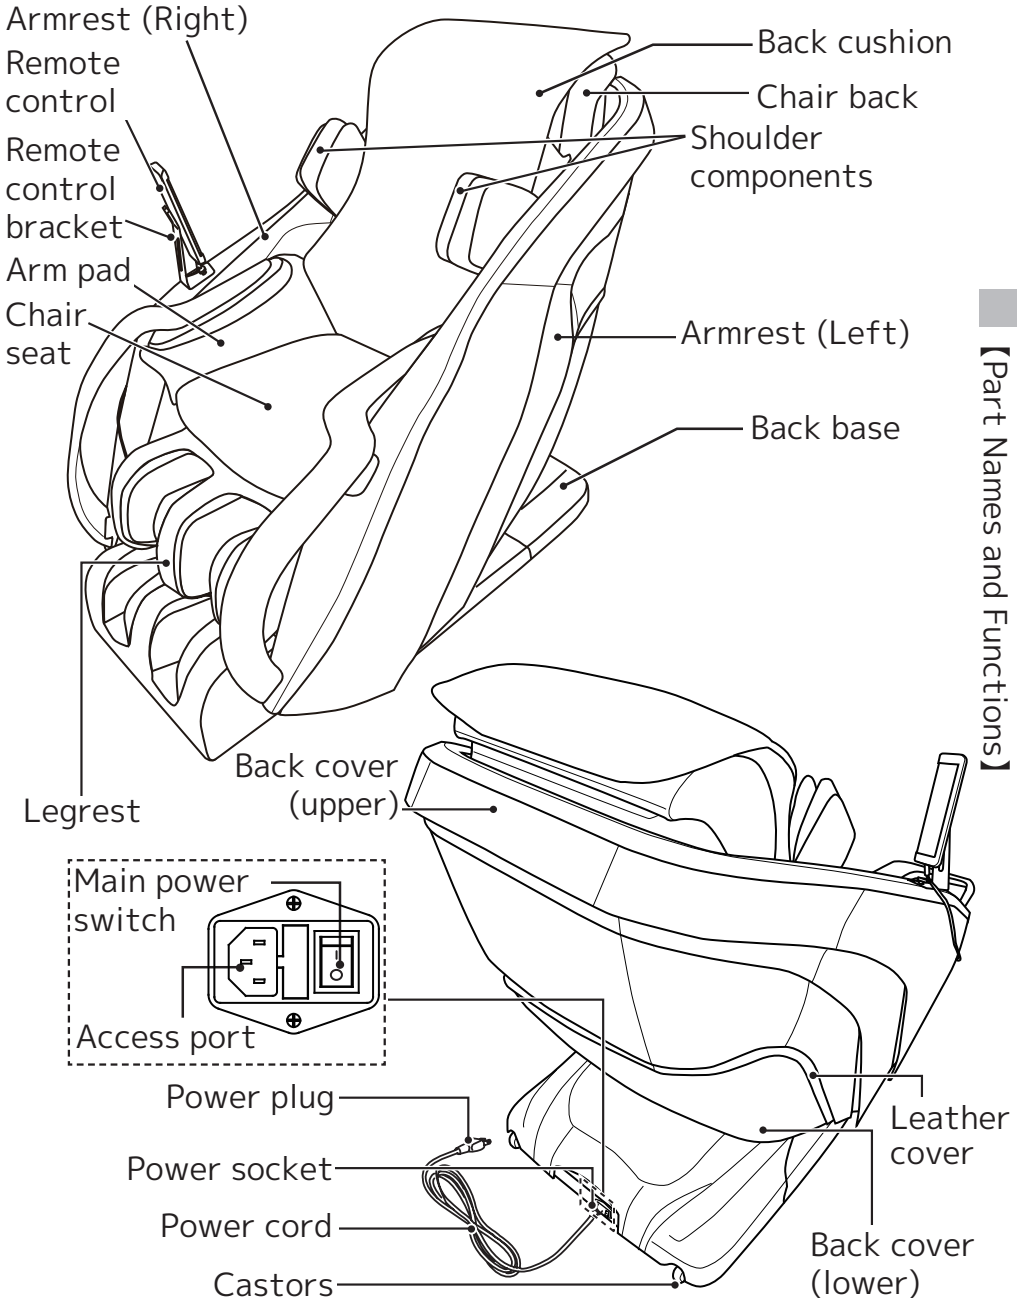

Part Names and Functions

【Part Names and Functions】

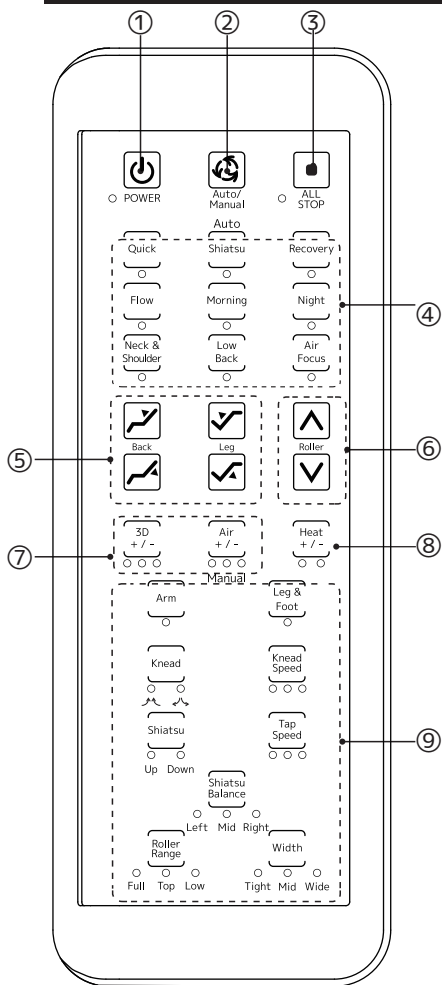

①	Power button	Turns on or off the power supply of the remote control. The blue light is always on when the remote control is powered on. If this button is pressed during the operation of the massage chair, the massage will stop after the massage wheel returns to the storage position.
②	Auto/Manual Mode selection button	Automatic programs and Manual programs can be changed. Auto programs can be selected when the remote control is powered on, and the indicator light is off. Manual programs can be selected with the indicator light is on.
③	EMERGENCY STOP button	Press this button in case of an emergency or if there is a malfunction with the massage chair. The massage chair will stop immediately.
④	Auto program buttons	Press each button to select/start the program.
⑤	Back/Leg Recline buttons	Used to adjust the tilt angle of the back and/or legs.
⑥	Roller position adjustment button	Used to adjust the shoulder position when detecting acupressure points, as well as to adjust the position of the massage wheel when using a Manual program.
⑦	Massage Intensity adjustment buttons	3D adjusts the strength of the back massage device. Air adjusts the strength of the armrest and legrest.
⑧	Heat (not on all models)	Press to turn the heat on/off and to adjust the temperature.
⑨	Manual program buttons	Basic operations and special operations can be selected.

Warning

- Do not spill water on the remote control.
- Do not operate with wet hands.

Caution


- Do not sit on, throw, or step on the remote control, and do not forcibly pull the remote control cable.
- Do not press the button with sharp or hard objects.
→ Otherwise, it may lead to damage.

Before Use


- This product is packaged in the condition so that the back of chair is completely flat. Before use, be sure to fix the chair back along with the armrest.
- When the room temperature is low, if you want to increase the indoor temperature and use the massage chair, please gradually increase the temperature, and do not heat up too quickly. Please wait for 1 hour before starting to use this machine when moving from cold storage to a warm room.
 - Otherwise, condensation may occur at the operating position and the performance cannot be fully realized.

About the placement of the chair

Please ensure that there is more than 20 cm(7.87 inch) of space left behind the massage chair and more than 70 cm(27.55 inch) of space left in front of the massage chair, so as to avoid touching the wall or other items when the back of the chair is tilted.







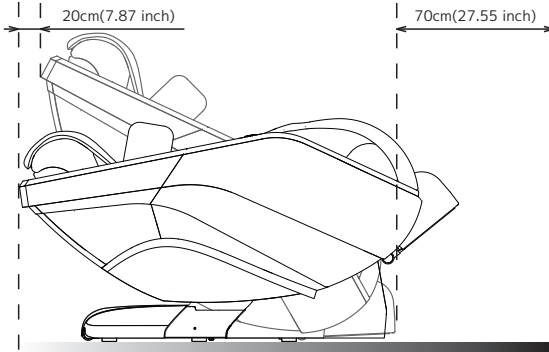


 Caution	<ul style="list-style-type: none"> ● Do not use in places with heavy moisture such as bathrooms or saunas. ● Do not place the massage chair base against the power cord. ● Do not place the machine in direct sunlight or near the places of high temperature such as heating appliances. ● Do not let open fires such as cigarettes or ashtrays near the massage chair. ● Do not use in places directly facing air conditioning.
--	--

- To prevent damage to the floor and to reduce running noise, please lay carpets under the massage chair. (Do not lay on electric blankets.)
- Because the massage chair is heavy, please pay attention not to damage the floor when it is put on the ground.
- Please place the massage chair 1 m away from any audio-visual electronic equipment such as TV's or radios. Otherwise, noise may be produced.
- If a person weighing 100 kg(220 lbs) is sitting in the massage chair, the weight is about 3.9 kg per cm²(55.5 lbs per in²).

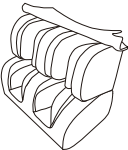

Confirm the items in the packing box


Please make sure that the body, legrest, armrest (left/right) and accessories are contained in the packing box.

Body	legrest	Armrests	Accessories			
					Assembly screws, Tool (4 Screws A, 2 Screws B, 2 Bush, 4 Screws C, 1 L-shaped wrench)	
						
			Remote control bracket	Back cover (upper)	2 Cushions	Back cover (lower)

Before Use

Placement method and assembly method

The legrest and armrest (left/right) are respectively packaged in the packing box. Please assemble them before use when they are placed for the first time. In addition, please follow the opposite steps to disassemble and reposition the machine and then reassemble it for use.




Caution

- When placing and assembling, please take full care to avoid pinching hands or articles.
- Do not place the massage chair base on top of the power cord.

- ① Turn up the seat, insert the bush into the leg rest, and hook the leg rest on the body in the direction of the arrow in the figure.


※ Be careful not to pinch your fingers when hooking.

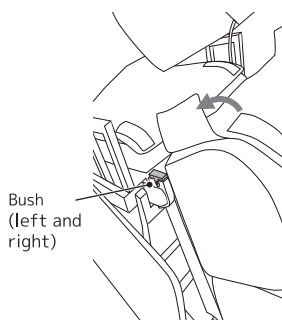

Bush
(left and right)


- ② Secure the bush with screws A.

※ Screws A is small washer screw, please note do not use screws C.

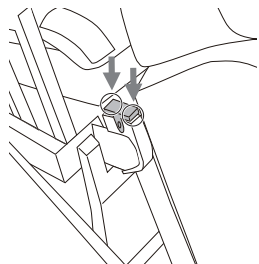


- ③ Connect the airlines (same colors together) and electric cables from legrest to base of the chair.

Then attach the Velcro to the gray part of the figure.

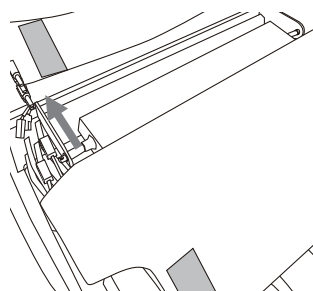

- ④ Align the back of the armrest (part □ in the picture) with the bolt on the back of the massage chair, and place the center of the armrest (part ○ in the picture) on the frame of the massage chair seat.

※ Be careful not to pinch the airlines or electrical cables.

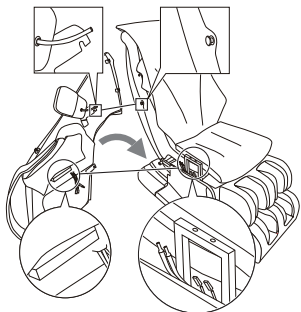


- ⑤ Use screws B to fix the armrest and the massage chair in the order of A-C.

※ The shoulders are packed in a laid state. Please pull it apart.

※ Use screw B for A, and screw C for B and C.

※ Screws C is big washer screw, please note do not use screws A.

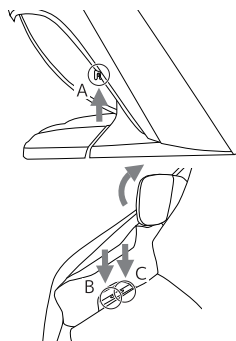


- ⑥ Connect the airlines and the electric cable (connect the same colors together).

※ The number of hoses and cables varies with the model of chair.




⑦ Fasten the zippers of the arm pad and the chair seat.

※ Put the air hose and cable connected in step⑥ inside the arm pad.

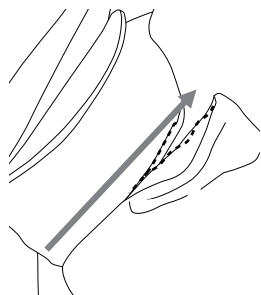

⑧ Follow steps ④~⑦ to connect the arm on the opposite side.

⑨ Hang the back cover (upper) fixing belt onto the hook on the back of the left and right armrest and press it inward.

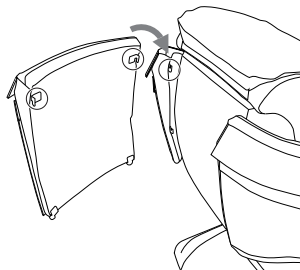

⑩ Hang the back cover onto the hook of the armrests and lock




※ Be careful not to pinch the leather cover, and make sure that the leather cover on the side of fixed belt on the back cover (lower) is inside the armrests.

⑪ You can choose to use a magnet to hold store remote control on the arm. If using the magnet, no assembly is necessary. If using the bracket, unscrew the magnet on top of the armrest (right), place the bracket on the armrest, then secure with the screw. Adjust the remote control bracket to your preferred angle before installation.

※ Be careful not to pinch the cable of the remote control.

※ To adjust the angle again, be sure to loosen the screw before adjustment.

⑫ Push the cable of the remote control through the round hole on the front side of the arm component (right) and press the snap button firmly.

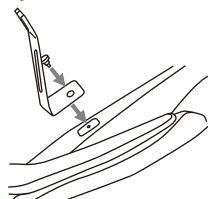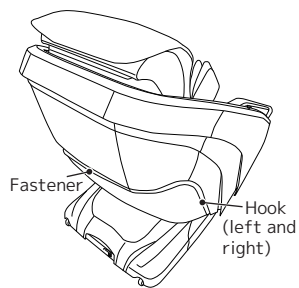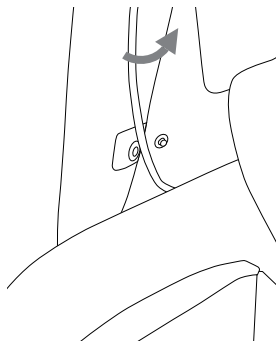


Before Use

How to Move Your Chair

Before moving your chair, always turn off the main power switch and remove the power plug from the electrical socket.

The massage chair has rolling casters on the rear side of the base. These allow for one person to move the massage chair for a short distance on their own. To move the chair using this method, carefully full reclining the chair back and legrest onto its rolling casters by lifting the armrest, then roll the chair to the desired position. Never lift the chair by the legrest or by holding on to the wooden parts.

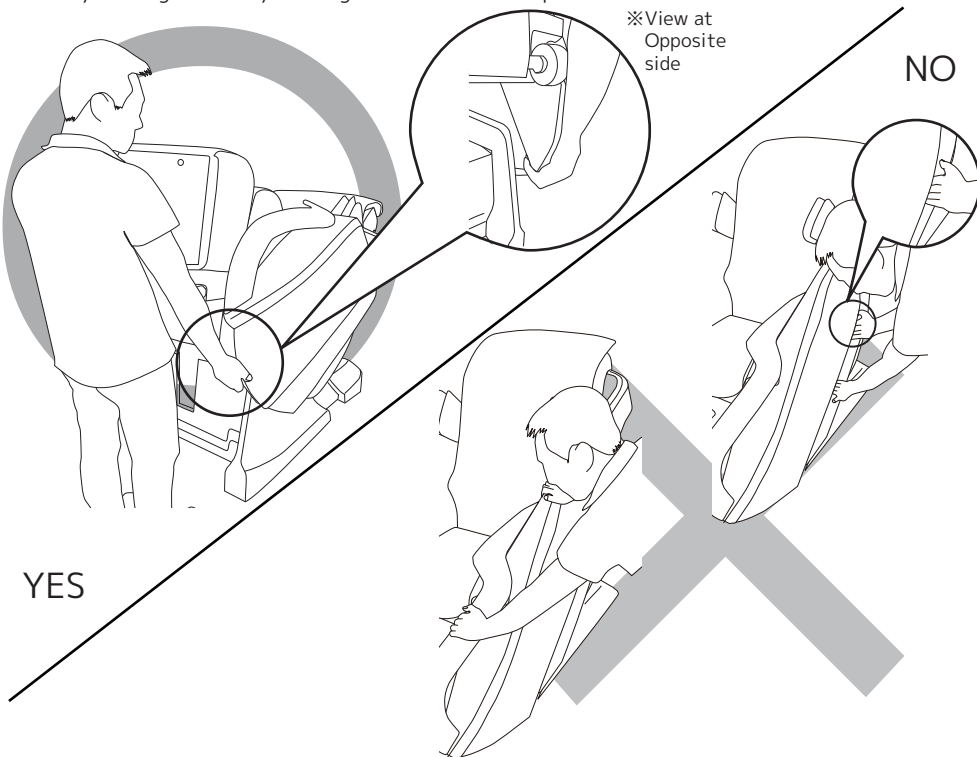

【Before Use】

If it is impossible to move by using the method shown above, please follow the assembly instructions as shown on page 11 and 12, to remove the armrest and legrest, and then move; if it still cannot be moved, please contact the dealer recorded at the back cover.

- Because the massage chair is heavy, please wear special gloves when moving it to avoid dropping or causing injury.
- Because the massage chair is heavy, please pay attention not to hurt one's back when moving.
- The remote control is connected to the massage chair, so please be careful not to drop it when moving.




Caution

- Please pay attention to avoid applying strong force to wooden parts.
- Do not move the massage chair with a person in it.
- Please pay sufficient attention to avoid clamping the foot and power cord when moving.
- Please take care to avoid damage to the floor by casters.

Confirmation of fabrics

Open the zipper on the top of the cushion and lower the back cushion forward, and confirm whether the cloth of the massage chair is damaged or not. In addition, please check other parts to make sure the fabric is not damaged.

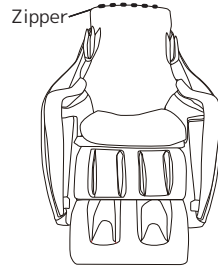


Warning

- Before massage, it is necessary to confirm whether there is cracking or damage in the fabric at the massage site. Please check other parts to make sure the fabric is not damaged. If you find any damage on the fabric, please unplug the power plug regardless of the size of the damaged part, and contact the dealer (recorded at the bottom of the cover). Never remove the fabric from the massage part or use it when the fabric is damaged, otherwise there will be serious safety hazards.

Method of powering on

- ① Insert the connection port of the power cord into the access port.
- ② Insert the power plug into the socket.
- ③ Turn on the main power switch behind the massage chair.

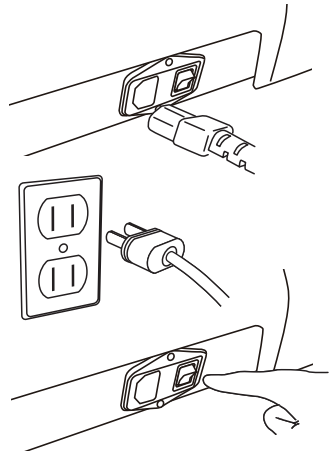

Warning

- Do not use transformers.
→ Otherwise, it may lead to malfunction or electric shock.
- Do not use outside the country where you purchased it.
→ Otherwise, it may lead to malfunction or electric shock.

Caution

- Before plugging the power plug into the socket, make sure that the main power switch is in the "OFF" state.
- Please fully insert the power plug.
- Before use, please follow this manual, turn on all switches in turn, and verify the normal operation of the machine.

Adjustment of the Massage Chair

Sitting method of the massage chair

In general, the massage mechanism is retracted in the storage position. For safety, please check the position of the massage device. If the massage device is located outside the above position, do not sit down immediately, but turn on the main power switch. After the massage device returns to the storage state, slowly sit in the center of the massage chair. (storage position is state of the chair back most risen and legrest most low.)

⚠ Caution


- Do not sit on a chair with its back reclined.
→ Otherwise, it may cause excessive pressure on the back and arm components of the chair, causing malfunction. In addition, the massage chair toppling may result in an accident or injury.
- At the beginning, please start with a mild massage program.

When sitting down or exiting the chair, do not use the wooden railings of the arm for support. This, it may cause malfunction. Please support yourself with the upholstered arm component when sitting down or exiting the chair.



Application method of the cushion

If the stimulation of the massage is too strong, please place the accessory cushion on the back cushion or the seat during the massage, you can choice 2 kind of cushions as you like.

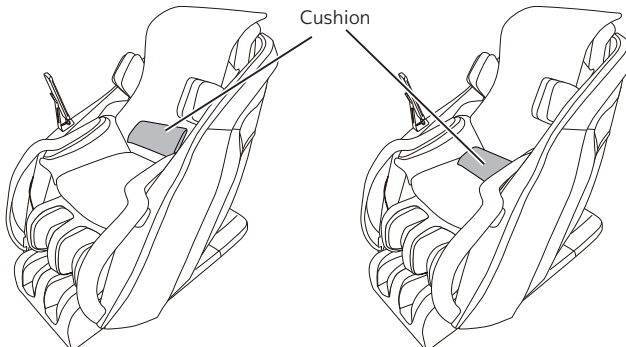

⚠ Caution


- Please make sure that the cushion is not curled or misaligned.
→ Otherwise, it may lead to malfunction or injury.

Application method of armrest


As shown in the figure below, the elbow is between the armrest and the back of the chair when placing the arm. In addition, please adjust the shoulder position to your preferred angle.

Please put your elbow between the armrest and the back.

Keep palms facedown.

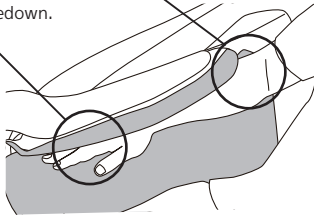

Please adjust the shoulder position to your preferred angle.

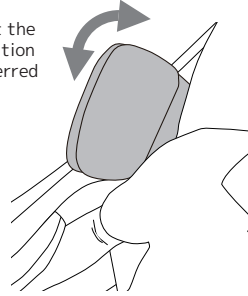

Caution

- Can only be used for the arm.
→ Otherwise, it may lead to injury.
- When massaging the arm, do not force the arm into it after it has been pulled out of the armrest.
→ If forced into, it may lead to malfunction.
- Do not massage your elbows. Keep your palms down while you are receiving a massage. Do not put your arm in any other direction.
→ Otherwise, it may lead to injury.

Adjusting Chair Tilt Angle

Press the back adjustment buttons to adjust the tilt angle of the chair's back. Press the leg adjustment buttons to adjust the tilt angle of the legrest.

■ Inclining the back of the chair

Incline the back of the chair by the pressing the Back Up button. At the same time the legrest will lower.

■ Raising the legrest

Raise the legrest by pressing the Leg Up button.



Back



Leg



■ Reclining the back of the chair

Lower the back of the chair by pressing the Back Down button. At the same time, the legrest will raise.

■ Lowering the legrest

Lower the legrest by pressing the button on the lower side of the foot.

Warning

- Before starting the massage and when reclining the back of the chair, make sure there are no people (especially children) and pets around. In addition, please be careful not to get your body or items clamped behind the back of the chair or under the legrest.

Method of Operation

Types and characteristics of programs

【Auto programs】

By setting the menu in advance, you can easily select the program that suits your purpose and use with one click.

Quick Program	~ 10 minutes	It is highly recommended for people with a limited massage time. It can relieve fatigue from the neck to the ankles in a short time.
Shiatsu Program	~ 30 minutes	A program to relieve the whole body with the unique functional core shiatsu method. By shiatsu, gently rubbing the acupoints inside the body.
Recovery Program	~ 15 minutes	A program to alleviate general fatigue. From the root of the neck to the ankle, gently rubbing the acupoints of the whole body without omission.
Flow Program	~ 15 minutes	Circulation promotion: a program that focuses on promoting blood circulation. Starting from the bottom of the body to the heart and by using the method of massaging muscles while promoting blood circulation to achieve the effect of promoting blood circulation.
Morning Program	~ 15 minutes	According to the centripetal method of promoting blood flow from the fingertips and toes back to the heart, massages along the venous flow. This program is recommended when you want to relax and revive your body.
Night Program	~ 15 minutes	According to the centrifugal method of promoting blood circulation from the heart to the tips of the body, massages along the artery flow. This program is recommended when you want to relax.
Neck & Shoulder Program	~ 10 minutes	Massage neck stem, neck, upper shoulders and shoulders. This program is recommended for neck and shoulder fatigue and for relaxing the neck and shoulders.
Low Back Program	~ 10 minutes	A program for centralized massaging of the low back and waist. This program is recommended when the lower back is tired and for relaxing around the lower back.
Air Focus Program	~ 10 minutes	A program for centralized massaging of the ends of the body, such as the fingertips and toes. Promote systemic blood circulation by stimulating the ends of the body.


【Manual programs】

Manual programs allow you to freely combine the functions you like such as Knead and Tap. Within these functions one can also adjust the speed, strength, up and down positioning, and other massage movements.

Auto Programs

Massage with Auto programs

- Equipped with nine programs that can relieve fatigue and improve physical function.
- To begin an auto program, simply press the button of the program desired.

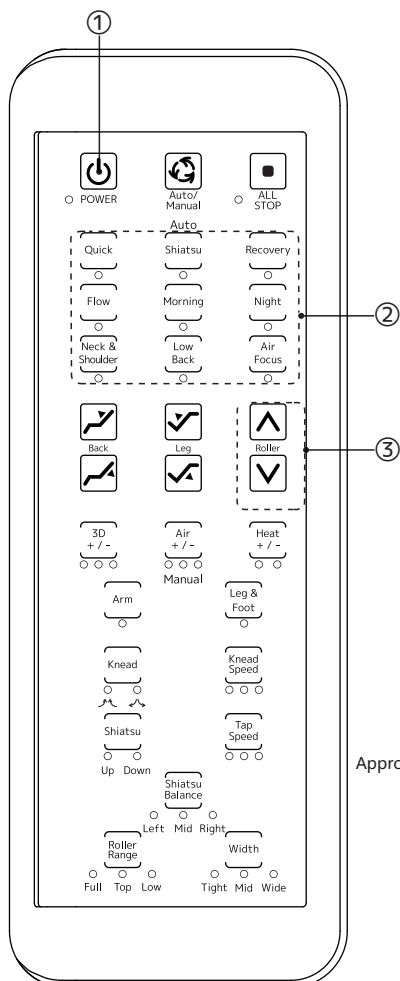

① Press the [Power] button.

If the chair has been inactive for 90 minutes, the remote power will automatically turn off.

② Press the desired [Auto program] button.

The chair will automatically recline and the acupoint search will begin (you will hear a slow beep at the end of this process).

【Notice】


Please sit fully in the chair and rest your head on the back of the pillow in a comfortable position. When the body is lifted, the acupoints cannot be correctly searched.

③ Shoulder position can be adjusted.

Once your shoulders have been detected you will hear a beeping noise. During this time, the shoulder position can be fine-tuned, if necessary, using the roller adjustment buttons. Upon completion of this process, the selected auto program will begin.

【Shoulder position adjustment】

If the shoulder position is inconsistent, adjust the shoulder position after the beeping.

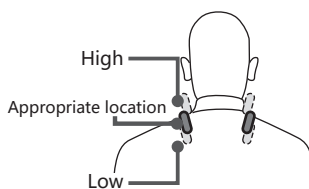

	By pressing it, the massage wheel continues upwards
	By pressing it, the massage wheel continues downwards

④ The program starts to run.

After searching for the acupoints, the buzzer will stop and the program will begin. The intensity of the massage device or air pressure can be adjusted during the operation of the program.

Massage Intensity Adjustment and Heater Temperature Adjustment and Cancel



It can adjust the intensity of the massage and the temperature of the heater. Each time the 3D button and Air Intensity buttons are pressed, they can be switched in the order of medium→strong→weak. (The default setting is weak when the program starts running.)

Each time the heating button is pressed, it can be switched in the order of weak→strong→off. (The default setting is off when the program starts running.)

⑤ The program ends.

The massage wheel returns to the storage position and switches to standby mode. Thereafter, you can select the mode you like.

- Please turn off the power of remote control after the massage.

Change program

It is not necessary to wait for the program to finish. It is feasible to switch to a different program while one is running. In addition, even if the massage program is running, if the running time exceeds 90 minutes, the massage will automatically end.

Auto program → Auto program

When the auto program is running, press the other auto program buttons, then the massage wheel will return to the detected shoulder position, and starts after reconfirming the shoulder position. Shoulder position can be fine tuned when reconfirming shoulder position.

Auto program → Manual program

When the auto program is running, press the mode selection button to interrupt the auto massage. You can then select the program you desire. Massage motion will begin immediately after the press of a button.

Halfway end program

To interrupt the program, press the [Power] button when running. The massage wheel will stop running after the massage mechanism has moved to its storage position.

In case of an emergency or abnormal operation of the massage chair, please press the button [ALL STOP], to stop the massage chair immediately. After confirming it is safe, press the [Power] button. The massage mechanism will move to its storage position and the chair will incline for your safe exit.


When selecting a program, automatic tilting may occur in the automatic program. In addition, automatic tilting may occur when the program is running. So before using, please make sure there are no people or obstacles behind the chair. Also, when using, please keep other people away from the massage chair when you are using it.

Caution

- If you feel that the massage is too stimulating, please reduce the stimulation according to this manual. If the stimulation is still too strong after the adjustment, please stop using it and contact the dealer (recorded at the bottom of the cover).
→ If you feel too stimulating but continue to use it, it may lead to injury.
- Do not put your hands and feet in the movable parts such as the upper and lower parts of the massage wheel, the back of the chair, etc.
In addition, do not wear hair accessories, necklaces, watches, bracelets, rings or other hard objects when using the chair.
- During a massage, if the legs are pulled out of the leg component, do not force the legs back in.
- Total massage time should not exceed 60 minutes per day. Massages should be taken in intervals of 90 minutes or less, with significant breaks between sessions. Do not massage any one area continuously for more than 5 minutes at a time.
→ Long-term continuous use may cause excessive stimulation, resulting in adverse effects or injuries.

Manual Programs

Operation and adjustment methods of each part

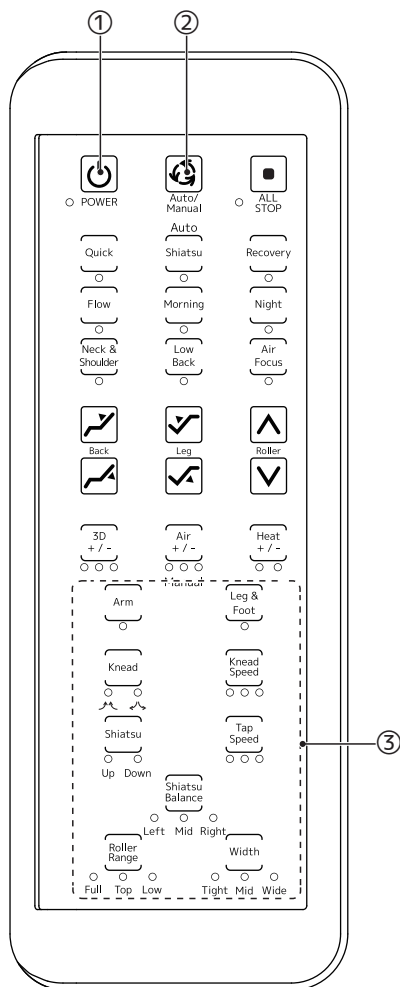

① Press the [Power] button.

If the chair has been inactive for 90 minutes, the remote power will automatically turn off.

② Press the mode selection button.

If you press the mode selection button, you can change from an auto program to a Manual program.

③ Press the desired Manual program button.

Please select the mode you like from the combination of basic actions, such as rolling, special action and air pressure massage.

④ Program starts to run.

During the massage, intensity can be adjusted and air massage can be stopped.

⑤ Program ends.

The massage wheel returns to the storage position and switches to standby mode. Thereafter, you can select the mode you like.

- Please turn off the power to the remote control after the massage.

Shoulder Position Adjustment



Roller
Up
Down

【When selecting an operation that the roller doesn't move】
Adjust the position of the massage wheel to the place where you want to massage.

- When the massage wheel reaches the top (bottom) limit, a beep warning will sound if user presses the roller up (down) button.



By pressing it, the massage wheel continues upwards



By pressing it, the massage wheel continues downwards

Width adjustment			
	The width of the massage wheels can be switched from tight → medium → wide. (The default setting is tight when the program starts running.)		
Speed adjustment			
		The speed of massage motions can be adjusted in 3 levels. (The default setting is slow speed when the program starts running.)	
Adjusting Shiatsu balance			
	During this program, the balance of the finger pressing can be switched in the order of left strengthening, left and right strengthening, or right strengthening. (The default setting is left and right with simultaneous strengthening at the beginning of the shiatsu.)		
Massage Intensity Adjustment and Heater Temperature Adjustment and Cancel			
			Press the 3D and/or Air Intensity buttons to adjust strength of the massage. They can be adjusted between Strong, Medium and Weak. The default setting is Weak. Press the Heat button to activate/deactivate heat. It can be adjusted between Low and High temperatures. The default setting is off.

Change program

It is not necessary to wait for the program to finish. It is feasible to switch to a different program while one is running. In addition, even if the massage program is running, if the running time exceeds 90 minutes, the massage will automatically end.

Manual program → Auto program

When the manual program is running, press the mode selection button to interrupt the manual massage. You can then select the program you desire. Massage motion will begin immediately after the press of a button.

Halfway end program


To interrupt the program, press the [Power] button when running. The massage wheel will stop running after the massage mechanism has moved to its storage position. In case of an emergency or abnormal operation of the massage chair, please press the button [ALL STOP], to stop the massage chair immediately. After confirming it is safe, press the [Power] button. The massage mechanism will move to its storage position and the chair will incline for your safe exit.

Caution

- If you feel that massage is too stimulating, please reduce the stimulation according to this manual. If the stimulation is still too strong after the adjustment, please stop using it and contact the dealer (recorded at the bottom of the cover).
→ If you feel too stimulated but continue to use it, it may lead to injury.
- Do not put your hands and feet in the movable parts such as the upper and lower parts of the massage wheel, the back of the chair, etc.
In addition, do not wear hair accessories, necklaces, watches, bracelets, rings and other hard objects when using.
- When massaging the legs, if legs are removed, do not force the legs back into the legrest when a massage is in progress.
- Total massage time should not exceed 60 minutes per day. Messages should be taken in intervals of 90 minutes or less, with significant breaks between sessions. Do not massage any one area continuously for more than 5 minutes at a time.
→ Long-term continuous use may cause excessive stimulation, resulting in adverse effects or injuries.

Troubleshooting

If any abnormalities remain after the following checks, please stop using immediately to prevent accidents. Unplug the chair, and contact the dealer.

State	Causes and remedies	
The massage wheel positions of the left and right massage devices are deviated.	<p>The use of alternating finger pressure structures and alternating thumping structures is an inevitable phenomenon in construction. This is not a malfunction.</p> 	The inevitable phenomenon in construction is not a malfunction.
The massage wheel stopped halfway while massaging.	When excessive force is applied to the massage wheel, it may stop running. Please keep your body slightly raised or gently incline the massage chair back before use. If too much weight is on the back, this is not a malfunction.	
Some basic work and special actions can not be started.	Please turn off the main power switch behind the massage chair. Turn on again after about 5 seconds.	If there is any abnormality after check, please stop using it immediately.
Inaccurate shoulder pressure acupoint detection. (The location of the massage wheel is not stopping at the top of my shoulder)	Please sit back completely in the chair and rest your head on the cushion. After detecting the acupressure, immediately press the shoulder adjustment button to adjust the shoulder position.	
After pressing the remote control button, it still can't work properly. Or you can't turn on the power.	<p>Please make the following checks.</p> <ol style="list-style-type: none"> ① Is the power plug fully plugged into the socket? ② Is the main power switch behind the massage chair turned on? ③ Do you press two buttons at the same time? 	
The power cord and plug are abnormally hot.	Stop using it immediately.	

- Do not allow non-service personnel to disassemble or repair it.
- Please contact the sales store or dealer (recorded at the bottom of the cover) .

Running sound

When running, the following running sounds will be emitted.

A sound accompanied by a thump	Grunting
Friction sound between massage wheel and cloth during kneading	Whizzing Squeaking
Sound of massage wheels lifting, kneading and finger pressing	Buzzing
The sound of air pressure massage	Rattling
Air pump sound	Pounding
Exhaust sound of airbag	Pinging
The sound of the chair back tilting up and down	Buzzing

※ The above-mentioned sounds will not affect the performance of the chair, and are considered normal.

Safety Inspection

It's important to periodically inspect your massage chair to ensure it's safe for use, especially after not using it for a long period of time.

Please inspect your chair to confirm the following is not observed:

- After pressing a button, the chair does not perform the desired movement.
- The power cord is cracked or damaged.
- The power cord and/or plug are abnormally hot.
- There is a burning smell coming from the chair.
- When the chair is running, it vibrates and makes abnormal sounds and/or vibrations.
- The timer cannot be automatically turned off.
- Other abnormalities or malfunctions occurred.

If you are experiencing any of the situations as described on the left, in order to avoid malfunction or accident, please stop using the chair, immediately unplug the power plug from the outlet, and contact your dealer (recorded at the bottom of the cover).

Warm tips

Caring test



FAQs

Q Can I place the massage chair on an electric carpet?

No, since the massage chair is heavy, it may damage the heating body of the electric blanket and cause fire. Therefore, do not place it on an electric heating carpet.

A

Q Can it be placed on the wooden floor or radiant heating floor?

Yes.

A however, it is recommended to place the massage chair on the carpet as it may damage the floor.

Q How do I enhance the intensity of the massage?

Please try the following:

- Sit back fully and put your weight completely on the back of the chair.
- Set the device strength to "strong" by using the [3D Intensity] button.
- Fully recline the backrest.

Q How do I reduce the intensity of the massage?

Please try the following:

- Set the device strength to "weak" by using the [3D Intensity] button.
 - Place the extra cushion on the back or seat.
 - Incline the backrest.
-

Q What should I do if I spill water carelessly?

It may lead to an electric shock. Please stop using it immediately and do the following.

- A**
- Turn off the power switch behind the massage chair.
 - Unplug the power plug from the socket.

After the above operations, please contact the sales store or dealer (recorded at the bottom of the cover).

Q Will the back of the chair automatically incline at the end of the program?

No, when the power is turned off, it will not reset automatically at the end of the program.

A But when the power is turned off or the overuse timer is activated, the back of the chair will automatically incline.

Q What is the recommended height limit?


A 150 cm - 193 cm.
(59 inch - 75 inch.)

Q What is the maximum user weight?

A 120 kg.(265 lbs.)

Care and Storage

Method of cleaning and maintenance




Caution

- Be sure to unplug the power plug from the socket before cleaning and maintenance. In addition, do not plug or unplug the power cord with wet hands.

【Cleaning and Maintenance of Upholstered Elements】

When stained, soak a soft cleaning cloth in warm water with a small amount of neutral detergent, wring it out, and then wipe.





Caution

- Contact with plastic and indoor wallpaper for a long time may cause discoloration.

【Cleaning and Maintenance of Plastic Parts】

Soak the soft cleaning cloth in warm water containing a small amount of neutral detergent. Wring it out and then wipe it. To avoid residual detergent, please wipe it with dry cloth again.

- Do not use alcohol, other solvents and polishing powder for cleaning and maintenance, otherwise it may lead to scratches, discoloration and cracks.

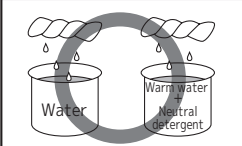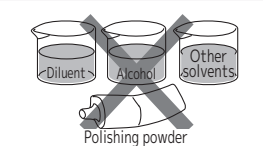Applicable items	Inapplicable items
	


【Cleaning and Maintenance of Wooden Panel, Wooden Railings and Remote Control】

Please wipe the dirt from the wooden panel, wooden railings and remote control with dry cloth.

- Do not wipe with a wet towel.
→ Otherwise, it may lead to malfunction.

Storage method

- After decontamination and dust removal, place it in a dry place.
- When not in use, cover with a dust-proof cover to avoid dust.
- In order to prevent pets from gnawing the power cord, please keep pets away from the machine during storage.



Caution

- Do not place the machine in direct sunlight or near areas of high temperature such as heating appliances.

After sales service

1. Warranty Card


Please be sure to ask for a warranty card from the sales store or dealer at the time of purchase and confirm that the purchase date, store name, and other items are completed.

Please read the warranty carefully and keep it properly. (Show it when repairing.) The warranty period is recorded on the warranty card. However, this product is specially designed for the country you purchased, so when used abroad, the warranty card will not be valid even during the warranty period. In addition, when it is used for other purposes than general household use, the relevant repair costs will be paid even during the warranty period.

2. When commissioning repairs

Before commissioning the repair, please read carefully the "Troubleshooting Guide" on page 22 in advance. If there are any abnormalities after the check, please contact the sales store to commission the following matters.

- 1) Name, address, telephone number
- 2) Name and model of the product...
Please refer to the specifications column on page 27 of this manual, or the company sign attached to the cover of the chair base.
- 3) Production No....
Please refer to the company sign attached to the cover of the chair base.
- 4) Date of purchase
- 5) Malfunction status
(Please inform as much as possible in detail.)

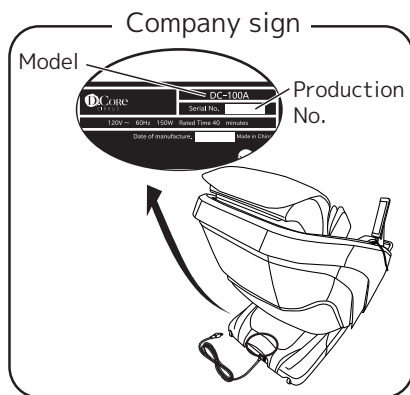

- During the warranty period
When repairing, please show your warranty card. Since repairs may be paid even during the warranty period, please read the warranty card carefully.
- Over the warranty period
Please contact the sales store where you purchase this product. If the performance of the product can be maintained through maintenance, it can be repaired according to customer needs.
- When you can't commission a sales store
Please contact the dealer (recorded at the bottom of the cover).
- Minimum Retention Period of Performance Parts for Maintenance
The company will retain the maintenance performance parts of the electric massager for at least 6 years after the end of production. (Except for sewing and wood products.)
Maintenance performance parts refer to the parts necessary to maintain the performance of the product.
- If you have any questions about after-sales service
Please consult the sales store or dealer (recorded at the bottom of the cover).
- Repair may be refused in countries other than the country where the product is purchased.

Specification

Model	DC-010A
Power supply	AC120V
Rated power	150W
Rated Frequency	60Hz
Rated time	90 minutes
Kneading speed	Minimum of 21 times / minute Maximum of 27 times / minute
Tapping speed	Minimum of 400 times / minute Maximum of 700 times / minute
Shiatsu speed	[Back] Maximum 33 times / minute [Arm] Maximum 36 times / minute [Foot] Maximum 34 times / minute
Up and down speed of massage wheel	3 cm/ second (1.2 inch/ second)
Massage range	90 cm (35.4 inch)
Massage wheel push-out range	7 cm (2.8 inch)
Air pressure	32kPa
Heater	Below 45°C
Auto programs	9 kinds
Manual programs	6 kinds
Program timer	10-30 minutes
Overuse timer	90 minutes (continuous operation)
Tilt angle	No grade (electric tilt) about 113-145°relative to the horizontal plane
Dimensions	Width 94 cm x Length 149 (184) cm x Height 126 (94) cm (Width 37 inch x Length 58.6 (72.4) inch x Height 49.6 (37) inch) The number in the bracket is the length and height of the maximum tilt angle
Weight	130 kg (286 lbs)
Outer fabric	Synthetic leather
Accessories	Power cord, remote control bracket, cushion pad
Packaging	2 packs / 1 set

Please visit www.dcoremassage.com for service contact information.

DC-010A Made in China

Manufactured by NIN Co., Ltd.
Postal Code: 108-0074,
No.2-15-11 Takanawa,
Minato-ku, Tokyo, Japan

Date of issue:September,17,2020

1128160000300