Installation Instruction V4.2

Unless individual product specifications deem otherwise: do not restrict fixture ventilation. Allow for some volume of airspace around fixture. Avoid covering LED fixtures with insulation, foam, or other material that will prevent convection or conduction cooling.

Unless individual product specifications deem otherwise: do not exceed fixture maximum ambient temperature.

Only use fixture in its intended location.

LED products are Polarity Sensitive. Ensure proper Polarity before installation.

Electrostatic Discharge (ESD): ESD can damage LED fixtures. Personal grounding equipment must be worn during all installation or servicing of the unit.

Do not touch individual electrical components as this can cause ESD, shorten lamp life, or alter performance.

Some components inside the fixture may not be serviceable. In the unlikely event your unit may require service, stop using the unit immediately and contact your sales representative for assistance.

User should prepare necessary accessories and spare parts (not provided) including junction box, cross bar, junction box gasket, surface plate and screws.

Always read the fixtures complete installation instructions prior to installation for any additional fixture specific warnings.

CAUTION: INTENDED APPLICATION

Input voltage: 120-277VAC (347VAC/480VAC optional), 50/60Hz, CHECK PRODUCT LABEL RATINGS BEFORE ATTEMPTING TO INSTALL

MIN. 90°C supply conductors

Operating temperature: -20°C to 40°C standard (-40°C to 50°C optional)

Suitable for wet location

Mounting height: above 4 feet (1.2 meter)


MOUNTING

This wall pack fixture is available in WALL MOUNT, and CONDUIT MOUNT installations.

A: WALL MOUNT INSTALLATION


 Loosen screws on the right side of the fixture to open the fixture.
Disconnect the quick connector (between LED


module and LED driver) inside the fixture and take off the front housing.



Refer to "PRODUCT INFORMTION BULLETIN" for more details.


Junction box gasket should create seal against wall surface. On uneven surfaces, you may use silicon sealant (not provided) to ensure tight seal against surface.




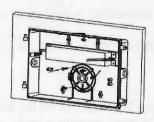



3. Make wiring connection according to wiring selection.


Refer to "WIRING" for more details.





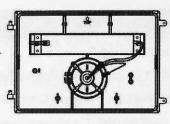

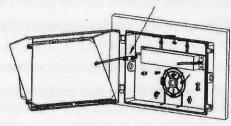


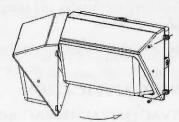

B: CONDUIT MOUNT INSTALLATION

Loosen screws on the right side of the fixture to open the fixture.

Disconnect the quick connector (between LED module and LED driver) inside the fixture and take off the front housing.




Gasket on back housing should create seal against wall surface. On uneven surfaces, you may use silicon sealant (not provided) to ensure tight seal against surface.


3. Remove the 1/2" plug from the side of the fixture, and feed the conduit into the back housing through the knockout.


Make wiring connection according to wiring selection


Refer to "WIRING" for more details.

4. Attach the front housing back on the back housing. Re-connect the quick connector back.






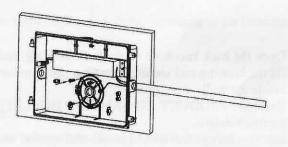

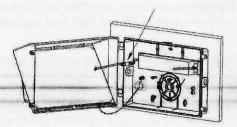

5. Screw two bolts to tighten and close the fixture. Make sure all gaskets seated properly and all bolts and screws inserted and tightened firmly. Use silicone sealant (not provided) all along the bottom of the fixture to ensure tight seal against surface.

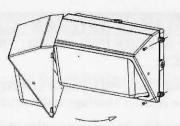


WIRING

Wire input end of the LED driver to supply wires using appropriate wire nut according to wiring section. Wire connections must be insulated and waterproof.

- 1. Connect the BLACK/BROWN lead to LINE (+) supply lead.
- 2. Connect the WHITE/BLUE lead to NEUTRAL/COMMON (-) supply lead.
- 3. Connect the GREEN leads of front housing and back housing to GROUND supply lead.
- If any, connect PURPLE/BLUE to 0-10V SIGNAL supply lead and GREY/WHITE to 0-10V NEUTRAL/REFERENCE supply lead.




WIRING DIAGRAM



PRODUCT INFORMTION BULLETIN

Use the drill & knockout template found on the inside back surface of the fixture to match most standard recessed junction boxes.

For more secure installation, bolt back housing to mounting surface using standoff's, as indicated on following drawing (reference only).

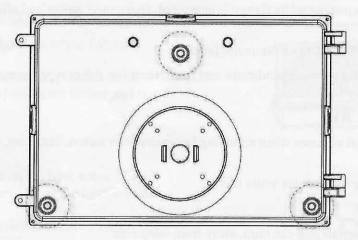

Installation Instruction V4.2

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY BEFORE INSTALLING THE FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/ abrasions, and other hazards please read all warnings and instructions included with and on the fixture box and all fixture labels.

Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.

Installation and service of luminaires should be performed by a qualified licensed electrician.

Maintenance of the luminaires should be performed by person(s) familiar with the luminaires' construction and operation and any hazards involved. Regular fixture maintenance programs are recommended.

It will occasionally be necessary to clean the outside of the refractor/lens. Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to user. Refractor/lens should be washed in a solution of warm water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry. Should optical assembly become dirty on the inside, wipe refractor/lens and clean in above manner, replacing damaged gaskets as necessary.

DO NOT INSTALL DAMAGED PRODUCT! This luminaire has been properly packed so that no parts should have been damaged during transit. Thoroughly inspect the fixture for any freight damage; freight damage should be reported to the delivery carrier.

WARNING: RISK OF ELECTRIC SHOCK

RISK OF ELECTRIC SHOCK. Make sure power supply is OFF before installing or maintaining fixture. No user serviceable parts inside.

Verify that supply voltage is correct by comparing it with the luminaire label information.

The fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety.

All wiring connections should be capped with UL approved recognized wire connectors.

WARNING: RISK OF BURN

Never perform maintenance or cleaning while fixture is energized. Disconnect power and allow fixture to cool before maintaining.

Do not exceed maximum wattage marked on luminaire label.

Follow all manufacturer's warnings, recommendations and restrictions for: driver type, burning position, mounting locations/methods, replacement and recycling.

CAUTION: RISK OF INJURY

Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.

Avoid direct eye exposure to the light source while it is on.

CAUTION: RISK OF FIRE

Keep combustible and other materials that can burn, away from lamp/lens.

Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.

CAUTION: RISK OF PRODUCT DAMAGE

Never connect components under load.

Do not mount or support these fixtures in a manner that can cut the outer jacket or damage wire insulation.

Controls for dimming, auto-sensing, or remote control of a luminaire that are not factory-wired to the luminaire must be checked for compatibility with the luminaire prior to installation. Never connect an LED product directly to a dimmer pack that has not been pre-approved. LED fixtures must be powered directly off a switched circuit.