Electronic Cruise Control for

Harley Davidson FL & FX Dyna Models Twin Cam 96 motor with EFI (2007-2012) Pre-CANBUS only



The following provides a brief description of the power consumption and component locations of the MotorCycle Setup electronic cruise control.

Note: - There is a section at the end of this document showing how to measure the length of the handlebar to ensure that you receive a cruise control with a suitable length wire on the control switch. Please check and measure the handlebar length on your bike before ordering you cruise control kit.

Installed weight of the cruise control is approximately 2.0kg.

Current draw while the cruise is switched on, but not engaged, is approximately 0.250 amp (3 watts). Current draw while the cruise is engaged is nominally $0.5\sim1$ amp ($6\sim12$ Watts).

By comparison, a head light bulb typically draws about 4 amps (55 Watts), and a tail light bulb (running light) draws about 0.4 amp (5 Watts).

Refer to the line drawing on the back of this sheet to identify the component numbers in the text.

The **Computer** (1) is our newly released 'compact' computer, mounted on the front of the bike, bolted to the frame below the steering head. The computer fits inside a stainless steel mounting bracket/enclosure finished in black powder coat. The computer is fully 'potted' in urethane compound to provide complete protection from water ingress and the electrical wiring harness connector is sealed.

The Computer Mounting Bracket (2) shown here is for bikes without engine protection 'crash' bars.



The **Computer Mounting Bracket (3)** shown here is for bikes with engine protection 'crash' bars.



The **Electric Throttle Servo (4)** is our new 'compact' motorcycle throttle servo. It is mounted to the left side frame down tube, in front of the motor.



A cable runs from the throttle servo to the bike's EFI throttle body. The throttle body has a small shouldered nipple on it. This is on the side of the throttle body, where the bike's throttle cables attach to the throttle spindle. It moves with the throttle spindle when the twist grip is operated.

The cruise control throttle servo cable connects to this nipple using **throttle connection fittings (5)** supplied in the cruise control kit.



The two photos below show more detail of the computer and throttle servo mounting.





MotorCycle Cruise Controls

6 Kingston Street

Mount Waverley VIC 3149

AUSTRALIA

Web Site: http://www.mccruise.com

International: Phone (International Access Code) 61 3 9808 2804

Fax (International Access Code) 61 3 9808 2445


Australia: Phone (03) 9808 2804

Fax (03) 9808 2445

The **Control Switch (6)** is mounted to the left hand (clutch) lever handlebar clamp. The bracket mounts between the bottom faces of the clamp and the lever bracket. The clamp must have about $1\sim1.5$ mm (0.040" ~0.060 ") filed from the bottom face to allow for the thickness of the switch bracket. The buttons on the switch are backlight for night use and the indicator light shows cruise control status (red for power on – yellow when engaged).



The Wiring Harness (7) has the same type of plugs or terminals that are already used on the motorcycle in most cases. Power for the cruise control and brake sensing is taken off the rear brake light switch. Matching connectors on the cruise control harness are plugged in to the bike's brake light switch. Road speed sensing is detected from the bike's speedometer sensor. Tach (engine speed) sensing is detected from the bike's primary ignition circuit. This is used to disengage the cruise if the clutch is operated. Both of these connections are done at the bike's ECM (Engine Control Module) connector. These connections must be spliced. Suitable terminals and head shrink tube are supplied in the kit to make these connections. The cruise control is grounded on the negative battery terminal. The wiring harness is a 'custom' finished item, with all parts of the harness cut length and terminated appropriately.

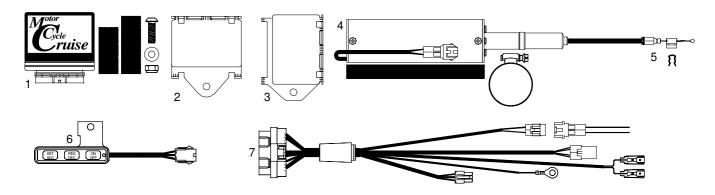

MotorCycle Cruise Controls

6 Kingston Street

Mount Waverley VIC 3149

AUSTRALIA

Web Site: http://www.mccruise.com

International: Phone (International Access Code) 61 3 9808 2804

Fax (International Access Code) 61 3 9808 2445

Australia: Phone (03) 9808 2804

Fax (03) 9808 2445

Measuring the length of the control switch wire.


Note: - These photos are from a Softail, but the principal is the same.

Use a length of wire, string, rope, cord, whatever you have


Lay the cord against the handle bar, starting at the mounting clamp for the clutch lever assembly on the left side handlebar (left arrow).

Lay the cord along the handlebar following the bike's wiring harness (arrowed).

Route the cord from the handlebar (left arrow) down through the hole in the top triple clamp or triple tree (right arrow).

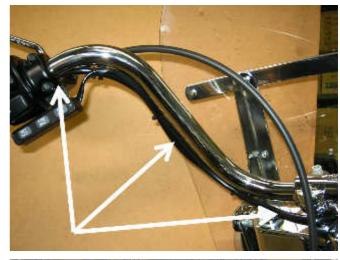



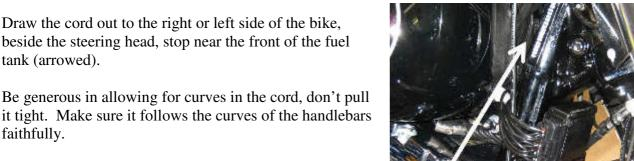

If you intend to put the switch wire INSIDE the handlebar tube (many customers do this) allow enough additional length of wire for it to enter the handlebar. This will probably use an extra 5 to 10cm (2" to 4") of wire length, depending on where the holes for the wires are in the handlebar.

MotorCycle Cruise Controls

6 Kingston Street

Mount Waverley VIC 3149

AUSTRALIA

Web Site: http://www.mccruise.com

International: Phone (International Access Code) 61 3 9808 2804

Fax (International Access Code) 61 3 9808 2445

Australia: Phone (03) 9808 2804

Fax (03) 9808 2445

Measure the length of the cord.

If this length is less than 74cm (29"), select the Short switch wire option when ordering.

If the length is greater than 74cm (29") select the Long switch wire option when ordering.

Ordering your cruise control.

When ordering your cruise control, you will have to select which computer mounting bracket you want, one for bikes with engine protection bars or one without.

You will have to select which control switch wire length you need, short or long.

MotorCycle Cruise Controls

6 Kingston Street

Mount Waverley VIC 3149

AUSTRALIA

Web Site: http://www.mccruise.com

International: Phone (International Access Code) 61 3 9808 2804

Fax (International Access Code) 61 3 9808 2445

Australia: Phone (03) 9808 2804

Fax (03) 9808 2445