

<u>Safari Vista Tree Tent</u>

OWNERS MANUAL

It is important that all users read and understand the materials in this manual before any installation and use of the product.

NO MORE THAN 3 MONTHS CONTINUOUS USE AT ANY ONE TIME DO NOT LEAVE OUTSIDE UNATTENDED FOR MORE THAN A WEEK.







WARNING TENTSILE IS NOT A TOY

RISK OF SERIOUS INJURY

A VISUAL AND TACTILE INSPECTION OF YOUR TENTSILE'S FLOOR, STRAPS AND RATCHETS SHOULD BE MADE BEFORE EACH USE.

FOR SAFETY REASONS, STRAPS AND RATCHETS SHOULD BE REPLACED EVERY 2 YEARS.

NO MORE THAN 3 MONTHS CONTINUOUS USE AT ANY ONE TIME DO NOT LEAVE OUTSIDE UNATTENDED FOR MORE THAN A WEEK.

THE BASE OF THE TENT IS RATED FOR 3,500 HOURS OF UV EXPOSURE.

CHECK THE HEALTH AND STRENGTH OF THE TREES CHOSEN TO BE ANCHOR POINTS BEFORE USE.

Recommended set up height 1.2m / 4 feet

MAX LOAD 400kg / 880lbs.

DO NOT EXCEED MAXIMUM WEIGHT LOAD CAPACITY.

CONGRATULATIONS YOU ARE NOW THE PROUD OWNER OF A

Tentsile Vista Tree Tent

IT IS IMPORTANT THAT ALL USERS READ AND UNDERSTAND THE MATERIALS

03: Introduction 09-28: Set up instructions

04: Terms of Use 29: Floor calibration

05: Specifications 30: Ratchet usage

06: Warnings & Disclaimers 31: Policies

07-08: Layout & Alignment 32: The small print

Introduction

The Vista provides a unique opportunity for you and your friends to experience the great outdoors with a whole new level of freedom and comfort.

Tentsile invented Tree Tents as treehouses you can take anywhere, combining the versatility of a hammock with the comfort and security of a tent.

The Vista comprises of a triple hammock, suspended in tension above the ground and enclosed in an elegantly simple insect mesh top and removable rainfly.

The unique design creates a comfortable base camp, irrespective of ground conditions, as well as providing increased protection from insects, snakes and other predators – if you venture somewhere more exotic.

This product was created because Tentsile loves trees and believes that if we're all hanging out in trees, they can't cut them down!

20 trees are planted for every Tentsile Tree Tent sold.

PLAY, CAMP, EXPLORE...

Terms of Use

Tentsile Tree Tent should be set up only as outlined in this manual.

NEVER jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops.

DO NOT attempt to use this product for anything another than its intended purpose, and always observe height and weight limits.

DO NOT use walls, fences, street furniture, roof racks, movable platforms, posts or trees less than 25cm/10inches in diameter as anchor points, as they may not be strong enough.

DO NOT use tensioning components other than those supplied with this product.

DO NOT set up higher than 1.2metres / 4 feet from the ground or above hard, sharp or pointy objects.

Tactile and visual checks should be made to ALL tent components and ALL anchor points before each use.

Replace any damaged elements if any are found.

Keep away from fire and sharp objects.

DO NOT use after the consumption of any intoxicating substances.

Children must be supervised by an adult at all times.

DO NOT attach to trees or branches that show signs of structural weakness.

DO NOT adjust/open ratchets whilst tent is occupied.

DO NOT use during lightning storms or high winds.

DO NOT use in areas of unstable ground.

Tentsile Tree Tents do not offer protection from all animals.

Specifications

Size:

4.1x4.1x4.1m / 13.5x13.5x13.5ft

Floor area: 7.25sqm/78sqf

Dry porch area at ground level: 18sqm / 194sqft

Entry Points:

Bag Size: 62 x 28 x 28cm / 24 x 11 x 11"

Interior Height: 1.5m / 5ft

Poles:

x3 13mm diameter anodised aluminium alloy 7001 T6

Ratchet & straps: 3 x 19' / 6m polyester webbing straps and 3 x heavyduty ratchet buckles - 2.5 ton minimum breaking strength

Roof:

Tear resistant insect mesh hangs from under-side of the fly sheet and poles to offer protection against the smallest sand flies

Tent weight: 18KG /39.7lbs

Rainfly:

70D PVC coated polyester 8000HH

Floor: 600D Dacron - 300g/sqm reinforced with 20+ meters of seat belt

Maximum capacity: 3 adults

Fire Rating:
Fire resistance meets USA
CPAI-84 and Canadian FR16

Warnings & Disclaimers

Installation and use of the Tentsile Tree Tent may involve heights, can be dangerous and may lead to injury and/or death.

The installation must never be executed by minors, and extreme care and caution must be taken when executed by adults.

Do not use any other components, parts, tools or materials other than those included in the Tentsile Tree Tent package, recommended in this manual or in other Tentsile literature.

A hanging and/or suspension system is only as strong as its weakest link and all instructions and guidelines must be followed.

The Tentsile Tree Tent must only be used in the manner described in this manual. When assembled and installed, the Tentsile Tree Tent places significant force on the anchor points; great care must be exercised when using it to decrease the risk of injury and/or death.

Overloading the Tentsile Tree Tent with more than 880lbs (400kg) increases the forces and may cause anchor, Tree Tent and/or any parts to fail, resulting in injury and/or death.

The manufacturer and resellers of the Tentsile Tree Tent explicitly disclaim any and all responsibility and liability for any death, paralysis, injury, and/or damage to any person or property that may occur that arises out of or is in any way related to the use of this product.

Using any equipment that is suspended above ground can be a dangerous activity that may result in serious injury and/or death even when used properly. Use at your own risk and always use common sense.

DO NOT EXCEED MAXIMUM LOAD 400kg / 880lbs

Positioning the Vista

Tentsile Tree Tents need 3 secure and strong anchor points to suspend from. The distances are marked below. Once the location is found, lay out the Flite on the ground with the corners facing your selected trees. Protective tree wraps are provided should you wish to use them, wrap around trunk before attaching the tree straps.



Trillium Base



Safari Vista Rainfly



Insect Mesh



x3 Poles




x3 Ratchets



x3 Straps




x3 Screw Pegs and bungees

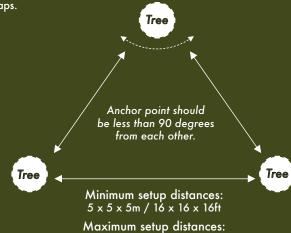


 $14 \times 14 \times 14 \text{ m} / 45 \times 45 \times 45 \text{ ft}$

Alignment Sight Lines

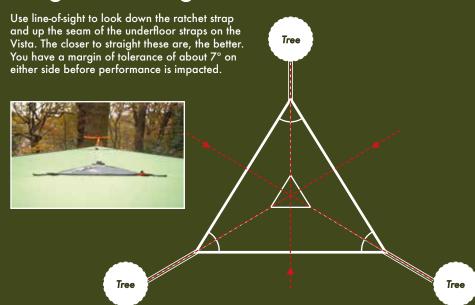

Tree Straps

With a location found, start by wrapping the tree straps around your selected trees.

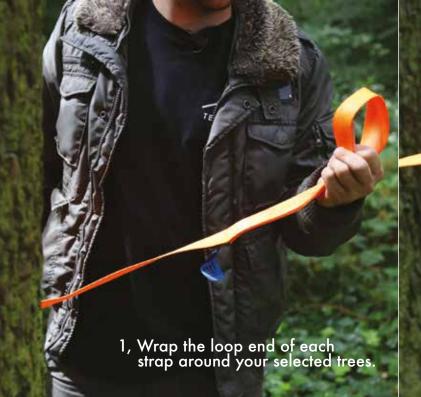


2, Once arou<mark>nd, thread the strap and pull it all through towards the Vista.</mark>

3, Ensure the strap is flat against the tree and not twisted.

Lay Out The Trillium Base

Take the Trillium base and lay it out on the ground in between your selected trees.


Ensure it is the correct way up with the elastic crossed straps facing up.

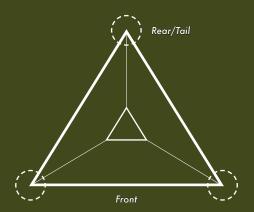



Attaching The Ratchet

With the tree straps attached and the Trillium base laid in postion, you can now attach the 3 ratchet straps to the D-rings at each corner.

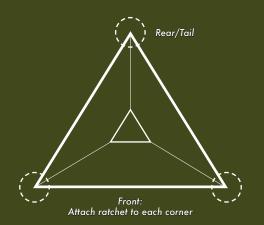



8, Pull the ratchet through the loop.










Fitting Strap To The Ratchet

With the ratchet strap attached to the D-rings, it can now be connected to the tree straps.

Check each corner of the Trillium base is aligned to each anchor point.

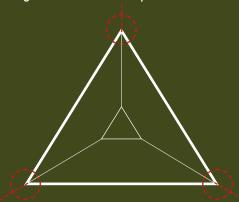







13, Feed it in and pull it through making sure it does not twist.



14, Lift the Trillium base off the ground by pulling through excess strap at each point.

15, Give a strong pull before cranking the ratchet.

Tightening The Ratchet

Cranking the ratchet will give the tension needed and allows for easy adjustment. Ensure the ratchet is correctly in the locked position before continuing.

Attention - Ratchet Locking

Crank the ratchet handle back & forth 7-9 times to increase tension to straps.



UNLOCKED

LOCKED





16, Release the ratchet lock by pushing the inner latch upwards.



18, Pull the handle back and begin cranking it back and forth.



19, Do this until the handle has strong resistance.



20, Once achieved, move the handle to the closed position and lock.

LOCKING RATCHET



latch handle to disengage locking plate




it latches flat.

Inserting The Poles

There are 3 poles that are supplied, straighten each one. At each corner is a pole socket into which a pole is inserted.


Once in place all 3 poles will be running across each other in the center.

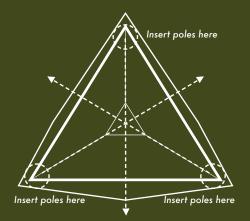



Adding The Rainfly


Take the rainfly and lay it out to locate the Tailend (logo at the front). Lay the rainfly over the Trillium base with the poles flat. Attach each corner C-Clip to their corner ratchet handle.

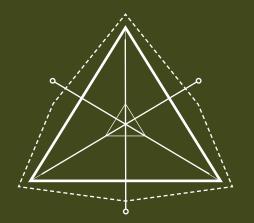



Attach Poles To The Rainfly

Where the poles overlap the rainfly, take a pole and gently bend it across the base to insert it into the pole pocket on the rainfly. Then take the poles and pull them up to the centre of the rainfly from the inside and tie together to secure.

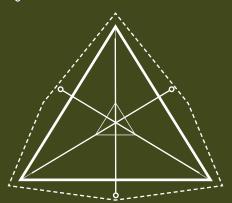




32, Lift the three poles to their meeting point in the centre of the rainfly.

35, Now secure the pole lengths using the attached C-Clips on the rainfly.

Attaching The Mesh

The mesh is secured by a series of C-Clips that are attached to the poles.

Start at the top centre and work your way along each pole with the ties so the mesh is pulled out.

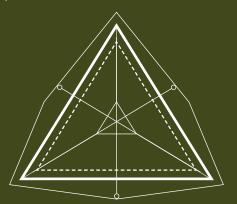




38, The insect mesh is held up by being clipped to the poles 39, First, clip the yellow tagged C-Clip to the centre of the poles

40, Clip the rest of the mesh's C-Clips to the poles.


Securing The Mesh

Once the mesh is attached under the rainfly, the corners can now be secured.

At each corner on the mesh are elasticated clips that simply need to be secured underneath the main base.

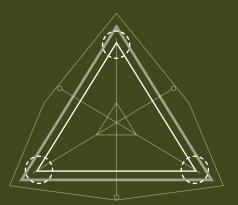





43, Fasten the toggles at the end of each mesh zip door.



Floor Strap Calibration

Note: All Vistas come pre-calibrated direct from the factory. You should only need to calibrate the floor again after many uses. Due to the fact that over time, the fabrics stretch but the seat belt does not, you may need to carry out this procedure once a year to ensure that the floor is kept in equilibrium and tight on all sides.

- Loosen all floor straps by feeding 3"/10cm backwards through the adjuster buckles under each corner of the Vista.
- Set up as normal, to the point where you have raised the tent off the ground by pulling excess orange strap through and have cranked the ratchets to hold the tent off the floor.
- Vista should be raised, and set at half tension (you should still be able to flap it up and down quite easily by about 1"/30cm).

If the outside edge of the vista is looser than the underfloor straps, you will need to loosen the underfloor straps. Getting the right balance between the outside edge (periphery strap) and the underfloor straps may take some practice but you will know when you have got

- 4, Pull underfloor straps through adjuster buckles at each corner, past the crease left from earlier use by about ½" / 1cm on each corner.
- Ratchet to full tension and check all sides are of equal tension to each other and equal to the under floor straps.
- Repeat procedure until you have the right balance between each edge of the Vista and the underfloor straps that divide each hammock berth inside.

it right! This procedure should be carried out if ou feel like you are rolling outwards (towards the edge) or inwards (towards the central hatch) while using your Vista.

How to use the Ratchet

- 1) Take tail end of the long strap around your trees and thread through the loop and away from tree, towards your Tentsile Tree Tent.
- 2) Thread loop of the ratchet through the D-Ring at each corner of your Tentsile Tree Tent and take the buckle through the loop.
- 3) Take long strap tail and thread it through the ratchet buckle spindle, pulling through all excess orange strap. Crank ratchet until the orange strap has gone around the spindle at least 1.5 full revolutions to underlock it. This will prevent any slippage before moving to the next corner.
- 4) Repeat step 3 at each corner, trying as much as possible to keep the corners pointing towards their respective anchor points.
- 5) Revisit all corners and adjust as necessary. Use line of sight down each strap to centralise your Tentsile Tree Tent between your chosen anchor points. You have about a 7° degree margin of tolerance in each direction.


- 6) Tighten ratchets as much as you can.
 ENSURE RATCHETS ARE IN LOCKED POSITION
 BEFORE ENTERING THE TENTSILE TREE TENT.
- 7) Roll and tidy up strap ends to avoid any possible trip hazzards.

Crank the ratchet handle back & forth 7-9 times to increase tension to straps.









Policies

Maintenance

Visual and Tactile inspection of all components for structural damage before every use and dry out Tentsile Tree Tent thoroughly before packing away. Tentsile Tree Tent should be stored safely in a dry environment.

Returns

If a customer wishes to return a Tentsile product within 30 days, they need to pack the unit clean and dry, with all components included. Retailer can choose to resell this item or send it back to Tentsile for a credit note.

A restocking fee will be applied (charged to customer) if the tent is wet, dirty or missing parts. Return shipping will be at customer's expense.

Weather

The Tentsile Tree Tent is not intended to be used in severe weather. If there is weather that creates dangerous conditions, such as storms, heavy rain, high winds, and/or lightning, do not use or remain in the Tentsile Tree Tent in or during those conditions. It is recommended that the Tentsile Tree Tent is taken down and stored to avoid remaining inside and being subject to such conditions. Leaving the Tentsile Tree Tent out and installed in bad weather can lead to potential destruction and/or damage to it (not covered by warranty). If the Tentsile Tree Tent is subject to such conditions, it and its anchor/hanging system should be inspected in detail prior to any future use. Be sure to thoroughly dry the Tentsile Tree Tent before storing.

Customer Service Charter

Quality first – We will manufacture, sell and distribute the best possible quality Tentsuile Tree Tents in the World.

Customer focus – We will provide prompt, courteous and efficient service, with honesty and integrity and expert, clear, and timely information to customers and collegaues.

Tentsile Promise - We will strive for a 'get it right first time, every time' in all our dealings in manufacturing, distribution, sales, and service

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

Contact us

info@tentsile.com

*use as intended and outlined herein and no more than 3 months

The small print

The Tentsile Tree Tent is designed for play, relaxation, and camping/sleeping. Never jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops. Do not attach or secure the Tentsile Tree Tent to a movable platform or anchor; it is not intended to be used for such recreation or activities. Do not attempt to use this product for anything other than its intended purpose, and always observe height and weight limits.

Warranties

Manufacturing Warranty

Tentsile will accept and replace any product with a manufacturing warranty straight out of the box. These units should be marked as defective and repairs@tentsile.com should be contacted, so that we can pick up these items and replace them.

Claims of Defects under 1 Year Warranty

Any damage, breakage or defect found after customer use needs to be assessed on a case-by-case basis. Tentsile will accept any fault considered

to be manufacturer's defect if the product is used within Terms of Use, as set out in Owner's Manual.

Tentsile will not accept any damage, breakage or defect caused by customer outside these Terms of Use. This would include setting up product

outside guided Owner's Manual instructions, recklessness, carelessness, misuse product or misunderstanding of product set up instructions provided.

Photos of damage should be sent to repairs@tentsile.com for assessment. Our team will assess if the damage is covered by warranty, of customer error.

In cases of warranty, Tentsile will ask to be put directly in touch with customer and we will pick up the unit and replace it directly with them.

In cases of customer damage, the retailer can pass customer directly over to talk to our team. Tentsile will then organise for customers to send their unit in for repair.

Please note:

All Tentsile products are fabric structures which will degrade over time due to wear and tear. This includes environmental conditions such as user care, storage conditions, packing conditions and UV exposure.

Tentsile products comes with care instructions including; not to be left unattended for more than 1 week. Do not leave set up for more than 3 months at a time (product needs to be taken down and inspected every 3 months for damage and wear and tear to components), Products have differing levels of UV protection. Safari Vista – 3,500 UV hours.

Tentsile will not be held liable for environmental damage caused by high winds, falling branches, damage made by animals or any other environmental factors.

20 Trees Planted

Tree Planting Mission

For every tent purchased we make a donation to plant 20 trees with our partners: WeForest, Eden Projects, and Arbor Day Foundation. So far, we have planted over 560,000 trees in projects located across Zambia, India, Madagascar, and Oregon.

Follow our #BecomeOneOfTheMillion campaign and keep up with our progress as we work with each of these organisations to plant 1 million trees over the next 5 years.

Where Do We Plant Them?

Tentsile's tree planting partners all meet a number of strict criteria; from regular updates and tracking donations, to working with local communities, training residents, planting native species and protecting saplings to maturity.







www.tentsile.com

All rights reserved Tentsile Ltd Patent Approved