


# Doro Secure<sup>®</sup> 580

## Installation guide

English



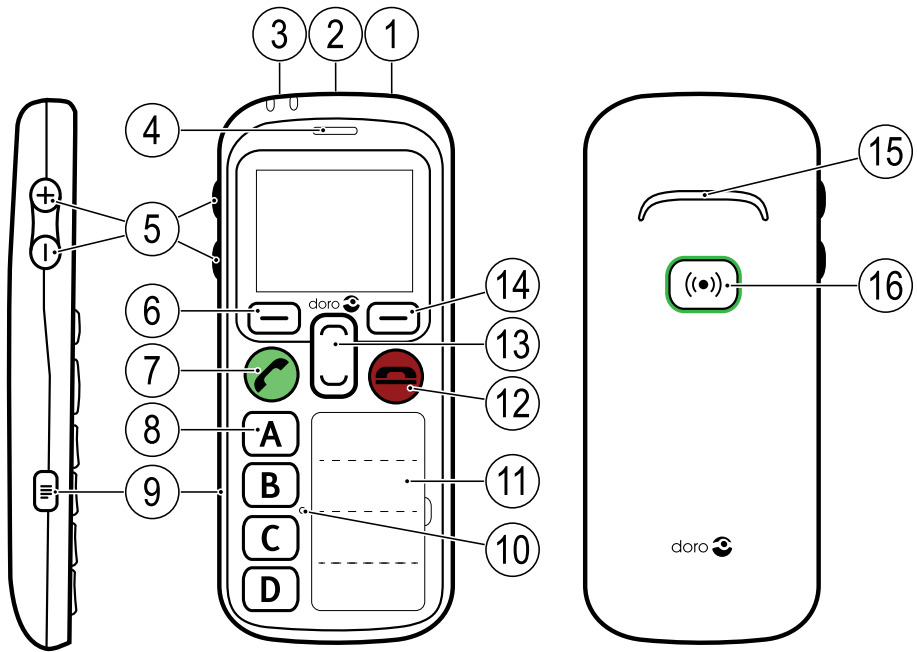





**Note!** All illustrations are for illustrative purposes only and may not accurately depict the actual device.

## English

- |                          |                            |
|--------------------------|----------------------------|
| 1. Power on/off          | 9. Settings menu           |
| 2. Headset socket        | 10. Microphone             |
| 3. Charging socket       | 11. Name list              |
| 4. Earpiece              | 12. End call key/Back      |
| 5. Volume keys (+/-)     | 13. Navigation buttons     |
| 6. Left selection button | 14. Right selection button |
| 7. Call key              | 15. Loudspeaker            |
| 8. Speed dial keys (A-D) | 16. Assistance button      |

The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

# Contents

Set up the phone.....	1
Get started.....	1
Installation and assembly.....	1
Turn the phone on and off.....	2
Navigate the phone.....	2
Enter text.....	3
Phonebook.....	3
Add number.....	3
ICE (In Case of Emergency).....	3
My number.....	4
Emergency call.....	4
Phone settings.....	5
See  .....	5
Hear  .....	6
Handle  .....	7
Safety  .....	11
Connectivity.....	13
Doro Experience®.....	16
Create account.....	16
Log in.....	17
Sync. intervals.....	17
Account.....	17
Log out.....	17
Doro Experience® Manager.....	18
Assistance.....	20
Activation.....	21
Number list.....	21
Activate text messages (SMS).....	22
Position SMS.....	23
Confirm with "0".....	24
Signal type.....	24
Request position.....	25
Safety timer.....	25
General information.....	26
Safety instructions.....	26
Network services and costs.....	26
Operating environment.....	26
Medical units.....	26

Areas with explosion risk .....	27
Li-ion battery .....	27
Protect your hearing.....	27
Emergency calls.....	28
Vehicles .....	28
Care and maintenance .....	28
Warranty.....	29
Copyright and other notices.....	29
Content copyright .....	30
Specifications .....	30
Specific Absorption Rate (SAR) .....	30
Declaration of Conformity .....	30

# Set up the phone

## Get started

### Installation and assembly

#### Remove the battery cover

**IMPORTANT!**


Turn off the phone and disconnect the charger before removing the battery cover.




#### Insert the SIM card

The Doro Secure® 580 accepts micro SIM card. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

**Tip:** Take care not to scratch or bend the contacts on the SIM card when inserting into the card holder.

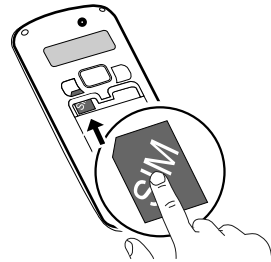


#### Remove SIM card

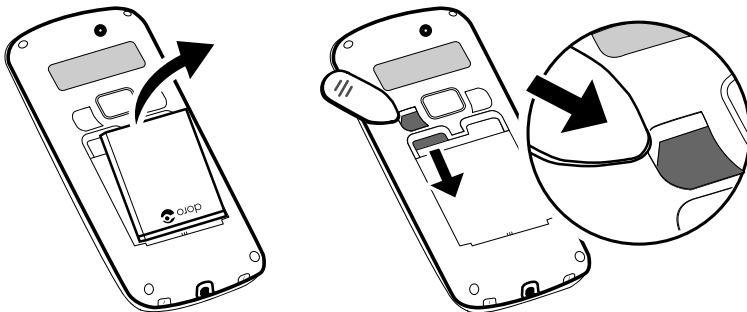

---

## Insert the battery

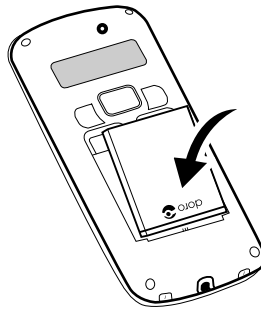

## Turn the phone on and off

1. Press and hold **ⓘ** to turn the phone on/off.
2. If the inserted SIM card is protected with a PIN code (Personal Identification Number) **PIN** is displayed. Use the side buttons **+/-** to enter the PIN code and press **OK** to confirm or delete with **Clear** (**⏏** upper right corner of keypad).

**Tip:** It is recommended to use **Automatic SIM lock** in order to ease the use, see [SIM lock \(PIN code option\)](#), p.11.

**Note!** If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

**Tip:** It is recommended to remove the protective plastic film from the display to enhance the visibility.

**Attempts: #** shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must then be unlocked with the PUK code (Personal Unblocking Key).

1. Use the side buttons **+/-** to enter the PUK code and confirm with **OK**.
2. Use the side buttons **+/-** to enter a new PIN code and confirm with **OK**.
3. Use the side buttons **+/-** to re-enter new PIN code and confirm with **OK**.

## Navigate the phone

### Step-by-step instructions

- The arrow (**➔**) indicates next action in step-by-step instructions.

- To confirm an action, press **OK**.
- To select an item, scroll or highlight the item using  $\swarrow/\searrow$  and then press **OK**.

### Example

1. Press and hold  $\square$  (6 seconds).
2. Select **Settings**  $\rightarrow$  **Sound**  $\rightarrow$  **Audio setup**.
3. Select an option and press **OK**.

### Enter text

- Use the side buttons **+/-** to select a character from the list. Wait a few seconds before entering the next character.

## Phonebook

### Add number

1. Press and hold  $\square$ .
2. Select **Phonebook**  $\rightarrow$  **A-D**  $\rightarrow$  **Empty**  $\rightarrow$  **Add**.
3. Use the side buttons **+/-** to enter a name. Delete with **Clear**.
4. Use the side buttons **+/-** to enter number, then press **OK** to confirm.
5. Repeat until you have 4 contacts (maximum).

**Note!** To edit or delete contact, select **Options**  $\rightarrow$  **Edit** or **Delete**.

**Tip:** Use Doro Experience<sup>®</sup> Manager to add numbers using a computer, see [My device, p.18](#).

### ICE (In Case of Emergency)

All fields are optional, but the more information provided the better.

1. Press and hold  $\square$ .
2. Select **Phonebook**  $\rightarrow$  **ICE**.
3. Use  $\swarrow/\searrow$  to scroll the list of entries.
4. Press **Edit** to add or edit information in each entry. Use the side buttons **+/-** to enter info. Delete with **Clear**.

#### ID

- **Name:** enter name.
- **Birth:** enter date of birth.
- **Height:** enter height.

- **Weight:** enter weight.
- **Address:** enter home address.
- **Language:** enter preferred language.
- **Insurance:** enter insurance provider and policy number.

### Contacts

- **Contact 1:** enter name and number. If possible, add your relationship.
- **Contact 2:** enter name and number. If possible, add your relationship.
- **Doctor:** enter name and number.

### Important info.


- **Condition:** enter any medical conditions/medical devices (e.g. diabetic, pacemaker).
- **Allergies:** enter any known allergies (e.g. penicillin, bee stings).
- **Blood type:** enter your blood type.
- **Vaccination:** enter any relevant vaccinations.
- **Medication:** enter any medication that you are treated with.
- **Other info:** enter other information (e.g. organ donor, living will, consent to treat).

5. When done, press **Save**.


**Tip:** Use Doro Experience® Manager to add ICE information using a computer, see [ICE \(In Case of Emergency\)](#), p.18.

### My number

The phone number assigned to the SIM card is saved as **My number** if this is allowed by the card.

1. Press and hold .
2. Select **Phonebook** → **My number** → **Empty** → **Add**.
3. Use the side buttons **+/-** to enter name and number.
4. When done, press **Save**.

### Emergency call

1. Press and hold .
  2. Select **Phonebook** → **Emergency call** → **Empty** → **Add**.
  3. Use the side buttons **+/-** to enter name and number.
-



- 
4. When done, press **Save**.

**Tip:** Use Doro Experience® Manager to edit the emergency number using a computer, see [My device, p.18](#).

## Phone settings

See 

### Idle display

Select what information is shown in standby mode.

1. Press and hold .
2. Select **Settings** → **Display** → **Idle display**.
3. Select **Clock only**, **Clock & Operator** or **All info**.
4. Press **OK** to confirm.

### Themes

The themes use different contrasts between text and the background mixing colours for optimised readability.

1. Press and hold .
2. Select **Settings** → **Display** → **Themes**.
3. Select **Theme 1**, **Theme 2**, **Theme 3** or **Theme 4**.
4. Press **OK** to confirm.


### LCD backlight

Select the delay time for the display backlight.

1. Press and hold .
2. Select **Settings** → **Display** → **LCD backlight**.
3. Select **15 sec.**, **30 sec.** or **1 min.**
4. Press **OK** to confirm.

### Brightness

You can adjust the brightness of the display. The higher value, the better contrast.


1. Press and hold .
2. Select **Settings** → **Display** → **Brightness**.
3. Select **Level 1**, **Level 2** or **Level 3**.
4. Press **OK** to confirm.

---

## Hear

### Audio setup




Customise the audio settings if using a hearing aid or having hearing difficulties when using the device in a noisy environment.

1. Press and hold .
2. Select **Settings** → **Sound** → **Audio setup**:
  - **Normal** for normal hearing in normal conditions.
  - **High** for moderate hearing impairment or use in a very noisy environment.
  - **HAC mode** for use with hearing aid in T-mode.
3. Press **OK** to confirm.

**Tip:** Use Doro Experience® Manager to programme audio setup using a computer, see [My device, p.18](#).




### Tone setup (ringtone)

Select a ringtone with the best tone curve adjustments and frequencies to best fit the requirements.

1. Press and hold .
2. Select **Settings** → **Sound** → **Tone setup** → **Ringtone**.
3. Use / to select one of the available melodies, the melody will be played.
4. Press **OK** to confirm.

**Tip:** Set up the **Message tone**, **Keypad tone**, **Power on** and **Power off** tones in the same way.

### Volume

1. Press and hold .
2. Select **Settings** → **Sound** → **Volume**.
3. Use / to change the ringtone volume.
4. Press **OK** to confirm.

### Alert type

Select to use ringtone and/or vibration for incoming calls.


1. Press and hold .
2. Select **Settings** → **Sound** → **Alert type**.

- 
- **Ring only** for ringtone only.
  - **Vib. only** for vibration only.
  - **Vib. and ring** for vibration and ringtone.
  - **Vib. then ring** to start with vibration and adds ringtone after a short while.
  - **Silent** for no sound or vibration, the display light is lit.
3. Press **OK** to confirm.

**Note!** Selected alert type is visible in the status bar.

### Extra tone


Set warning and error tones to alert of low battery power, phone and SIM card errors, etc.

1. Press and hold .
2. Select **Settings** → **Sound** → **Extra tone** → **Warning** or **Error**.
3. Select **On** to enable, or **Off** to disable.
4. Press **Done** to save.

### Handle




#### Time & date

##### Set the time and date

1. Press and hold .
2. Select **Settings** → **General** → **Time & date:**
  - **Set time** to enter the time (**HH:MM**).
  - **Set date** to enter the date (**DD/MM/YYYY**).
  - **Set format** to set time or date format (**12 hours** or **24 hours**).
  - **Auto time** to set the phone to automatically update the time and date according to the current time zone.
3. Press **OK** to confirm.

#### Language

The default language for the phone menus, messages, etc. is determined by the SIM card. You can select to change to any language supported by the phone.

1. Press and hold .
2. Select **Settings** → **General** → **Language**.
3. Use / to select language.

---


4. Press **OK** to confirm.

**Tip:** Use Doro Experience® Manager to set language using a computer, see [My device, p.18](#).


### Start-up wizard

When starting the phone for the first time, you can use the Start-up wizard to set some basic settings.

- Press **Yes** to change or **No** if you do not want to change.


**Tip:** You can run the start-up wizard later if you want. Press and hold , then select **Settings** → **General** → **Start-up wizard**.

### Block function

1. Press and hold .
2. Select **Settings** → **General** → **Block function**.
3. Select each function you want to disable and press **Off**.
4. Press **Done** to confirm.

### Network setup

The phone automatically selects (service providers) home network if within range.

1. Press and hold .
2. Select **Settings** → **General** → **Network setup**.
3. Select one of the following options and press **OK** to confirm:
  - **Select network** to view available network, a list of available network operators is displayed (after a short delay). Select desired operator.
  - **Service selection** to select type of service for your phone.
  - **Network information** to view current network settings.


### Services

This menu may contain pre-programmed services from the service provider depending on network support and subscription.


1. Press and hold .
2. Select **Settings** → **General** → **Services**.
3. Press **OK** to confirm.

### Auto answer

Select to activate auto answer to answer incoming calls from contacts saved in the number list in handsfree/speakerphone mode.

1. Press and hold .
2. Select **Settings** → **Calls** → **Auto answer** → **Activate** → **On**.
3. Select an option.
4. Select **Number list** → **Empty** → **Add**.
5. Use the side buttons +/- to enter name and number.
6. Press **Done** to confirm.
7. Repeat until you have 20 contacts (maximum).

### Set answer time


1. Press and hold .
2. Select **Settings** → **Calls** → **Auto answer** → **Answer time**.
3. Select an option.
4. Press **OK** to confirm.

**Tip:** Use Doro Experience® Manager to edit auto answer using a computer, see [Auto answer, p.19](#).

### Whitelist

Select to only accept incoming calls from contacts saved in the number list.

**Note!** If enabled and no numbers added, no calls can be received.

1. Press and hold .
2. Select **Settings** → **Calls** → **Whitelist** → **Activate** → **On**.
3. Select **Number list** → **Empty** → **Add**.
4. Use the side buttons +/- to enter name and number.
5. Press **Done** to confirm.
6. Repeat until you have 20 contacts (maximum).

**Tip:** Use Doro Experience® Manager to edit the whitelist using a computer, see [Whitelist numbers, p.19](#).


### SMS settings

#### IMPORTANT!

This is needed if the Assistance function is activated! See [Assistance, p.20](#).


---

In order to send any text messages, a message centre number is needed. The number is supplied by your service provider and is usually set on the SIM card.


1. Press and hold .
2. Select **Settings** → **Messages** → **SMS settings**.
3. Select **SMS centre** → **Edit**.
4. Use the side buttons **+/-** to edit the service centre number. Press **Clear** to delete.
5. Press **OK** to confirm.


### Cell broadcast

Depending on service provider, it is possible to receive messages on various topics, such as weather or traffic conditions in a particular region. For available channels and relevant channel settings, contact the service provider. Cell broadcast messages cannot be received when the device is roaming.

1. Press and hold .
2. Select **Settings** → **Messages** → **SMS settings**.
3. Select **Cell broadcast**:
  - **Function on/off** to turn information **On** or **Off**.
  - **Read messages** to read the message.
  - **Languages** to select language.
  - **Channel settings** to select from which channels to receive/subscribe messages. Use the options **Add**, **Cancel subscription**, **Edit** and **Delete** to define your channels.
4. Press **OK** to confirm.

### Reminder


Select to activate the reminder alert to be alerted once if a received message hasn't been read. When notified, press  to end the notification and no more reminders are heard.

1. Press and hold .
2. Select **Settings** → **Messages** → **Reminder**.
3. Select **On** to enable, or **Off** to disable.
4. Press **OK** to confirm.

### Vibration

---

Select text message vibration alert.

1. Press and hold .
2. Press **Menu** → **Settings** → **Messages** → **Vibration**:
  - **Short** (4 seconds)
  - **Long** (12 seconds)
3. Press **OK** to confirm.


**Note!** If **Alert type** is set to **Ring only** the phone will not vibrate.

### Delete

1. Press and hold .
2. Select **Settings** → **Messages** → **Delete** → **Delete Inbox?**.
3. Press **Yes** to delete all messages.

### Auto reply

Select to automatically send an auto reply for all received text messages.


1. Press and hold .
2. Select **Settings** → **Messages** → **Auto reply** (Your message has been received. Receiving device cannot reply.).
3. Select **On** to enable, or **Off** to disable.
4. Press **OK** to confirm.

**Tip:** To avoid additional costs, make sure to disable the auto reply function if roaming. That is when using another network, when for example travelling abroad.

### Safety

#### SIM lock (PIN code option)

Select an option for the PIN code. It is recommended to use **Automatic SIM lock** in order to ease the use.

1. Press and hold .
2. Select **Settings** → **Security** → **SIM lock**.
3. Select an option:
  - **On** to activate the PIN code. You need to enter the PIN code every time the phone is started.
  - **Off** to deactivate the PIN code.


**WARNING**

If the SIM card is lost/stolen it is unprotected.

- **Automatic** to start the phone without the PIN code. The phone remembers it automatically, but if the SIM card is moved to another phone (lost/stolen) the PIN code needs to be entered when the phone is started.

4. Press **OK** to confirm.

**Change PIN code (passwords)**


1. Press and hold .
2. Select **Settings** → **Security** → **Passwords**.
3. Select → **PIN**.
4. Enter current PIN code and press **OK**.
5. Enter new PIN and press **OK**. Repeat to confirm.

**Tip:** Set up the **PIN2** and **Phone code**, **Power on** in the same way.

**Keypad lock**


Select to automatically activate the keypad lock after a set time.

**Activate**

1. Press and hold .
2. Select **Settings** → **Security** → **Keypad lock** → **Auto keylock**.
3. Select the time delay for automatic keypad locking.
4. Press **OK** to confirm.

**Fixed dial (FDN)**


Select to limit calls to certain numbers saved on the SIM card. The list of allowed numbers is protected by your PIN2-code.

1. Press and hold .
2. Select **Settings** → **Security** → **Fixed dial**.
3. Select an option:
  - **Mode** → Select **On** to enable, or **Off** to disable.
  - **Fixed numbers** → **Empty** → **Add** and enter the first allowed number. Use the side buttons **+/-** to enter info. Alternatively, select an entry and press **Options** → **Add/Edit/Delete**.
4. If needed, enter PIN2 and press **OK** to confirm.




**Note!** You can save parts of phone numbers. For example, if you save 01234, it allows calls to all numbers starting with 01234. It is always possible to place an SOS call even when fixed dial is activated. When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card.

### Reset settings

1. Press and hold .
2. Select **Settings** → **Security**.
3. Select **Reset settings** to reset the phone settings. All the changes that you have made to the phone settings will be reset to default settings.
4. Use the side buttons **+/-** to enter the phone code and press **OK** to reset.

**Tip:** The default phone code is **1234**.

### Reset all

1. Press and hold .
2. Select **Settings** → **Security**.
3. Select **Reset all** to delete phone settings and content such as contacts, number lists and messages (SIM memory is not affected).
4. Use the side buttons **+/-** to enter the phone code and press **OK** to reset.

**Tip:** The default phone code is **1234**.


## Connectivity

### Bluetooth®


#### IMPORTANT!

When not using Bluetooth® connectivity, turn off **Function on/off** or **Visibility**. Do not pair with an unknown device.

### Activate Bluetooth®

1. Press and hold .
2. Select **Settings** → **Connectivity** → **Bluetooth** → **Function on/off** → **On**.


### Visibility

1. Press and hold .


- 
2. Select **Settings** → **Connectivity** → **Bluetooth** → **Visibility** → **On**.

**Note!** To prevent other devices from finding your device, select **Off** when not pairing. Even if you select **Off**, paired devices can still detect your device.


### Device name

1. Press and hold .
2. Select **Settings** → **Connectivity** → **Bluetooth** → **Device name**.
3. Use the side buttons **+/-** to enter the name that should appear for other Bluetooth® devices.  
If Bluetooth® is not enabled, press **Yes** to activate.
4. Press **Options** → **Done** to confirm.

### Search device

1. Press and hold .
2. Select **Settings** → **Connectivity** → **Bluetooth** → **Search device**.
3. Select a device from the list and press **Pair** to connect.  
If Bluetooth® is not enabled, press **Yes** to activate.
4. When connecting to another Bluetooth® device you need a shared password. Use the side buttons **+/-** to enter the password and press **OK**.

### My devices (new devices)

1. Press and hold .
2. Select **Settings** → **Connectivity** → **Bluetooth** → **My devices** → **Search new**.
3. Select from the list of devices and press **Pair** to connect

### My devices (already paired devices)

1. Press and hold .
2. Select **Settings** → **Connectivity** → **Bluetooth** → **My devices** → **Options**:

#### Phone

- **Rename** to change the name of the device.
- **Delete** to delete the device from the list.
- **Delete all** to delete all devices from the list.

## Bluetooth® headset

- **Connect** to connect.
  - **Rename** to change the name of the device.
  - **Delete** to delete the device from the list.
  - **Delete all** to delete all devices from the list.
3. Press **OK** to confirm.

## Bluetooth beacon

Bluetooth beacons are devices using Bluetooth® to determine position. Pair once with the unit. After pairing, you can select to turn off Bluetooth in your phone to improve the battery performance. The unit is still connected to the phone. You can connect and store up to 5 units with one phone. Contact your service provider for available accessories.

1. Select **Settings** → **Connectivity** → **Bluetooth** → **Bluetooth beacon**.
2. Select **Search new**. If needed select **Yes** to activate Bluetooth.
3. Select **BT Beacon** and start pairing.




## Internet profile

### IMPORTANT!

Using data services can be costly. We recommend that you check your data rates with your service provider.

Internet settings are used by services that communicate using the Internet. The Internet settings for most major service providers are already inserted from start. Another way is to ask your service provider to send the settings directly to your phone.

Follow the steps below if your service provider profile is not in the list. Contact the service provider for correct settings.

1. Press and hold .
2. Select **Settings** → **Connectivity** → **Internet profile**.
3. Use / to select a profile.
4. Press **Options** → **Edit**. Use the side buttons **+/-** to enter settings.
  - **Account name** to enter the account name.
  - **APN** to enter the APN address.
  - **Homepage** to enter password.
  - **Connection type** select **HTTP/WAP**.


- 
- **Proxy address** to enter proxy address.
  - **Proxy port** to enter proxy port.
  - **User name** to enter user name.
  - **Password** to enter password.
5. Press **OK**, and press **Yes** to save or **No** to return.
  6. Select your new profile and press **Options** → **Activate**.

**Tip:** You can also activate/modify a profile by selecting one and press **Options** → **Activate/Edit/Delete**.

### Data roaming

The phone automatically selects the (service providers) home network if within range. If not within range, use another network, provided that the network operator has an agreement that allows you to do so (this is roaming). Contact the service provider for more information.

**Note!** Using data services while roaming can be costly. Contact your service provider for data roaming rates before you use data roaming.


1. Press and hold .
2. Select **Settings** → **Connectivity** → **Data roaming**.
3. Select **On** to enable, or **Off** to disable.
4. Press **OK** to confirm.

### Doro Experience<sup>®</sup>

The web-based Doro Experience<sup>®</sup> Manager ([www.doroexperience.com](http://www.doroexperience.com)) enables you to remotely manage Doro Secure<sup>®</sup> 580 from anywhere in the world.

**Note!** You need to have Internet access to use most of the features in Doro Experience<sup>®</sup>. Before you use your phone, we strongly recommend that you contact your mobile operator about data rates.

### Create account

1. Press and hold .
  2. Select **Settings** → **Doro Experience** → **This service helps you to handle and manage your Doro Experience device.** → **Create account**.
  3. Your user name is automatically set to your phone number/my number. My number is supplied by your service provider and is usually
-

---

set on the SIM card. If not, you can enter the number yourself, see [My number, p.4](#).

4. Use the side buttons **+/-** to enter a password and press **↵**.
5. Re-enter the password in the field below and press **OK**.

## Log in

1. Press and hold **☰**.
2. Select **Settings** → **Doro Experience** → **This service helps you to handle and manage your Doro Experience device.** → **Log in**.
3. Use the side buttons **+/-** to enter your phone number as user name.
4. Use the side buttons **+/-** to enter your password and press **Log in**.

## Sync. intervals

Select synchronisation intervals for Doro Secure® 580 and Doro Experience® Manager.

1. Press and hold **☰**.
2. Select **Settings** → **Doro Experience** → **Sync. intervals**:
  - **Manual** to synchronise manually. No automatic synchronising.
  - **Every 15 minutes** to synchronise automatically every 15 minutes.
  - **Hourly** to synchronise automatically every hour.
  - **Daily** to synchronise automatically every day.
3. Press **OK** to confirm.

**Tip:** You can also synchronise manually by pressing **Synchronise now**.

## Account

1. Press and hold **☰**.
2. Select **Settings** → **Doro Experience** → **Account**.
3. Press **Back** to return.

**Tip:** The default phone code is **1234**.

## Log out

1. Press and hold **☰**.
2. Select **Settings** → **Doro Experience** → **Log out**.
3. Press **OK** to confirm.

---

## Doro Experience® Manager

Remotely manage the Doro Secure® 580 with a computer.

### Log in

1. On a computer: Go to [www.doroexperience.com](http://www.doroexperience.com).
2. Select Doro Secure® 580 as device.
3. Enter your user name (phone number) and password. See [Create account, p.16](#).
4. Press **Log in**.

### My device

1. Select **My device**:
  - **General** to set language used on the phone. See [Language, p.7](#).
  - **Sound** to set audio setup. See [Audio setup, p.6](#).
  - **Emergency number**, if needed change the emergency number. 112 is set by default. See [Emergency call, p.4](#).
  - **Speed dial** to enter the name and numbers to the speed dials keys (A-D). See [Add number, p.3](#).
2. When done, select **Save**.

### Assistance

1. Select **My device** → **Assistance**:
  - **Activation** to set activation type. See [Activation, p.21](#).
  - **Confirm with 0** to enable or disable. See [Confirm with "0", p.24](#).
  - **Signal type** to set signal type. See [Signal type, p.24](#).
  - **Numbers list** to enter name and number for the predefined contacts, maximum 5. See [Number list, p.21](#).
  - **SMS activation** to enable or disable SMS activation and to enter Assistance SMS message. See [Activate text messages \(SMS\), p.22](#).
  - **Position SMS** to enable or disable position SMS and set Poll interval. See [Position SMS, p.23](#).
2. When done, select **Save**.

### ICE (In Case of Emergency)

1. Select **My device** → **ICE : In Case of Emergency** → **Personal information**:
  - **Name**

- **Birthday** to enter birthday (DD/MM/YY).
  - **Height**
  - **Weight**
  - **Blood type**
  - **Language for Doro Experience® Manager**
  - **Address** to enter address.
2. Select **Contacts**:
    - **Name** to enter name.
    - **Number** to enter number, including the area code.
  3. Select **Medical information**:
    - **Insurance**
    - **Condition**
    - **Allergies**
    - **Medication**
    - **Vaccination**
    - **Other information**
  4. When done, select **Save**.

**Tip:** See [ICE \(In Case of Emergency\)](#), p.3 for more info.

### **Whitelist numbers**

1. Select **My device** → **Whitelist numbers**:
  - **Activation** to set as on or off.
  - **Number** to enter number for the predefined contacts to be allowed to make calls to Doro Secure® 580, maximum 20.
2. When done, select **Save**.

**Tip:** See [Whitelist](#), p.9 for more info.

### **Safety timer**

1. Select **My device** → **Safety timer**:
  - **Time** to set time, maximum 120 minutes.
2. When done, select **Save**.

**Tip:** See [Safety timer](#), p.25 for more info.

### **Auto answer**

1. Select **My device** → **Auto answer**:

- **Activation** to set as on or off.
- **Time** to set time, maximum 60 seconds.
- **Number** to enter number for the predefined contacts to be allowed to make calls to Doro Secure® 580, maximum 20.

2. When done, select **Save**.

**Tip:** See [Auto answer, p.8](#) for more info.

### GPS request

1. Select **My device** → **GPS request**:

- **Number** to enter number for the predefined contacts to request position, maximum 5.

2. When done, select **Save**.

**Tip:** See [Request position, p.25](#) for more info.

### Account settings

Edit your personal information, change preferred language, or view data storage status.

- To edit the text, click the fields.
- To change **Country** or **Language for Doro Experience® Manager**, click the drop-down-list (click the arrow) and select options.
- To change password, click **Change password** → the fields to enter current and new password → **Save password**.
- If you want to replace the current phone connected to your Doro Experience® account with a new phone, you need to reset the IMEI number in order to keep the account. Before you log in with your new phone, click **Reset IMEI** → **Yes**.
- When done, click **Save**.

### Assistance



#### CAUTION

The assistance button allows easy access to contact the predefined help numbers (Number list) should you need help. Make sure that the assistance function is activated before use, enter recipients in the numbers list and edit the text message.



**IMPORTANT!**


Information to the recipient of an assistance call, when Confirm with "0" is activated.

1. After receiving the assistance message, each number in the Number list is called sequentially.
2. To confirm the assistance call, the recipient needs to press **0**.
  - If the recipient doesn't press **0** within 60 seconds (after answering) the call will be disconnected and the next number in the sequence will be called.
  - If the recipient presses **0** within 60 seconds, the call is confirmed and no further call attempts will be made (assistance sequence interrupted).

**Note!** Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number.

**Activation**

Select how to activate the assistance function using the assistance button.

1. Press and hold .
2. Select **Settings** → **Assistance** → **Activation**:
  - **On Normal** to press and hold the button for approximately 3 seconds, or press it twice within 1 second.
  - **On (3)** to press the button 3 times within 1 second.
  - **Off** to disable the assistance button.
3. Press **OK** to confirm.


**Tip:** Use Doro Experience® Manager to edit Assistance settings using a computer, see [Assistance, p.18](#).

**Number list**

Add numbers to the list that is called when the assistance button is pressed or when the safety timer is activated.

**IMPORTANT!**

Always inform recipients in the **Number list** that they are listed as your assistance contacts.

1. Press and hold .
2. Select **Settings** → **Assistance** → **Number list** → **Empty** → **Add**.
3. Use the side buttons **+/-** to enter number and press **OK** to confirm.
4. Repeat until you have 5 contacts (maximum).


**Tip:** To edit or delete an existing entry, select it and press **Options** → **Edit/Delete**.

**Tip:** Use Doro Experience® Manager to edit Assistance settings using a computer, see [Assistance, p.18](#).

### Activate text messages (SMS)


A text message can be sent to the contacts in the numbers list when the assistance button is pressed.

#### Activation

1. Press and hold .
2. Select **Settings** → **Assistance** → **SMS** → **Activation**:
  - **On** to send a text message before dialling.
  - **Off** to dial without sending a text message first.
3. Press **OK** to confirm.

#### Create assistance message

**Note!** You **must** write a message if you activate the SMS function.

1. Press and hold .
2. Select **Settings** → **Assistance** → **SMS** → **Message** → **Edit**.
3. Write the message, see [Enter text, p.3](#).
4. Press **OK** to confirm.

**Tip:** Use Doro Experience® Manager to edit Assistance settings using a computer, see [Assistance, p.18](#).

---

## Position SMS

### IMPORTANT!

You may need an Internet connection to use this service. Contact your service provider for detailed subscription costs before activating.

The Doro Secure® 580 can also be used as a GPS receiver. The current location of the Doro Secure® 580 user can be determined with the help of the satellite controlled GPS (Global Positioning System) or with the help of AGPS (Additional Global Positioning System). GPS signals can only be received when there is clear view to the sky, the GPS signal will not penetrate walls or other obstacles. GPS operation uses radio signals from satellites alone. AGPS additionally uses network resources to locate and utilize the satellites in poor signal conditions.


**Note!** It can take 5 to 10 minutes for your location to be found the first time you use the GPS. If your location isn't found, move to another location.

This function sends a text message with the users position to the recipients saved in the number list when an assistance call occurs. The message contains date, time, and the positioning information of the Doro Secure® 580 user. The message is not editable. If no position can be found the message contains the latest known position. The positioning message is sent after the editable assistance message, but before the assistance call sequence starts.

### Message example

- 2014.01.30T 10:00. Map link: <http://www.maps.google.com/maps?q=coordinates>

### Activate position SMS

1. Press and hold .
2. Select **Settings** → **Assistance** → **Position SMS** → **Activate**.
3. Select **On** to enable, or **Off** to disable.
4. Press **OK** to confirm.

### Set poll interval

1. Press and hold .
2. Select **Settings** → **Assistance** → **Position SMS** → **Poll interval**:


- **Manual** to send position when pressing the Assistance button.
- **2 hours** between new search interval.
- **30 minutes** between new search interval.

3. Press **OK** to confirm.

**Tip:** Use Doro Experience® Manager to edit Assistance settings using a computer, see [Assistance, p.18](#).

### Confirm with "0"


Enable this function if there is a risk that the assistance call is answered by a voicemail/answering service. If the receiver doesn't press **0** within 60 seconds the call will be disconnected and the next number in the sequence will be called. If the receiver presses **0** within 60 seconds, the call is confirmed and no further call attempts will be made (assistance sequence interrupted).

1. Press and hold .
2. Select **Settings** → **Assistance** → **Confirm with "0"**.
3. Select **On** to enable, or **Off** to disable.
4. Press **OK** to confirm.

**Tip:** Use Doro Experience® Manager to edit Assistance settings using a computer, see [Assistance, p.18](#).

### Signal type

Select the notification signal type for the assistance sequence.

1. Press and hold .
2. Select **Settings** → **Assistance** → **Signal type:**
  - **High** to use loud signals (default).
  - **Low** to use one low signal.
  - **Silent** no sound indication, like a normal call.
3. Press **OK** to confirm.


**Tip:** Use Doro Experience® Manager to edit Assistance settings using a computer, see [Assistance, p.18](#).

---

## Request position

The request position function allows to receive the current position of the Doro Secure® 580. Only numbers saved in the Number list can request position.

### Numbers list

1. Press and hold .
2. Select **Settings** → **Assistance** → **Request position** → **Number list** → **Empty** → **Add**.
3. Enter number and press **OK** to confirm.
4. Repeat until you have 5 contacts (maximum).

**Tip:** To edit or delete an existing entry, select it and press **Options** → **Edit/Delete**.

### Request position

1. Make sure that the remote user is saved in the **Number list**.
2. Compose a text message with the text **\*#0#** only.
3. Send the message to the Doro Secure® 580 phone number.
4. The replying text messages contains date, time, and the positioning information. Click the link to view position on a map.


**Note!** If the Doro Secure® 580 is powered off, the latest known position will be sent when powered on.

**Tip:** Use Doro Experience® Manager to set request position information using a computer, see [GPS request, p.20](#).

### Safety timer

The safety timer is used to alert the numbers in the number list if not deactivated within a set of time. See [Number list, p.21](#).

### Set time

1. Press and hold .
2. Select **Settings** → **Safety Timer** → **Time**.
3. Use the side buttons **+/-** to enter time, maximum 120 minutes.
4. Press **OK** to confirm.

**Tip:** Use Doro Experience® Manager to set safety timer information using a computer, see [Safety timer, p.19](#).

---

## General information

### Safety instructions



#### CAUTION

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.

The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

### Network services and costs

Your device is approved for use on the WCDMA 900/2100, GSM 900/1800/1900 MHz networks. To use the device, you need a subscription with a service provider.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

### Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

### Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

### Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 cm between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 cm from the medical device.
- Should not carry the phone in a breast pocket.
- Hold the wireless device to the ear opposite the medical device

If you have any reason to suspect that interference is taking place, turn the phone off immediately. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

## Li-ion battery

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.



### WARNING

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

## Protect your hearing

This device has been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards.



### WARNING

Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

---

## Emergency calls

### IMPORTANT!

Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

## Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

## Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.



---

## Warranty

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

## Copyright and other notices

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

vCard is a trademark of the Internet Mail Consortium.

eZiType™ is a trademark of Zi Corporation.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.

microSD is a trademark of SD Card Association.

Java, J2ME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Doro reserves the right to revise this document or withdraw it at any time without prior notice.

Google, Google Maps™, Gmail, Google Calendar, Google Checkout, Hangouts, YouTube, the YouTube logo, Picasa and Android are trademarks or registered trademarks of Google, Inc.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and noncommercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See [www.mpegla.com](http://www.mpegla.com). MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Other product and company names mentioned herein may be the trademarks of their respective owners.

---

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

To the maximum extent permitted by applicable law, under no circumstances shall Doro or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Doro does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Doro does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

## Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

## Specifications

<b>Network:</b>	WCDMA 900/2100, GSM 900/1800/1900 MHz
<b>Dimensions</b>	127 mm x 56 mm x 15 mm
<b>Weight</b>	104 g (including battery)
<b>Battery</b>	3.7 V / 800 mAh Li-ion battery
<b>Operating ambient temperature</b>	Min: 0° C (32° F) Max: 40° C (104° F)
<b>Charging ambient temperature</b>	Min: 0° C (32° F) Max: 40° C (104° F)
<b>Storage temperature</b>	Min: -20° C (-4° F) Max: 60° C (140° F)

## Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.984 W/kg measured over 10 g tissue.

The maximum limit according to ICNIRP is 2.0 W/kg measured over 10 g tissue.

## Declaration of Conformity

Doro hereby declares that Doro Secure® 580 conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2011/65/EC (RoHS). A copy of the Declaration of Conformity is available at [www.doro.com/dofc](http://www.doro.com/dofc).



Secure 580 (1011)

English

Version 1.0

©2014 Doro AB. All rights reserved.

[www.doro.com](http://www.doro.com)

**CE 0700**

REV 12142 – STR 20140611