

Bluetooth APP User Manual

Contents


1.1	Home	4
1.1.1	Device type	4
1.1.2	More setting	4
1.2	Smart battery	5
1.2.1	Search interface.....	5
1.2.2	Basic information.....	5
1.2.2.1	Device Overview Page.....	5
1.2.2.2	Logs Page.....	6
1.2.2.3	Detailed Information Interface.....	6
1.2.3	More.....	7
1.2.3.1	Equipment name.....	7
1.2.3.2	Mac	7
1.2.3.3	Battery software version.....	7
1.3	Communicated connection.....	7
1.3.1	Search interface.....	7
1.3.2	Distribution Network Steps.....	8
1.3.3	System data	9
1.3.3.1	Summary Data Page	9
1.3.3.2	Fault Record Page	10

1.3.3.3	Mode page.....	10
1.4	Air connection	11
1.4.1	Search interface.....	11
1.4.2	Distribution Network Steps.....	12
1.4.3	System data	12
1.4.3.1	Summary Data Page	12
1.4.3.2	Composition page	13
1.5	Communication box.....	14
1.5.1	Search interface.....	14
1.5.2	Bridge	14
1.5.2.1	Summary Data Page	14
1.5.2.2	Mode.....	15
1.5.2.3	Discover.....	15
1.6	Bluetooth module	16
1.6.1	Search interface.....	16
1.6.2	Motive power.....	16
1.6.2.1	Summary data interface	16
1.6.2.2	Logs interface.....	17
1.6.2.3	Configuration Page	17
1.6.2.4	Single Battery Information Page	18

1.1 Home

1.1.1 Device type


Device type	Specific type
Battery	Smart battery
	Air connection
	Wired connection
Communication box	Bridge
External Bluetooth module	Motive power

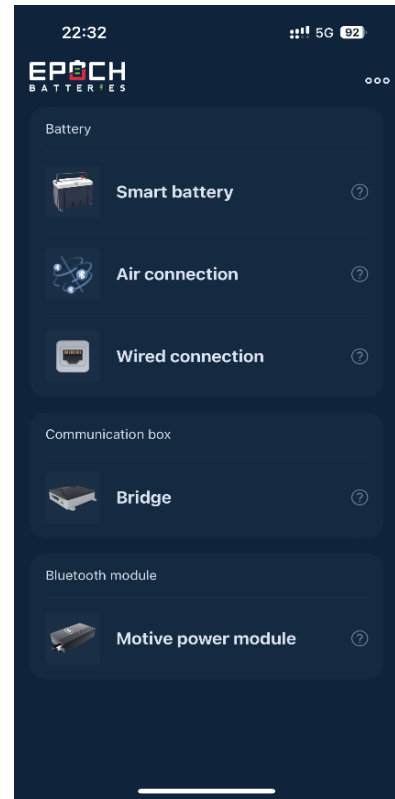

1.1.2 More setting

Company information: Display phone, email, official website, and address information


- 1, Document: APP statement
- 2, language: Including Chinese, English, Germany, France
- 3, Temp. unit: °C & °F
- 4, APP version: APP current version

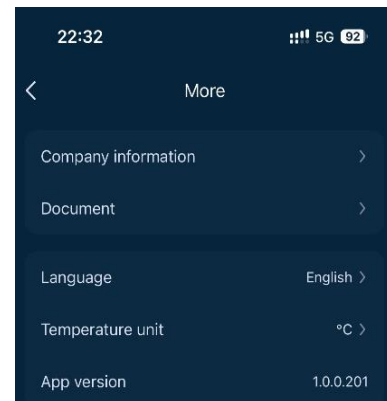

1.2 Smart battery

1.2.1 Search interface

Support fuzzy search device, display Bluetooth name, signal strength, (SOC, address available for T plus series batteries, not for other batteries)

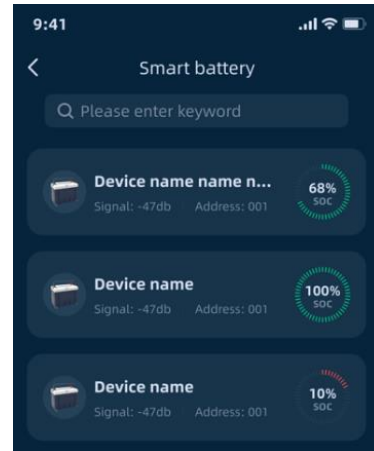

1.2.2 Basic information

1.2.2.1 Device Overview Page

1. The Bluetooth name of the currently connected device;

2. SOC of equipment:

SOC < 20%: icon in red

SOC > 20%: icon is green

3. The health status of the device:

Perfect

Good: Good

4. Current status of the device:

Standby: No identification

Charging: Lightning symbol flashing

During discharge: the lightning sign remains on

Heating: Heating icon




5. The usable time of the device
6. Current: positive charging value, negative discharging value
7. Capacity: Equipment design capacity
8. Voltage: Current voltage of the device
9. Power: $\text{Power} = \text{Voltage} * \text{Current}$
10. Temperature: device average temperature
11. Number of cycles: the number of times the device has been used

1.2.2.2 Logs Page

Right slide or click on "Logs" to enter the fault record page


1. Display the alarm & recovery record of the device

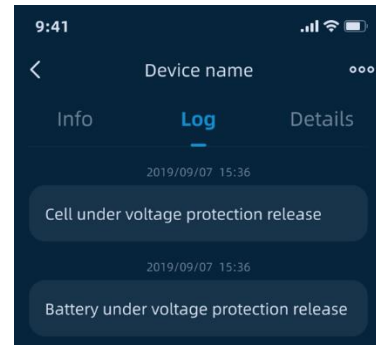

1.2.2.3 Detailed Information Interface


Right slide or click on "Detail" to enter the fault record page

1. Display battery failure
2. Display the voltage of a single battery cell

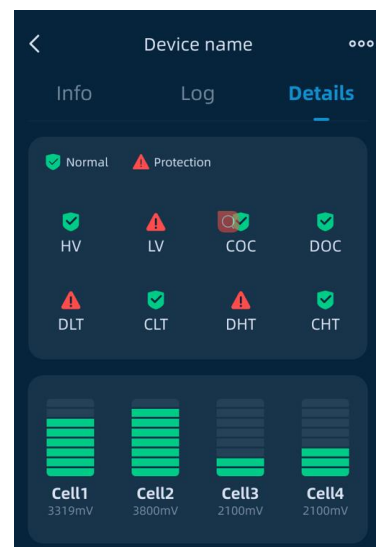

1.2.3 More

Click on "... " in the upper right corner to enter more interfaces

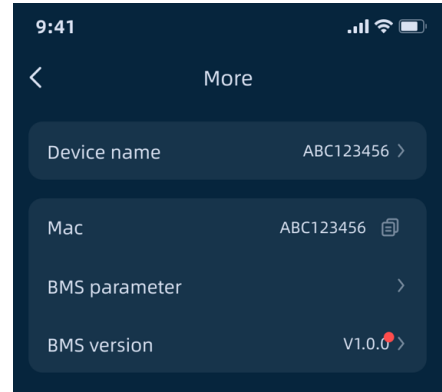

1.2.3.1 Equipment name

Enter password 1234 to modify the device name

1.2.3.2 Mac

Mac: Display the Mac address of current device

1.2.3.3 Battery software version

Display the battery firmware version of the current device. When a new firmware is detected on the device, a red dot will prompt the user to update the firmware.


1.3 Wired connection

1.3.1 Search interface

1. Support for fuzzy search devices

2. System List:

- ① Display connected systems: system name, system voltage, system current
- ② Click "+" to configure the system and save up to 6 systems
- ③ The switch can connect and disconnect the system

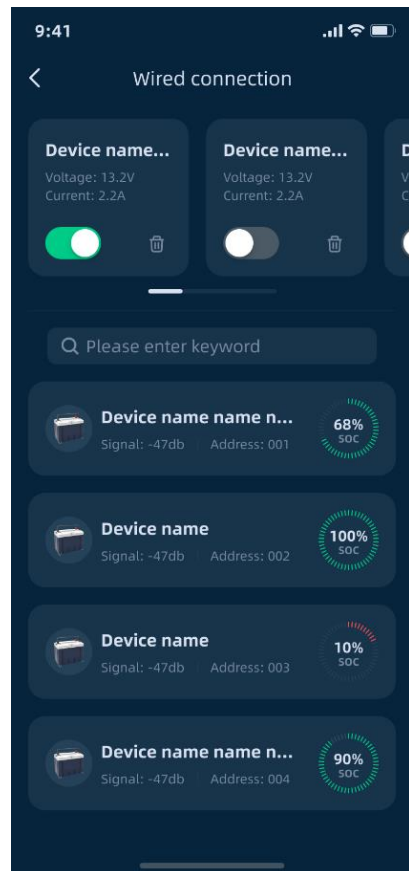

④ Up to 6 systems can be grouped

⑤ Delete key deletes the system

3. Device List

① Display the device Bluetooth name, signal strength, device address, and device SOC that can be searched.

② Connecting any device will automatically determine whether the settings are in the system;

1.3.2 Distribution Network Steps

1. Equipment operation:

① Wiring: When all batteries are turned off,

perform physical serial and parallel connections first;

Select the first battery as the host device, with the host battery's LINK 0UT connected to the LINK IN of

slave 1 and the LINK OUT of slave 1 connected to

the LINK IN of slave 2; Take them one by one; Start


the batteries in sequence;

② Address allocation: After pressing the reset

button on the host battery for 10 s, the device

indicator light starts running. After all the indicator

lights are off, the address allocation is completed;

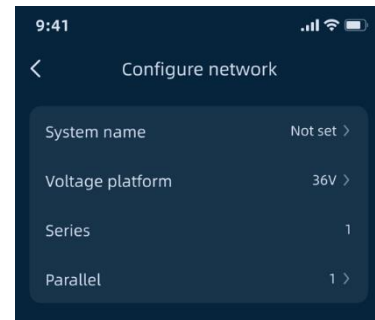

2. APP operation:

① Networking: Open the communication networking interface of the APP, click the “+” sign, set the system name, voltage platform, and serial parallel connection. After setting, click Next

② Connect Host: Click on Connect Host Battery, select the corresponding host, save, and the network distribution is successful; the device indicator light is constantly on

③ 12V system: 16P maximum at 1S, 4P maximum at 2/3/4S

24V system: cannot be connected in series, maximum 4P

36V system: cannot be connected in series, maximum 4P

48V system: cannot be connected in series, maximum 4P

1.3.3 System data

1.3.3.1 Summary Data Page

1. The name of the currently connected device;

2. SOC of equipment

SOC < 20%: icon in red

SOC > 20%: icon is green

3. Current state of the device

Standby: No identification

Charging: Lightning symbol flashing

During discharge: the lightning sign remains on



Heating: Heating icon

4. The usable time of the device

5. Current: positive charging value, negative discharging value

6. Capacity: Equipment design capacity

7. Voltage: Current voltage of the device


8. Temperature: maximum temperature, minimum temperature

9. Serial parallel number: the composition of the system

1.3.3.2 Fault Record Page

1、Right slide or click on "Logs" to enter the fault record page

1. Display the alarm & recovery record of the system and locate which battery alarm is in the system

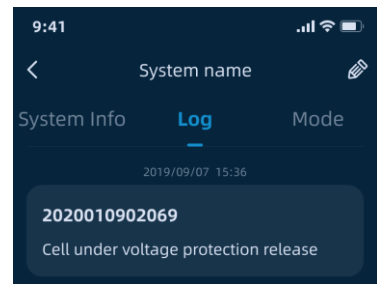


1.3.3.3 Mode page

Right slide or click on "Mode" to enter the page

1. The configuration of the display system: serial parallel relationship;

2. Display the SN code, SOC, and address of each device in the system;

3. Reconfigure: You can reselect the host to save the new system;

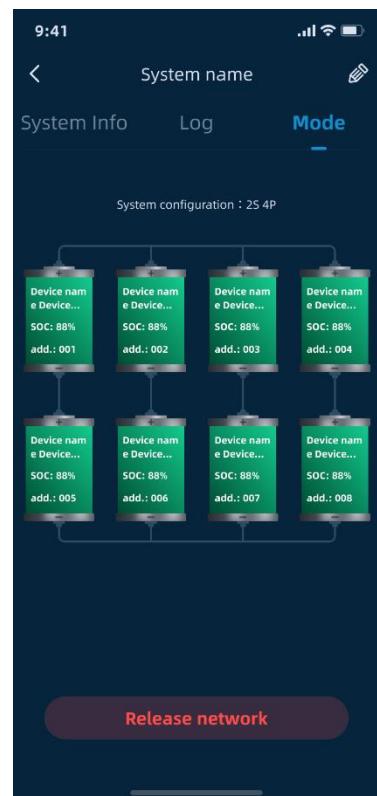

4. Release network: Release the system;

5. Click the single battery icon to enter the single battery information page to view the detailed parameters of the battery;

1.4 Air connection

1.4.1 Search interface

1. Support for fuzzy search devices

2. System List:

① Display saved system: system name, system

voltage, system current

② Click "+" to configure the system and save up to 2

systems

③ The switch can connect and disconnect the system

④ Press frequently to delete the system

3. Device List


① Display the device Bluetooth name, signal strength,

device address, and device SOC that can be searched

for

② Connecting any device will automatically redirect to the single battery



information interface;

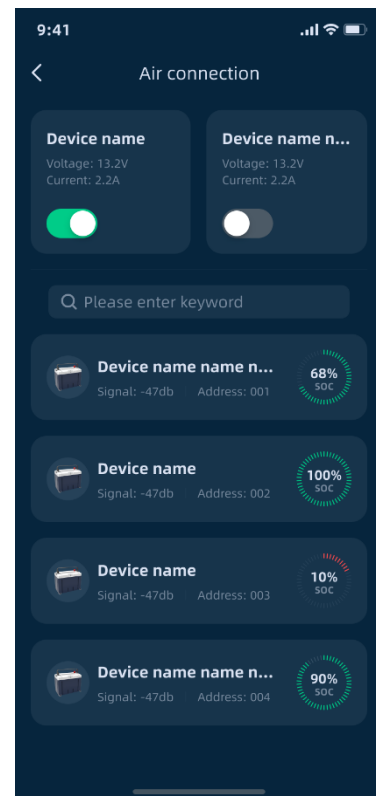

1.4.2 Distribution Network Steps

1. Wiring: The battery is physically connected in series or parallel using power lines;

2. Networking: Open the air networking interface of the APP, click the + sign, set the system name, voltage platform, series or parallel connection, quantity, select the corresponding device Bluetooth name to the corresponding position of the APP, and the networking is successful;

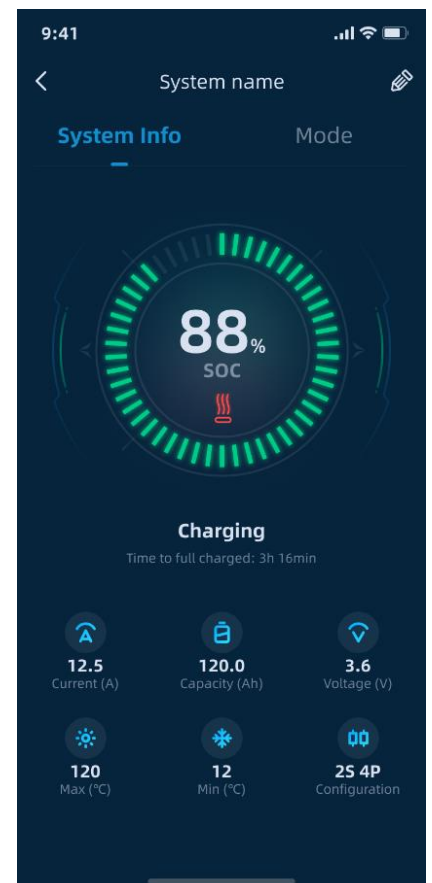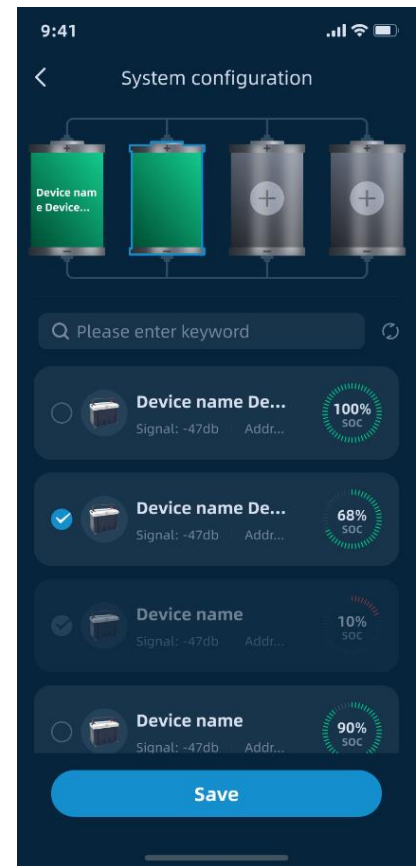

1.4.3 System data

1.4.3.1 Summary Data Page

1. The Bluetooth name of the currently connected device;
2. SOC of equipment

SOC < 20%: icon in red

SOC > 20%: icon is green

2. Current state of the device

Standby: No identification

Charging: Lightning symbol flashing

During discharge: the lightning sign remains on

Heating: Heating icon

3. The usable time of the device

4. Current: positive charging value, negative discharging value

5. Capacity: Equipment design capacity

6. Voltage: Current voltage of the device

7. Temperature: maximum temperature, minimum temperature

8. Serial parallel number: the composition of the system

1.4.3.2 Composition page

Right stroke or click on "Composition Method" to enter the Composition Method page

1. The composition of the display system: serial parallel relationship;

2. Display the SN code, SOC, and address of each device in the system;

3. Reconfigure: You can reconnect the device to save the new system;

4. Unnetworking: Unnetworking the system;




5. Click the single battery icon to enter the single battery information page to view the detailed parameters of the battery;

1.5 Communication box

1.5.1 Search interface

Support fuzzy search device, display Bluetooth name, signal strength, (SOC, address (available for T-series batteries, not for other batteries))

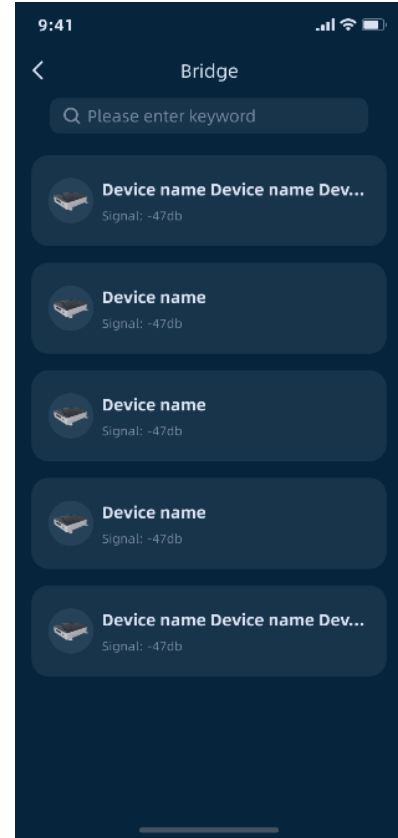

1.5.2 Bridge

1.5.2.1 Summary Data Page

1. The Bluetooth name of the currently connected device;

2. SOC of equipment

SOC < 20%: icon in red

SOC > 20%: icon is green

3. Current state of the device

Standby: No identification



Charging: Lightning symbol flashing

During discharge: the lightning sign remains on

Heating: Heating icon

4. The usable time of the device

5. Current: positive charging value, negative discharging value

6. Capacity: Equipment design capacity

7. Voltage: Current voltage of the device

8. Temperature: maximum temperature, minimum temperature

9. Serial parallel number: the composition of the system


1.5.2.2 Mode

Right stroke or click on "Mode" to enter the page

1. The composition of the display system: serial parallel relationship;

2. Display the Mac address, SOC, and address of each device in the system;


3. Click the single battery icon to enter the single battery information page to view the detailed parameters of the battery;

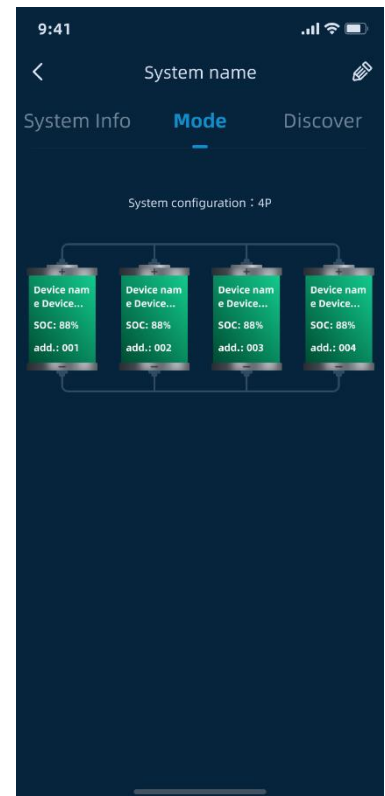

1.5.2.3 Discover

Right slide or click on 'Discover' to enter the discovery page

1) This interface can display and sets the inverter protocol

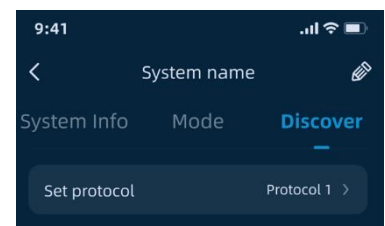


that the current box is compatible with

1.6 Bluetooth module

1.6.1 Search interface

Support fuzzy search device, display Bluetooth name, signal strength

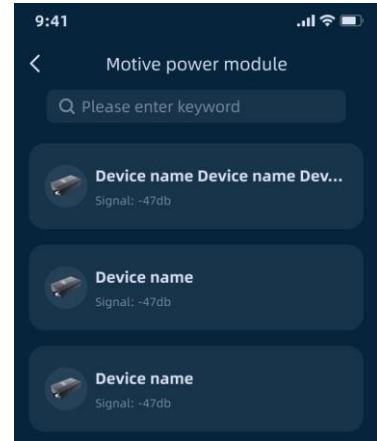

1.6.2 Motive power

1.6.2.1 Summary data interface

1. The Bluetooth name of the currently connected device;

2. SOC of equipment

SOC < 20%: icon in red

SOC > 20%: icon is green

3. Current state of the device

Standby: No identification

Charging: Lightning symbol flashing


During discharge: the lightning sign remains on

Heating: Heating icon

4. The usable time of the device

5. Current: positive charging value, negative

discharging value

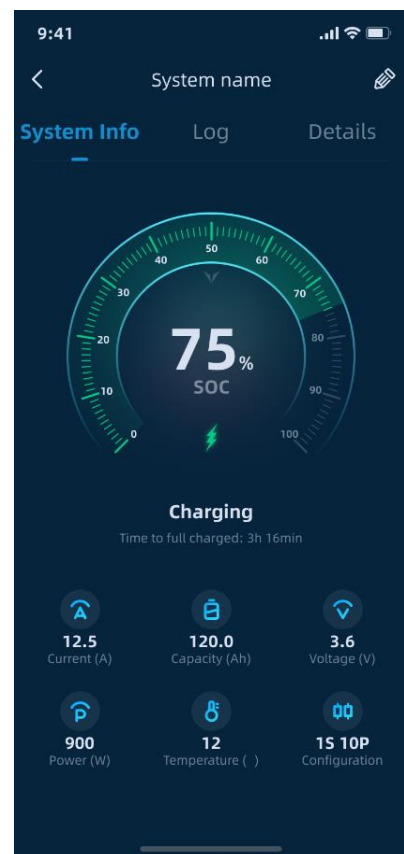


6. Capacity: Equipment design capacity
7. Voltage: Current voltage of the device
8. Temperature: maximum temperature, minimum temperature
9. Serial parallel number: the composition of the system

1.6.2.2 Logs interface

Right slide or click on "Logs" to enter the page

1. Display the alarm recovery record of the system and locate which battery alarm is in the system

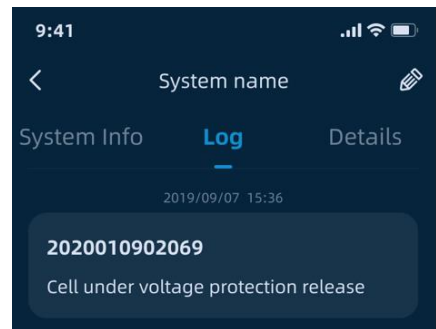

1.6.2.3 Configuration Page

Right slide or click on "Detail" to enter the page

1. The configuration of the display system: serial parallel relationship;
2. Display the SN code, SOC of each device in the system;
3. Click the single battery icon to enter the single battery information interface to view the detailed parameters of the battery



1.6.2.4 Single Battery Information Page

1. SN code of the device

2. SOC of equipment

SOC < 20%: icon in red

SOC > 20%: icon is green

3. Current state of the device

Standby: No identification

Charging: Lightning symbol flashing

During discharge: the lightning sign remains on

Heating: Heating icon

4. The usable time of the device

5. Current: positive charging value, negative

discharging value

6. Capacity: Equipment design capacity

7. Voltage: Current voltage of the device

8. Power: The usage power of the device

9. Temperature: The average temperature of the

device

10. Serial parallel number: the composition of the system

11. Single cell voltage: The voltage parameter of each cell

