

**nutribullet**  
JUICER™



**User guide.**

# Important safeguards.

**Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet Juicer™. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.**

## PERSONAL SAFETY

**WARNING!** This juicer system has sharp blades and moving parts, and is **NOT** intended for use by children who lack experience and knowledge of its safe operation. They require close supervision and thorough instruction on its proper use and safe operation.

Keep the appliance and its cord out of reach of children. Children shall not play with the appliance. To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this juicer.

### **AVOID CONTACT WITH MOVING PARTS.**

Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from the appliance during operation.

**WARNING!** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### **SIEVE AND BLADES ARE SHARP! HANDLE WITH EXTREME CARE!**

Do not touch the small cutting blades/teeth on the bottom/base of the sieve. Keep fingers away from the sharp blade in the feed chute.

Do not leave the appliance unattended when in use.

Hard fruits and vegetables will put excess strain onto the motor if a low speed is selected.

**If there is a spill under, around or onto the juicer itself, disconnect the unit from the power source. Clean with a cloth and allow unit to dry completely before operating.**

Do not push food into the feed chute with your fingers or utensils. Only use the food pusher provided. Do not place your hand or fingers into the feed chute when it is attached to the juicer. If food becomes lodged in the feed chute, use the food pusher provided or another piece of fruit or vegetable to push it down. Turn the motor off and ensure that all moving parts have stopped before disassembling the juicer to remove the remaining pulp.

Do not operate this or any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**Always ensure the juicer is turned OFF after each use. Before disassembling, make sure the sieve has stopped rotating and the motor has completely stopped.**

## PRODUCT SAFETY

**This juicer is only designed to juice fruits and vegetables. Please refer to the juicing guide to determine the correct speed for the fruits and vegetables selected for juicing. Do not use any frozen fruits or vegetables.**

Do not use the juicer without the pulp basin and basin lid attached to the motor base. Please see assembly instructions for proper placement.

**Remove and safely discard any packaging material or promotional labels before using the juicer for the first time.**

**Ensure that the surface where the appliance operates is stable, level, clean and dry.**

**Remove rind from all citrus fruits before juicing.**

Do not juice stone fruit unless pits of the seed stone has been removed.

Always make sure the pulp basin cover is clamped securely in place (with locking handle) before the motor is turned on. Do not unfasten the clamps (locking handle) while the juicer is in operation.

When using this juicer, make sure there is adequate air space around and under it for proper air circulation.

The use of attachments not recommended or sold by NutriBullet® may cause fire, electric shock or injury. This juicer is for household use only. Do not use this juicer for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.

If no speed is selected after 10 minutes, the unit will power off.

If the motor stops for any reason, unplug the power base and let it cool for at least 15 minutes.

Turn the juicer **OFF**, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

Do not let the power cord hang over the edge of a table or counter-top.

Do not let the power cord touch hot surfaces, such as a stove or let it become tangled or knotted.

Regularly inspect the power cord, plug and the actual juicer for any damage.

To protect against fire, electrical shock and injury to persons, do not immerse the juicer, Motor Base, cord or plug in water or any other liquid.

The cleaning brush and sieve are consumable components. Over time, if the unit starts to get louder or make unusual noises or vibration, it indicates that this consumable part may need replacing. The continued use of worn parts may result in part failure and/or personal injury.

Do not use the juicer if the rotating sieve is damaged; if the filter mesh is torn, crinkled or deformed in anyway. For high use users, we recommend replacing your sieve every 12 months or as needed for optimal performance. You can purchase both the sieve and the cleaning brush at [www.bulletbrands.com.au](http://www.bulletbrands.com.au) / [www.bulletbrands.co.nz](http://www.bulletbrands.co.nz) or contact customer service.

Keep the juicer clean. Refer to care and cleaning section for further information.

**WARNING!** Vibration can occur during normal operation.

If extreme vibration occurs, discontinue use and call Customer Service.

Any maintenance other than cleaning should be performed by an authorized electrician. Do not attempt to repair or service the juicer, contact Customer Service for assistance at [www.bulletbrands.com.au](http://www.bulletbrands.com.au) / [www.bulletbrands.co.nz](http://www.bulletbrands.co.nz)

## ! Save these • instructions!

**FOR HOUSEHOLD  
USE ONLY**




# Contents.

- 03 Important safeguards
- 09 What's included
- 10 Assembly guide
- 11 Assembly & use
  - 13 Usage instructions
  - 16 Control dial
  - 17 Juicing tips
- 21 Disassembly
- 23 Care instructions
  - 21 Replacement parts
  - 21 How to store
- 24 NutriBullet Juicer™  
one-year limited warranty
- 27 Warranty registration


# What's included.



800 WATT MOTOR  
BASE WITH  
LOCKING HANDLE

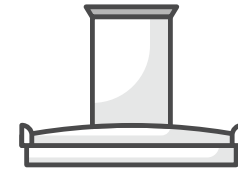


PULP BASIN COVER  
WITH 76 MM  
FEED CHUTE



FOOD PUSHER




1.5L PULP BASIN WITH  
NO-DRIP SPOUT

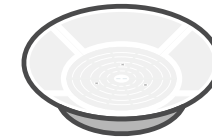

STAINLESS STEEL SIEVE



800 ML JUICE PITCHER

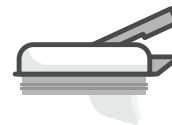


JUICE PITCHER LID  
WITH FROTH SEPARATOR




CLEANING BRUSH

Thank you for purchasing the NutriBullet Juicer™.


# Assembly guide.

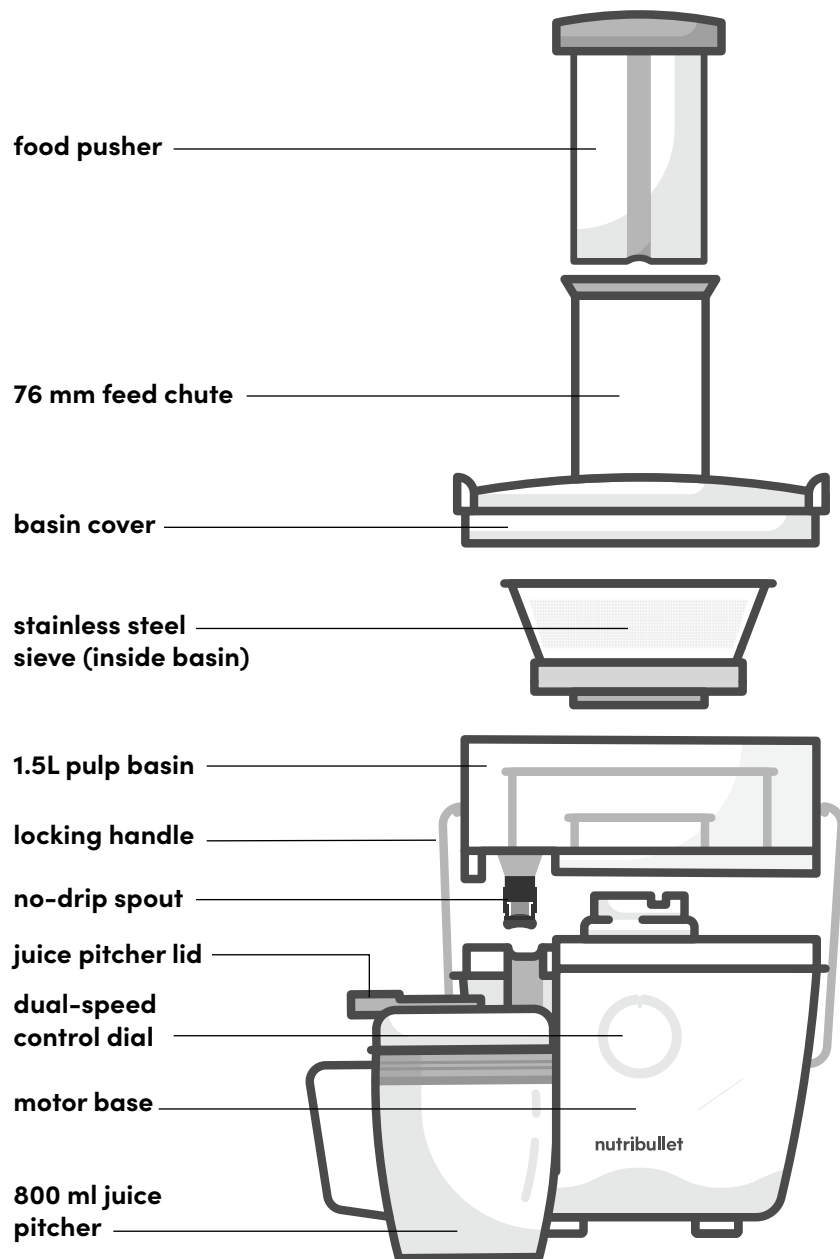


# Assembly.

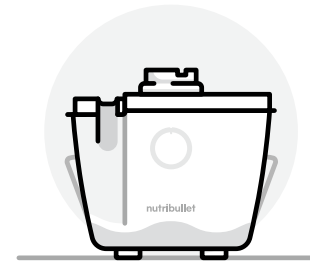


- 1 Place the **Motor Base** on a dry, level counter top. Ensure the dial is set to the "OFF" position and the unit is unplugged.

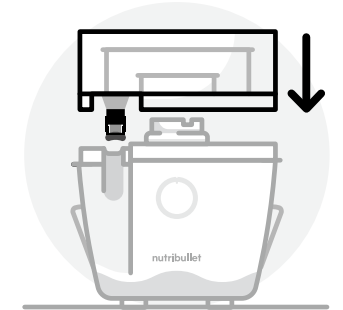


- 2 Place the **Pulp Basin** on top of the Motor Base. Align the **Pulp Basin** with the Motor Base so that the spout is aligned with the dimpled side of the Motor Base.

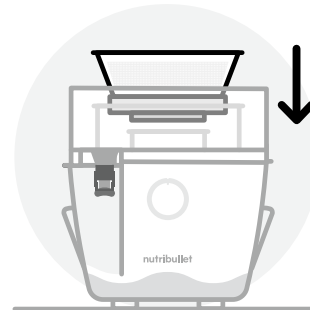

- 3 Align the **Sieve** with the motor drive coupling and push down until it clicks into place. Handle the **Sieve** by gripping the top edges being careful not to touch the sharp teeth on the base of the **Sieve**. Ensure the **Sieve** is properly seated in place and securely inside of the Pulp Basin.

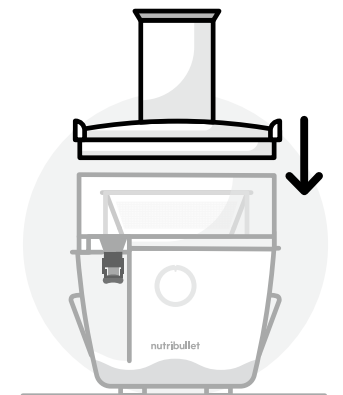


- 4 Place the **Basin Cover** over the Sieve and Pulp Basin. The side "ears" on the **Basin Cover** should align with the "ears" on the sides of the Pulp Basin.

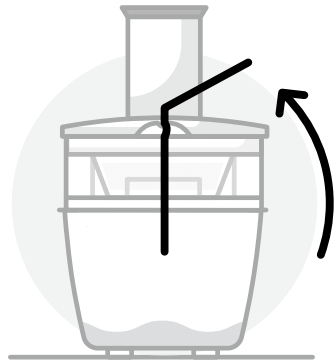

- 5** Raise the **Locking Handle** and move it into the "ears" on each side of the Basin Cover. The **Locking Handle** should be in a vertical position and locked into place.

**NOTE:** if the **Locking Handle** is not securely in place, the juicer will not power on.

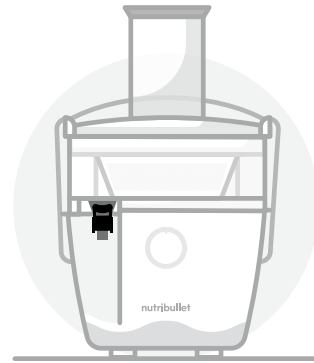

- 6** Swing the **No-Drip Spout** cover up vertically, so that it is no longer covering the juice spout.



- 7** Place the **Juice Pitcher Lid** on top of the Juice Pitcher and open the locking lid latch.




- 8** Slightly angle the **Juice Pitcher** and place it under the juice spout. Align the spout with the hole in the **Juice Pitcher Lid** and level out the **Juice Pitcher**. It will fit snugly into the spout to hold it in place.


## Usage instructions.



- 1** Gather all of your desired ingredients and wash them. Prepare the ingredients to be juiced by cutting, skinning, or removing the rind, stems, or stone seeds.

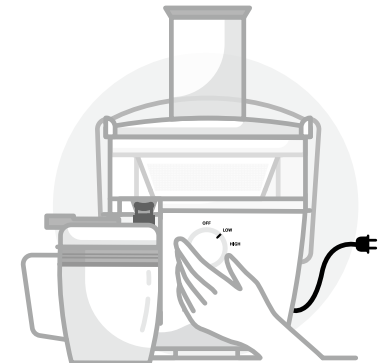


- 2** After the juicer is fully assembled, plug the power cord into an outlet. Use the **Dual-Speed Control Dial** to select a speed to begin juicing. You can toggle between speeds as desired depending on the type of produce. (Refer to the chart on page 16 for recommended speeds for different types of produce).

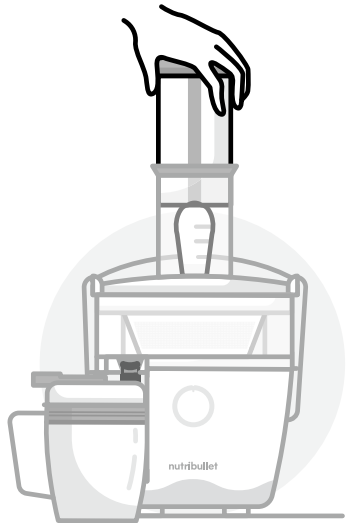


- 3** While the motor is running, begin gently guiding your ingredients into the feed chute using the **Food Pusher**.

**NOTE:** Do not use excess force or speed when pushing food down with the **Food Pusher**, as it will not allow for maximum juice yield.

**WARNING:** Never use hands/ fingers or other tools to push food down the feed chute into the Sieve. Only the **Food Pusher** should be used to push down ingredients.

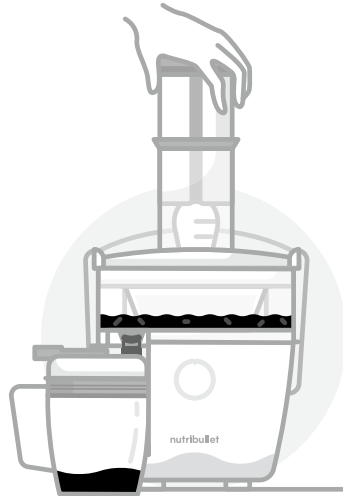

- 4** Juice will begin to flow out of the spout and into the **Juice Pitcher**, while the pulp will be separated and stored in the **Pulp Basin**.

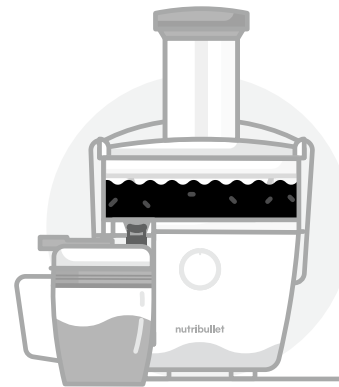

- 5** When the **Pulp Basin** is completely full, it must be emptied before you continue juicing. See disassembly instructions.




- 6** Always be sure to turn the **Dual-Speed Control Dial** to the "OFF" position and wait for the **Sieve** to stop spinning before removing the **Juice Pitcher** from under the spout. Unplug the unit after each use.



- 7** Remove the **Juice Pitcher** from under the spout. You may close the **Juice Pitcher Lid** and store juice in the **Juice Pitcher** if desired.

**NOTE:** To do this, you'll first need to tip the **Juice Pitcher** forward at a slight angle, so that the lid's large hole has some separation from the spout, then you can slide out the pitcher. This is the reverse of what you did during assembly.

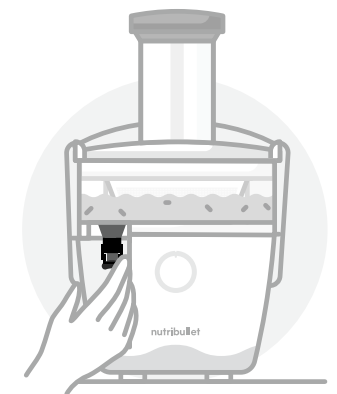


- 8** Immediately move the **No-Drip Spout** cover downward over the spout to avoid any residual drips onto the unit or onto the surface below the juicer.

**TIP:** We recommend using your left hand to pull the **Juice Pitcher** away, while using your right hand to swing the **No-Drip Spout** cover down and over the spout opening.




# Control dial.


## DUAL-SPEED CONTROL DIAL & JUICING SETTINGS

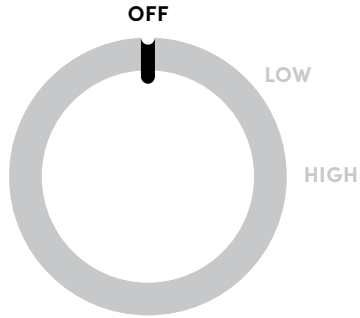

**OFF:**  
Power is **OFF**, the juicer is not running.

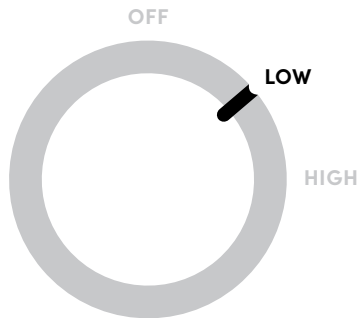

**LOW:**  
Best for juicing softer fruits and vegetables.

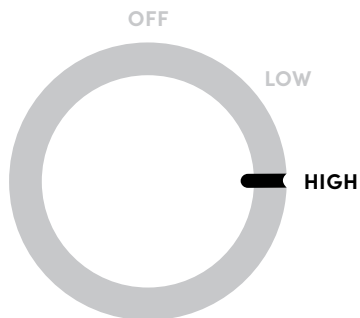

**HIGH:**  
Best for harder produce like carrots and beets.

# Juicing tips.

## JUICING SPEED SELECTION GUIDE

INGREDIENTS	SPEEDS	SEASONS
Apple	High	All Year
Beets	High	Spring / Summer
Blueberry	High	Winter / Spring / Summer
Broccoli	High	Autumn / Winter / Spring
Brussels Sprouts	High	All Year
Cabbage	Low	Spring / Summer / Autumn
Carrots	High	Autumn / Winter / Spring
Cauliflower	High	Spring / Summer
Celery	High	All Year
Cucumber	Low	All Year
Fennel	High	All Year
Ginger	High	All Year
Grapes	Low	Spring / Summer
Grapefruit	Low	All Year
Kale	High	All Year
Kiwi	Low	All Year
Lemon	Low	All Year
Lime	Low	All Year
Melons (all)	Low	Summer
Orange	High	Winter
Peaches	Low	Spring / Summer
Pears	High	Autumn / Winter
Pineapple	High	Spring / Summer
Plums	High	Summer / Autumn
Raspberries	Low	Summer / Autumn
Spinach	Low	Spring / Summer
Sweet Potato (raw)	High	Summer / Autumn
Tomatoes	Low	All Year

## VITAMINS / NUTRIENTS

source of quercetin

excellent source of folate

good source of vitamin C

high in vitamin C, high in folate, good source of potassium

high in vitamin C, good source of folate

high in vitamin C

excellent source of vitamin A, good source of vitamin C

high in vitamin C, good source of folate

good source of vitamin C, good source of vitamin A

good source of vitamin C

good source of vitamin C and potassium

contains vitamin C, magnesium, and potassium

good source of vitamin K

high in vitamin A, high in vitamin C

excellent source of vitamin A and vitamin C, good source of calcium and potassium

high in vitamin C, good source of potassium and vitamin E

high in vitamin C

high in vitamin C

high in vitamin A, high in vitamin C

high in vitamin C

good source of vitamin C

good source of vitamin C

high in vitamin C

good source of vitamin C

high in vitamin C

high in vitamin A, vitamin C, iron, and folate, good source of magnesium

good source of potassium, high in vitamin A and vitamin C

high in vitamin A, high in vitamin C, good source of potassium

## PROPER PRODUCE PREP

### Prepare fruit and veggies before inserting them into the juicer:

- Properly clean produce (rinse with lukewarm water, produce wash, or water and apple cider vinegar).
- Peel or remove skin as needed, and chop food items down to the right size – just small enough to fit easily into the feed chute, without having to force the pieces down with the **Food Pusher**.
- Remove rind from all citrus fruits before juicing.
- Remove large pits and seeds from stone fruits before juicing.

## FEED CHUTE

- Never place your hand or fingers into the feed chute when it is attached to the appliance.
- Always start the juicer before adding food to the feed chute. The juicer must be running when items enter it.
- Do not overload the feed chute. Items must be added gradually, at a pace the juicer can keep up with.
- Use only the provided **Food Pusher** to push food into the feed chute. Never use fingers, utensils, or any other apparatus.
- Never use excessive force to push items into the feed chute.
- When juicing, ensure all produce has moved through the feed chute and into the **Sieve** before adding more.
- If any food gets stuck in the feed chute, use the **Food Pusher** to move it down the chute and into the **Sieve**.

# Disassembly.

## PROPER PRODUCE PREP

Prepare fruit and veggies before inserting them into the juicer:

- Properly clean produce (rinse with lukewarm water, produce wash, or water and apple cider vinegar).
- Peel or remove skin as needed, and chop food items down to the right size – just small enough to fit easily into the feed chute, without having to force the pieces down with the **Food Pusher**.
- Remove rind from all citrus fruits before juicing.
- Remove large pits and


seeds from stone fruits before juicing.

## FEED CHUTE

- Never place your hand or fingers into the feed chute when it is attached to the appliance.
- Always start the juicer before adding food to the feed chute. The juicer must be running when items enter it.
- Do not overload the feed chute. Items must be added gradually, at a pace the juicer can keep up with.
- Use only the provided **Food Pusher** to push food into the feed chute. Never use fingers, utensils, or any other apparatus.
- Never use excessive force to push items into the feed chute.
- When juicing, ensure all produce has moved through the feed chute and into the **Sieve** before adding more.
- If any food gets stuck in the feed chute, use the **Food Pusher** to move it down the chute and into the **Sieve**.




- 1 Ensure the unit is powered down, turned "OFF," and unplugged.

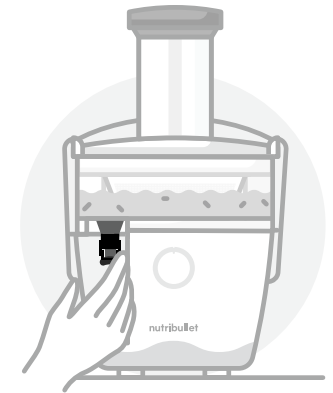

- 2 Remove the pitcher from under the spout. To prevent drips use the **No-Drip Spout** cover to close the juice spout.




- 3 Unlock the **Locking Handle** from the **Basin Cover** by pulling the handle backward out of the "ears" on either side of the **Basin Cover**. Move the handle down.

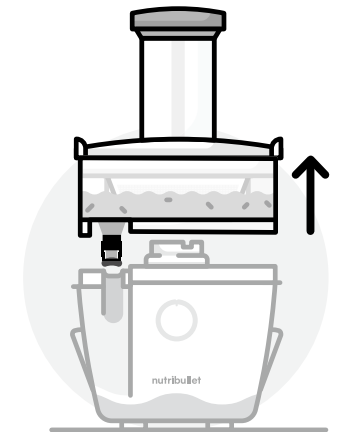


- 4 Remove the **Pulp Basin** from the Motor Base by pulling upwards with the **Basin Cover** and **Sieve** still in place, and take it directly to your sink.


# Care & maintenance.

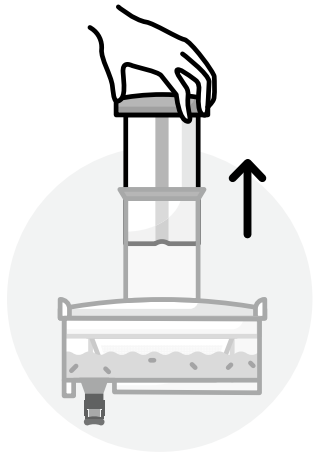


- 5 Remove the **Food Pusher** by lifting it out of the feed chute.

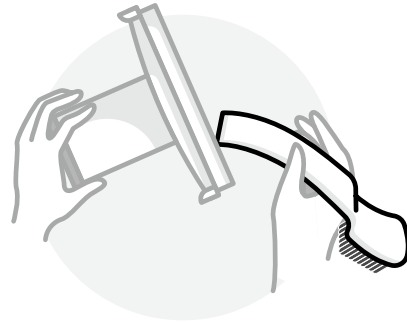

- 6 Lift the Basin Cover vertically off of the Pulp Basin and remove any pulp from the inside of the cover. You may use the flat end of the **Cleaning Brush** to scrape pulp off of the cover.

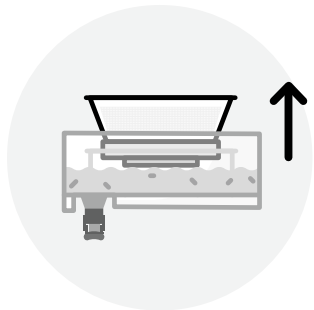

- 7 Gently lift the **Sieve** vertically out of the center of the Pulp Basin. Clean the **Sieve** right away (see care instructions).

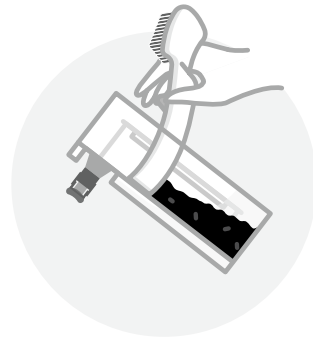

- 8 Empty the **Pulp Basin**. Use the flat end of the **Cleaning Brush** to easily scrape out the pulp and set it aside for use in other recipes or composting. You can also empty the pulp into your waste bin or compost.

**Cleaning the NutriBullet Juicer™ is quick and easy. All components except for the Food Pusher and Motor Base are dishwasher safe. Read on for some cleaning tips and best practices.**

- 1 Always ensure the **Motor Base** is unplugged before you begin assembly, disassembly, cleaning or storage of the unit.
- 2 Once the **Pulp Basin** is emptied, rinse all parts under running water.
- 3 Use the **Cleaning Brush** to scrub the **Sieve** under running water. Be sure to properly clean the **Sieve** every time you juice, as minerals from fruits and vegetables can cause build-up in the **Sieve** which may prohibit maximum juice extraction.

**WARNING:** Always use precaution when cleaning the **Sieve**, as it contains sharp blade teeth on the flat disc part.

**TIP:** Always clean the **Sieve** as soon as possible after juicing using the **Cleaning Brush**. If allowed to sit, pulp will dry on the **Sieve** and it will become more difficult to scrub blocked holes. If this happens, be sure to allow the **Sieve** to soak in hot water for 30 minutes.

- 4 All Juicer components except the **Motor Base** are dishwasher safe. You may also hand wash with warm soapy water.

**TIP:** Do not use the Sterilize cycle on your dishwasher to clean your juicer as it may cause parts to deform.

- 5 Wipe down **Motor Base** with a clean, damp cloth.

**WARNING:** Never submerge **Motor Base** into water or other liquid.

# Juice & unit storage.

The **Juice Pitcher** stores up to 800 ml. Make sure to store the pitcher upright in your refrigerator, with lid tightly sealed, latch closed, and nothing atop the lid.

**For best taste, consume fresh juice and pulp within 48 hours of juicing.**

**Do not place anything on top of the Pitcher Lid when storing in the refrigerator.**

**Store remaining pieces of the unit in a safe place where they will not be damaged and won't cause harm as some pieces are sharp!**

# Troubleshooting guide.

- 1 PROBLEM:** The power button flashes three times and then remains illuminated when I select a speed.  
**SOLUTION:** This means that the unit is not properly assembled. Ensure the **Pulp Basin** is properly seated on top of the **Motor Base**, and the **Locking Handle** is locked into place.
- 2 PROBLEM:** The juicer stopped in the middle of juicing, and the power button flashed.  
**SOLUTION:** Ensure the **Locking Handle** is securely locked into place.
- 3 PROBLEM:** The juicer stopped in the middle of juicing, and the power button remains illuminated.  
**SOLUTION:** You have exceeded 10 minutes of continuous running time. Unplug the juicer and keep the unit off for 15 minutes before continuing use.
- 4 PROBLEM:** The juicer has stopped running, and all lights flashed three times.  
**SOLUTION:** The juicer has overheated. Unplug the unit and allow it to cool down for 15 minutes before continuing use.

---

# Replacement parts.

To order additional parts and accessories, please visit our website at [bulletbrands.com.au](http://bulletbrands.com.au) / [bulletbrands.co.nz](http://bulletbrands.co.nz).

# one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:**  
We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:**  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:**

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

**YOUR WARRANTY DOES NOT COVER:**

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

**This warranty does not replace but is in addition to your statutory rights.**

**This warranty does not apply to accessories supplied with the item.**

**This warranty applies only to the original purchaser and may not be transferred.**

**Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.**

**PLEASE NOTE:**

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

NutriBullet, LLC | All rights reserved.  
NutriBullet and the NutriBullet logo are trademarks of  
CapBran Holdings, LLC registered in the U.S.A. and worldwide.

**220-240VAC 50-60Hz 800W**

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**201020\_NBJ07100 (NBj-100)**