

Electrocorder EC-3A-RS

User Instructions



WARNING!

THIS PRODUCT MUST ONLY BE USED BY SUITABLY QUALIFIED PERSONNEL: DO NOT ATTEMPT TO USE THIS PRODUCT UNLESS YOU ARE QUALIFIED TO DO SO. HIGH VOLTAGES THAT CAUSE BURNS AND LETHAL SHOCKS ARE PRESENT DURING VOLTAGE MONITORING AND RECORDING!

General Description

Thank you for purchasing the Electrocorder EC-3A-RS, we hope you enjoy using this product, this package consists of six main components:

1. Electrocorder logger (1)

The logging unit is housed in a strong ABS case.

2. Carry Case (1)

The ABS case of the logging unit is in turn contained within a soft carry case.

3. Rogowski Coil (3)

Current input sensor.

4. USB Lead (1)

A USB lead is provided to connect between the logger and any PC with a USB port.

5. Software (download free from www.acksen.com)

Electrosoft software is provided free.

6. 12V Power Supply Unit (1)

PSU, 2.1mm jack, positive core, negative outer.

7. User Instructions (1)

These User Instructions are provided to give guidance, to qualified personnel.

PC Hardware requirements

To run Electrosoft you must have certain hardware and software installed on your computer. The system requirements include:-

An IBM® - compatible Personal Computer with a minimum of an 80486 processor.

A hard disk, with at least 5MB spare capacity.

One 1.44MB 3.5" disk drive.

An SVGA 1024 x 768 or higher resolution display.

At least 16MB of random access memory (RAM).

A mouse.

Microsoft® Windows 9X, NT4.0, 2K, XP, Vista, Windows 7, 8, 10.

Installing Electrosoft

When you run the Setup program, it will automatically set a path on your hard disk and install Electrosoft there.

In Windows 9X, NT4.0, 2000, XP the Setup program will create an option in your Programs menu, which is in the Start menu.

Step 1: To install Electrosoft; run Setup.

For Windows 9X, NT4.0, 2000, XP, Vista, Windows 7, 8, 10

Step 2: From the Taskbar menu click Start and choose Run. The Run dialogue box appears.

Step 3: Type a:\Setup. Click OK. Follow the instructions on the screen to install Electrosoft - you will be alerted when the installation is complete.

Getting started

In order to set-up an Electrocorder, you must first run Electrosoft on your PC. Then connect an Electrocorder to the PC serial port using the correct (supplied) serial lead. In

Electrosoft, use the 'Setup' dialog box window and input the details of the location to be monitored.

The recording mode is set by default to commence recording when the Electrocorder Start button is pressed and to stop recording when the memory is full.

Select the recording method - two options are available:

1. Record to EN50160 standard - the Electrocorder will take 16 samples per channel per cycle for 10 minutes. It then averages the samples taken over that 10 minute period and stores the TRMS values as well as single Max and Min values for each channel. In this mode the unit will record for approximately 50 days until the memory is full.

2. Take a sample over a discrete period - the Electrocorder can be set to take an average over a selected period, 1 (one) sec to 60 (sixty) min and also record the max and min during each period. For example, a unit set to record every 1 (one) second will record for approximately 2 hours. A unit set to record every 12 seconds will record for approximately 1 day. A unit set to record every 60 (sixty) minutes will record for approximately 300 days.

When the required information has been input, download to the connected Electrocorder by clicking the 'Write Setup' icon. The Electrocorder is now ready to monitor current.

DUAL RANGE

The range can only be changed when the logger has started logging. The presently selected range will automatically be displayed if an external 12Vdc power supply is connected to the logger. If no external power is connected pressing the "?" button will display the range, either 5A to 400A or 30A to 3kA. To change the range, press and hold the "?" button and press the adjacent up/down arrow, this will toggle the range. Please note that the range should be set once at the beginning of recording and not changed, the logger does not record which range it was in so you should make note of the range used.

When the Electrocorder is recording a flashing green light will show, when it has completed recording, the green light will extinguish and if an external PSU is being used then a steady red light will appear on the unit, otherwise the red will not light, so completion is signified by the absence of a flashing green. The database contained within Electrosoft will also advise that the unit has completed recording and is ready to be collected. To download the recorded data connect the Electrocorder to the PC USB port and click the 'Read Setup' icon. The recorded data is displayed for analysis.

When you read the data via the software you will be asked to select the range used during logging, select either 400A or 3kA range. If you select the wrong range, the readings will be incorrect. If this happens, use the "select scale" button on the main graph window to change to the correct range/scale. You may even do this with data that has already been saved to file.

This document is produced in conjunction with the Help file contained in Electrosoft, which contains a detailed explanation of all features and contains information, which should be studied prior to using this product.

When installed, make a note of the serial or COM port number the converter has been assigned to and when you run Electrosoft, select the appropriate serial port or COM port number.



SAFETY TIPS

Current inputs are labelled 'A1', 'A2' & 'A3'.

Prior to connection of the logger to any system:-

1) Electrically isolate the conductors to which you wish to connect.

2) Current input sensor must only be used around insulated conductors.

3) Using insulating gloves, connect the each current sensor in turn around each current carrying conductor.

4) The sensor leads are double layer, with a copper braid. Should the lead become scuffed and/or damaged, the white inner braid could become visible through the black outer layer. If this is the case seek further advice on the condition of the unit and whether it may be used safely.

5) Do not connect the PC while the current sensors are around conductors, unless the conductors are heavily insulated.

Features & Benefits of the EC-3A-RS Logger System

Feature	Benefit
Unit is small and lightweight.	Easy to install
Easy to use Windows software.	Can be used by non-technical staff.
Electrosoft contains internal database.	Allows effective management of distributed Electrocoders.
True RMS current measurement.	A true reading.
Soft carry case, with handle	Allows you to keep and carry all the leads etc. together with the logger.

Conductor Colour Codes Around the World

Phase	IEC Colour Code	Aus/NZ Colour Code	US Color Code	Canadian Color Code
A1	Brown	Red	Black	Red
B2	Black	White	Red	Black
C3	Grey	Blue	Blue	Blue
N (Neutral)	Blue	Black	White, grey	White
G (Ground/Earth)	Yellow/Green Stripe	Yell/Green Stripe	Green, Yell/Green	Green, bare copper

Inputs and Connections on Various Systems

Colour and Input Terminal	Single Phase (1-Wire)	Single Phase (2-Wire)	Single Phase (3-Wire)
Brown (A1)	X (L1)	X (L1)	X (L1)
Black (A2)		X (G/E)	X (L2)
Grey (A3)			X (L3)

Single Phase Systems (logging current in 'L1')

Simply connect sensor A1 around the 'L1 conductor' and press the start button.

Single Phase Systems (logging current in 'L1' and 'G/E')


Connect sensor A1 around the 'L1 conductor', A2 sensor around the Ground or Earth conductor and press the start button.

Single Phase 3 Wire Systems (logging current in 'L1', 'L2' and 'L3')

Connect sensor A1 around the 'L1 conductor', A2 sensor around the 'L2 conductor' and A3 around 'L3 conductor' then press the start button.

Power Measurement (power in 'L1', 'L2' and 'L3')

Connect sensor A1 around the 'L1 conductor', A2 sensor around the 'L2 conductor' and A3 around 'L3 conductor' then press the start button. When logging is complete, upload the data to a PC using Electrosoft. Now click on the Power Tab and input the nominal voltage on the conductors. The graphs shown represent the power.

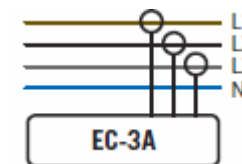

Technical Specifications

TECHNICAL SPECIFICATIONS (subject to change without notice)	
Current Range	5A to 400A or 30A to 3kA.
Current Measurement Accuracy	5A – 400A –5% +/-1A on 400A range 30A – 3kA –5% +/-1A on 3kA range
Sampling frequency	16 samples per cycle 800Hz @ 50Hz or 960Hz @ 60Hz
Data recorded	Average current, max & min current-cycle-value during the averaging period
Memory capacity	192kB able to record 32,000 current levels per channel.
Memory type	Non-volatile SEEPROM
Memory - averaging period & duration	1 sec to 60 mins (1sec. avg gives 2 hrs of logging, 60min. avg gives 300 days of logging)
Real-time clock accuracy	Greater than 0.001%
External PSU (nominal 12Vdc)	12Vdc @ 100mA. 2.1 or 2.5mm jack, core is +ve (12Vdc) and outer is common (0V)
Battery life (without external PSU)	100 days, 14 weeks.
Battery life (with external PSU)	Unlimited, all power is taken from external PSU.
Battery Type	Unit contains six 1.5V Alkaline batteries (C-Cells).
Communications Interface type	USB
Electrosoft Software	Win 2K, NT4.0, XP, Vista & Win 7 Win 8.
Environmental (temp & sealing)	-10C to +40C or +14°F to +104°F – IP65 for indoor or protected environment!
Dimensions & Weight	Metric: 250 x 140 x 100mm & 1kg Imperial: 10" x 7" x 5" & 2lb

Calibration

Each unit is individually calibrated during testing.

Battery life (while connected)

Unlimited - mains powered (via 12Vdc PSU) and battery back up.

Battery life (while unconnected to mains)

The 1.5V Alkaline batteries should last for at least 2,000 hours (3 months),



Caution

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not recharge, disassemble, heat above 100°C or incinerate. Replace with a 1.5V Alkaline battery C-Cells. Use of another battery may present a risk of fire or explosion. Dispose of used batteries promptly. Check for signs of battery (electrolyte) leakage. If leakage has occurred, the PCB must be cleaned in an approved manner by a competent (trained) person. Keep away from children.

Maintenance

Prior to each use of the logger check the Electrocarder casing for signs of damage (cracks, broken or loose parts) or misuse. Check the leads for any signs of damage, ensure the outer insulation later is not broken. If the unit is damaged in any way it must **NOT** be used and should be returned to the supplier. The unit must not be used for any other purpose than for that recommended by the manufacturer. The unit must not be submerged in any liquid.

Cleaning

Wipe the outside of the case with a clean cloth dampened with IPA (Isopropyl Alcohol).

Warranty

All Acksen products carry a minimum 1 year's warranty covering manufacturing defects and component failures. The device contains no user-serviceable parts and as such should only be repaired by skilled and authorised personnel. Failure to comply could result in unsafe operation and should not be attempted under any circumstances. Contact below for a list of approved service agents.

Note: Any unauthorised repair or adjustment will automatically render the warranty invalid.

Repair and spare parts

Acksen Ltd.
28 Station Road
Whiteabbey
Newtownabbey
Co. Antrim BT37 0AW
United Kingdom
Or an approved repair company.

Returning a product for repair

If returning a product to the manufacturer for repair, it should be sent freight pre-paid to the appropriate address. A copy of the Invoice and of the packing note should be sent simultaneously by airmail to expedite clearance through Customs. A repair estimate showing freight return and other charges will be submitted to the sender, if required, before work on the device commences.

WEEE

For EU customers Acksen Ltd offer a product take-back service. For customers within the European Union (only) and products manufactured or sold by us; when those products reach the end of their life, simply send them back to us at your expense, we will dispose of them according to the relevant legislation. WEEE Reg. No. WEE/DD2117VU.

acksen >

Web: www.acksen.com
Email: sales@acksen.com

Part No: EC-3A-UI-En.PDF