

SAVOTTA

CARRYING SYSTEM
ADJUSTMENT MANUAL



Thank you and congratulations for choosing a Savotta rucksack!

Take some time to properly adjust your pack, this will provide the best possible carrying comfort. Savotta rucksacks feature an adjustable carrying system, this enables you to adjust the pack to fit your back perfectly.

Start by adjusting the back length. Measure the distance from the top of your hip bone to the top of your shoulder muscle. This measurement should be the same as the distance from the middle of the hip belt to the point where the shoulder harness starts to separate (measurement A). The shoulder harness and hip belt can be moved up and down by loosening and tightening the turnbuckles/tension cord (and buckle 1).

Lift the rucksack up on your back. The hip belt should not squeeze your stomach nor hang on your buttocks, it should be centered on the top of your hip bone. Adjust the shoulder harness to evenly distribute the weight on both shoulders and hip (buckles 2).

On-the-go adjustments can be made by adjusting the load lifters (buckles 3). Tighten them to pull the top of the pack closer and loosen them to allow it to hang further away. Example: when skiing you should always tighten the load lifters to prevent wobbling and swinging.

Top arch


The top arch is included with certain Savotta rucksacks. The top arch is attached using conical sockets and an adjustable collar. Loosen the collar (screw 6) and adjust the top arch to the desired height, tighten the screw to lock the adjustment. The conical sockets can sometimes stick real tight but will come loose by applying moderate force upwards against the arch, we recommend a smack with your fist.

The shoulder harness can be adjusted for wider shoulders by moving the load lifters outwards (buckle 5). We recommend trying both settings to find out which one is right for you.

To rest your shoulders on the go just release the load lifters (buckles 3). This will move most of the weight off your shoulders and onto your hips.

If your hip tires out just pull the load lifters tight and and loosen the hip belt (buckle 4) to move the weight of the pack to your shoulders.


A

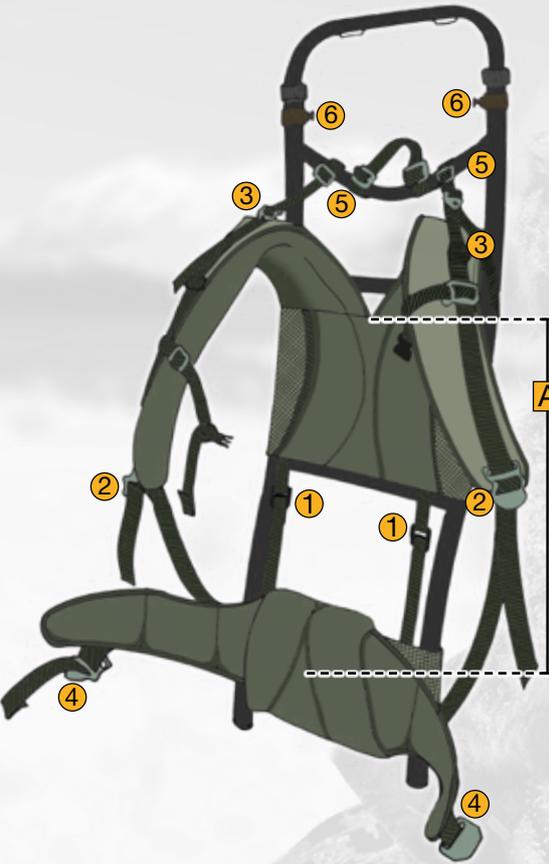

Cleaning

Use a soft brush or sponge, water and mild soap to remove dirt and stains. Rinse with water and dry thoroughly.

Savotta is a design protected and registered ® trademark.

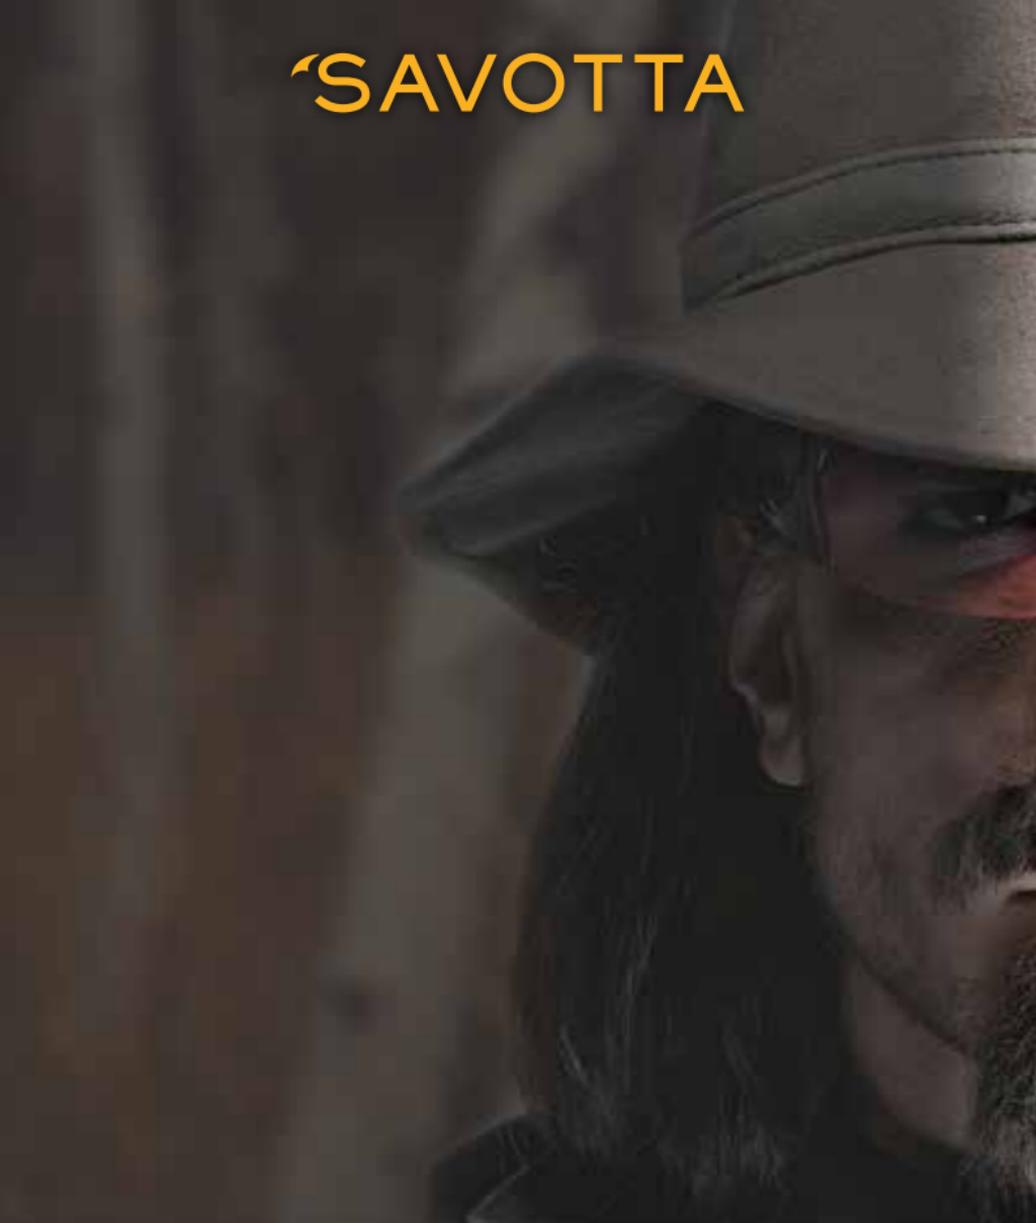

SAVOTTA

www.savotta.fi